

MCX A345 and MCX A346 Reference Manual

Supports MCXA345VLQ, MCXA345VLL, MCXA345VLH, MCXA345VPN,
MCXA346VLQ, MCXA346VLL, MCXA346VLH, and MCXA346VPN



Contents

Chapter 1 About This Manual.....	12
1.1 Audience.....	12
1.2 Organization.....	12
1.3 Module descriptions.....	12
1.4 Register descriptions.....	15
1.5 Conventions.....	17
1.6 Editorial changes.....	18
 Chapter 2 Introduction.....	 20
2.1 Overview.....	20
2.2 Target applications.....	20
2.3 Block diagram.....	20
2.4 Features.....	21
2.5 Functional overview.....	23
 Chapter 3 Core Overview.....	 31
3.1 Introduction.....	31
3.2 Cortex-M33 Code and System buses.....	31
3.3 Nested Vectored Interrupt Controller (NVIC).....	31
3.4 System memory map.....	32
3.5 Peripheral Bridge	32
 Chapter 4 Bus and Memory Architecture.....	 33
4.1 Bus and Memory architecture.....	33
4.2 System bus priority and arbitration.....	35
4.3 SRAM configuration.....	35
4.4 Read Only Memory (ROM).....	37
4.5 Flash subsystem.....	37
 Chapter 5 Low Power Cache Controller (LPCAC).....	 40
5.1 Chip-specific LPCAC information.....	40
5.2 Overview.....	40
5.3 Functional description.....	41
5.4 Signal descriptions.....	42
5.5 Memory regions and input control description.....	42
 Chapter 6 Flash Memory Module (FMU).....	 44
6.1 Chip-specific FMU information.....	44
6.2 Overview.....	44
6.3 Functional description.....	45
6.4 External signals.....	62
6.5 Initialization.....	62
6.6 Memory map and registers.....	62
6.7 Glossary.....	74

Chapter 7 Flash Memory Controller (FMC)	76
7.1 Chip-specific FMC information	76
7.2 Overview	76
7.3 Functional description	77
7.4 External signals	80
7.5 Initialization and application information	80
7.6 Register descriptions	80
Chapter 8 Error Injection Module (EIM)	90
8.1 Chip-specific EIM information	90
8.2 Overview	91
8.3 Functional description	93
8.4 Initialization	94
8.6 EIM register descriptions	94
Chapter 9 Error Recording Module (ERM)	102
9.1 Chip-specific Error Recording information	102
9.2 Overview	102
9.3 Functional description	103
9.4 Initialization	104
9.5 ERM register descriptions	105
Chapter 10 Signal Multiplexing	113
10.1 Introduction	113
10.2 Pinout	134
Chapter 11 Port Control (PORT)	135
11.1 Chip-specific PORT information	135
11.2 Overview	135
11.3 Functional description	136
11.4 Initialization	138
11.5 Application information	138
11.6 Memory map and register definition	138
Chapter 12 General Purpose Input/Output (GPIO)	240
12.1 Chip-specific GPIO information	240
12.2 Overview	240
12.3 Functional description	241
12.4 External signals	243
12.5 Initialization	243
12.6 Application information	244
12.7 Memory map and register definition	244
Chapter 13 Input Multiplexing (INPUTMUX)	259
13.1 Chip-specific INPUTMUX information	259
13.2 Overview	259
13.3 TRIG_IN Filter	260
13.4 Functional description	261
13.5 External signals	261

13.6 Memory map and register definition.....	261
Chapter 14 System Controller (SYSCON).....	482
14.1 Chip-specific SYSCON information.....	482
14.2 Overview.....	482
14.3 Functional description.....	483
14.4 Signals.....	483
14.5 Memory map and register definition.....	483
14.6 Application information.....	625
Chapter 15 Math Acceleration Unit (MAU).....	626
15.1 Chip-specific MAU information.....	626
15.2 Overview.....	626
15.3 Functional description.....	627
15.4 External signal.....	646
15.5 Initialization.....	647
15.6 Application information.....	647
15.7 MAUWRAP register descriptions.....	648
Chapter 16 Enhanced DMA Controller (eDMA3).....	664
16.1 Chip-specific eDMA information.....	664
16.2 Overview.....	664
16.3 Functional description.....	667
16.4 External signals.....	672
16.5 Initialization.....	672
16.6 Memory map and register definition.....	684
Chapter 17 Wakeup Unit (WUU).....	721
17.1 Chip-specific WUU information.....	721
17.2 Overview.....	723
17.3 Functional description.....	725
17.4 External signals.....	726
17.5 Initialization.....	726
17.6 Application information.....	727
17.7 Memory map and register definition.....	727
Chapter 18 AND/OR INVERT (AOI).....	771
18.1 Chip-specific AOI information.....	771
18.2 Overview.....	771
18.3 Functional description.....	773
18.4 External signals	773
18.5 Initialization.....	773
18.6 Application information.....	773
18.7 AOI register descriptions.....	775
Chapter 19 Core Mode Controller (CMC).....	781
19.1 Chip-specific CMC information.....	781
19.2 Overview.....	781
19.3 Functional description.....	781

19.4 External signals.....	788
19.5 Initialization.....	788
19.6 Application information.....	789
19.7 Memory map and register descriptions.....	789
Chapter 20 Reset.....	816
20.1 Reset sources.....	816
20.2 Power reset sources.....	816
20.3 External reset sources.....	817
20.4 Internal reset sources.....	818
20.5 Reset type.....	819
Chapter 21 System Boot.....	822
21.1 System Boot ROM.....	822
21.2 Boot ROM.....	822
21.3 Lifecycle.....	838
21.4 Debugger Mailbox Access Port & Debug session protocol.....	840
21.5 Extended Bootloader & In-System programming (ISP).....	844
Chapter 22 Clocking.....	876
22.1 Introduction.....	876
22.2 Configure main clock and system clock.....	876
22.3 Clock generation.....	876
Chapter 23 System Clock Generator (SCG).....	888
23.1 Chip-specific SCG information.....	888
23.2 Overview.....	888
23.3 Functional description.....	890
23.4 External signals.....	908
23.5 Initialization.....	908
23.6 Application information.....	908
23.7 Memory map and register definition.....	912
Chapter 24 Power Management.....	956
24.1 Introduction.....	956
24.2 Power domains.....	956
24.3 Power modes.....	958
24.4 Deep Power Down mode.....	960
24.5 Module operation in low power modes.....	960
24.6 Power optimization.....	963
Chapter 25 VBAT.....	966
25.1 Chip-specific VBAT information.....	966
25.2 Overview.....	966
25.3 Functional description.....	967
25.4 Initialization.....	967
25.5 Memory map and register definition.....	967

Chapter 26 System Power Control (SPC).....	974
26.1 Chip-specific SPC information.....	974
26.2 Overview.....	975
26.3 Functional description.....	976
26.4 External signals.....	981
26.5 Initialization.....	981
26.6 Application information.....	981
26.7 SPC register descriptions.....	981
 Chapter 27 Standard counter/timers (CTIMER).....	 1013
27.1 Chip-specific CTIMER information.....	1013
27.2 Overview.....	1014
27.3 Functional description.....	1016
27.4 External signals.....	1018
27.5 Initialization.....	1019
27.6 Application information.....	1019
27.7 CTIMER register descriptions.....	1019
 Chapter 28 Windowed Watchdog Timer (WWDT).....	 1039
28.1 Chip-specific WWDT information.....	1039
28.2 Overview.....	1039
28.3 Functional description.....	1041
28.4 External signals	1043
28.5 Initialization.....	1044
28.6 Memory map and register definition.....	1044
 Chapter 29 Micro-Tick Timer (UTICK).....	 1052
29.1 Chip-specific UTICK information.....	1052
29.2 Overview.....	1052
29.3 Functional description.....	1053
29.4 External signals.....	1053
29.5 Initialization.....	1053
29.6 UTICK register descriptions.....	1054
 Chapter 30 OS Event Timer (OSTIMER).....	 1061
30.1 Chip-specific OSTIMER information.....	1061
30.2 Overview.....	1061
30.3 Functional description.....	1062
30.4 External signals.....	1063
30.5 Initialization.....	1063
30.6 Memory map and register definition.....	1063
 Chapter 31 Wake Timer.....	 1071
31.1 Chip-specific Wake Timer information.....	1071
31.2 Overview.....	1071
31.3 Functional description.....	1072
31.4 External signals.....	1072
31.5 Memory map and register description.....	1072

Chapter 32 Real Time Clock (RTC)	1075
32.1 Chip-specific RTC information	1075
32.2 Overview	1075
32.3 Functional description	1076
32.4 Initialization	1078
32.5 Register descriptions	1078
Chapter 33 Enhanced Flex Pulse Width Modulator (eFlexPWM)	1090
33.1 Chip-specific PWM information	1090
33.2 Overview	1090
33.3 Functional description	1092
33.4 External Signals	1123
33.5 eFlexPWM register descriptions	1124
Chapter 34 Quadrature Decoder (eQDC)	1192
34.1 Chip-specific eQDC information	1192
34.2 Overview	1192
34.3 Functional description	1193
34.4 External signals	1213
34.5 Initialization	1215
34.6 Register descriptions	1215
Chapter 35 Frequency Measurement (FREQME)	1256
35.1 Chip-specific Frequency Measurement information	1256
35.2 Overview	1257
35.3 Functional description	1257
35.4 External signals	1259
35.5 Initialization	1259
35.6 Memory map and register definition	1259
Chapter 36 Low-power Timer (LPTMR)	1268
36.1 Chip-specific LPTMR information	1268
36.2 Overview	1269
36.3 Functional description	1270
36.4 External signals	1272
36.5 Initialization	1272
36.6 Application information	1273
36.7 Memory map and register definition	1273
Chapter 37 Flexible Data Rate CAN (FlexCAN)	1281
37.1 Chip-specific FLEXCAN information	1281
37.2 Overview	1281
37.3 Functional description	1284
37.4 External signal descriptions	1336
37.5 Initialization and application information	1336
37.6 Memory map and register definition	1337
Chapter 38 Low Power Inter-Integrated Circuit (LPI2C)	1434
38.1 Chip-specific LPI2C information	1434

38.2 Overview.....	1434
38.3 Functional description.....	1436
38.4 External signals.....	1447
38.5 Initialization.....	1448
38.6 Application information.....	1449
38.7 Memory map and registers.....	1449
Chapter 39 Low Power Universal Asynchronous Receiver/Transmitter (LPUART).....	1503
39.1 Chip-specific LPUART information.....	1503
39.2 Overview.....	1503
39.3 Functional description.....	1506
39.4 External signals.....	1519
39.5 Initialization.....	1519
39.6 LPUART register descriptions.....	1519
Chapter 40 Smart DMA Controller (SmartDMA).....	1556
40.1 Chip-specific SmartDMA information.....	1556
40.2 Overview.....	1556
40.3 Functional description.....	1557
40.4 SmartDMA register descriptions.....	1558
40.5 Memory map	1564
Chapter 41 Low Power Serial Peripheral Interface (LPSPI).....	1565
41.1 Chip-specific LPSPI information.....	1565
41.2 Overview.....	1565
41.3 Functional description.....	1567
41.4 External signals.....	1579
41.5 Initialization.....	1580
41.6 Memory map and registers.....	1580
Chapter 42 Analog-to-Digital Converter (ADC).....	1614
42.1 Chip-specific ADC information.....	1614
42.2 Overview.....	1617
42.3 Functional description.....	1619
42.4 External signals.....	1629
42.5 Initialization.....	1630
42.6 ADC register descriptions.....	1632
Chapter 43 Low Power Comparator (LPCMP).....	1672
43.1 Chip-specific CMP information.....	1672
43.2 Overview.....	1674
43.3 Functional Description.....	1676
43.4 External signal descriptions.....	1689
43.5 Initialization.....	1689
43.6 Application information.....	1690
43.7 LPCMP register descriptions.....	1691
Chapter 44 Digital-to-Analog Converter (DAC).....	1713

44.1 Chip-specific 12-bit DAC information.....	1713
44.2 Overview.....	1714
44.3 Functional description.....	1715
44.4 DAC external signal descriptions.....	1717
44.5 Initialization.....	1717
44.6 Application Information.....	1717
44.7 Memory map and register definition.....	1717
Chapter 45 Operational Amplifier (OPAMP).....	1734
45.1 Chip-specific OPAMP information.....	1734
45.2 Overview.....	1734
45.3 Functional description.....	1735
45.4 External Signals.....	1735
45.5 Initialization.....	1735
45.6 Memory map/register definitions.....	1735
Chapter 46 Debug.....	1739
46.1 Introduction.....	1739
46.2 Debug/Trace component.....	1740
46.3 Test and debug port connectivity.....	1741
46.4 Debug ROM tables.....	1743
46.5 Low power debug.....	1743
46.6 Debug session protocol.....	1744
Chapter 47 Cyclic Redundancy Check (CRC).....	1747
47.1 Chip-specific CRC information.....	1747
47.2 Overview.....	1747
47.3 Functional description.....	1748
47.4 External signals.....	1750
47.5 Initialization.....	1750
47.6 Use cases.....	1751
47.7 Memory map and register descriptions.....	1753
Chapter 48 Memory Block Checker(MBC).....	1758
48.1 Chip-specific MBC information.....	1758
48.2 Overview.....	1759
48.3 Functional description.....	1760
48.4 External signals.....	1762
48.5 Register descriptions.....	1762
Chapter 49 GLIKEY.....	1795
49.1 Chip-specific GLIKEY information.....	1795
49.2 Terms and definitions.....	1795
49.3 Overview.....	1795
49.4 Configuration.....	1796
49.5 Architecture description.....	1796
Appendix A General changes.....	1808

A.1 General changes.....	1808

Appendix B Release notes.....	1809
B.1 About This Manual changes.....	1809
B.2 Introduction changes.....	1809
B.3 Core overview changes.....	1809
B.4 Bus and memory architecture chapter changes.....	1809
B.5 Low Power Cache Controller (LPCAC).....	1809
B.6 Flash Memory Module (FMU).....	1809
B.7 Flash Memory Controller (FMC).....	1809
B.8 Error Injection Module (EIM).....	1810
B.9 Error Recording Module (ERM)	1810
B.10 Pinouts changes.....	1810
B.11 Port Control (PORT).....	1810
B.12 General Purpose Input/Output (GPIO).....	1810
B.13 Input Multiplexing (INPUTMUX).....	1811
B.14 System Controller (SYSCON).....	1811
B.15 Math Acceleration Unit (MAU).....	1811
B.16 Enhanced DMA Controller (eDMA3).....	1811
B.17 Wakeup Unit (WUU).....	1811
B.18 AND/OR INVERT (AOI).....	1812
B.19 Core Mode Controller (CMC).....	1812
B.20 Reset changes.....	1812
B.21 System Boot changes.....	1812
B.22 Clocking chapter changes.....	1812
B.23 System Clock Generator (SCG).....	1812
B.24 Power Management chapter changes.....	1813
B.25 VBAT.....	1813
B.26 System Power Control (SPC).....	1813
B.27 Standard counter/timers (CTIMER).....	1813
B.28 Windowed Watchdog Timer (WWDT).....	1813
B.29 Micro-Tick Timer (UTICK).....	1814
B.30 OS Event Timer (OSTIMER).....	1814
B.31 Wake Timer.....	1814
B.32 Real Time Clock (RTC).....	1814
B.33 Enhanced Flex Pulse Width Modulator (eFlexPWM).....	1814
B.34 Quadrature Decoder (eQDC).....	1815
B.35 Frequency Measurement (FREQME).....	1815
B.36 Low-power Timer (LPTMR).....	1815
B.37 Flexible Data Rate CAN (FlexCAN).....	1815
B.38 Low Power Inter-Integrated Circuit (LPI2C).....	1816
B.39 Low Power Universal Asynchronous Receiver/Transmitter (LPUART).....	1816
B.40 Smart DMA Controller (SmartDMA).....	1816
B.41 Low Power Serial Peripheral Interface (LPSPI).....	1816
B.42 Analog-to-Digital Converter (ADC).....	1816
B.43 Low Power Comparator (LPCMP).....	1817
B.44 Digital-to-Analog Converter (DAC).....	1817
B.45 Operational Amplifier (OPAMP).....	1818
B.46 Debug chapter changes.....	1818
B.47 Cyclic Redundancy Check (CRC).....	1818
B.48 Memory Block Checker(MBC).....	1818
B.49 GLIKEY.....	1818

Legal information..... 1819

Chapter 1

About This Manual

1.1 Audience

This reference manual (RM) is intended for system software, hardware developers, and applications programmers who need to develop products using this chip. It assumes that its users understand operating systems, microprocessor system design, and basic principles of software and hardware.

1.2 Organization

This manual has two main sets of chapters.

- Chapters in the first set contain information that applies to all components on the chip.
- Chapters in the second set are organized into functional groupings that detail particular areas of functionality.
 - Examples of these groupings are clocking, timers, and communication interfaces.
 - Each grouping includes chapters that provide a technical description of individual modules.

1.2.1 Attachments

This manual includes key information in the files attached to it. For example, memory map and I/O details. Use the content in these attachments in conjunction with this manual's content.

NOTE

Select the paperclip icon on the left side of the PDF window to see the list of attachments.

1.3 Module descriptions

Each module chapter has two main parts:

- The first section, *chip-specific [module name]* information, provides details such as the number of module instances on the chip and connections between that module and the other ones. Read this section *first* because its content is crucial for understanding the information in the other sections of the chapter.
- The subsequent sections provide general information about the module, including its signals, registers, and functional description.

The following figure shows you an example of this demarcation.

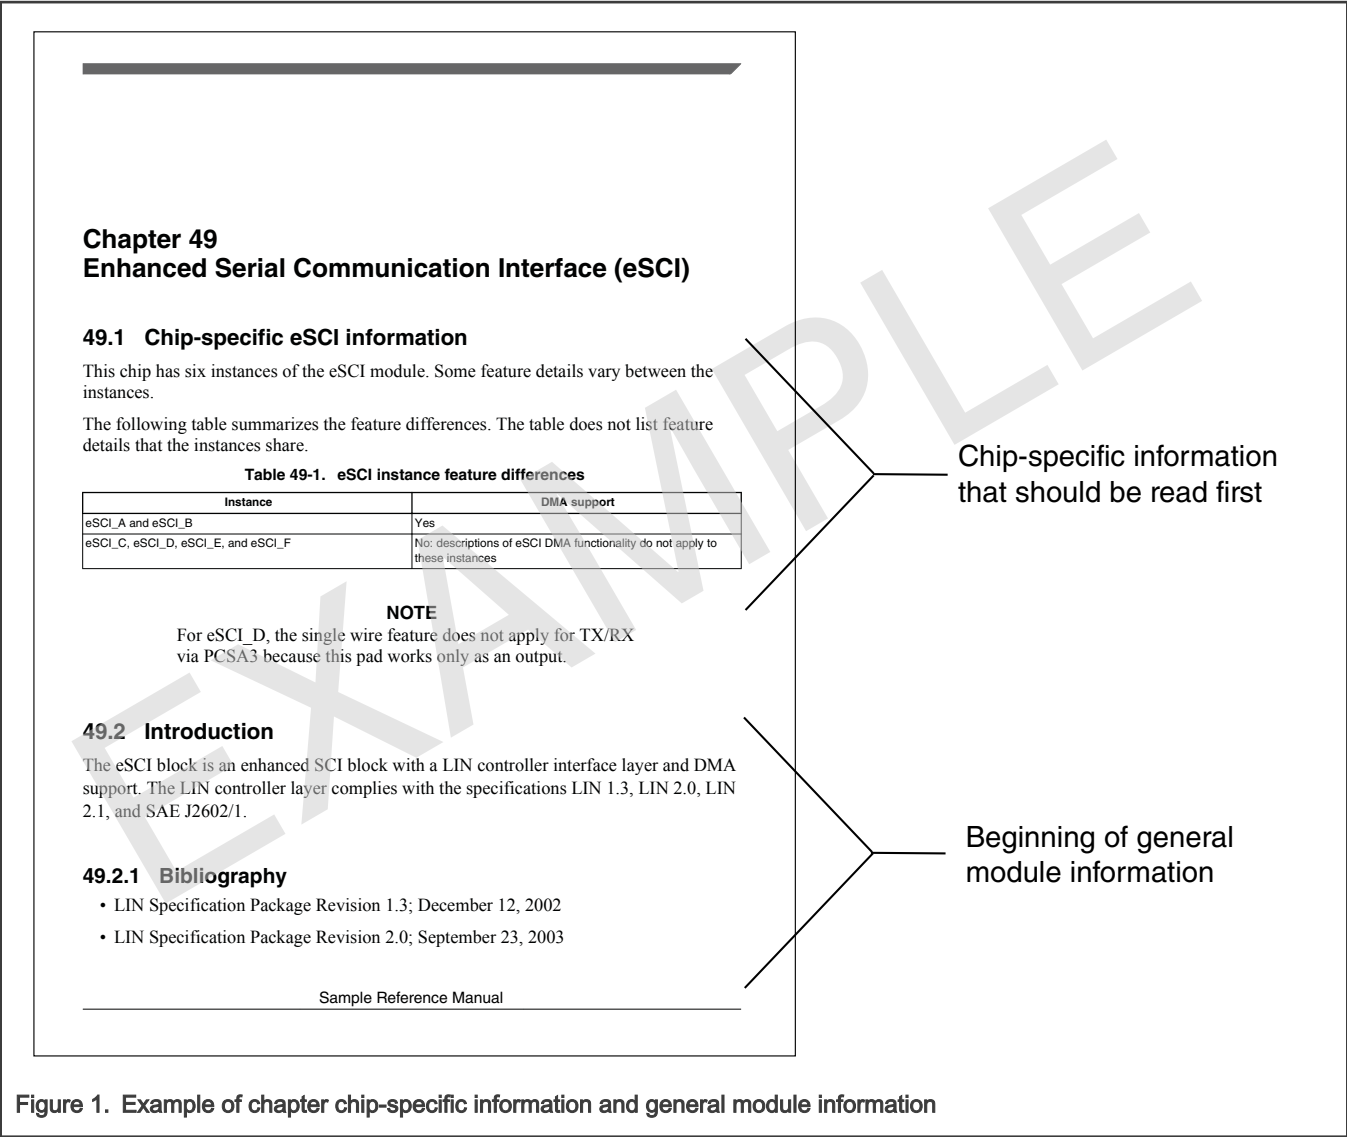


Figure 1. Example of chapter chip-specific information and general module information

1.3.1 Chip-specific information that clarifies content in the same chapter

The following figure shows an example of chip-specific information that clarifies general module information presented later in the chapter. In this case, the chip-specific register reset values supersede the reset values that appear in the register diagram.

System Integration Unit Lite2 (SIUL2)

Chapter 9 System Integration Unit Lite2 (SIUL2)

9.1 Chip-specific SIUL2 information

9.1.1 Feature configurations

In this device, the SIUL2_0 module instance does not support the following features described in the generic description:

- Interrupts
- DMA channels

9.1.2 Notes for IMCR

Out of reset, PA_00, PA_04, and PA_05 pads have JTAG input functionality selected by default. It should be disabled in the corresponding IMCR registers (IMCR61, IMCR60, and IMCR50 respectively) in order to use other functionality such as GPIO.

9.2 Introduction

9.2.1 Overview

The System Integration Unit Lite2 provides control over all the electrical pin controls and ports with 16 bits of bidirectional, general-purpose input and output signals. One of the most important functions of the SIUL2 is to enable the user to select the functions and electrical characteristics that appear on external device pins. It also controls the multiplexing of internal signals from one module to another and controls chip I/O. It supports as many as 32 external interrupts with trigger event configuration. The following figure is the block diagram of SIUL2 and its interfaces to other system components.

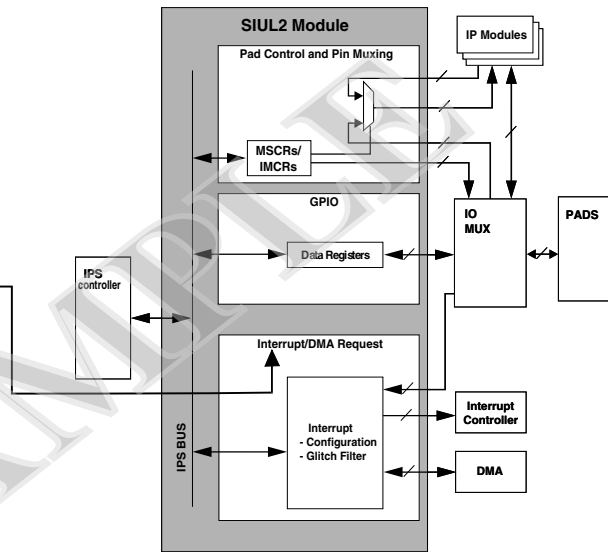


Figure 23. System Integration Unit Lite2 block diagram

This module provides dedicated pad control to general-purpose pads that can be configured as either inputs or outputs. The SIUL2 module provides registers that enable user software to read values from GPIO pads configured as inputs, and write values to GPIO pads configured as outputs:

- When configured as output, you can write to an internal register to control the state driven on the associated output pad.
- When configured as input, you can detect the state of the associated pad by reading the value from an internal register.
- When configured as input and output, the pad value can be read back, which can be used as a method of checking if the written value appeared on the pad.

To assist software development, GPIO data registers can be accessed using various mechanisms. These differing mechanisms allow support for port access or for bit manipulation without the need to use read-modify-write operations:

- Access to two 16-bit ports in one access
- Read/write access to a single bit
- A 16-bit port write with a bit mask, using single 32-bit access.

Figure 2. Example of chip-specific information that clarifies content in the same chapter

1.3.2 Chip-specific information that refers to a different chapter

Related chip-specific information may be provided in different chapters of the manual. The following figure shows an example of two such connected pieces of information. In this case, read both before you proceed.

Chapter 10

Crossbar Integrity Checker (XBIC)

10.1 Chip-specific XBIC information

This chip has one instance of the XBIC module.

10.1.1 XBIC controller and target assignments

The XBIC identifies each XBAR controller and target in terms of the controller or target's physical port number. See the "Physical controller port" assignments in Table 9-1 and the "target port" assignments in Table 9-2.

10.1.2 Unimplemented MCR and ESR fields

On this chip, the MCR[SE5] and ESR[DPSE5] fields are not implemented. In XBIC Module Control Register (XBIC_MCR) and XBIC Error Status Register (XBIC_ESR), these fields are reserved.

10.2 Overview

The Crossbar Integrity Checker (XBIC) verifies the integrity of the crossbar transfers. For forward signals (controller to target), it is done by verifying the integrity of the attribute information using an 8-bit Error Detection Code (EDC). The EDC detects any single- or double-bit errors in the attribute information and signals the Fault Collection and Control Unit (FCCU) when an error is detected. For feedback signals (target to controller), it is done by comparing the consistency of the signals during the AHB datapath. There are three signals from target to controller, namely, `hresp0`, and `hresp2`. If any of the controller signals is different from the target signals during datapath, the error will be reported in the Error Status Register.

Sample Reference Manual

Chapter 9

Crossbar Switch (XBAR)

9.1 Chip-specific XBAR information

This chip has one instance of the XBAR module.

9.1.1 XBAR controller and target assignments

The following table lists the XBAR physical port numbers and logical IDs for all controller ports on this SoC.

- Each port number matches the default priority assigned to the corresponding physical controller port. This default priority equals the reset value of the priority field for each controller port in the PRS_{*n*} registers.

- *A priority value of 0 is the highest priority. There is no "disabled" value for the priority.

- A Nexus_3 module and core data bus share the same physical controller port for each core.

The logical controller ID corresponds to the logical address provided by the controller module and is unique for each module. The logical controller IDs are used by the bus controllers connected to the XBAR. The Nexus controller is identified by setting the MSB in the 4-bit field that supplies the controller ID number.

Table 9-1.XBAR controller ports and logical controller IDs

Module	Physical controller port	Logical controller ID	Comment
Core0 instruction	0	0	
Core0 data	1	0	
Nexus_3_0		8	Nexus_3_0 arbitrates with Core0 data for XBAR port 1
Core1 instruction	2	1	
Core1 data	3	1	
Nexus_3_1		9	Nexus_3_1 arbitrates with Core1 data for XBAR port 3

Table continues on the next page...

Table continues on the next page..

Sample Reference Manual

Figure 3. Example of chip-specific information that refers to a different chapter

1.4 Register descriptions

Module chapters present register information in the following:

- Memory maps, which contain:
 - An offset from the module's base address
 - The mnemonic and name of each register
 - The width of each register (in bits)
 - The reset value of each register
- Register figures
- Field-description tables
- Associated text

The following figure shows register figure conventions used throughout the manual.

Access type	Access description	DITA output	Effect of Write on Value	Readback Value
RW	Read/write	R Mnemonic W	Changes to Written Value	Current Value
RO	Read-only	R Mnemonic W	No Effect	Current Value
RU	Reserved, unimplemented	R W Reserved	No Effect	Value Undefined
ROZ	Reserved, Read-only zero	R 0 W	No Effect	Returns All Zero
ROO	Reserved, Read-only one	R 1 W	No Effect	Returns All Ones
WO	Write-only	R W Mnemonic	Changed to Written Value	Value Undefined
WOZ	Reserved, Write-only zero	R W 0	Write Value Must Be All 0s.	Value Undefined
WOO	Reserved, Write-only one	R W 1	Write Value Must Be All 1s.	Value Undefined
W0C	Write zero to clear	R Mnemonic W w0c	If a Bit in the Written Value is a 0, the Corresponding Bit in the Field is Set to 0. Otherwise, the Field Bit is Not Affected.	Current Value
W1C	Write one to clear	R Mnemonic W w1c	If a Bit in the Written Value is a 1, the Corresponding Bit in the Field is set to 0. Otherwise, the Field Bit is Not Affected.	Current Value
R2C	Read to clear		Value is cleared following the read operation	Current Value
ROWZ	Read-only, writes zero	R Mnemonic W 0	Write Value Must Be All 0s	Current Value
ROWO	Read-only writes one	R Mnemonic W 1	Write Value Must Be All 1s	Current Value
ROWU	Ready-only writes undefined	R Mnemonic W —	Writes Operation Undefine	Current Value
WORZ	Write-only reads zero	R 0 W Mnemonic	Changes to Written Value	Returns All Zero
WORO	Write-only reads one	R 1 W Mnemonic	Changes to Written Value	Returns All Ones
WORU	Write-only reads undefined	R — W Mnemonic	Changes to Written Value	Value Undefined

Figure 4. Register figure conventions

NOTE

Reset values of reserved locations documented in this manual are subject to change and must not be used for diagnostic purposes.

1.5 Conventions

1.5.1 Notes and cautions

Specific information is provided as part of notes and cautions throughout this manual.

NOTE

Emphasizes information that deserves extra attention.

CAUTION

Informs you of situations that could lead to highly undesirable outcomes—such as damage to the chip or irreversible malfunction.

1.5.2 Numbering systems

The following suffixes identify different numbering systems:

Table 1. Numbering systems

This suffix	Identifies a
b	Binary number. For example, the binary equivalent of the number 5 is mentioned as 101b. In some cases, <i>0b</i> is prefixed to binary numbers.
d	Decimal number. Decimal numbers are followed by this suffix only when there is a possibility of confusion. In general, decimal numbers are used without a suffix.
h	Hexadecimal number. For example, the hexadecimal equivalent of the number 60 is mentioned as 3Ch. In some cases, <i>0x</i> is prefixed to hexadecimal numbers.

1.5.3 Typographic notation

The following typographic notations are used throughout this document:

Table 2. Typographic notation

Example	Description
<i>x</i> and other italicized text	The italicized, lowercase <i>x</i> is used as a placeholder for replaceable numbers. In general, italicized text is used for titles of publications and for emphasis. Additionally, italics could be used for metasymbols in syntax descriptions. Plain lowercase letters are used as placeholders for single letters and numbers.
<code>code font</code>	Fixed-width font (such as Courier) used for code. It is used for a letter, word, or phrase that you want the user to type. For example, "Type <code>Read</code> and press Enter." This type of font is also used for instruction mnemonics, directives, symbols, subcommands, parameters, operators, computer-language elements, code listings, commands that appear in running text, and for sample code. Instruction mnemonics and directives in text and tables are mentioned in all caps; for example, BSR.
SR[SCM]	A mnemonic in square brackets represents the name of a register field. This example refers to the Scaling Mode (SCM) field in the Status Register (SR).
REVNO[6:4], XAD[7:0]	Numbers in brackets that are separated by a colon represent either: • A subset of a register's named field

Table continues on the next page...

Table 2. Typographic notation (continued)

Example	Description
	For example, REVNO[6:4] refers to bits 6-4 that are part of the COREREV field occupying bits 6-0 of the REVNO register. • A continuous range of individual signals of a bus For example, XAD[7:0] refers to signals 7-0 of the XAD bus.
MOD.REG	A period separates the elements of a hierarchy: subsystem.module.register. For example: • SWT.TO means that the TO register is located in the SWT module. • SMU.XRDC.CR means that the CR register is located in the XRDC module within the SMU subsystem.

1.5.4 Special terms

The following terms have special meanings.

Table 3. Special terms

Term	Meaning
Asserted	Refers to the state of a signal as follows: • An active-high signal is asserted when high (1). • An active-low signal is asserted when low (0).
Deasserted	Refers to the state of a signal as follows: • An active-high signal is deasserted when low (0). • An active-low signal is deasserted when high (1). In some cases, deasserted signals are described as <i>negated</i>.
Reserved	Refers to memory space, register, field, or programming setting. Writes to a reserved location can result in unpredictable functionality or behavior. You must: • Before writing to a location which contain reserved bits user must make sure the write operation will write the reserved bit with value specified as the reset value in NXP reference manual. • Consider undefined locations in memory to be reserved as reset value 0 shall be assumed. You might get a BERR(transfer error) response on access to undefined locations in memory. • If user reads data from memory area containing reserved bit, the value of reserved bits should be ignored and not used for any functional purposes. NOTE BootROM could modify the reserved bit values after reset. Please refer to the BootROM settings attachment.
Write 1 to clear (w1c)	Refers to the access type of a register field that is used to clear the field by writing the value 1 to it.
Undefined (u)	Refers to undefined reset values

1.6 Editorial changes

Each new release of this document includes editorial improvements such as:

- Spelling
- Grammar
- Punctuation
- Voice
- Tense
- Capitalization
- Formatting
- Presentation
- Navigation

Chapter 2

Introduction

2.1 Overview

This group of products expand the MCX Arm® Cortex®-M33 product offerings with multiple high-speed connectivity, operating up to 180 MHz, serial peripherals, timers, analog and low power consumption.

2.2 Target applications

This device has following target applications:

Industrial

- Energy Storage and Management System
- Smart Metering
- Factory Automation
- Industrial HMI
- Mobile Robotics Ecosystem
- Motion Control and Robotics
- Motor Drives
- Brushless DC Motor (BLDC) Control
- Permanent Magnet Synchronous Motor (PMSM) Control

Smart Home

- Home Control Panel
- Major Home Appliances
- Robotic Appliance
- Smart Speaker
- Soundbar
- Gaming Accessories
- Smart Lighting
- Smart Power Socket and Light Switch

2.3 Block diagram

The following figure shows a top-level organization of the modules within the chip organized by functional category.

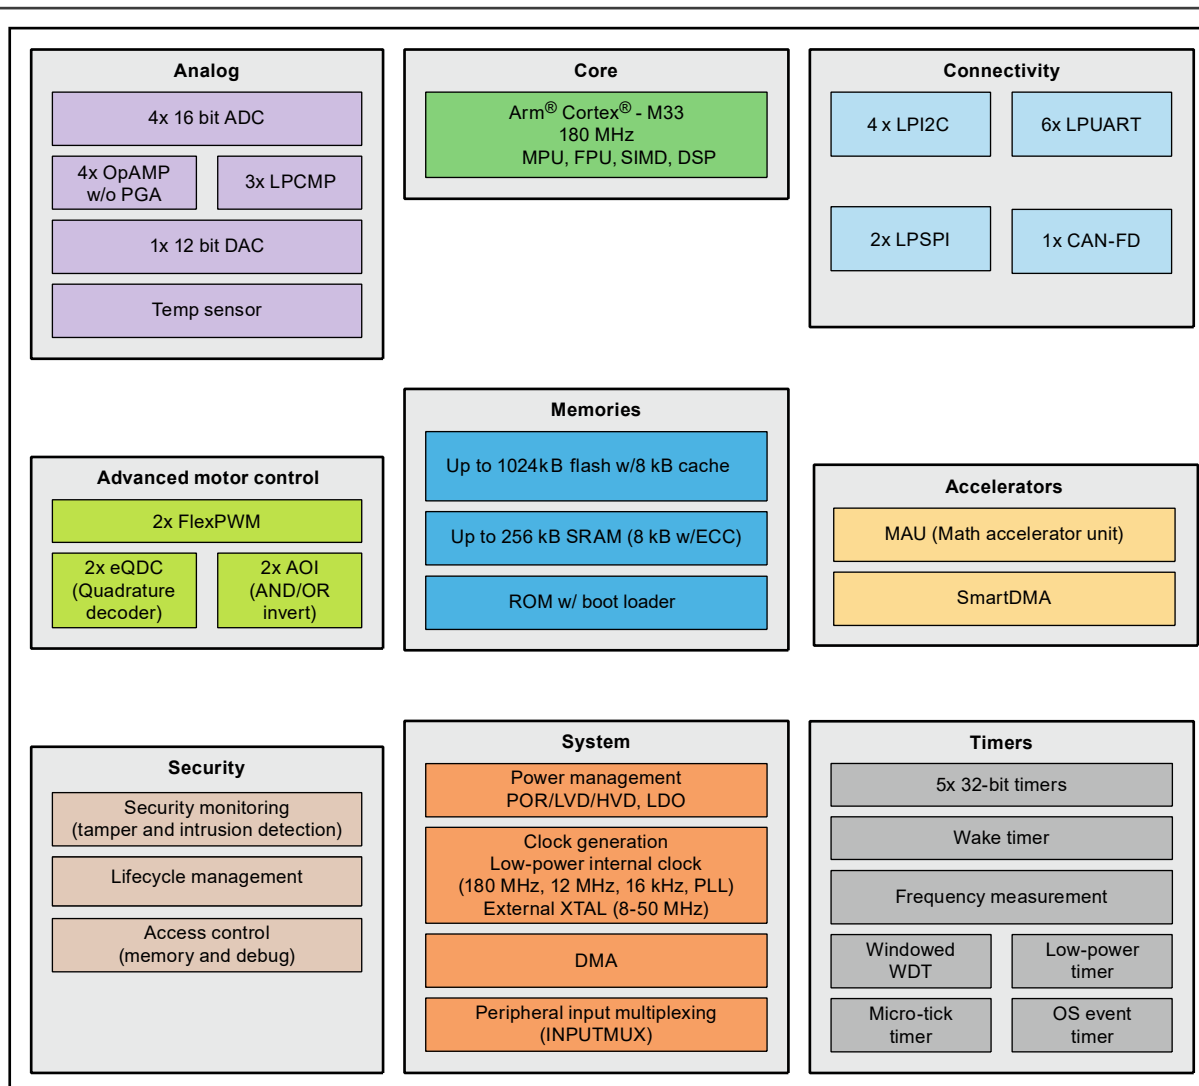


Figure 5. Features block diagram

2.4 Features

This group of products offer the following features:

- Core
 - Arm 32-bit Cortex-M33 CPU, with FPU and DSP extension instruction set and MPU, no Trust Zone. 45 MHz at Mid Drive mode (1.0 V), 180 MHz at Over Drive mode (1.2 V)
 - Nested Vectored Interrupt Controller
 - Clock gating for core processor
 - Multilayer AHB Bus Matrix
 - MAU (Math Accelerator Unit), supports trigonometric, reciprocal, square, square root, sine, cosine and arctan algorithms
 - SmartDMA, co-processor for applications such as parallel camera interface and keypad scanning
- Memories
 - 1 MB Flash array implemented as single array. The smallest programming phrase should be 16 bytes.

- 128-bit + 9-bit ECC, 8 KB sector size
- 32 KB IFR0 + 8 KB IFR1 for Implicit-protected Flash Region(IFR)
- Flash Memory Controller
 - Line buffer
 - Prefetch buffer
 - Swap
 - 4 wait states at 180 MHz (OD mode), 1 wait state at 45 MHz (MD mode)
- Memory Block Checker (MBC)
 - Protect flash read, write and execute permission.
 - Main array granularity is 16 KB
 - IFR0 granularity is 8 KB.
 - IFR1 granularity is 4 KB
- RAM
 - 8 KB LPCAC to support on-chip Flash caching. 8 KB LPCAC RAM can be used as Code SRAM when LPCAC is disabled.
 - 16 KB Code SRAM
 - Up to 256 KB System SRAM (8 KB with ECC)
- System ROM
- Timers
 - 5x 32-bit standard general-purpose asynchronous timers/counters, which support up to four capture inputs and four compare outputs, PWM mode, and external count input. Specific timer events can be selected to generate DMA requests.
 - Low power timer
 - Frequency measurement timer
 - Windowed watchdog timer
 - Wake timer
 - Micro-tick timer (UTICK) running from the watchdog oscillator can be used to wake-up the device from sleep and deep-sleep modes. Includes 4 capture registers with pin inputs.
 - OS event timer
 - 42-bit free running OS Timer as continuous time-base for the system.
- Advanced Motor Control
 - 2x FlexPWM
 - 4 sub-modules per each FlexPWM, providing 16 complementary outputs of PWM (no Nanoedge module)
 - 3 fault inputs are supported
 - 2x Quadrature Decoder (eQDC)
 - 2x AOI (AND/OR/Invert) module
 - Implements four events output. Each event output represents a user-programmed combinational Boolean function based on four event inputs.
 - Four event inputs are selected from 16 input

- Implicit-protected Flash Region (IFR)
- Security Monitoring
 - Code Watchdog for code flow integrity checking
 - 6x Passive anti tamper pin detect
 - GLIKEY enforces security checks before allowing a write to security-sensitive register.
- Communication Interfaces for Connectivity
 - 4x LPI2C, 2x LPSPI, 6x LPUART
 - 1x FlexCAN with FD
- Analog
 - 1x 12-bit DAC
 - 4x 16-bit ADC
 - up to 3.2Msps in 16-bit mode, and 4Msps in 12-bit mode
 - up to 82 ADC Input channels (depending on the package)
 - One integrated temperature sensor per ADC
 - 3x High-speed Comparators with 8 input pins and 8-bit DAC as internal reference
 - 1x LPCMP is functional down to DPD mode
 - 4x OpAmp without PGA
- Operating characteristics
 - Operating voltage: 1.71 to 3.6 V
 - Temperature range: -40 to 125 °C
- Debug
 - Minimal debug – 4 breakpoint and 2 watch point, no ETM
 - Debug mailbox for allow tools consistency during power up
 - SWD/JTAG
- Packages
 - LQFP144
 - LQFP100
 - LQFP64
 - BGA169

See the device data sheet for details on packages.

2.5 Functional overview

The following table shows the chip modules organized by functional category.

Table 4. Module functional categories

Module category	Description
Core	• The Arm Cortex-M33 is a member of the Cortex-M Series of processors targeting microcontroller cores focused on cost sensitive, deterministic, and interrupt driven environments. The Cortex-M33 processor is based on the Armv8-M Architecture and ThumbR-2 ISA and is upward compatible with the Cortex-M7, M4, M3, M1, and M0/M0+. • Math Acceleration Unit (MAU) • Smart DMA Controller (SmartDMA)
System	• Debug Mailbox • AHB Cross-Bar Switch (AXBS) Lite • Enhanced Direct Memory Access (8-channel eDMA) • Wake-Up Unit (WUU) • Peripheral Input Mux (INPUTMUX) • Error Injection Module (EIM) • Error Reporting Module (ERM) • System Power Controller (SPC) • System Controller • RMC (part of CMC)
Memory	• Flash Memory Controller (FMC) • Flash Management Unit (FMU) • ROM-BOOT and ROM-CODE • Static Random Access Memory (SRAM) • AHB Low Power Cache Controller (LPCAC)
Clock	• VBAT Wrapper — Free Running Oscillator - 16 K (FRO16K) • System Clock Generator (SCG) — Crystal Oscillator - System (OSC_SYS) — Free Running Oscillator - 180 M (FRO180M) — Free Running Oscillator - 12 M (FRO12M) — PLL
Security	• Cyclic Redundancy Check (CRC) • Code Watchdog • Glikey • Memory Block Checker (MBC)

Table continues on the next page...

Table 4. Module functional categories (continued)

Module category	Description
	- Secure Generic Interface (SGI) - Public-Key Crypto Coprocessor (PKC) - True Random Generator (TRNG) - Digital Tamper (TDET)
Timer	- Quadrature Decoder (ENC) - Micro-Tick (UTICK) Timer - OS Event Timer (OSTIMER) - Low-power Timer (LPTMR) - Standard Counter/Timer (CTIMER) - Windowed Watchdog Timer (WWDT) - Frequency Measurement (FREQME) - Wake Timer - Real-time counter (RTC)
Communication	- Low-Power UART (LPUART) - Low-Power Serial Peripheral Interface (LPSPI) - Low-Power I2C (LPI2C) - Flexible Data Rate CAN (FlexCAN)
Human Machine Interface (HMI)	- General Purpose Input/Output (GPIO) - Port Control (PORT)
Analog	12-bit Analog-to-Digital Converter (ADC) with 4 Msps conversion rate and 3.2Msps in 16-bit mode 12-bit DAC - Operational Amplifier (OpAmp) - Low Power analog Comparator (LPCMP)

2.5.1 Core

The following core modules are available on this chip.

Table 5. Core modules

Module	Description
CPU	Is an Arm Cortex-M33 processor that runs at a frequency of up to 180 MHz.
Nested Vectored Interrupt Controller (NVIC)	The Armv8M exception model and Nested-Vectored Interrupt Controller (NVIC) implement a relocatable vector table supporting

Table continues on the next page...

Table 5. Core modules (continued)

Module	Description
	external interrupts, a single non-maskable interrupt (NMI), and priority levels.
System Tick Timer (SysTick)	See the Armv8M Architecture Reference Manual for more information about this system timer.

2.5.2 Clock

The following clock modules are available on this chip.

Table 6. Clock sources

Module	Description
Free Running Oscillator - 16 K (FRO16K)	Is an ultra-low power internal 16.384 kHz clock source. It is functional down to Deep Power Down (DPD) mode. The FRO16K is trimmed to +/- 6% accuracy over the entire voltage and temperature range.
System Clock Generator (SCG)	Provides the user with access to the configuration control registers for the system level clock sources.
Crystal Oscillator - System (OSC_SYS)	Generates, in conjunction with an external crystal or resonator, a reference clock for the chip.
Free Running Oscillator - 180 MHz (FRO180M)	The free running oscillator can generate 180 MHz for use by the chip.
Free Running Oscillator - 12 MHz (FRO12M)	Is an internal clock source that generates a 12 MHz frequency for use by the chip.

2.5.3 Communication

The following communication modules are available on this chip.

Table 7. Communication modules

Module	Description
Low Power Inter-Integrated Circuit (LPI2C)	Allows communication between a number of devices. Also supports the System Management Bus (SMBus) Specification, version 2.
Low Power Serial Peripheral Interface (LPSPI)	Synchronous serial bus for communication to an external device.
Low Power Universal Asynchronous Receive/Transmit (LPUART)	Asynchronous serial bus communication interface with programmable 8- or 9-bit data format.
Flexible Data Rate CAN (FlexCAN)	This module is a communication controller implementing the CAN protocol according to the ISO 11898-1:2015 standard and CAN 2.0 B protocol specifications.
SmartDMA	Supports unique reduced instruction sets and performs event- and IO-driven handling to offload the work from the Arm processor.

2.5.4 Debug

The following debug modules are available on this chip.

Table 8. Debug modules

Module	Description
Data Watchpoint and Trace (DWT)	Is a generic name for modules that allow debug access of the Cortex-M33. The DWT comprises of the Debug Watchpoint and Trace (DWT) module and the Flash Patch and Breakpoint (FPB) unit.
Debug Access Port (DAP)	Enables real-time access to the chip registers from an external debugger without halting the processor cores.
Instruction Trace Macrocell (ITM)	Provides a memory-mapped register interface that applications can use to write logging or event words for profiling software.
Joint Test Action Group (JTAG)	Implements serial communication protocol for communication with the Test Access Port (TAP).
Serial Wire Debug (SWD)	Is a serial communication interface used for debugging devices with multiple cores while only requiring a single external interface.
Trace Port Interface Unit (TPIU)	Acts as a bridge between the on-chip trace data from the modules such as the ITM, which have separate system IDs, to the external world.

2.5.5 Memory

The following memory modules are available on this chip.

Table 9. Memory modules

Module	Description
Flash Memory Controller (FMC)	Is a programmable flash memory — non-volatile flash memory that can store executable program code or data.
Flash Management Unit (FMU)	Manages the interface between the chip and the on-chip flash memory.
Static Random Access Memory (SRAM)	Internal system SRAM memory. Each individual block of SRAM can be configured to be retained in low-power modes.
AHB Low Power Cache Controller (LPCAC)	Is a processor-local level 1 (L1) bus cache controller for use with cores using AMBA-AHB input/output buses.

2.5.6 System

The following system modules are available on this chip.

Table 10. System modules

Module	Description
Peripheral Bridge(PBRIDGE)	Converts an AMBA AHB interface to a peripheral interface that allows the Peripheral Bridge (PBRIDGE) controller to interface to multiple peripherals. This device has two peripheral bridges.
System Controller (SYSCON)	Provides controls and configurations of the system and peripherals for the multiple functions.
Core Mode Controller (CMC)	The CMC provides control and protection on entry and exit to each power mode, control for the System Power Controller (SPC), and reset entry and exit for the complete device.
Enhanced Direct Memory Access (eDMA)	Performs source/destination address calculations and data-movement operations. Capable of performing complex data transfers with minimal intervention from a host processor.
Wake-up Unit (WUU)	Allows selection of external pins and internal modules as interrupt wake-up sources from Deep Sleep and Power Down modes.
Peripheral Input Multiplexing (INPUTMUX)	Allows the trigger output of one peripheral to be connected to the trigger input of a second peripheral.
Error Injection Module (EIM)	Provides a method for diagnostic coverage of internal memories (for example, system RAM, cache RAMs, and peripheral memories).
Error Reporting Module (ERM)	Provides information and optional interrupt notification on memory error events associated with Error correction code (ECC) and parity.
System Power Controller (SPC)	Provides control over the operation and configuration of the system power generation modules to optimize power consumption for the level of functionality needed.
Low Drop Out Regulator - Core (LDO_CORE)	A voltage regulator for generating the core voltage for the chip.
RAM_RET_LDO	A voltage regulator for generating the voltage for SRAM retention.

2.5.7 Security

The following security modules are available on this chip.

Table 11. Security modules

Module	Description
Cyclic Redundancy Check (CRC)	Provides error detection for all single, double, and many multi-bit errors.
GLIKEY	It provides a mechanism to safely access security-sensitive registers.
Memory Block Checker (MBC)	Provides domain-based access control for all system bus references targeted to on-chip internal memories and slave peripherals. It's a part of TRDC module.

2.5.8 Timer

The following timer modules are available on this chip.

Table 12. Timer modules

Module	Description
FlexPWM	Generates various switching patterns, including highly sophisticated waveforms. Controls different Switched Mode Power Supplies (SMPS) topologies.
Wake Timer	Provides time keeping and calendaring functions and additionally provides protection against spurious memory/register updates and battery operation.
Quadrature Decoder	Interfaces to position/speed sensors that are used in industrial motor control applications.
Micro-Tick (UTICK) Timer	Is a 31-bit timer that provides a fixed time interval between interrupts.
OS Event Timer (OSTIMER)	Is a 42-bit Gray code counter.
Low-power Timer (LPTMR)	Is a 16-bit timer or pulse counter with compare feature.
Standard Counter/Timer (CTimer)	Each Counter/timer is designed to count cycles of the CTIMER function clock.
Windowed Watchdog Timer (WWDT)	Helps reset or interrupt an erroneous microcontroller within a programmable time.
Frequency Measurement	Provides high-accuracy frequency measurement function for on-chip and off-chip clocks.

2.5.9 Human Machine Interface (HMI)

The following HMI modules are available on this chip.

Table 13. HMI modules

Module	Description
General Purpose Input/Output (GPIO)	All GPIO pins support interrupt and DMA request generation.
Port Control (PORT)	Provides support for pad control functions.

2.5.10 Analog

The following analog modules are available on this chip.

Table 14. Analog modules

Module	Description
Analog-to-Digital Converter (ADC)	Successive approximation ADC designed for operation within an integrated microcontroller system-on-chip.

Table continues on the next page...

Table 14. Analog modules (continued)

Module	Description
Low Power Comparator (LPCMP)	Provides a circuit for comparing two analog input voltages.
LPDAC	The Low Power Digital-to-Analog Converter(LPDAC) is a low power, 12-bit general-purpose digital-to-analog converter. The output of the LPDAC can be placed on an external pin or set as one of the inputs to the analog comparator or ADC.
Operational Amplifier (OpAmp)	The OpAmp is a pure voltage amplifier without any built-in programmable gain stage. User needs to implement external feedback network to achieve specific inverting or non-inverting gain amplification. This module is applicable to the signal processing stage before SARADC.

Chapter 3

Core Overview

3.1 Introduction

This section covers the core modules included in this chip.

3.2 Cortex-M33 Code and System buses

This device has one Arm Cortex-M33 processor core, with Floating Point Unit (FPU), Memory Protection Unit (MPU) and without TrustZone-M.

The core implements a modified Harvard memory architecture using two 32-bit bus interfaces: the Code and System buses. The bus interfaces are activated by address range and can include both instruction fetches and operand data references on a given bus port. (A traditional Harvard architecture strictly separates instruction fetches and operand data references onto specific bus ports regardless of access address.) The Code bus is typically used for instruction fetching and data accesses of PC-relative data, while the system bus is typically used for operand data references to the on- and off-chip memories and peripheral accesses. The bus structure fully supports concurrent instruction fetch and data accesses, but the Cortex-M33 implementations can generate both types of references on each bus.

NOTE

It is recommended that performance critical code be located such that it fetches from the Code bus interface as defined by addresses < 0x2000_0000.

3.2.1 Code Bus access

Code Bus accesses are routed to the Code Cache Controller; code bus of the core goes to LPCAC. This controller then processes the cacheable accesses as needed, while bypassing the non-cacheable accesses or forwarding the cache write-through and cache miss accesses to the downstream memories through the master port of this cache controller.

3.2.2 System bus access

All System bus accesses are routed to the target address in destination memories through multilayer AHB matrix slave port.

3.2.3 Access control

All core Code and System Bus accesses are checked by the core access control logic. All requests that miss or bypass the cache are checked by downstream secure AHB bus logic. The caches include protection control signals (HPROT[3:0]) and processing domain bits as part of the tags. If a fetch address hits the cache but the protection control and/or domain bits are different, the cache controller forces a miss with the allocate location the same as the address hit location in the cache. This policy allows all the downstream checks to take place, and this new miss is loaded in the cache with the updated protection control and domain bits overwriting the line with the same address. This keeps the cache coherent while always checking accesses that need to see the downstream checks.

3.3 Nested Vectored Interrupt Controller (NVIC)

3.3.1 Interrupt priority levels

This device supports 8 priority levels for interrupts. Therefore, in the NVIC each source in the IPR registers contains 3 bits. For example, IPR0 is shown below:

	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R				0	0	0	0	0				0	0	0	0	0				0	0	0	0	0				0	0	0	0	0
W																																

3.3.2 Non-Maskable Interrupt (NMI) configuration

The Non-Maskable Interrupt (NMI) enable bit and source selection bits are implemented for each core in SYSCON register.

3.3.3 Interrupt channel assignments

The interrupt source assignments are defined in the following table.

- Vector number — the value stored on the stack when an interrupt is serviced.
- IRQ number — non-core interrupt source count, which is the vector number minus 16.

The IRQ number is used within Arm's NVIC documentation.

See the attached NVIC_Configuration spreadsheet for the NVIC interrupt assignments.

3.4 System memory map

See the attached Memory Map spreadsheet (Overview tab) for the chip's high-level memory map.

3.5 Peripheral Bridge

The Peripheral Bridge (PBRG) is the portion of the bus fabric that connects the peripherals to the processor elements. Each peripheral has a base address where the processor elements can access them.

3.5.1 Peripheral Bridge (PBRIDGE0-1) memory maps

See the attached Memory Map spreadsheet for PBRIDGE0, PBRIDGE1, and Fast Peripherals (Peripheral Memory Map tab) peripheral memory mapping on this device.

Chapter 4

Bus and Memory Architecture

4.1 Bus and Memory architecture

This chapter provides an overview of system bus and memory architecture of this device. The memory architecture supports a wide range of target applications and maximizes performance while maintaining low power consumption. The memory system of the device includes SRAM, ROM, internal flash, and external memory.

The following figure shows the system bus diagram of this chip.

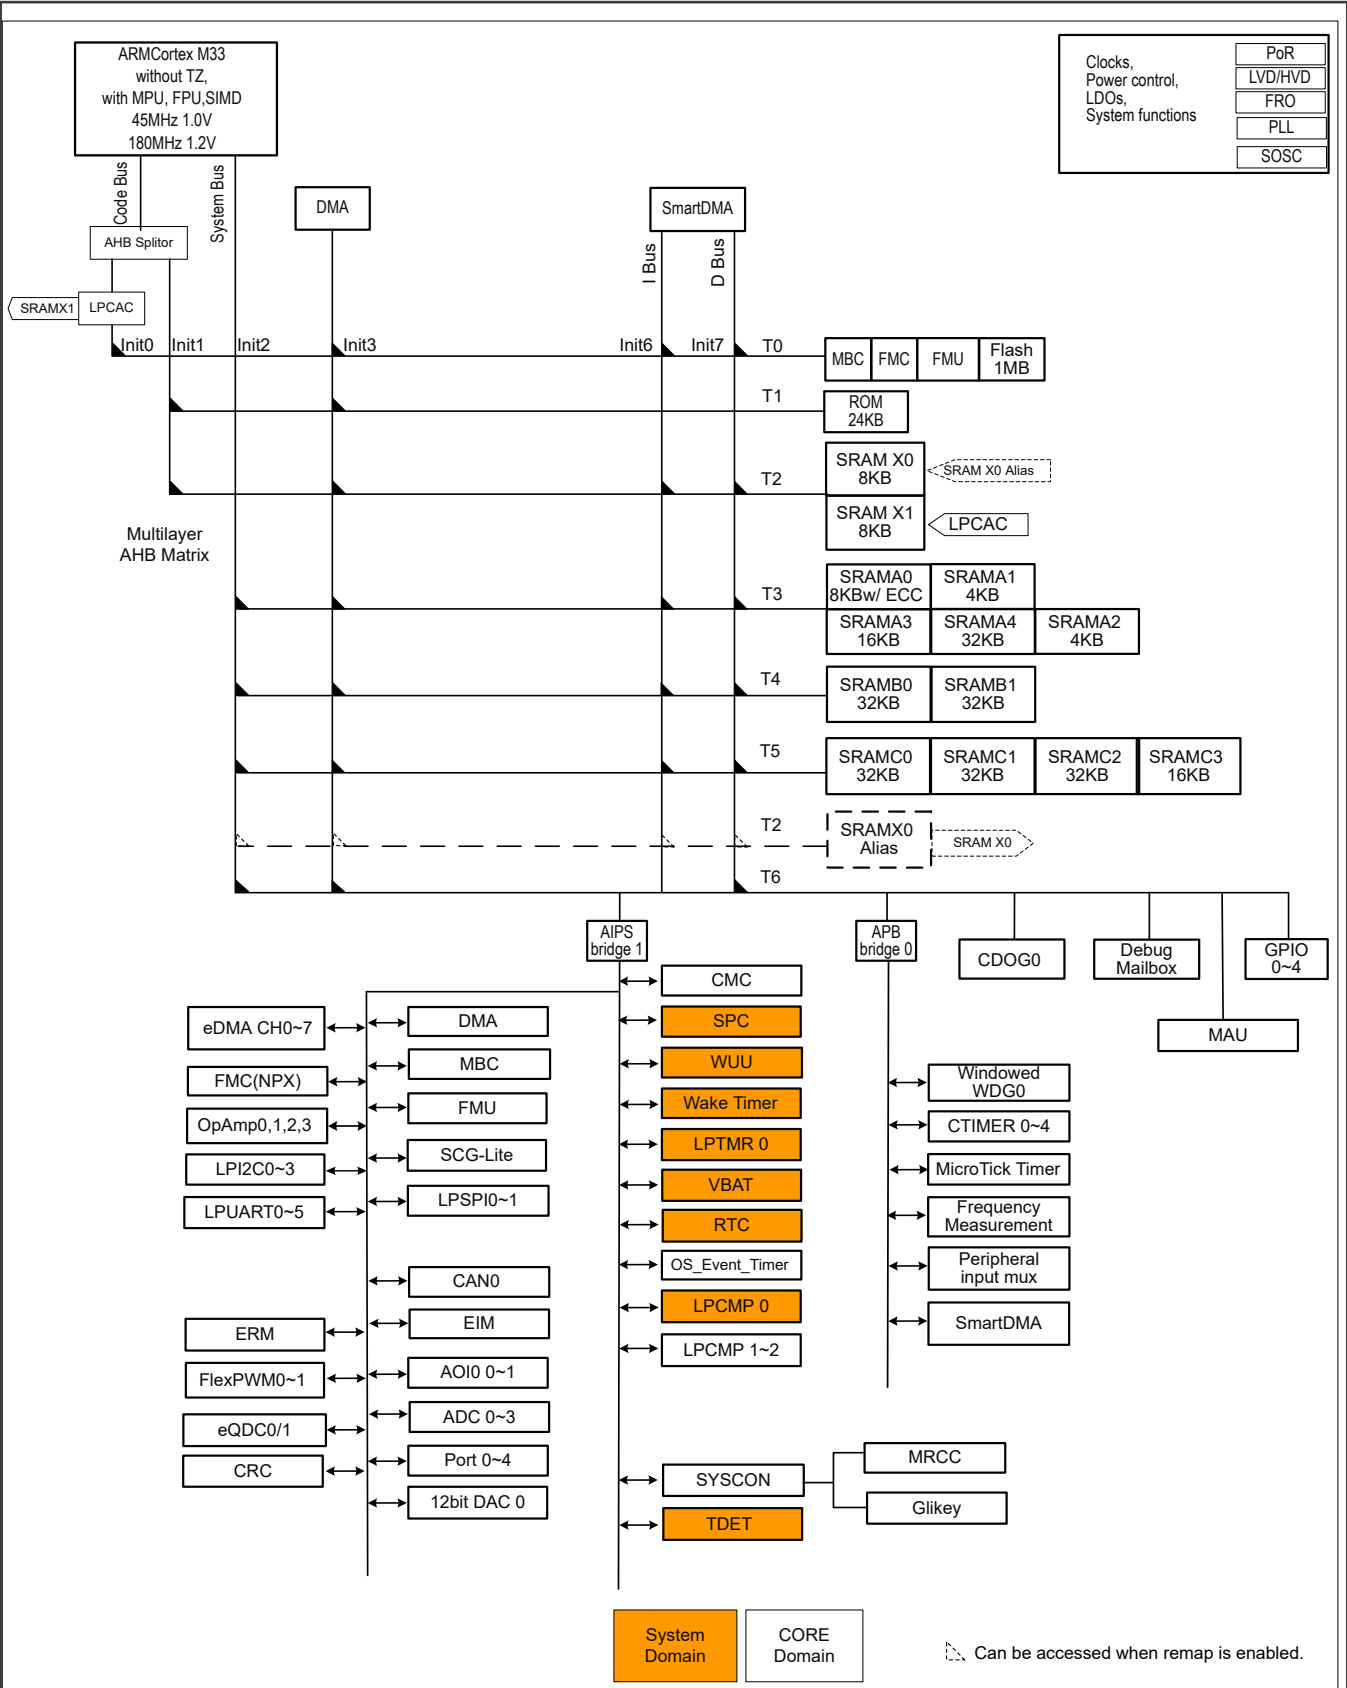


Figure 6. Bus matrix block diagram

4.2 System bus priority and arbitration

The multilayer AHB bus matrix allows for concurrent accesses when two masters are attempting to access to different slave ports. If two masters attempt an access to the same slave port at the same time then arbitration is required.

The SYSCON_AHBMATPRIO register is where the programmable priorities for each of the master ports can be configured. Masters are assigned a priority value between 0 and 3 with 3 being the highest priority. If two ports have the same priority, then the lowest port number is given priority.

There are some master ports that are shared between two masters. Where the port is shared, only one of the masters can have an active access at a time. The priority between two masters sharing a port uses a PARK_ON_LAST arbitration scheme. This means that the last of the two masters to use the port is given priority. Before either of the masters has used the port, there is a default priority scheme that determines which master is prioritized for the first access. The table below lists the master or masters for each of the ports.

Table 16. AHB Matrix priority control register

Bit	Master Name	Master AHB ID	Reset
1:0	CM33 Code Bus	0x0	0x0
3:2	CM33 System Bus	0x1	0x0
5:4	SmartDMA I Bus	0x2	0x0
7:6	SmartDMA D Bus	0x3	0x0
9:8	eDMA Controller AHB Bus	0x5	0x0
11:10	Reserved	0x4	0x0
13:12	PKC	0xC	0x0
15:14	Reserved	0x7	0x0
17:16	Reserved	0x8	0x0
19:18	Reserved	0x9	0x0
21:20	Reserved	0xA	0x0
23:22	Reserved	0xB	0x0
25:24	Reserved	0x6	0x0
27:26	Reserved	0xD	0x0
29:28	Reserved	0xE	0x0
31:30	Reserved	Reserved	0x0

AHB to APB Bridge

The bridge connects legacy LPC APB/VPB interface peripherals.

AIPS bridge

The bridge connects IPS/APB interface peripherals.

4.3 SRAM configuration

SRAM is divided into Code TCM(CTCM) and System TCM(STCM).

CTCM: Mapped to CM33 code bus space

- RAM X0: 8 KB 32-bit RAM
- RAM X1: 8 KB 32-bit RAM (Can only be used as code RAM when LPCAC is disabled)

STCM: Mapped to CM33 system bus space

- RAM A0: 8KB 32+7bit ECC RAM
- RAM A1: 4KB 32bit RAM
- RAM A2: 4KB 32bit RAM
- RAM A3: 16KB 32bit RAM
- RAM A4: 32KB 32bit RAM
- RAM B0: 32KB 32bit RAM
- RAM B1: 32KB 32bit RAM
- RAM C0: 32KB 32bit RAM
- RAM C1: 32KB 32bit RAM
- RAM C2: 32KB 32bit RAM
- RAM C3: 16KB 32bit RAM

SRAM permission control

This chip implements a logic between RAM controller and AHB Slave port to control SRAM write permission. SRAM write permission control registers is implemented in SRAM_XEN[5:0] bits of the SYSCON as below

0: disable, default value

1: enable

- SRAM_XEN[0] controls RAM X0 8KB, offset 0x0~0x1FFF
- SRAM_XEN[1] controls RAM X1 8KB, offset 0x2000~above
- SRAM_XEN[2] controls RAM A0 8KB, offset 0x0~0x1FFF
- SRAM_XEN[3] controls RAM A1 4KB, RAM A2 4KB, RAM A3 16KB, RAM A4 32KB offset 0x2000~0xFFFF
- SRAM_XEN[4] controls RAM B0 32KB, RAM B1 32KB offset 0x1_2000~0x1_FFFF
- SRAM_XEN[5] controls RAM C0 32KB, RAM C1 32KB, RAM C2 32KB, RAM C3 16KB offset 0x2000~ above
- A lock bit is also implemented in SRAM_XEN. Once locked, the register can't be programmed unless there is a reset.

GLIKEY is used to protect the access of SRAM_XEN register.

The figure below shows the SRAM configuration on this chip.

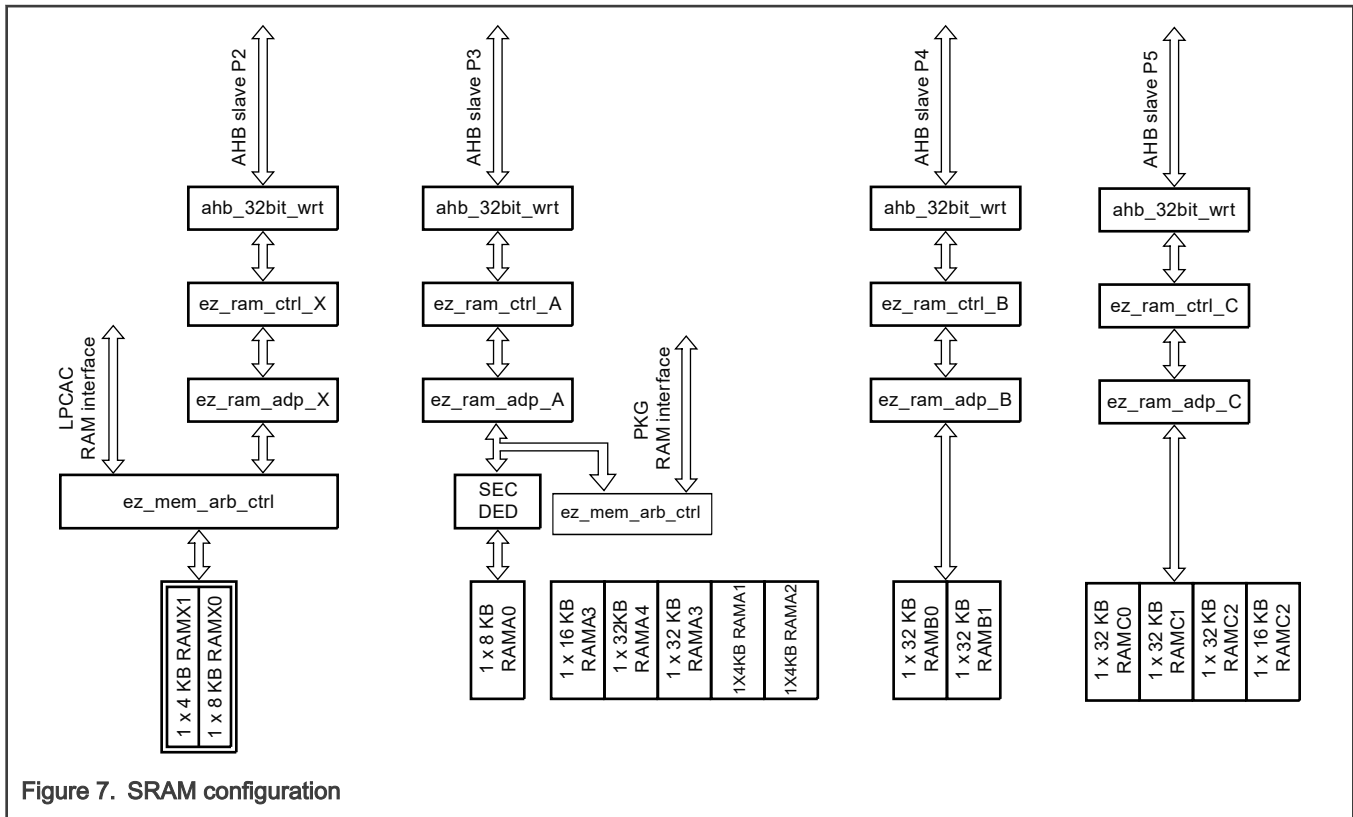


Figure 7. SRAM configuration

4.3.1 SRAM ECC

RAM A0 supports single-bit correction, and two bits detection ECC on every 32-bit aligned field. ECC supports byte and half-word operation. ECC can be disabled via SYSCON register.

4.3.2 RAM ECC Error

The Error Reporting Module (ERM) provides information and optional interrupt notification on SRAM error events associated with ECC. The syndrome and error address information is captured along with error event in ERM registers.

The Error Injection Module (EIM) can be used to induce artificial errors in the RAM ECC. EIM can inject single-bit and multi-bit inversions on data. Injecting faults on memory accesses can be used to exercise the SEC-DED ECC function of the related system.


4.4 Read Only Memory (ROM)

The internal ROM memory is used to store the boot code and time-critical software library routines. After a reset, the Cortex-M33 processor starts its code execution from this memory.

4.5 Flash subsystem

This device embeds up to 1 MB of single-array flash configuration. The Flash subsystem includes MBC, FMC and FMU (MSF1). FMC implements a 128-bit entry buffer and a 128-bit prefetch buffer. The control register for prefetch buffer is implemented in the System Controller (SYSCON) chapter.

The following figure shows the high-level block diagram of the on-chip flash.

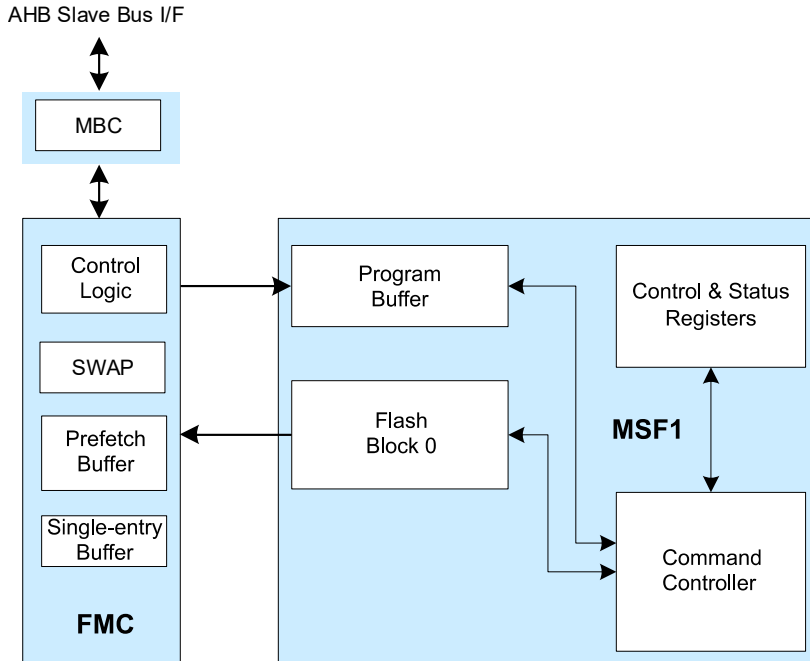

Flash array configuration

This chip has up to 1 MB flash array, which includes up to 1 MB main array, 32 KB IFR0, and 8KB IFR1. The sector1 to sector3 IFR0 are used to store flash loader, which is programmed by NXP. There are boot options provided for user in sector0 IFR0, which must be programmed by user. There is IFR0 table to define the details of boot options. See Boot chapter for details.

Flash ECC

Flash array supports ECC on every 128 bits. This chip implements a register in the SYSCON to disable Flash ECC error to generate bus fault, and use interrupt to handle ECC error.

Flash swap

FMC supports the swap function. The single flash array is divided to four regions. Two swappable regions and two static regions. When swap enables, swappable region 1 is mapped to logic address 0. Below is an example: Considering flash size is 1024 KB:

- Swappable Region 0: flash physical address 0 ~ Upper limit
- Static Region 0: Upper limit ~ 512 KB
- Swappable Region 1: 512 KB ~ 512 KB + Upper limit
- Static Region 1: 512 KB + Upper limit ~ Flash End

SWAP enabled

- Map Swappable Region 1 to logic address starting at 0x0 ~ upper limit
- Static Region 0 logic address unchanged
- Map Swappable Region 0 to logic address starting at 0x80000 ~ 0x80000 + upper limit
- Static Region 1 unchanged

Swap granularity is 8 KB. The chip supports 512 KB flash array.

Flash performance

- 180 MHz OD(Over Drive) mode, 4 wait states

- 45 MHz, MD(Middle Drive) mode, 1 wait state

4.5.1 Low-Power Cache Controller (LPCAC)

This chip implements 8 KB cache between CM33 code bus and AHB Matrix.

4.5.2 Flash memory controller

The Flash Memory Controller (FMC) manages accesses performed by the bus masters of the system to the flash memory. The FMC accelerates flash memory transfers to allow program code execution at higher clock frequency than flash memory.

The FMC provides two separate mechanisms for accelerating read operations to the flash memory:

- A single-entry 128-bit buffer, which can store previously accessed flash memory
- A 128-bit prefetch buffer, which can prefetch the next 128-bit flash memory location

NOTE

The FMC has no visibility into flash memory erase and program cycles because the Flash Memory module manages them directly.

4.5.2.1 Single entry buffer

The width of the bus between the FMC and the flash blocks is 128-bit. A single read of the flash will return an entire bus width worth of data. Because the flash bus is wider than the master's bus, the Single-Entry Buffer is used to store data from the last flash read for quick access times on subsequent reads if the buffer is hit.

The FMC provides invalidation control for the Single-Entry Buffer.

4.5.2.2 Prefetch buffer

When speculative reads are enabled, the FMC immediately requests the next sequential address after a read completes. The next 128-bit memory location is read and placed in the Prefetch Buffer. The speculative prefetch mechanism improves performance by reducing or even eliminating wait states when accessing sequential code and/or data.

Speculative prefetching is programmable for each bank of memory. The FMC provides invalidation control for the Prefetch Buffer.

Chapter 5

Low Power Cache Controller (LPCAC)

5.1 Chip-specific LPCAC information

Table 17. Reference links to related information

Topic	Related module	Reference
Full description	LPCAC	LPCAC
System memory map		Memory map
Clocking		Clock distribution
Power Management		Power Management
Signal multiplexing	Port control	Signal multiplexing

NOTE

See LPCAC_CTRL register in the syscon chapter.

5.1.1 Module instances

This device has one instance of the LPCAC module.

5.1.2 LPCAC cacheable memory range

The LPCAC module has no registers. All configuration for the LPCAC module is handled through the LPCAC_CTRL register of SYSCON. The 8 KB LPCAC is connected to the Code bus of the primary CM33 core. Contents of this cache are only visible to the CM33 core. The cacheable memory range are shown in table below. For details, see the attached System memory map.

Table 18. LPCAC cacheable memory range


Start Address	End Address	Description	Size	Cached
0000_0000	000F_FFFF	Program Flash	1MB	LPCAC

5.2 Overview

LPCAC provides low-latency access to instructions or data. This decouples processor performance from system memory performance, increasing bus availability for other modules and improving system performance.

LPCAC has a 32-bit data path AMBA-AHB input bus and a 32-bit data path AMBA-AHB output bus.

5.2.1 Block diagram

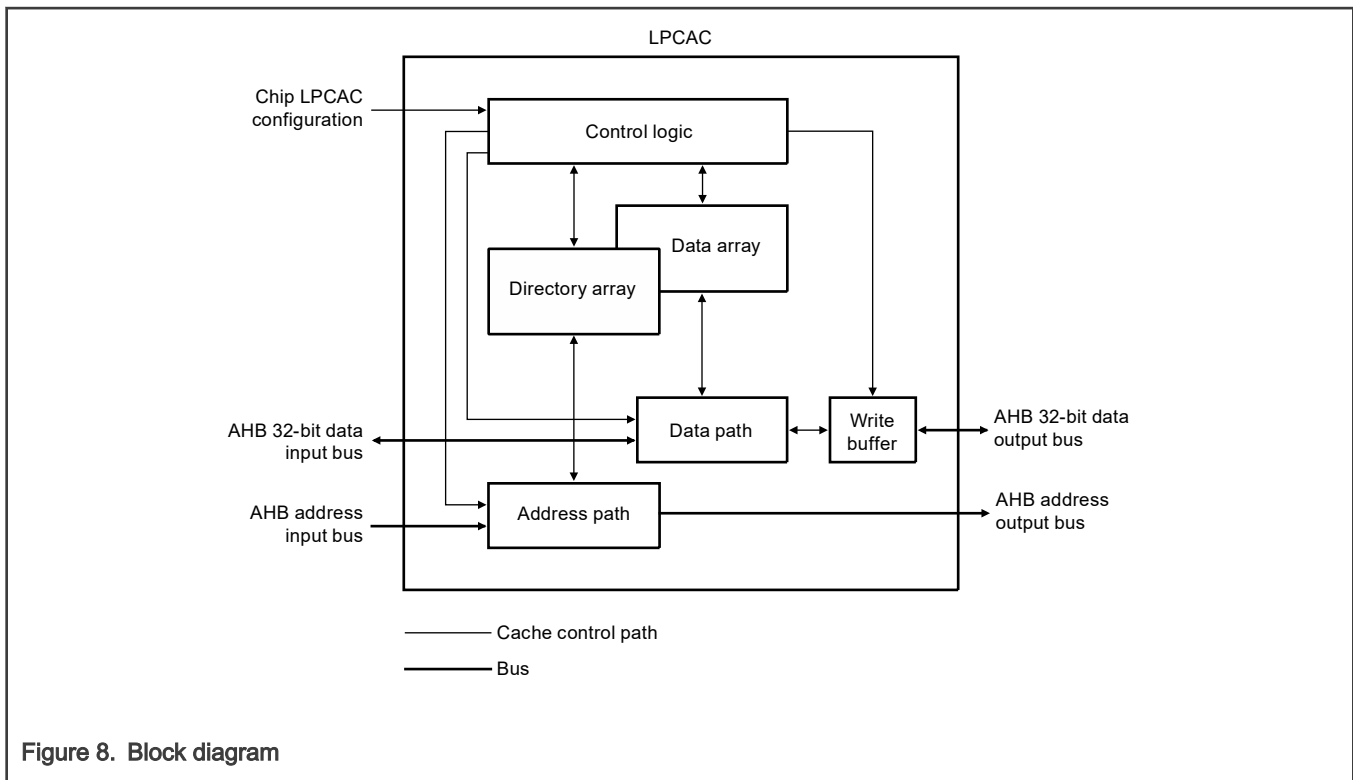

5.2.2 Features

LPCAC supports the following features:

- Nonblocking and write-through cache mode
- 8 KB total cache size
- Cache organization as an 8-way, 4-set-associative design based on 256-byte superpages
- Each way or superpage contains up to sixteen sequential 16-byte pages

5.3 Functional description

This section provides further information on the LPCAC module operation.

A reset signal clears and enables this module.

LPCAC examines every valid AHB input access. If the access hits the cache memory region and the cache is enabled, the access goes to the cache portion of the module. If the access is not cacheable, the access is passed directly to the AHB output bus.

The LPCAC cache has a 256-byte line subdivided into sixteen 16-byte sublimes:

- Cache read accesses that are cache misses perform an aligned 16-byte sublimes-size burst cache read miss to the module's AHB output bus. Then the cache loads the needed data in the cache's data storage. The cache miss uses a 4-beat (32 bits per beat), wrapped burst bus access to fetch the cache miss data.
- Cache read accesses that are cache hits return the desired read data from the cache.
- Cache write accesses that are cache misses perform the desired write operation only to the module's AHB output bus (for write-through mode accesses, LPCAC has a no allocation on write-miss policy).
- Cache write accesses that are cache hits perform the desired write operation to the cache and the module's AHB output bus.

LPCAC has a one entry write buffer. When LPCAC is enabled and available, cache write accesses with a bufferable attribute use the buffer, which allows write from the processor to receive an immediate (zero wait state) bus termination.

5.3.1 Cache functional description

The LPCAC cache is an 8-way, 4-set-associative, 256-byte per line write-through design. It supports a total cache capacity of 8 KB for a 32-bit wide cache miss data path.

5.3.1.1 Cache controls

This module has controls to enable, disable, and clear the cache.

The cache control inputs are as follows:

- `clr_lpcac`: clear lpcac
- `dis_lpcac`: disable lpcac
- `dis_lpcac_wtbf`: disable write buffer
- `lim_lpcac_wtbf`: limit write buffer
- `frc_no_alloc`: force no allocation
- `mode_ctl_hprot`: ignore LPCAC Memory Regions

See chip-specific section for more information on how these signals are connected or controlled on a given device.

5.3.2 Clocks

The core clock domain defines the module's clock domain.

5.3.3 Reset

A reset signal clears and enables this module. See the chip-integration information for the resets that affect LPCAC.

5.3.4 Interrupts

This module has no interrupts.

5.4 Signal descriptions

This module has no external signals.

5.5 Memory regions and input control description

5.5.1 Memory regions

LPCAC decodes cacheable address regions. The cache memory region may be composed of one or more disjointed memory regions and the total size may be larger than the cache storage.

Any address not in the cacheable memory region is in the pass-through memory region. All accesses to the pass-through memory regions are non-cacheable. For all accesses to the cacheable memory regions, the access is cacheable if the attributes of the access indicate that it can be cached, else the access is non-cacheable.

The following table defines the memory map.

Table 19. Memory map

Cache memory range	Cache memory range	Cache total memory address space
0000_0000h–000F_FFFFh (1 MB)	--	1 MB

5.5.2 Input controls

The LPCAC does not have a module-resident programming model. An external block supplies the needed LPCAC control inputs.

Table 20. Control inputs for LPCAC

Function	Control input	Description
clear lpcac	clr_lpcac	One cycle active-high pulse clears the lpcac.
disable lpcac	dis_lpcac	0 = lpcac enabled (reset configuration) 1 = lpcac disabled, all cacheable accesses pass from LPCAC input to output bus
disable write buffer	dis_lpcac_wtbf	0 = write buffer enabled 1 = write buffer disabled
limit write buffer	lim_lpcac_wtbf	0 = If write buffer is enabled, buffer all writes to spaces that are bufferable 1 = If write buffer is enabled, buffer all writes to spaces that are both bufferable and cacheable
force no allocation	frc_no_alloc	When frc_no_alloc is asserted and the cache is enabled, all accesses to the cache search the cache. If they hit a valid entry that was loaded before frc_no_alloc was asserted, they operate normally. That is, read hits return cache data without going through the cache and write hits update cache data and write through the cache. If they miss, they bypass the cache (that is, even though a read access is to a cacheable space, it does not allocate on a cache miss). This control input is useful for debug. If there is a software breakpoint, halting the processor. Then, using the debug port, cacheable memory and other address spaces are accessed. These debug accesses go through the processor, through the cache, and to the rest of the system. The idea is during the debug accesses the cache is placed on frc_no_alloc mode. In this way, debug access through the core and then through the cache do not disturb the state of the cache. Before restarting the processor, frc_no_alloc mode is negated. When the processor restarts, the cache state is the same or at least very similar as the cache state when the breakpoint was hit. 0 = normal allocation on cache miss 1 = no allocation on cache miss
ignore CACHE_MAP	mode_ctl_hprot	0 = use LPCAC Memory Regions to determine if an access to a given address may be cached. Then, if the attributes of the access indicate it can be cached, the access is cached. 1 = Use only the attributes of the access to indicate it can be cached.

Chapter 6

Flash Memory Module (FMU)

6.1 Chip-specific FMU information

Table 21. Reference links to related information

Topic	Related module	Reference
Full description	MSF1	Flash Memory Module
System memory map		Memory map
Clocking		Clock distribution
Power Management		Power Management
Signal multiplexing	Port control	Signal multiplexing

6.1.1 Module instances

This device contains one instance of the FMU module, FMU0.

NOTE

This chip does not support the mass erase and erase all operation.

6.1.2 FCTRL[RWSC] Configuration recommendation

The recommended configuration of Read Wait-State Control (RWSC) field of Flash Control Register (FCTRL) is shown in below table.

Table 22. FCTRL[RWSC] configuration in different run modes and speed

OD Mode (VDD_CORE = 1.2V)	MD Mode (VDD_CORE = 1.0V)	RWSC
≤240MHz		0101b
≤200 MHz		0100b
≤160 MHz		0011b
≤120 MHz		0010b
≤80 MHz	≤45 MHz	0001b
≤40 MHz	≤22.5 MHz	0000b

NOTE

Erase All command and Mass Erase operation are not supported in this device.

6.2 Overview

The flash module includes the following accessible memory regions:

- Program flash memory for vector space and code store
- Separate flash memory for parameter store

Flash memory is ideal for single-supply applications, permitting in-the-field erase and reprogramming operations without the need for any external high voltage power sources.

The flash module includes a command controller that executes commands to modify flash memory contents. An erased bit reads '1' and a programmed bit reads '0'. The programming operation is unidirectional; it can only move bits from the '1' state (erased) to the '0' state (programmed). Only the erase operation restores bits from '0' to '1'; bits cannot be programmed from a '0' to a '1'.


CAUTION

A flash memory location must be in the erased state before being programmed. Cumulative programming of bits (back-to-back program operations without an intervening erase) within a flash phrase or page is not allowed. Re-programming of existing 0s to 0 is not allowed as this overstresses the device.

The standard shipping condition for flash memory is erased. Data loss over time may occur due to degradation of the erased ('1') states and/or programmed ('0') states. Therefore, it is recommended that flash memory be re-erased immediately prior to factory programming to ensure that the full data retention capability is achieved.

6.2.1 Block diagram

The block diagram of the flash module is shown in the following figure.

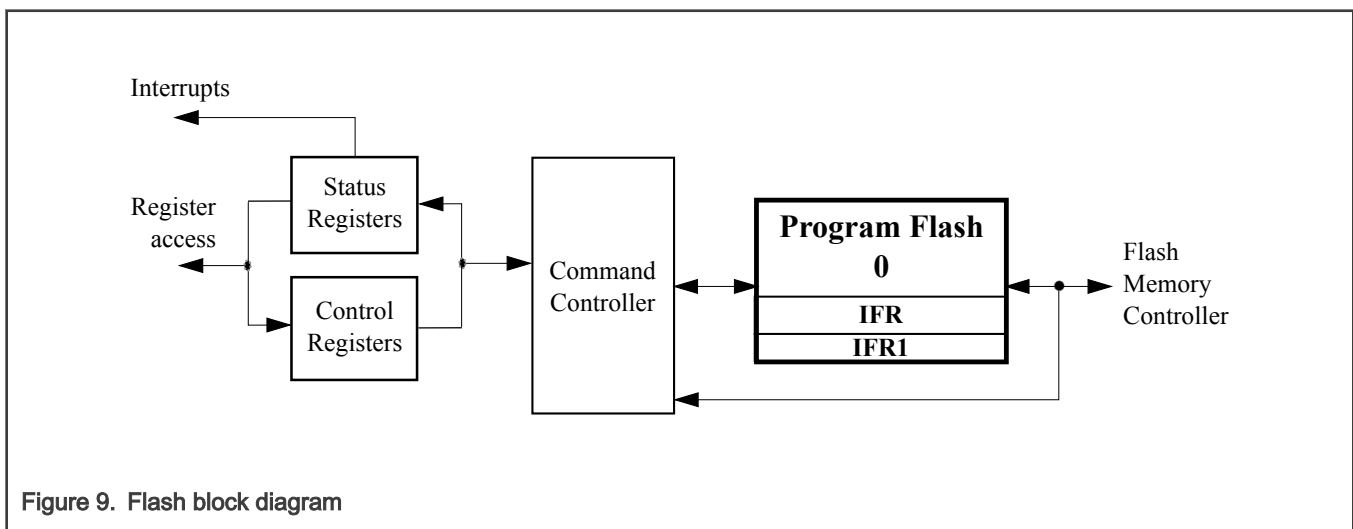

6.2.2 Features

The flash memory module provides the following features:

- Sector size of 8 Kbytes
- Single-bit error correction and double-bit error detection for each flash or IFR phrase
- Signature generation for flash contents
- Command-based flash program, erase, and verify operations
- Internal high-voltage supply generator for flash program and erase operations
- Optional interrupt generation upon flash command completion
- Optional interrupt generation upon double-bit error detection during flash reads from the FMC

NOTE

See the chip configuration details for the exact amount of flash memory available.

6.3 Functional description

The following sections describe functional details of the flash module.

6.3.1 Operations

Operations are typically used to modify flash memory contents. The next sections describe:

- Command write sequence used to set flash command parameters and launch execution
- Available flash commands
- Commands impacted by Block Checker and FMC access protection

6.3.1.1 Command write sequence

Flash commands are accomplished using a command write sequence illustrated in [Figure 10](#). The command controller monitors the transaction protection level on writes during the command write sequence, performs various checks on the command (FCCOB) content, and continues with command execution if all requirements are fulfilled.

Before launching a command, the ACCERR, PVIOL, and CMDABT flags in the FSTAT register must be zero and the CCIF flag must be one to verify that any previous command has completed. The FAIL flag in the FSTAT register is cleared by the command controller when a command is launched unless the FAIL flag was set during initialization due to FMM parameters not being loaded from IFR1. If CCIF is clear, the previous command execution is still active, a new command write sequence cannot be started, and all writes to the FCCOB registers are ignored.

While a flash command is executing, attempts to write to FCTRL[LSACTIVE] are ignored.

6.3.1.1.1 Load the FCCOB Registers

The user must load the FCCOB registers with all parameters required by the specific flash command. The contents of any FCCOB register not used by the specific flash command are ignored except for FCCOB1 (command options) where undefined bits should be cleared. The individual registers that make up the FCCOB data set can be written in any order. All writes to the FCCOB registers in a command write sequence must occur at the same transaction protection level. Any write to the FCCOB registers that violates this rule will be ignored.

Addresses loaded into FCCOB registers assume the flash and IFR spaces start at 0000_0000h.

6.3.1.1.2 Launch the Command by Clearing CCIF

Once all relevant command parameters have been loaded, the user launches the command by clearing the FSTAT[CCIF] bit by writing a '1' to it. The write to clear CCIF must occur at the same transaction protection level as the writes used to load the FCCOB registers. Any write to clear CCIF that violates this rule will be ignored. The CCIF flag remains clear until the flash command completes.

The FSTAT register contains a blocking mechanism which prevents a new flash command from launching (unable to clear CCIF) if the previous command resulted in the setting of an access error (ACCERR), protection violation (PVIOL), or active command abort flag (CMDABT). In error scenarios, two writes to FSTAT are required to initiate the next command: the first write to clear these flags, the second write to clear CCIF. The write to clear these flags can occur at any transaction protection level.

6.3.1.1.3 Command Execution and Error Reporting

Flash command processing contains the following steps:

1. The command controller performs a series of parameter checks, if applicable, which are unique to each command. If the parameter check fails, the FSTAT[ACCERR] flag is set. ACCERR reports invalid instruction codes or options, out of bounds or misaligned addresses, or missing FMM parameters. In the case FMM parameters were not loaded from IFR1 during initialization, the ACCERR flag sets and the FSTAT[FAIL] flag remains set. Command processing never proceeds to execution when the parameter check fails. Instead, command processing is terminated after setting the FSTAT[CCIF] flag. Note that for program and erase operations, PEWEN will not set if FMM parameters were not loaded and PERDY will not set if program or erase related writes to flash or IFR space violate command requirements.
2. If necessary, the command controller performs a protection check to see if the command is allowed to execute on the requested memory space. If the protection check fails, the FSTAT[PVIOL] flag is set. Command processing never proceeds to execution when the protection check fails. Instead, command processing is terminated after setting the FSTAT[CCIF] flag.

3. If the parameter and protection checks pass, the command proceeds to execution. Run-time errors, such as failure to verify, may occur during the execution phase and are reported in the FAIL flag. A flash command may have access errors, protection violations, and run-time errors, but the run-time errors are not seen until all access errors and protection violations have been corrected.
4. If FCTRL[ABTREQ] sets during command execution, the operation will abort with the FSTAT[CMDABT] flag set.
5. Command execution results, if applicable, are reported back to the user via the FCCOB registers.
6. The command controller sets FSTAT[CCIF] signifying that the command has completed.

CAUTION

If the FAIL flag is set along with ACCERR, FMU parameters were not loaded from IFR1 during initialization. In this case, it is recommended that the flash module be reinitialized. If the issue persists, flash commands will continue to set the ACCERR and FAIL flags.

The flow for a generic command write sequence is illustrated in the following figure.

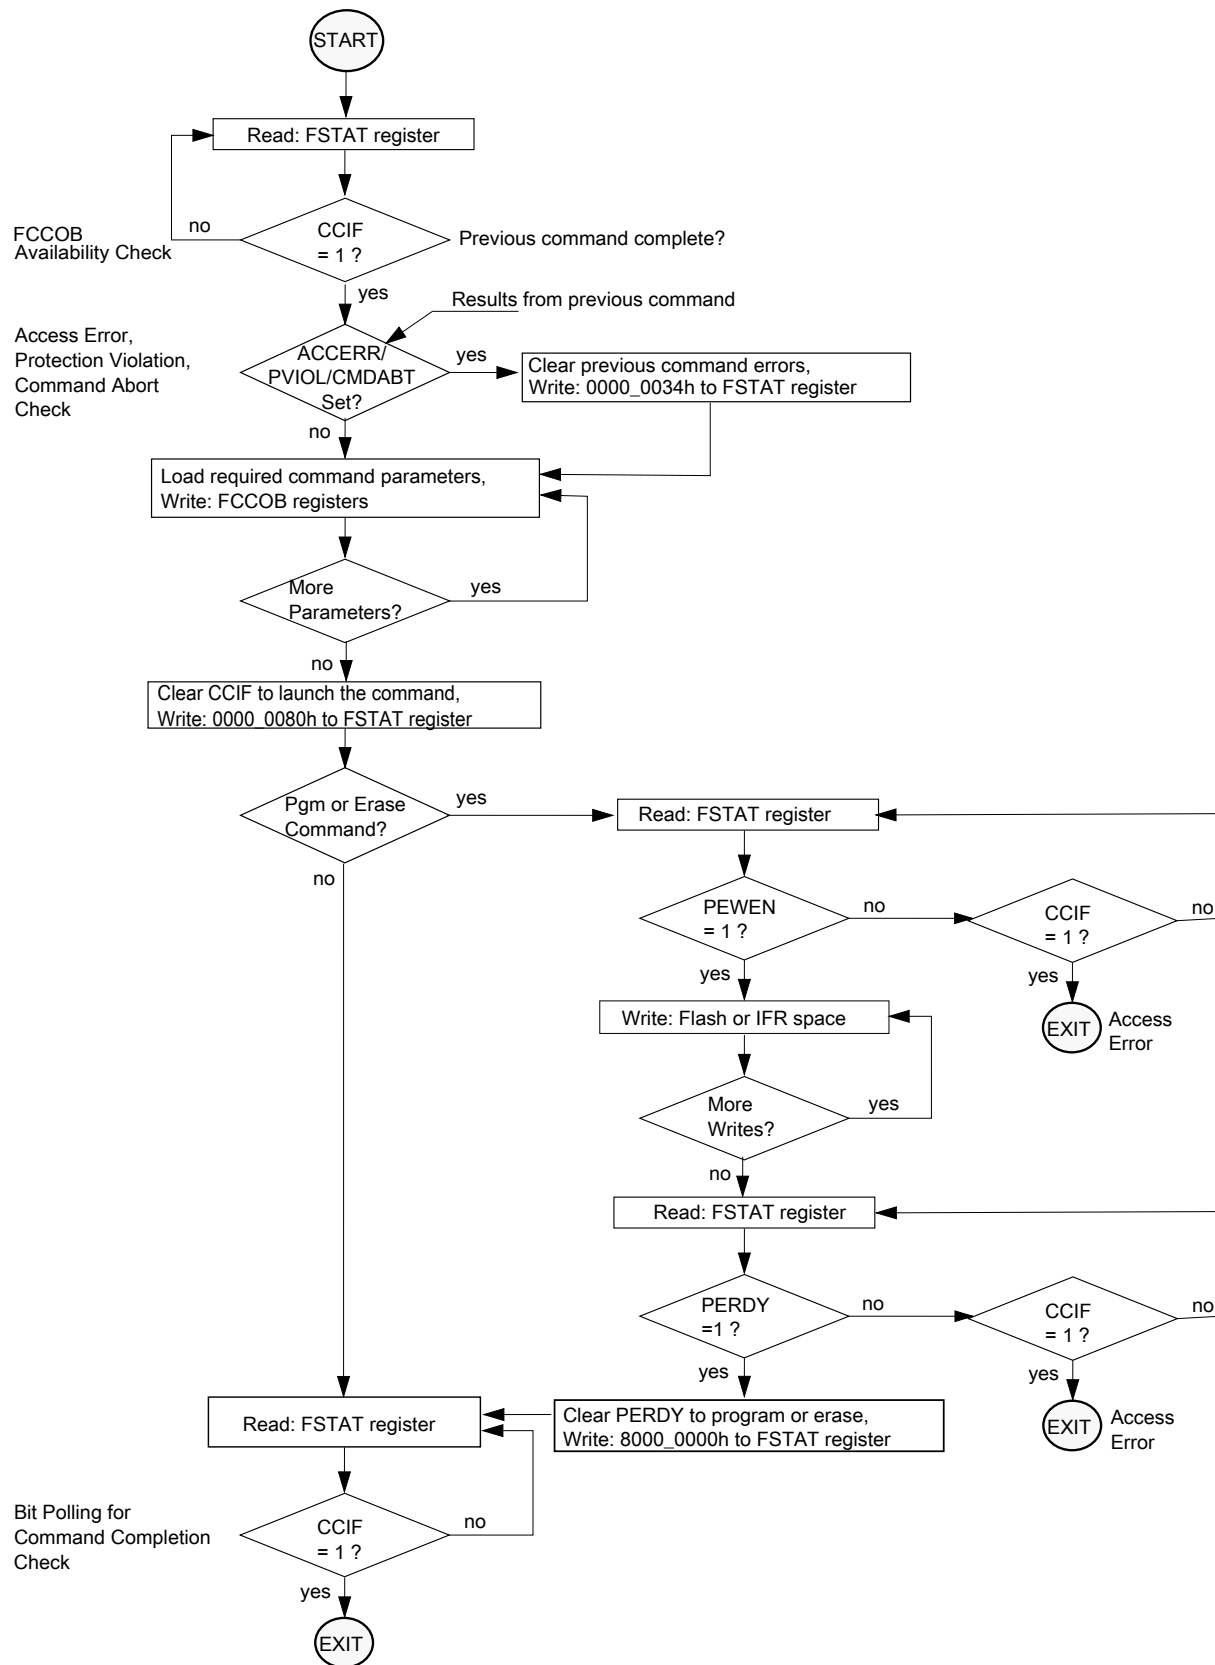


Figure 10. Generic Flash Command Write Sequence Flowchart

6.3.1.1.4 Aborting a Command Write Sequence or Command Operation

FSTAT[CMDP] sets at the start of a command write sequence, typically by writing to one of the FCCOB registers. With CMDP set, setting the FCTRL[ABTREQ] bit allows a user to abort a command write sequence and take control over a new command write sequence. The ABTREQ bit can only be set by a user with the same domain ID as indicated by FSTAT[CMDDID] and at the same or higher security/privilege protection level when compared to FSTAT[CMDPRT], the current owner of the command write sequence. While ABTREQ is set, CCIF cannot be cleared to launch a command.

If FSTAT[CCIF] is high when ABTREQ is set, the command write sequence will abort and ownership transferred to the user setting the ABTREQ bit. The FSTAT[CWSABT] flag will set and the CMDPRT field will be updated based on the write transaction that set the ABTREQ bit. The ABTREQ bit will then be cleared automatically.

If CCIF is low when ABTREQ is set, the command controller will abort execution of the current command operation, set FSTAT[CMDABT], and set CCIF. The CMDPRT field will be updated based on the write transaction that set the ABTREQ bit. The ABTREQ bit will then be cleared automatically. While CMDABT is set, CCIF cannot be cleared to launch a command. Aborting a program or erase operation may leave the flash or IFR space being modified in an indeterminate state.

NOTE

Aborting certain flash commands may take longer to abort than to execute. See the device data sheet for flash command timing specifications.

6.3.1.2 Flash commands

The following table summarizes the function of all flash commands. If any column is marked with an 'X', the flash command is relevant to that particular memory resource.

FCMD	Command	Program flash 0	IFR	Function
00h	Read 1s All (RD1ALL)	x	x	Verify that all flash and IFR space is erased
01h	Read 1s Block (RD1BLK)	x		Verify that a flash block is erased
02h	Read 1s Sector (RD1SCR)	x		Verify that a flash sector is erased
03h	Read 1s Page (RD1PG)	x		Verify that a flash page is erased
04h	Read 1s Phrase (RD1PHR)	x		Verify that a flash phrase is erased
05h	Read into MISR (RDMISR)	x		Generate MISR signature for range of flash pages
12h	Read 1s IFR Sector (RD1ISCR)		x	Verify that an IFR sector is erased
13h	Read 1s IFR Page (RD1IPG)		x	Verify that an IFR page is erased
14h	Read 1s IFR Phrase (RD1IPHR)		x	Verify that an IFR phrase is erased
15h	Read IFR into MISR (RDIMISR)		x	Generate MISR signature for range of IFR pages

Table continues on the next page...

Table continued from the previous page...

FCMD	Command	Program flash 0	IFR	Function
23h	Program Page (PGMPG)	x	x	Program data to a flash or IFR page
24h	Program Phrase (PGMPHR)	x	x	Program data to a flash or IFR phrase
40h	Erase All (ERSALL)	x	x	Erase all flash and IFR space if enabled
42h	Erase Sector (ERSSCR)	x	x	Erase a flash sector

6.3.1.3 Flash commands impacted by Block Checker and FMC access protection

The following flash commands are impacted by Block Checker and FMC access protection:

- Program Phrase (PGMPHR)
- Program Page (PGMPG)
- Erase Sector (ERSSCR)

During execution of these flash commands, a sequence of AHB writes to flash or IFR space are required with validity checked by the Block Checker or FMC. When writes are enabled by the FMU, violations detected by the FMC are reported as an access error in the FMU. The other violations are handled by the Block Checker or FMC.

Table 23. Flash Write Access Checks

Flash Write Violation Condition	Block Checker	FMC	FMU
Flash or IFR address out-of-range	X		
Flash or IFR write permission check fails	X		
Write to IFR1 space		X	
Write width not 32-bit		X	
Writes not enabled by FSTAT[PEWEN]		X	
First write in sequence not properly aligned per FSTAT[PEWEN]			X
Non-sequential write after first aligned write in sequence			X
Bus permissions for the AHB write do not match the bus permissions of the APB write that launched the flash command			X

6.3.2 Flash command descriptions

This section describes all flash commands that can be launched by a valid command write sequence. The flash module sets the FSTAT[ACCERR] bit and aborts the command execution if any of the following illegal conditions occur:

- There is an unrecognized command code in the FCCOB FCMD field.
- There is an error in an FCCOB field for the specific command. Refer to the error handling table provided for each command.

The ACCERR, PVIOL, and CMDABT flags in the FSTAT register should be cleared prior to starting a command write sequence. As described in [Launch the Command by Clearing CCIF](#), a new command cannot be launched while these flags are set.

Do not attempt to read a flash block while a flash command is running (CCIF = 0) on that same block. The flash module may return a transfer error to the FMC resulting in a bus fault. The exception to this rule is during program operations where the flash block is still readable after the command is launched up until the time the FSTAT[PERDY] flag is cleared.

CAUTION

Flash data must be in the erased state before being programmed. Cumulative programming of bits (adding more zeros) is not allowed.

6.3.2.1 Read 1s All Command

The Read 1s All command checks if all flash and IFR space are in the erased state.

Table 24. Read 1s All Command FCCOB Requirements

FCCOB Number	FCCOB Contents
0	00h (RD1ALL)

Upon clearing CCIF to launch the Read 1s All command, the command controller:

- verifies that all flash and IFR space are in the erased state

If all flash and IFR space are not in the erased state, the FSTAT[FAIL] flag is set. The CCIF flag sets after the Read 1s All operation completes.

Table 25. Read 1s All Command Error Handling

Error Condition	Error Bit
FMU parameters not loaded from IFR1 during initialization	FSTAT[ACCERR]
Operation is aborted	FSTAT[CMDABT]
FMU parameters not loaded from IFR1 during initialization	FSTAT[FAIL]
Verify fails	FSTAT[FAIL]

6.3.2.2 Read 1s Block Command

The Read 1s Block command checks if a flash block is in the erased state.

Table 26. Read 1s Block Command FCCOB Requirements

FCCOB Number	FCCOB Contents
0	01h (RD1BLK)
2	Block address

Upon clearing CCIF to launch the Read 1s Block command, the command controller:

- verifies that the selected flash block is in the erased state

If the selected flash block is not in the erased state, the FSTAT[FAIL] flag is set. The CCIF flag sets after the Read 1s Block operation completes.

Table 27. Read 1s Block Command Error Handling

Error Condition	Error Bit
FMU parameters not loaded from IFR1 during initialization	FSTAT[ACCERR]

Table continues on the next page...

Table 27. Read 1s Block Command Error Handling (continued)

Error Condition	Error Bit
Address is not valid	FSTAT[ACCERR]
Address is not block aligned	FSTAT[ACCERR]
Operation is aborted	FSTAT[CMDABT]
FMU parameters not loaded from IFR1 during initialization	FSTAT[FAIL]
Verify fails	FSTAT[FAIL]

6.3.2.3 Read 1s Sector Command

The Read 1s Sector command checks if a flash sector is in the erased state.

Table 28. Read 1s Sector Command FCCOB Requirements

FCCOB Number	FCCOB Contents
0	02h (RD1SCR)
2	Sector address

Upon clearing CCIF to launch the Read 1s Sector command, the command controller:

- verifies that the selected flash sector is in the erased state

If the selected flash sector is not in the erased state, the FSTAT[FAIL] flag is set. The CCIF flag sets after the Read 1s Sector operation completes.

Table 29. Read 1s Sector Command Error Handling

Error Condition	Error Bit
FMU parameters not loaded from IFR1 during initialization	FSTAT[ACCERR]
Address is not valid	FSTAT[ACCERR]
Address is not sector aligned	FSTAT[ACCERR]
Operation is aborted	FSTAT[CMDABT]
FMU parameters not loaded from IFR1 during initialization	FSTAT[FAIL]
Verify fails	FSTAT[FAIL]

6.3.2.4 Read 1s Page Command

The Read 1s Page command checks if a flash page is in the erased state.

Table 30. Read 1s Page Command FCCOB Requirements

FCCOB Number	FCCOB Contents
0	03h (RD1PG)
2	Page address

Upon clearing CCIF to launch the Read 1s Page command, the command controller:

- verifies that the selected flash page is in the erased state

If the selected flash page is not in the erased state, the FSTAT[FAIL] flag is set. The CCIF flag sets after the Read 1s Page operation completes.

Table 31. Read 1s Page Command Error Handling

Error Condition	Error Bit
FMU parameters not loaded from IFR1 during initialization	FSTAT[ACCERR]
Address is not valid	FSTAT[ACCERR]
Address is not page aligned	FSTAT[ACCERR]
Operation is aborted	FSTAT[CMDABT]
FMU parameters not loaded from IFR1 during initialization	FSTAT[FAIL]
Verify fails	FSTAT[FAIL]

6.3.2.5 Read 1s Phrase Command

The Read 1s Phrase command checks if a flash phrase is in the erased state.

Table 32. Read 1s Phrase Command FCCOB Requirements

FCCOB Number	FCCOB Contents
0	04h (RD1PHR)
2	Phrase address

Upon clearing CCIF to launch the Read 1s Phrase command, the command controller:

- verifies that the selected flash phrase is in the erased state

If the selected flash phrase is not in the erased state, the FSTAT[FAIL] flag is set. The CCIF flag sets after the Read 1s Phrase operation completes.

Table 33. Read 1s Phrase Command Error Handling

Error Condition	Error Bit
FMU parameters not loaded from IFR1 during initialization	FSTAT[ACCERR]
Address is not valid	FSTAT[ACCERR]
Address is not phrase aligned	FSTAT[ACCERR]
Operation is aborted	FSTAT[CMDABT]
FMU parameters not loaded from IFR1 during initialization	FSTAT[FAIL]
Verify fails	FSTAT[FAIL]

6.3.2.6 Read into MISR command

The Read into MISR operation generates a signature based on the contents of the selected flash memory using an embedded MISR.

Table 34. Read into MISR Command FCCOB Requirements

FCCOB Number	FCCOB Contents
0	05h (RDMISR) [7:0]
2	Starting flash page address
3	Ending flash phrase address
4	Word 0 of MISR seed
5	Word 1 of MISR seed
6	Word 2 of MISR seed
7	Word 3 of MISR seed
Returned values	
4	Word 0 of MISR signature
5	Word 1 of MISR signature
6	Word 2 of MISR signature
7	Word 3 of MISR signature

Upon clearing CCIF to launch the Read into MISR command, the command controller:

1. initializes the MISR with the seed provided
2. processes flash data starting with the starting flash page address provided
3. continues until the ending flash phrase address has been processed (must be the last phrase in a page)
4. returns the resulting signature into the FCCOB register bank unless an uncorrectable ECC fault is detected

The CCIF flag sets after the Read into MISR operation completes. If the operation is aborted by setting FCTRL[ABTREQ], a signature will not be returned if the abort occurs prior to the operation writing the signature.

MISR polynomial is $X^{128} + X^{126} + X^{101} + X^{99} + 1$.

Table 35. Read into MISR Command Error Handling

Error Condition	Error Bit
FMU parameters not loaded from IFR1 during initialization	FSTAT[ACCERR]
Address is not valid	FSTAT[ACCERR]
Starting address is not flash page aligned	FSTAT[ACCERR]
Ending address is not flash phrase aligned	FSTAT[ACCERR]
Ending address is not the last phrase in a page	FSTAT[ACCERR]
Starting address is larger than the ending address	FSTAT[ACCERR]
Requested range crosses a flash block boundary	FSTAT[ACCERR]
Operation is aborted	FSTAT[CMDABT]
FMU parameters not loaded from IFR1 during initialization	FSTAT[FAIL]
Uncorrectable ECC error is detected	FSTAT[FAIL]

6.3.2.7 Read 1s IFR Sector Command

The Read 1s IFR Sector command checks if an IFR sector is in the erased state.

Table 36. Read 1s IFR Sector Command FCCOB Requirements

FCCOB Number	FCCOB Contents
0	12h (RD1ISCR)
2	IFR sector address

Upon clearing CCIF to launch the Read 1s IFR Sector command, the command controller:

- verifies that the selected IFR sector is in the erased state

If the selected IFR sector is not in the erased state, the FSTAT[FAIL] flag is set. The CCIF flag sets after the Read 1s IFR Sector operation completes.

Table 37. Read 1s IFR Sector Command Error Handling

Error Condition	Error Bit
FMU parameters not loaded from IFR1 during initialization	FSTAT[ACCERR]
Address is not valid	FSTAT[ACCERR]
Address is not IFR sector aligned	FSTAT[ACCERR]
Operation is aborted	FSTAT[CMDABT]
FMU parameters not loaded from IFR1 during initialization	FSTAT[FAIL]
Verify fails	FSTAT[FAIL]

6.3.2.8 Read 1s IFR Page Command

The Read 1s IFR Page command checks if an IFR page is in the erased state.

Table 38. Read 1s IFR Page Command FCCOB Requirements

FCCOB Number	FCCOB Contents
0	13h (RD1IPG)
2	IFR page address

Upon clearing CCIF to launch the Read 1s IFR Page command, the command controller:

- verifies that the selected IFR page is in the erased state

If the selected IFR page is not in the erased state, the FSTAT[FAIL] flag is set. The CCIF flag sets after the Read 1s IFR Page operation completes.

Table 39. Read 1s IFR Page Command Error Handling

Error Condition	Error Bit
FMU parameters not loaded from IFR1 during initialization	FSTAT[ACCERR]
Address is not valid	FSTAT[ACCERR]
Address is not IFR page aligned	FSTAT[ACCERR]
Operation is aborted	FSTAT[CMDABT]

Table continues on the next page...

Table 39. Read 1s IFR Page Command Error Handling (continued)

Error Condition	Error Bit
FMU parameters not loaded from IFR1 during initialization	FSTAT[FAIL]
Verify fails	FSTAT[FAIL]

6.3.2.9 Read 1s IFR Phrase Command

The Read 1s IFR Phrase command checks if an IFR phrase is in the erased state.

Table 40. Read 1s IFR Phrase Command FCCOB Requirements

FCCOB Number	FCCOB Contents
0	14h (RD1IPHR)
2	IFR phrase address

Upon clearing CCIF to launch the Read 1s IFR Phrase command, the command controller:

- verifies that the selected IFR phrase is in the erased state

If the selected IFR phrase is not in the erased state, the FSTAT[FAIL] flag is set. The CCIF flag sets after the Read 1s IFR Phrase operation completes.

Table 41. Read 1s IFR Phrase Command Error Handling

Error Condition	Error Bit
FMU parameters not loaded from IFR1 during initialization	FSTAT[ACCERR]
Address is not valid	FSTAT[ACCERR]
Address is not IFR phrase aligned	FSTAT[ACCERR]
Operation is aborted	FSTAT[CMDABT]
FMU parameters not loaded from IFR1 during initialization	FSTAT[FAIL]
Verify fails	FSTAT[FAIL]

6.3.2.10 Read IFR into MISR command

The Read IFR into MISR operation generates a signature based on the contents of the selected IFR space using an embedded MISR.

Table 42. Read IFR into MISR Command FCCOB Requirements

FCCOB Number	FCCOB Contents
0	15h (RDIMISR) [7:0]
2	Starting IFR page address
3	Ending IFR phrase address
4	Word 0 of MISR seed
5	Word 1 of MISR seed
6	Word 2 of MISR seed

Table continues on the next page...

Table 42. Read IFR into MISR Command FCCOB Requirements (continued)

FCCOB Number	FCCOB Contents
7	Word 3 of MISR seed
Returned values	
4	Word 0 of MISR signature
5	Word 1 of MISR signature
6	Word 2 of MISR signature
7	Word 3 of MISR signature

Upon clearing CCIF to launch the Read IFR into MISR command, the command controller:

1. initializes the MISR with the seed provided
2. processes IFR data starting with the starting IFR page address provided
3. continues until the ending IFR phrase has been processed (must be the last phrase in a page)
4. returns the resulting signature into the FCCOB register bank unless an uncorrectable ECC fault is detected

The CCIF flag sets after the Read IFR into MISR operation completes. If the operation is aborted by setting FCTRL[ABTREQ], a signature will not be returned if the abort occurs prior to the operation writing the signature.

MISR polynomial is $X^{128} + X^{126} + X^{101} + X^{99} + 1$.

Table 43. Read IFR into MISR Command Error Handling

Error Condition	Error Bit
FMU parameters not loaded from IFR1 during initialization	FSTAT[ACCERR]
Address is not valid	FSTAT[ACCERR]
Starting address is not IFR page aligned	FSTAT[ACCERR]
Ending address is not IFR phrase aligned	FSTAT[ACCERR]
Ending address is not the last phrase in a page	FSTAT[ACCERR]
Starting address is larger than the ending address	FSTAT[ACCERR]
Operation is aborted	FSTAT[CMDABT]
FMU parameters not loaded from IFR1 during initialization	FSTAT[FAIL]
Uncorrectable ECC error is detected	FSTAT[FAIL]

6.3.2.11 Program Page command

The Program Page operation programs 32 words of data to a previously erased flash or IFR page.

CAUTION

The page must be in the erased state before being programmed. Cumulative programming of bits (back-to-back program operations without an intervening erase) within a page is not allowed.

Table 44. Program Page Command FCCOB Requirements

FCCOB Number	FCCOB Contents
0	23h (PGMPG) [7:0]

Upon clearing CCIF to launch the Program Page command, the command controller:

1. sets FSTAT[PEWEN] to enable writes to the flash and IFR space in the system memory map
2. waits for the user to write 32 consecutive words to the flash or IFR space with the first write being page aligned
3. clears FSTAT[PEWEN] field
4. sets FSTAT[PERDY]
5. waits for the user to clear FSTAT[PERDY]
6. programs the data into the targeted page written to in step 2
7. verifies bits to be programmed are programmed to the program verify level

The CCIF flag sets after the Program Page operation completes. The Program Page operation can be aborted by setting FCTRL[ABTREQ]. If the operation is aborted, the operation terminates with the FSTAT[CMDABT] flag set. Once CCIF is set, the Program Page command may be repeated (same addresses, same data) to complete the program operation without erasing the sector containing the targeted page. Invalid writes to flash or IFR space based on Block Checker or FMC access protection are trapped outside of the flash module.

Table 45. Program Page Command Error Handling

Error Condition	Error Bit
FMU parameters not loaded from IFR1 during initialization	FSTAT[ACCERR]
Protection level of the writes to flash or IFR space do not match the protection level of the command write sequence	FSTAT[ACCERR]
Initial address is not page aligned and subsequent addresses phrase aligned	FSTAT[ACCERR]
Number of writes to flash or IFR space is more than expected	FSTAT[ACCERR]
Operation is aborted	FSTAT[CMDABT]
FMU parameters not loaded from IFR1 during initialization	FSTAT[FAIL]
Verify fails	FSTAT[FAIL]

6.3.2.11.1 Page programming

The standard process of programming one or more flash or IFR pages is as follows:

1. If required, launch the Erase Sector command to erase the flash or IFR sector to be programmed (repeat for additional sectors).
2. Launch the Program Page command to enable writes to the flash space.
3. After the command controller sets FSTAT[PEWEN], write 32 consecutive words to the flash space with the first word page aligned. The data written to the flash space is not readable until the program operation has successfully completed.
4. After the flash page has been written, the command controller will stall and set FSTAT[PERDY].
5. Clear PERDY allowing the command controller to resume and program the 32 words into the flash or IFR space written to in step 3.
6. Wait for CCIF to set indicating the program operation has completed.
7. To program additional flash or IFR pages in previously erased flash memory, repeat steps 2 through 6.

6.3.2.12 Program Phrase command

The Program Phrase operation programs 4 words of data to a previously erased flash or IFR phrase.

CAUTION

The phrase must be in the erased state before being programmed. Cumulative programming of bits (back-to-back program operations without an intervening erase) within a phrase is not allowed.

Table 46. Program Phrase Command FCCOB Requirements

FCCOB Number	FCCOB Contents
0	24h (PGMPHR) [7:0]

Upon clearing CCIF to launch the Program Phrase command, the command controller:

1. sets FSTAT[PEWEN] to enable writes to the flash and IFR space in the system memory map
2. waits for the user to write 4 consecutive words to the flash or IFR space with the first write being phrase aligned
3. clears FSTAT[PEWEN] field
4. sets FSTAT[PERDY]
5. waits for the user to clear FSTAT[PERDY]
6. programs the data into the targeted phrase written to in step 2.
7. verifies bits to be programmed are programmed to the program verify level

The CCIF flag sets after the Program Phrase operation completes. The Program Phrase operation can be aborted by setting FCTRL[ABTREQ]. If the operation is aborted, the operation terminates with the FSTAT[CMDABT] flag set. Once CCIF is set and the CMDABT flag is cleared, the Program Phrase command may be repeated (same addresses, same data) to complete the program operation without erasing the sector containing the targeted phrase. Invalid writes to flash or IFR space based on Block Checker or FMC access protection are trapped outside of the flash module.

Table 47. Program Phrase Command Error Handling

Error Condition	Error Bit
FMM parameters not loaded from IFR1 during initialization	FSTAT[ACCERR]
Protection level of the writes to flash or IFR space do not match the protection level of the command write sequence	FSTAT[ACCERR]
Address is not phrase aligned	FSTAT[ACCERR]
Number of writes to flash or IFR space is more than expected	FSTAT[ACCERR]
Operation is aborted	FSTAT[CMDABT]
FMM parameters not loaded from IFR1 during initialization	FSTAT[FAIL]
Verify fails	FSTAT[FAIL]

6.3.2.12.1 Phrase programming

The standard process of programming one or more flash or IFR phrases is as follows:

1. If required, launch the Erase Sector command to erase the flash or IFR sector to be programmed (repeat for additional sectors).
2. Launch the Program Phrase command to enable writes to the flash and IFR space.
3. After the command controller sets FSTAT[PEWEN], write 4 consecutive words to the flash or IFR space with the first word phrase aligned. The data written to the flash or IFR space is not readable until the program operation has successfully completed.
4. After the flash or IFR phrase has been written, the command controller will stall the operation and set FSTAT[PERDY].

5. Clear PERDY allowing the command controller to resume and program the 4 words into the flash or IFR space written to in step 3.
6. Wait for CCIF to set indicating the program operation has completed.
7. To program additional flash or IFR phrases in previously erased flash memory, repeat steps 2 through 6.

6.3.2.13 Erase All command

The Erase All operation erases all flash and IFR space if enabled by the MCU.

Table 48. Erase All Command FCCOB Requirements

FCCOB Number	FCCOB Contents
0	40h (ERSALL) [7:0]

Upon clearing CCIF to launch the Erase All command, the command controller:

1. erases flash block 0 sector-by-sector
2. verifies flash block 0 is erased; if not, skips IFR space in block 0
3. erases IFR space in block 0 sector-by-sector
4. verifies IFR space in block 0 is erased
5. clears FSTAT[CMDP] flag

The CCIF flag sets after the Erase All operation completes. If either the flash or IFR space is not in the erased state, FSTAT[FAIL] sets.

Table 49. Erase All Command Error Handling

Error Condition	Error Bit
FMU parameters not loaded from IFR1 during initialization	FSTAT[ACCERR]
Command is disabled by the MCU	FSTAT[PVIOL]
Operation is aborted	FSTAT[CMDABT]
FMU parameters not loaded from IFR1 during initialization	FSTAT[FAIL]
Verify fails	FSTAT[FAIL]

6.3.2.14 Erase Sector command

The Erase Sector operation erases the IFR sector to prepare the sector for programming.

Table 50. Erase Sector Command FCCOB Requirements

FCCOB Number	FCCOB Contents
0	42h (ERSSCR) [7:0]

Upon clearing CCIF to launch the Erase Sector command, the command controller:

1. sets FSTAT[PEWEN] to enable writes to the flash and IFR space in the system memory map
2. waits for the user to write 4 consecutive words to the flash or IFR space with the first write being phrase (or sector) aligned
3. clears FSTAT[PEWEN] field
4. sets FSTAT[PERDY]

5. waits for the user to clear FSTAT[PERDY]
6. erases the selected flash or IFR sector
7. verifies the selected flash or IFR sector is erased

If the selected flash or IFR sector is not in the erased state, FSTAT[FAIL] is set. The CCIF flag sets after the Erase Sector operation completes. The Erase Sector operation can be aborted by setting FCTRL[ABTREQ]. If the operation is aborted, the operation terminates with the FSTAT[CMDABT] flag set. Once CCIF is set, the Erase Sector command may be repeated to complete the erase operation. Invalid writes to flash or IFR space based on Block Checker or FMC access protection are trapped outside of the flash module.

Table 51. Erase Sector Command Error Handling

Error Condition	Error Bit
FMU parameters not loaded from IFR1 during initialization	FSTAT[ACCERR]
Protection level of the writes to flash or IFR space do not match the protection level of the command write sequence	FSTAT[ACCERR]
Address is not flash or IFR phrase aligned	FSTAT[ACCERR]
Operation is aborted	FSTAT[CMDABT]
IFR Sector is protected (see FCNFG register)	FSTAT[PVIOL]
FMU parameters not loaded from IFR1 during initialization	FSTAT[FAIL]
Verify fails	FSTAT[FAIL]

6.3.3 Mass Erase

If enabled by the MCU, MCU resources can be used to launch a mass erase operation without accessing the flash registers.

To know how to enable/disable mass erase for your device, refer the chip-specific section.

The status of the mass erase request is reflected in the FCNFG[ERSREQ] bit. When launched, the mass erase operation occurs regardless of the state of the CMDP, ACCERR, PVIOL, or CMDABT flags in the FSTAT register but requires FSTAT[CCIF] to be set and the MCU to enable mass erase. When mass erase is launched with CCIF set, the CMDP, CCIF, CWSABT, PVIOL, and CMDABT flags in the FSTAT register clear. The ACCERR and FAIL flags also clear unless the FMU parameters were not loaded from IFR1 during initialization in which case the mass erase operation terminates without performing any erase of flash memory.

Upon successful launch of the mass erase operation, the command controller (same steps as the Erase All command):

1. erases flash block 0 sector-by-sector
2. verifies flash block 0 is erased; if not, skips IFR space in block 0
3. erases IFR space in block 0 sector-by-sector
4. verifies IFR space in block 0 is erased

The CCIF flag sets and the ERSREQ bit clears once the operation completes and the FSTAT[FAIL] flag sets if any verify step fails during the mass erase operation. This method of erasing the flash memory cannot be aborted by setting FCTRL[ABTREQ].

6.3.4 Modes

6.3.4.1 Sleep mode

If the CPU enters sleep mode while a flash command is executing, the flash module can wake the CPU via the command complete interrupt (see [Interrupts](#)).

6.3.4.2 Non-Active Power mode

If a flash command is active (CCIF = 0) when the MCU requests a non-active power mode, the command execution completes before the MCU is allowed to enter the non-active power mode.

6.3.4.3 Low Speed Active Power mode

While the MCU is in low speed active power mode (FCTRL[LSACTIVE]=1), the flash module will accept flash commands. While a flash command is in progress (FSTAT[CCIF]=0), the LSACTIVE bit is not writable.

6.3.5 Clocking

This module has no clocking considerations.

6.3.6 Interrupts

The flash module can generate interrupt requests to the MCU upon the occurrence of various flash module events. These interrupt events and their associated status and control bits are shown in the following table.

Table 52. Flash Module Interrupt Sources

Flash Event	Readable Status Bit	Interrupt Enable Bit
Flash Command Complete	FSTAT[CCIF]	FCNFG[CCIE]
Flash ECC Fault Detected	FSTAT[DFDIF]	FCNFG[DFDIE]

NOTE

Vector addresses and their relative interrupt priority are determined at the MCU level.

6.4 External signals

The flash module contains no signals that connect off-chip.

6.5 Initialization

On each reset, the command controller initializes the following based on IFR1 content:

1. FCTRL[RWSC]
2. FMU Parameters (FMUPARM)

The FSTAT[CCIF] flag is cleared throughout the initialization flow. The flash module also holds off all access to flash registers and flash memory during initialization. Completion of the initialization flow is marked by setting FSTAT[CCIF]. If an uncorrectable ECC error is detected during initialization, the FSTAT[FAIL] flag sets. The FAIL flag also sets if FMU parameters are not loaded from IFR1 during initialization. In this case, attempts to launch a flash command terminate with the ACCERR and FAIL flags set. The recommendation is to refrain from launching flash commands if the FAIL flag sets after initialization.

If a reset occurs while any flash command is in progress, that command is immediately aborted. The state of the flash memory or IFR space being programmed or erased is not guaranteed. Command operations do not automatically resume after exiting reset.

6.6 Memory map and registers

This section describes the flash memory map for IFR/IFR1 space and registers. See the MCU system memory map for the location of all flash memory space and registers. Data read from unimplemented memory space in the flash module is undefined.

6.6.1 IFR description

Each flash block contains IFR space separate from the main flash memory. IFR space is memory mapped (see the MCU system memory map). IFR space is divided into IFR pages programmable using the Program Page command. IFR pages are further divided into IFR phrases programmable using the Program Phrase command. Once programmed, IFR phrases can be reprogrammed after a successful erase using the Erase Sector command operation unless the IFR sector is protected by the FCNFG register.

Table 53. IFR map

Offset Byte Address	IFR Field Size (Bytes)
Block 0 IFR Sector 0	
0000h-1FFFh	8,192
Block 0 IFR Sector 1	
2000h-3FFFh	8,192
Block 0 IFR Sector 2	
4000h-5FFFh	8,192
Block 0 IFR Sector 3	
6000h-7FFFh	8,192

Each flash block also contains IFR1 space separate from the main flash memory. IFR1 space in program flash block 0 is memory mapped for read-only access (see the MCU system memory map). IFR1 space cannot be erased or programmed by the user.

Table 54. IFR1 map

Offset Byte Address	IFR1 Field Size (Bytes)
Block 0 IFR1 Sector	
0000h-15FFh	5,632
1600h-16FFh	256
1700h-1FFFh	2,304

6.6.2 Register descriptions

The flash module contains a set of memory-mapped control and status registers.

NOTE

While a command is running (FSTAT[CCIF]=0), register writes are allowed to FSTAT[PERDY,DFDIF,CWSABT], FCNFG, and FCTRL[ABTREQ,FDFD,RWSC].

6.6.2.1 Flash register descriptions

6.6.2.1.1 Flash memory map

FMU_MSF1_B.FMU base address: 4009_5000h

Offset	Register	Width (In bits)	Access	Reset value
0h	Flash Status Register (FSTAT)	32	RW	See section
4h	Flash Configuration Register (FCNFG)	32	RW	See section
8h	Flash Control Register (FCTRL)	32	RW	See section
10h	Flash Common Command Object Registers (FCCOB0)	32	RW	0000_0000h
14h	Flash Common Command Object Registers (FCCOB1)	32	RW	0000_0000h
18h	Flash Common Command Object Registers (FCCOB2)	32	RW	0000_0000h
1Ch	Flash Common Command Object Registers (FCCOB3)	32	RW	0000_0000h
20h	Flash Common Command Object Registers (FCCOB4)	32	RW	0000_0000h
24h	Flash Common Command Object Registers (FCCOB5)	32	RW	0000_0000h
28h	Flash Common Command Object Registers (FCCOB6)	32	RW	0000_0000h
2Ch	Flash Common Command Object Registers (FCCOB7)	32	RW	0000_0000h

6.6.2.1.2 Flash Status Register (FSTAT)

Offset

Register	Offset
FSTAT	0h

Function

The FSTAT register reports the operational status of the flash module.

NOTE

When set, ACCERR, PVIOL, and CMDABT flags prevent the launch of any more commands until the flag is cleared (by writing a one to it).

CAUTION

When clearing the DFDIF flag, be careful not to use read-modify-write on the entire FSTAT register and inadvertently clear CCIF to launch a command.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	PERDY	0				PEWEN				0				SALV_US...		DFDIF
W	W1C															W1C
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	CMDDDID				CMDP	0	CMDPRT		CCIF	CWSA_BT	ACCE_RR	PVIOL	0	CMDA_BT	0	FAIL
W									W1C	W1C	W1C	W1C		W1C		
Reset	0	0	0	0	0	0	0	0	1	0	0	0	0	0	0	u

Fields

Field	Function
31 PERDY	Program-Erase Ready Control/Status Flag The PERDY flag is set by the command controller when a program or sector erase command operation has successfully completed the write phase. The command controller will stall the command operation until the user clears the PERDY flag by writing a 1 to PERDY. Failure to clear PERDY will leave the command controller stalled but the flash or IFR space targeted by the command operation will remain readable by the FMC. If FCTRL[ABTREQ] is set while the PERDY flag is set, the command controller will clear PERDY, abort the command operation, and set both CCIF and CMDABT. 0b - Program or sector erase command operation not stalled 1b - Program or sector erase command operation ready to execute
30-26 —	Reserved
25-24 PEWEN	Program-Erase Write Enable Control During program or sector erase command operations, writes are enabled to flash or IFR space in the system memory map. For phrase programming or sector erase, writes are enabled for 4 consecutive words (16 bytes) with address phrase aligned. For page programming, writes are enabled for 8 consecutive phrases (128 bytes) with address page aligned. For programming, data written to erased flash or IFR space for program commands is not available until the program operation has successfully completed. PEWEN will not assert if FMU parameters were not loaded from IFR1 during initialization. 00b - Writes are not enabled 01b - Writes are enabled for one flash or IFR phrase (phrase programming, sector erase) 10b - Writes are enabled for one flash or IFR page (page programming) 11b - Reserved
23-18 —	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
17 SALV_USED	Salvage Used for Erase operation This flag indicates salvage was used during the last Erase Sector, Erase All, or Mass Erase operation and is valid at the end of the operation. Salvage involves using ECC to pass erase verify allowing single-bit faults per phrase verified. This flag remains valid until any flash command or Mass Erase operation launches at which time the flag clears. Use of salvage does not guarantee that the erase operation succeeds but only that salvage was used on at least one phrase. 0b - Salvage not used during last operation 1b - Salvage used during the last erase operation
16 DFDIF	Double Bit Fault Detect Interrupt Flag The DFDIF flag indicates an uncorrectable ECC fault was detected during a valid flash read access from the FMC. The DFDIF flag is cleared by writing a 1 to DFDIF. Writing a 0 to DFDIF has no effect. 0b - Double bit fault not detected during a valid flash read access 1b - Double bit fault detected (or FCTRL[DFD] is set) during a valid flash read access
15-12 CMDDID	Command domain ID While the CMDP flag is set, the CMDDID bits reflect the domain ID of the write transaction controlling a command write sequence or aborting a command operation. Writes to load an FCCOB register, clear CCIF, clear PERDY, or write FCTRL[LSACTIVE] must have the same domain ID as the write transaction that started the command write sequence. The CMDDID bits persist after the CMDP flag clears until the CMDP flag sets again at the start of a new command write sequence. Writes to clear the CWSABT, ACCERR, PVIOL, or CMDABT flags are not influenced by the state of the CMDDID bits.
11 CMDP	Command protection status flag The CMDP flag sets when a command write sequence starts with a write to load an existing FCCOB register or clear CCIF while ACCERR, PVIOL, and CMDABT are clear. Clearing the CWSABT, ACCERR, PVIOL, or CMDABT flags as part of a command write sequence will not set the CMDP flag. While the CMDP flag is set, the protection level of any subsequent write transaction to load an FCCOB register, clear CCIF, clear PERDY, or write FCTRL[LSACTIVE] must match the CMDPRT bits and the domain ID must match the CMDDID bits. The CMDP flag remains set until cleared when CCIF is set after a command operation or Power Down recovery completes unless the CMDABT flag is set. The CMDP flag is cleared even if the operation ends with ACCERR or PVIOL set. When the CMDP flag is cleared, the CMDPRT and CMDDID bits remain unchanged. The CMDP flag is also cleared by a mass erase request with CCIF set. 0b - Command protection level and domain ID are stale 1b - Command protection level (CMDPRT) and domain ID (CMDDID) are set
10 —	Reserved
9-8 CMDPRT	Command protection level

Table continues on the next page...

Table continued from the previous page...

Field	Function
	While the CMDP flag is set, the CMDPRT bits reflect the secure/privilege protection level of the write transaction controlling a command write sequence or aborting a command operation. Writes to load an existing FCCOB register, clear CCIF, clear PERDY, or write FCTRL[LSACTIVE] must occur with the same protection level as indicated by the CMDPRT bits. Writes to clear the CWSABT, ACCERR, PVIOL, or CMDABT flags are not influenced by the state of the CMDPRT bits. If FCTRL[ABTREQ] is set while CCIF is high or low, the CMDPRT bits will change to reflect the security/privilege protection level of the write transaction that set the ABTREQ bit. 00b - Secure, normal access 01b - Secure, privileged access 10b - Nonsecure, normal access 11b - Nonsecure, privileged access
7 CCIF	Command Complete Interrupt Flag The CCIF flag indicates that a flash command has completed. The CCIF flag is cleared by writing a 1 to CCIF to launch a flash command. The CCIF flag stays low until the command completes. The CCIF flag is cleared by a mass erase request with CCIF set. The CCIF flag is also cleared upon entry into Deep Sleep, Power Down, and Deep Power Down modes and stays low until the end of recovery from these non-active power modes. The CCIF flag is reset to 0 but is set to 1 at the end of flash initialization. 0b - Flash command, initialization, or power mode recovery in progress 1b - Flash command, initialization, or power mode recovery has completed
6 CWSABT	Command Write Sequence Abort Flag The CWSABT flag indicates whether a request to abort a command write sequence prior to command launch has been granted. If FCTRL[ABTREQ] is set while CCIF is high, the CWSABT flag will get set. Once CWSABT is set, ABTREQ will get cleared. While the CWSABT flag is set, ABTREQ cannot be set. The CWSABT flag is cleared by writing a 1 to CWSABT while CCIF is set or clear and ABTREQ is clear. Writing a 0 to the CWSABT flag has no effect. The CWSABT flag is cleared by a mass erase request with CCIF set. 0b - Command write sequence not aborted 1b - Command write sequence aborted
5 ACCERR	Command Access Error Flag The ACCERR flag indicates an illegal attempt was made to launch a flash command due to a violation of the command write sequence or by providing invalid command parameters. The ACCERR flag also sets during command execution if FMU parameters were not loaded from IFR1 during initialization. While the ACCERR flag is set, the CCIF flag cannot be cleared to launch a command. The ACCERR flag is cleared by writing a 1 to ACCERR while CCIF is set. Writing a 0 to the ACCERR flag has no effect. The ACCERR flag is cleared by a mass erase request with CCIF set but is not cleared during Power Down recovery.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - No access error detected 1b - Access error detected
4 PVIOL	Command Protection Violation Flag The PVIOL flag indicates an attempt was made to modify a protected area of flash memory during a command operation. While the PVIOL flag is set, the CCIF flag cannot be cleared to launch a command. The PVIOL flag is cleared by writing a 1 to PVIOL while CCIF is set. Writing a 0 to the PVIOL flag has no effect. The PVIOL flag is cleared by a mass erase request with CCIF set but is not cleared during Power Down recovery. 0b - No protection violation detected 1b - Protection violation detected
3 —	Reserved
2 CMDABT	Command Abort Flag The CMDABT flag indicates FCTRL[ABTREQ] was set during a command operation while CCIF was clear. This event will result in the termination of the operation unless it occurs during the exit routine of the operation. Once CMDABT is set, ABTREQ will get cleared. While the CMDABT flag is set, ABTREQ cannot be set and the CCIF flag cannot be cleared to launch a command. The CMDABT flag is cleared by writing a 1 to CMDABT while CCIF is set and ABTREQ is clear. Writing a 0 to the CMDABT flag has no effect. The CMDABT flag is cleared by a mass erase request with CCIF set. 0b - No command abort detected 1b - Command abort detected
1 —	Reserved
0 FAIL	Command Fail Flag The FAIL flag is set if an error is detected during execution of a flash command, mass erase operation, or flash initialization. If the FAIL flag sets along with ACCERR after launching a flash command or mass erase operation, FMU parameters were not loaded from IFR1 during initialization and a clean POR where FMU parameters are successfully loaded is required to clear the FAIL flag. As a status flag, this bit cannot (and need not) be cleared by the user like some of the other flags in this register. The value of the FAIL flag for "command-N" is valid only at the end of the "command-N" execution when CCIF=1 and before the next command has been launched. At some point during the execution of "command-N+1," the FAIL flag is cleared unless FMU parameters were not loaded from IFR1 during initialization. The FAIL flag is cleared by a mass erase request with CCIF set unless FMU parameters were not loaded from IFR1 during initialization. The FAIL flag is not cleared during Power Down recovery.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - Error not detected 1b - Error detected

6.6.2.1.3 Flash Configuration Register (FCNFG)

Offset

Register	Offset
FCNFG	4h

Function

This register provides information on the current functional state of the flash module.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	ERSIEN1				ERSIEN0				0				DFDIE			
W																
Reset	u	u	u	u	u	u	u	u	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0				ERSR EQ				CCIE				0			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-28 ERSIEN1	Erase IFR Sector Enable - Block 1 (for dual block configs) This field controls the ability to erase the IFR sectors in block 1 using the ERSSCR command. These bits are loaded from sideband signals during initialization and at launch of ERSSCR command. Note: These bits have no effect on single block configurations. Note: The ERSALL command and MCU mass erase request do not adhere to these restrictions. X equals 0, 1, 2, or 3. Any and all bits in the field are independently configured. 0000b - Block 1 IFR Sector X is protected from erase by ERSSCR command 0001b - Block 1 IFR Sector X is not protected from erase by ERSSCR command
27-24	Erase IFR Sector Enable - Block 0

Table continues on the next page...

Table continued from the previous page...

Field	Function
ERSIEN0	This field controls the ability to erase the IFR sectors in block 0 using the ERSSCR command. These bits are loaded from sideband signals during initialization and at launch of ERSSCR command. Note: The ERSALL command and MCU mass erase request do not adhere to these restrictions. X equals 0, 1, 2, or 3. Any and all bits in the field are independently configured. 0000b - Block 0 IFR Sector X is protected from erase by ERSSCR command 0001b - Block 0 IFR Sector X is not protected from erase by ERSSCR command
23-17 —	Reserved
16 DFDIE	Double Bit Fault Detect Interrupt Enable The DFDIE bit controls interrupt generation when an uncorrectable ECC fault is detected during a valid flash read access from the platform flash controller. 0b - Double bit fault detect interrupt disabled 1b - Double bit fault detect interrupt enabled. An interrupt request is generated whenever the FSTAT[DFDIF] flag is set.
15-9 —	Reserved
8 ERSREQ	Mass Erase Request This bit indicates whether a sideband request has been received by the command controller to execute the Mass Erase operation. ERSREQ is not directly writable but sets when a Mass Erase request is received by the flash module while CCIF is set. ERSREQ is cleared by the command controller when the operation completes. 0b - No request or request complete 1b - Request to run the Mass Erase operation
7 CCIE	Command Complete Interrupt Enable The CCIE bit controls interrupt generation when a flash command completes. 0b - Command complete interrupt disabled 1b - Command complete interrupt enabled. An interrupt request is generated whenever the FSTAT[CCIF] flag is set.
6-0 —	Reserved

6.6.2.1.4 Flash Control Register (FCTRL)

Offset

Register	Offset
FCTRL	8h

Function

The flash control register controls activity associated with flash memory reads and command operations.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16		
R	0								ABTR EQ	0								FDFD
W									1									
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0		
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0		
R	0								LSACT IVE	0				RWSC				
W																		
Reset	0	0	0	0	0	0	0	1	0	0	0	0	u	u	u	u		

Fields

Field	Function
31-25 —	Reserved
24 ABTREQ	Abort Request With FSTAT[CMDP] set, setting the ABTREQ bit allows a user to abort a command write sequence or command operation. The ABTREQ bit can only be set by a user with the same domain ID as indicated by FSTAT[CMDDID] and the same or higher security/privilege protection level than is indicated by FSTAT[CMDPRT]. While ABTREQ is set, CCIF cannot be cleared to launch a command. If FSTAT[CCIF] is high when ABTREQ is set, the command write sequence will abort and ownership transferred to the user setting the ABTREQ bit. The FSTAT[CWSABT] flag will set and the CMDPRT field will be updated based on the write transaction that sets the ABTREQ bit. The ABTREQ bit will then be cleared automatically. If FSTAT[CCIF] is low when ABTREQ is set, the command operation will abort and ownership transferred to the user setting the ABTREQ bit. The FSTAT[CMDABT] flag will set and the CMDPRT field will be updated based on the write transaction that sets the ABTREQ bit. The ABTREQ bit will then be cleared automatically. While CWSABT or CMDABT are high, writes to ABTREQ will be ignored. 0b - No request to abort a command write sequence

Table continues on the next page...

Table continued from the previous page...

Field	Function
	1b - Request to abort a command write sequence
23-17 —	Reserved
16 FDFD	Force Double Bit Fault Detect The FDFD bit enables the user to emulate the setting of the FSTAT[DFDIF] flag to check the associated interrupt routine. The FDFD bit is cleared by writing a 0 to FDFD. 0b - FSTAT[DFDIF] sets only if a double bit fault is detected during a valid flash read access from the platform flash controller 1b - FSTAT[DFDIF] sets during any valid flash read access from the platform flash controller. An interrupt request is generated if the DFDIE bit is set.
15-9 —	Reserved
8 LSACTIVE	Low speed active mode This bit controls entry into the low speed active mode. Flash memory reads are supported in low speed active mode. All flash commands are supported in low speed active mode but the LSACTIVE bit is not writable while a flash command is executing (CCIF=0) or during a non-active power mode. If the FSTAT[CMDP] is set, the protection level of any write transaction to the LSACTIVE bit must match the CMDPRT bits and the domain ID must match the CMDDID bits. Note: If a device does not support low speed active mode, the LSACTIVE bit will reset to 0b and will not be writable. 0b - Full speed active mode requested 1b - Low speed active mode requested
7-4 —	Reserved
3-0 RWSC	Read Wait-State Control These bits control the number of wait-states added to account for the ratio of system clock period to flash access time during full speed and low speed active power modes. Ratios greater than one require non-zero settings for the RWSC field for proper flash accesses. The required settings are documented in the device data sheet. 0h - no additional wait-states are added (single cycle access) 1h - 1 additional wait-state is added 2h - 2 additional wait-states are added ... Fh - 15 additional wait-states are added These bits are loaded from IFR1 during initialization.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	NOTE The default FCTRL[RWSC] is set to a value appropriate for the chip's max operating frequency. Refer to the chip-specific section for the default value.

6.6.2.1.5 Flash Common Command Object Registers (FCCOB0 - FCCOB7)

Offset


For a = 0 to 7:

Register	Offset
FCCOBa	10h + (a × 4h)

Function

The FCCOB register group provides fields for command codes and parameters. The individual words within the set append a 0-7 hex identifier to the FCCOB register name: FCCOB0, FCCOB1, ..., FCCOB7.

Diagram

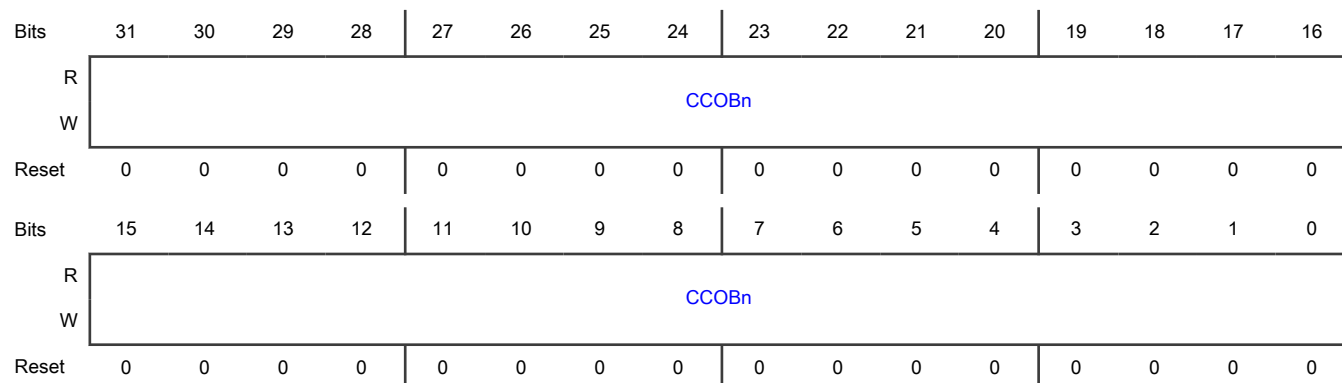

Fields

Field	Function
31-0	CCOBn
CCOBn	The FCCOB register group provides a command code and relevant parameters to the command controller. The individual registers that compose the FCCOB data set can be written in any order, but you must provide all needed values, which vary from command to command. First, set up all required FCCOB fields and then initiate the command execution by writing a 1 to the FSTAT[CCIF] bit. This clears the CCIF bit, which locks all FCCOB parameter fields and they cannot be changed by the user until the command completes (CCIF returns to 1). No command buffering or queueing is provided; the next command can be loaded only after the current command completes.

Field	Function																		
	Some commands return information to the FCCOB registers. Any values returned to FCCOB are available for reading after the FSTAT[CCIF] flag returns to 1. The following table shows a generic flash command format. The first FCCOB register, FCCOB0, always contains the command code. This 8-bit value defines the command to be executed. The command code is followed by the parameters required for this specific flash command, typically an address and/or data values. NOTE The command parameter table is written in terms of FCCOB Number (which is equivalent to the word number). This number is a reference to the FCCOB register name and is not the register address. <table> <tr> <th>FCCOB Number¹</th><th>Typical Command Parameter Contents [31:0]</th></tr> <tr> <td>0</td><td>FCMD [7:0] (flash command code, bits [31:8] are not writable)</td></tr> <tr> <td>1</td><td>FCMDOPT [7:0] (flash command options, bits [31:8] are not writable)</td></tr> <tr> <td>2</td><td>Flash address 1 (start)</td></tr> <tr> <td>3</td><td>Flash address 2 (end)</td></tr> <tr> <td>4</td><td>Data Word 0</td></tr> <tr> <td>5</td><td>Data Word 1</td></tr> <tr> <td>6</td><td>Data Word 2</td></tr> <tr> <td>7</td><td>Data Word 3</td></tr> </table> 1. Refers to FCCOB register name, not register address	FCCOB Number ¹	Typical Command Parameter Contents [31:0]	0	FCMD [7:0] (flash command code, bits [31:8] are not writable)	1	FCMDOPT [7:0] (flash command options, bits [31:8] are not writable)	2	Flash address 1 (start)	3	Flash address 2 (end)	4	Data Word 0	5	Data Word 1	6	Data Word 2	7	Data Word 3
FCCOB Number ¹	Typical Command Parameter Contents [31:0]																		
0	FCMD [7:0] (flash command code, bits [31:8] are not writable)																		
1	FCMDOPT [7:0] (flash command options, bits [31:8] are not writable)																		
2	Flash address 1 (start)																		
3	Flash address 2 (end)																		
4	Data Word 0																		
5	Data Word 1																		
6	Data Word 2																		
7	Data Word 3																		

6.7 Glossary

Block Checker — MCU IP that provides a mechanism to set access rights to the flash memory for read and write operations.

Command write sequence — A series of MCU writes to the Flash FCCOB register group and FSTAT[CCIF] that initiates and controls the execution of flash algorithms that are built into the flash module.

Endurance — The number of times that an aligned flash or IFR phrase can be erased and reprogrammed.

FCCOB (Flash Common Command Object Block) — A group of flash registers that are used to pass command, address, data, and any associated parameters to the command controller.

Flash block — A macro within the flash module which provides the nonvolatile memory storage with an aligned block address being the first address in the block.

Flash module — All flash blocks plus a flash management unit providing command control and an interface to MCU buses.

Flash page — 128 bytes of flash main memory with an aligned page having byte-address[6:0] = 00h; represents the largest portion of the flash memory that can be programmed in one operation.

Flash phrase — 16 bytes of flash main memory with an aligned phrase having byte-address[3:0] = 0000b; represents the smallest portion of the flash memory that can be programmed in one operation.

Flash sector — 8 Kbytes of flash main memory with an aligned sector having byte-address[12:0] = 0000h; represents the smallest portion of the flash memory that can be erased in one operation.

FLW — The Flash Logical Window module allows a specific logical address range to access a programmable physical address range in the flash memory with programmable FLW default settings stored in IFR space.

FMC — Flash Memory Controller module manages flash memory reads and writes.

IFR — Information flash region separate from the main flash memory array. Each flash block has 32 Kbytes of user IFR space. Sometimes referred to as IFR0.

IFR1 — Information flash region separate from the main memory array reserved for array trim, MCU trim, and test. Each flash array has 8 Kbytes of IFR1 space.

IFR page — 128 bytes of IFR or IFR1 space with an aligned IFR page having byte-address[6:0] = 00h; represents the largest portion of IFR space that can be programmed.

IFR phrase — 16 bytes of IFR or IFR1 space with an aligned IFR phrase having byte-address[3:0] = 0000b; represents the smallest portion of IFR space that can be programmed in one operation.

IFR sector — 8 Kbytes of IFR or IFR1 space with an aligned IFR sector having byte-address[12:0] = 0000h; represents the smallest portion IFR space that can be erased.

MISR — Multiple-input signature register used to generate a signature based on flash memory contents read.

MSF — Microcontroller Secure Flash.

NVM — Nonvolatile memory. The flash block is an NVM using NOR-type flash memory technology.

Program flash — Program flash memory provides nonvolatile storage for vectors and code store.

Retention — The length of time that data (erased or programmed) can be kept in the NVM without experiencing errors upon readout.

Security/Privilege protection levels — The Flash module supports 4 levels of security/privilege protection for flash commands:

1. Secure (Trusted) / Privileged
2. Secure (Trusted) / User
3. Non-secure (Non-Trusted) / Privileged
4. Non-secure (Non-Trusted) / User

Chapter 7

Flash Memory Controller (FMC)

7.1 Chip-specific FMC information

Table 55. Reference links to related information

Topic	Related module	Reference
Full description	FMC	FMC
System memory map		Memory map
Clocking		Clock distribution
Power Management		Power Management
Signal multiplexing	Port control	Signal multiplexing

See [NVM Control \(NVM_CTRL\)](#) for details on flash speculation and flash cache control.

7.1.1 Module instances

This device has one instance of the FMC module, FMC0.

7.2 Overview

The Flash Memory Controller (FMC) is a memory interface and acceleration unit providing:

- An interface between the device and the nonvolatile memory
- Buffers that can accelerate flash memory transfers
 - A flash-phrase-sized(128 bits) single-entry buffer holds the most recently accessed flash phrase.
 - An optional flash-phrase-sized(128 bits) speculation buffer can prefetch the next flash phrase.

The FMC manages the interface between the device and the flash memory. The FMC receives status information describing the configuration of the memory and uses this information to ensure a proper interface. The following table shows the supported read and write operations.

Flash memory type	Read	Write
Program, IFR0, IFR1 flash memory	8-bit, 16-bit, and 32-bit reads	16-byte and 128-byte writes

The FMC is controlled by a programmer's model external to the FMC module; see the chip-specific FMC information for details. The FMC's programming model provides a very configurable, high performance flexible memory controller, which can be optimized for the runtime characteristics of specific applications.

NOTE

Program the FMC's controls only while the flash controller is idle. Changing the configuration settings while a flash access is in progress can cause non-deterministic, unpredictable behavior.

7.2.1 Features

- Interface between the device and the flash memory:
 - The FMC's input bus supports 8-bit, 16-bit, and 32-bit read operations to flash memory.
 - The FMC's flash memory interface fetches a 128-bit flash phrase.

- For input read requests, the FMC fetches a flash phrase with the desired read data from flash memory.
- The flash memory interface can write aligned 16-byte flash write phrases or aligned 128-byte flash write pages to flash memory.
- The FMC has a 16-byte aligned write buffer. This buffer is used once for aligned 16-byte flash write phrases or eight times for aligned 128-byte flash write pages.
- The FMC's input bus supports 32-bit write operations for flash memory writes to fill the FMC's write buffer.
- For input write requests, the FMC must receive the 4-word write of an aligned phrase in order.
- For input read and write requests, the FMC supports Remap
 - Program flash can be swapped between the lower half and the upper half
 - IFR0 flash can not be swapped
 - IFR1 flash can not be swapped
- Acceleration of data transfer from flash memory to the device:
 - A flash-phrase-sized single-entry buffer that holds the current flash phrase fetched due to a FMC read request. Subsequent FMC read requests *that hit in the single-entry buffer* return data with no wait states.
 - A flash-phrase-sized prefetch speculation buffer with controls for prefetching on instructions and/or data reads. When prefetching is enabled, idle FMC-to-flash interface cycles are used to fetch the next sequential flash phrase and hold it in the prefetch buffer. Subsequent FMC read requests *that hit in the speculation buffer* return data with no wait states.
 - Input controls:
 - To disable data type speculation
 - To disable all speculation
 - To clear the single-entry buffer and speculation buffer
 - To disable the single-entry buffer and speculation buffer
 - To enable AHB bus stall on flash busy
 - To lock access to IFR1
 - To disable AHB bus error on flash multibit ECC error for data
 - To disable AHB bus error on flash multibit ECC error for instruction

To enable flash speculation, enable AHB bus error on flash multibit ECC error for data and instruction. See the chip-specific section for details about controls.

NOTE

Clear the speculation buffer before accessing recently modified flash addresses. To clear the speculation buffer, first disable then re-enable the speculation via other modules.

7.3 Functional description

The FMC is a flash interface and acceleration unit, with flexible buffers for user configuration.

- The FMC's input bus can operate faster than the flash memory.
- The FMC-to-flash interface has flow control to add wait states as needed (for input bus reads that need flash accesses).
- The FMC also contains various configurable buffers that hold recent flash accesses. If an input bus read hits a valid buffer, then that access will complete with no wait states.

7.3.1 Modes of operation

The FMC only operates when a bus master accesses the flash memory.

For any device power mode where the flash memory cannot be accessed, FMC is disabled automatically.

7.3.2 Default configuration

After system reset, the FMC is configured to provide a significant level of buffering for transfers from the flash memory. For all banks:

- The single-entry and speculation buffers are cleared by reset.
- Prefetch support by speculation buffer for data and instructions is enabled.

7.3.3 Configuration options

The default configuration provides a high degree of flash acceleration, but advanced users may want to customize the FMC buffer configurations to maximize throughput for their use cases. When reconfiguring the FMC for custom use cases, do not program the FMC's control registers while the flash memory is being accessed. Instead, change the control registers with a routine executing from RAM in Supervisor mode.

The FMC's buffering controls allow other modules to tune resources to suit specific application requirements. The buffer are each controlled individually. The controls enable caching and prefetching per access type (instruction fetch or data reference).

See the chip-specific section for details about the registers used to configure FMC.

As an application example: if both instruction fetches and data references are accessing flash memory, then control is available to send instruction fetches, data references, or both to the single-entry buffer. Likewise, speculation can be enabled or disabled for either type of access.

7.3.4 Wait states

Because the core, crossbar switch, and bus masters can be clocked at a higher frequency than the flash clock, flash memory accesses that do not hit in the speculation buffer usually require wait states.

FMC does not allow the configuration of wait states directly. Wait states can be controlled via FMU FCTRL[RWSC].

7.3.5 Speculative reads

The FMC has a speculation buffer that reads ahead to the next phrase in the flash memory if there is an idle cycle. Speculative prefetching is programmable for instruction and data accesses. Because many code accesses are sequential, using the speculative prefetch buffer improves performance in most cases.

See the chip-specific section for information about controlling speculative reads.

When speculative reads are enabled, the FMC immediately requests the next sequential phrase address after a read completes. By requesting the next phrase immediately, speculative reads can help to reduce or even eliminate wait states when accessing sequential code and/or data.

7.3.6 Remapping flash addresses

An address remap mechanism allows for the swapping (both ways) of a specified flash address range between the lower half and the upper half of flash memory. This remapping can facilitate software updates in the field without the need for address modifications in software. For example, to use the remap mechanism to update software in the lower portion of bank 0, follow these steps:

1. Load the updated software into the upper half of flash.
2. Enable remapping to automatically use the updated software.

In [REMAP](#), remapping is enabled when LIM[22:16] = LIMDP[30:24], and LIM[22:16] is nonzero. LIM[22:16] and LIMDP[30:24] define the *remap_address*[19:13] for the remapping, providing an address range granularity of 8 KB. For a remapped FMC access to address *access_address*, see [Table 56](#).

Table 56. Remapping *access_address*

When <i>access_address</i> originates in...	And is less than or equal to...	The access remaps to...	In...
flash lower half	<i>remap_address</i> [19:13]	flash upper half base + <i>access_address</i>	flash upper half
flash upper half	flash upper half base + <i>remap_address</i> [19:13]	<i>access_address</i> – flash upper half base	flash lower half

The address ranges that may be swapped depends on the total flash size available. For non-power-of-2 total flash sizes, the upper half of flash bank 0 cannot be swapped, as shown in Table 57.

Table 57. Remapping address ranges

For a flash size of...	This lower half flash range...	Remaps to this upper half flash range...	This lower half flash range cannot be remapped...
1 MB	0x00_0000 – 0x07_FFFF	0x08_0000 – 0x0F_FFFF	
512 KB	0x00_0000 – 0x03_FFFF	0x04_0000 – 0x07_FFFF	
256 KB	0x0_0000 – 0x1_FFFF	0x2_0000 – 0x3_FFFF	—
128 KB	0x0_0000 – 0x0_FFFF	0x1_0000 – 0x1_FFFF	—

When LIM = LIMDP = 0, FMC disables the remap function. When LIM = LIMDP = a nonzero value, the remapping address range is (LIM + 1) × 8 KB. For example:

- When LIM = LIMDP = 1, the range is ≤ 16 KB.
- When LIM = LIMDP = 2, the range is ≤ 24 KB.

7.3.7 Interrupts

This module has no interrupts.

7.3.8 Flash Cache Operation

The contents(data, tag, valid) of the flash cache can be operated via program registers(FCAR, FCTG and FCLN0-3). To read or write flash cache contents, see the following procedure.

To read a cache line content

1. Clear FCCR[LOCK] to make sure the cache program model is available.
2. Set FCAR[CACHES_WAY_NUM], FCAR[CACHES_SET_NUM], and set FCAR[TYPE] to 01b for the cache line that you want to read.
3. Read FCLN0~3 to get the content of that cache line. Read FCTG[ADDRESS] to get the tag which is associated with that specified set&way.
 - E.g. Set 0x40000030 to FCAR, then reading FCLN0~3, FCTG[ADDRESS] can get the contents in cache line way0, set3 and the associated tag value

To write a cache line content

1. Clear FCCR[LOCK] to make sure the cache program model is available.
2. Set FCCR[WAY_LOCK] to prevent reading flash from updating the specified ways.
 - E.g. Setting 0001b to FCCR[WAY_LOCK] will lock way0 of all the four sets, which means way0 won't be updated by LRU cache algorithm when masters read flash.
3. Set a desired tag value to FCTG[ADDRESS], and set FCTG[VALID] to 1b to valid the cache line that is about to be updated.

- 4. Set FCLN0~3 with desired data for the cache line that's about to be updated.
- 5. Set FCAR[CACHES_WAY_NUM], FCAR[CACHES_SET_NUM], and set FCAR[TYPE] to 10b for the cache line that you want to update.
 - E.g. Set 0x80000030 to FCAR to write cache line way0, set3 with tag value in FCTG[ADDRESS] and the contents in FCLN0~3.

NOTE

- Cache operation can modify the cache line's tag, but for the different way's cache lines associated with the same set, they must have the different tags, otherwise FMC cannot guarantee the correctness of flash cache behavior
- Cache line's tag corresponds to flash address, See the chip-specific section for information about the mapping between system address and flash address. Refer to memory-map for system address

7.4 External signals

The FMC has no external signals.

7.5 Initialization and application information

The FMC does not require user initialization. Flash acceleration features are enabled by default.

The FMC has no visibility into flash memory erase and program cycles because the Flash Memory module manages them directly. To prevent the possibility of returning stale data after an application executes flash memory commands, disable and/or clear FMC's single-entry buffer and speculation buffer. If you want to disable the speculation buffer and cache in certain specific cases, we recommend disabling them all.

See the chip-specific section for details about the registers used to disable and/or clear speculation buffer and single-entry buffer.

7.6 Register descriptions

It has a Flash Data Remap register.

NOTE

See the chip-specific information for FMC controls.

NOTE

Any access to an undefined memory area results in a bus error.

7.6.1 FMC register descriptions

7.6.1.1 FMC memory map

FMC0 base address: 4009_4000h

Offset	Register	Width (In bits)	Access	Reset value
20h	Data Remap (REMAP)	32	RW	0000_0000h
400h	Flash Cache Control Register (FCCR)	32	RW	0000_0000h
404h	Flash Cache Access Register (FCAR)	32	RW	0000_0000h

Table continues on the next page...

Table continued from the previous page...

Offset	Register	Width (In bits)	Access	Reset value
40Ch	Flash Cache Tag (FCTG)	32	RW	0000_0000h
420h	Flash Cache Line Num0 (FCLN0)	32	RW	0000_0000h
424h	Flash Cache Line Num1 (FCLN1)	32	RW	0000_0000h
428h	Flash Cache Line Num2 (FCLN2)	32	RW	0000_0000h
42Ch	Flash Cache Line Num3 (FCLN3)	32	RW	0000_0000h

7.6.1.2 Data Remap (REMAP)

Offset

Register	Offset
REMAP	20h


Function

Provides a data remapping mechanism.

To write to REMAP, the remap lock must be disabled (REMAPLK = 0). To control the remapping, follow these options:

- To write to LIMDP, write 0x *NNNN*A5A5 (where *NNNN* is data) to REMAP. In this case, bits 30 to 24 are written to LIMDP. All other fields of REMAP remain unchanged.
- To write to LIM, write 0x *NNNN*5A5A (where *NNNN* is data) to REMAP. In this case, bits 22 to 16 are written to LIM.
- Any other writes to REMAP are ignored.

Diagram

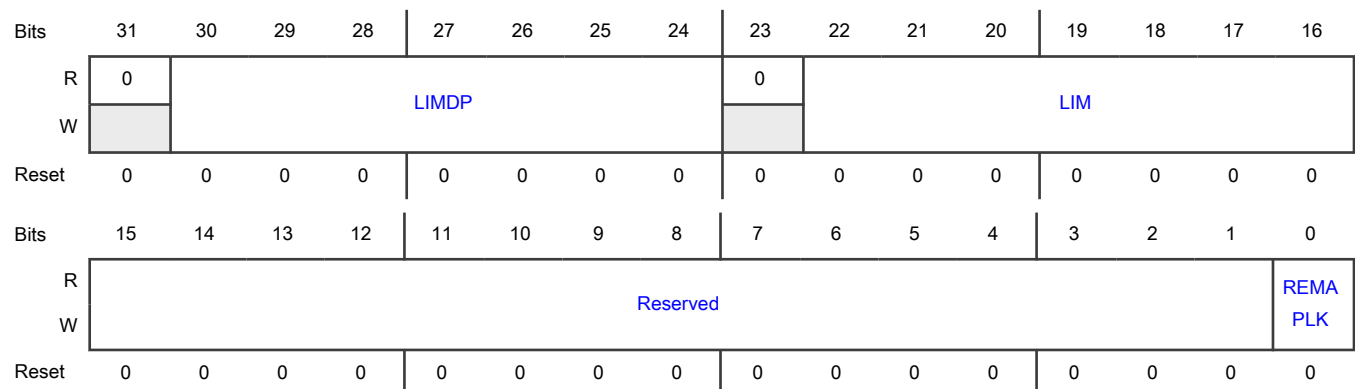

Fields


Field	Function
31 —	Always reads as 0. When writing, see the register description above.
30-24 LIMDP	LIMDP Remapping Address Defines remap_address[19:13] for remapping. Its value should be lower than the lower-half flash range.
23 —	Always reads as 0. When writing, see the register description above.
22-16 LIM	LIM Remapping Address Defines remap_address[19:13] for remapping. Its value should be lower than the lower-half flash range.
15-1 —	Always reads as 0. When writing, see the register description above.
0 REMAPLK	Remap Lock Enable To set the remap lock, write 0XXXXXC3C3 (X = don't care) to REMAP. All other fields of REMAP remain unchanged. Set by software (sticky); cleared only by a reset. 0b - Lock disabled: can write to REMAP 1b - Lock enabled: cannot write to REMAP

7.6.1.3 Flash Cache Control Register (FCCR)**Offset**

Register	Offset
FCCR	400h

Function

Controls that whether the cache is lock or unlock

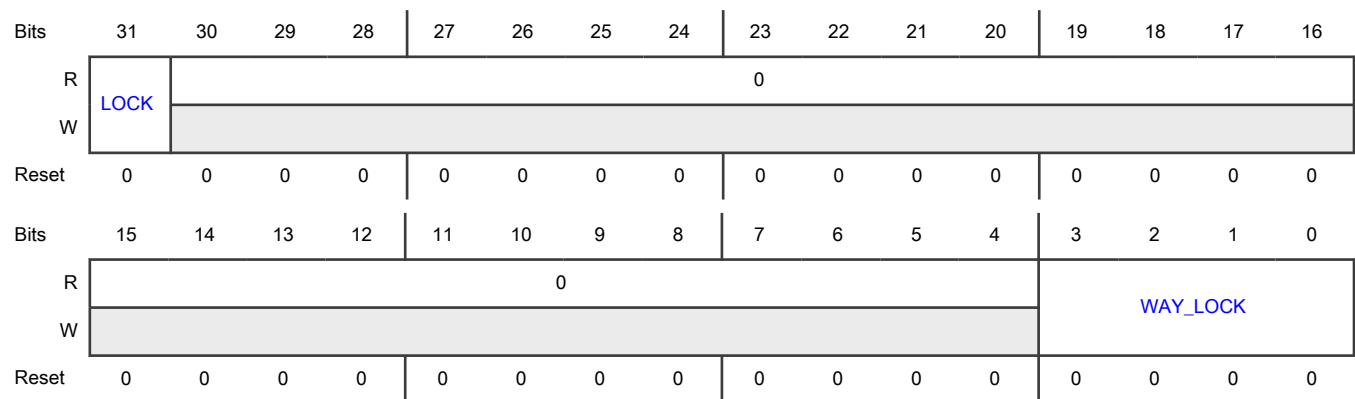Diagram**Fields**

Field	Function
31 LOCK	Lock Flash Cache Control 0b - Unlock flash cache. allows access and use of flash cache program model through program registers(FCAR, FCTG and FCLN0-3). 1b - Lock flash cache. blocks all flash cache accesses through program registers and Locks them till next reset - the flash cache will continue to operate(refresh) as configured before being locked, but no changes to the flash cache through program registers are possible until the next reset. The program registers perform the following actions - FCCR: Support read, Write invalid; FCAR/FCTG/FCLN0-3: Read returns zeros, Write invalid.
30-4 —	Always reads as 0. When writing, see the register description above.
3-0 WAY_LOCK	Cache Way Lock A logic "1" in a given bit locks that flash cache way. (When the cache way has been locked, all the cache lines in this cache way cannot be refreshed by reading flash, but cache lines in this cache way can be modified by cache operation through program registers) 0000b - No Ways are locked. 0001b - Way0 is locked. ... 0110b - Way2, Way1 are locked. ... 1111b - Way3, Way2, Way1 , Way0 are locked.

7.6.1.4 Flash Cache Access Register (FCAR)


Offset

Register	Offset
FCAR	404h

Function

Provides a program model to the flash cache, including reading and writing the data, tag and valid of a cache line with specified way number and set number.

Diagram

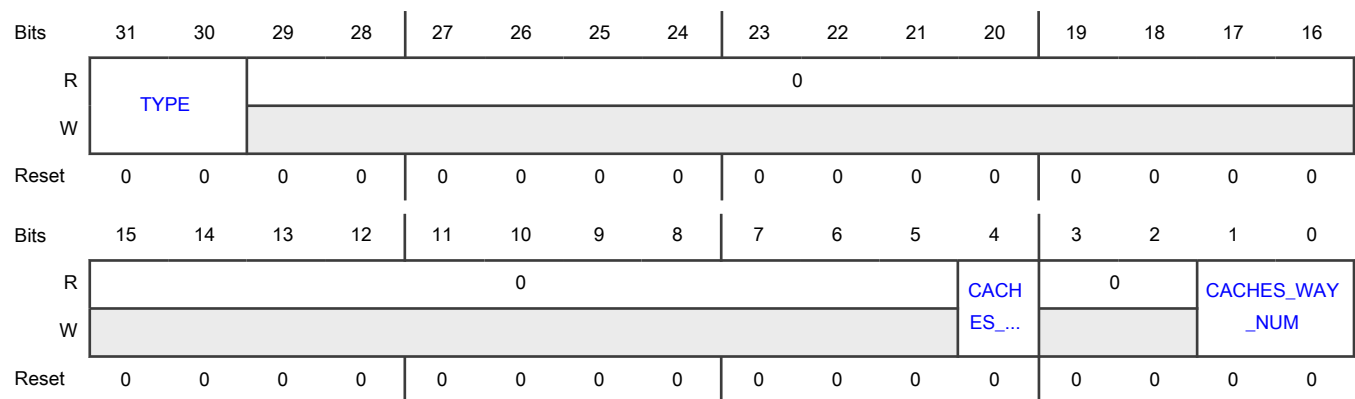

Fields

Field	Function
31-30 TYPE	Operation of cache type 00b - No access. 01b - Read flash cache - the associated tag, valid and the content of the cache line specified by CACHES_SET_NUM and CACHES_WAY_NUM of FCAR are copied to FCTG and FCLN0-3. 10b - Write flash cache - the associated tag, valid and the content of the flash cache line specified by CACHES_SET_NUM and CACHES_WAY_NUM of FCAR are modified based on FCTG and FCLN0-3. 11b - No access.
29-5 —	Reserved
4 CACHES_SET_NUM	Flash Cache Set Number
3-2	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
—	
1-0 CACHES_WAY_NUM	Flash Cache Way Number 00b - way0 01b - way1 10b - way2 11b - way3

7.6.1.5 Flash Cache Tag (FCTG)


Offset

Register	Offset
FCTG	40Ch

Function

Indicates Tag and Valid of Cache Line specified by FCAR

Diagram

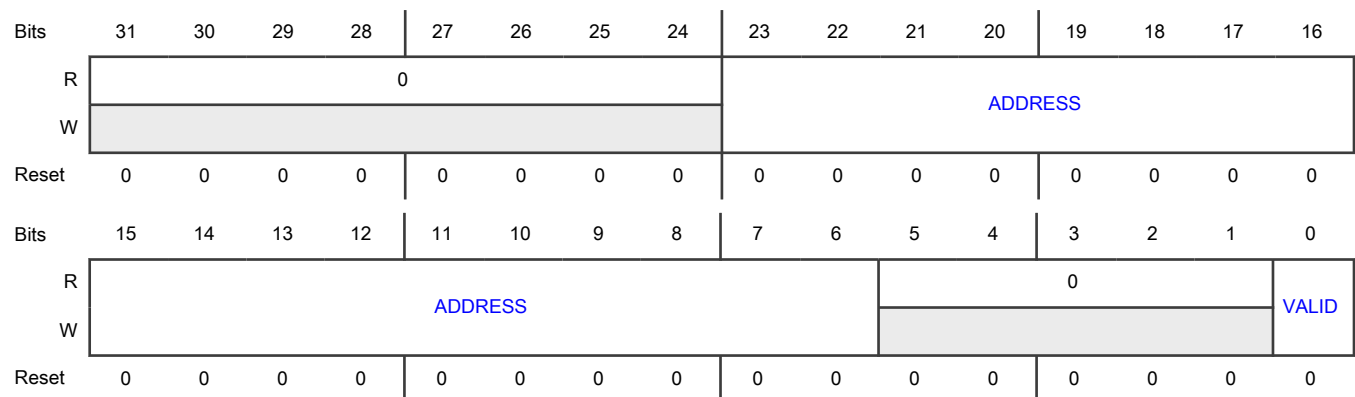

Fields

Field	Function
31-24 —	Reserved
23-6 ADDRESS	Cache line Tag, which corresponds to flash address[23:6]

Table continues on the next page...

Table continued from the previous page...

Field	Function
5-1 —	Reserved
0 VALID	Cache line Valid 0b - Tag is invalid. Cache line's cache hit cannot be triggered by flash read operation. 1b - Tag is valid. Cache line's cache hit can be triggered by flash read operation.

7.6.1.6 Flash Cache Line Num0 (FCLN0)


Offset

Register	Offset
FCLN0	420h

Function

Cache Line Data[31:0]

Diagram

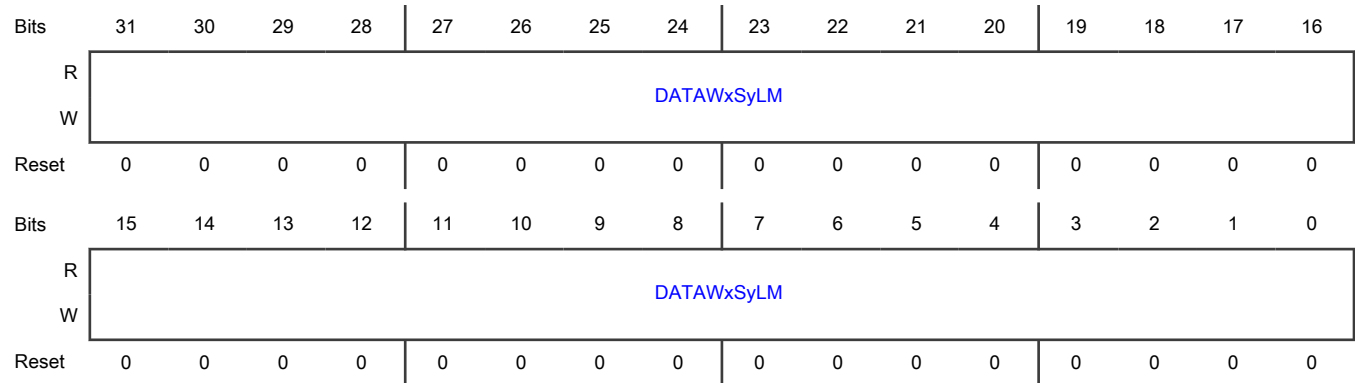

Fields

Field	Function
31-0 DATAWxSyLM	Cache Line Data[31:0] Represents the cache line data[31:0], whose way and set are specified by CACHES_SET_NUM and CACHES_WAY_NUM of FCAR.


7.6.1.7 Flash Cache Line Num1 (FCLN1)

Offset

Register	Offset
FCLN1	424h

Function
Cache Line Data[63:32]

Diagram

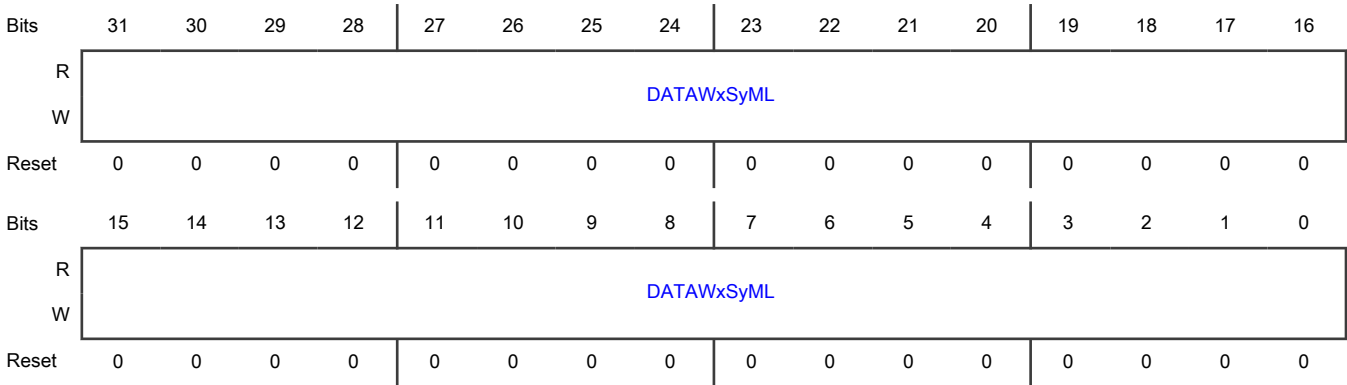

Fields

Field	Function
31-0	Cache Line Data[63:32]
DATAWxSyML	Represents the cache line data[63:32], whose way and set are specified by CACHES_SET_NUM and CACHES_WAY_NUM of FCAR.


7.6.1.8 Flash Cache Line Num2 (FCLN2)

Offset

Register	Offset
FCLN2	428h

Function
Cache Line Data[95:64]

Diagram

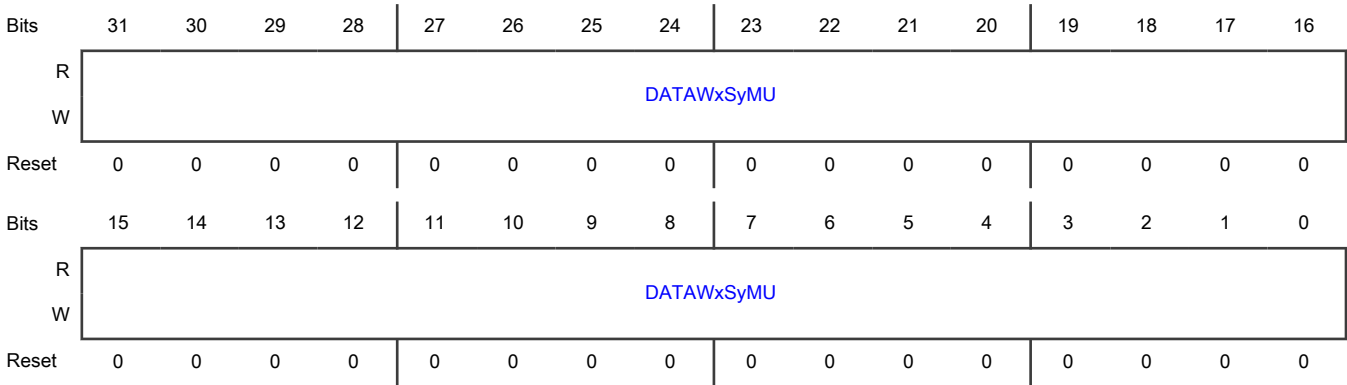

Fields

Field	Function
31-0	Cache Line Data[95:64]
DATAWxSyMU	Represents the cache line data[95:64], whose way and set are specified by CACHES_SET_NUM and CACHES_WAY_NUM of FCAR.

7.6.1.9 Flash Cache Line Num3 (FCLN3)


Offset

Register	Offset
FCLN3	42Ch

Function

Cache Line Data[127:96]

Diagram

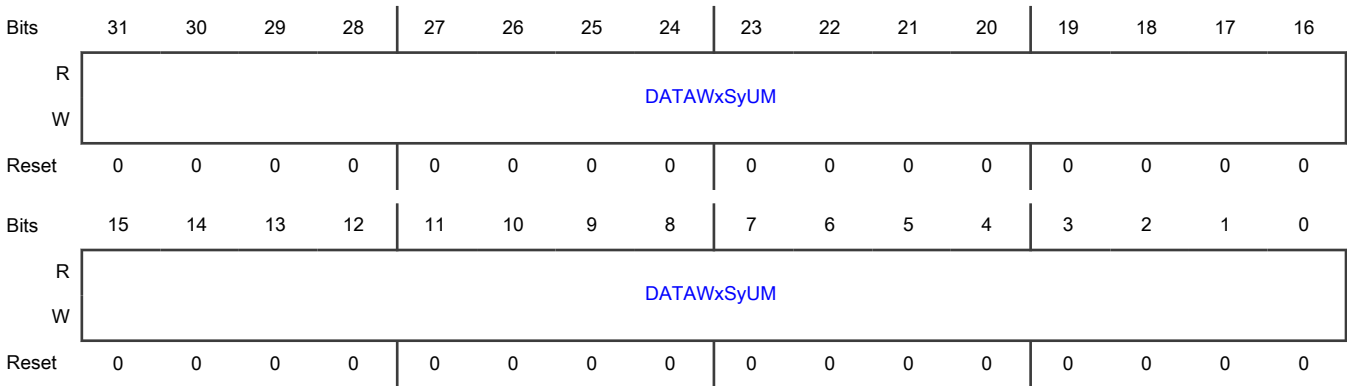

Fields

Field	Function
31-0 DATAWxSyUM	Cache Line Data[127:96] Represents the cache line data[127:96], whose way and set are specified by CACHES_SET_NUM and CACHES_WAY_NUM of FCAR.

Chapter 8

Error Injection Module (EIM)

8.1 Chip-specific EIM information

Table 58. Reference links to related information

Topic	Related module	Reference
Full description	EIM	Error Injection
System memory map		Memory map
Clocking		Clock distribution
Power Management		Power Management
Signal multiplexing	Port control	Signal multiplexing

8.1.1 Module instances

This device contains one instance of the Error Injection module, EIM0.

8.1.2 EIM channel mapping

This chip implements the EIM module for ECC RAM. It can inject error when read ECC RAM. It can be used for self-test. There is one channels in EIM to recode SRAM A0. See the functional block diagram of EIM in the following figure.

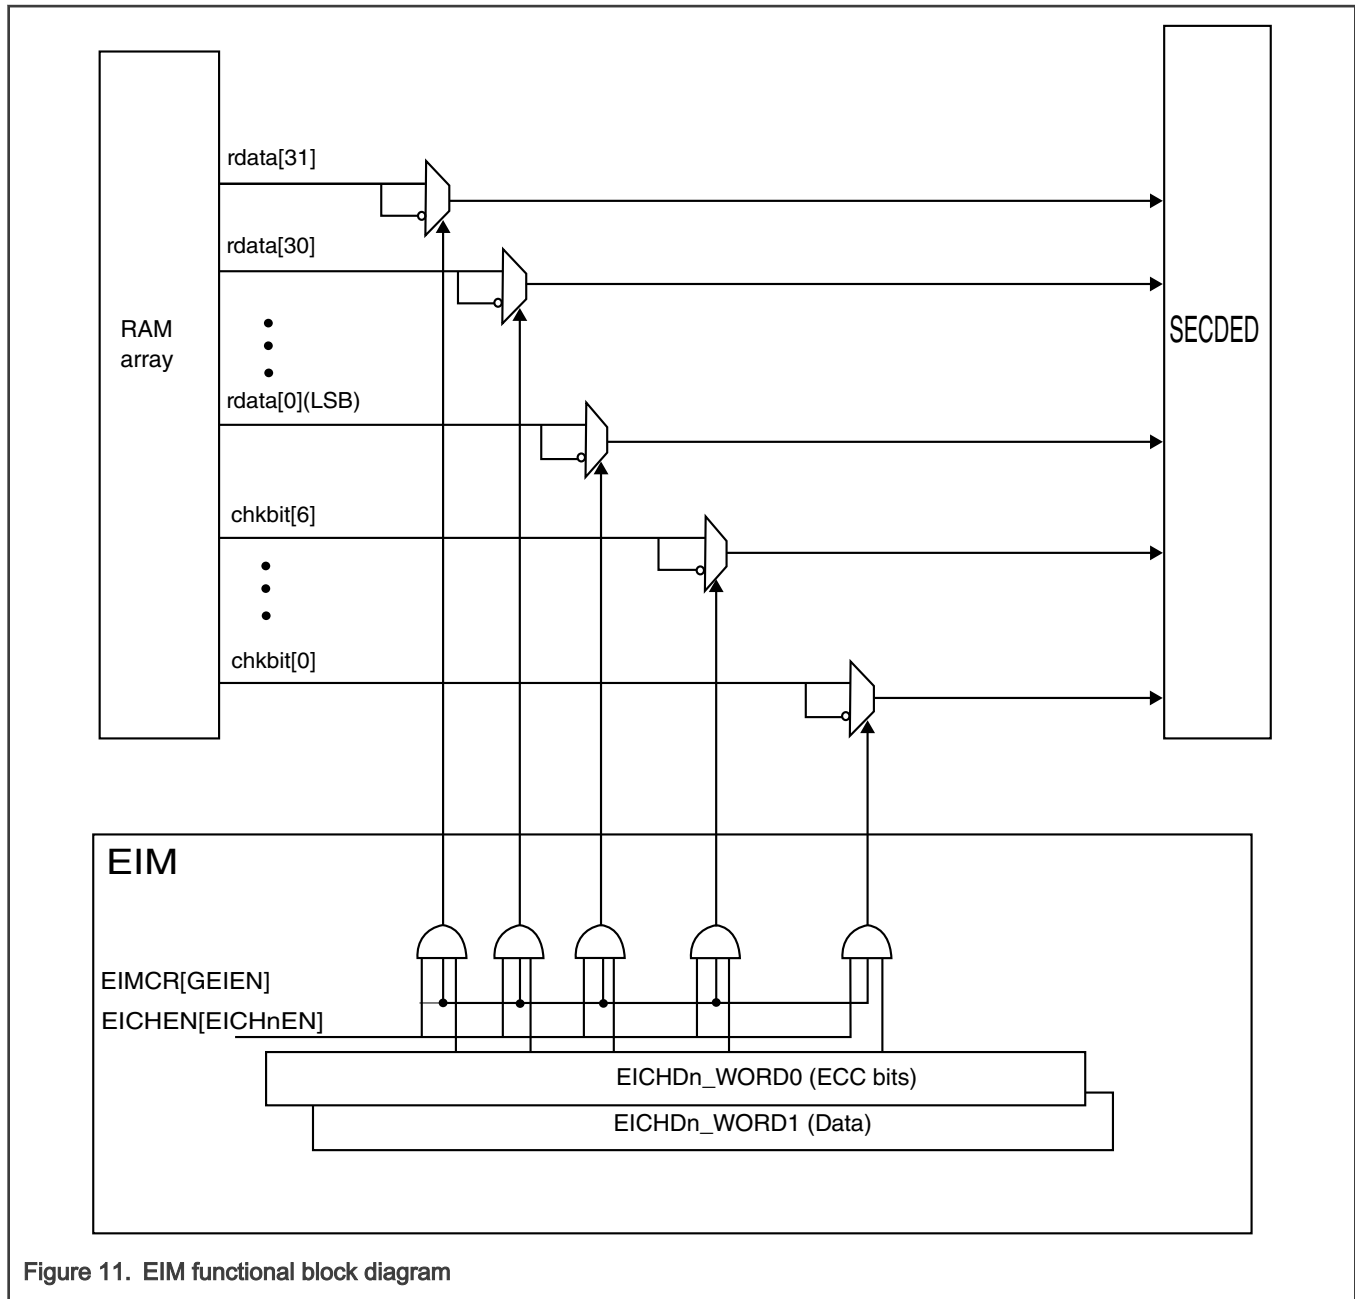


Figure 11. EIM functional block diagram

8.1.3 Access modes

If the privilege access is disabled by SYSCON.PROTLVL, the peripheral could be access in the user mode. If the privilege access is enabled, the peripheral could be access in the privilege mode.

8.2 Overview

The Error Injection Module (EIM) is mainly used for diagnostic purposes. It provides a method to test the diagnostics (memory ECC, interconnect parity) by error injection in the field. See the chip-specific EIM information to determine which functional safety features are supported by this method.

EIM enables you to inject artificial errors on error-checking mechanisms of a system, such as ECC for RAM read data and parity bits. For each such mechanism that EIM supports on the chip, EIM can inject single-bit and multi-bit inversions on data

in the applicable target bus. Injecting faults on memory accesses can be used to exercise the SEC-DED ECC function of the related system.

NOTE

Terminology in this chapter has been updated as follows:

Table 59. Updated terms

Updated term	Deprecated term
Controller	Master

8.2.1 Features

The EIM includes these features:

- Supports 1 error injection channel. See the chip-specific EIM information for channel assignment details.
- Protection against accidental enable and reconfiguration error injection function via two-stage enable mechanism

8.2.2 Block diagram

The following diagram shows an example of EIM implementation with a 64-bit read data bus and an 8-bit checkbit bus.

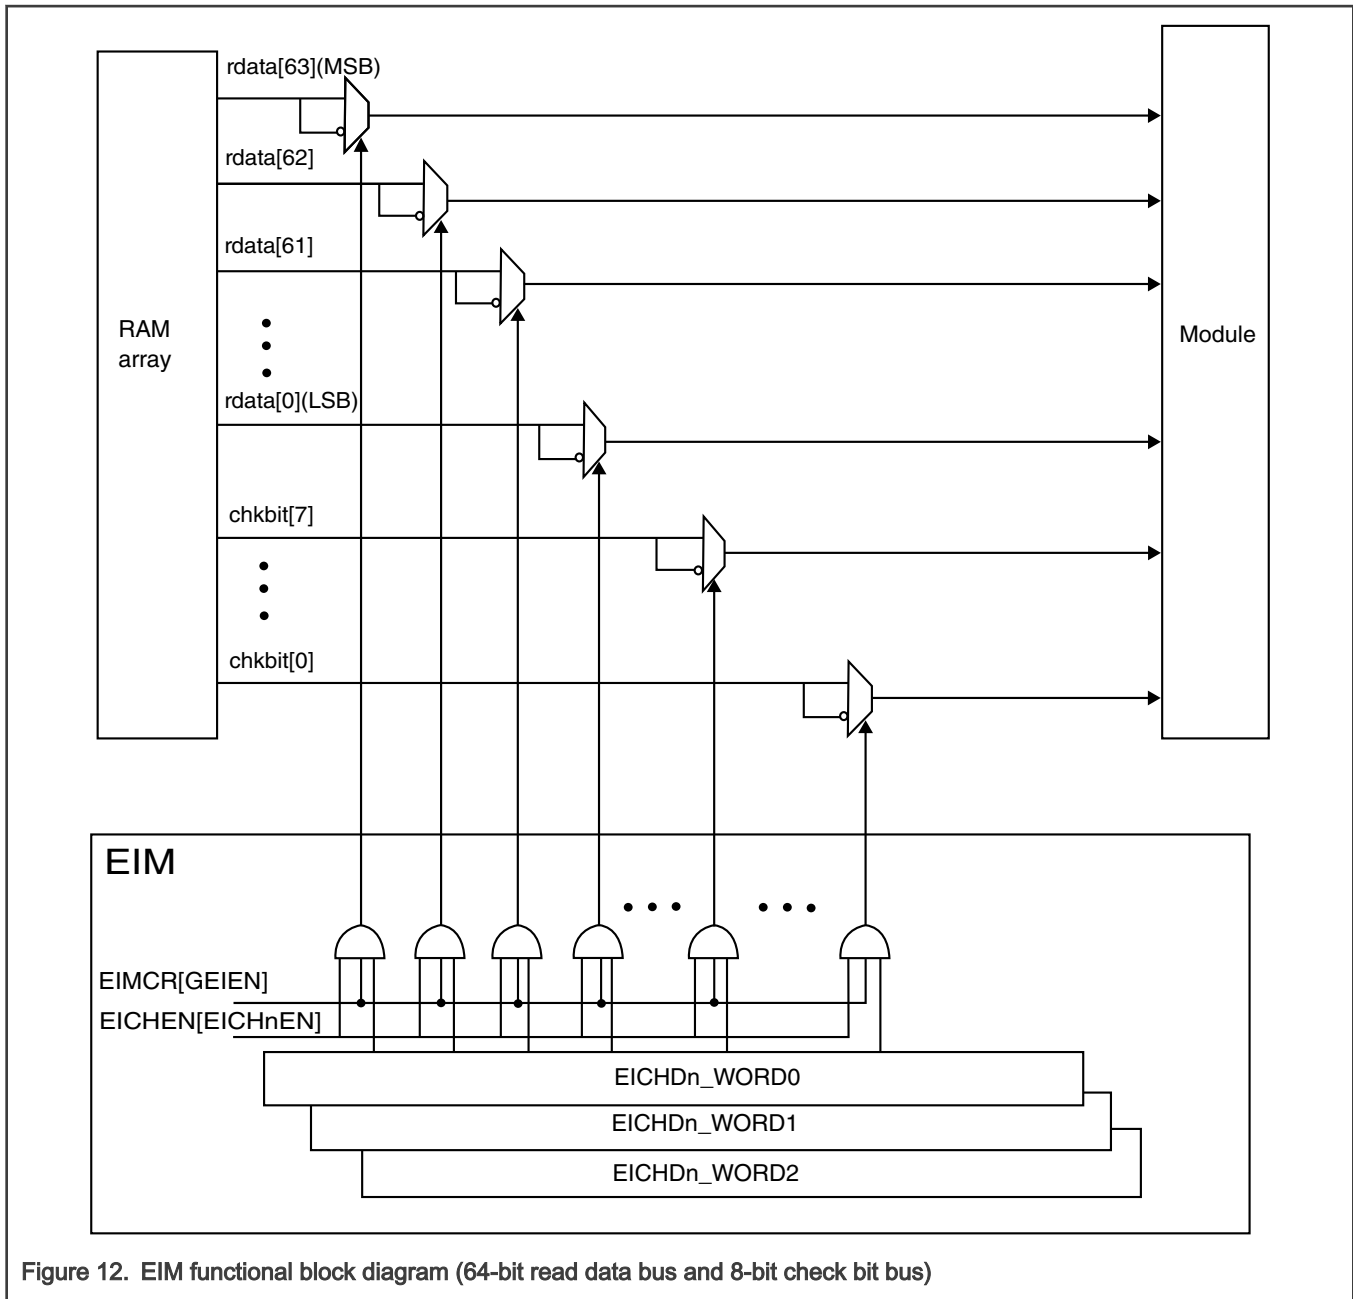


Figure 12. EIM functional block diagram (64-bit read data bus and 8-bit check bit bus)

Several memory elements are implemented within a device, which may not only be the large memory blocks (Flash and SRAM) but also smaller memories like caches, the TCD blocks, and the embedded peripheral memories. Some larger memories may actually be built from multiple memory elements, dependent on their size or function. Each of these memory elements implements its own control logic, the memory controller, that performs the accesses to the actual memory, the memory array. An EIM channel is associated with a memory controller and provides the capability to alter one or multiple signals in the read access path from the corresponding memory array(s). Only memory controllers controlling a safety related memory may be associated with an EIM channel.

8.3 Functional description

The EIM provides protection against accidental enabling and reconfiguration of the error injection function by enforcing a two-stage enablement mechanism. To properly enable the error injection mechanism for a channel:

- Write 1 to the EICHEN[EICHnEN] field, where n denotes the channel number.

- Write 1 to EIMCR[GEIEN].

NOTE

When the use case for a channel requires writing any EICHDN_WORD register, write the EICHDN_WORD register before executing the two-stage enablement mechanism. A successful write to any EICHDN_WORD register clears the corresponding EICHEN[EICHnEN] field.

The EIM supports 1 error injection channel. See the chip-specific EIM information for channel assignment details. Each channel:

- Can be assigned to a single memory array interface by intercepting the assigned memory read data bus and checkbit bus, and injects errors by inverting the value transmitted for selected bits on each bus line.
- Can be assigned to a redundant comparison unit by intercepting the signals being compared, and injecting errors by inverting the value transmitted for selected bits on each bus line.

On a memory read access, the applicable EICHDN_WORD registers define which bits of the read data and/or checkbit bus to invert.

Figure 12 depicts the interception and override of a 64-bit read data bus and an 8-bit checkbit data bus for an example memory array.

Error injection scenarios

The EIM supports these cases of error injection:

- To generate a single-bit error, invert only 1 bit of the CHKBIT_MASK or DATA_MASK in the EICHDN_WORD registers.
- To generate a multi-bit error, invert only 2 bits of the CHKBIT_MASK or DATA_MASK in the EICHDN_WORD registers.

NOTE

An attempt to invert more than 2 bits in one operation might result in undefined behavior.

To enable error injection:

1. Set the EICHDN_WORDm[CHKBIT_MASK] and EICHDN_WORDm[Ba_bDATA_MASK] fields for each channel that will be driving an injection.
2. Program the EICHEN register to enable the channels that will be injecting errors.
3. Set the EIMCR[GEIEN] field to globally allow all enabled channels to actively inject errors.

To disable error injection, either disable the EIMCR[GEIEN] field or disable the individual channel enable fields of the EICHEN register.

8.4 Initialization

This module does not require initialization.

8.6 EIM register descriptions

The EIM provides a programming model mapped to an on-platform peripheral slot.

Programming model access

All system bus controllers can access the programming model:

- Only in supervisor mode
- Using only 32-bit (word) accesses

Any of the following attempted references to the programming model generates an error termination:

- In user mode
- Using non-32-bit access sizes

- To undefined (reserved) addresses

Attempted updates to the programming model while the EIM is in the midst of an operation result in non-deterministic behavior.

Error injection channel descriptor: function and structure

Each error injection channel descriptor:

- Specifies a mask that defines which bits of the read data and/or checkbit bus from target RAM are inverted on a read access.
- Consists of a 128-bit (16-byte) structure, composed of four 32-bit words, in the EIM programming model. Unused words are not documented.
 - Word0 (EICHDR_WORD0), if present, defines the checkbit mask.
 - Word1-3 (EICHDR_WORD1-3), if present, define the data mask. Word2 and Word3 are present only when required by the total width of the channel's data mask. See Error injection channel descriptor: DATA_MASK details.

Error injection channel descriptor: DATA_MASK details

The following table shows the total width of DATA_MASK and the distribution of its bits across the WORD registers.

Table 60. Error injection channel descriptor: DATA_MASK details

Channel	DATA_MASK total width (bits)	Specific bits of DATA_MASK in		
		WORD1	WORD2	WORD3
0	32	31-0	—	—

8.6.1 EIM memory map

EIM0 base address: 4008_C000h

Offset	Register	Width (In bits)	Access	Reset value
0h	Error Injection Module Configuration Register (EIMCR)	32	RW	0000_0000h
4h	Error Injection Channel Enable register (EICHEN)	32	RW	0000_0000h
100h	Error Injection Channel Descriptor 0, Word0 (EICHDR_WORD0)	32	RW	0000_0000h
104h	Error Injection Channel Descriptor 0, Word1 (EICHDR_WORD1)	32	RW	0000_0000h

8.6.2 Error Injection Module Configuration Register (EIMCR)


Offset

Register	Offset
EIMCR	0h

Function

The EIM Configuration Register is used to globally enable/disable the error injection function.

Diagram

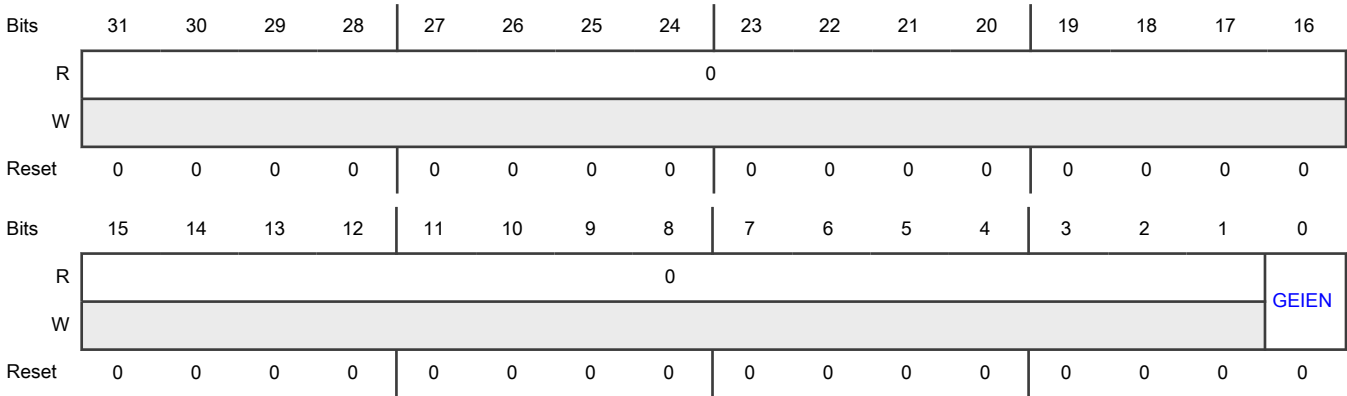

Fields

Field	Function
31-1 —	Reserved
0 GEIEN	Global Error Injection Enable This bit globally enables or disables the error injection function of the EIM. This field is initialized by hardware reset. 0b - Disabled 1b - Enabled

8.6.3 Error Injection Channel Enable register (EICHEN)

Offset

Register	Offset
EICHEN	4h

Function

Each field of the Error Injection Channel Enable register (EICHEN) is used to enable or disable the corresponding error injection channel.

NOTE

To enable an error injection channel, the Global Error Injection Enable (EIMCR[GEIEN]) field must also be asserted.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	EICH0 EN	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31 EICH0EN	Error Injection Channel 0 Enable This field enables the corresponding error injection channel. The Global Error Injection Enable (EIMCR[GEIEN]) field must also be asserted to enable error injection. After error injection is enabled, all subsequent read accesses incur one or more bit inversions as defined in the corresponding EICHDR_n_WORD registers. Error injection remains in effect until the error injection channel is manually disabled via software. Any write to the corresponding EICHDR_n_WORD registers clears the corresponding EICHEN[EICH_nEN] field, disabling the error injection channel. 0b - Error injection is disabled on Error Injection Channel 0 1b - Error injection is enabled on Error Injection Channel 0
30 —	Reserved
29 —	Reserved
28 —	Reserved
27 —	Reserved
26 —	Reserved
25 —	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
24 —	Reserved
23 —	Reserved
22 —	Reserved
21 —	Reserved
20 —	Reserved
19 —	Reserved
18 —	Reserved
17 —	Reserved
16 —	Reserved
15 —	Reserved
14 —	Reserved
13 —	Reserved
12 —	Reserved
11 —	Reserved
10	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
—	
9 —	Reserved
8 —	Reserved
7 —	Reserved
6 —	Reserved
5 —	Reserved
4 —	Reserved
3 —	Reserved
2 —	Reserved
1 —	Reserved
0 —	Reserved

8.6.4 Error Injection Channel Descriptor 0, Word0 (EICH0_WORD0)

Offset


Register	Offset
EICH0_WORD0	100h

Function

The first word of the Error Injection Channel Descriptor defines a left-justified mask field: CHKBIT_MASK. Each bit of CHKBIT_MASK specifies whether the corresponding bit of the checkbit bus from the target RAM should be inverted or

remain unmodified on read accesses. Successful write to this field clears the corresponding error injection channel valid bit, EICHEN[EICH#EN].

Diagram

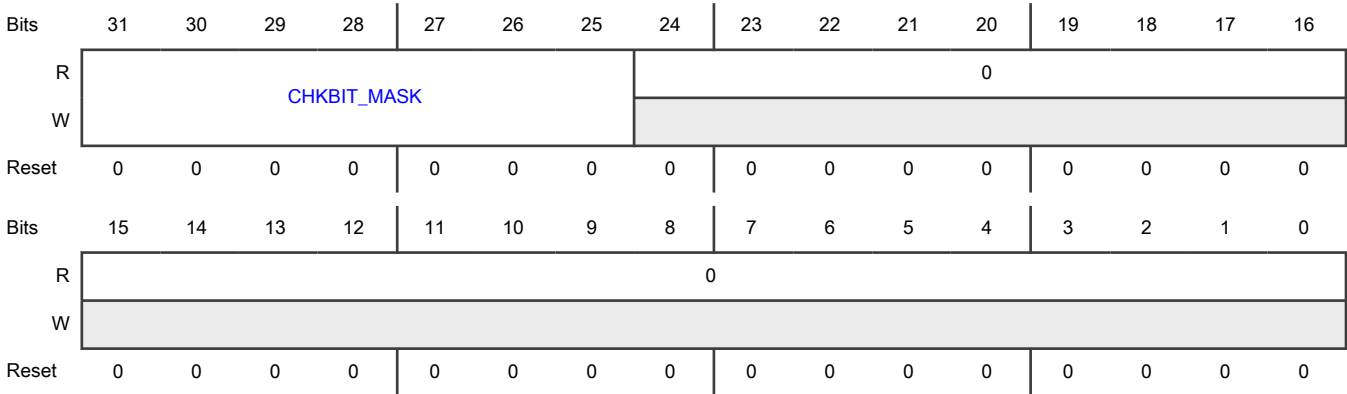

Fields

Field	Function
31-25 CHKBIT_MASK	Checkbit Mask This field defines a bit-mapped mask that specifies whether the corresponding bit of the checkbit bus from the target RAM should be inverted or remain unmodified. Writes to unimplemented bits are ignored. For any unique details about the mapping of CHKBIT_MASK's bits to a channel's target RAM, see the chip-specific EIM information. NOTE Because CHKBIT_MASK is left-justified, the highest bit in the bit range is always in the position of the most significant bit. For CHKBIT_MASK[6:0] (7 bits wide), CHKBIT_MASK[6] is in the position of the most significant bit. 0b - The corresponding bit of the checkbit bus remains unmodified. 1b - The corresponding bit of the checkbit bus is inverted.
24-0 —	Reserved

8.6.5 Error Injection Channel Descriptor 0, Word1 (EICHD0_WORD1)

Offset


Register	Offset
EICHD0_WORD1	104h

Function

The second word of the Error Injection Channel Descriptor defines a right-justified mask field. The bits in B0_3DATA_MASK correspond to EICHD0_WORD1 of the target bus. Each bit specifies whether the corresponding bit of the target bus should be

inverted or remain unmodified on read accesses. A successful write to this field clears the corresponding error injection channel valid field, EICHEN[EICHrEN].

Diagram

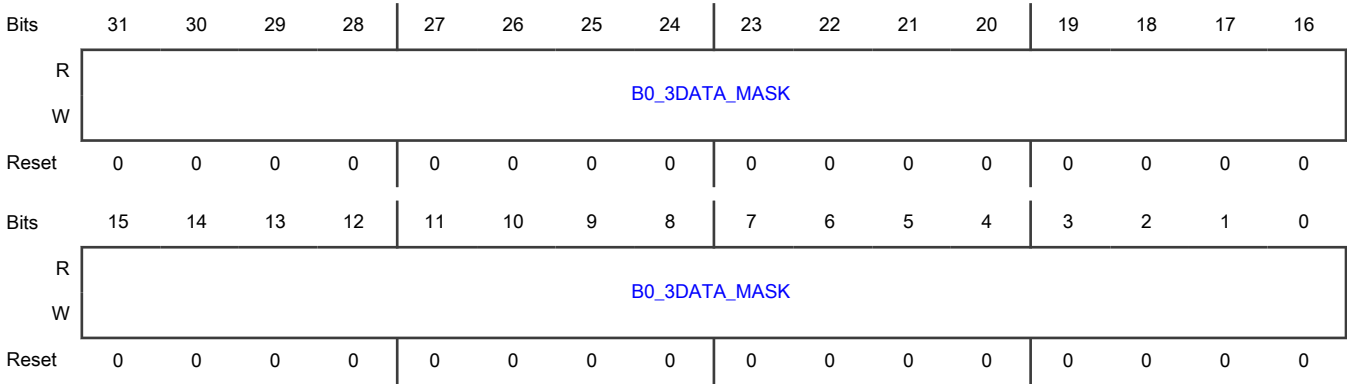

Fields

Field	Function
31-0 B0_3DATA_MASK	Data Mask Field This field defines a bit-mapped mask that specifies whether the corresponding bit of the read data bus from the target RAM should be inverted or remain unmodified. Writes to unimplemented bits are ignored. NOTE For the specific DATA_MASK bits to which B0_3DATA_MASK corresponds, See Error injection channel descriptor: DATA_MASK details. 0b - The corresponding bit of EICHD0_WORD1 on the read data bus remains unmodified. 1b - The corresponding bit of EICHD0_WORD1 on the read data bus is inverted.

Chapter 9

Error Recording Module (ERM)

9.1 Chip-specific Error Recording information

Table 61. Reference links to related information

Topic	Related module	Reference
Full description	ERM	Error Recording
System memory map		Memory map
Clocking		Clock distribution
Power Management		Power Management
Signal multiplexing	Port control	Signal multiplexing

9.1.1 Module instances

This device contains one instance of the Error Recording module, ERM0.

9.1.2 ERM channel mapping

ERM can record the address and ECC check bits (errsyndrome), when ECC error happens. ERM can be configured to generate interrupt when single bit or multi bit error happens.

Table 62. ERM channel mapping

Channel no.	Module	Captured status
0	RAM A0	Single-bit error, multiple bit error, error address syndrome
1	FMU0	ECC double-bit error detected on read data from array to the FMC

9.1.3 Access modes

If the privilege access is disabled by SYSCON.PROTLVL, the peripheral could be access in the user mode. If the privilege access is enabled, the peripheral could be access in the privilege mode.

9.2 Overview

The Error Reporting Module (ERM) provides information and optional interrupt notification on memory error events associated with ECC and parity. The ERM collects error events on memory accesses for memory arrays, such as flash memory, system RAM, or peripheral RAMs. ERM supports various channels for memory sources where each ERM channel is associated with a different memory module. See the chip-specific ERM information for details about supported memory sources and specific memory channel assignments. If the memory supports ECC, then ERM syndrome and error address information is captured along with the error event. ERM does not capture syndrome or error address for cache memories or memory with parity instead of ECC.

9.2.1 Features

The ERM includes these features:

- Optional interrupt notification on captured error events

- Capturing of address and syndrome information on single-bit correction and non-correctable ECC events
- Support for error event capturing for memory sources, with individual reporting fields and interrupt configuration per memory channel
- Recording the count value of the number of corrected error events

9.2.2 Block diagram

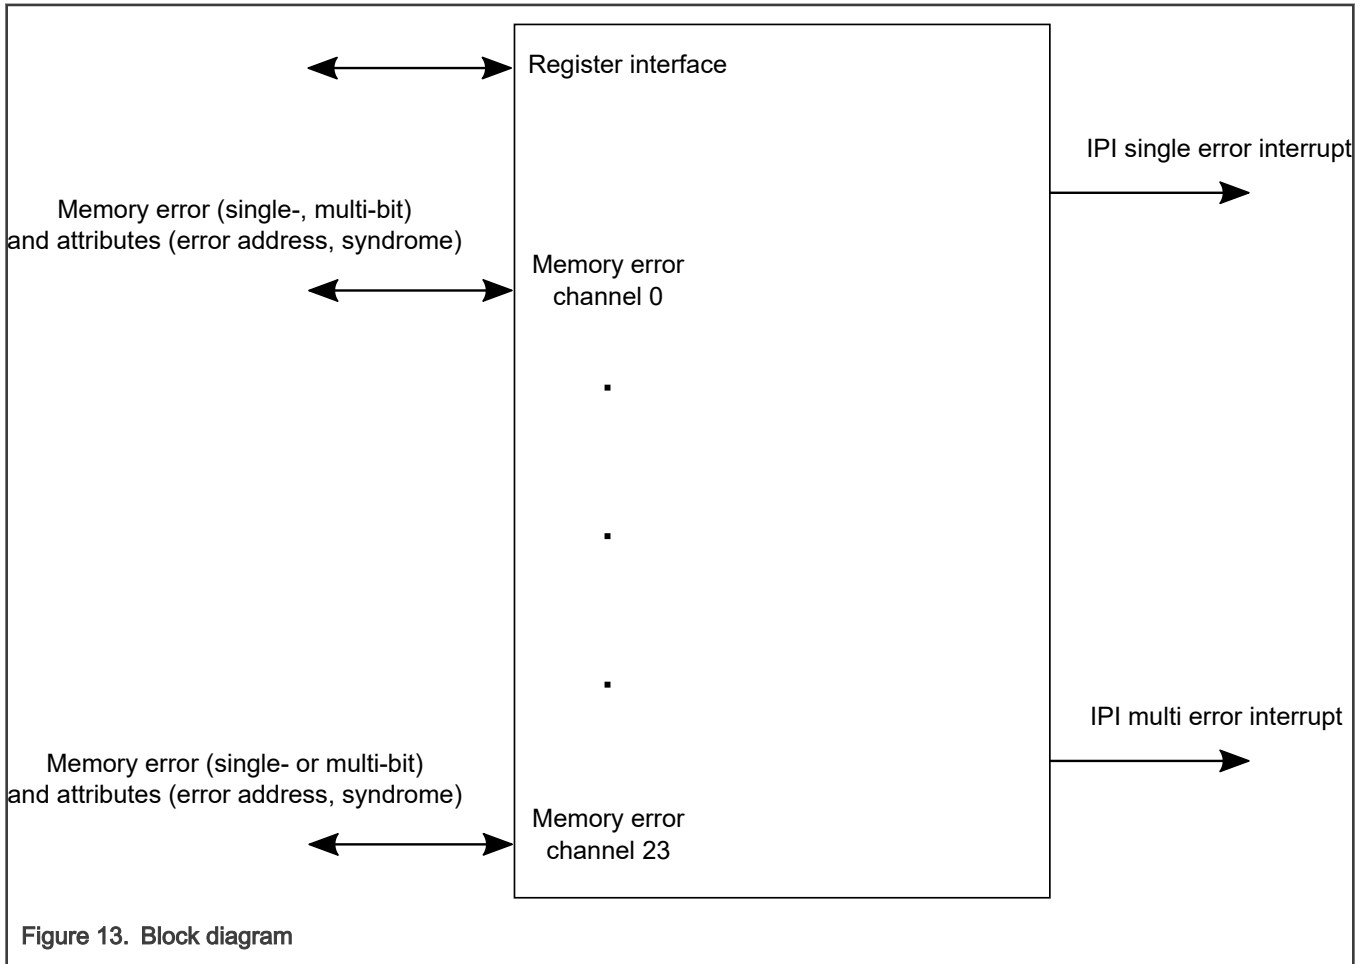


Figure 13. Block diagram

9.3 Functional description

9.3.1 Single-bit correction events

When a single-bit correction event on Memory n is detected, the ERM:

- Records the event by changing the value of the applicable Status Register bit $SR_x[SBC_n]$ to 1.
- Increments the correctable error count value (until the counter reaches its maximum value): $CORR\_ERR\_CNT_n[COUNT]$.
- Records the corresponding access address that initiated the event in the Memory n Error Address Register: EAR_n (if this register is present for the channel).
- Stores the corresponding ECC syndrome in the Memory n Error Syndrome Register: SYN_n (if this register is present for the channel). This register identifies the bit position of the corrected data on single-bit data inversion.

The ERM holds event information only for the last reported event.

To clear the record of an event, write 1 to $SR_x[SBC_n]$ to change its value to 0.

To reset the correctable error count value, write all zeros to CORR_ERR_CNT n [COUNT].

Optional interrupt notification for single-bit correction events

The ERM provides an option to generate an interrupt notification upon the report of a single-bit correction event. To enable single-bit correction interrupts for a channel:

1. To enable interrupt notification for single-bit correction events on Memory n , set CR x [ESCIE n] to 1.
2. Subsequently, a single-bit correction event on Memory n is detected, the ERM:
 - Records the event and address, and stores the ECC syndrome as usual.
 - Additionally sends an interrupt notification corresponding to the event.
3. To clear both the record of an event and the corresponding interrupt notification, write 1 to SR x [SBC n] to change its value to 0.

9.3.2 Non-correctable error events

When a non-correctable ECC error event on Memory n is detected, the ERM:

- Records the event by changing the value of the applicable Status Register bit: SR x [NCE n] to 1.
- Records the corresponding access address that initiated the event in the Memory n Error Address Register: EAR n (if this register is present for the channel).
- Stores the corresponding ECC syndrome in the Memory n Error Syndrome Register: SYN n (if this register is present for the channel).
 - In the event of a non-correctable address bit inversion, SYN n identifies the pertinent address bit position.
 - In the event of a non-correctable, multi-bit data inversion, the syndrome value does not provide any additional diagnostic information.

The ERM holds event information only for the last reported event.

To clear the record of an event, write 1 to SR x [NCE n] to change its value to 0.

Optional interrupt notification for non-correctable error events

The ERM provides an option to generate an interrupt notification upon the report of a non-correctable ECC event. To enable non-correctable error interrupts for a channel:

1. To enable interrupt notifications for non-correctable error events on Memory n , set CR x [ENCIE n] to 1.
2. Subsequently, when a non-correctable error event on Memory n is detected, the ERM:
 - Records the event and address and stores the ECC syndrome as usual.
 - Additionally sends an interrupt notification corresponding to the event.
3. To clear both the record of an event and the corresponding interrupt notification, write 1 to SR x [NCE n] to change its value to 0.

NOTE

Parity errors can be mapped to non-correctable errors where error attributes like SYNDROME, ADDRESS are not provided.

9.4 Initialization

For each ERM channel supporting memory with ECC, prepare the corresponding memory array before enabling ERM interrupts about errors for that memory.

1. Initialize the memory to a known value so that the correct corresponding ECC codeword is stored.

2. During the memory's initialization, if the ERM captures information about any ECC error event, clear the corresponding $SRx[SBCn]$ or $SRx[NCEn]$ field that stores the record of the event.
3. Program the applicable $CRx[ESCIEn]$ and $CRx[ENCIEn]$ fields to enable ERM interrupts as desired.

9.5 ERM register descriptions

You can access the programming model:

- Only in supervisor mode
- Using only 32-bit (word) accesses

Any of the following attempted references to the programming model generates an error termination:

- In user mode
- Using non-32-bit access sizes

Based on the design implementation, the following XFR error behavior is evident at the IPS interface.

- Within the ERM memory map, an XFR error is evident at reserved addresses from location 20h to FFh.
- No XFR error is evident at reserved addresses in memory spaces allocated to each channel. For example: For channel 0, for read/write accesses to reserved address 10Ch, the XFR error is 0.
- For accesses to locations beyond the addresses allocated for the final channel, the XFR error is 1.

NOTE

- See the chip-specific ERM information at the beginning of this chapter for details on Memory channel mapping.
- To access the channel registers, corresponding memory channel clock must be enabled.

9.5.1 ERM memory map

ERM0 base address: 4008_D000h

Offset	Register	Width (In bits)	Access	Reset value
0h	ERM Configuration Register 0 (CR0)	32	RW	0000_0000h
10h	ERM Status Register 0 (SR0)	32	RW	0000_0000h
100h	ERM Memory 0 Error Address Register (EAR0)	32	R	0000_0000h
104h	ERM Memory 0 Syndrome Register (SYN0)	32	R	0000_0000h
108h	ERM Memory 0 Correctable Error Count Register (CORR_ERR_CNT0)	32	RW	0000_0000h
118h	ERM Memory 1 Correctable Error Count Register (CORR_ERR_CNT1)	32	RW	0000_0000h

9.5.2 ERM Configuration Register 0 (CR0)


Offset

Register	Offset
CR0	0h

Function

This 32-bit control register configures the interrupt notification capability for available channels.

Diagram

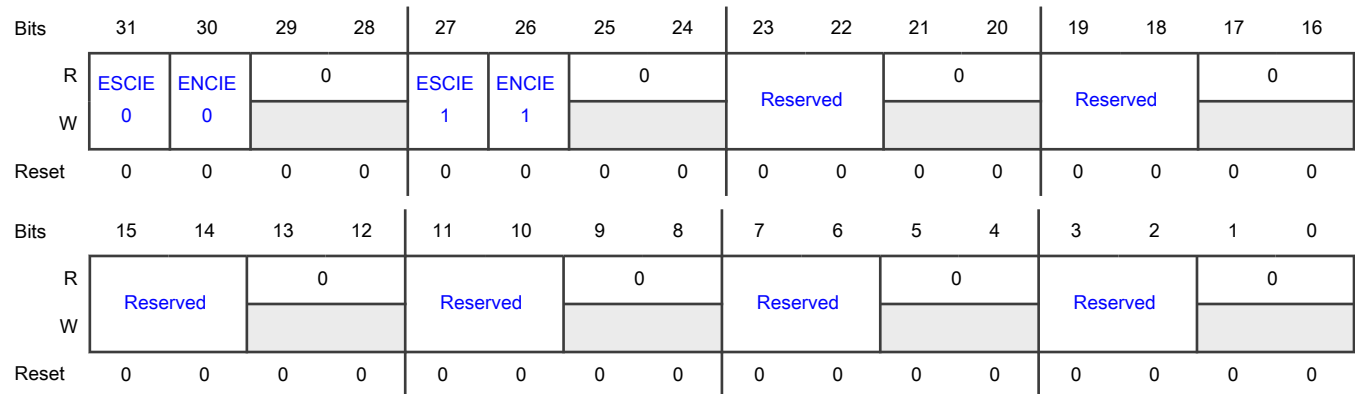

Fields

Field	Function
31 ESCIE0	ESCIE0 Enable Memory 0 Single Correction Interrupt Notification 0b - Interrupt notification of Memory 0 single-bit correction events is disabled. 1b - Interrupt notification of Memory 0 single-bit correction events is enabled.
30 ENCIE0	ENCIE0 Enable Memory 0 Non-Correctable Interrupt Notification 0b - Interrupt notification of Memory 0 non-correctable error events is disabled. 1b - Interrupt notification of Memory 0 non-correctable error events is enabled.
29-28 —	Reserved
27 ESCIE1	ESCIE1 Enable Memory 1 Single Correction Interrupt Notification 0b - Interrupt notification of Memory 1 single-bit correction events is disabled. 1b - Interrupt notification of Memory 1 single-bit correction events is enabled.
26 ENCIE1	ENCIE1 Enable Memory 1 Non-Correctable Interrupt Notification 0b - Interrupt notification of Memory 1 non-correctable error events is disabled. 1b - Interrupt notification of Memory 1 non-correctable error events is enabled.
25-24	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
—	
23-22 —	Reserved
21-20 —	Reserved
19-18 —	Reserved
17-16 —	Reserved
15-14 —	Reserved
13-12 —	Reserved
11-10 —	Reserved
9-8 —	Reserved
7-6 —	Reserved
5-4 —	Reserved
3-2 —	Reserved
1-0 —	Reserved

9.5.3 ERM Status Register 0 (SR0)

Offset

Register	Offset
SR0	10h

Function

This 32-bit status register reports error events for available channels.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	SBC0	NCE0	0		SBC1	NCE1	0		0				0			
W	W1C	W1C			W1C	W1C										
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0				0				0				0			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31 SBC0	SBC0 Memory 0 Single-Bit Correction Event Write 1 to clear this field. This write also clears the corresponding interrupt notification, if CR0[ESCIE0] is enabled. 0b - No single-bit correction event on Memory 0 detected. 1b - Single-bit correction event on Memory 0 detected.
30 NCE0	NCE0 Memory 0 Non-Correctable Error Event Write 1 to clear this field. This write also clears the corresponding interrupt notification, if CR0[ENCIE0] is enabled. 0b - No non-correctable error event on Memory 0 detected. 1b - Non-correctable error event on Memory 0 detected.
29-28 —	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
27 SBC1	SBC1 Memory 1 Single-Bit Correction Event Write 1 to clear this field. This write also clears the corresponding interrupt notification, if CR0[ESCIE1] is enabled. 0b - No single-bit correction event on Memory 1 detected. 1b - Single-bit correction event on Memory 1 detected.
26 NCE1	NCE1 Memory 1 Non-Correctable Error Event Write 1 to clear this field. This write also clears the corresponding interrupt notification, if CR0[ENCIE1] is enabled. 0b - No non-correctable error event on Memory 1 detected. 1b - Non-correctable error event on Memory 1 detected.
25-24 —	Reserved
23-20 —	Reserved
19-16 —	Reserved
15-12 —	Reserved
11-8 —	Reserved
7-4 —	Reserved
3-0 —	Reserved

9.5.4 ERM Memory 0 Error Address Register (EAR0)


Offset

Register	Offset
EAR0	100h

Function

Each ERM Memory *n* Error Address Register is a 32-bit register for capturing the address of the last ECC event in Memory *n*, where *n* denotes the memory channel. Any attempted write to EAR*n* is ignored. See the chip-specific ERM information for the ERM Memory *a* Error Address Register.

Diagram

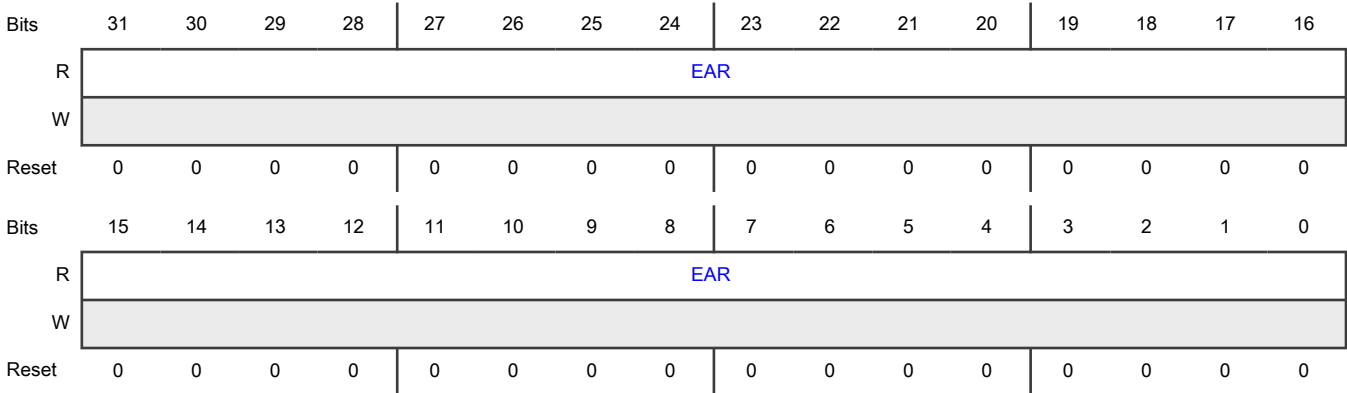

Fields

Field	Function
31-0	EAR
EAR	Memory <i>n</i> Error Address — This field contains the faulting system address of the last recorded ECC event on Memory <i>n</i> .

9.5.5 ERM Memory 0 Syndrome Register (SYN0)


Offset

Register	Offset
SYN0	104h

Function

The ERM Memory *n* Syndrome Register is a 32-bit register for capturing the calculated syndrome of the last ECC event on Memory *n*, where *n* denotes the memory channel. Any attempted write to SYN*n* is ignored. The syndrome value identifies the pertinent bit position on a correctable, single-bit data inversion or a non-correctable, single-bit address inversion. The syndrome value does not provide any additional diagnostic information on non-correctable, multi-bit inversions.

Diagram

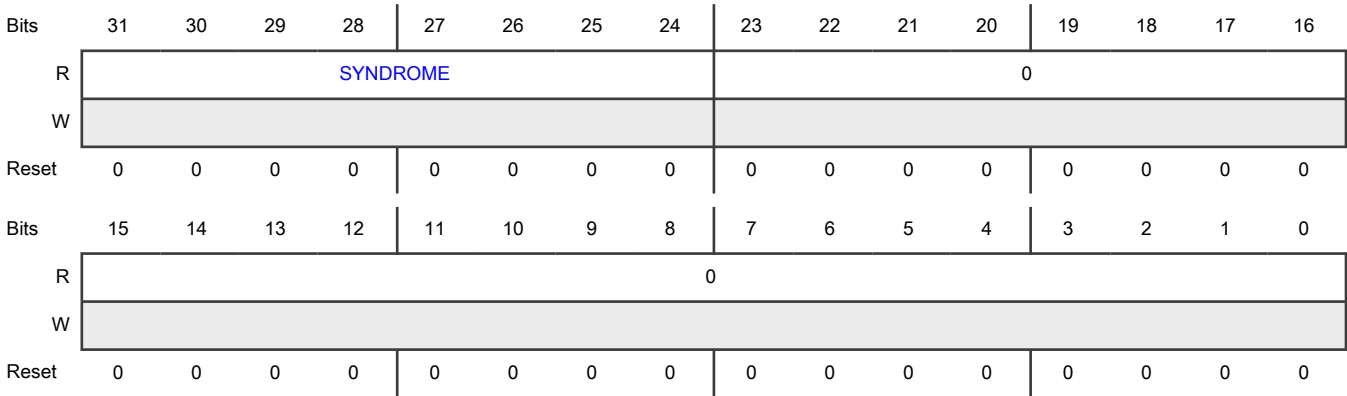

Fields

Field	Function
31-24 SYNDROME	SYNDROME Memory n Syndrome — This field contains the ECC syndrome associated with the last recorded ECC event on Memory n .
23-0 —	Reserved

9.5.6 ERM Memory a Correctable Error Count Register (CORR_ERR_CNT0 - CORR_ERR_CNT1)

Offset

Register	Offset
CORR_ERR_CNT0	108h
CORR_ERR_CNT1	118h


Function

Each 32-bit ERM Memory n Correctable Error Count Register records the count value of the number of correctable ECC error events for Memory n , where n denotes the memory channel.

NOTE

Non-correctable errors are considered a serious fault, so the ERM does not provide any mechanism to count non-correctable errors. Only correctable errors are counted.

Diagram

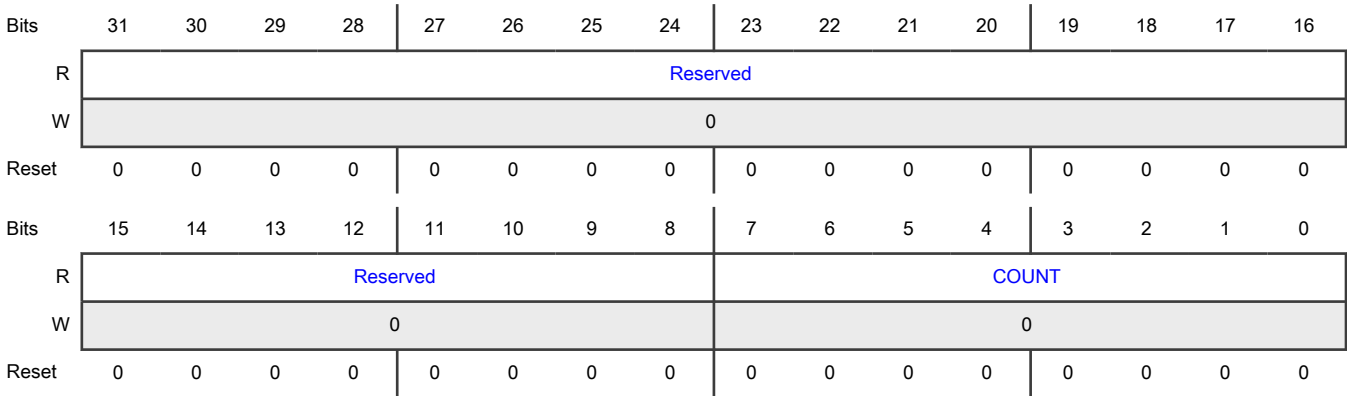

Fields

Field	Function
31-8 —	Reserved
7-0 COUNT	Memory n Correctable Error Count For each correctable error event, the ERM increments this field's error count value until the counter reaches its maximum value FFh. COUNT value will stop when it reaches maximum value FFh and will not wrap even if additional errors occur. Read this field to determine the correctable error count value so far. Write all zeros to this field to reset the counter. Writing a non-zero value has no effect.

Chapter 10

Signal Multiplexing

10.1 Introduction

Pins have several functions available via signal multiplexing to optimize functionality in small packages. This chapter illustrates which device's signals are multiplexed on which external pin.

See the attached pinout spreadsheet to know how the pins available on this device are configured. The attached spreadsheet also provides the available device packages and pinout diagrams.

10.1.1 Signal multiplexing constraints

- A given module signal must be assigned to a maximum of one package pin. Do not program the same function to more than one pin.
- To ensure the best signal timing for a given peripheral's interface, choose the pins in closest proximity to each other.

10.1.2 Pinmux view

Table 63. Pinmux

Pin Name	MCX A345A346 LQFP144	MCX A345A346 WFBGA169	MCX A345A346 LQFP100	MCX A345A346 LQFP64	Pinmux Assignment	Pad Settings	Alternate Functions
P1_8	1	B2	1	2	ALT0 - P1_8 ALT1 - FREQME_CLK_IN0 ALT2 - LPUART1_RXD ALT3 - LPI2C2_SDA ALT4 - CT_INP8 ALT5 - CT0_MAT2 ALT7 - SmartDMA_PIO4	IO Supply - VDD Pad type - HD Default - DIS	ISP - I2C_SDA VDD SYS - WUU0_IN10
P1_9	2	B1	2	3	ALT0 - P1_9 ALT1 - FREQME_CLK_IN1 ALT2 - LPUART1_TXD ALT3 - LPI2C2_SCL ALT4 - CT_INP9 ALT5 - CT0_MAT3 ALT7 - SmartDMA_PIO5	IO Supply - VDD Pad type - HD Default - DIS	ISP - I2C_SCL
P1_10	3	C2	3	4	ALT0 - P1_10 ALT2 - LPUART1_RTS_B ALT3 - LPI2C2_SDAS ALT4 - CT2_MAT0 ALT7 - SmartDMA_PIO6	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC1_A8

Table continues on the next page...

Table 63. Pinmux (continued)

Pin Name	MCX A345A346 LQFP144	MCX A345A346 WFBGA169	MCX A345A346 LQFP100	MCX A345A346 LQFP64	Pinmux Assignment	Pad Settings	Alternate Functions
					ALT8 - LPUART5_TXD ALT11 - CAN0_TXD		
P1_11	4	C1	4	5	ALT0 - P1_11 ALT1 - TRIG_OUT2 ALT2 - LPUART1_CTS_B ALT3 - LPI2C2_SCLS ALT4 - CT2_MAT1 ALT7 - SmartDMA_PIO7 ALT8 - LPUART5_RXD ALT11 - CAN0_RXD	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC1_A9 VDD SYS - WUU0_IN11
P1_12	5	D4	5	6	ALT0 - P1_12 ALT2 - LPI2C1_SDA ALT3 - LPUART2_RXD ALT4 - CT2_MAT2 ALT7 - SmartDMA_PIO8 ALT8 - LPUART5_CTS_B	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC1_A10 VDD SYS - WUU0_IN12
P1_13	6	D1	6	7	ALT0 - P1_13 ALT1 - TRIG_IN3 ALT2 - LPI2C1_SCL ALT3 - LPUART2_TXD ALT4 - CT2_MAT3 ALT7 - SmartDMA_PIO9 ALT8 - LPUART5_RTS_B	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC1_A11
P1_14	7	E2	7	--	ALT0 - P1_14 ALT2 - LPI2C1_SCLS ALT3 - LPUART2_RTS_B ALT5 - CT3_MAT0 ALT7 - SmartDMA_PIO10	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC1_A12
P1_15	8	E1	8	--	ALT0 - P1_15 ALT2 - LPI2C1_SDAS ALT3 - LPUART2_CTS_B ALT5 - CT3_MAT1 ALT7 - SmartDMA_PIO11	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC1_A13 VDD SYS - WUU0_IN13
P1_16	9	D2	--	--	ALT0 - P1_16	IO Supply - VDD	ANALOG - ADC1_A14

Table continues on the next page...

Table 63. Pinmux (continued)

Pin Name	MCX A345A346 LQFP144	MCX A345A346 WFBGA169	MCX A345A346 LQFP100	MCX A345A346 LQFP64	Pinmux Assignment	Pad Settings	Alternate Functions
					ALT4 - CT_INP12 ALT7 - SmartDMA_PIO12 ALT8 - LPUART5_RXD	Pad type - SLOW Default - DIS	VDD SYS - WUU0_IN14
P1_17	10	D3	--	--	ALT0 - P1_17 ALT4 - CT_INP13 ALT7 - SmartDMA_PIO13 ALT8 - LPUART5_TXD	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC1_A15
P1_18	11	E4	--	--	ALT0 - P1_18 ALT1 - FREQME_CLK_IN0 ALT4 - CT3_MAT0 ALT7 - SmartDMA_PIO14 ALT8 - LPUART5_RTS_B ALT11 - CAN0_TXD	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC1_A16
P1_19	12	E3	--	--	ALT0 - P1_19 ALT1 - FREQME_CLK_IN1 ALT4 - CT3_MAT1 ALT7 - SmartDMA_PIO15 ALT8 - LPUART5_CTS_B ALT11 - CAN0_RXD	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC1_A17 VDD SYS - WUU0_IN15
P1_29	13	F2	9	8	ALT0 - P1_29 ALT1 - RESET_B ALT2 - SPC_LPREQ	IO Supply - VDD Pad type - RST Default - ALT1	VDD SYS - RESET_B
P1_30	14	F1	10	9	ALT0 - P1_30 ALT1 - TRIG_OUT3 ALT3 - LPI2C0_SDA ALT4 - CT_INP16	IO Supply - VDD Pad type - HD Default - DIS	ANALOG - XTAL48M
P1_31	15	G1	11	10	ALT0 - P1_31 ALT1 - TRIG_IN4 ALT3 - LPI2C0_SCL ALT4 - CT_INP17	IO Supply - VDD Pad type - HD Default - DIS	ANALOG - EXTAL48M

Table continues on the next page...

Table 63. Pinmux (continued)

Pin Name	MCX A345A346 LQFP144	MCX A345A346 WFBGA169	MCX A345A346 LQFP100	MCX A345A346 LQFP64	Pinmux Assignment	Pad Settings	Alternate Functions
VSS	16	C3	12	11		IO Supply - VDD	
VREFL	17	H5	12	11		IO Supply - VDD	
VREFH	18	G5	13	12		IO Supply - VDD	
VDD_ANA	19	G6	14	12		IO Supply - VDD	
VDD	20	E5	15	13		IO Supply - VDD	
P4_0	21	H1	--	--	ALT0 - P4_0 ALT1 - TRIG_IN5 ALT5 - PWM0_A3 ALT7 - SmartDMA_PIO20	IO Supply - VDD Pad type - MED Default - DIS	ANALOG - ADC2_A16
P4_1	22	H2	--	--	ALT0 - P4_1 ALT5 - PWM0_B3 ALT7 - SmartDMA_PIO21	IO Supply - VDD Pad type - MED Default - DIS	ANALOG - ADC2_A17
P4_2	23	J1	16	--	ALT0 - P4_2 ALT1 - CLKOUT ALT2 - LPI2C2_SDAS ALT3 - LPUART3_RXD ALT4 - CT4_MAT0 ALT5 - PWM0_A2 ALT7 - SmartDMA_PIO22	IO Supply - VDD Pad type - MED Default - DIS	ANALOG - ADC2_A18 VDD SYS - WUU0_IN16
P4_3	24	J2	17	--	ALT0 - P4_3 ALT2 - LPI2C2_SCL ALT3 - LPUART4_TXD ALT4 - CT4_MAT1 ALT5 - PWM0_B2 ALT7 - SmartDMA_PIO23	IO Supply - VDD Pad type - MED Default - DIS	ANALOG - ADC2_A19
P4_4	25	K1	18	--	ALT0 - P4_4 ALT2 - LPI2C2_SDA ALT3 - LPUART4_RXD ALT4 - CT4_MAT2 ALT5 - PWM0_A1 ALT7 - SmartDMA_PIO24	IO Supply - VDD Pad type - MED Default - DIS	ANALOG - ADC2_A20 VDD SYS - WUU0_IN17

Table continues on the next page...

Table 63. Pinmux (continued)

Pin Name	MCX A345A346 LQFP144	MCX A345A346 WFBGA169	MCX A345A346 LQFP100	MCX A345A346 LQFP64	Pinmux Assignment	Pad Settings	Alternate Functions
P4_5	26	K2	19	--	ALT0 - P4_5 ALT1 - TRIG_OUT3 ALT2 - LPI2C2_SCLS ALT3 - LPUART3_TXD ALT4 - CT4_MAT3 ALT5 - PWM0_B1 ALT7 - SmartDMA_PIO25	IO Supply - VDD Pad type - MED Default - DIS	ANALOG - ADC2_A21
P4_6	27	L1	20	--	ALT0 - P4_6 ALT1 - TRIG_IN4 ALT2 - LPI2C2_HREQ ALT3 - LPUART3_CTS_B ALT4 - CT_INP6 ALT5 - PWM0_A0 ALT7 - SmartDMA_PIO26	IO Supply - VDD Pad type - MED Default - DIS	ANALOG - ADC2_A22
P4_7	28	L2	21	--	ALT0 - P4_7 ALT1 - TRIG_IN5 ALT3 - LPUART3_RTS_B ALT4 - CT_INP7 ALT5 - PWM0_B0 ALT7 - SmartDMA_PIO27	IO Supply - VDD Pad type - MED Default - DIS	ANALOG - ADC2_A23
NC	29	--	--	--			
NC	30	--	--	--			
NC	31	--	--	--			
NC	32	--	--	--			
P2_0	33	M1	22	14	ALT0 - P2_0 ALT1 - TRIG_IN6 ALT2 - LPUART0_RXD ALT3 - LPUART4_CTS_B ALT4 - CT_INP16 ALT5 - CT2_MAT0 ALT7 - SmartDMA_PIO24	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC0_A0/OPAMP2_INP VDD SYS - WUU0_IN18

Table continues on the next page...

Table 63. Pinmux (continued)

Pin Name	MCX A345A346 LQFP144	MCX A345A346 WFBGA169	MCX A345A346 LQFP100	MCX A345A346 LQFP64	Pinmux Assignment	Pad Settings	Alternate Functions
P2_1	34	N1	23	15	ALT0 - P2_1 ALT1 - TRIG_IN7 ALT2 - LPUART0_TXD ALT3 - LPUART4_RTS_B ALT4 - CT_INP17 ALT5 - CT2_MAT1 ALT7 - SmartDMA_PIO25	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC1_A0/OPAMP2_INN
P2_2	35	M2	24	16	ALT0 - P2_2 ALT1 - TRIG_IN6 ALT2 - LPUART0_RTS_B ALT3 - LPUART2_TXD ALT4 - CT_INP12 ALT5 - CT2_MAT2 ALT7 - SmartDMA_PIO26	IO Supply - VDD Pad type - SLOW Default - DIS	ISP - UART_TXD ANALOG - ADC0_A4/ CMP0_IN0/DAC0_OUT/ CMP1_INN4/CMP2_INN4
P2_3	36	N2	25	17	ALT0 - P2_3 ALT1 - TRIG_IN7 ALT2 - LPUART0_CTS_B ALT3 - LPUART2_RXD ALT4 - CT_INP13 ALT5 - CT2_MAT3 ALT7 - SmartDMA_PIO27	IO Supply - VDD Pad type - SLOW Default - DIS	ISP - UART_RXD ANALOG - ADC0_A3/ CMP1_IN0/ADC1_A4 VDD SYS - WUU0_IN19
P2_4	37	M3	26	18	ALT0 - P2_4 ALT3 - LPUART2_CTS_B ALT4 - CT_INP14 ALT5 - CT1_MAT0 ALT7 - SmartDMA_PIO28	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC0_A1/ ADC2_A0/CMP2_IN0
P2_5	38	N3	27	19	ALT0 - P2_5 ALT3 - LPUART2_RTS_B ALT4 - CT_INP15 ALT5 - CT1_MAT1 ALT7 - SmartDMA_PIO29	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC1_A1/ADC3_A0

Table continues on the next page...

Table 63. Pinmux (continued)

Pin Name	MCX A345A346 LQFP144	MCX A345A346 WFBGA169	MCX A345A346 LQFP100	MCX A345A346 LQFP64	Pinmux Assignment	Pad Settings	Alternate Functions
P2_6	39	M4	28	20	ALT0 - P2_6 ALT1 - TRIG_OUT4 ALT2 - LPSP11_PCS1 ALT3 - LPUART4_RXD ALT4 - CT_INP18 ALT5 - CT1_MAT2 ALT7 - SmartDMA_PIO30	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC1_A3/ ADC2_A2/ OPAMP2_OUT/ CMP2_INP4
P2_7	40	N4	29	21	ALT0 - P2_7 ALT1 - TRIG_IN5 ALT3 - LPUART4_TXD ALT4 - CT_INP19 ALT5 - CT1_MAT3 ALT7 - SmartDMA_PIO31	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - VREFI/ ADC1_A7/ADC3_A7/ ADC0_A7/ADC2_A7
P2_8	41	L4	--	--	ALT0 - P2_8 ALT1 - TRIG_OUT3 ALT4 - CT3_MAT0	IO Supply - VDD Pad type - SLOW Default - DIS	
P2_9	42	K5	--	--	ALT0 - P2_9 ALT1 - TRIG_IN4 ALT4 - CT3_MAT1	IO Supply - VDD Pad type - SLOW Default - DIS	
P2_10	43	L5	30	--	ALT0 - P2_10 ALT1 - TRIG_OUT5 ALT3 - LPUART2_TXD ALT4 - CT3_MAT2 ALT7 - SmartDMA_PIO14	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC2_A1
P2_11	44	K6	31	--	ALT0 - P2_11 ALT1 - TRIG_IN4 ALT3 - LPUART2_RXD ALT4 - CT3_MAT3 ALT7 - SmartDMA_PIO15	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC3_A1
VSS	45	C11	32	--		IO Supply - VDD	
VDD	46	E6	33	--		IO Supply - VDD	

Table continues on the next page...

Table 63. Pinmux (continued)

Pin Name	MCX A345A346 LQFP144	MCX A345A346 WFBGA169	MCX A345A346 LQFP100	MCX A345A346 LQFP64	Pinmux Assignment	Pad Settings	Alternate Functions
P2_12	47	M5	34	22	ALT0 - P2_12 ALT1 - USB0_VBUS_DET ALT2 - LPSPI1_SCK ALT3 - LPUART1_RXD ALT4 - CT4_MAT0 ALT5 - CT0_MAT0 ALT7 - SmartDMA_PIO16 ALT11 - CAN0_RXD	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC0_A5/ ADC2_A5/OPAMP0_INP VDD SYS - WUU0_IN20
P2_13	48	N5	35	23	ALT0 - P2_13 ALT1 - TRIG_IN8 ALT2 - LPSPI1_SDO ALT3 - LPUART1_TXD ALT4 - CT4_MAT1 ALT5 - CT0_MAT1 ALT7 - SmartDMA_PIO17 ALT11 - CAN0_TXD	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC1_A5/ ADC3_A5/OPAMP0_INN
P2_14	49	L6	--	--	ALT0 - P2_14 ALT4 - CT4_MAT2	IO Supply - VDD Pad type - SLOW Default - DIS	
P2_15	50	M6	36	24	ALT0 - P2_15 ALT1 - TRIG_OUT4 ALT2 - LPSPI1_SDI ALT3 - LPUART1_RTS_B ALT4 - CT4_MAT3 ALT5 - CT0_MAT2 ALT7 - SmartDMA_PIO18	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - OPAMP0_OUT/ ADC0_A2/CMP0_INP4 VDD SYS - WUU0_IN21
P2_16	51	N6	37	25	ALT0 - P2_16 ALT2 - LPSPI1_SDI ALT3 - LPUART1_RTS_B ALT4 - CT3_MAT0 ALT5 - CT0_MAT2 ALT7 - SmartDMA_PIO19	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC0_A6/ ADC2_A4/OPAMP1_INP

Table continues on the next page...

Table 63. Pinmux (continued)

Pin Name	MCX A345A346 LQFP144	MCX A345A346 WFBGA169	MCX A345A346 LQFP100	MCX A345A346 LQFP64	Pinmux Assignment	Pad Settings	Alternate Functions
P2_17	52	N7	38	26	ALT0 - P2_17 ALT1 - TRIG_IN9 ALT2 - LPSP11_PCS0 ALT3 - LPUART1_CTS_B ALT4 - CT3_MAT1 ALT5 - CT0_MAT3 ALT7 - SmartDMA_PIO20	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC1_A6/ ADC3_A4/OPAMP1_INN
P2_18	53	K8	--	--	ALT0 - P2_18 ALT4 - CT3_MAT2	IO Supply - VDD Pad type - SLOW Default - DIS	
P2_19	54	M7	39	27	ALT0 - P2_19 ALT1 - TRIG_OUT5 ALT4 - CT3_MAT3 ALT7 - SmartDMA_PIO21	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC1_A2/ OPAMP1_OUT/ CMP1_INP4
P2_20	55	N8	40	--	ALT0 - P2_20 ALT1 - TRIG_IN8 ALT2 - LPSP11_PCS2 ALT4 - CT2_MAT0 ALT7 - SmartDMA_PIO22	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC2_A6/OPAMP3_INP
P2_21	56	M8	41	--	ALT0 - P2_21 ALT1 - TRIG_IN9 ALT2 - LPSP11_PCS3 ALT4 - CT2_MAT1 ALT7 - SmartDMA_PIO23	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC3_A6/OPAMP3_INN
P2_22	57	L8	--	--	ALT0 - P2_22 ALT4 - CT2_MAT2	IO Supply - VDD Pad type - SLOW Default - DIS	
P2_23	58	N9	42	--	ALT0 - P2_23 ALT1 - TRIG_OUT5 ALT4 - CT2_MAT3	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC3_A2/ OPAMP3_OUT/ CMP0_INN4
P2_24	59	M9	43	--	ALT0 - P2_24 ALT1 - TRIG_OUT6	IO Supply - VDD Pad type - SLOW	ANALOG - ADC2_A3

Table continues on the next page...

Table 63. Pinmux (continued)

Pin Name	MCX A345A346 LQFP144	MCX A345A346 WFBGA169	MCX A345A346 LQFP100	MCX A345A346 LQFP64	Pinmux Assignment	Pad Settings	Alternate Functions
					ALT4 - CT_INP8	Default - DIS	
P2_25	60	K9	44	--	ALT0 - P2_25 ALT1 - TRIG_OUT7 ALT4 - CT_INP9	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC3_A3
P2_26	61	L9	45	--	ALT0 - P2_26 ALT1 - TRIG_IN5 ALT4 - CT_INP10	IO Supply - VDD Pad type - SLOW Default - DIS	
NC	62	--	--	--			
VSS	63	L3	--	--		IO Supply - VDD	
VDD	64	E8	--	--		IO Supply - VDD	
NC	65	N11	--	--			
NC	66	N10	--	--		Pad type - ANA	VDD SYS - WUU0_IN28
NC	67	M10	--	--		Pad type - ANA	VDD SYS - WUU0_IN29
VSS	68	L11	46	28		IO Supply - VDD	
VDD	69	E9	47	29		IO Supply - VDD	
P3_31	70	M12	48	30	ALT0 - P3_31 ALT1 - TRIG_IN10 ALT2 - LPI2C3_SDAS ALT3 - LPUART4_CTS_B ALT4 - CT0_MAT3 ALT7 - PWM1_B0 ALT10 - SmartDMA_PIO31	IO Supply - VDD Pad type - SLOW+TAM Default - DIS	ANALOG - ADC1_A20 VDD SYS - LPTMR0_ALT2/ TAMPER0
P3_30	71	N12	49	31	ALT0 - P3_30 ALT1 - TRIG_OUT6 ALT2 - LPI2C3_SCLS ALT3 - LPUART4_RTS_B ALT4 - CT0_MAT2 ALT7 - PWM1_A0 ALT10 - SmartDMA_PIO30	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC1_A21
P3_29	72	N13	50	32	ALT0 - P3_29 ALT2 - LPI2C3_HREQ ALT4 - CT_INP3	IO Supply - VDD Pad type - SLOW+TAM Default - ALT1	ANALOG - ADC1_A22 VDD SYS - WUU0_IN27/TAMPER1

Table continues on the next page...

Table 63. Pinmux (continued)

Pin Name	MCX A345A346 LQFP144	MCX A345A346 WFBGA169	MCX A345A346 LQFP100	MCX A345A346 LQFP64	Pinmux Assignment	Pad Settings	Alternate Functions
					ALT5 - CT3_MAT3 ALT10 - SmartDMA_PIO29		
P3_28	73	M13	51	33	ALT0 - P3_28 ALT1 - TRIG_IN11 ALT2 - LPI2C3_SDA ALT3 - LPUART4_RXD ALT4 - CT_INP12 ALT5 - CT3_MAT2 ALT7 - PWM1_B3 ALT10 - SmartDMA_PIO28	IO Supply - VDD Pad type - 5VTOL Default - DIS	VDD SYS - WUU0_IN26
P3_27	74	L12	52	34	ALT0 - P3_27 ALT1 - TRIG_OUT7 ALT2 - LPI2C3_SCL ALT3 - LPUART4_TXD ALT4 - CT_INP13 ALT5 - CT3_MAT1 ALT7 - PWM1_A3 ALT10 - SmartDMA_PIO27	IO Supply - VDD Pad type - 5VTOL Default - DIS	VDD SYS - WUU0_IN30
P3_26	75	L13	--	--	ALT0 - P3_26 ALT1 - TRIG_IN10 ALT4 - CT_INP14 ALT10 - SmartDMA_PIO26	IO Supply - VDD Pad type - SLOW+TAM Default - DIS	VDD SYS - TAMPER2
P3_25	76	K12	--	--	ALT0 - P3_25 ALT1 - TRIG_OUT6 ALT4 - CT_INP15 ALT10 - SmartDMA_PIO25	IO Supply - VDD Pad type - SLOW+TAM Default - DIS	ANALOG - ADC3_A23 VDD SYS - TAMPER3
P3_24	77	K13	--	--	ALT0 - P3_24 ALT1 - TRIG_IN11 ALT4 - CT_INP16 ALT10 - SmartDMA_PIO24	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC3_A22
NC	78	--	--	--			

Table continues on the next page...

Table 63. Pinmux (continued)

Pin Name	MCX A345A346 LQFP144	MCX A345A346 WFBGA169	MCX A345A346 LQFP100	MCX A345A346 LQFP64	Pinmux Assignment	Pad Settings	Alternate Functions
NC	79	--	--	--			
P3_23	80	J12	--	--	ALT0 - P3_23 ALT3 - LPUART1_CTS_B ALT4 - CT_INP11 ALT7 - PWM1_X3 ALT10 - SmartDMA_PIO23	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC3_A21
P3_22	81	J13	53	--	ALT0 - P3_22 ALT3 - LPUART1_RTS_B ALT4 - CT_INP10 ALT7 - PWM1_X2 ALT10 - SmartDMA_PIO22	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC3_A20
P3_21	82	H12	54	--	ALT0 - P3_21 ALT1 - TRIG_OUT1 ALT2 - LPI2C3_SCL ALT3 - LPUART1_TXD ALT4 - CT2_MAT3 ALT5 - PWM0_X3 ALT7 - PWM1_B3 ALT10 - SmartDMA_PIO21	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC3_A19
P3_20	83	H13	55	--	ALT0 - P3_20 ALT1 - TRIG_OUT0 ALT2 - LPI2C3_SDA ALT3 - LPUART1_RXD ALT4 - CT2_MAT2 ALT5 - PWM0_X2 ALT7 - PWM1_A3 ALT10 - SmartDMA_PIO20	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC3_A18
NC	84	--	--	--			
P3_19	85	J11	56	--	ALT0 - P3_19 ALT2 - LPUART4_TXD ALT4 - CT2_MAT1 ALT5 - PWM0_X1	IO Supply - VDD Pad type - SLOW+TAM Default - DIS	VDD SYS - TAMPER4

Table continues on the next page...

Table 63. Pinmux (continued)

Pin Name	MCX A345A346 LQFP144	MCX A345A346 WFBGA169	MCX A345A346 LQFP100	MCX A345A346 LQFP64	Pinmux Assignment	Pad Settings	Alternate Functions
					ALT7 - PWM1_X1 ALT10 - SmartDMA_PIO19		
P3_18	86	J10	57	--	ALT0 - P3_18 ALT2 - LPUART4_RXD ALT4 - CT2_MAT0 ALT5 - PWM0_X0 ALT7 - PWM1_X0 ALT10 - SmartDMA_PIO18	IO Supply - VDD Pad type - SLOW+TAM Default - DIS	VDD SYS - TAMPER5
P3_17	87	H11	58	--	ALT0 - P3_17 ALT2 - LPUART4_CTS_B ALT4 - CT_INP9 ALT7 - PWM1_B0 ALT10 - SmartDMA_PIO17	IO Supply - VDD Pad type - SLOW Default - DIS	
P3_16	88	H10	59	--	ALT0 - P3_16 ALT2 - LPUART4_RTS_B ALT4 - CT_INP8 ALT7 - PWM1_A0 ALT10 - SmartDMA_PIO16	IO Supply - VDD Pad type - SLOW Default - DIS	
P3_15	89	G13	60	35	ALT0 - P3_15 ALT2 - LPUART2_TXD ALT3 - LPUART3_RTS_B ALT4 - CT_INP7 ALT5 - PWM0_X3 ALT7 - PWM1_B1 ALT10 - SmartDMA_PIO15	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC3_A17
P3_14	90	F12	61	36	ALT0 - P3_14 ALT2 - LPUART2_RXD ALT3 - LPUART3_CTS_B ALT4 - CT_INP6 ALT5 - PWM0_X2 ALT7 - PWM1_A1	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC3_A16 VDD SYS - WUU0_IN25

Table continues on the next page...

Table 63. Pinmux (continued)

Pin Name	MCX A345A346 LQFP144	MCX A345A346 WFBGA169	MCX A345A346 LQFP100	MCX A345A346 LQFP64	Pinmux Assignment	Pad Settings	Alternate Functions
					ALT10 - SmartDMA_PIO14		
P3_13	91	F13	62	37	ALT0 - P3_13 ALT2 - LPUART2_CTS_B ALT3 - LPUART3_RXD ALT4 - CT1_MAT3 ALT5 - PWM0_X1 ALT7 - PWM1_B2 ALT10 - SmartDMA_PIO13	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC3_A15
P3_12	92	E12	63	38	ALT0 - P3_12 ALT2 - LPUART2_RTS_B ALT3 - LPUART3_TXD ALT4 - CT1_MAT2 ALT5 - PWM0_X0 ALT7 - PWM1_A2 ALT10 - SmartDMA_PIO12	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC3_A14
VSS	93	C7	64	--		IO Supply - VDD	
VDD	94	J5	65	--		IO Supply - VDD	
P3_11	95	E13	66	39	ALT0 - P3_11 ALT1 - TRIG_IN6 ALT2 - LPSPI1_PCS0 ALT3 - LPUART1_CTS_B ALT4 - CT1_MAT1 ALT5 - PWM0_B2 ALT8 - LPUART5_RXD ALT10 - SmartDMA_PIO11	IO Supply - VDD Pad type - MED Default - DIS	VDD SYS - WUU0_IN24
P3_10	96	D13	67	40	ALT0 - P3_10 ALT1 - TRIG_IN5 ALT2 - LPSPI1_SCK ALT3 - LPUART1_RTS_B ALT4 - CT1_MAT0 ALT5 - PWM0_A2 ALT8 - LPUART5_TXD	IO Supply - VDD Pad type - MED Default - DIS	

Table continues on the next page...

Table 63. Pinmux (continued)

Pin Name	MCX A345A346 LQFP144	MCX A345A346 WFBGA169	MCX A345A346 LQFP100	MCX A345A346 LQFP64	Pinmux Assignment	Pad Settings	Alternate Functions
					ALT10 - SmartDMA_PIO10		
P3_9	97	D12	68	41	ALT0 - P3_9 ALT1 - TRIG_IN4 ALT2 - LPSP11_SDI ALT3 - LPUART1_TXD ALT4 - CT_INP5 ALT5 - PWM0_B1 ALT8 - LPUART5_RTS_B ALT10 - SmartDMA_PIO9	IO Supply - VDD Pad type - MED Default - DIS	
P3_8	98	C13	69	42	ALT0 - P3_8 ALT1 - TRIG_IN3 ALT2 - LPSP11_SDO ALT3 - LPUART1_RXD ALT4 - CT_INP4 ALT5 - PWM0_A1 ALT8 - LPUART5_CTS_B ALT10 - SmartDMA_PIO8 ALT12 - CLKOUT	IO Supply - VDD Pad type - MED Default - DIS	VDD SYS - WUU0_IN23
P3_7	99	C12	70	43	ALT0 - P3_7 ALT1 - TRIG_IN2 ALT2 - LPSP11_PCS2 ALT3 - LPUART3_CTS_B ALT4 - CT4_MAT3 ALT5 - PWM0_B3 ALT7 - PWM1_B0 ALT10 - SmartDMA_PIO7	IO Supply - VDD Pad type - MED Default - DIS	ANALOG - ADC3_A13
P3_6	100	B13	71	44	ALT0 - P3_6 ALT1 - CLKOUT ALT2 - LPSP11_PCS3 ALT3 - LPUART3_RTS_B ALT4 - CT4_MAT2 ALT5 - PWM0_A3 ALT7 - PWM1_A0	IO Supply - VDD Pad type - MED Default - DIS	ANALOG - ADC3_A12

Table continues on the next page...

Table 63. Pinmux (continued)

Pin Name	MCX A345A346 LQFP144	MCX A345A346 WFBGA169	MCX A345A346 LQFP100	MCX A345A346 LQFP64	Pinmux Assignment	Pad Settings	Alternate Functions
					ALT10 - SmartDMA_PIO6 ALT12 - FREQME_CLK_OUT1		
P3_5	101	F11	--	--	ALT0 - P3_5 ALT4 - CT_INP19 ALT5 - PWM0_X3 ALT10 - SmartDMA_PIO5	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC3_A11
P3_4	102	F10	--	--	ALT0 - P3_4 ALT4 - CT_INP18 ALT5 - PWM0_X2 ALT10 - SmartDMA_PIO4	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC3_A10
P3_3	103	E11	--	--	ALT0 - P3_3 ALT4 - CT4_MAT1 ALT5 - PWM0_X1 ALT7 - PWM1_X3 ALT10 - SmartDMA_PIO3	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC3_A9
P3_2	104	E10	--	--	ALT0 - P3_2 ALT2 - LPSP1_PCS1 ALT4 - CT4_MAT0 ALT5 - PWM0_X0 ALT7 - PWM1_X2 ALT10 - SmartDMA_PIO2	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC3_A8
P3_1	105	B12	72	45	ALT0 - P3_1 ALT1 - TRIG_IN1 ALT3 - LPUART3_TXD ALT4 - CT_INP17 ALT5 - PWM0_B0 ALT7 - PWM1_X1 ALT10 - SmartDMA_PIO1 ALT12 - FREQME_CLK_OUT0	IO Supply - VDD Pad type - HD Default - DIS	

Table continues on the next page...

Table 63. Pinmux (continued)

Pin Name	MCX A345A346 LQFP144	MCX A345A346 WFBGA169	MCX A345A346 LQFP100	MCX A345A346 LQFP64	Pinmux Assignment	Pad Settings	Alternate Functions
P3_0	106	A13	73	46	ALT0 - P3_0 ALT1 - TRIG_IN0 ALT3 - LPUART3_RXD ALT4 - CT_INP16 ALT5 - PWM0_A0 ALT7 - PWM1_X0 ALT10 - SmartDMA_PIO0	IO Supply - VDD Pad type - HD Default - DIS	VDD SYS - WUU0_IN22
VSS	107	D7	74	47		IO Supply - VDD	
VDD	108	J6	75	48		IO Supply - VDD	
P0_0	109	A12	76	49	ALT0 - P0_0 ALT1 - TMS/SWDIO ALT2 - LPUART0_RTS_B ALT3 - LPSPI0_PCS0 ALT4 - CT_INP0	IO Supply - VDD Pad type - MED Default - ALT1	
P0_1	110	B11	77	50	ALT0 - P0_1 ALT1 - TCLK/SWCLK ALT2 - LPUART0_CTS_B ALT3 - LPSPI0_SDI ALT4 - CT_INP1	IO Supply - VDD Pad type - MED Default - ALT1	
P0_2	111	A11	78	51	ALT0 - P0_2 ALT1 - TDO/SWO ALT2 - LPUART0_RXD ALT3 - LPSPI0_SCK ALT4 - CT0_MAT0 ALT5 - UTICK_CAP0	IO Supply - VDD Pad type - MED Default - ALT1	ANALOG - ADC2_A8
P0_3	112	D10	79	52	ALT0 - P0_3 ALT1 - TDI ALT2 - LPUART0_TXD ALT3 - LPSPI0_SDO ALT4 - CT0_MAT1 ALT5 - UTICK_CAP1 ALT8 - CMP0_OUT	IO Supply - VDD Pad type - MED Default - ALT1	ANALOG - CMP1_IN1/ADC0_A14
P0_4	113	A10	--	--	ALT0 - P0_4 ALT4 - CT0_MAT2	IO Supply - VDD Pad type - SLOW	ANALOG - ADC2_A9 VDD SYS - WUU0_IN0

Table continues on the next page...

Table 63. Pinmux (continued)

Pin Name	MCX A345A346 LQFP144	MCX A345A346 WFBGA169	MCX A345A346 LQFP100	MCX A345A346 LQFP64	Pinmux Assignment	Pad Settings	Alternate Functions
					ALT5 - UTICK_CAP2 ALT7 - SmartDMA_PIO0 ALT8 - CMP1_OUT	Default - DIS	
P0_5	114	B9	--	--	ALT0 - P0_5 ALT4 - CT0_MAT3 ALT5 - UTICK_CAP3 ALT7 - SmartDMA_PIO1 ALT8 - CMP2_OUT	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC2_A10
P0_6	115	A9	80	53	ALT0 - P0_6 ALT1 - ISPMODE_N ALT2 - LPI2C0_HREQ ALT3 - LPSPi0_PCS1 ALT4 - CT_INP2 ALT7 - SmartDMA_PIO2 ALT8 - CMP1_OUT ALT12 - CLKOUT	IO Supply - VDD Pad type - SLOW Default - ALT1	ISP - ISPMODE_N ANALOG - ADC0_A15
P0_7	116	D11	--	--	ALT0 - P0_7 ALT4 - CT_INP3 ALT7 - SmartDMA_PIO3	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC2_A11/CMP2_IN1 VDD SYS - WUU0_IN1
NC	117	--	--	--			
VSS	118	E7	--	--		IO Supply - VDD	
P0_12	119	C10	--	--	ALT0 - P0_12 ALT4 - CT0_MAT2	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC2_A12
P0_13	120	B10	--	--	ALT0 - P0_13 ALT4 - CT0_MAT3	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC2_A13
P0_14	121	C9	81	--	ALT0 - P0_14 ALT4 - CT_INP2 ALT5 - UTICK_CAP0 ALT7 - SmartDMA_PIO4	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC2_A14
P0_15	122	D9	82	--	ALT0 - P0_15 ALT4 - CT_INP3 ALT5 - UTICK_CAP1 ALT7 - SmartDMA_PIO5	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC2_A15

Table continues on the next page...

Table 63. Pinmux (continued)

Pin Name	MCX A345A346 LQFP144	MCX A345A346 WFBGA169	MCX A345A346 LQFP100	MCX A345A346 LQFP64	Pinmux Assignment	Pad Settings	Alternate Functions
P0_16	123	B8	83	54	ALT0 - P0_16 ALT2 - LPI2C0_SDA ALT3 - LPSPi0_PCS2 ALT4 - CT0_MAT0 ALT5 - UTICK_CAP2 ALT7 - SmartDMA_PIO6	IO Supply - VDD Pad type - HD Default - DIS	VDD SYS - WUU0_IN2
P0_17	124	A8	84	55	ALT0 - P0_17 ALT2 - LPI2C0_SCL ALT3 - LPSPi0_PCS3 ALT4 - CT0_MAT1 ALT5 - UTICK_CAP3 ALT7 - SmartDMA_PIO7	IO Supply - VDD Pad type - HD Default - DIS	
P0_18	125	A7	85	--	ALT0 - P0_18 ALT2 - LPI2C0_SCLS ALT4 - CT0_MAT2 ALT7 - SmartDMA_PIO8 ALT8 - CMP0_OUT	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC0_A8
P0_19	126	B7	86	--	ALT0 - P0_19 ALT2 - LPI2C0_SDAS ALT4 - CT0_MAT3 ALT7 - SmartDMA_PIO9 ALT8 - CMP1_OUT	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC0_A9 VDD SYS - WUU0_IN3
P0_20	127	A6	87	--	ALT0 - P0_20 ALT3 - LPUART0_RXD ALT4 - CT_INP0 ALT7 - SmartDMA_PIO10 ALT8 - CMP2_OUT	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC0_A10 VDD SYS - WUU0_IN4
P0_21	128	B6	88	--	ALT0 - P0_21 ALT3 - LPUART0_TXD ALT4 - CT_INP1 ALT7 - SmartDMA_PIO11	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC0_A11
P0_22	129	C8	89	--	ALT0 - P0_22 ALT3 - LPUART0_RTS_B ALT4 - CT_INP2	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC0_A12

Table continues on the next page...

Table 63. Pinmux (continued)

Pin Name	MCX A345A346 LQFP144	MCX A345A346 WFBGA169	MCX A345A346 LQFP100	MCX A345A346 LQFP64	Pinmux Assignment	Pad Settings	Alternate Functions
					ALT5 - CT0_MAT0 ALT7 - SmartDMA_PIO12		
P0_23	130	D8	90	--	ALT0 - P0_23 ALT3 - LPUART0_CTS_B ALT4 - CT_INP3 ALT5 - CT0_MAT1 ALT7 - SmartDMA_PIO13	IO Supply - VDD Pad type - SLOW Default - DIS	ANALOG - ADC0_A13/CMP2_IN2 VDD SYS - WUU0_IN5
P0_24	131	C6	--	--	ALT0 - P0_24 ALT4 - CT0_MAT0 ALT8 - LPUART5_RXD	IO Supply - VDD Pad type - SLOW Default - DIS	
P0_25	132	D6	--	--	ALT0 - P0_25 ALT4 - CT0_MAT1 ALT8 - LPUART5_TXD	IO Supply - VDD Pad type - SLOW Default - DIS	
P0_26	133	C5	--	--	ALT0 - P0_26 ALT4 - CT0_MAT2 ALT8 - LPUART5_RTS_B	IO Supply - VDD Pad type - SLOW Default - DIS	
P0_27	134	D5	--	--	ALT0 - P0_27 ALT4 - CT0_MAT3 ALT8 - LPUART5_CTS_B	IO Supply - VDD Pad type - SLOW Default - DIS	
P1_0	135	A5	91	56	ALT0 - P1_0 ALT1 - TRIG_IN0 ALT2 - LPSPI0_SDO ALT3 - LPI2C1_SDA ALT4 - CT_INP4 ALT5 - CT0_MAT2	IO Supply - VDD Pad type - MED+I2C_FILT Default - DIS	ISP - SPI_SDO ANALOG - ADC0_A16/CMP0_IN3 VDD SYS - WUU0_IN6/ LPTMR0_ALT3
P1_1	136	B5	92	57	ALT0 - P1_1 ALT1 - TRIG_IN1 ALT2 - LPSPI0_SCK ALT3 - LPI2C1_SCL ALT4 - CT_INP5 ALT5 - CT0_MAT3	IO Supply - VDD Pad type - MED+I2C_FILT Default - DIS	ISP - SPI_SCK ANALOG - ADC0_A17/CMP1_IN3
P1_2	137	A4	93	58	ALT0 - P1_2 ALT1 - TRIG_OUT0	IO Supply - VDD Pad type - MED	ISP - SPI_SDI ANALOG - ADC0_A18/CMP2_IN3

Table continues on the next page...

Table 63. Pinmux (continued)

Pin Name	MCX A345A346 LQFP144	MCX A345A346 WFBGA169	MCX A345A346 LQFP100	MCX A345A346 LQFP64	Pinmux Assignment	Pad Settings	Alternate Functions
					ALT2 - LPSPI0_SDI ALT3 - LPI2C1_SDAS ALT4 - CT1_MAT0 ALT5 - CT_INP0 ALT11 - CAN0_TXD	Default - DIS	
P1_3	138	B4	94	59	ALT0 - P1_3 ALT1 - TRIG_OUT1 ALT2 - LPSPI0_PCS0 ALT3 - LPI2C1_SCLS ALT4 - CT1_MAT1 ALT5 - CT_INP1 ALT11 - CAN0_RXD	IO Supply - VDD Pad type - MED Default - DIS	ISP - SPI_PCS ANALOG - ADC0_A19/CMP0_IN1 VDD SYS - WUU0_IN7
VDD	139	J8	95	60		IO Supply - VDD	
VSS	140	F7	96	61		IO Supply - VDD	
P1_4	141	A3	97	62	ALT0 - P1_4 ALT1 - FREQME_CLK_IN0 ALT2 - LPSPI0_PCS3 ALT3 - LPUART2_RXD ALT4 - CT1_MAT2 ALT7 - SmartDMA_PIO0	IO Supply - VDD Pad type - MED Default - DIS	ANALOG - ADC0_A20/CMP0_IN2 VDD SYS - WUU0_IN8
P1_5	142	B3	98	63	ALT0 - P1_5 ALT1 - FREQME_CLK_IN1 ALT2 - LPSPI0_PCS2 ALT3 - LPUART2_TXD ALT4 - CT1_MAT3 ALT7 - SmartDMA_PIO1	IO Supply - VDD Pad type - MED Default - DIS	ANALOG - ADC0_A21/CMP1_IN2
P1_6	143	A2	99	64	ALT0 - P1_6 ALT1 - TRIG_IN2 ALT2 - LPSPI0_PCS1 ALT3 - LPUART2_RTS_B ALT4 - CT_INP6 ALT5 - CT4_MAT0 ALT7 - SmartDMA_PIO2	IO Supply - VDD Pad type - MED Default - DIS	ANALOG - ADC0_A22
P1_7	144	A1	100	1	ALT0 - P1_7	IO Supply - VDD	ANALOG - ADC0_A23

Table continues on the next page...

Table 63. Pinmux (continued)

Pin Name	MCX A345A346 LQFP144	MCX A345A346 WFBGA169	MCX A345A346 LQFP100	MCX A345A346 LQFP64	Pinmux Assignment	Pad Settings	Alternate Functions
					ALT1 - TRIG_OUT2 ALT3 - LPUART2_CTS_B ALT4 - CT_INP7 ALT5 - CT4_MAT1 ALT7 - SmartDMA_PIO3	Pad type - MED Default - DIS	VDD SYS - WUU0_IN9
	--	G7,H7,J7,K7,L7, G2,G3,G4,G10, G11,G12,F5,F6, F8,F9,H6,H8,H9, M11	--	--			
	--	J9	--	--			
	--	C4, F3, F4, G8, G9, H3, H4, J3, J4, K3, K4, K10, K11, L10	--	--			

Note:

- +I2C_FILT in Pad Type represents that I2C filter is implemented on the pin. PFE bit is implemented in Pin Control register of the pin.
- HD in Pad Type represents that the pin can support up to 20mA drive strength. I2C filter is implemented on the pin. PFE bit is implemented in Pin Control register of the pin.
- 5VTOL in Pad Type represents that the pin is 5V tolerant.
- DIS in default column represents that the pin's input buffer is disabled by default
- RST pads support passive filter and 1M ohm pull resistor. PFE and PV bits are implemented in Pin Control register of the pin.
- PE, PS, SRE, ODE and DSE are supported in Pin Control register of all types of IO.
- 5VTol and HD pads support two DSE bits in Pin Control register of the pin.
- SLOW in Pad Type represents the IO supports 25MHz. MED in Pad Type represents the IO supports 50MHz.
- +TAM in Pad Type represents the IO supports 1M ohm pull resistor.

10.2 Pinout

See the attached pinout spreadsheet for the pinouts and ballmaps for each package offered on this device.

Chapter 11

Port Control (PORT)

11.1 Chip-specific PORT information

Table 64. Reference links to related information

Topic	Related module	Reference
Full description	PORT	PORT
System memory map		Memory map
Clocking		Clock distribution
Power Management		Power Management
Signal multiplexing	Port control	Signal multiplexing

11.1.1 Module instances

This device has five instances of the port module, PORT0, PORT1, PORT2, PORT3 and PORT4.

11.1.2 Normal I/O pin structure

The following diagram shows the structure of normal I/O pin.

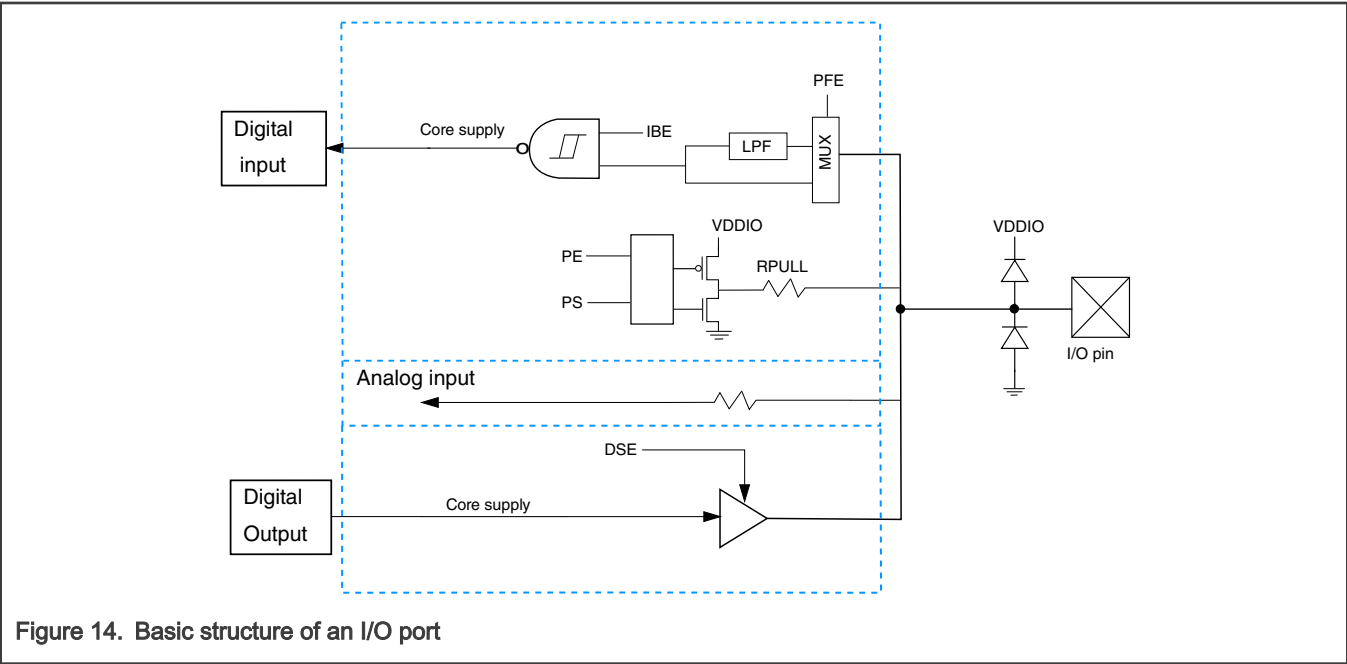


Figure 14. Basic structure of an I/O port

11.2 Overview

PORT provides support for pad control functions. You can configure most functions independently for each pin, in the 32-bit port, and affect the pin regardless of its pin multiplexing state.

There exists a single instance of the PORT module for each port, and not all pins within each port are implemented on a specific chip.

11.2.1 Block diagram

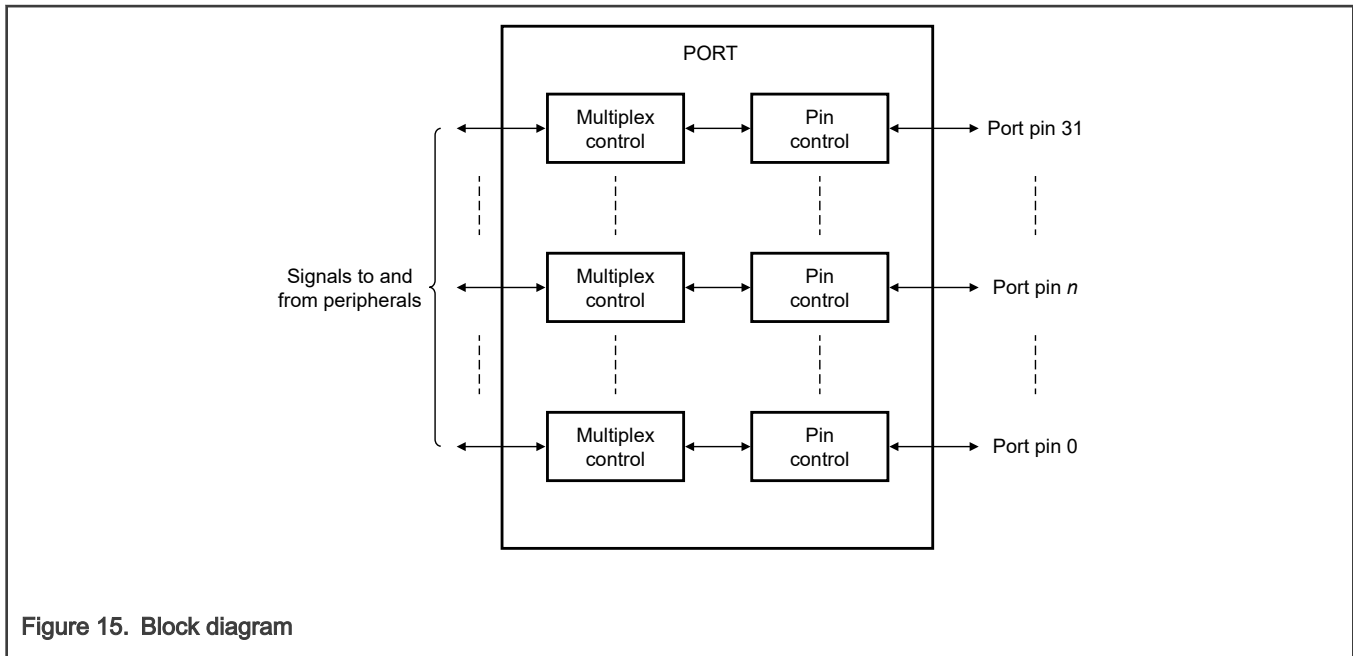


Figure 15. Block diagram

11.2.2 Features

- Individual pull control fields with pullup, pulldown, and pull-disable support
- Individual drive strength fields supporting high and low drive strengths
- Individual slew rate fields supporting fast and slow slew rates
- Individual PCR_{*n*}[PFE] fields that enable and disable individual input passive filters on selected pins
- Individual PCR_{*n*}[ODE] fields that enable and disable individual open drain outputs
- Digital input inversion to optionally invert the digital input
- Digital PCR_{*n*}[IBE] fields to configure between analog or disabled functions and digital functions
- Individual PCR_{*n*}[MUX] fields supporting GPIO and up to 13 chip-specific digital functions

11.3 Functional description

11.3.1 Pin control

Each port pin has a corresponding Pin Control Register (PCR) associated with it that helps you configure the following functions for each pin within the 32-bit port:

- Pullup or pulldown enable
- Drive strength configuration
- Slew rate configuration
- Open drain enable
- Passive input filter enable on selected pins
- Digital input inversion
- Software configuration lock
- Pin multiplexing mode

These functions apply across all digital pin multiplexing modes, and individual peripherals do not override the configuration in PCR n unless otherwise noted. For example, if an I²C function is enabled on a pin, it does not override the pullup or open drain configuration for that pin.

PCR n [LK] allows the configuration for each pin to be locked until the next system reset. When locked, writes to the lower half of that PCR n are ignored, although a bus error is not generated on an attempted write to a locked register.

The configuration of each PCR n is retained when the PORT module is disabled.

When you configure a pin in a digital pin multiplexing mode, the input buffer for that pin is enabled, allowing the pin state to be read via the corresponding GPIO.PDIR or allowing a pin interrupt or DMA request to be generated. If a pin is always floating when its input buffer is enabled, it can cause an increase in power consumption. This situation must be avoided. A pin can be floating because of an input pin that is not connected or an output pin that is tristated (output buffer is disabled).

Enabling the internal pull resistor (or implementing an external pull resistor) ensures that a pin does not float when its input buffer is enabled. The internal pull resistor is automatically disabled whenever the output buffer is enabled, allowing PCR n [PE] to remain 1. Configuring Pin Multiplexing mode to disabled or analog (PCR n [MUX] = 0) disables the pin's input buffer and results in lowest power consumption.

11.3.2 Global pin control

[Global Pin Control Low \(GPCLR\)](#) and [Global Pin Control High \(GPCHR\)](#) allow a single register write to update the lower 16 bits of PCR n for up to 16 pins, all with the same value. You cannot write to locked registers by using [Global Pin Control Low \(GPCLR\)](#) and [Global Pin Control High \(GPCHR\)](#).

[Global Pin Control Low \(GPCLR\)](#) and [Global Pin Control High \(GPCHR\)](#) enable you to quickly configure multiple pins within the same port and with the same peripheral function. These are write-only registers that always read as 0.

11.3.3 Clocking

This module has no clocking considerations.

11.3.4 Calibration

The combination of [Calibration 0 \(CALIB0\)](#) and [Calibration 1 \(CALIB1\)](#) controls the drive strength of a pin for the port and PCR n [DSE] for the pin.

[Calibration 0 \(CALIB0\)](#) and [Calibration 1 \(CALIB1\)](#) represent two driver configurations. If PCR n [DSE] = 0, the configuration in [Calibration 0 \(CALIB0\)](#) is used. Likewise, if PCR n [DSE] = 1, the configuration in [Calibration 1 \(CALIB1\)](#) is used.

The pulldown and pullup drivers have eight segments. The value of NCAL[5:3] represents the number of pulldown segments that are enabled when driving low, and the value of PCAL[5:3] represents the number of pullup segments that turn on when driving high. Writing 000b to these fields causes one segment to turn on, while writing 111b causes all eight segments to turn on. Upon reset, [Calibration 0 \(CALIB0\)](#) becomes 1 to create approximately 50 Ω driver at 3.3 V and 25 °C (3 is a typical value) and [Calibration 1 \(CALIB1\)](#) becomes 1 to create approximately 50 Ω driver at 1.8 V and 25 °C (7 is the typical value).

The three LSBs of [CALIB0\[NCAL\]](#), [CALIB1\[NCAL\]](#), [CALIB0\[PCAL\]](#), and [CALIB1\[PCAL\]](#) do not affect the driver's strength. Instead, they are included to improve precision when calibrating to a different impedance value. This can be done by using the following formula:

Calibration = $(G \times (CAL0 + 4) - 1024) \gg 8$, where G is a binary code representing the desired conductance and CAL0 is one of the 6-bit fields in [Calibration 0 \(CALIB0\)](#) and [Calibration 1 \(CALIB1\)](#). The value of G scales linearly with the intended conductance; G = 0 corresponds to 0 S (an open circuit), and G = 256 corresponds to 0.02 S (50 Ω). For example, the following operation configures the driver to be approximately 0.03 S (33 Ω) at 3.3 V when PCR n [DSE] = 1:

The value of [CALIB1\[NCAL\]](#) = $(384 \times (\text{the value of } \text{CALIB0[NCAL]} + 4) - 1024) \gg 8$;

The value of [CALIB1\[PCAL\]](#) = $(384 \times (\text{the value of } \text{CALIB0[PCAL]} + 4) - 1024) \gg 8$;

Do not overflow or underflow NCAL[5:3] or PCAL[5:3]; otherwise, this operation may have an unintended result. You can configure the drive strength for 50 Ω at 2.5 V and 25 °C by averaging the initial NCAL codes in [Calibration 0 \(CALIB0\)](#) and [Calibration 1 \(CALIB1\)](#), and averaging the initial PCAL codes in [Calibration 0 \(CALIB0\)](#) and [Calibration 1 \(CALIB1\)](#). However, the 2.5 V

configuration is not as accurate or precise as the original 1.8 V and 3.3 V configuration because the drive strength is not perfectly linear with supply voltage.

NOTE

This calibration feature may not apply to all PORT pins. See the chip-specific PORT information for pins that support calibration.

11.4 Initialization

To initialize PORT, perform the following procedure:

1. Initialize the pin functions:
 - Initialize single pin functions by writing appropriate values to `PCR $n$` .
 - Initialize multiple pins (up to 16) with the same configuration by writing appropriate values to [Global Pin Control Low \(GPCLR\)](#) or [Global Pin Control High \(GPCHR\)](#).
2. Lock the configuration for a given pin, by writing 1 to `PCR $n$ [LK]`, so that it cannot be changed until the next reset.

11.5 Application information

11.6 Memory map and register definition

Any read or write access to the PORT memory space, outside the valid memory map, results in a bus error. All register accesses complete with zero wait states.

11.6.1 PORT register descriptions

11.6.1.1 PORT memory map

PORT0 base address: 400B_C000h

PORT1 base address: 400B_D000h

PORT2 base address: 400B_E000h

PORT3 base address: 400B_F000h

PORT4 base address: 400C_0000h

Offset	Register	Width (In bits)	Access	Reset value
0h	Version ID (VERID)	32	R	0200_0000h
10h	Global Pin Control Low (GPCLR)	32	RW	0000_0000h
14h	Global Pin Control High (GPCHR)	32	RW	0000_0000h
20h	Configuration (CONFIG)	32	RW	0000_0000h
60h	Calibration 0 (CALIB0)	32	RW	See section
64h	Calibration 1 (CALIB1)	32	RW	See section
80h	Pin Control 0 (PCR0)	32	RW	See section
84h	Pin Control 1 (PCR1)	32	RW	See section

Table continues on the next page...

Table continued from the previous page...

Offset	Register	Width (In bits)	Access	Reset value
88h	Pin Control 2 (PCR2)	32	RW	See section
8Ch	Pin Control 3 (PCR3)	32	RW	See section
90h - 94h	Pin Control a (PCR4 - PCR5)	32	RW	0000_0000h
98h	Pin Control 6 (PCR6)	32	RW	See section
9Ch	Pin Control 7 (PCR7)	32	RW	0000_0000h
A0h	Pin Control 8 (PCR8)	32	RW	0000_0000h
A4h	Pin Control 9 (PCR9)	32	RW	0000_0000h
A8h - ACh	Pin Control a (PCR10 - PCR11)	32	RW	0000_0000h
B0h - B8h	Pin Control a (PCR12 - PCR14)	32	RW	0000_0000h
BCh	Pin Control 15 (PCR15)	32	RW	0000_0000h
C0h	Pin Control 16 (PCR16)	32	RW	0000_0000h
C4h	Pin Control 17 (PCR17)	32	RW	0000_0000h
C8h - CCh	Pin Control a (PCR18 - PCR19)	32	RW	0000_0000h
D0h - E0h	Pin Control a (PCR20 - PCR24)	32	RW	0000_0000h
E4h - E8h	Pin Control a (PCR25 - PCR26)	32	RW	0000_0000h
ECh - F0h	Pin Control a (PCR27 - PCR28)	32	RW	See section
F4h	Pin Control 29 (PCR29)	32	RW	See section
F8h - FCh	Pin Control a (PCR30 - PCR31)	32	RW	0000_0000h

11.6.1.2 Version ID (VERID)


Offset

Register	Offset
VERID	0h

Function

Specifies the version number and feature number of the chip.

Diagram

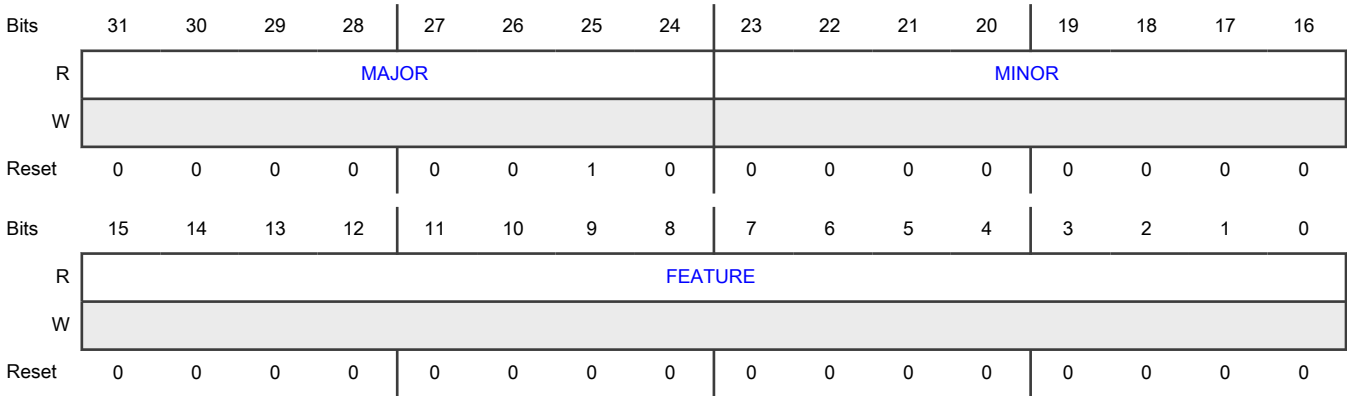

Fields

Field	Function
31-24 MAJOR	Major Version Number Indicates the major version number for the specification.
23-16 MINOR	Minor Version Number Indicates the minor version number for the specification.
15-0 FEATURE	Feature Specification Number Indicates the feature set number. 0000_0000_0000_0000b - Basic implementation

11.6.1.3 Global Pin Control Low (GPCLR)

Offset

Register	Offset
GPCLR	10h

Function

Controls writes to the PCR15–PCR0 registers.

NOTE

This register supports only 32-bit writes.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
W	GPWE 15	GPWE 14	GPWE 13	GPWE 12	GPWE 11	GPWE 10	GPWE 9	GPWE 8	GPWE 7	GPWE 6	GPWE 5	GPWE 4	GPWE 3	GPWE 2	GPWE 1	GPWE 0
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0															
W	GPWD															
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-16 GPWEn	Global Pin Write Enable Configures the corresponding lower 16-bit field of PCR n to be updated with the value in the GPWD field. If a selected PCR is locked, the write to that register is ignored. 0b - Not updated 1b - Updated
15-0 GPWD	Global Pin Write Data Is written to PCR n [15:0] if GPWEn = 1.

11.6.1.4 Global Pin Control High (GPCHR)**Offset**

Register	Offset
GPCHR	14h


Function

Controls writes to the PCR31–PCR16 registers.

NOTE

This register supports only 32-bit writes.

Diagram

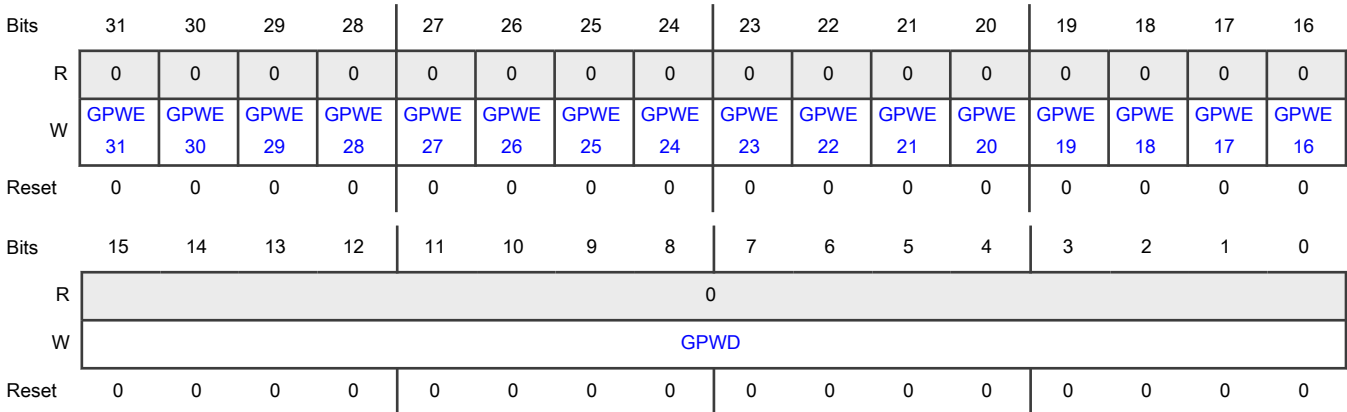

Fields

Field	Function
31-16 GPWEn	Global Pin Write Enable Configures the corresponding lower 16-bit field of PCR n to be updated with the value in the GPWD field. If a selected PCR is locked, write to that register is ignored. 0b - Not updated 1b - Updated
15-0 GPWD	Global Pin Write Data Is written to PCR n [15:0] if GPWE n = 1.

11.6.1.5 Configuration (CONFIG)


Offset

Register	Offset
CONFIG	20h

Function

Configures the port voltage range.

Diagram

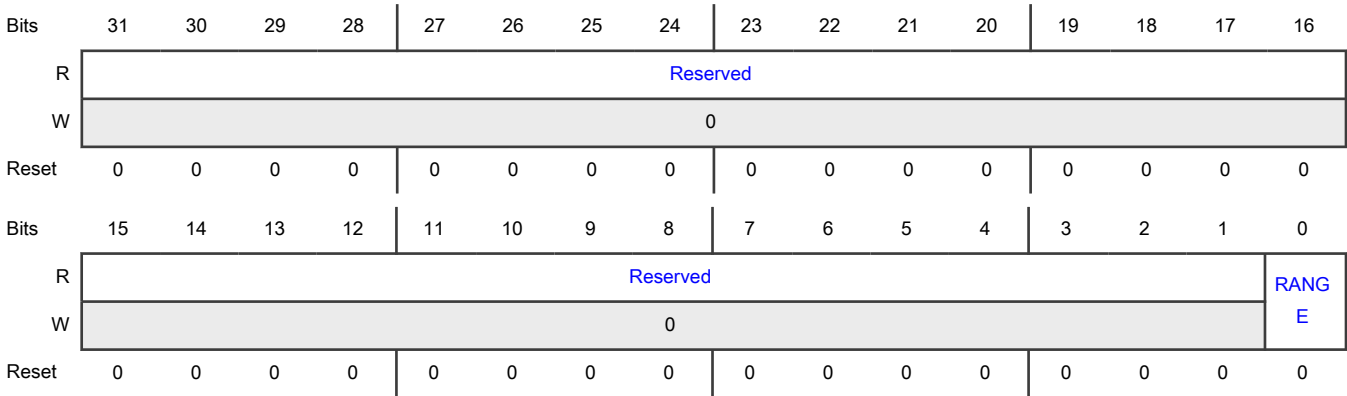

Fields

Field	Function
31-1 —	Reserved
0 RANGE	Port Voltage Range Configures the port voltage range. 0b - 1.71 V–3.6 V 1b - 2.70 V–3.6 V

11.6.1.6 Calibration 0 (CALIB0)

Offset

Register	Offset
CALIB0	60h

Function

Stores calibration values for the PMOS and NMOS output drivers when $PCRn[DSE] = 0$.

NOTE

Each module instance supports a different number of registers.


Instance	Register supported	Register not supported
PORT0	CALIB0	—
PORT1	CALIB0	—
PORT2	—	CALIB0

Table continues on the next page...

Table continued from the previous page...

Instance	Register supported	Register not supported
PORT3	CALIB0	—
PORT4	CALIB0	—

Diagram

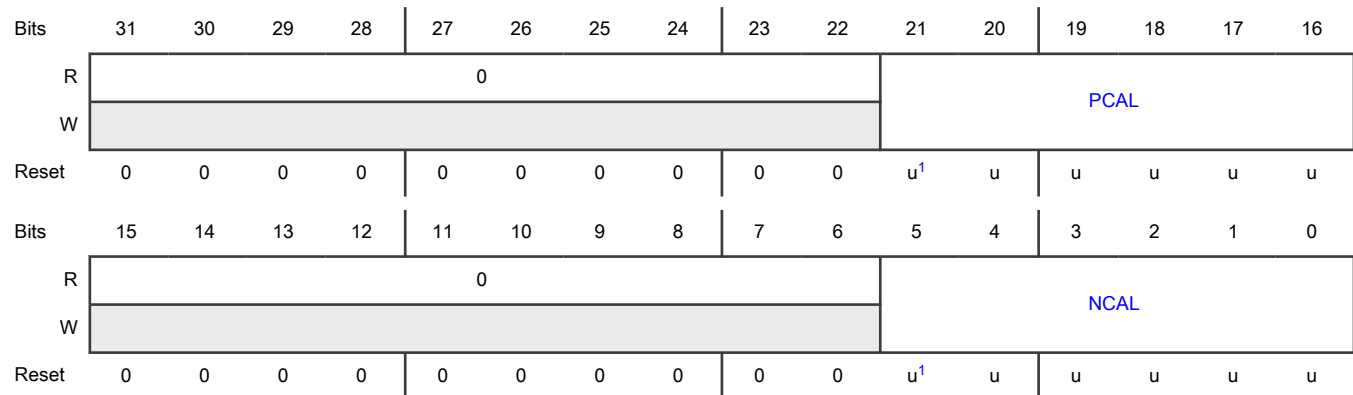

1. Reset values are loaded out of IFR.

Fields

Field	Function
31-22 —	Reserved
21-16 PCAL	Calibration of PMOS Output Driver
15-6 —	Reserved
5-0 NCAL	Calibration of NMOS Output Driver

11.6.1.7 Calibration 1 (CALIB1)

Offset

Register	Offset
CALIB1	64h

Function


Stores calibration values for the PMOS and NMOS output drivers when PCRn[DSE] = 1.

NOTE

Each module instance supports a different number of registers.

Instance	Register supported	Register not supported
PORT0	CALIB1	—
PORT1	CALIB1	—
PORT2	—	CALIB1
PORT3	CALIB1	—
PORT4	CALIB1	—

Diagram

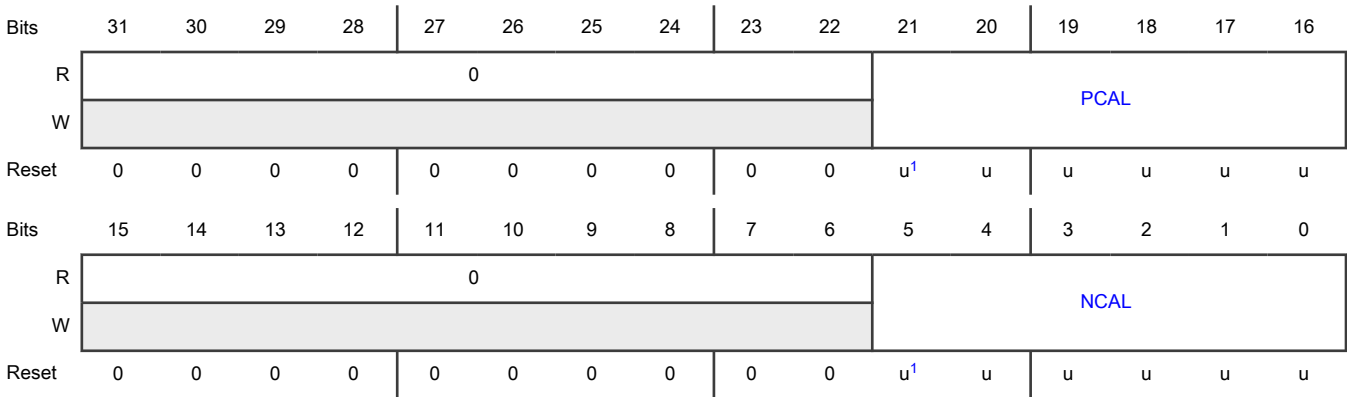

1. Reset values are loaded out of IFR.

Fields

Field	Function
31-22 —	Reserved
21-16 PCAL	Calibration of PMOS Output Driver
15-6 —	Reserved
5-0 NCAL	Calibration of NMOS Output Driver

11.6.1.8 Pin Control 0 (PCR0)

Offset

Register	Offset
PCR0	80h


Function

Configures pin control features on each pin.

NOTE

Do not modify pin configuration registers associated with pins that are unavailable in your selected package. All unbonded pins unavailable in your package default to the Disabled state for lowest power consumption.

Diagram

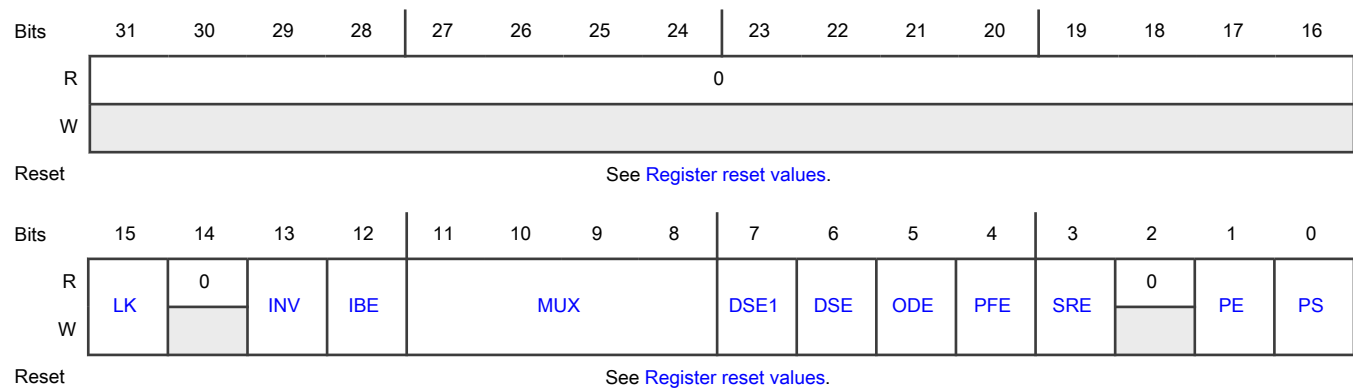

Register reset values

Register	Reset value
PCR0	PORT0: 0000_1143h PORT1–PORT4: 0000_0000h

Fields

Field	Function
31-16 —	Reserved
15 LK	Lock Register Locks this PCR. When a PCR n is locked, its fields cannot be updated until the next reset.

Table continues on the next page...

Table continued from the previous page...

Field	Function																		
	0b - Does not lock 1b - Locks																		
14 —	Reserved																		
13 INV	Invert Input Inverts the digital input. 0b - Does not invert 1b - Inverts																		
12 IBE	Input Buffer Enable Enables digital input buffer. When disabled, the digital input is required for analog functions. 0b - Disables 1b - Enables																		
11-8 MUX	Pin Multiplex Control Configures the multiplexing slots on each pin. Not all pins support all pin multiplexing slots. Unimplemented pin multiplexing slots are reserved. Unimplemented pin multiplexing slots can result in different behaviors, if the unimplemented slot is phantom (because the module is phantom on that die) versus unimplemented on the die. The corresponding pin is configured according to the following pin multiplexing slots: NOTE This field is not supported in every instance. The following table includes only supported registers. <table><tr><th>Instance</th><th>Field supported in</th><th>Field not supported in</th></tr><tr><td>PORT0</td><td>PCR0[10–8]</td><td>PCR0[11]</td></tr><tr><td>PORT1</td><td>PCR0</td><td>—</td></tr><tr><td>PORT2</td><td>PCR0</td><td>—</td></tr><tr><td>PORT3</td><td>PCR0</td><td>—</td></tr><tr><td>PORT4</td><td>PCR0[10–8]</td><td>PCR0[11]</td></tr></table>	Instance	Field supported in	Field not supported in	PORT0	PCR0[10–8]	PCR0[11]	PORT1	PCR0	—	PORT2	PCR0	—	PORT3	PCR0	—	PORT4	PCR0[10–8]	PCR0[11]
Instance	Field supported in	Field not supported in																	
PORT0	PCR0[10–8]	PCR0[11]																	
PORT1	PCR0	—																	
PORT2	PCR0	—																	
PORT3	PCR0	—																	
PORT4	PCR0[10–8]	PCR0[11]																	
NOTE The descriptions of the field settings vary by module instance.																			

Table continues on the next page...

Table continued from the previous page...

Field	Function						
	<table><tr><th>Instance</th><th>Field value and description</th></tr><tr><td>PORT0 PORT4</td><td>000b - Alternative 0 (GPIO) 001b - Alternative 1 (chip-specific) 010b - Alternative 2 (chip-specific) 011b - Alternative 3 (chip-specific) 100b - Alternative 4 (chip-specific) 101b - Alternative 5 (chip-specific) 110b - Alternative 6 (chip-specific) 111b - Alternative 7 (chip-specific)</td></tr><tr><td>PORT1 PORT2 PORT3</td><td>0000b - Alternative 0 (GPIO) 0001b - Alternative 1 (chip-specific) 0010b - Alternative 2 (chip-specific) 0011b - Alternative 3 (chip-specific) 0100b - Alternative 4 (chip-specific) 0101b - Alternative 5 (chip-specific) 0110b - Alternative 6 (chip-specific) 0111b - Alternative 7 (chip-specific) 1000b - Alternative 8 (chip-specific) 1001b - Alternative 9 (chip-specific) 1010b - Alternative 10 (chip-specific) 1011b - Alternative 11 (chip-specific) 1100b - Alternative 12 (chip-specific) 1101b - Alternative 13 (chip-specific)</td></tr></table>	Instance	Field value and description	PORT0 PORT4	000b - Alternative 0 (GPIO) 001b - Alternative 1 (chip-specific) 010b - Alternative 2 (chip-specific) 011b - Alternative 3 (chip-specific) 100b - Alternative 4 (chip-specific) 101b - Alternative 5 (chip-specific) 110b - Alternative 6 (chip-specific) 111b - Alternative 7 (chip-specific)	PORT1 PORT2 PORT3	0000b - Alternative 0 (GPIO) 0001b - Alternative 1 (chip-specific) 0010b - Alternative 2 (chip-specific) 0011b - Alternative 3 (chip-specific) 0100b - Alternative 4 (chip-specific) 0101b - Alternative 5 (chip-specific) 0110b - Alternative 6 (chip-specific) 0111b - Alternative 7 (chip-specific) 1000b - Alternative 8 (chip-specific) 1001b - Alternative 9 (chip-specific) 1010b - Alternative 10 (chip-specific) 1011b - Alternative 11 (chip-specific) 1100b - Alternative 12 (chip-specific) 1101b - Alternative 13 (chip-specific)
	Instance	Field value and description					
PORT0 PORT4	000b - Alternative 0 (GPIO) 001b - Alternative 1 (chip-specific) 010b - Alternative 2 (chip-specific) 011b - Alternative 3 (chip-specific) 100b - Alternative 4 (chip-specific) 101b - Alternative 5 (chip-specific) 110b - Alternative 6 (chip-specific) 111b - Alternative 7 (chip-specific)						
PORT1 PORT2 PORT3	0000b - Alternative 0 (GPIO) 0001b - Alternative 1 (chip-specific) 0010b - Alternative 2 (chip-specific) 0011b - Alternative 3 (chip-specific) 0100b - Alternative 4 (chip-specific) 0101b - Alternative 5 (chip-specific) 0110b - Alternative 6 (chip-specific) 0111b - Alternative 7 (chip-specific) 1000b - Alternative 8 (chip-specific) 1001b - Alternative 9 (chip-specific) 1010b - Alternative 10 (chip-specific) 1011b - Alternative 11 (chip-specific) 1100b - Alternative 12 (chip-specific) 1101b - Alternative 13 (chip-specific)						
7 DSE1	Drive Strength Enable Configures the drive strength on each pin. The drive strength configuration is valid for all digital pin multiplexing modes. • If this field = 0, normal drive strength is configured on the corresponding pin. • If this field = 1, double drive strength is configured on the corresponding pin. NOTE This field is not supported in every instance. The following table includes only supported registers.						

Table continues on the next page...

Table continued from the previous page...

Field	Function

Table continues on the next page...

Table continued from the previous page...

Field	Function																		
	See the chip's data sheet for filter characteristics. NOTE This field is not supported in every instance. The following table includes only supported registers. <table><tr><th>Instance</th><th>Field supported in</th><th>Field not supported in</th></tr><tr><td>PORT0</td><td>—</td><td>PCR0</td></tr><tr><td>PORT1</td><td>PCR0</td><td>—</td></tr><tr><td>PORT2</td><td>—</td><td>PCR0</td></tr><tr><td>PORT3</td><td>PCR0</td><td>—</td></tr><tr><td>PORT4</td><td>—</td><td>PCR0</td></tr></table> 0b - Disables 1b - Enables	Instance	Field supported in	Field not supported in	PORT0	—	PCR0	PORT1	PCR0	—	PORT2	—	PCR0	PORT3	PCR0	—	PORT4	—	PCR0
Instance	Field supported in	Field not supported in																	
PORT0	—	PCR0																	
PORT1	PCR0	—																	
PORT2	—	PCR0																	
PORT3	PCR0	—																	
PORT4	—	PCR0																	
3 SRE	Slew Rate Enable Configures the slew rate feature, fast or slow, on each corresponding pin. The slew rate configuration is valid for all digital pin multiplexing modes. 0b - Fast 1b - Slow																		
2 —	Reserved																		
1 PE	Pull Enable Enables the internal pull resistor. This configuration is valid for all digital pin multiplexing modes. - When this field = 0, the internal pull resistor is not enabled on the corresponding pin. - When this field = 1, the internal pull resistor is enabled on the corresponding pin, if the pin is configured as a digital input. 0b - Disables 1b - Enables																		
0 PS	Pull Select Enables the internal pullup or pulldown resistor.																		

Table continues on the next page...

Table continued from the previous page...

Field	Function
	This configuration is valid for all digital pin multiplexing modes. - When this field = 0, the internal pulldown resistor is enabled on the corresponding pin, if the corresponding PCRn.PE field = 1. - When this field = 1, the internal pullup resistor is enabled on the corresponding pin, if the corresponding PCRn.PE field = 1. 0b - Enables internal pulldown resistor 1b - Enables internal pullup resistor

11.6.1.9 Pin Control 1 (PCR1)

Offset

Register	Offset
PCR1	84h


Function

Configures pin control features on each pin.

NOTE

Do not modify pin configuration registers associated with pins that are unavailable in your selected package. All unbonded pins unavailable in your package default to the Disabled state for lowest power consumption.

Diagram

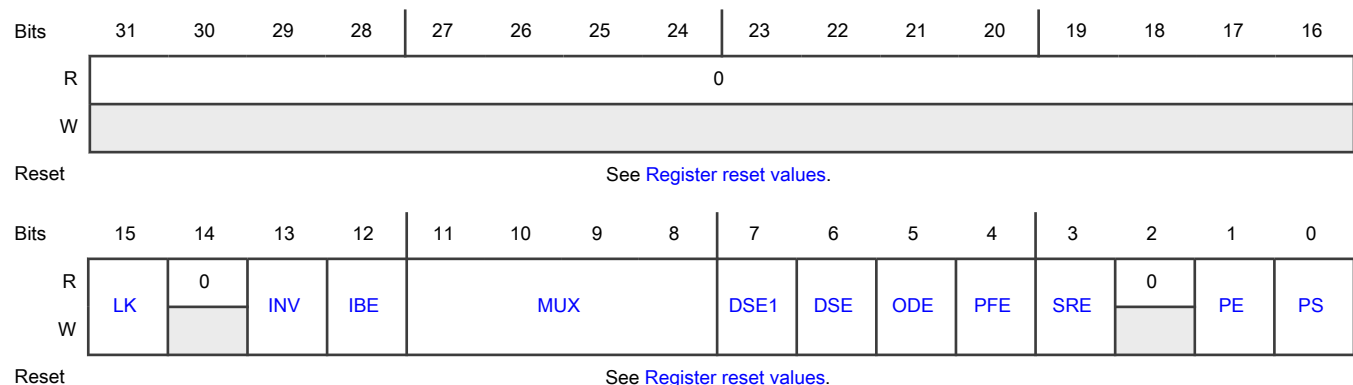

Register reset values

Register	Reset value
PCR1	PORT0: 0000_1102h PORT1–PORT4: 0000_0000h

Fields

Field	Function															
31-16 —	Reserved															
15 LK	Lock Register Locks this PCR. When a PCR <i>n</i> is locked, its fields cannot be updated until the next reset. 0b - Does not lock 1b - Locks															
14 —	Reserved															
13 INV	Invert Input Inverts the digital input. 0b - Does not invert 1b - Inverts															
12 IBE	Input Buffer Enable Enables digital input buffer. When disabled, the digital input is required for analog functions. 0b - Disables 1b - Enables															
11-8 MUX	Pin Multiplex Control Configures the multiplexing slots on each pin. Not all pins support all pin multiplexing slots. Unimplemented pin multiplexing slots are reserved. Unimplemented pin multiplexing slots can result in different behaviors, if the unimplemented slot is phantom (because the module is phantom on that die) versus unimplemented on the die. The corresponding pin is configured according to the following pin multiplexing slots: NOTE This field is not supported in every instance. The following table includes only supported registers. <table><tr><th>Instance</th><th>Field supported in</th><th>Field not supported in</th></tr><tr><td>PORT0</td><td>PCR1[10–8]</td><td>PCR1[11]</td></tr><tr><td>PORT1</td><td>PCR1</td><td>—</td></tr><tr><td>PORT2</td><td>PCR1</td><td>—</td></tr><tr><td>PORT3</td><td>PCR1</td><td>—</td></tr></table>	Instance	Field supported in	Field not supported in	PORT0	PCR1[10–8]	PCR1[11]	PORT1	PCR1	—	PORT2	PCR1	—	PORT3	PCR1	—
Instance	Field supported in	Field not supported in														
PORT0	PCR1[10–8]	PCR1[11]														
PORT1	PCR1	—														
PORT2	PCR1	—														
PORT3	PCR1	—														

Field	Function		
	Instance	Field supported in	Field not supported in
	PORT4	PCR1[10–8]	PCR1[11]
	NOTE The descriptions of the field settings vary by module instance.		
	Instance	Field value and description	
	PORT0 PORT4	000b - Alternative 0 (GPIO) 001b - Alternative 1 (chip-specific) 010b - Alternative 2 (chip-specific) 011b - Alternative 3 (chip-specific) 100b - Alternative 4 (chip-specific) 101b - Alternative 5 (chip-specific) 110b - Alternative 6 (chip-specific) 111b - Alternative 7 (chip-specific)	
PORT1 PORT2 PORT3	0000b - Alternative 0 (GPIO) 0001b - Alternative 1 (chip-specific) 0010b - Alternative 2 (chip-specific) 0011b - Alternative 3 (chip-specific) 0100b - Alternative 4 (chip-specific) 0101b - Alternative 5 (chip-specific) 0110b - Alternative 6 (chip-specific) 0111b - Alternative 7 (chip-specific) 1000b - Alternative 8 (chip-specific) 1001b - Alternative 9 (chip-specific) 1010b - Alternative 10 (chip-specific) 1011b - Alternative 11 (chip-specific) 1100b - Alternative 12 (chip-specific) 1101b - Alternative 13 (chip-specific)		
7 DSE1	Drive Strength Enable Configures the drive strength on each pin. The drive strength configuration is valid for all digital pin multiplexing modes. If this field = 0, normal drive strength is configured on the corresponding pin.		

Table continues on the next page...

Table continued from the previous page...

Field	Function
	</

Table continues on the next page...

Table continued from the previous page...

Field	Function																		
PFE	Enables passive input filter on each pin. The passive filter configuration is valid for all digital pin multiplexing modes. - When this field = 0, the passive input filter is disabled on the corresponding pin. - When this field = 1, the passive input filter is enabled on the corresponding pin, if the pin is configured as a digital input. See the chip's data sheet for filter characteristics. NOTE This field is not supported in every instance. The following table includes only supported registers. <table><tr><th>Instance</th><th>Field supported in</th><th>Field not supported in</th></tr><tr><td>PORT0</td><td>—</td><td>PCR1</td></tr><tr><td>PORT1</td><td>PCR1</td><td>—</td></tr><tr><td>PORT2</td><td>—</td><td>PCR1</td></tr><tr><td>PORT3</td><td>PCR1</td><td>—</td></tr><tr><td>PORT4</td><td>—</td><td>PCR1</td></tr></table> 0b - Disables 1b - Enables	Instance	Field supported in	Field not supported in	PORT0	—	PCR1	PORT1	PCR1	—	PORT2	—	PCR1	PORT3	PCR1	—	PORT4	—	PCR1
Instance	Field supported in	Field not supported in																	
PORT0	—	PCR1																	
PORT1	PCR1	—																	
PORT2	—	PCR1																	
PORT3	PCR1	—																	
PORT4	—	PCR1																	
3 SRE	Slew Rate Enable Configures the slew rate feature, fast or slow, on each corresponding pin. The slew rate configuration is valid for all digital pin multiplexing modes. 0b - Fast 1b - Slow																		
2 —	Reserved																		
1 PE	Pull Enable Enables the internal pull resistor. This configuration is valid for all digital pin multiplexing modes. - When this field = 0, the internal pull resistor is not enabled on the corresponding pin. - When this field = 1, the internal pull resistor is enabled on the corresponding pin, if the pin is configured as a digital input.																		

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - Disables 1b - Enables
0 PS	Pull Select Enables the internal pullup or pulldown resistor. This configuration is valid for all digital pin multiplexing modes. - When this field = 0, the internal pulldown resistor is enabled on the corresponding pin, if the corresponding PCRn.PE field = 1. - When this field = 1, the internal pullup resistor is enabled on the corresponding pin, if the corresponding PCRn.PE field = 1. 0b - Enables internal pulldown resistor 1b - Enables internal pullup resistor

11.6.1.10 Pin Control 2 (PCR2)

Offset

Register	Offset
PCR2	88h


Function

Configures pin control features on each pin.

NOTE

Do not modify pin configuration registers associated with pins that are unavailable in your selected package. All unbonded pins unavailable in your package default to the Disabled state for lowest power consumption.

Diagram

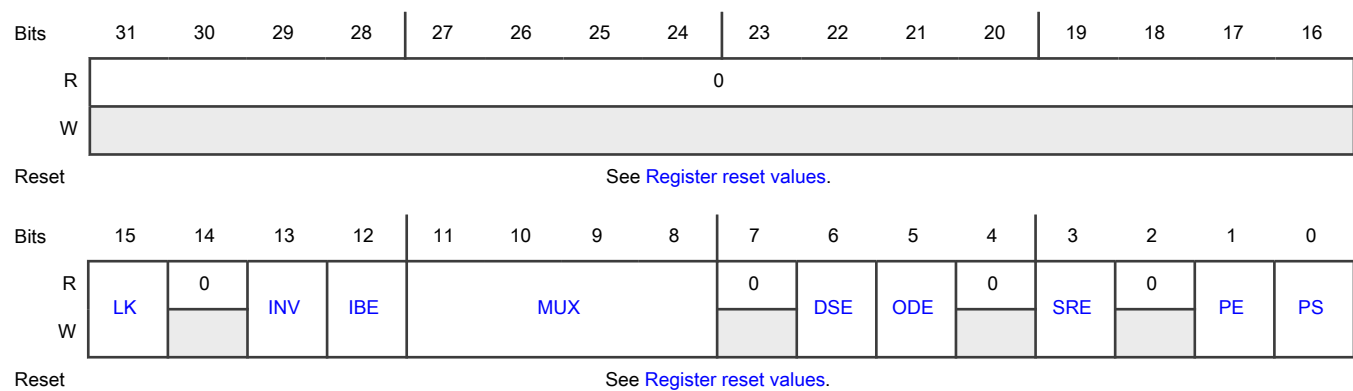

Register reset values

Register	Reset value
PCR2	PORT0: 0000_0140h PORT1–PORT4: 0000_0000h

Fields

Field	Function
31-16 —	Reserved
15 LK	Lock Register Locks this PCR. When a PCR n is locked, its fields cannot be updated until the next reset. 0b - Does not lock 1b - Locks
14 —	Reserved
13 INV	Invert Input Inverts the digital input. 0b - Does not invert 1b - Inverts
12 IBE	Input Buffer Enable Enables digital input buffer. When disabled, the digital input is required for analog functions. 0b - Disables 1b - Enables
11-8 MUX	Pin Multiplex Control Configures the multiplexing slots on each pin. Not all pins support all pin multiplexing slots. Unimplemented pin multiplexing slots are reserved. Unimplemented pin multiplexing slots can result in different behaviors, if the unimplemented slot is phantom (because the module is phantom on that die) versus unimplemented on the die. The corresponding pin is configured according to the following pin multiplexing slots: NOTE This field is not supported in every instance. The following table includes only supported registers.

Table continued from the previous page...

Field	Function		
	Instance	Field supported in	Field not supported in
	PORT0	PCR2	—
	PORT1	PCR2	—
	PORT2	PCR2[10–8]	PCR2[11]
	PORT3	PCR2	—
	PORT4	PCR2[10–8]	PCR2[11]
	NOTE The descriptions of the field settings vary by module instance.		
	Instance	Field value and description	
	PORT0 PORT1 PORT3	0000b - Alternative 0 (GPIO) 0001b - Alternative 1 (chip-specific) 0010b - Alternative 2 (chip-specific) 0011b - Alternative 3 (chip-specific) 0100b - Alternative 4 (chip-specific) 0101b - Alternative 5 (chip-specific) 0110b - Alternative 6 (chip-specific) 0111b - Alternative 7 (chip-specific) 1000b - Alternative 8 (chip-specific) 1001b - Alternative 9 (chip-specific) 1010b - Alternative 10 (chip-specific) 1011b - Alternative 11 (chip-specific) 1100b - Alternative 12 (chip-specific) 1101b - Alternative 13 (chip-specific)	
	PORT2 PORT4	000b - Alternative 0 (GPIO) 001b - Alternative 1 (chip-specific) 010b - Alternative 2 (chip-specific) 011b - Alternative 3 (chip-specific) 100b - Alternative 4 (chip-specific)	

Table continued from the previous page...

Field	Function				
	<table> <tr> <th>Instance</th><th>Field value and description</th></tr> <tr> <td></td><td> 101b - Alternative 5 (chip-specific) 110b - Alternative 6 (chip-specific) 111b - Alternative 7 (chip-specific) </td></tr> </table>	Instance	Field value and description		101b - Alternative 5 (chip-specific) 110b - Alternative 6 (chip-specific) 111b - Alternative 7 (chip-specific)
Instance	Field value and description				
	101b - Alternative 5 (chip-specific) 110b - Alternative 6 (chip-specific) 111b - Alternative 7 (chip-specific)				
7 —	Reserved				
6 DSE	Drive Strength Enable Configures drive strength, low or high, on each pin. The drive strength configuration is valid for all digital pin multiplexing modes. - When this field = 0, low drive strength is configured on the corresponding pin, if the pin is configured as a digital output. - When this field = 1, high drive strength is configured on the corresponding pin, if the pin is configured as a digital output. 0b - Low 1b - High				
5 ODE	Open Drain Enable Enables open drain output on each pin. The open drain configuration is valid for all digital pin multiplexing modes. - When this field = 0, the open drain output is disabled on the corresponding pin. - When this field = 1, the open drain output is enabled on the corresponding pin, if the pin is configured as a digital output. 0b - Disables 1b - Enables				
4 —	Reserved				
3 SRE	Slew Rate Enable Configures the slew rate feature, fast or slow, on each corresponding pin. The slew rate configuration is valid for all digital pin multiplexing modes. 0b - Fast 1b - Slow				
2	Reserved				

Table continues on the next page...

Table continued from the previous page...

Field	Function
—	
1 PE	Pull Enable Enables the internal pull resistor. This configuration is valid for all digital pin multiplexing modes. - When this field = 0, the internal pull resistor is not enabled on the corresponding pin. - When this field = 1, the internal pull resistor is enabled on the corresponding pin, if the pin is configured as a digital input. 0b - Disables 1b - Enables
0 PS	Pull Select Enables the internal pullup or pulldown resistor. This configuration is valid for all digital pin multiplexing modes. - When this field = 0, the internal pulldown resistor is enabled on the corresponding pin, if the corresponding PCRn.PE field = 1. - When this field = 1, the internal pullup resistor is enabled on the corresponding pin, if the corresponding PCRn.PE field = 1. 0b - Enables internal pulldown resistor 1b - Enables internal pullup resistor

11.6.1.11 Pin Control 3 (PCR3)

Offset

Register	Offset
PCR3	8Ch


Function

Configures pin control features on each pin.

NOTE

Do not modify pin configuration registers associated with pins that are unavailable in your selected package. All unbonded pins unavailable in your package default to the Disabled state for lowest power consumption.

Diagram

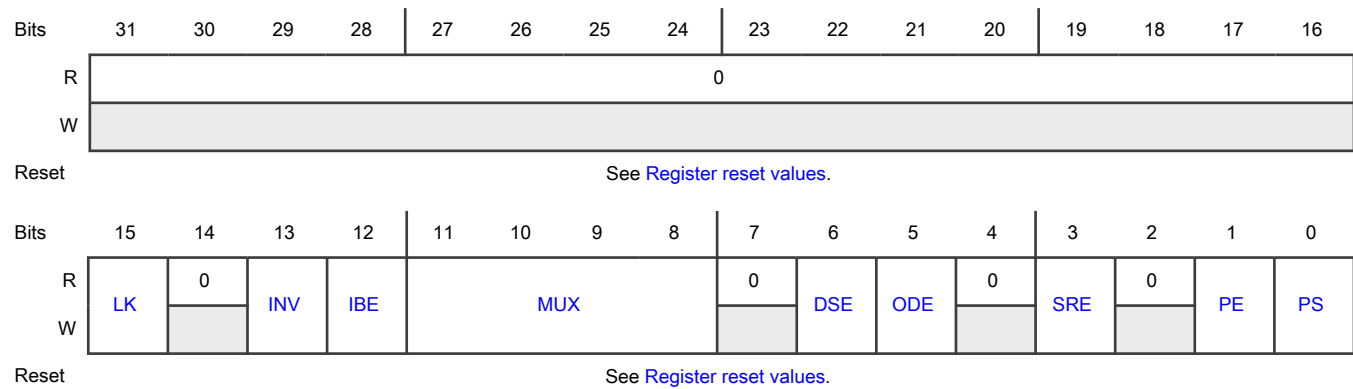

Register reset values

Register	Reset value
PCR3	PORT0: 0000_1103h PORT1–PORT4: 0000_0000h

Fields

Field	Function
31-16 —	Reserved
15 LK	Lock Register Locks this PCR. When a PCR n is locked, its fields cannot be updated until the next reset. 0b - Does not lock 1b - Locks
14 —	Reserved
13 INV	Invert Input Inverts the digital input. 0b - Does not invert 1b - Inverts
12 IBE	Input Buffer Enable Enables digital input buffer. When disabled, the digital input is required for analog functions. 0b - Disables

Table continues on the next page...

Table continued from the previous page...

Field	Function																																								
	1b - Enables																																								
11-8 MUX	Pin Multiplex Control Configures the multiplexing slots on each pin. Not all pins support all pin multiplexing slots. Unimplemented pin multiplexing slots are reserved. Unimplemented pin multiplexing slots can result in different behaviors, if the unimplemented slot is phantom (because the module is phantom on that die) versus unimplemented on the die. The corresponding pin is configured according to the following pin multiplexing slots: NOTE This field is not supported in every instance. The following table includes only supported registers. <table><tr><th>Instance</th><th>Field supported in</th><th>Field not supported in</th></tr><tr><td>PORT0</td><td>PCR3</td><td>—</td></tr><tr><td>PORT1</td><td>PCR3</td><td>—</td></tr><tr><td>PORT2</td><td>PCR3</td><td>—</td></tr><tr><td>PORT3</td><td>PCR3</td><td>—</td></tr><tr><td>PORT4</td><td>PCR3[10–8]</td><td>PCR3[11]</td></tr></table> NOTE The descriptions of the field settings vary by module instance. <table><tr><th>Instance</th><th>Field value and description</th></tr><tr><td>PORT0</td><td>0000b - Alternative 0 (GPIO)</td></tr><tr><td>PORT1</td><td>0001b - Alternative 1 (chip-specific)</td></tr><tr><td>PORT2</td><td>0010b - Alternative 2 (chip-specific)</td></tr><tr><td>PORT3</td><td>0011b - Alternative 3 (chip-specific)</td></tr><tr><td></td><td>0100b - Alternative 4 (chip-specific)</td></tr><tr><td></td><td>0101b - Alternative 5 (chip-specific)</td></tr><tr><td></td><td>0110b - Alternative 6 (chip-specific)</td></tr><tr><td></td><td>0111b - Alternative 7 (chip-specific)</td></tr><tr><td></td><td>1000b - Alternative 8 (chip-specific)</td></tr><tr><td></td><td>1001b - Alternative 9 (chip-specific)</td></tr></table>	Instance	Field supported in	Field not supported in	PORT0	PCR3	—	PORT1	PCR3	—	PORT2	PCR3	—	PORT3	PCR3	—	PORT4	PCR3[10–8]	PCR3[11]	Instance	Field value and description	PORT0	0000b - Alternative 0 (GPIO)	PORT1	0001b - Alternative 1 (chip-specific)	PORT2	0010b - Alternative 2 (chip-specific)	PORT3	0011b - Alternative 3 (chip-specific)		0100b - Alternative 4 (chip-specific)		0101b - Alternative 5 (chip-specific)		0110b - Alternative 6 (chip-specific)		0111b - Alternative 7 (chip-specific)		1000b - Alternative 8 (chip-specific)		1001b - Alternative 9 (chip-specific)
Instance	Field supported in	Field not supported in																																							
PORT0	PCR3	—																																							
PORT1	PCR3	—																																							
PORT2	PCR3	—																																							
PORT3	PCR3	—																																							
PORT4	PCR3[10–8]	PCR3[11]																																							
Instance	Field value and description																																								
PORT0	0000b - Alternative 0 (GPIO)																																								
PORT1	0001b - Alternative 1 (chip-specific)																																								
PORT2	0010b - Alternative 2 (chip-specific)																																								
PORT3	0011b - Alternative 3 (chip-specific)																																								
	0100b - Alternative 4 (chip-specific)																																								
	0101b - Alternative 5 (chip-specific)																																								
	0110b - Alternative 6 (chip-specific)																																								
	0111b - Alternative 7 (chip-specific)																																								
	1000b - Alternative 8 (chip-specific)																																								
	1001b - Alternative 9 (chip-specific)																																								

Table continued from the previous page...

Field	Function	
	Instance	Field value and description
		1010b - Alternative 10 (chip-specific) 1011b - Alternative 11 (chip-specific) 1100b - Alternative 12 (chip-specific) 1101b - Alternative 13 (chip-specific)
	PORT4	000b - Alternative 0 (GPIO) 001b - Alternative 1 (chip-specific) 010b - Alternative 2 (chip-specific) 011b - Alternative 3 (chip-specific) 100b - Alternative 4 (chip-specific) 101b - Alternative 5 (chip-specific) 110b - Alternative 6 (chip-specific) 111b - Alternative 7 (chip-specific)
7 —	Reserved	
6 DSE	Drive Strength Enable Configures drive strength, low or high, on each pin. The drive strength configuration is valid for all digital pin multiplexing modes. - When this field = 0, low drive strength is configured on the corresponding pin, if the pin is configured as a digital output. - When this field = 1, high drive strength is configured on the corresponding pin, if the pin is configured as a digital output. 0b - Low 1b - High	
5 ODE	Open Drain Enable Enables open drain output on each pin. The open drain configuration is valid for all digital pin multiplexing modes. - When this field = 0, the open drain output is disabled on the corresponding pin. - When this field = 1, the open drain output is enabled on the corresponding pin, if the pin is configured as a digital output. 0b - Disables	

Table continues on the next page...

Table continued from the previous page...

Field	Function
	1b - Enables
4 —	Reserved
3 SRE	Slew Rate Enable Configures the slew rate feature, fast or slow, on each corresponding pin. The slew rate configuration is valid for all digital pin multiplexing modes. 0b - Fast 1b - Slow
2 —	Reserved
1 PE	Pull Enable Enables the internal pull resistor. This configuration is valid for all digital pin multiplexing modes. • When this field = 0, the internal pull resistor is not enabled on the corresponding pin. • When this field = 1, the internal pull resistor is enabled on the corresponding pin, if the pin is configured as a digital input. 0b - Disables 1b - Enables
0 PS	Pull Select Enables the internal pullup or pulldown resistor. This configuration is valid for all digital pin multiplexing modes. • When this field = 0, the internal pulldown resistor is enabled on the corresponding pin, if the corresponding PCRn.PE field = 1. • When this field = 1, the internal pullup resistor is enabled on the corresponding pin, if the corresponding PCRn.PE field = 1. 0b - Enables internal pulldown resistor 1b - Enables internal pullup resistor

11.6.1.12 Pin Control a (PCR4 - PCR5)

Offset

Register	Offset
PCR4	90h
PCR5	94h

Function

Configures pin control features on each pin.

NOTE

Do not modify pin configuration registers associated with pins that are unavailable in your selected package. All unbonded pins unavailable in your package default to the Disabled state for lowest power consumption.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R		0							0			0		0		
W	LK		INV	IBE	MUX					DSE	ODE		SRE		PE	PS
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-16 —	Reserved
15 LK	Lock Register Locks this PCR. When a PCR n is locked, its fields cannot be updated until the next reset. 0b - Does not lock 1b - Locks
14 —	Reserved
13	Invert Input

Table continues on the next page...

Table continued from the previous page...

Field	Function																										
INV	Inverts the digital input. 0b - Does not invert 1b - Inverts																										
12 IBE	Input Buffer Enable Enables digital input buffer. When disabled, the digital input is required for analog functions. 0b - Disables 1b - Enables																										
11-8 MUX	Pin Multiplex Control Configures the multiplexing slots on each pin. Not all pins support all pin multiplexing slots. Unimplemented pin multiplexing slots are reserved. Unimplemented pin multiplexing slots can result in different behaviors, if the unimplemented slot is phantom (because the module is phantom on that die) versus unimplemented on the die. The corresponding pin is configured according to the following pin multiplexing slots: NOTE This field is not supported in every instance. The following table includes only supported registers. <table><tr><th>Instance</th><th>Field supported in</th><th>Field not supported in</th></tr><tr><td>PORT0</td><td>PCR4-PCR5</td><td>—</td></tr><tr><td>PORT1</td><td>PCR4-PCR5</td><td>—</td></tr><tr><td>PORT2</td><td>PCR4-PCR5[10-8]</td><td>PCR4-PCR5[11]</td></tr><tr><td>PORT3</td><td>PCR4-PCR5</td><td>—</td></tr><tr><td>PORT4</td><td>PCR4-PCR5[10-8]</td><td>PCR4-PCR5[11]</td></tr></table> NOTE The descriptions of the field settings vary by module instance. <table><tr><th>Instance</th><th>Field value and description</th></tr><tr><td>PORT0</td><td>0000b - Alternative 0 (GPIO)</td></tr><tr><td>PORT1</td><td>0001b - Alternative 1 (chip-specific)</td></tr><tr><td>PORT3</td><td>0010b - Alternative 2 (chip-specific)</td></tr></table>	Instance	Field supported in	Field not supported in	PORT0	PCR4-PCR5	—	PORT1	PCR4-PCR5	—	PORT2	PCR4-PCR5[10-8]	PCR4-PCR5[11]	PORT3	PCR4-PCR5	—	PORT4	PCR4-PCR5[10-8]	PCR4-PCR5[11]	Instance	Field value and description	PORT0	0000b - Alternative 0 (GPIO)	PORT1	0001b - Alternative 1 (chip-specific)	PORT3	0010b - Alternative 2 (chip-specific)
Instance	Field supported in	Field not supported in																									
PORT0	PCR4-PCR5	—																									
PORT1	PCR4-PCR5	—																									
PORT2	PCR4-PCR5[10-8]	PCR4-PCR5[11]																									
PORT3	PCR4-PCR5	—																									
PORT4	PCR4-PCR5[10-8]	PCR4-PCR5[11]																									
Instance	Field value and description																										
PORT0	0000b - Alternative 0 (GPIO)																										
PORT1	0001b - Alternative 1 (chip-specific)																										
PORT3	0010b - Alternative 2 (chip-specific)																										

Table continued from the previous page...

Field	Function	
	Instance	Field value and description
		0011b - Alternative 3 (chip-specific) 0100b - Alternative 4 (chip-specific) 0101b - Alternative 5 (chip-specific) 0110b - Alternative 6 (chip-specific) 0111b - Alternative 7 (chip-specific) 1000b - Alternative 8 (chip-specific) 1001b - Alternative 9 (chip-specific) 1010b - Alternative 10 (chip-specific) 1011b - Alternative 11 (chip-specific) 1100b - Alternative 12 (chip-specific) 1101b - Alternative 13 (chip-specific)
	PORT2 PORT4	000b - Alternative 0 (GPIO) 001b - Alternative 1 (chip-specific) 010b - Alternative 2 (chip-specific) 011b - Alternative 3 (chip-specific) 100b - Alternative 4 (chip-specific) 101b - Alternative 5 (chip-specific) 110b - Alternative 6 (chip-specific) 111b - Alternative 7 (chip-specific)
7	Reserved	
—		
6	Drive Strength Enable	
DSE	Configures drive strength, low or high, on each pin. The drive strength configuration is valid for all digital pin multiplexing modes. - When this field = 0, low drive strength is configured on the corresponding pin, if the pin is configured as a digital output. - When this field = 1, high drive strength is configured on the corresponding pin, if the pin is configured as a digital output. 0b - Low 1b - High	

Table continues on the next page...

Table continued from the previous page...

Field	Function
5 ODE	Open Drain Enable Enables open drain output on each pin. The open drain configuration is valid for all digital pin multiplexing modes. - When this field = 0, the open drain output is disabled on the corresponding pin. - When this field = 1, the open drain output is enabled on the corresponding pin, if the pin is configured as a digital output. 0b - Disables 1b - Enables
4 —	Reserved
3 SRE	Slew Rate Enable Configures the slew rate feature, fast or slow, on each corresponding pin. The slew rate configuration is valid for all digital pin multiplexing modes. 0b - Fast 1b - Slow
2 —	Reserved
1 PE	Pull Enable Enables the internal pull resistor. This configuration is valid for all digital pin multiplexing modes. - When this field = 0, the internal pull resistor is not enabled on the corresponding pin. - When this field = 1, the internal pull resistor is enabled on the corresponding pin, if the pin is configured as a digital input. 0b - Disables 1b - Enables
0 PS	Pull Select Enables the internal pullup or pulldown resistor. This configuration is valid for all digital pin multiplexing modes. - When this field = 0, the internal pulldown resistor is enabled on the corresponding pin, if the corresponding PCRn.PE field = 1. - When this field = 1, the internal pullup resistor is enabled on the corresponding pin, if the corresponding PCRn.PE field = 1. 0b - Enables internal pulldown resistor

Table continues on the next page...

Table continued from the previous page...

Field	Function
	1b - Enables internal pullup resistor

11.6.1.13 Pin Control 6 (PCR6)

Offset

Register	Offset
PCR6	98h


Function

Configures pin control features on each pin.

NOTE

Do not modify pin configuration registers associated with pins that are unavailable in your selected package. All unbonded pins unavailable in your package default to the Disabled state for lowest power consumption.

Diagram

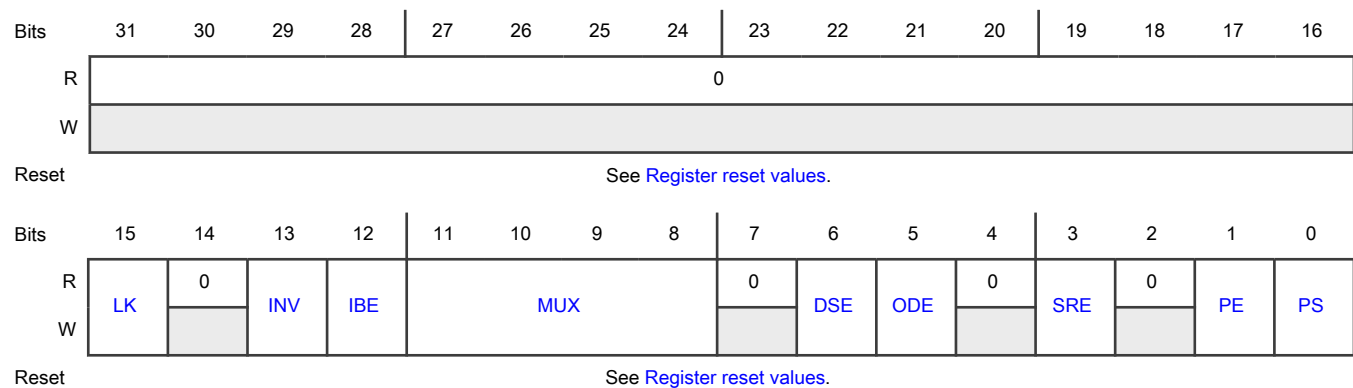

Register reset values

Register	Reset value
PCR6	PORT0: 0000_1103h PORT1–PORT4: 0000_0000h

Fields

Field	Function
31-16	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function															
—																
15 LK	Lock Register Locks this PCR. When a PCR <i>n</i> is locked, its fields cannot be updated until the next reset. 0b - Does not lock 1b - Locks															
14 —	Reserved															
13 INV	Invert Input Inverts the digital input. 0b - Does not invert 1b - Inverts															
12 IBE	Input Buffer Enable Enables digital input buffer. When disabled, the digital input is required for analog functions. 0b - Disables 1b - Enables															
11-8 MUX	Pin Multiplex Control Configures the multiplexing slots on each pin. Not all pins support all pin multiplexing slots. Unimplemented pin multiplexing slots are reserved. Unimplemented pin multiplexing slots can result in different behaviors, if the unimplemented slot is phantom (because the module is phantom on that die) versus unimplemented on the die. The corresponding pin is configured according to the following pin multiplexing slots: NOTE This field is not supported in every instance. The following table includes only supported registers. <table><tr><th>Instance</th><th>Field supported in</th><th>Field not supported in</th></tr><tr><td>PORT0</td><td>PCR6</td><td>—</td></tr><tr><td>PORT1</td><td>PCR6</td><td>—</td></tr><tr><td>PORT2</td><td>PCR6[10–8]</td><td>PCR6[11]</td></tr><tr><td>PORT3</td><td>PCR6</td><td>—</td></tr></table>	Instance	Field supported in	Field not supported in	PORT0	PCR6	—	PORT1	PCR6	—	PORT2	PCR6[10–8]	PCR6[11]	PORT3	PCR6	—
Instance	Field supported in	Field not supported in														
PORT0	PCR6	—														
PORT1	PCR6	—														
PORT2	PCR6[10–8]	PCR6[11]														
PORT3	PCR6	—														

Table continued from the previous page...

Field	Function		
	Instance	Field supported in	Field not supported in
	PORT4	PCR6[10–8]	PCR6[11]
	NOTE The descriptions of the field settings vary by module instance.		
	Instance	Field value and description	
	PORT0 PORT1 PORT3	0000b - Alternative 0 (GPIO) 0001b - Alternative 1 (chip-specific) 0010b - Alternative 2 (chip-specific) 0011b - Alternative 3 (chip-specific) 0100b - Alternative 4 (chip-specific) 0101b - Alternative 5 (chip-specific) 0110b - Alternative 6 (chip-specific) 0111b - Alternative 7 (chip-specific) 1000b - Alternative 8 (chip-specific) 1001b - Alternative 9 (chip-specific) 1010b - Alternative 10 (chip-specific) 1011b - Alternative 11 (chip-specific) 1100b - Alternative 12 (chip-specific) 1101b - Alternative 13 (chip-specific)	
	PORT2 PORT4	000b - Alternative 0 (GPIO) 001b - Alternative 1 (chip-specific) 010b - Alternative 2 (chip-specific) 011b - Alternative 3 (chip-specific) 100b - Alternative 4 (chip-specific) 101b - Alternative 5 (chip-specific) 110b - Alternative 6 (chip-specific) 111b - Alternative 7 (chip-specific)	
7	Reserved		
—			

Table continues on the next page...

Table continued from the previous page...

Field	Function
6 DSE	Drive Strength Enable Configures drive strength, low or high, on each pin. The drive strength configuration is valid for all digital pin multiplexing modes. • When this field = 0, low drive strength is configured on the corresponding pin, if the pin is configured as a digital output. • When this field = 1, high drive strength is configured on the corresponding pin, if the pin is configured as a digital output. 0b - Low 1b - High
5 ODE	Open Drain Enable Enables open drain output on each pin. The open drain configuration is valid for all digital pin multiplexing modes. • When this field = 0, the open drain output is disabled on the corresponding pin. • When this field = 1, the open drain output is enabled on the corresponding pin, if the pin is configured as a digital output. 0b - Disables 1b - Enables
4 —	Reserved
3 SRE	Slew Rate Enable Configures the slew rate feature, fast or slow, on each corresponding pin. The slew rate configuration is valid for all digital pin multiplexing modes. 0b - Fast 1b - Slow
2 —	Reserved
1 PE	Pull Enable Enables the internal pull resistor. This configuration is valid for all digital pin multiplexing modes. • When this field = 0, the internal pull resistor is not enabled on the corresponding pin. • When this field = 1, the internal pull resistor is enabled on the corresponding pin, if the pin is configured as a digital input. 0b - Disables

Table continues on the next page...

Table continued from the previous page...

Field	Function
	1b - Enables
0 PS	Pull Select Enables the internal pullup or pulldown resistor. This configuration is valid for all digital pin multiplexing modes. - When this field = 0, the internal pulldown resistor is enabled on the corresponding pin, if the corresponding PCRn.PE field = 1. - When this field = 1, the internal pullup resistor is enabled on the corresponding pin, if the corresponding PCRn.PE field = 1. 0b - Enables internal pulldown resistor 1b - Enables internal pullup resistor

11.6.1.14 Pin Control 7 (PCR7)

Offset

Register	Offset
PCR7	9Ch

Function

Configures pin control features on each pin.

NOTE

Do not modify pin configuration registers associated with pins that are unavailable in your selected package. All unbonded pins unavailable in your package default to the Disabled state for lowest power consumption.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	LK	0	INV	IBE	MUX				0	DSE	ODE	0	SRE	0	PE	PS
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function															
31-16 —	Reserved															
15 LK	Lock Register Locks this PCR. When a PCR <i>n</i> is locked, its fields cannot be updated until the next reset. 0b - Does not lock 1b - Locks															
14 —	Reserved															
13 INV	Invert Input Inverts the digital input. 0b - Does not invert 1b - Inverts															
12 IBE	Input Buffer Enable Enables digital input buffer. When disabled, the digital input is required for analog functions. 0b - Disables 1b - Enables															
11-8 MUX	Pin Multiplex Control Configures the multiplexing slots on each pin. Not all pins support all pin multiplexing slots. Unimplemented pin multiplexing slots are reserved. Unimplemented pin multiplexing slots can result in different behaviors, if the unimplemented slot is phantom (because the module is phantom on that die) versus unimplemented on the die. The corresponding pin is configured according to the following pin multiplexing slots: NOTE This field is not supported in every instance. The following table includes only supported registers. <table><tr><th>Instance</th><th>Field supported in</th><th>Field not supported in</th></tr><tr><td>PORT0</td><td>PCR7[10–8]</td><td>PCR7[11]</td></tr><tr><td>PORT1</td><td>PCR7</td><td>—</td></tr><tr><td>PORT2</td><td>PCR7</td><td>—</td></tr><tr><td>PORT3</td><td>PCR7</td><td>—</td></tr></table>	Instance	Field supported in	Field not supported in	PORT0	PCR7[10–8]	PCR7[11]	PORT1	PCR7	—	PORT2	PCR7	—	PORT3	PCR7	—
Instance	Field supported in	Field not supported in														
PORT0	PCR7[10–8]	PCR7[11]														
PORT1	PCR7	—														
PORT2	PCR7	—														
PORT3	PCR7	—														

Field	Function		
	Instance	Field supported in	Field not supported in
	PORT4	PCR7[10–8]	PCR7[11]
	NOTE The descriptions of the field settings vary by module instance.		
	Instance	Field value and description	
	PORT0 PORT4	000b - Alternative 0 (GPIO) 001b - Alternative 1 (chip-specific) 010b - Alternative 2 (chip-specific) 011b - Alternative 3 (chip-specific) 100b - Alternative 4 (chip-specific) 101b - Alternative 5 (chip-specific) 110b - Alternative 6 (chip-specific) 111b - Alternative 7 (chip-specific)	
PORT1 PORT2 PORT3	0000b - Alternative 0 (GPIO) 0001b - Alternative 1 (chip-specific) 0010b - Alternative 2 (chip-specific) 0011b - Alternative 3 (chip-specific) 0100b - Alternative 4 (chip-specific) 0101b - Alternative 5 (chip-specific) 0110b - Alternative 6 (chip-specific) 0111b - Alternative 7 (chip-specific) 1000b - Alternative 8 (chip-specific) 1001b - Alternative 9 (chip-specific) 1010b - Alternative 10 (chip-specific) 1011b - Alternative 11 (chip-specific) 1100b - Alternative 12 (chip-specific) 1101b - Alternative 13 (chip-specific)		
7 —	Reserved		
6	Drive Strength Enable		

Table continues on the next page...

Table continued from the previous page...

Field	Function
DSE	Configures drive strength, low or high, on each pin. The drive strength configuration is valid for all digital pin multiplexing modes. - When this field = 0, low drive strength is configured on the corresponding pin, if the pin is configured as a digital output. - When this field = 1, high drive strength is configured on the corresponding pin, if the pin is configured as a digital output. 0b - Low 1b - High
5 ODE	Open Drain Enable Enables open drain output on each pin. The open drain configuration is valid for all digital pin multiplexing modes. - When this field = 0, the open drain output is disabled on the corresponding pin. - When this field = 1, the open drain output is enabled on the corresponding pin, if the pin is configured as a digital output. 0b - Disables 1b - Enables
4 —	Reserved
3 SRE	Slew Rate Enable Configures the slew rate feature, fast or slow, on each corresponding pin. The slew rate configuration is valid for all digital pin multiplexing modes. 0b - Fast 1b - Slow
2 —	Reserved
1 PE	Pull Enable Enables the internal pull resistor. This configuration is valid for all digital pin multiplexing modes. - When this field = 0, the internal pull resistor is not enabled on the corresponding pin. - When this field = 1, the internal pull resistor is enabled on the corresponding pin, if the pin is configured as a digital input. 0b - Disables 1b - Enables

Table continues on the next page...

Table continued from the previous page...

Field	Function
0 PS	Pull Select Enables the internal pullup or pulldown resistor. This configuration is valid for all digital pin multiplexing modes. • When this field = 0, the internal pulldown resistor is enabled on the corresponding pin, if the corresponding PCRn.PE field = 1. • When this field = 1, the internal pullup resistor is enabled on the corresponding pin, if the corresponding PCRn.PE field = 1. 0b - Enables internal pulldown resistor 1b - Enables internal pullup resistor

11.6.1.15 Pin Control 8 (PCR8)

Offset

Register	Offset
PCR8	A0h

Function

Configures pin control features on each pin.

NOTE


Do not modify pin configuration registers associated with pins that are unavailable in your selected package. All unbonded pins unavailable in your package default to the Disabled state for lowest power consumption.

NOTE

Each module instance supports a different number of registers.

Instance	Register supported	Register not supported
PORT0	—	PCR8
PORT1	PCR8	—
PORT2	PCR8	—
PORT3	PCR8	—
PORT4	—	PCR8

Diagram

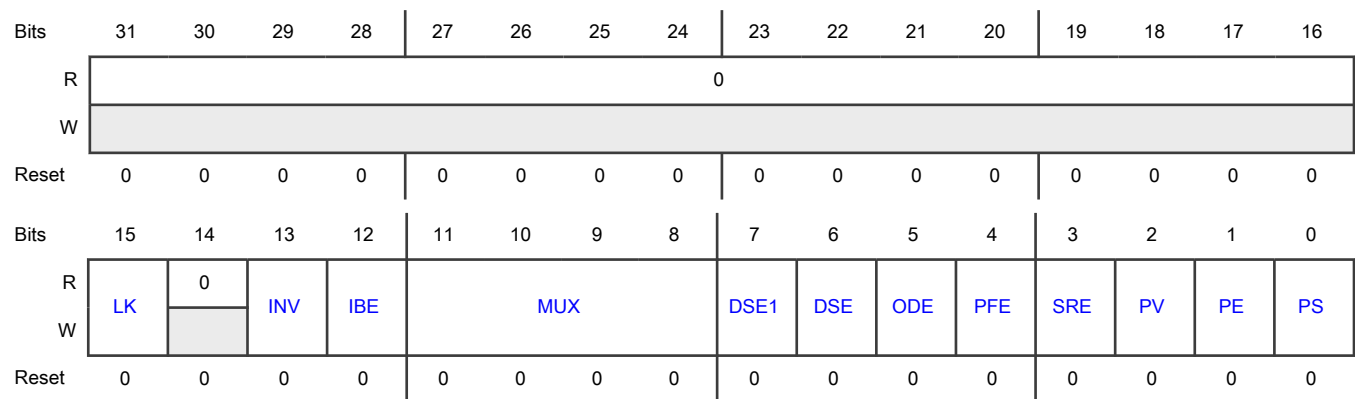

Fields

Field	Function
31-16 —	Reserved
15 LK	Lock Register Locks this PCR. When a PCR n is locked, its fields cannot be updated until the next reset. 0b - Does not lock 1b - Locks
14 —	Reserved
13 INV	Invert Input Inverts the digital input. 0b - Does not invert 1b - Inverts
12 IBE	Input Buffer Enable Enables digital input buffer. When disabled, the digital input is required for analog functions. 0b - Disables 1b - Enables
11-8 MUX	Pin Multiplex Control Configures the multiplexing slots on each pin. Not all pins support all pin multiplexing slots. Unimplemented pin multiplexing slots are reserved. Unimplemented pin multiplexing slots can result in different behaviors, if the unimplemented slot is phantom (because the module is phantom on that die) versus unimplemented on the die.

Table continued from the previous page...

Field	Function																		
	The corresponding pin is configured according to the following pin multiplexing slots: NOTE This field is not supported in every instance. The following table includes only supported registers. <table><tr><th>Instance</th><th>Field supported in</th><th>Field not supported in</th></tr><tr><td>PORT1</td><td>PCR8</td><td>—</td></tr><tr><td>PORT2</td><td>PCR8[10–8]</td><td>PCR8[11]</td></tr><tr><td>PORT3</td><td>PCR8</td><td>—</td></tr></table> NOTE The descriptions of the field settings vary by module instance. <table><tr><th>Instance</th><th>Field value and description</th></tr><tr><td>PORT1 PORT3</td><td>0000b - Alternative 0 (GPIO) 0001b - Alternative 1 (chip-specific) 0010b - Alternative 2 (chip-specific) 0011b - Alternative 3 (chip-specific) 0100b - Alternative 4 (chip-specific) 0101b - Alternative 5 (chip-specific) 0110b - Alternative 6 (chip-specific) 0111b - Alternative 7 (chip-specific) 1000b - Alternative 8 (chip-specific) 1001b - Alternative 9 (chip-specific) 1010b - Alternative 10 (chip-specific) 1011b - Alternative 11 (chip-specific) 1100b - Alternative 12 (chip-specific) 1101b - Alternative 13 (chip-specific)</td></tr><tr><td>PORT2</td><td>000b - Alternative 0 (GPIO) 001b - Alternative 1 (chip-specific) 010b - Alternative 2 (chip-specific) 011b - Alternative 3 (chip-specific)</td></tr></table>	Instance	Field supported in	Field not supported in	PORT1	PCR8	—	PORT2	PCR8[10–8]	PCR8[11]	PORT3	PCR8	—	Instance	Field value and description	PORT1 PORT3	0000b - Alternative 0 (GPIO) 0001b - Alternative 1 (chip-specific) 0010b - Alternative 2 (chip-specific) 0011b - Alternative 3 (chip-specific) 0100b - Alternative 4 (chip-specific) 0101b - Alternative 5 (chip-specific) 0110b - Alternative 6 (chip-specific) 0111b - Alternative 7 (chip-specific) 1000b - Alternative 8 (chip-specific) 1001b - Alternative 9 (chip-specific) 1010b - Alternative 10 (chip-specific) 1011b - Alternative 11 (chip-specific) 1100b - Alternative 12 (chip-specific) 1101b - Alternative 13 (chip-specific)	PORT2	000b - Alternative 0 (GPIO) 001b - Alternative 1 (chip-specific) 010b - Alternative 2 (chip-specific) 011b - Alternative 3 (chip-specific)
Instance	Field supported in	Field not supported in																	
PORT1	PCR8	—																	
PORT2	PCR8[10–8]	PCR8[11]																	
PORT3	PCR8	—																	
Instance	Field value and description																		
PORT1 PORT3	0000b - Alternative 0 (GPIO) 0001b - Alternative 1 (chip-specific) 0010b - Alternative 2 (chip-specific) 0011b - Alternative 3 (chip-specific) 0100b - Alternative 4 (chip-specific) 0101b - Alternative 5 (chip-specific) 0110b - Alternative 6 (chip-specific) 0111b - Alternative 7 (chip-specific) 1000b - Alternative 8 (chip-specific) 1001b - Alternative 9 (chip-specific) 1010b - Alternative 10 (chip-specific) 1011b - Alternative 11 (chip-specific) 1100b - Alternative 12 (chip-specific) 1101b - Alternative 13 (chip-specific)																		
PORT2	000b - Alternative 0 (GPIO) 001b - Alternative 1 (chip-specific) 010b - Alternative 2 (chip-specific) 011b - Alternative 3 (chip-specific)																		

Table continued from the previous page...

Field	Function														
	Instance	Field value and description													
		100b - Alternative 4 (chip-specific) 101b - Alternative 5 (chip-specific) 110b - Alternative 6 (chip-specific) 111b - Alternative 7 (chip-specific)													
7 DSE1	Drive Strength Enable Configures the drive strength on each pin. The drive strength configuration is valid for all digital pin multiplexing modes. If this field = 0, normal drive strength is configured on the corresponding pin. If this field = 1, double drive strength is configured on the corresponding pin. NOTE This field is not supported in every instance. The following table includes only supported registers. <table><tr><th>Instance</th><th>Field supported in</th><th>Field not supported in</th></tr><tr><td>PORT1</td><td>PCR8</td><td>—</td></tr><tr><td>PORT2</td><td>—</td><td>PCR8</td></tr><tr><td>PORT3</td><td>—</td><td>PCR8</td></tr></table> 0b - Normal 1b - Double			Instance	Field supported in	Field not supported in	PORT1	PCR8	—	PORT2	—	PCR8	PORT3	—	PCR8
Instance	Field supported in	Field not supported in													
PORT1	PCR8	—													
PORT2	—	PCR8													
PORT3	—	PCR8													
6 DSE	Drive Strength Enable Configures drive strength, low or high, on each pin. The drive strength configuration is valid for all digital pin multiplexing modes. When this field = 0, low drive strength is configured on the corresponding pin, if the pin is configured as a digital output. When this field = 1, high drive strength is configured on the corresponding pin, if the pin is configured as a digital output. 0b - Low 1b - High														
5	Open Drain Enable														

Table continues on the next page...

Table continued from the previous page...

Field	Function												
ODE	Enables open drain output on each pin. The open drain configuration is valid for all digital pin multiplexing modes. - When this field = 0, the open drain output is disabled on the corresponding pin. - When this field = 1, the open drain output is enabled on the corresponding pin, if the pin is configured as a digital output. 0b - Disables 1b - Enables												
4 PFE	Passive Filter Enable Enables passive input filter on each pin. The passive filter configuration is valid for all digital pin multiplexing modes. - When this field = 0, the passive input filter is disabled on the corresponding pin. - When this field = 1, the passive input filter is enabled on the corresponding pin, if the pin is configured as a digital input. See the chip's data sheet for filter characteristics. NOTE This field is not supported in every instance. The following table includes only supported registers. <table><tr><th>Instance</th><th>Field supported in</th><th>Field not supported in</th></tr><tr><td>PORT1</td><td>PCR8</td><td>—</td></tr><tr><td>PORT2</td><td>—</td><td>PCR8</td></tr><tr><td>PORT3</td><td>—</td><td>PCR8</td></tr></table> 0b - Disables 1b - Enables	Instance	Field supported in	Field not supported in	PORT1	PCR8	—	PORT2	—	PCR8	PORT3	—	PCR8
Instance	Field supported in	Field not supported in											
PORT1	PCR8	—											
PORT2	—	PCR8											
PORT3	—	PCR8											
3 SRE	Slew Rate Enable Configures the slew rate feature, fast or slow, on each corresponding pin. The slew rate configuration is valid for all digital pin multiplexing modes. 0b - Fast 1b - Slow												
2 PV	Pull Value Selects high or low internal pull resistor value. The pull value configuration is valid for all digital pin multiplexing modes.												

Table continues on the next page...

Table continued from the previous page...

Field	Function												
	NOTE This field is not supported in every instance. The following table includes only supported registers.												
	<table><tr><th>Instance</th><th>Field supported in</th><th>Field not supported in</th></tr><tr><td>PORT1</td><td>PCR8</td><td>—</td></tr><tr><td>PORT2</td><td>—</td><td>PCR8</td></tr><tr><td>PORT3</td><td>—</td><td>PCR8</td></tr></table>	Instance	Field supported in	Field not supported in	PORT1	PCR8	—	PORT2	—	PCR8	PORT3	—	PCR8
	Instance	Field supported in	Field not supported in										
	PORT1	PCR8	—										
	PORT2	—	PCR8										
	PORT3	—	PCR8										
0b - Low													
1b - High													
1 PE	Pull Enable Enables the internal pull resistor. This configuration is valid for all digital pin multiplexing modes. • When this field = 0, the internal pull resistor is not enabled on the corresponding pin. • When this field = 1, the internal pull resistor is enabled on the corresponding pin, if the pin is configured as a digital input. 0b - Disables 1b - Enables												
0 PS	Pull Select Enables the internal pullup or pulldown resistor. This configuration is valid for all digital pin multiplexing modes. • When this field = 0, the internal pulldown resistor is enabled on the corresponding pin, if the corresponding PCRn.PE field = 1. • When this field = 1, the internal pullup resistor is enabled on the corresponding pin, if the corresponding PCRn.PE field = 1. 0b - Enables internal pulldown resistor 1b - Enables internal pullup resistor												

11.6.1.16 Pin Control 9 (PCR9)

Offset

Register	Offset
PCR9	A4h

Function

Configures pin control features on each pin.

NOTE


Do not modify pin configuration registers associated with pins that are unavailable in your selected package. All unbonded pins unavailable in your package default to the Disabled state for lowest power consumption.

NOTE

Each module instance supports a different number of registers.

Instance	Register supported	Register not supported
PORT0	—	PCR9
PORT1	PCR9	—
PORT2	PCR9	—
PORT3	PCR9	—
PORT4	—	PCR9

Diagram

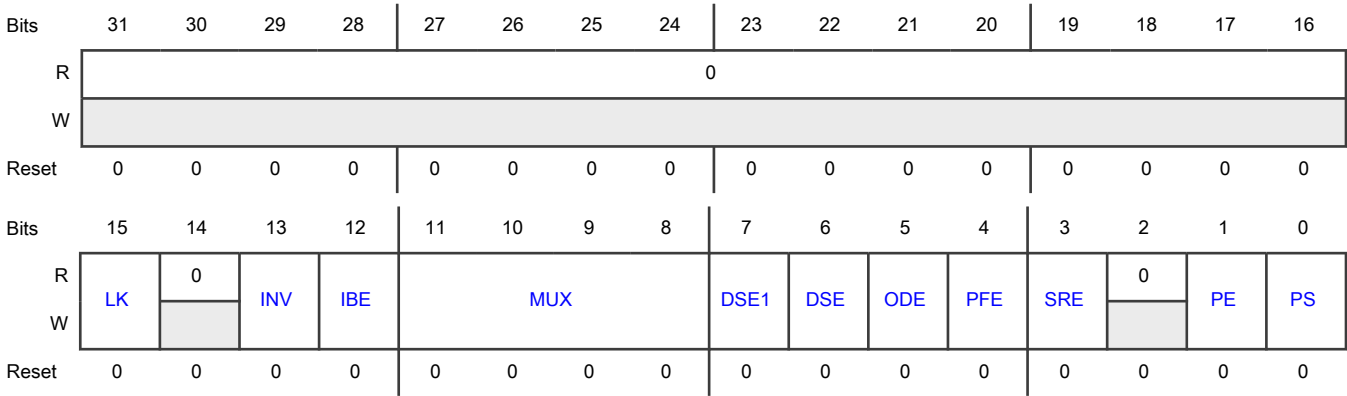

Fields

Field	Function
31-16 —	Reserved
15 LK	Lock Register Locks this PCR. When a PCR <i>n</i> is locked, its fields cannot be updated until the next reset. 0b - Does not lock

Table continues on the next page...

Table continued from the previous page...

Field	Function																
	1b - Locks																
14 —	Reserved																
13 INV	Invert Input Inverts the digital input. 0b - Does not invert 1b - Inverts																
12 IBE	Input Buffer Enable Enables digital input buffer. When disabled, the digital input is required for analog functions. 0b - Disables 1b - Enables																
11-8 MUX	Pin Multiplex Control Configures the multiplexing slots on each pin. Not all pins support all pin multiplexing slots. Unimplemented pin multiplexing slots are reserved. Unimplemented pin multiplexing slots can result in different behaviors, if the unimplemented slot is phantom (because the module is phantom on that die) versus unimplemented on the die. The corresponding pin is configured according to the following pin multiplexing slots: NOTE This field is not supported in every instance. The following table includes only supported registers. <table><tr><th>Instance</th><th>Field supported in</th><th>Field not supported in</th></tr><tr><td>PORT1</td><td>PCR9</td><td>—</td></tr><tr><td>PORT2</td><td>PCR9[10–8]</td><td>PCR9[11]</td></tr><tr><td>PORT3</td><td>PCR9</td><td>—</td></tr></table> NOTE The descriptions of the field settings vary by module instance. <table><tr><th>Instance</th><th>Field value and description</th></tr><tr><td>PORT1 PORT3</td><td>0000b - Alternative 0 (GPIO)</td></tr></table>	Instance	Field supported in	Field not supported in	PORT1	PCR9	—	PORT2	PCR9[10–8]	PCR9[11]	PORT3	PCR9	—	Instance	Field value and description	PORT1 PORT3	0000b - Alternative 0 (GPIO)
Instance	Field supported in	Field not supported in															
PORT1	PCR9	—															
PORT2	PCR9[10–8]	PCR9[11]															
PORT3	PCR9	—															
Instance	Field value and description																
PORT1 PORT3	0000b - Alternative 0 (GPIO)																

Table continued from the previous page...

Field	Function	
	Instance	Field value and description
		0001b - Alternative 1 (chip-specific) 0010b - Alternative 2 (chip-specific) 0011b - Alternative 3 (chip-specific) 0100b - Alternative 4 (chip-specific) 0101b - Alternative 5 (chip-specific) 0110b - Alternative 6 (chip-specific) 0111b - Alternative 7 (chip-specific) 1000b - Alternative 8 (chip-specific) 1001b - Alternative 9 (chip-specific) 1010b - Alternative 10 (chip-specific) 1011b - Alternative 11 (chip-specific) 1100b - Alternative 12 (chip-specific) 1101b - Alternative 13 (chip-specific)
	PORT2	000b - Alternative 0 (GPIO) 001b - Alternative 1 (chip-specific) 010b - Alternative 2 (chip-specific) 011b - Alternative 3 (chip-specific) 100b - Alternative 4 (chip-specific) 101b - Alternative 5 (chip-specific) 110b - Alternative 6 (chip-specific) 111b - Alternative 7 (chip-specific)
7 DSE1	Drive Strength Enable Configures the drive strength on each pin. The drive strength configuration is valid for all digital pin multiplexing modes. • If this field = 0, normal drive strength is configured on the corresponding pin. • If this field = 1, double drive strength is configured on the corresponding pin. NOTE This field is not supported in every instance. The following table includes only supported registers.	

Table continues on the next page...

Table continued from the previous page...

Field	Function
</	

Table continues on the next page...

Table continued from the previous page...

Field	Function												
	NOTE This field is not supported in every instance. The following table includes only supported registers.												
	<table><tr><th>Instance</th><th>Field supported in</th><th>Field not supported in</th></tr><tr><td>PORT1</td><td>PCR9</td><td>—</td></tr><tr><td>PORT2</td><td>—</td><td>PCR9</td></tr><tr><td>PORT3</td><td>—</td><td>PCR9</td></tr></table>	Instance	Field supported in	Field not supported in	PORT1	PCR9	—	PORT2	—	PCR9	PORT3	—	PCR9
	Instance	Field supported in	Field not supported in										
	PORT1	PCR9	—										
	PORT2	—	PCR9										
	PORT3	—	PCR9										
0b - Disables 1b - Enables													
3 SRE	Slew Rate Enable Configures the slew rate feature, fast or slow, on each corresponding pin. The slew rate configuration is valid for all digital pin multiplexing modes. 0b - Fast 1b - Slow												
2 —	Reserved												
1 PE	Pull Enable Enables the internal pull resistor. This configuration is valid for all digital pin multiplexing modes. • When this field = 0, the internal pull resistor is not enabled on the corresponding pin. • When this field = 1, the internal pull resistor is enabled on the corresponding pin, if the pin is configured as a digital input. 0b - Disables 1b - Enables												
0 PS	Pull Select Enables the internal pullup or pulldown resistor. This configuration is valid for all digital pin multiplexing modes. • When this field = 0, the internal pulldown resistor is enabled on the corresponding pin, if the corresponding PCR<i>n</i>.PE field = 1. • When this field = 1, the internal pullup resistor is enabled on the corresponding pin, if the corresponding PCR<i>n</i>.PE field = 1.												

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - Enables internal pulldown resistor 1b - Enables internal pullup resistor

11.6.1.17 Pin Control a (PCR10 - PCR11)

Offset

Register	Offset
PCR10	A8h
PCR11	ACh

Function

Configures pin control features on each pin.

NOTE


Do not modify pin configuration registers associated with pins that are unavailable in your selected package. All unbonded pins unavailable in your package default to the Disabled state for lowest power consumption.

NOTE

Each module instance supports a different number of registers.

Instance	Register supported	Register not supported
PORT0	—	PCR10–PCR11
PORT1	PCR10–PCR11	—
PORT2	PCR10–PCR11	—
PORT3	PCR10–PCR11	—
PORT4	—	PCR10–PCR11

Diagram

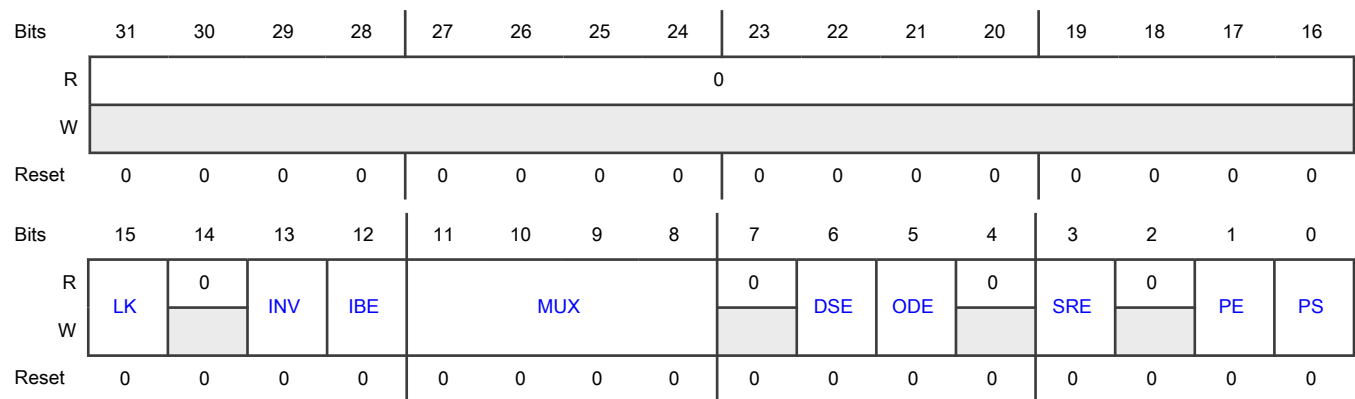

Fields

Field	Function
31-16 —	Reserved
15 LK	Lock Register Locks this PCR. When a PCR n is locked, its fields cannot be updated until the next reset. 0b - Does not lock 1b - Locks
14 —	Reserved
13 INV	Invert Input Inverts the digital input. 0b - Does not invert 1b - Inverts
12 IBE	Input Buffer Enable Enables digital input buffer. When disabled, the digital input is required for analog functions. 0b - Disables 1b - Enables
11-8 MUX	Pin Multiplex Control Configures the multiplexing slots on each pin. Not all pins support all pin multiplexing slots. Unimplemented pin multiplexing slots are reserved. Unimplemented pin multiplexing slots can result in different behaviors, if the unimplemented slot is phantom (because the module is phantom on that die) versus unimplemented on the die.

Table continued from the previous page...

Field	Function																		
	The corresponding pin is configured according to the following pin multiplexing slots: NOTE This field is not supported in every instance. The following table includes only supported registers. <table><tr><th>Instance</th><th>Field supported in</th><th>Field not supported in</th></tr><tr><td>PORT1</td><td>PCR10–PCR11</td><td>—</td></tr><tr><td>PORT2</td><td>PCR10–PCR11[10–8]</td><td>PCR10–PCR11[11]</td></tr><tr><td>PORT3</td><td>PCR10–PCR11</td><td>—</td></tr></table> NOTE The descriptions of the field settings vary by module instance. <table><tr><th>Instance</th><th>Field value and description</th></tr><tr><td>PORT1 PORT3</td><td>0000b - Alternative 0 (GPIO) 0001b - Alternative 1 (chip-specific) 0010b - Alternative 2 (chip-specific) 0011b - Alternative 3 (chip-specific) 0100b - Alternative 4 (chip-specific) 0101b - Alternative 5 (chip-specific) 0110b - Alternative 6 (chip-specific) 0111b - Alternative 7 (chip-specific) 1000b - Alternative 8 (chip-specific) 1001b - Alternative 9 (chip-specific) 1010b - Alternative 10 (chip-specific) 1011b - Alternative 11 (chip-specific) 1100b - Alternative 12 (chip-specific) 1101b - Alternative 13 (chip-specific)</td></tr><tr><td>PORT2</td><td>000b - Alternative 0 (GPIO) 001b - Alternative 1 (chip-specific) 010b - Alternative 2 (chip-specific) 011b - Alternative 3 (chip-specific)</td></tr></table>	Instance	Field supported in	Field not supported in	PORT1	PCR10–PCR11	—	PORT2	PCR10–PCR11[10–8]	PCR10–PCR11[11]	PORT3	PCR10–PCR11	—	Instance	Field value and description	PORT1 PORT3	0000b - Alternative 0 (GPIO) 0001b - Alternative 1 (chip-specific) 0010b - Alternative 2 (chip-specific) 0011b - Alternative 3 (chip-specific) 0100b - Alternative 4 (chip-specific) 0101b - Alternative 5 (chip-specific) 0110b - Alternative 6 (chip-specific) 0111b - Alternative 7 (chip-specific) 1000b - Alternative 8 (chip-specific) 1001b - Alternative 9 (chip-specific) 1010b - Alternative 10 (chip-specific) 1011b - Alternative 11 (chip-specific) 1100b - Alternative 12 (chip-specific) 1101b - Alternative 13 (chip-specific)	PORT2	000b - Alternative 0 (GPIO) 001b - Alternative 1 (chip-specific) 010b - Alternative 2 (chip-specific) 011b - Alternative 3 (chip-specific)
Instance	Field supported in	Field not supported in																	
PORT1	PCR10–PCR11	—																	
PORT2	PCR10–PCR11[10–8]	PCR10–PCR11[11]																	
PORT3	PCR10–PCR11	—																	
Instance	Field value and description																		
PORT1 PORT3	0000b - Alternative 0 (GPIO) 0001b - Alternative 1 (chip-specific) 0010b - Alternative 2 (chip-specific) 0011b - Alternative 3 (chip-specific) 0100b - Alternative 4 (chip-specific) 0101b - Alternative 5 (chip-specific) 0110b - Alternative 6 (chip-specific) 0111b - Alternative 7 (chip-specific) 1000b - Alternative 8 (chip-specific) 1001b - Alternative 9 (chip-specific) 1010b - Alternative 10 (chip-specific) 1011b - Alternative 11 (chip-specific) 1100b - Alternative 12 (chip-specific) 1101b - Alternative 13 (chip-specific)																		
PORT2	000b - Alternative 0 (GPIO) 001b - Alternative 1 (chip-specific) 010b - Alternative 2 (chip-specific) 011b - Alternative 3 (chip-specific)																		

Table continued from the previous page...

Field	Function				
	<table> <tr> <th>Instance</th><th>Field value and description</th></tr> <tr> <td></td><td> 100b - Alternative 4 (chip-specific) 101b - Alternative 5 (chip-specific) 110b - Alternative 6 (chip-specific) 111b - Alternative 7 (chip-specific) </td></tr> </table>	Instance	Field value and description		100b - Alternative 4 (chip-specific) 101b - Alternative 5 (chip-specific) 110b - Alternative 6 (chip-specific) 111b - Alternative 7 (chip-specific)
Instance	Field value and description				
	100b - Alternative 4 (chip-specific) 101b - Alternative 5 (chip-specific) 110b - Alternative 6 (chip-specific) 111b - Alternative 7 (chip-specific)				
7 —	Reserved				
6 DSE	Drive Strength Enable Configures drive strength, low or high, on each pin. The drive strength configuration is valid for all digital pin multiplexing modes. - When this field = 0, low drive strength is configured on the corresponding pin, if the pin is configured as a digital output. - When this field = 1, high drive strength is configured on the corresponding pin, if the pin is configured as a digital output. 0b - Low 1b - High				
5 ODE	Open Drain Enable Enables open drain output on each pin. The open drain configuration is valid for all digital pin multiplexing modes. - When this field = 0, the open drain output is disabled on the corresponding pin. - When this field = 1, the open drain output is enabled on the corresponding pin, if the pin is configured as a digital output. 0b - Disables 1b - Enables				
4 —	Reserved				
3 SRE	Slew Rate Enable Configures the slew rate feature, fast or slow, on each corresponding pin. The slew rate configuration is valid for all digital pin multiplexing modes. 0b - Fast 1b - Slow				

Table continues on the next page...

Table continued from the previous page...

Field	Function
2 —	Reserved
1 PE	Pull Enable Enables the internal pull resistor. This configuration is valid for all digital pin multiplexing modes. - When this field = 0, the internal pull resistor is not enabled on the corresponding pin. - When this field = 1, the internal pull resistor is enabled on the corresponding pin, if the pin is configured as a digital input. 0b - Disables 1b - Enables
0 PS	Pull Select Enables the internal pullup or pulldown resistor. This configuration is valid for all digital pin multiplexing modes. - When this field = 0, the internal pulldown resistor is enabled on the corresponding pin, if the corresponding PCRn.PE field = 1. - When this field = 1, the internal pullup resistor is enabled on the corresponding pin, if the corresponding PCRn.PE field = 1. 0b - Enables internal pulldown resistor 1b - Enables internal pullup resistor

11.6.1.18 Pin Control a (PCR12 - PCR14)

Offset

Register	Offset
PCR12	B0h
PCR13	B4h
PCR14	B8h

Function

Configures pin control features on each pin.


NOTE

Do not modify pin configuration registers associated with pins that are unavailable in your selected package. All unbonded pins unavailable in your package default to the Disabled state for lowest power consumption.

NOTE

Each module instance supports a different number of registers.

Instance	Register supported	Register not supported
PORT0	PCR12–PCR14	—
PORT1	PCR12–PCR14	—
PORT2	PCR12–PCR14	—
PORT3	PCR12–PCR14	—
PORT4	—	PCR12–PCR14

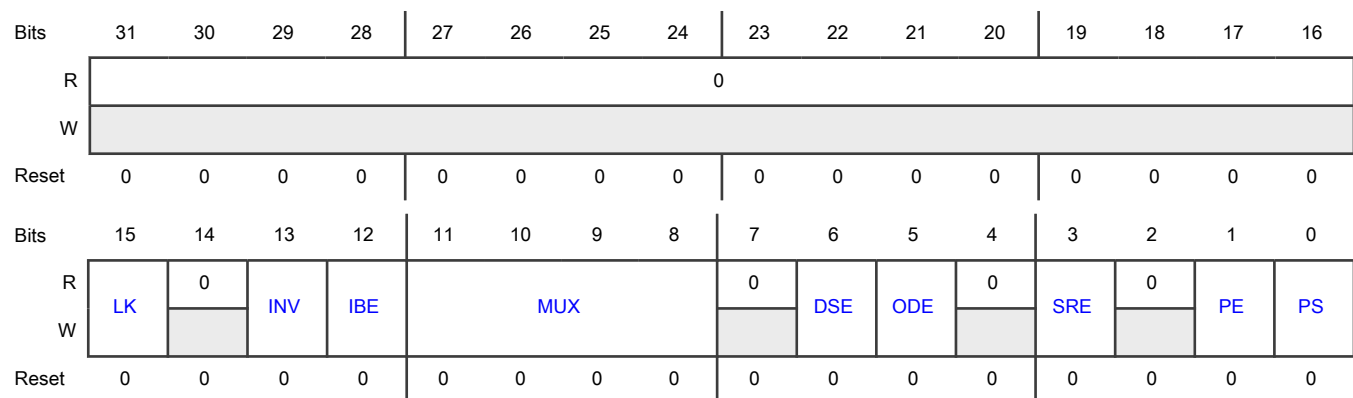Diagram**Fields**

Field	Function
31-16 —	Reserved
15 LK	Lock Register Locks this PCR. When a PCR n is locked, its fields cannot be updated until the next reset. 0b - Does not lock 1b - Locks
14 —	Reserved
13 INV	Invert Input Inverts the digital input. 0b - Does not invert 1b - Inverts

Table continues on the next page...

Table continued from the previous page...

Field	Function																																							
12 IBE	Input Buffer Enable Enables digital input buffer. When disabled, the digital input is required for analog functions. 0b - Disables 1b - Enables																																							
11-8 MUX	Pin Multiplex Control Configures the multiplexing slots on each pin. Not all pins support all pin multiplexing slots. Unimplemented pin multiplexing slots are reserved. Unimplemented pin multiplexing slots can result in different behaviors, if the unimplemented slot is phantom (because the module is phantom on that die) versus unimplemented on the die. The corresponding pin is configured according to the following pin multiplexing slots: NOTE This field is not supported in every instance. The following table includes only supported registers. <table><tr><th>Instance</th><th>Field supported in</th><th>Field not supported in</th></tr><tr><td>PORT0</td><td>PCR12–PCR14</td><td>—</td></tr><tr><td>PORT1</td><td>PCR12–PCR14</td><td>—</td></tr><tr><td>PORT2</td><td>PCR12–PCR13 PCR14[10–8]</td><td>PCR14[11]</td></tr><tr><td>PORT3</td><td>PCR12–PCR14</td><td>—</td></tr></table> NOTE The descriptions of the field settings vary by module instance. <table><tr><th>Instance</th><th>Register</th><th>Field value and description</th></tr><tr><td>PORT0</td><td>PCR12–PCR14</td><td>0000b - Alternative 0 (GPIO)</td></tr><tr><td>PORT1</td><td>PCR12–PCR14</td><td>0001b - Alternative 1 (chip-specific)</td></tr><tr><td>PORT2</td><td>PCR12–PCR13</td><td>0010b - Alternative 2 (chip-specific)</td></tr><tr><td>PORT3</td><td>PCR12–PCR14</td><td>0011b - Alternative 3 (chip-specific)</td></tr><tr><td></td><td></td><td>0100b - Alternative 4 (chip-specific)</td></tr><tr><td></td><td></td><td>0101b - Alternative 5 (chip-specific)</td></tr><tr><td></td><td></td><td>0110b - Alternative 6 (chip-specific)</td></tr></table>	Instance	Field supported in	Field not supported in	PORT0	PCR12–PCR14	—	PORT1	PCR12–PCR14	—	PORT2	PCR12–PCR13 PCR14[10–8]	PCR14[11]	PORT3	PCR12–PCR14	—	Instance	Register	Field value and description	PORT0	PCR12–PCR14	0000b - Alternative 0 (GPIO)	PORT1	PCR12–PCR14	0001b - Alternative 1 (chip-specific)	PORT2	PCR12–PCR13	0010b - Alternative 2 (chip-specific)	PORT3	PCR12–PCR14	0011b - Alternative 3 (chip-specific)			0100b - Alternative 4 (chip-specific)			0101b - Alternative 5 (chip-specific)			0110b - Alternative 6 (chip-specific)
Instance	Field supported in	Field not supported in																																						
PORT0	PCR12–PCR14	—																																						
PORT1	PCR12–PCR14	—																																						
PORT2	PCR12–PCR13 PCR14[10–8]	PCR14[11]																																						
PORT3	PCR12–PCR14	—																																						
Instance	Register	Field value and description																																						
PORT0	PCR12–PCR14	0000b - Alternative 0 (GPIO)																																						
PORT1	PCR12–PCR14	0001b - Alternative 1 (chip-specific)																																						
PORT2	PCR12–PCR13	0010b - Alternative 2 (chip-specific)																																						
PORT3	PCR12–PCR14	0011b - Alternative 3 (chip-specific)																																						
		0100b - Alternative 4 (chip-specific)																																						
		0101b - Alternative 5 (chip-specific)																																						
		0110b - Alternative 6 (chip-specific)																																						

Table continued from the previous page...

Field	Function									
	<table><tr><th>Instance</th><th>Register</th><th>Field value and description</th></tr><tr><td></td><td></td><td>0111b - Alternative 7 (chip-specific) 1000b - Alternative 8 (chip-specific) 1001b - Alternative 9 (chip-specific) 1010b - Alternative 10 (chip-specific) 1011b - Alternative 11 (chip-specific) 1100b - Alternative 12 (chip-specific) 1101b - Alternative 13 (chip-specific)</td></tr><tr><td>PORT2</td><td>PCR14</td><td>000b - Alternative 0 (GPIO) 001b - Alternative 1 (chip-specific) 010b - Alternative 2 (chip-specific) 011b - Alternative 3 (chip-specific) 100b - Alternative 4 (chip-specific) 101b - Alternative 5 (chip-specific) 110b - Alternative 6 (chip-specific) 111b - Alternative 7 (chip-specific)</td></tr></table>	Instance	Register	Field value and description			0111b - Alternative 7 (chip-specific) 1000b - Alternative 8 (chip-specific) 1001b - Alternative 9 (chip-specific) 1010b - Alternative 10 (chip-specific) 1011b - Alternative 11 (chip-specific) 1100b - Alternative 12 (chip-specific) 1101b - Alternative 13 (chip-specific)	PORT2	PCR14	000b - Alternative 0 (GPIO) 001b - Alternative 1 (chip-specific) 010b - Alternative 2 (chip-specific) 011b - Alternative 3 (chip-specific) 100b - Alternative 4 (chip-specific) 101b - Alternative 5 (chip-specific) 110b - Alternative 6 (chip-specific) 111b - Alternative 7 (chip-specific)
	Instance	Register	Field value and description							
		0111b - Alternative 7 (chip-specific) 1000b - Alternative 8 (chip-specific) 1001b - Alternative 9 (chip-specific) 1010b - Alternative 10 (chip-specific) 1011b - Alternative 11 (chip-specific) 1100b - Alternative 12 (chip-specific) 1101b - Alternative 13 (chip-specific)								
PORT2	PCR14	000b - Alternative 0 (GPIO) 001b - Alternative 1 (chip-specific) 010b - Alternative 2 (chip-specific) 011b - Alternative 3 (chip-specific) 100b - Alternative 4 (chip-specific) 101b - Alternative 5 (chip-specific) 110b - Alternative 6 (chip-specific) 111b - Alternative 7 (chip-specific)								
7 —	Reserved									
6 DSE	Drive Strength Enable Configures drive strength, low or high, on each pin. The drive strength configuration is valid for all digital pin multiplexing modes. - When this field = 0, low drive strength is configured on the corresponding pin, if the pin is configured as a digital output. - When this field = 1, high drive strength is configured on the corresponding pin, if the pin is configured as a digital output. 0b - Low 1b - High									
5 ODE	Open Drain Enable Enables open drain output on each pin. The open drain configuration is valid for all digital pin multiplexing modes. When this field = 0, the open drain output is disabled on the corresponding pin.									

Table continues on the next page...

Table continued from the previous page...

Field	Function
	When this field = 1, the open drain output is enabled on the corresponding pin, if the pin is configured as a digital output. 0b - Disables 1b - Enables
4 —	Reserved
3 SRE	Slew Rate Enable Configures the slew rate feature, fast or slow, on each corresponding pin. The slew rate configuration is valid for all digital pin multiplexing modes. 0b - Fast 1b - Slow
2 —	Reserved
1 PE	Pull Enable Enables the internal pull resistor. This configuration is valid for all digital pin multiplexing modes. - When this field = 0, the internal pull resistor is not enabled on the corresponding pin. - When this field = 1, the internal pull resistor is enabled on the corresponding pin, if the pin is configured as a digital input. 0b - Disables 1b - Enables
0 PS	Pull Select Enables the internal pullup or pulldown resistor. This configuration is valid for all digital pin multiplexing modes. - When this field = 0, the internal pulldown resistor is enabled on the corresponding pin, if the corresponding PCRn.PE field = 1. - When this field = 1, the internal pullup resistor is enabled on the corresponding pin, if the corresponding PCRn.PE field = 1. 0b - Enables internal pulldown resistor 1b - Enables internal pullup resistor

11.6.1.19 Pin Control 15 (PCR15)

Offset

Register	Offset
PCR15	BCh

Function

Configures pin control features on each pin.

NOTE


Do not modify pin configuration registers associated with pins that are unavailable in your selected package. All unbonded pins unavailable in your package default to the Disabled state for lowest power consumption.

NOTE

Each module instance supports a different number of registers.

Instance	Register supported	Register not supported
PORT0	PCR15	—
PORT1	PCR15	—
PORT2	PCR15	—
PORT3	PCR15	—
PORT4	—	PCR15

Diagram

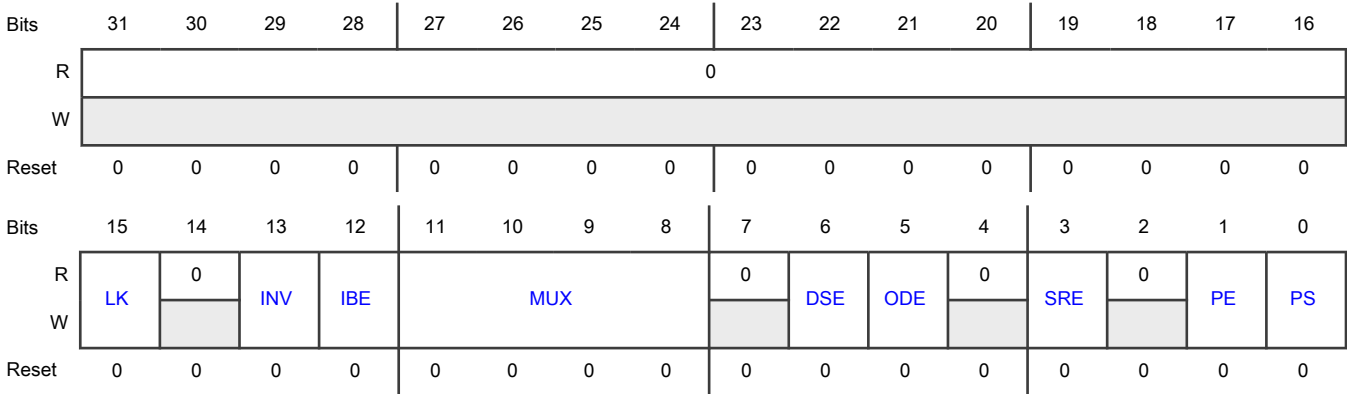

Fields

Field	Function
31-16 —	Reserved
15 LK	Lock Register Locks this PCR. When a PCRn is locked, its fields cannot be updated until the next reset. 0b - Does not lock 1b - Locks
14 —	Reserved
13 INV	Invert Input Inverts the digital input. 0b - Does not invert 1b - Inverts
12 IBE	Input Buffer Enable Enables digital input buffer. When disabled, the digital input is required for analog functions. 0b - Disables 1b - Enables
11-8 MUX	Pin Multiplex Control Configures the multiplexing slots on each pin. Not all pins support all pin multiplexing slots. Unimplemented pin multiplexing slots are reserved. Unimplemented pin multiplexing slots can result in different behaviors, if the unimplemented slot is phantom (because the module is phantom on that die) versus unimplemented on the die. The corresponding pin is configured according to the following pin multiplexing slots: 0000b - Alternative 0 (GPIO) 0001b - Alternative 1 (chip-specific) 0010b - Alternative 2 (chip-specific) 0011b - Alternative 3 (chip-specific) 0100b - Alternative 4 (chip-specific) 0101b - Alternative 5 (chip-specific) 0110b - Alternative 6 (chip-specific) 0111b - Alternative 7 (chip-specific) 1000b - Alternative 8 (chip-specific)

Table continues on the next page...

Table continued from the previous page...

Field	Function
	1001b - Alternative 9 (chip-specific) 1010b - Alternative 10 (chip-specific) 1011b - Alternative 11 (chip-specific) 1100b - Alternative 12 (chip-specific) 1101b - Alternative 13 (chip-specific)
7 —	Reserved
6 DSE	Drive Strength Enable Configures drive strength, low or high, on each pin. The drive strength configuration is valid for all digital pin multiplexing modes. - When this field = 0, low drive strength is configured on the corresponding pin, if the pin is configured as a digital output. - When this field = 1, high drive strength is configured on the corresponding pin, if the pin is configured as a digital output. 0b - Low 1b - High
5 ODE	Open Drain Enable Enables open drain output on each pin. The open drain configuration is valid for all digital pin multiplexing modes. - When this field = 0, the open drain output is disabled on the corresponding pin. - When this field = 1, the open drain output is enabled on the corresponding pin, if the pin is configured as a digital output. 0b - Disables 1b - Enables
4 —	Reserved
3 SRE	Slew Rate Enable Configures the slew rate feature, fast or slow, on each corresponding pin. The slew rate configuration is valid for all digital pin multiplexing modes. 0b - Fast 1b - Slow
2	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
—	
1 PE	Pull Enable Enables the internal pull resistor. This configuration is valid for all digital pin multiplexing modes. - When this field = 0, the internal pull resistor is not enabled on the corresponding pin. - When this field = 1, the internal pull resistor is enabled on the corresponding pin, if the pin is configured as a digital input. 0b - Disables 1b - Enables
0 PS	Pull Select Enables the internal pullup or pulldown resistor. This configuration is valid for all digital pin multiplexing modes. - When this field = 0, the internal pulldown resistor is enabled on the corresponding pin, if the corresponding PCRn.PE field = 1. - When this field = 1, the internal pullup resistor is enabled on the corresponding pin, if the corresponding PCRn.PE field = 1. 0b - Enables internal pulldown resistor 1b - Enables internal pullup resistor

11.6.1.20 Pin Control 16 (PCR16)

Offset

Register	Offset
PCR16	C0h

Function

Configures pin control features on each pin.

NOTE


Do not modify pin configuration registers associated with pins that are unavailable in your selected package. All unbonded pins unavailable in your package default to the Disabled state for lowest power consumption.

NOTE

Each module instance supports a different number of registers.

Instance	Register supported	Register not supported
PORT0	PCR16	—
PORT1	PCR16	—
PORT2	PCR16	—
PORT3	PCR16	—
PORT4	—	PCR16

Diagram

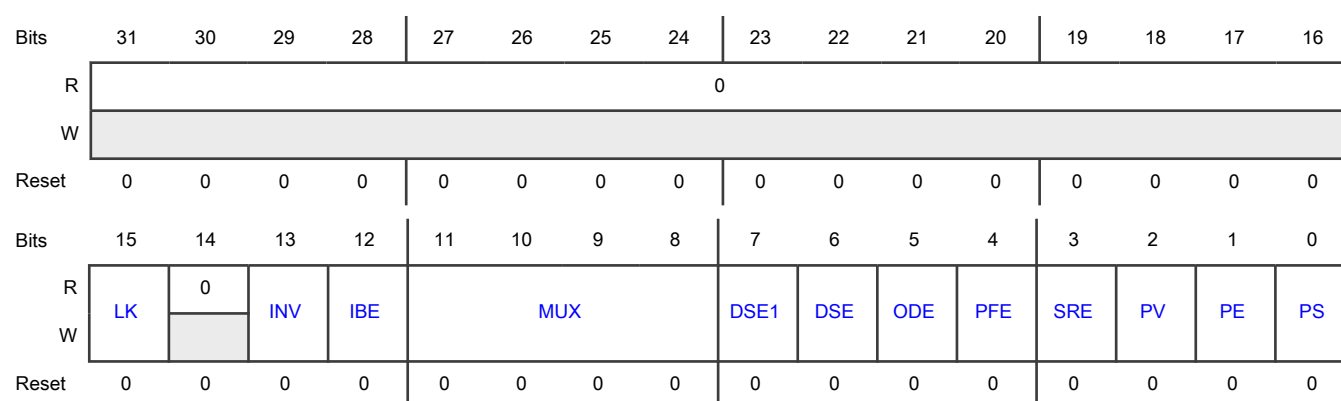

Fields

Field	Function
31-16 —	Reserved
15 LK	Lock Register Locks this PCR. When a PCR n is locked, its fields cannot be updated until the next reset. 0b - Does not lock 1b - Locks
14 —	Reserved
13 INV	Invert Input Inverts the digital input. 0b - Does not invert 1b - Inverts

Table continues on the next page...

Table continued from the previous page...

Field	Function
12 IBE	Input Buffer Enable Enables digital input buffer. When disabled, the digital input is required for analog functions. 0b - Disables 1b - Enables
11-8 MUX	Pin Multiplex Control Configures the multiplexing slots on each pin. Not all pins support all pin multiplexing slots. Unimplemented pin multiplexing slots are reserved. Unimplemented pin multiplexing slots can result in different behaviors, if the unimplemented slot is phantom (because the module is phantom on that die) versus unimplemented on the die. The corresponding pin is configured according to the following pin multiplexing slots: 0000b - Alternative 0 (GPIO) 0001b - Alternative 1 (chip-specific) 0010b - Alternative 2 (chip-specific) 0011b - Alternative 3 (chip-specific) 0100b - Alternative 4 (chip-specific) 0101b - Alternative 5 (chip-specific) 0110b - Alternative 6 (chip-specific) 0111b - Alternative 7 (chip-specific) 1000b - Alternative 8 (chip-specific) 1001b - Alternative 9 (chip-specific) 1010b - Alternative 10 (chip-specific) 1011b - Alternative 11 (chip-specific) 1100b - Alternative 12 (chip-specific) 1101b - Alternative 13 (chip-specific)
7 DSE1	Drive Strength Enable Configures the drive strength on each pin. The drive strength configuration is valid for all digital pin multiplexing modes. • If this field = 0, normal drive strength is configured on the corresponding pin. • If this field = 1, double drive strength is configured on the corresponding pin. NOTE This field is not supported in every instance. The following table includes only supported registers.

Table continues on the next page...

Table continued from the previous page...

Field	Function

Table continues on the next page...

Table continued from the previous page...

Field	Function															
	NOTE This field is not supported in every instance. The following table includes only supported registers.															
	<table><tr><th>Instance</th><th>Field supported in</th><th>Field not supported in</th></tr><tr><td>PORT0</td><td>PCR16</td><td>—</td></tr><tr><td>PORT1</td><td>—</td><td>PCR16</td></tr><tr><td>PORT2</td><td>—</td><td>PCR16</td></tr><tr><td>PORT3</td><td>—</td><td>PCR16</td></tr></table>	Instance	Field supported in	Field not supported in	PORT0	PCR16	—	PORT1	—	PCR16	PORT2	—	PCR16	PORT3	—	PCR16
	Instance	Field supported in	Field not supported in													
	PORT0	PCR16	—													
	PORT1	—	PCR16													
	PORT2	—	PCR16													
	PORT3	—	PCR16													
0b - Disables 1b - Enables																
3	Slew Rate Enable															
SRE	Configures the slew rate feature, fast or slow, on each corresponding pin. The slew rate configuration is valid for all digital pin multiplexing modes. 0b - Fast 1b - Slow															
2	Pull Value															
	Selects high or low internal pull resistor value.															
	The pull value configuration is valid for all digital pin multiplexing modes.															
	NOTE This field is not supported in every instance. The following table includes only supported registers.															
	<table><tr><th>Instance</th><th>Field supported in</th><th>Field not supported in</th></tr><tr><td>PORT0</td><td>PCR16</td><td>—</td></tr><tr><td>PORT1</td><td>—</td><td>PCR16</td></tr><tr><td>PORT2</td><td>—</td><td>PCR16</td></tr><tr><td>PORT3</td><td>—</td><td>PCR16</td></tr></table>	Instance	Field supported in	Field not supported in	PORT0	PCR16	—	PORT1	—	PCR16	PORT2	—	PCR16	PORT3	—	PCR16
	Instance	Field supported in	Field not supported in													
	PORT0	PCR16	—													
PORT1	—	PCR16														
PORT2	—	PCR16														
PORT3	—	PCR16														
0b - Low																
PV																

Table continues on the next page...

Table continued from the previous page...

Field	Function
	1b - High
1 PE	Pull Enable Enables the internal pull resistor. This configuration is valid for all digital pin multiplexing modes. - When this field = 0, the internal pull resistor is not enabled on the corresponding pin. - When this field = 1, the internal pull resistor is enabled on the corresponding pin, if the pin is configured as a digital input. 0b - Disables 1b - Enables
0 PS	Pull Select Enables the internal pullup or pulldown resistor. This configuration is valid for all digital pin multiplexing modes. - When this field = 0, the internal pulldown resistor is enabled on the corresponding pin, if the corresponding PCRn.PE field = 1. - When this field = 1, the internal pullup resistor is enabled on the corresponding pin, if the corresponding PCRn.PE field = 1. 0b - Enables internal pulldown resistor 1b - Enables internal pullup resistor

11.6.1.21 Pin Control 17 (PCR17)

Offset

Register	Offset
PCR17	C4h

Function

Configures pin control features on each pin.


NOTE

Do not modify pin configuration registers associated with pins that are unavailable in your selected package. All unbonded pins unavailable in your package default to the Disabled state for lowest power consumption.

NOTE

Each module instance supports a different number of registers.

Instance	Register supported	Register not supported
PORT0	PCR17	—
PORT1	PCR17	—
PORT2	PCR17	—
PORT3	PCR17	—
PORT4	—	PCR17

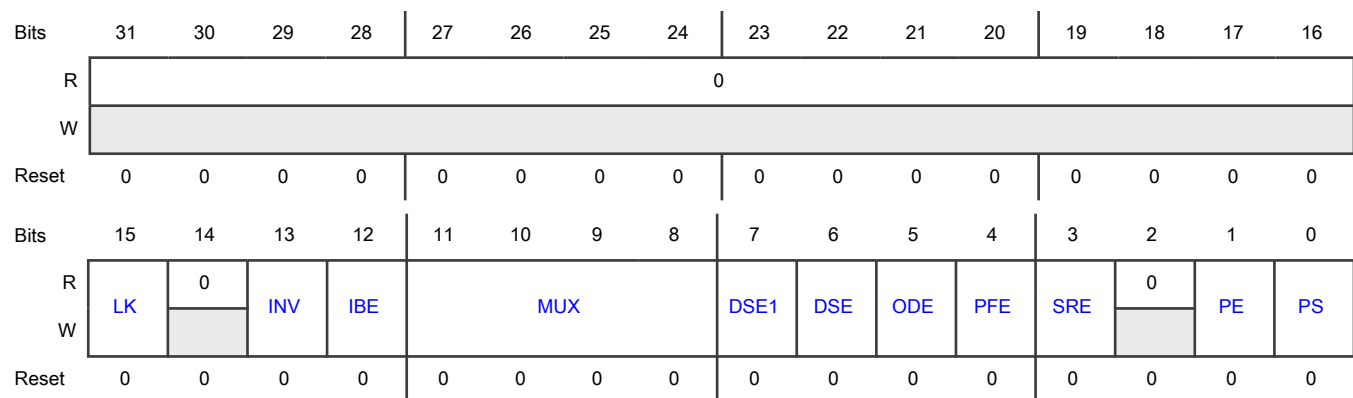Diagram**Fields**

Field	Function
31-16 —	Reserved
15 LK	Lock Register Locks this PCR. When a PCR n is locked, its fields cannot be updated until the next reset. 0b - Does not lock 1b - Locks
14 —	Reserved
13 INV	Invert Input Inverts the digital input. 0b - Does not invert 1b - Inverts

Table continues on the next page...

Table continued from the previous page...

Field	Function																																	
12 IBE	Input Buffer Enable Enables digital input buffer. When disabled, the digital input is required for analog functions. 0b - Disables 1b - Enables																																	
11-8 MUX	Pin Multiplex Control Configures the multiplexing slots on each pin. Not all pins support all pin multiplexing slots. Unimplemented pin multiplexing slots are reserved. Unimplemented pin multiplexing slots can result in different behaviors, if the unimplemented slot is phantom (because the module is phantom on that die) versus unimplemented on the die. The corresponding pin is configured according to the following pin multiplexing slots: NOTE This field is not supported in every instance. The following table includes only supported registers. <table><tr><th>Instance</th><th>Field supported in</th><th>Field not supported in</th></tr><tr><td>PORT0</td><td>PCR17</td><td>—</td></tr><tr><td>PORT1</td><td>PCR17</td><td>—</td></tr><tr><td>PORT2</td><td>PCR17[10–8]</td><td>PCR17[11]</td></tr><tr><td>PORT3</td><td>PCR17</td><td>—</td></tr></table> NOTE The descriptions of the field settings vary by module instance. <table><tr><th>Instance</th><th>Field value and description</th></tr><tr><td>PORT0</td><td>0000b - Alternative 0 (GPIO)</td></tr><tr><td>PORT1</td><td>0001b - Alternative 1 (chip-specific)</td></tr><tr><td>PORT3</td><td>0010b - Alternative 2 (chip-specific)</td></tr><tr><td></td><td>0011b - Alternative 3 (chip-specific)</td></tr><tr><td></td><td>0100b - Alternative 4 (chip-specific)</td></tr><tr><td></td><td>0101b - Alternative 5 (chip-specific)</td></tr><tr><td></td><td>0110b - Alternative 6 (chip-specific)</td></tr><tr><td></td><td>0111b - Alternative 7 (chip-specific)</td></tr></table>	Instance	Field supported in	Field not supported in	PORT0	PCR17	—	PORT1	PCR17	—	PORT2	PCR17[10–8]	PCR17[11]	PORT3	PCR17	—	Instance	Field value and description	PORT0	0000b - Alternative 0 (GPIO)	PORT1	0001b - Alternative 1 (chip-specific)	PORT3	0010b - Alternative 2 (chip-specific)		0011b - Alternative 3 (chip-specific)		0100b - Alternative 4 (chip-specific)		0101b - Alternative 5 (chip-specific)		0110b - Alternative 6 (chip-specific)		0111b - Alternative 7 (chip-specific)
Instance	Field supported in	Field not supported in																																
PORT0	PCR17	—																																
PORT1	PCR17	—																																
PORT2	PCR17[10–8]	PCR17[11]																																
PORT3	PCR17	—																																
Instance	Field value and description																																	
PORT0	0000b - Alternative 0 (GPIO)																																	
PORT1	0001b - Alternative 1 (chip-specific)																																	
PORT3	0010b - Alternative 2 (chip-specific)																																	
	0011b - Alternative 3 (chip-specific)																																	
	0100b - Alternative 4 (chip-specific)																																	
	0101b - Alternative 5 (chip-specific)																																	
	0110b - Alternative 6 (chip-specific)																																	
	0111b - Alternative 7 (chip-specific)																																	

Table continued from the previous page...

Field	Function																	
	Instance	Field value and description																
		1000b - Alternative 8 (chip-specific) 1001b - Alternative 9 (chip-specific) 1010b - Alternative 10 (chip-specific) 1011b - Alternative 11 (chip-specific) 1100b - Alternative 12 (chip-specific) 1101b - Alternative 13 (chip-specific)																
	PORT2	000b - Alternative 0 (GPIO) 001b - Alternative 1 (chip-specific) 010b - Alternative 2 (chip-specific) 011b - Alternative 3 (chip-specific) 100b - Alternative 4 (chip-specific) 101b - Alternative 5 (chip-specific) 110b - Alternative 6 (chip-specific) 111b - Alternative 7 (chip-specific)																
7 DSE1	Drive Strength Enable Configures the drive strength on each pin. The drive strength configuration is valid for all digital pin multiplexing modes. If this field = 0, normal drive strength is configured on the corresponding pin. If this field = 1, double drive strength is configured on the corresponding pin. NOTE This field is not supported in every instance. The following table includes only supported registers. <table><tr><th>Instance</th><th>Field supported in</th><th>Field not supported in</th></tr><tr><td>PORT0</td><td>PCR17</td><td>—</td></tr><tr><td>PORT1</td><td>—</td><td>PCR17</td></tr><tr><td>PORT2</td><td>—</td><td>PCR17</td></tr><tr><td>PORT3</td><td>—</td><td>PCR17</td></tr></table>			Instance	Field supported in	Field not supported in	PORT0	PCR17	—	PORT1	—	PCR17	PORT2	—	PCR17	PORT3	—	PCR17
Instance	Field supported in	Field not supported in																
PORT0	PCR17	—																
PORT1	—	PCR17																
PORT2	—	PCR17																
PORT3	—	PCR17																

Table continues on the next page...

Table continued from the previous page...

Field	Function									
	0b - Normal 1b - Double									
6 DSE	Drive Strength Enable Configures drive strength, low or high, on each pin. The drive strength configuration is valid for all digital pin multiplexing modes. - When this field = 0, low drive strength is configured on the corresponding pin, if the pin is configured as a digital output. - When this field = 1, high drive strength is configured on the corresponding pin, if the pin is configured as a digital output. 0b - Low 1b - High									
5 ODE	Open Drain Enable Enables open drain output on each pin. The open drain configuration is valid for all digital pin multiplexing modes. - When this field = 0, the open drain output is disabled on the corresponding pin. - When this field = 1, the open drain output is enabled on the corresponding pin, if the pin is configured as a digital output. 0b - Disables 1b - Enables									
4 PFE	Passive Filter Enable Enables passive input filter on each pin. The passive filter configuration is valid for all digital pin multiplexing modes. - When this field = 0, the passive input filter is disabled on the corresponding pin. - When this field = 1, the passive input filter is enabled on the corresponding pin, if the pin is configured as a digital input. See the chip's data sheet for filter characteristics. NOTE This field is not supported in every instance. The following table includes only supported registers. <table><tr><th>Instance</th><th>Field supported in</th><th>Field not supported in</th></tr><tr><td>PORT0</td><td>PCR17</td><td>—</td></tr><tr><td>PORT1</td><td>—</td><td>PCR17</td></tr></table>	Instance	Field supported in	Field not supported in	PORT0	PCR17	—	PORT1	—	PCR17
Instance	Field supported in	Field not supported in								
PORT0	PCR17	—								
PORT1	—	PCR17								

Table continues on the next page...

Table continued from the previous page...

Field	Function									
	<table><tr><th>Instance</th><th>Field supported in</th><th>Field not supported in</th></tr><tr><td>PORT2</td><td>—</td><td>PCR17</td></tr><tr><td>PORT3</td><td>—</td><td>PCR17</td></tr></table>	Instance	Field supported in	Field not supported in	PORT2	—	PCR17	PORT3	—	PCR17
	Instance	Field supported in	Field not supported in							
	PORT2	—	PCR17							
	PORT3	—	PCR17							
0b - Disables 1b - Enables										
3 SRE	Slew Rate Enable Configures the slew rate feature, fast or slow, on each corresponding pin. The slew rate configuration is valid for all digital pin multiplexing modes. 0b - Fast 1b - Slow									
2 —	Reserved									
1 PE	Pull Enable Enables the internal pull resistor. This configuration is valid for all digital pin multiplexing modes. - When this field = 0, the internal pull resistor is not enabled on the corresponding pin. - When this field = 1, the internal pull resistor is enabled on the corresponding pin, if the pin is configured as a digital input. 0b - Disables 1b - Enables									
0 PS	Pull Select Enables the internal pullup or pulldown resistor. This configuration is valid for all digital pin multiplexing modes. - When this field = 0, the internal pulldown resistor is enabled on the corresponding pin, if the corresponding PCRn.PE field = 1. - When this field = 1, the internal pullup resistor is enabled on the corresponding pin, if the corresponding PCRn.PE field = 1. 0b - Enables internal pulldown resistor 1b - Enables internal pullup resistor									

11.6.1.22 Pin Control a (PCR18 - PCR19)

Offset

Register	Offset
PCR18	C8h
PCR19	CCh

Function

Configures pin control features on each pin.

NOTE


Do not modify pin configuration registers associated with pins that are unavailable in your selected package. All unbonded pins unavailable in your package default to the Disabled state for lowest power consumption.

NOTE

Each module instance supports a different number of registers.

Instance	Register supported	Register not supported
PORT0	PCR18–PCR19	—
PORT1	PCR18–PCR19	—
PORT2	PCR18–PCR19	—
PORT3	PCR18–PCR19	—
PORT4	—	PCR18–PCR19

Diagram

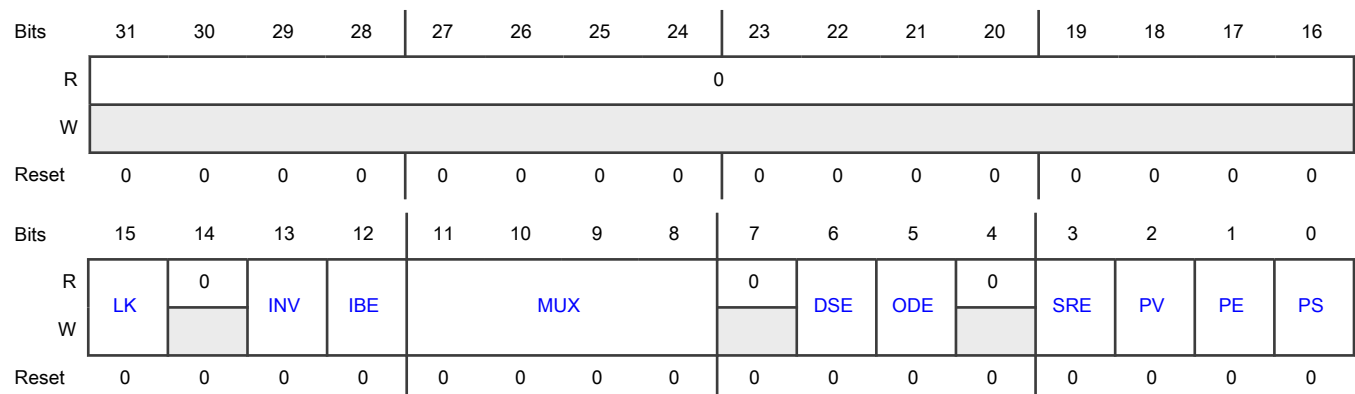

Fields

Field	Function
31-16 —	Reserved
15 LK	Lock Register Locks this PCR. When a PCR n is locked, its fields cannot be updated until the next reset. 0b - Does not lock 1b - Locks
14 —	Reserved
13 INV	Invert Input Inverts the digital input. 0b - Does not invert 1b - Inverts
12 IBE	Input Buffer Enable Enables digital input buffer. When disabled, the digital input is required for analog functions. 0b - Disables 1b - Enables

Table continued from the previous page...

Field	Function																																									
11-8 MUX	Pin Multiplex Control Configures the multiplexing slots on each pin. Not all pins support all pin multiplexing slots. Unimplemented pin multiplexing slots are reserved. Unimplemented pin multiplexing slots can result in different behaviors, if the unimplemented slot is phantom (because the module is phantom on that die) versus unimplemented on the die. The corresponding pin is configured according to the following pin multiplexing slots: NOTE This field is not supported in every instance. The following table includes only supported registers. <table><tr><th>Instance</th><th>Field supported in</th><th>Field not supported in</th></tr><tr><td>PORT0</td><td>PCR18–PCR19</td><td>—</td></tr><tr><td>PORT1</td><td>PCR18–PCR19</td><td>—</td></tr><tr><td>PORT2</td><td>PCR18–PCR19[10–8]</td><td>PCR18–PCR19[11]</td></tr><tr><td>PORT3</td><td>PCR18–PCR19</td><td>—</td></tr></table> NOTE The descriptions of the field settings vary by module instance. <table><tr><th>Instance</th><th>Field value and description</th></tr><tr><td>PORT0</td><td>0000b - Alternative 0 (GPIO)</td></tr><tr><td>PORT1</td><td>0001b - Alternative 1 (chip-specific)</td></tr><tr><td>PORT3</td><td>0010b - Alternative 2 (chip-specific)</td></tr><tr><td></td><td>0011b - Alternative 3 (chip-specific)</td></tr><tr><td></td><td>0100b - Alternative 4 (chip-specific)</td></tr><tr><td></td><td>0101b - Alternative 5 (chip-specific)</td></tr><tr><td></td><td>0110b - Alternative 6 (chip-specific)</td></tr><tr><td></td><td>0111b - Alternative 7 (chip-specific)</td></tr><tr><td></td><td>1000b - Alternative 8 (chip-specific)</td></tr><tr><td></td><td>1001b - Alternative 9 (chip-specific)</td></tr><tr><td></td><td>1010b - Alternative 10 (chip-specific)</td></tr><tr><td></td><td>1011b - Alternative 11 (chip-specific)</td></tr></table>	Instance	Field supported in	Field not supported in	PORT0	PCR18–PCR19	—	PORT1	PCR18–PCR19	—	PORT2	PCR18–PCR19[10–8]	PCR18–PCR19[11]	PORT3	PCR18–PCR19	—	Instance	Field value and description	PORT0	0000b - Alternative 0 (GPIO)	PORT1	0001b - Alternative 1 (chip-specific)	PORT3	0010b - Alternative 2 (chip-specific)		0011b - Alternative 3 (chip-specific)		0100b - Alternative 4 (chip-specific)		0101b - Alternative 5 (chip-specific)		0110b - Alternative 6 (chip-specific)		0111b - Alternative 7 (chip-specific)		1000b - Alternative 8 (chip-specific)		1001b - Alternative 9 (chip-specific)		1010b - Alternative 10 (chip-specific)		1011b - Alternative 11 (chip-specific)
Instance	Field supported in	Field not supported in																																								
PORT0	PCR18–PCR19	—																																								
PORT1	PCR18–PCR19	—																																								
PORT2	PCR18–PCR19[10–8]	PCR18–PCR19[11]																																								
PORT3	PCR18–PCR19	—																																								
Instance	Field value and description																																									
PORT0	0000b - Alternative 0 (GPIO)																																									
PORT1	0001b - Alternative 1 (chip-specific)																																									
PORT3	0010b - Alternative 2 (chip-specific)																																									
	0011b - Alternative 3 (chip-specific)																																									
	0100b - Alternative 4 (chip-specific)																																									
	0101b - Alternative 5 (chip-specific)																																									
	0110b - Alternative 6 (chip-specific)																																									
	0111b - Alternative 7 (chip-specific)																																									
	1000b - Alternative 8 (chip-specific)																																									
	1001b - Alternative 9 (chip-specific)																																									
	1010b - Alternative 10 (chip-specific)																																									
	1011b - Alternative 11 (chip-specific)																																									

Table continued from the previous page...

Field	Function

Table continues on the next page...

Table continued from the previous page...

Field	Function															
—																
3 SRE	Slew Rate Enable Configures the slew rate feature, fast or slow, on each corresponding pin. The slew rate configuration is valid for all digital pin multiplexing modes. 0b - Fast 1b - Slow															
2 PV	Pull Value Selects high or low internal pull resistor value. The pull value configuration is valid for all digital pin multiplexing modes. NOTE This field is not supported in every instance. The following table includes only supported registers. <table><tr><th>Instance</th><th>Field supported in</th><th>Field not supported in</th></tr><tr><td>PORT0</td><td>—</td><td>PCR18–PCR19</td></tr><tr><td>PORT1</td><td>—</td><td>PCR18–PCR19</td></tr><tr><td>PORT2</td><td>—</td><td>PCR18–PCR19</td></tr><tr><td>PORT3</td><td>PCR18–PCR19</td><td>—</td></tr></table> 0b - Low 1b - High	Instance	Field supported in	Field not supported in	PORT0	—	PCR18–PCR19	PORT1	—	PCR18–PCR19	PORT2	—	PCR18–PCR19	PORT3	PCR18–PCR19	—
Instance	Field supported in	Field not supported in														
PORT0	—	PCR18–PCR19														
PORT1	—	PCR18–PCR19														
PORT2	—	PCR18–PCR19														
PORT3	PCR18–PCR19	—														
1 PE	Pull Enable Enables the internal pull resistor. This configuration is valid for all digital pin multiplexing modes. - When this field = 0, the internal pull resistor is not enabled on the corresponding pin. - When this field = 1, the internal pull resistor is enabled on the corresponding pin, if the pin is configured as a digital input. 0b - Disables 1b - Enables															
0 PS	Pull Select Enables the internal pullup or pulldown resistor. This configuration is valid for all digital pin multiplexing modes.															

Table continues on the next page...

Table continued from the previous page...

Field	Function
	- When this field = 0, the internal pulldown resistor is enabled on the corresponding pin, if the corresponding PCRn.PE field = 1. - When this field = 1, the internal pullup resistor is enabled on the corresponding pin, if the corresponding PCRn.PE field = 1. 0b - Enables internal pulldown resistor 1b - Enables internal pullup resistor

11.6.1.23 Pin Control a (PCR20 - PCR24)

Offset

Register	Offset
PCR20	D0h
PCR21	D4h
PCR22	D8h
PCR23	DCh
PCR24	E0h

Function

Configures pin control features on each pin.

NOTE


Do not modify pin configuration registers associated with pins that are unavailable in your selected package. All unbonded pins unavailable in your package default to the Disabled state for lowest power consumption.

NOTE

Each module instance supports a different number of registers.

Instance	Register supported	Register not supported
PORT0	PCR20–PCR24	—
PORT1	—	PCR20–PCR24
PORT2	PCR20–PCR24	—
PORT3	PCR20–PCR24	—
PORT4	—	PCR20–PCR24

Diagram

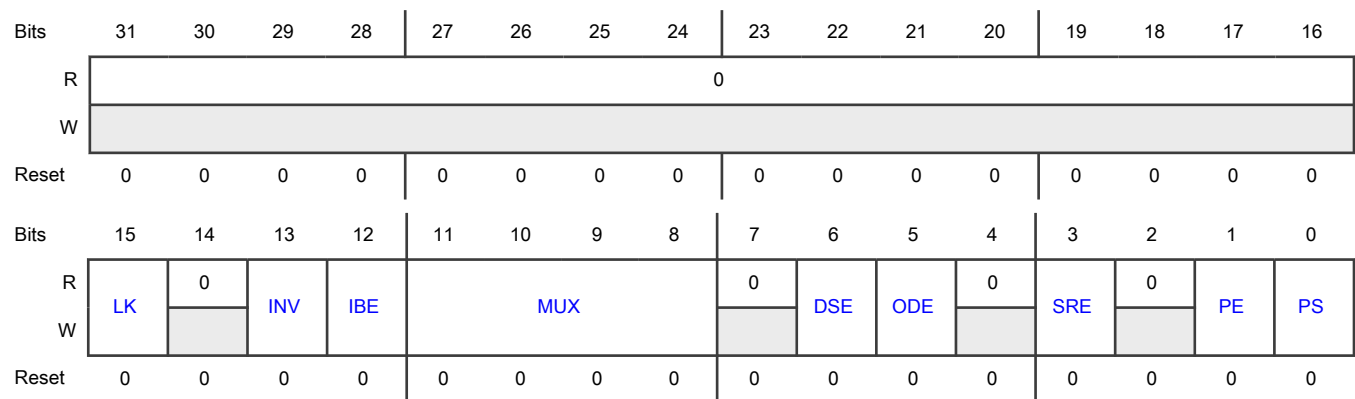

Fields

Field	Function
31-16 —	Reserved
15 LK	Lock Register Locks this PCR. When a PCR n is locked, its fields cannot be updated until the next reset. 0b - Does not lock 1b - Locks
14 —	Reserved
13 INV	Invert Input Inverts the digital input. 0b - Does not invert 1b - Inverts
12 IBE	Input Buffer Enable Enables digital input buffer. When disabled, the digital input is required for analog functions. 0b - Disables 1b - Enables
11-8 MUX	Pin Multiplex Control Configures the multiplexing slots on each pin. Not all pins support all pin multiplexing slots. Unimplemented pin multiplexing slots are reserved. Unimplemented pin multiplexing slots can result in different behaviors, if the unimplemented slot is phantom (because the module is phantom on that die) versus unimplemented on the die.

Table continued from the previous page...

Field	Function																		
	The corresponding pin is configured according to the following pin multiplexing slots: NOTE This field is not supported in every instance. The following table includes only supported registers. <table><tr><th>Instance</th><th>Field supported in</th><th>Field not supported in</th></tr><tr><td>PORT0</td><td>PCR20–PCR24</td><td>—</td></tr><tr><td>PORT2</td><td>PCR20–PCR24[10–8]</td><td>PCR20–PCR24[11]</td></tr><tr><td>PORT3</td><td>PCR20–PCR24</td><td>—</td></tr></table> NOTE The descriptions of the field settings vary by module instance. <table><tr><th>Instance</th><th>Field value and description</th></tr><tr><td>PORT0 PORT3</td><td>0000b - Alternative 0 (GPIO) 0001b - Alternative 1 (chip-specific) 0010b - Alternative 2 (chip-specific) 0011b - Alternative 3 (chip-specific) 0100b - Alternative 4 (chip-specific) 0101b - Alternative 5 (chip-specific) 0110b - Alternative 6 (chip-specific) 0111b - Alternative 7 (chip-specific) 1000b - Alternative 8 (chip-specific) 1001b - Alternative 9 (chip-specific) 1010b - Alternative 10 (chip-specific) 1011b - Alternative 11 (chip-specific) 1100b - Alternative 12 (chip-specific) 1101b - Alternative 13 (chip-specific)</td></tr><tr><td>PORT2</td><td>000b - Alternative 0 (GPIO) 001b - Alternative 1 (chip-specific) 010b - Alternative 2 (chip-specific) 011b - Alternative 3 (chip-specific)</td></tr></table>	Instance	Field supported in	Field not supported in	PORT0	PCR20–PCR24	—	PORT2	PCR20–PCR24[10–8]	PCR20–PCR24[11]	PORT3	PCR20–PCR24	—	Instance	Field value and description	PORT0 PORT3	0000b - Alternative 0 (GPIO) 0001b - Alternative 1 (chip-specific) 0010b - Alternative 2 (chip-specific) 0011b - Alternative 3 (chip-specific) 0100b - Alternative 4 (chip-specific) 0101b - Alternative 5 (chip-specific) 0110b - Alternative 6 (chip-specific) 0111b - Alternative 7 (chip-specific) 1000b - Alternative 8 (chip-specific) 1001b - Alternative 9 (chip-specific) 1010b - Alternative 10 (chip-specific) 1011b - Alternative 11 (chip-specific) 1100b - Alternative 12 (chip-specific) 1101b - Alternative 13 (chip-specific)	PORT2	000b - Alternative 0 (GPIO) 001b - Alternative 1 (chip-specific) 010b - Alternative 2 (chip-specific) 011b - Alternative 3 (chip-specific)
Instance	Field supported in	Field not supported in																	
PORT0	PCR20–PCR24	—																	
PORT2	PCR20–PCR24[10–8]	PCR20–PCR24[11]																	
PORT3	PCR20–PCR24	—																	
Instance	Field value and description																		
PORT0 PORT3	0000b - Alternative 0 (GPIO) 0001b - Alternative 1 (chip-specific) 0010b - Alternative 2 (chip-specific) 0011b - Alternative 3 (chip-specific) 0100b - Alternative 4 (chip-specific) 0101b - Alternative 5 (chip-specific) 0110b - Alternative 6 (chip-specific) 0111b - Alternative 7 (chip-specific) 1000b - Alternative 8 (chip-specific) 1001b - Alternative 9 (chip-specific) 1010b - Alternative 10 (chip-specific) 1011b - Alternative 11 (chip-specific) 1100b - Alternative 12 (chip-specific) 1101b - Alternative 13 (chip-specific)																		
PORT2	000b - Alternative 0 (GPIO) 001b - Alternative 1 (chip-specific) 010b - Alternative 2 (chip-specific) 011b - Alternative 3 (chip-specific)																		

Table continued from the previous page...

Field	Function				
	<table> <tr> <th>Instance</th><th>Field value and description</th></tr> <tr> <td></td><td> 100b - Alternative 4 (chip-specific) 101b - Alternative 5 (chip-specific) 110b - Alternative 6 (chip-specific) 111b - Alternative 7 (chip-specific) </td></tr> </table>	Instance	Field value and description		100b - Alternative 4 (chip-specific) 101b - Alternative 5 (chip-specific) 110b - Alternative 6 (chip-specific) 111b - Alternative 7 (chip-specific)
Instance	Field value and description				
	100b - Alternative 4 (chip-specific) 101b - Alternative 5 (chip-specific) 110b - Alternative 6 (chip-specific) 111b - Alternative 7 (chip-specific)				
7 —	Reserved				
6 DSE	Drive Strength Enable Configures drive strength, low or high, on each pin. The drive strength configuration is valid for all digital pin multiplexing modes. - When this field = 0, low drive strength is configured on the corresponding pin, if the pin is configured as a digital output. - When this field = 1, high drive strength is configured on the corresponding pin, if the pin is configured as a digital output. 0b - Low 1b - High				
5 ODE	Open Drain Enable Enables open drain output on each pin. The open drain configuration is valid for all digital pin multiplexing modes. - When this field = 0, the open drain output is disabled on the corresponding pin. - When this field = 1, the open drain output is enabled on the corresponding pin, if the pin is configured as a digital output. 0b - Disables 1b - Enables				
4 —	Reserved				
3 SRE	Slew Rate Enable Configures the slew rate feature, fast or slow, on each corresponding pin. The slew rate configuration is valid for all digital pin multiplexing modes. 0b - Fast 1b - Slow				

Table continues on the next page...

Table continued from the previous page...

Field	Function
2 —	Reserved
1 PE	Pull Enable Enables the internal pull resistor. This configuration is valid for all digital pin multiplexing modes. - When this field = 0, the internal pull resistor is not enabled on the corresponding pin. - When this field = 1, the internal pull resistor is enabled on the corresponding pin, if the pin is configured as a digital input. 0b - Disables 1b - Enables
0 PS	Pull Select Enables the internal pullup or pulldown resistor. This configuration is valid for all digital pin multiplexing modes. - When this field = 0, the internal pulldown resistor is enabled on the corresponding pin, if the corresponding PCRn.PE field = 1. - When this field = 1, the internal pullup resistor is enabled on the corresponding pin, if the corresponding PCRn.PE field = 1. 0b - Enables internal pulldown resistor 1b - Enables internal pullup resistor

11.6.1.24 Pin Control a (PCR25 - PCR26)

Offset

Register	Offset
PCR25	E4h
PCR26	E8h

Function

Configures pin control features on each pin.

NOTE


Do not modify pin configuration registers associated with pins that are unavailable in your selected package. All unbonded pins unavailable in your package default to the Disabled state for lowest power consumption.

NOTE

Each module instance supports a different number of registers.

Instance	Register supported	Register not supported
PORT0	PCR25–PCR26	—
PORT1	—	PCR25–PCR26
PORT2	PCR25–PCR26	—
PORT3	PCR25–PCR26	—
PORT4	—	PCR25–PCR26

Diagram

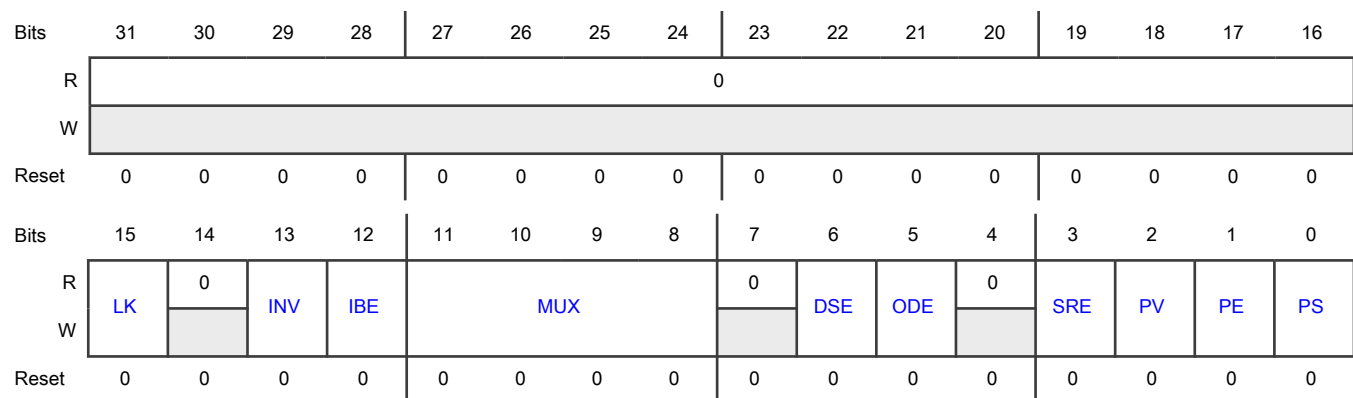

Fields

Field	Function
31-16 —	Reserved
15 LK	Lock Register Locks this PCR. When a PCR n is locked, its fields cannot be updated until the next reset. 0b - Does not lock 1b - Locks
14 —	Reserved
13 INV	Invert Input Inverts the digital input. 0b - Does not invert 1b - Inverts

Table continues on the next page...

Table continued from the previous page...

Field	Function																
12 IBE	Input Buffer Enable Enables digital input buffer. When disabled, the digital input is required for analog functions. 0b - Disables 1b - Enables																
11-8 MUX	Pin Multiplex Control Configures the multiplexing slots on each pin. Not all pins support all pin multiplexing slots. Unimplemented pin multiplexing slots are reserved. Unimplemented pin multiplexing slots can result in different behaviors, if the unimplemented slot is phantom (because the module is phantom on that die) versus unimplemented on the die. The corresponding pin is configured according to the following pin multiplexing slots: NOTE This field is not supported in every instance. The following table includes only supported registers. <table><tr><th>Instance</th><th>Field supported in</th><th>Field not supported in</th></tr><tr><td>PORT0</td><td>PCR25–PCR26</td><td>—</td></tr><tr><td>PORT2</td><td>PCR25–PCR26[10–8]</td><td>PCR25–PCR26[11]</td></tr><tr><td>PORT3</td><td>PCR25–PCR26</td><td>—</td></tr></table> NOTE The descriptions of the field settings vary by module instance. <table><tr><th>Instance</th><th>Field value and description</th></tr><tr><td>PORT0 PORT3</td><td>0000b - Alternative 0 (GPIO) 0001b - Alternative 1 (chip-specific) 0010b - Alternative 2 (chip-specific) 0011b - Alternative 3 (chip-specific) 0100b - Alternative 4 (chip-specific) 0101b - Alternative 5 (chip-specific) 0110b - Alternative 6 (chip-specific) 0111b - Alternative 7 (chip-specific) 1000b - Alternative 8 (chip-specific)</td></tr></table>	Instance	Field supported in	Field not supported in	PORT0	PCR25–PCR26	—	PORT2	PCR25–PCR26[10–8]	PCR25–PCR26[11]	PORT3	PCR25–PCR26	—	Instance	Field value and description	PORT0 PORT3	0000b - Alternative 0 (GPIO) 0001b - Alternative 1 (chip-specific) 0010b - Alternative 2 (chip-specific) 0011b - Alternative 3 (chip-specific) 0100b - Alternative 4 (chip-specific) 0101b - Alternative 5 (chip-specific) 0110b - Alternative 6 (chip-specific) 0111b - Alternative 7 (chip-specific) 1000b - Alternative 8 (chip-specific)
Instance	Field supported in	Field not supported in															
PORT0	PCR25–PCR26	—															
PORT2	PCR25–PCR26[10–8]	PCR25–PCR26[11]															
PORT3	PCR25–PCR26	—															
Instance	Field value and description																
PORT0 PORT3	0000b - Alternative 0 (GPIO) 0001b - Alternative 1 (chip-specific) 0010b - Alternative 2 (chip-specific) 0011b - Alternative 3 (chip-specific) 0100b - Alternative 4 (chip-specific) 0101b - Alternative 5 (chip-specific) 0110b - Alternative 6 (chip-specific) 0111b - Alternative 7 (chip-specific) 1000b - Alternative 8 (chip-specific)																

Table continued from the previous page...

Field	Function
	</

Table continues on the next page...

Table continued from the previous page...

Field	Function												
	0b - Disables 1b - Enables												
4 —	Reserved												
3 SRE	Slew Rate Enable Configures the slew rate feature, fast or slow, on each corresponding pin. The slew rate configuration is valid for all digital pin multiplexing modes. 0b - Fast 1b - Slow												
2 PV	Pull Value Selects high or low internal pull resistor value. The pull value configuration is valid for all digital pin multiplexing modes. NOTE This field is not supported in every instance. The following table includes only supported registers. <table><tr><th>Instance</th><th>Field supported in</th><th>Field not supported in</th></tr><tr><td>PORT0</td><td>—</td><td>PCR25–PCR26</td></tr><tr><td>PORT2</td><td>—</td><td>PCR25–PCR26</td></tr><tr><td>PORT3</td><td>PCR25–PCR26</td><td>—</td></tr></table> 0b - Low 1b - High	Instance	Field supported in	Field not supported in	PORT0	—	PCR25–PCR26	PORT2	—	PCR25–PCR26	PORT3	PCR25–PCR26	—
Instance	Field supported in	Field not supported in											
PORT0	—	PCR25–PCR26											
PORT2	—	PCR25–PCR26											
PORT3	PCR25–PCR26	—											
1 PE	Pull Enable Enables the internal pull resistor. This configuration is valid for all digital pin multiplexing modes. • When this field = 0, the internal pull resistor is not enabled on the corresponding pin. • When this field = 1, the internal pull resistor is enabled on the corresponding pin, if the pin is configured as a digital input. 0b - Disables 1b - Enables												
0	Pull Select												

Table continues on the next page...

Table continued from the previous page...

Field	Function
PS	Enables the internal pullup or pulldown resistor. This configuration is valid for all digital pin multiplexing modes. - When this field = 0, the internal pulldown resistor is enabled on the corresponding pin, if the corresponding PCRn.PE field = 1. - When this field = 1, the internal pullup resistor is enabled on the corresponding pin, if the corresponding PCRn.PE field = 1. 0b - Enables internal pulldown resistor 1b - Enables internal pullup resistor

11.6.1.25 Pin Control a (PCR27 - PCR28)

Offset

Register	Offset
PCR27	ECh
PCR28	F0h

Function

Configures pin control features on each pin.


NOTE

Do not modify pin configuration registers associated with pins that are unavailable in your selected package. All unbonded pins unavailable in your package default to the Disabled state for lowest power consumption.

NOTE

Each module instance supports a different number of registers.

Instance	Register supported	Register not supported
PORT0	PCR27	PCR28
PORT1	—	PCR27–PCR28
PORT2	—	PCR27–PCR28
PORT3	PCR27–PCR28	—
PORT4	—	PCR27–PCR28

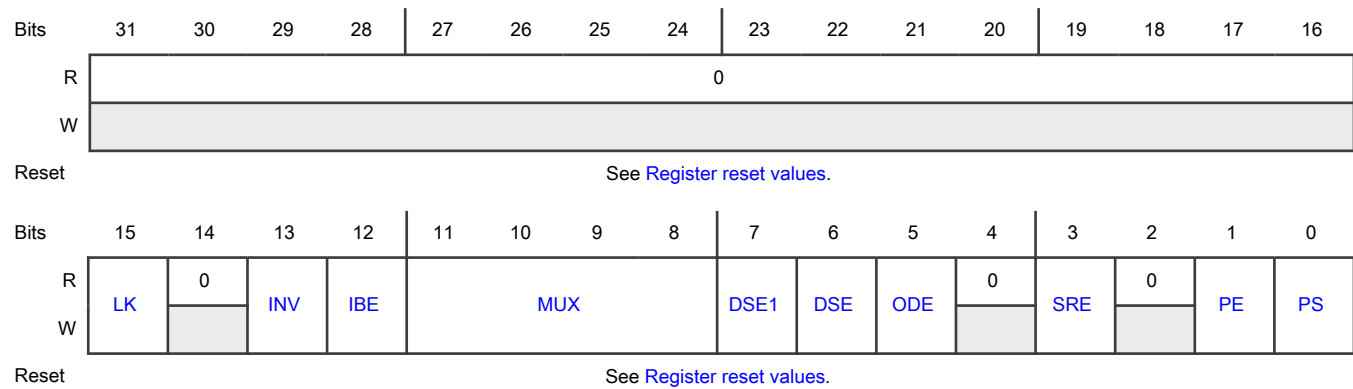Diagram**Register reset values**

Register	Reset value
PCR27	PORT0: 0000_0000h PORT1,PORT2: Register not supported PORT3: 0000_0000h PORT4: Register not supported
PCR28	0000_0000h

Fields

Field	Function
31-16 —	Reserved
15 LK	Lock Register Locks this PCR. When a PCR n is locked, its fields cannot be updated until the next reset. 0b - Does not lock 1b - Locks
14 —	Reserved
13 INV	Invert Input Inverts the digital input. 0b - Does not invert 1b - Inverts
12	Input Buffer Enable

Table continues on the next page...

Table continued from the previous page...

Field	Function
IBE	Enables digital input buffer. When disabled, the digital input is required for analog functions. 0b - Disables 1b - Enables
11-8 MUX	Pin Multiplex Control Configures the multiplexing slots on each pin. Not all pins support all pin multiplexing slots. Unimplemented pin multiplexing slots are reserved. Unimplemented pin multiplexing slots can result in different behaviors, if the unimplemented slot is phantom (because the module is phantom on that die) versus unimplemented on the die. The corresponding pin is configured according to the following pin multiplexing slots: 0000b - Alternative 0 (GPIO) 0001b - Alternative 1 (chip-specific) 0010b - Alternative 2 (chip-specific) 0011b - Alternative 3 (chip-specific) 0100b - Alternative 4 (chip-specific) 0101b - Alternative 5 (chip-specific) 0110b - Alternative 6 (chip-specific) 0111b - Alternative 7 (chip-specific) 1000b - Alternative 8 (chip-specific) 1001b - Alternative 9 (chip-specific) 1010b - Alternative 10 (chip-specific) 1011b - Alternative 11 (chip-specific) 1100b - Alternative 12 (chip-specific) 1101b - Alternative 13 (chip-specific)
7 DSE1	Drive Strength Enable Configures the drive strength on each pin. The drive strength configuration is valid for all digital pin multiplexing modes. • If this field = 0, normal drive strength is configured on the corresponding pin. • If this field = 1, double drive strength is configured on the corresponding pin. NOTE This field is not supported in every instance. The following table includes only supported registers.

Table continues on the next page...

Table continued from the previous page...

Field	Function									
	<table><tr><th>Instance</th><th>Field supported in</th><th>Field not supported in</th></tr><tr><td>PORT0</td><td>—</td><td>PCR27</td></tr><tr><td>PORT3</td><td>PCR27–PCR28</td><td>—</td></tr></table>	Instance	Field supported in	Field not supported in	PORT0	—	PCR27	PORT3	PCR27–PCR28	—
	Instance	Field supported in	Field not supported in							
	PORT0	—	PCR27							
PORT3	PCR27–PCR28	—								
0b - Normal										
1b - Double										
6 DSE	Drive Strength Enable Configures drive strength, low or high, on each pin. The drive strength configuration is valid for all digital pin multiplexing modes. - When this field = 0, low drive strength is configured on the corresponding pin, if the pin is configured as a digital output. - When this field = 1, high drive strength is configured on the corresponding pin, if the pin is configured as a digital output. 0b - Low 1b - High									
5 ODE	Open Drain Enable Enables open drain output on each pin. The open drain configuration is valid for all digital pin multiplexing modes. - When this field = 0, the open drain output is disabled on the corresponding pin. - When this field = 1, the open drain output is enabled on the corresponding pin, if the pin is configured as a digital output. 0b - Disables 1b - Enables									
4 —	Reserved									
3 SRE	Slew Rate Enable Configures the slew rate feature, fast or slow, on each corresponding pin. The slew rate configuration is valid for all digital pin multiplexing modes. 0b - Fast 1b - Slow									
2 —	Reserved									

Table continues on the next page...

Table continued from the previous page...

Field	Function
1 PE	Pull Enable Enables the internal pull resistor. This configuration is valid for all digital pin multiplexing modes. - When this field = 0, the internal pull resistor is not enabled on the corresponding pin. - When this field = 1, the internal pull resistor is enabled on the corresponding pin, if the pin is configured as a digital input. 0b - Disables 1b - Enables
0 PS	Pull Select Enables the internal pullup or pulldown resistor. This configuration is valid for all digital pin multiplexing modes. - When this field = 0, the internal pulldown resistor is enabled on the corresponding pin, if the corresponding PCRn.PE field = 1. - When this field = 1, the internal pullup resistor is enabled on the corresponding pin, if the corresponding PCRn.PE field = 1. 0b - Enables internal pulldown resistor 1b - Enables internal pullup resistor

11.6.1.26 Pin Control 29 (PCR29)

Offset

Register	Offset
PCR29	F4h

Function

Configures pin control features on each pin.

NOTE

Do not modify pin configuration registers associated with pins that are unavailable in your selected package. All unbonded pins unavailable in your package default to the Disabled state for lowest power consumption.

NOTE

Each module instance supports a different number of registers.


Instance	Register supported	Register not supported
PORT0	—	PCR29

Table continues on the next page...

Table continued from the previous page...

Instance	Register supported	Register not supported
PORT1	PCR29	—
PORT2	—	PCR29
PORT3	PCR29	—
PORT4	—	PCR29

Diagram

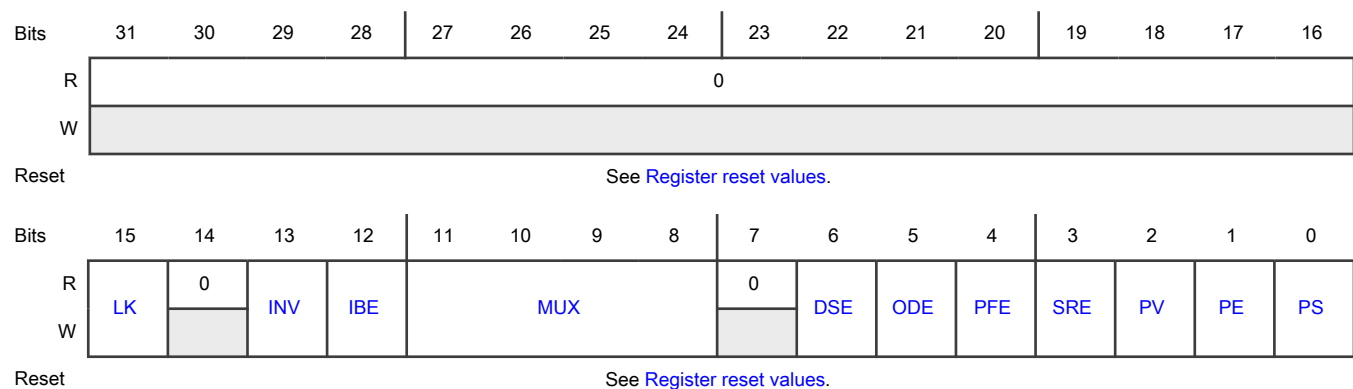

Register reset values

Register	Reset value
PCR29	PORT0: Register not supported PORT1: 0000_0133h PORT2: Register not supported PORT3: 0000_0103h PORT4: Register not supported

Fields

Field	Function
31-16 —	Reserved
15 LK	Lock Register Locks this PCR. When a PCR n is locked, its fields cannot be updated until the next reset.

Table continues on the next page...

Table continued from the previous page...

Field	Function													
	0b - Does not lock 1b - Locks													
14 —	Reserved													
13 INV	Invert Input Inverts the digital input. 0b - Does not invert 1b - Inverts													
12 IBE	Input Buffer Enable Enables digital input buffer. When disabled, the digital input is required for analog functions. 0b - Disables 1b - Enables													
11-8 MUX	Pin Multiplex Control Configures the multiplexing slots on each pin. Not all pins support all pin multiplexing slots. Unimplemented pin multiplexing slots are reserved. Unimplemented pin multiplexing slots can result in different behaviors, if the unimplemented slot is phantom (because the module is phantom on that die) versus unimplemented on the die. The corresponding pin is configured according to the following pin multiplexing slots: NOTE This field is not supported in every instance. The following table includes only supported registers. <table><tr><th>Instance</th><th>Field supported in</th><th>Field not supported in</th></tr><tr><td>PORT1</td><td>PCR29[9–8]</td><td>PCR29[11–10]</td></tr><tr><td>PORT3</td><td>PCR29</td><td>—</td></tr></table> NOTE The descriptions of the field settings vary by module instance. <table><tr><th>Instance</th><th>Field value and description</th></tr><tr><td>PORT1</td><td>00b - Alternative 0 (GPIO) 01b - Alternative 1 (chip-specific)</td></tr></table>	Instance	Field supported in	Field not supported in	PORT1	PCR29[9–8]	PCR29[11–10]	PORT3	PCR29	—	Instance	Field value and description	PORT1	00b - Alternative 0 (GPIO) 01b - Alternative 1 (chip-specific)
Instance	Field supported in	Field not supported in												
PORT1	PCR29[9–8]	PCR29[11–10]												
PORT3	PCR29	—												
Instance	Field value and description													
PORT1	00b - Alternative 0 (GPIO) 01b - Alternative 1 (chip-specific)													

Table continued from the previous page...

Field	Function	
	Instance	Field value and description
		10b - Alternative 2 (chip-specific) 11b - Alternative 3 (chip-specific)
	PORT3	0000b - Alternative 0 (GPIO) 0001b - Alternative 1 (chip-specific) 0010b - Alternative 2 (chip-specific) 0011b - Alternative 3 (chip-specific) 0100b - Alternative 4 (chip-specific) 0101b - Alternative 5 (chip-specific) 0110b - Alternative 6 (chip-specific) 0111b - Alternative 7 (chip-specific) 1000b - Alternative 8 (chip-specific) 1001b - Alternative 9 (chip-specific) 1010b - Alternative 10 (chip-specific) 1011b - Alternative 11 (chip-specific) 1100b - Alternative 12 (chip-specific) 1101b - Alternative 13 (chip-specific)
7 —	Reserved	
6 DSE	Drive Strength Enable Configures drive strength, low or high, on each pin. The drive strength configuration is valid for all digital pin multiplexing modes. - When this field = 0, low drive strength is configured on the corresponding pin, if the pin is configured as a digital output. - When this field = 1, high drive strength is configured on the corresponding pin, if the pin is configured as a digital output. 0b - Low 1b - High	
5 ODE	Open Drain Enable Enables open drain output on each pin. The open drain configuration is valid for all digital pin multiplexing modes.	

Table continues on the next page...

Table continued from the previous page...

Field	Function									
	- When this field = 0, the open drain output is disabled on the corresponding pin. - When this field = 1, the open drain output is enabled on the corresponding pin, if the pin is configured as a digital output. 0b - Disables 1b - Enables									
4 PFE	Passive Filter Enable Enables passive input filter on each pin. The passive filter configuration is valid for all digital pin multiplexing modes. - When this field = 0, the passive input filter is disabled on the corresponding pin. - When this field = 1, the passive input filter is enabled on the corresponding pin, if the pin is configured as a digital input. See the chip's data sheet for filter characteristics. NOTE This field is not supported in every instance. The following table includes only supported registers. <table><tr><th>Instance</th><th>Field supported in</th><th>Field not supported in</th></tr><tr><td>PORT1</td><td>PCR29</td><td>—</td></tr><tr><td>PORT3</td><td>—</td><td>PCR29</td></tr></table> 0b - Disables 1b - Enables	Instance	Field supported in	Field not supported in	PORT1	PCR29	—	PORT3	—	PCR29
Instance	Field supported in	Field not supported in								
PORT1	PCR29	—								
PORT3	—	PCR29								
3 SRE	Slew Rate Enable Configures the slew rate feature, fast or slow, on each corresponding pin. The slew rate configuration is valid for all digital pin multiplexing modes. 0b - Fast 1b - Slow									
2 PV	Pull Value Selects high or low internal pull resistor value. The pull value configuration is valid for all digital pin multiplexing modes. 0b - Low 1b - High									
1	Pull Enable									

Table continues on the next page...

Table continued from the previous page...

Field	Function
PE	Enables the internal pull resistor. This configuration is valid for all digital pin multiplexing modes. - When this field = 0, the internal pull resistor is not enabled on the corresponding pin. - When this field = 1, the internal pull resistor is enabled on the corresponding pin, if the pin is configured as a digital input. 0b - Disables 1b - Enables
0 PS	Pull Select Enables the internal pullup or pulldown resistor. This configuration is valid for all digital pin multiplexing modes. - When this field = 0, the internal pulldown resistor is enabled on the corresponding pin, if the corresponding PCRn.PE field = 1. - When this field = 1, the internal pullup resistor is enabled on the corresponding pin, if the corresponding PCRn.PE field = 1. 0b - Enables internal pulldown resistor 1b - Enables internal pullup resistor

11.6.1.27 Pin Control a (PCR30 - PCR31)

Offset

Register	Offset
PCR30	F8h
PCR31	FCh

Function

Configures pin control features on each pin.

NOTE

Do not modify pin configuration registers associated with pins that are unavailable in your selected package. All unbonded pins unavailable in your package default to the Disabled state for lowest power consumption.

NOTE

Each module instance supports a different number of registers.


Instance	Register supported	Register not supported
PORT0	—	PCR30–PCR31

Table continues on the next page...

Table continued from the previous page...

Instance	Register supported	Register not supported
PORT1	PCR30–PCR31	—
PORT2	—	PCR30–PCR31
PORT3	PCR30–PCR31	—
PORT4	—	PCR30–PCR31

Diagram

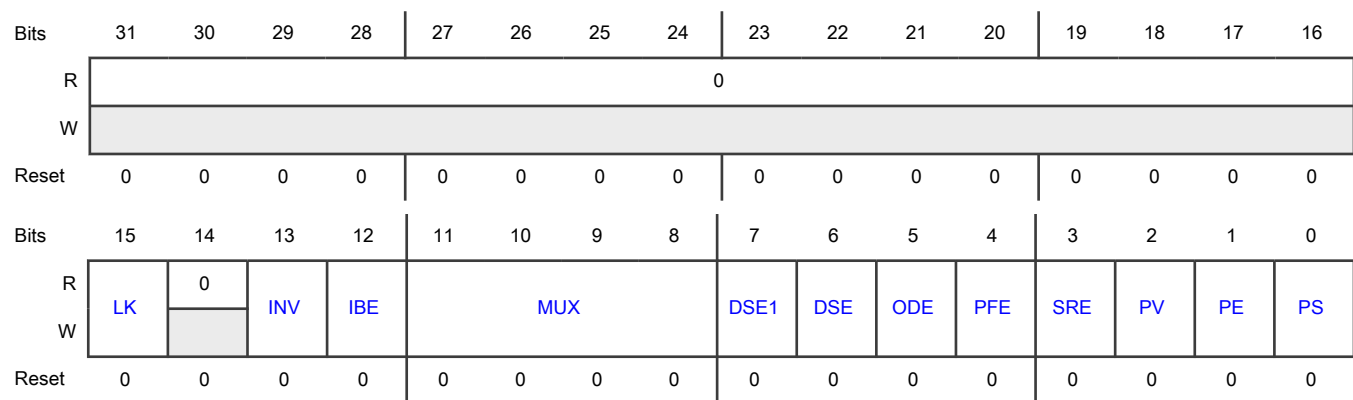

Fields

Field	Function
31-16 —	Reserved
15 LK	Lock Register Locks this PCR. When a PCR n is locked, its fields cannot be updated until the next reset. 0b - Does not lock 1b - Locks
14 —	Reserved
13 INV	Invert Input Inverts the digital input. 0b - Does not invert 1b - Inverts

Table continues on the next page...

Table continued from the previous page...

Field	Function
12 IBE	Input Buffer Enable Enables digital input buffer. When disabled, the digital input is required for analog functions. 0b - Disables 1b - Enables
11-8 MUX	Pin Multiplex Control Configures the multiplexing slots on each pin. Not all pins support all pin multiplexing slots. Unimplemented pin multiplexing slots are reserved. Unimplemented pin multiplexing slots can result in different behaviors, if the unimplemented slot is phantom (because the module is phantom on that die) versus unimplemented on the die. The corresponding pin is configured according to the following pin multiplexing slots: 0000b - Alternative 0 (GPIO) 0001b - Alternative 1 (chip-specific) 0010b - Alternative 2 (chip-specific) 0011b - Alternative 3 (chip-specific) 0100b - Alternative 4 (chip-specific) 0101b - Alternative 5 (chip-specific) 0110b - Alternative 6 (chip-specific) 0111b - Alternative 7 (chip-specific) 1000b - Alternative 8 (chip-specific) 1001b - Alternative 9 (chip-specific) 1010b - Alternative 10 (chip-specific) 1011b - Alternative 11 (chip-specific) 1100b - Alternative 12 (chip-specific) 1101b - Alternative 13 (chip-specific)
7 DSE1	Drive Strength Enable Configures the drive strength on each pin. The drive strength configuration is valid for all digital pin multiplexing modes. • If this field = 0, normal drive strength is configured on the corresponding pin. • If this field = 1, double drive strength is configured on the corresponding pin. NOTE This field is not supported in every instance. The following table includes only supported registers.

Table continues on the next page...

Table continued from the previous page...

Field	Function									
	<table><tr><th>Instance</th><th>Field supported in</th><th>Field not supported in</th></tr><tr><td>PORT1</td><td>PCR30–PCR31</td><td>—</td></tr><tr><td>PORT3</td><td>—</td><td>PCR30–PCR31</td></tr></table>	Instance	Field supported in	Field not supported in	PORT1	PCR30–PCR31	—	PORT3	—	PCR30–PCR31
Instance	Field supported in	Field not supported in								
PORT1	PCR30–PCR31	—								
PORT3	—	PCR30–PCR31								
	0b - Normal 1b - Double									
6 DSE	Drive Strength Enable Configures drive strength, low or high, on each pin. The drive strength configuration is valid for all digital pin multiplexing modes. • When this field = 0, low drive strength is configured on the corresponding pin, if the pin is configured as a digital output. • When this field = 1, high drive strength is configured on the corresponding pin, if the pin is configured as a digital output. 0b - Low 1b - High									
5 ODE	Open Drain Enable Enables open drain output on each pin. The open drain configuration is valid for all digital pin multiplexing modes. • When this field = 0, the open drain output is disabled on the corresponding pin. • When this field = 1, the open drain output is enabled on the corresponding pin, if the pin is configured as a digital output. 0b - Disables 1b - Enables									
4 PFE	Passive Filter Enable Enables passive input filter on each pin. The passive filter configuration is valid for all digital pin multiplexing modes. • When this field = 0, the passive input filter is disabled on the corresponding pin. • When this field = 1, the passive input filter is enabled on the corresponding pin, if the pin is configured as a digital input. See the chip's data sheet for filter characteristics. NOTE This field is not supported in every instance. The following table includes only supported registers.									

Table continues on the next page...

Table continued from the previous page...

Field	Function									
	<table><tr><th>Instance</th><th>Field supported in</th><th>Field not supported in</th></tr><tr><td>PORT1</td><td>PCR30–PCR31</td><td>—</td></tr><tr><td>PORT3</td><td>—</td><td>PCR30–PCR31</td></tr></table> 0b - Disables 1b - Enables	Instance	Field supported in	Field not supported in	PORT1	PCR30–PCR31	—	PORT3	—	PCR30–PCR31
Instance	Field supported in	Field not supported in								
PORT1	PCR30–PCR31	—								
PORT3	—	PCR30–PCR31								
3 SRE	Slew Rate Enable Configures the slew rate feature, fast or slow, on each corresponding pin. The slew rate configuration is valid for all digital pin multiplexing modes. 0b - Fast 1b - Slow									
2 PV	Pull Value Selects high or low internal pull resistor value. The pull value configuration is valid for all digital pin multiplexing modes. NOTE This field is not supported in every instance. The following table includes only supported registers. <table><tr><th>Instance</th><th>Field supported in</th><th>Field not supported in</th></tr><tr><td>PORT1</td><td>PCR30</td><td>PCR31</td></tr><tr><td>PORT3</td><td>PCR31</td><td>PCR30</td></tr></table> 0b - Low 1b - High	Instance	Field supported in	Field not supported in	PORT1	PCR30	PCR31	PORT3	PCR31	PCR30
Instance	Field supported in	Field not supported in								
PORT1	PCR30	PCR31								
PORT3	PCR31	PCR30								
1 PE	Pull Enable Enables the internal pull resistor. This configuration is valid for all digital pin multiplexing modes. • When this field = 0, the internal pull resistor is not enabled on the corresponding pin. • When this field = 1, the internal pull resistor is enabled on the corresponding pin, if the pin is configured as a digital input. 0b - Disables 1b - Enables									

Table continues on the next page...

Table continued from the previous page...

Field	Function
0 PS	Pull Select Enables the internal pullup or pulldown resistor. This configuration is valid for all digital pin multiplexing modes. • When this field = 0, the internal pulldown resistor is enabled on the corresponding pin, if the corresponding PCRn.PE field = 1. • When this field = 1, the internal pullup resistor is enabled on the corresponding pin, if the corresponding PCRn.PE field = 1. 0b - Enables internal pulldown resistor 1b - Enables internal pullup resistor

Chapter 12

General Purpose Input/Output (GPIO)

12.1 Chip-specific GPIO information

Table 65. Reference links to related information

Topic	Related module	Reference
Full description	GPIO	GPIO
System memory map		Memory map
Clocking		Clock distribution
Power Management		Power Management
Signal multiplexing	Port control	Signal multiplexing

12.1.1 Module instances

This device has five instances of the GPIO module, GPIO0, GPIO1, GPIO2, GPIO3 and GPIO4.

12.1.2 Interrupt, DMA request, and trigger outputs for GPIO

GPIO modules can be used to trigger interrupts, DMA requests, or trigger outputs (see the INPUTMUX and WUU chapters for details). See the table below for details on the chip-level interrupt, DMA request, and trigger output capability for each GPIO instance.


Table 66. Interrupt, DMA request, and trigger outputs for GPIO

GPIO	Interrupt	DMA	Trigger
GPIO0	Yes	Yes	Yes
GPIO1	Yes	Yes	Yes
GPIO2	Yes	Yes	Yes
GPIO3	Yes	Yes	Yes
GPIO4	Yes	Yes	Yes

12.2 Overview

GPIO communicates to the processor core via a zero wait-state interface for maximum pin performance.

12.2.1 Block diagram

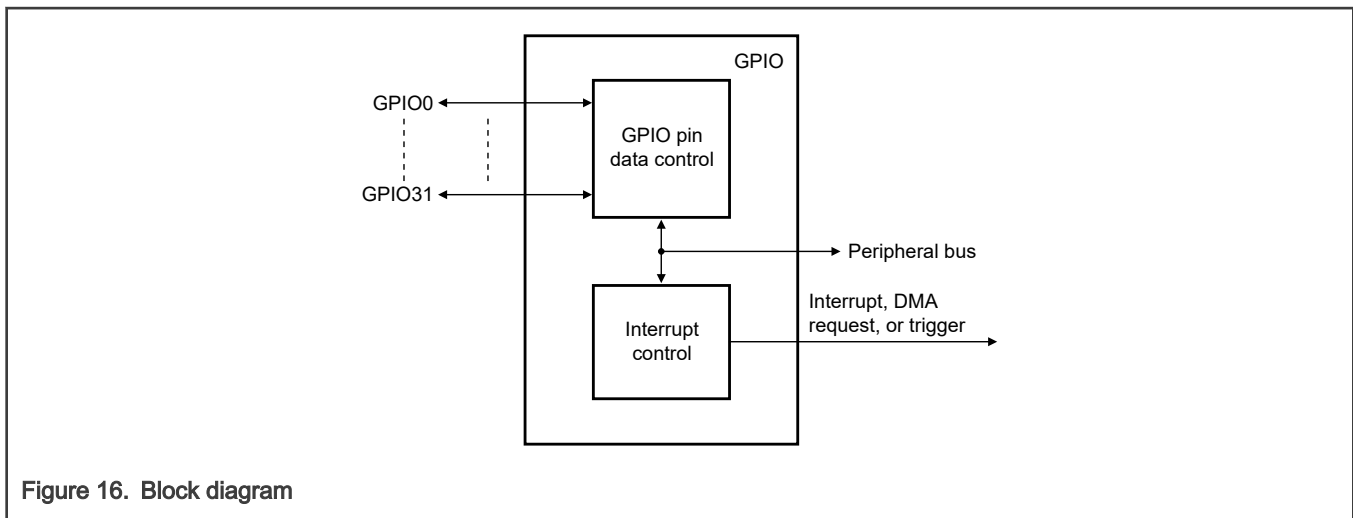

12.2.2 Features

- **Port Data Input (PDIR)** displays the logic value on each pin when the pin is configured for any digital function, provided the corresponding Port Control and Interrupt modules for that pin are enabled.
- **Port Data Output (PDOR)**, with corresponding set, clear, and toggle registers, controls the output data of each pin when the pin is configured for the GPIO function.
- **Port Data Direction (PDDR)** controls the direction of each pin when the pin is configured for the GPIO function.
- **Port Input Disable (PIDR)** controls disabling of the input for each general-purpose pin.
- Pin interrupts:
 - Interrupt flags and enable registers for each pin are functional in all digital pin muxing modes.
 - Support for interrupt, peripheral trigger, or DMA request is configured for each pin.
 - Support for edge-sensitive (rising, falling, or both) or level-sensitive (low, high) interrupts is configured for each pin.
 - Asynchronous wake-up in Low-Power mode.
 - GPIO generates a total of 1 interrupts, 1 output triggers, and 1 DMA requests.

12.3 Functional description

12.3.1 Low-Power mode

You can configure GPIO to exit Low-Power mode via an asynchronous wake-up signal if an enabled interrupt is detected.

12.3.2 Debug mode

GPIO remains functional in Debug mode.

12.3.3 General-purpose input

The logic state of each pin is available via **Port Data Input (PDIR)** if:

- The corresponding field in **Port Input Disable (PIDR)** is 0.
- The pin is configured for a digital function.

12.3.4 General-purpose output

The logic state of each pin is controlled via [Port Data Output \(PDOR\)](#) and [Port Data Direction \(PDDR\)](#), provided the pin is configured for the GPIO function. The following table depicts the conditions for a pin to be configured as input or output.

Table 67. General-purpose output

If	Then
A pin is configured for the GPIO function and the corresponding PDDR field is 0	The pin is configured as an input.
A pin is configured for the GPIO function and the corresponding PDDR field is 1	The pin is configured as an output and the logic state of the pin is equal to the corresponding PDOR field.

For efficient bit manipulation on the general-purpose outputs, pin data set, pin data clear, and pin data toggle registers allow one or more outputs within one port to be set, cleared, or toggled from a single register write, eliminating the need for a read-modify-write operation to prevent changing pins accidentally.

12.3.5 Clocking

GPIO receives a single clock, which is used for register access and synchronization with external pin inputs. There are no special considerations.

12.3.6 Reset

GPIO receives a single reset, which resets the peripheral. There are no special considerations.

12.3.7 External interrupts

The external interrupt capability of GPIO is available in all digital pin muxing modes.

You can configure each pin individually for any of the external interrupt modes shown in the following table.

Table 68. Available pin configurations for external interrupts

Signal conditions	Software polling using flags	Peripheral triggers	Interrupts	DMA requests
Rising-edge	Yes	—	Yes	Yes
Falling-edge	Yes	—	Yes	Yes
Rising- and falling-edge	Yes	—	Yes	Yes
High-level	—	Yes	Yes	—
Low-level	—	Yes	Yes	—

The interrupt status flag is set when the configured edge or level is detected on the pin. Unless GPIO is in Low-Power mode, the input is first synchronized to the system clock to detect the configured level or edge transition.

GPIO generates a pin interrupt that asserts when the interrupt status flag is set for any enabled interrupt for that output. The interrupt negates after the interrupt status flags for all enabled interrupts are cleared by writing a logic 1 to either [ISFR0\[ISF_n\]](#) or [ICR0\[ISF_n\]](#).

GPIO generates a DMA request that asserts when the interrupt status flag is set for any enabled DMA request in that output. The DMA request negates after the DMA transfer is completed because that clears the interrupt status flags for all enabled DMA requests.

In Low-Power mode, the interrupt status flag for any enabled interrupt is asynchronously set if the required level or edge is detected. This also generates an asynchronous wake-up signal to exit Low-Power mode.

GPIO generates a peripheral trigger output that asserts if any pin configured for the active-high trigger is logic 1, or any pin triggered for the active-low trigger is logic 0. The peripheral trigger output asynchronously updates from the value on the configured pins.

12.3.8 Global interrupt control

The two global interrupt control registers ([Global Interrupt Control Low \(GICLR\)](#) and [Global Interrupt Control High \(GICHR\)](#)) allow a single register write to update the upper 16 bits of [Interrupt Control a \(ICR0 - ICR31\)](#) for up to 16 pins, all with the same value.

These global interrupt control registers allow you to quickly configure multiple pins within the same port with the same interrupt configuration.

The global interrupt control registers are write-only registers and always read 0.

12.3.9 DMA

GPIO generates 1 requests. For each pin, you can configure DMA requests to assert for either rising, falling, or both edge detection. See [External interrupts](#) for more information.

12.4 External signals

Table 69. External signals

Signal	Description		Direction
GPIO31–GPIO0	General-purpose input/output		I/O
	State meaning	Asserted: The pin is logic 1. Deasserted: The pin is logic 0.	
	Timing	Assertion: When output, this signal occurs on the rising-edge of the system clock. For input, it may occur at any time and input may be asserted asynchronously to the system clock. Deassertion: When output, this signal occurs on the rising-edge of the system clock. For input, it may occur at any time and input may be asserted asynchronously to the system clock.	

NOTE

Not all pins within each GPIO are implemented on each chip. See the "Signal Multiplexing" chapter for the number of GPIO pins within each port available on this chip.

12.5 Initialization

To initialize GPIO:

1. Initialize the GPIO pins for the output function:
 - a. Configure the output logic value for each pin by using [Port Data Output \(PDOR\)](#).
 - b. Configure the direction for each pin by using [Port Data Direction \(PDDR\)](#).
2. Initialize the interrupt function by writing to [Interrupt Control a \(ICR0 - ICR31\)](#) for the corresponding pins and desired configuration. If the pin is previously used for a different function, first write 0100_0000h to [Interrupt Control a \(ICR0 - ICR31\)](#) to disable the previous function and clear the flag.

12.6 Application information

GPIO includes the following applications:

- Reading the state of a single pin by performing a byte read of [Pin Data \(P0DR - P31DR\)](#).
- Updating the state of a single pin by performing a byte write to [Pin Data \(P0DR - P31DR\)](#).
- Reading the state of multiple pins by reading [Port Data Input \(PDIR\)](#).
- Updating the state of multiple pins by using the following ways:
 - Writing to [Port Data Output \(PDOR\)](#).
 - Writing to [Port Set Output \(PSOR\)](#) to write 1 to [Port Data Output \(PDOR\)](#).
 - Writing to [Port Clear Output \(PCOR\)](#) to write 0 to [Port Data Output \(PDOR\)](#).
 - Writing to [Port Toggle Output \(PTOR\)](#) to toggle [Port Data Output \(PDOR\)](#).

12.7 Memory map and register definition

The GPIO registers support 8-bit, 16-bit, or 32-bit accesses. Any read or write access to the GPIO memory space that is outside the valid memory map results in a bus error.

NOTE

For simplicity, each GPIO port's register appears with the same width of 32 bits, corresponding to 32 pins. The actual number of pins per port (and therefore the number of usable control bits per port register) is chip-specific. See the "Signal Multiplexing" chapter for the exact control bits of each port.

12.7.1 GPIO register descriptions

12.7.1.1 GPIO memory map

RGPIO0 base address: 4010_2000h

RGPIO1 base address: 4010_3000h

RGPIO2 base address: 4010_4000h

RGPIO3 base address: 4010_5000h

RGPIO4 base address: 4010_6000h

Offset	Register	Width (In bits)	Access	Reset value
0h	Version ID (VERID)	32	R	0201_0000h
4h	Parameter (PARAM)	32	R	0000_0001h
40h	Port Data Output (PDOR)	32	RW	0000_0000h
44h	Port Set Output (PSOR)	32	RW	0000_0000h
48h	Port Clear Output (PCOR)	32	RW	0000_0000h
4Ch	Port Toggle Output (PTOR)	32	RW	0000_0000h
50h	Port Data Input (PDIR)	32	R	0000_0000h
54h	Port Data Direction (PDDR)	32	RW	0000_0000h

Table continues on the next page...

Table continued from the previous page...

Offset	Register	Width (In bits)	Access	Reset value
58h	Port Input Disable (PIDR)	32	RW	0000_0000h
60h - 7Fh	Pin Data (P0DR - P31DR)	8	RW	00h
80h - FCh	Interrupt Control a (ICR0 - ICR31)	32	RW	0000_0000h
100h	Global Interrupt Control Low (GICLR)	32	RW	0000_0000h
104h	Global Interrupt Control High (GICHR)	32	RW	0000_0000h
120h	Interrupt Status Flag (ISFR0)	32	RW	0000_0000h

12.7.1.2 Version ID (VERID)


Offset

Register	Offset
VERID	0h

Function

Indicates the version ID number of each GPIO.

Diagram

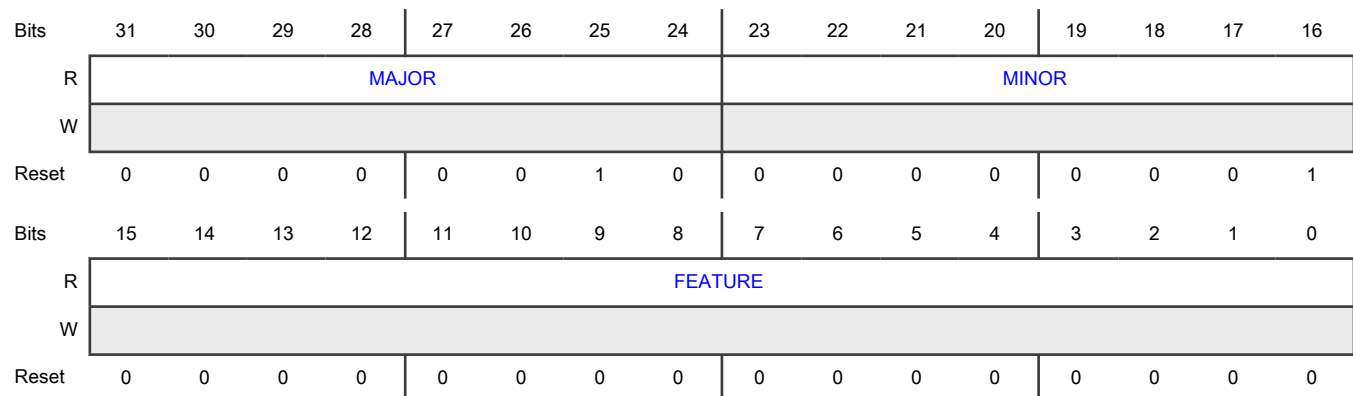

Fields

Field	Function
31-24 MAJOR	Major Version Number Indicates the major version number for the specification.
23-16	Minor Version Number

Table continues on the next page...

Table continued from the previous page...

Field	Function
MINOR	Indicates the minor version number for the specification.
15-0 FEATURE	Feature Specification Number Indicates the feature set number. 0000_0000_0000_0000b - Basic implementation 0000_0000_0000_0001b - Protection registers implemented

12.7.1.3 Parameter (PARAM)

Offset

Register	Offset
PARAM	4h

Function

Indicates the interrupt number of each GPIO.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0												IRQNUM			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1

Fields

Field	Function
31-4 —	Reserved
3-0 IRQNUM	Interrupt Number Indicates the number of interrupt, trigger, or DMA request domains.

12.7.1.4 Port Data Output (PDOR)

Offset

Register	Offset
PDOR	40h

Function

Configures the logic levels that are driven on each general-purpose output pin.

NOTE

Do not modify the pin configuration registers associated with pins that are not available in your selected package. By default, these unbonded pins are set to the Disable state for lowest power consumption.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	PDO3	PDO3	PDO2	PDO2	PDO2	PDO2	PDO2	PDO2	PDO2	PDO2	PDO2	PDO2	PDO1	PDO1	PDO1	PDO1
W	1	0	9	8	7	6	5	4	3	2	1	0	9	8	7	6
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	PDO1	PDO1	PDO1	PDO1	PDO1	PDO1	PDO9	PDO8	PDO7	PDO6	PDO5	PDO4	PDO3	PDO2	PDO1	PDO0
W	5	4	3	2	1	0										
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-0 PDORn	Port Data Output Configures the logic level on the pin if it is configured for general-purpose output. If this field is 0, logic level 0 is driven on the pin, if the pin is configured for general-purpose output. If this field is 1, logic level 1 is driven on the pin, if the pin is configured for general-purpose output. NOTE Reading the fields for unbonded pins returns an undefined value. 0b - Logic level 0 1b - Logic level 1

12.7.1.5 Port Set Output (PSOR)

Offset

Register	Offset
PSOR	44h

Function

Updates the corresponding fields of [Port Data Output \(PDOR\)](#) to become 1.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
W	PTSO 31	PTSO 30	PTSO 29	PTSO 28	PTSO 27	PTSO 26	PTSO 25	PTSO 24	PTSO 23	PTSO 22	PTSO 21	PTSO 20	PTSO 19	PTSO 18	PTSO 17	PTSO 16
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
W	PTSO 15	PTSO 14	PTSO 13	PTSO 12	PTSO 11	PTSO 10	PTSO 9	PTSO 8	PTSO 7	PTSO 6	PTSO 5	PTSO 4	PTSO 3	PTSO 2	PTSO 1	PTSO 0
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-0 PTSON	Port Set Output Updates the content of the corresponding field in Port Data Output (PDOR). If this field is 0, the corresponding PDOR field does not change. If this field is 1, the corresponding PDOR field becomes 1. 0b - No change 1b - Corresponding field in PDOR becomes 1

12.7.1.6 Port Clear Output (PCOR)

Offset

Register	Offset
PCOR	48h

Function

Updates the corresponding fields of [Port Data Output \(PDOR\)](#) to become 0.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
W	PTCO 31	PTCO 30	PTCO 29	PTCO 28	PTCO 27	PTCO 26	PTCO 25	PTCO 24	PTCO 23	PTCO 22	PTCO 21	PTCO 20	PTCO 19	PTCO 18	PTCO 17	PTCO 16
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
W	PTCO 15	PTCO 14	PTCO 13	PTCO 12	PTCO 11	PTCO 10	PTCO 9	PTCO 8	PTCO 7	PTCO 6	PTCO 5	PTCO 4	PTCO 3	PTCO 2	PTCO 1	PTCO 0
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-0 PTCOn	Port Clear Output Updates the content of the corresponding field in Port Data Output (PDOR). If this field is 0, the corresponding PDOR field does not change. If this field is 1, the corresponding PDOR field becomes 0. 0b - No change 1b - Corresponding field in PDOR becomes 0

12.7.1.7 Port Toggle Output (PTOR)**Offset**

Register	Offset
PTOR	4Ch

Function

Updates the corresponding fields of [Port Data Output \(PDOR\)](#) to set to the inverse of their current logic states.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
W	PTTO 31	PTTO 30	PTTO 29	PTTO 28	PTTO 27	PTTO 26	PTTO 25	PTTO 24	PTTO 23	PTTO 22	PTTO 21	PTTO 20	PTTO 19	PTTO 18	PTTO 17	PTTO 16
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
W	PTTO 15	PTTO 14	PTTO 13	PTTO 12	PTTO 11	PTTO 10	PTTO 9	PTTO 8	PTTO 7	PTTO 6	PTTO 5	PTTO 4	PTTO 3	PTTO 2	PTTO 1	PTTO 0
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-0 PTTON	Port Toggle Output Updates the content of the corresponding field in Port Data Output (PDOR). If this field is 0, the corresponding PDOR field does not change. If this field is 1, the corresponding PDOR field is set to the inverse of its current logic state. 0b - No change 1b - Set to the inverse of its current logic state

12.7.1.8 Port Data Input (PDIR)**Offset**

Register	Offset
PDIR	50h

Function

Captures the logic levels of each general-purpose input pin.

NOTE

Do not modify the pin configuration registers associated with the pins that are not available in your selected package. By default, these unbonded pins are set to the Disable state for lowest power consumption.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	PDI31	PDI30	PDI29	PDI28	PDI27	PDI26	PDI25	PDI24	PDI23	PDI22	PDI21	PDI20	PDI19	PDI18	PDI17	PDI16
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	PDI15	PDI14	PDI13	PDI12	PDI11	PDI10	PDI9	PDI8	PDI7	PDI6	PDI5	PDI4	PDI3	PDI2	PDI1	PDI0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-0	Port Data Input
PDI _n	Indicates the logic level of the pin that is configured for use by a digital function. If this field is 0, the pin logic level is logic 0 or is not configured or implemented for use by a digital function. If this field is 1, the pin logic level is logic 1. 0b - Logic 0 1b - Logic 1

12.7.1.9 Port Data Direction (PDDR)**Offset**

Register	Offset
PDDR	54h

Function

Configures the individual port pins for input or output.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	PDD3	PDD3	PDD2	PDD2	PDD2	PDD2	PDD2	PDD2	PDD2	PDD2	PDD2	PDD2	PDD1	PDD1	PDD1	PDD1
W	1	0	9	8	7	6	5	4	3	2	1	0	9	8	7	6
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	PDD1	PDD1	PDD1	PDD1	PDD1	PDD1	PDD9	PDD8	PDD7	PDD6	PDD5	PDD4	PDD3	PDD2	PDD1	PDD0
W	5	4	3	2	1	0										
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-0 PDDn	Port Data Direction Configures individual port pins for input or output. If this field is 0, the pin is configured as general-purpose input for the GPIO function. If this field is 1, the pin is configured as general-purpose output for the GPIO function. 0b - Input 1b - Output

12.7.1.10 Port Input Disable (PIDR)

Offset

Register	Offset
PIDR	58h

Function

Disables the input for each general-purpose pin, which prevents the value from being reported in [Port Data Input \(PDIR\)](#).

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	PID31	PID30	PID29	PID28	PID27	PID26	PID25	PID24	PID23	PID22	PID21	PID20	PID19	PID18	PID17	PID16
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	PID15	PID14	PID13	PID12	PID11	PID10	PID9	PID8	PID7	PID6	PID5	PID4	PID3	PID2	PID1	PID0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-0 PIDn	Port Input Disable Disables a pin for general-purpose input. If this field is 0, the pin is configured for general-purpose input, provided the pin is configured for a digital function. If this field is 1, the pin is disabled for general-purpose input. 0b - Configured for general-purpose input 1b - Disabled for general-purpose input

12.7.1.11 Pin Data (P0DR - P31DR)

Offset

For a = 0 to 31:

Register	Offset
PaDR	60h + (a × 1h)


Function

Configures the data feature of a pin. Pins that are unimplemented or not configured for a digital function read zero.

NOTE

You must not modify [Pin Data \(P0DR - P31DR\)](#) associated with the pins that are not available in your selected package. These unbonded pins are, by default, set to the Disable state for lowest power consumption.

Diagram

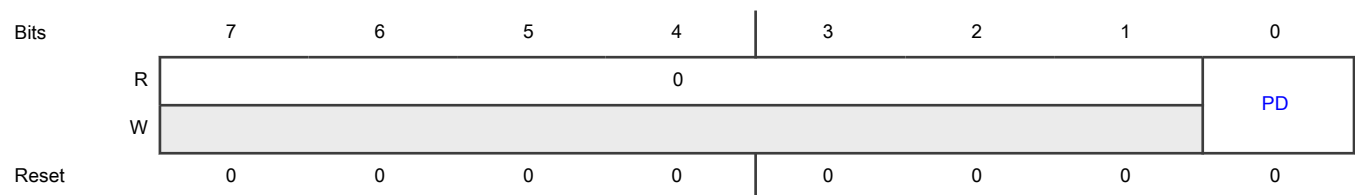

Fields

Field	Function
7-1 —	Reserved
0 PD	Pin Data (I/O) Specifies the pin logic level. This field updates the corresponding field in Port Data Output (PDOR); reading this field returns the value in the corresponding field of Port Data Input (PDIR). If this field is 0, the pin logic level is logic zero or not configured for use by a digital function. If this field is 1, the pin logic level is logic one. 0b - Logic zero 1b - Logic one

12.7.1.12 Interrupt Control a (ICR0 - ICR31)


Offset

For a = 0 to 31:

Register	Offset
ICRa	80h + (a × 4h)

Function
Configures interrupt features on each pin.

Diagram

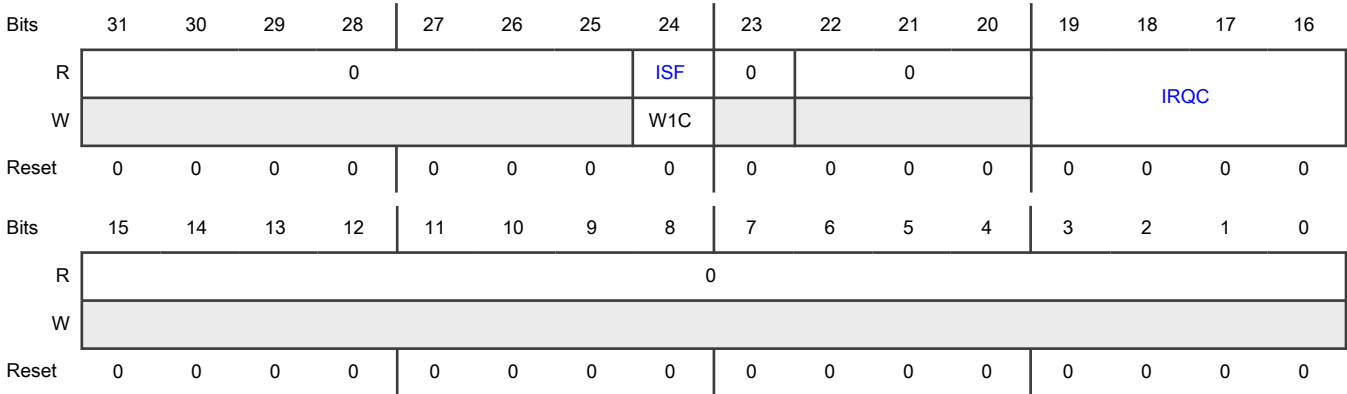

Fields

Field	Function
31-25 —	Reserved
24 ISF	Interrupt Status Flag Indicates whether the configured interrupt is detected. The pin interrupt configuration is valid in all digital pin muxing modes. The fields in Interrupt Status Flag (ISFR0) have the same function. ISF can be cleared with either register field. If the pin is configured to generate a DMA request, then the corresponding flag is cleared automatically at the completion of the requested DMA transfer. Otherwise, the flag remains set until a logic 1 is written to the flag. If the pin is configured for a level-sensitive interrupt and the pin remains asserted, then the flag is set again immediately after it is cleared. NOTE This field behaves differently for register reads and writes. When reading 0b - Not detected 1b - Detected When writing 0b - No effect 1b - Clear the flag
23 —	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
22-20 —	Reserved
19-16 IRQC	Interrupt Configuration Specifies the ISF and DMA request configuration. The pin interrupt configuration is valid in all digital pin muxing modes. When changing the interrupt configuration, it is recommended to first disable ISF and then write the new configuration. The corresponding pin is configured to generate interrupt, trigger, or DMA request. NOTE See the GPIO chip-specific information to determine the GPIO instances that support interrupt, DMA request, or trigger capabilities. 0000b - ISF is disabled 0001b - ISF and DMA request on rising edge 0010b - ISF and DMA request on falling edge 0011b - ISF and DMA request on either edge 0100b - Reserved 0101b - ISF sets on rising edge 0110b - ISF sets on falling edge 0111b - ISF sets on either edge 1000b - ISF and interrupt when logic 0 1001b - ISF and interrupt on rising edge 1010b - ISF and interrupt on falling edge 1011b - ISF and Interrupt on either edge 1100b - ISF and interrupt when logic 1 1101b - Enable active-high trigger output; ISF on rising edge (pin state is ORed with other enabled triggers to generate the output trigger for use by other peripherals) 1110b - Enable active-low trigger output; ISF on falling edge (pin state is inverted and ORed with other enabled triggers to generate the output trigger for use by other peripherals) 1111b - Reserved
15-0 —	Reserved

12.7.1.13 Global Interrupt Control Low (GICLR)

Offset

Register	Offset
GICLR	100h

Function

Updates any combination of the lower 16 Interrupt Control registers with the same value. This register supports only 32-bit writes and ignores any 16-bit or 8-bit writes.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0															
W	GIWD															
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
W	GIWE 15	GIWE 14	GIWE 13	GIWE 12	GIWE 11	GIWE 10	GIWE 9	GIWE 8	GIWE 7	GIWE 6	GIWE 5	GIWE 4	GIWE 3	GIWE 2	GIWE 1	GIWE 0
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-16 GIWD	Global Interrupt Write Data Indicates the write value that is written to the upper 16 bits of Interrupt Control a (ICR0 - ICR31) , selected by GIWE.
15-0 GIWE _n	Global Interrupt Write Enable Indicates whether the upper 16 bits of the corresponding Interrupt Control a (ICR0 - ICR31) are updated with the value in GIWD. 0b - Not updated 1b - Updated

12.7.1.14 Global Interrupt Control High (GICHR)


Offset

Register	Offset
GICHR	104h

Function

Updates any combination of the upper 16 Interrupt Control registers with the same value. This register supports only 32-bit writes and ignores any 16-bit or 8-bit writes.

Diagram

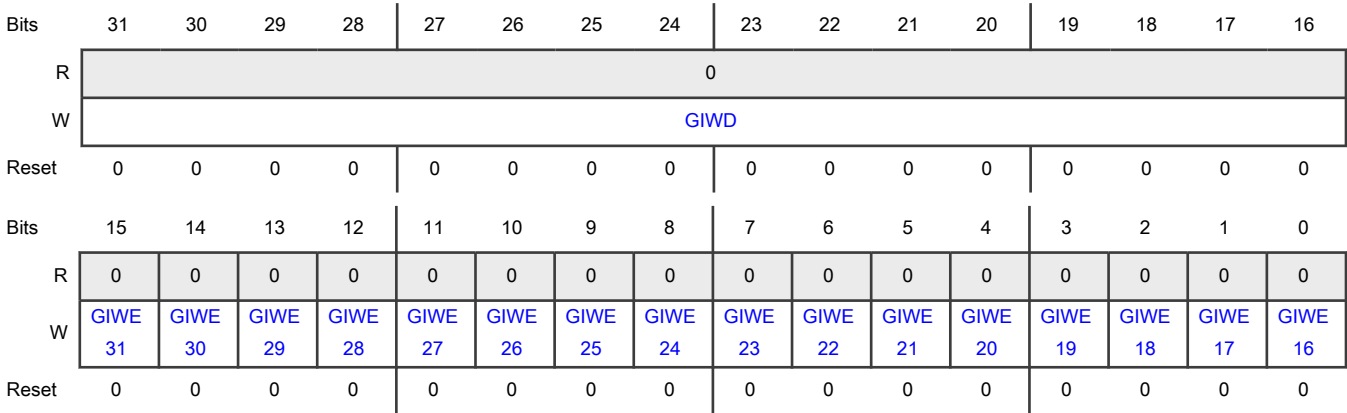

Fields

Field	Function
31-16 GIWD	Global Interrupt Write Data Indicates the write value that is written to the upper 16 bits of Interrupt Control a (ICR0 - ICR31) , selected by GIWE.
15-0 GIWEn	Global Interrupt Write Enable Indicates whether the upper 16 bits of the corresponding Interrupt Control a (ICR0 - ICR31) are updated with the value in GIWD. 0b - Not updated. 1b - Updated

12.7.1.15 Interrupt Status Flag (ISFR0)

Offset

Register	Offset
ISFR0	120h

Function

Indicates whether the related configured interrupt is detected on each pin. The pin interrupt configuration is valid in all digital pin muxing modes. The ISF for each pin is also visible in the corresponding Interrupt Control register, and each flag can be cleared in either location.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	ISF31	ISF30	ISF29	ISF28	ISF27	ISF26	ISF25	ISF24	ISF23	ISF22	ISF21	ISF20	ISF19	ISF18	ISF17	ISF16
W	W1C	W1C	W1C	W1C	W1C	W1C	W1C	W1C	W1C	W1C	W1C	W1C	W1C	W1C	W1C	W1C
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	ISF15	ISF14	ISF13	ISF12	ISF11	ISF10	ISF9	ISF8	ISF7	ISF6	ISF5	ISF4	ISF3	ISF2	ISF1	ISF0
W	W1C	W1C	W1C	W1C	W1C	W1C	W1C	W1C	W1C	W1C	W1C	W1C	W1C	W1C	W1C	W1C
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-0	Interrupt Status Flag
ISFn	Indicates the detection of the configured interrupt on each pin of the same number. If this field is 0, the configured interrupt is not detected on the pin of the same number. If this field is 1, the configured interrupt is detected on the pin of the same number. If the pin is configured to generate a DMA request, then the corresponding flag is cleared automatically at the completion of the requested DMA transfer. Otherwise, the flag remains set until a logic 1 is written to the flag. If the pin is configured for a level-sensitive interrupt and the pin remains asserted, then the flag is set again immediately after it is cleared. NOTE This field behaves differently for register reads and writes. When reading 0b - Not detected 1b - Detected When writing 0b - No effect 1b - Clear the flag

Chapter 13

Input Multiplexing (INPUTMUX)

13.1 Chip-specific INPUTMUX information

Table 70. Reference links to related information

Topic	Related module	Reference
Full description	INPUTMUX	INPUTMUX
System memory map		Memory map
Clocking		Clock distribution
Power Management		Power Management
Signal multiplexing	Port control	Signal multiplexing

Once set up, no clocks are required for the input multiplexer to function. The system clock is needed only to write to, or read from the INPUTMUX registers. Once the input multiplexer is configured, disable the clock to the INPUTMUX module in registers of the SYSCON module.

13.1.1 Module instances

This device contains one instance of the INPUTMUX module.

NOTE

The MCX A345 and MCX A346 series do not support USB, FlexIO, I3C, and SLCD features. please ignore any related information in this chapters.

13.2 Overview

The Input Multiplexing module (INPUTMUX) provides signal routing options for internal peripherals. Some peripheral inputs are multiplexed to multiple input sources. The sources can be external pins, interrupts, output signals of other peripherals, or other internal signals.

NOTE

Depending on the package, not all inputs from external pins may be available.

13.2.1 Block Diagram

[Figure 17](#) shows a generic input multiplexer arrangement with n inputs.

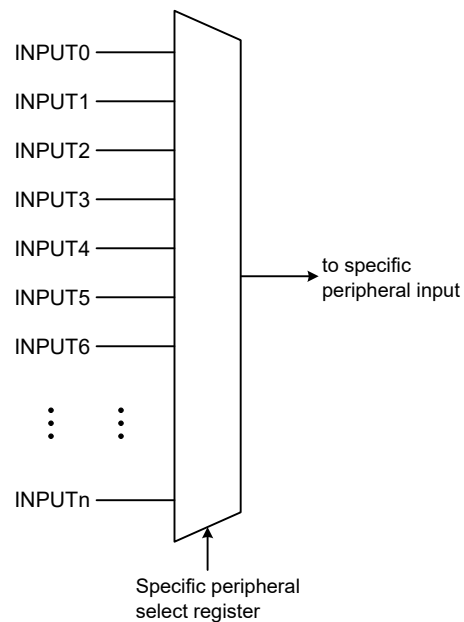


Figure 17. Generic input multiplexing

13.2.2 Features

- Configures the inputs to the asynchronous CTimers.
- Configures the inputs to the GPIO event Interrupt.
- Configures the inputs to CMP, ADC, DAC, eQDC, PWM, PWM EXT clock, AOI, external trigger.
- Configures the inputs to the Frequency Measurement (FREQME). This function is controlled by the FREQMECTRL register (See ANACTRL).

13.3 TRIG_IN Filter

There is a filter implemented for each TRIG_IN pin. The clock source of the filter is same with input mux bus clock. There is a pre-scaler for the clock. The level of the TRIG_IN can be read from TRIGFIL_STAT register. The filter width is configurable in TRIGFILx_CTRL register. The filtered TRIG_IN is connected to other peripherals through the input mux of the peripheral.

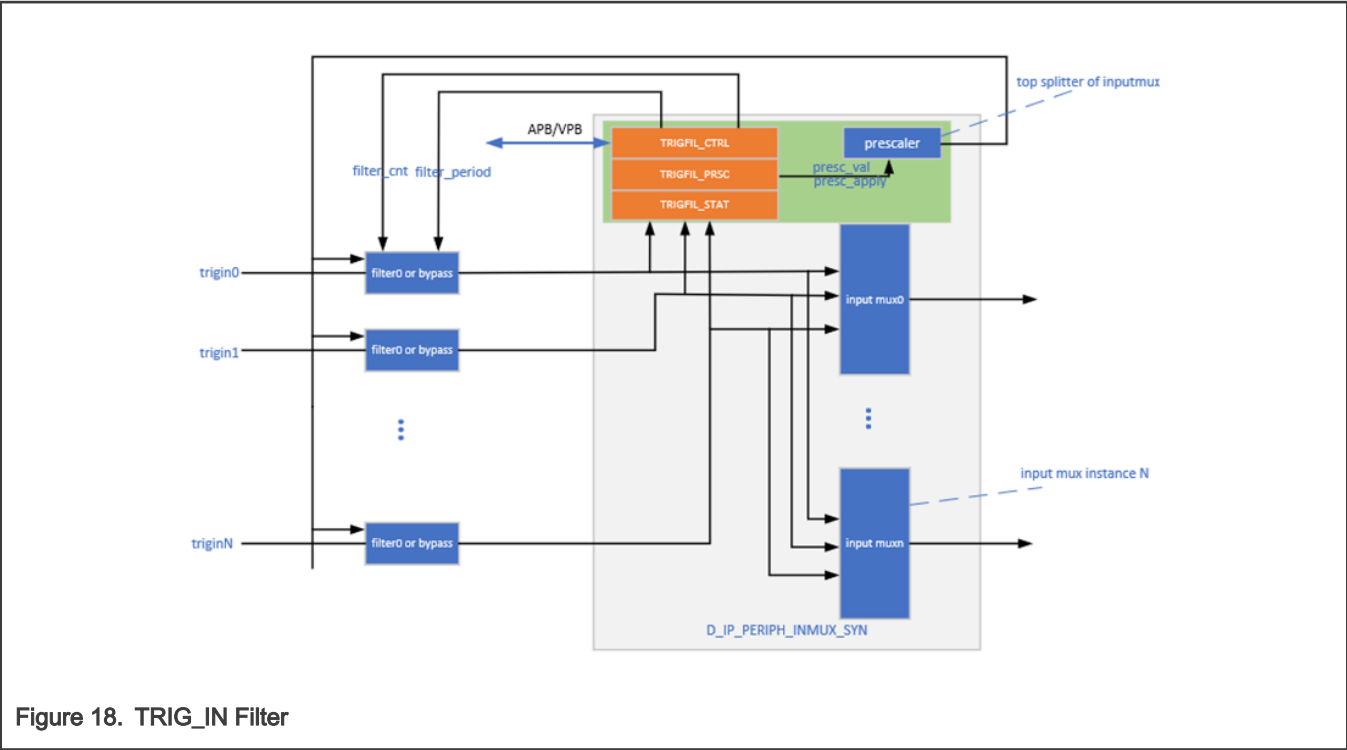


Figure 18. TRIG_IN Filter

13.4 Functional description

The INPUTMUX implements a number of input multiplexers that select one of many inputs to be routed to a specific input signal for a given peripheral. This is used to allow user configuration of data paths between internal modules and/or external pins on the device. For every module input (output from the INPUTMUX), there is a register that selects the input to use, where the register name and description provide details on the module input controlled by each register. The input signal/pin options for each of the muxes are configurable, and can vary from mux to mux. Refer to the register descriptions for the details on the input signal/pin options used for each INPUTMUX output in [Memory map and register definition](#).

13.5 External signals

The INPUTMUX has no dedicated pins. Multiplexer inputs from external pins work independently of any other function assigned to the pin as long as no analog function is enabled.

Table 71. INPUTMUX pin description

Pins	Peripheral	Section
Any existing GPIO pin on P0, P1, P2 and P3	GPIO pin event	See INPUTMUX.
P1_4, P1_5, P1_8, P1_9, P1_18, P1_19	Frequency measure module	See INPUTMUX.
CT_INP[0:19] pin functions selected from IOCON register	CTIMER	See CTIMER.
TRIG_IN[0:11] pin functions selected from IOCON register	Inputmux trigger input	See INPUTMUX.

13.6 Memory map and register definition

This section includes the INPUTMUX module memory map and detailed descriptions of all registers.

13.6.1 INPUTMUX register descriptions

13.6.1.1 INPUTMUX memory map

INPUTMUX0 base address: 4000_1000h

Offset	Register	Width (In bits)	Access	Reset value
20h - 2Ch	Capture select register for CTIMER inputs (CTIMER0CAP0 - CTIMER0CAP3)	32	RW	0000_007Fh
30h	Trigger register for TIMER0 (TIMER0TRIG)	32	RW	0000_007Fh
40h - 4Ch	Capture select register for CTIMER inputs (CTIMER1CAP0 - CTIMER1CAP3)	32	RW	0000_007Fh
50h	Trigger register for TIMER1 (TIMER1TRIG)	32	RW	0000_007Fh
60h - 6Ch	Capture select register for CTIMER inputs (CTIMER2CAP0 - CTIMER2CAP3)	32	RW	0000_007Fh
70h	Trigger register for TIMER2 inputs (TIMER2TRIG)	32	RW	0000_007Fh
A0h - BCh	SmartDMA Trigger Input Connections (SmartDMA_TRIG0 - SmartDMA_TRIG7)	32	RW	0000_007Fh
180h	Selection for frequency measurement reference clock (FREQMEAS_REF)	32	RW	0000_003Fh
184h	Selection for frequency measurement reference clock (FREQMEAS_TAR)	32	RW	0000_003Fh
1A0h - 1ACh	Capture select register for CTIMER inputs (CTIMER3CAP0 - CTIMER3CAP3)	32	RW	0000_007Fh
1B0h	Trigger register for TIMER3 (TIMER3TRIG)	32	RW	0000_007Fh
1C0h - 1CCh	Capture select register for CTIMER inputs (CTIMER4CAP0 - CTIMER4CAP3)	32	RW	0000_007Fh
1D0h	Trigger register for TIMER4 (TIMER4TRIG)	32	RW	0000_007Fh
200h - 23Ch	AOI1 trigger input connections 0 (AOI1_INPUT0 - AOI1_INPUT15)	32	RW	0000_007Fh
260h	CMP0 input connections (CMP0_TRIG)	32	RW	0000_003Fh
280h - 28Ch	ADC Trigger input connections (ADC0_TRIG0 - ADC0_TRIG3)	32	RW	0000_003Fh
2A0h - 2ACh	ADC Trigger input connections (ADC2_TRIG0 - ADC2_TRIG3)	32	RW	0000_003Fh
2C0h - 2CCh	ADC Trigger input connections (ADC1_TRIG0 - ADC1_TRIG3)	32	RW	0000_003Fh
2E0h - 2ECh	ADC Trigger input connections (ADC3_TRIG0 - ADC3_TRIG3)	32	RW	0000_003Fh
300h	DAC0 Trigger input connections. (DAC0_TRIG)	32	RW	0000_003Fh
360h	QDC0 Trigger Input Connections (QDC0_TRIG)	32	RW	0000_007Fh
364h	QDC0 Trigger Input Connections (QDC0_HOME)	32	RW	0000_007Fh
368h	QDC0 Trigger Input Connections (QDC0_INDEX)	32	RW	0000_007Fh

Table continues on the next page...

Table continued from the previous page...

Offset	Register	Width (In bits)	Access	Reset value
36Ch	QDC0 Trigger Input Connections (QDC0_PHASEB)	32	RW	0000_007Fh
370h	QDC0 Trigger Input Connections (QDC0_PHASEA)	32	RW	0000_007Fh
374h	QDC0 Trigger Input Connections (QDC0_ICAP1)	32	RW	0000_007Fh
378h	QDC0 Trigger Input Connections (QDC0_ICAP2)	32	RW	0000_007Fh
37Ch	QDC0 Trigger Input Connections (QDC0_ICAP3)	32	RW	0000_007Fh
380h	QDC1 Trigger Input Connections (QDC1_TRIG)	32	RW	0000_007Fh
384h	QDC1 Trigger Input Connections (QDC1_HOME)	32	RW	0000_007Fh
388h	QDC1 Trigger Input Connections (QDC1_INDEX)	32	RW	0000_007Fh
38Ch	QDC1 Trigger Input Connections (QDC1_PHASEB)	32	RW	0000_007Fh
390h	QDC1 Trigger Input Connections (QDC1_PHASEA)	32	RW	0000_007Fh
394h	QDC1 Trigger Input Connections (QDC1_ICAP1)	32	RW	0000_007Fh
398h	QDC1 Trigger Input Connections (QDC1_ICAP2)	32	RW	0000_007Fh
39Ch	QDC1 Trigger Input Connections (QDC1_ICAP3)	32	RW	0000_007Fh
3A0h	PWM0 input trigger connections (FlexPWM0_SM0_EXT_A0)	32	RW	0000_003Fh
3A4h	PWM0 input trigger connections (FlexPWM0_SM0_EXT_SYNC)	32	RW	0000_003Fh
3A8h	PWM0 input trigger connections (FlexPWM0_SM1_EXT_A)	32	RW	0000_003Fh
3ACh	PWM0 input trigger connections (FlexPWM0_SM1_EXT_SYNC)	32	RW	0000_003Fh
3B0h	PWM0 input trigger connections (FlexPWM0_SM2_EXT_A)	32	RW	0000_003Fh
3B4h	PWM0 input trigger connections (FlexPWM0_SM2_EXT_SYNC)	32	RW	0000_003Fh
3B8h	PWM0 input trigger connections (FlexPWM0_SM3_EXT_A0)	32	RW	0000_003Fh
3BCh	PWM0 input trigger connections (FlexPWM0_SM3_EXT_SYNC)	32	RW	0000_003Fh
3C0h - 3CCh	PWM0 Fault Input Trigger Connections (FlexPWM0_FAULT0 - FlexPWM0_FAULT3)	32	RW	0000_003Fh
3D0h	PWM0 input trigger connections (FlexPWM0_FORCE)	32	RW	0000_003Fh
3E0h	PWM1 input trigger connections (FlexPWM1_SM0_EXT_A0)	32	RW	0000_003Fh
3E4h	PWM1 input trigger connections (FlexPWM1_SM0_EXT_SYNC)	32	RW	0000_003Fh
3E8h	PWM1 input trigger connections (FlexPWM1_SM1_EXT_A)	32	RW	0000_003Fh
3ECh	PWM1 input trigger connections (FlexPWM1_SM1_EXT_SYNC)	32	RW	0000_003Fh
3F0h	PWM1 input trigger connections (FlexPWM1_SM2_EXT_A)	32	RW	0000_003Fh
3F4h	PWM1 input trigger connections (FlexPWM1_SM2_EXT_SYNC)	32	RW	0000_003Fh
3F8h	PWM1 input trigger connections (FlexPWM1_SM3_EXT_A0)	32	RW	0000_003Fh

Table continues on the next page...

Table continued from the previous page...

Offset	Register	Width (In bits)	Access	Reset value
3FCh	PWM1 input trigger connections (FlexPWM1_SM3_EXTSYNC)	32	RW	0000_003Fh
400h - 40Ch	PWM1 Fault Input Trigger Connections (FlexPWM1_FAULT0 - FlexPWM1_FAULT3)	32	RW	0000_003Fh
410h	PWM1 input trigger connections (FlexPWM1_FORCE)	32	RW	0000_003Fh
420h	PWM0 external clock trigger (PWM0_EXT_CLK)	32	RW	0000_000Fh
424h	PWM1 external clock trigger (PWM1_EXT_CLK)	32	RW	0000_000Fh
440h - 47Ch	AOI0 trigger input connections 0 (AOI0_INPUT0 - AOI0_INPUT15)	32	RW	0000_007Fh
480h	USB-FS trigger input connections (USBFS_TRIG)	32	RW	0000_0007h
4C0h - 4DCh	EXT trigger connections (EXT_TRIG0 - EXT_TRIG7)	32	RW	0000_001Fh
4E0h	CMP1 input connections (CMP1_TRIG)	32	RW	0000_003Fh
500h	CMP2 input connections (CMP2_TRIG)	32	RW	0000_003Fh
540h	LPI2C2 trigger input connections (LPI2C2_TRIG)	32	RW	0000_003Fh
560h	LPI2C3 trigger input connections (LPI2C3_TRIG)	32	RW	0000_003Fh
5A0h	LPI2C0 trigger input connections (LPI2C0_TRIG)	32	RW	0000_003Fh
5C0h	LPI2C1 trigger input connections (LPI2C1_TRIG)	32	RW	0000_003Fh
5E0h	LPSPi0 trigger input connections (LPSPi0_TRIG)	32	RW	0000_003Fh
600h	LPSPi1 trigger input connections (LPSPi1_TRIG)	32	RW	0000_003Fh
620h	LPUART0 trigger input connections (LPUART0)	32	RW	0000_003Fh
640h	LPUART1 trigger input connections (LPUART1)	32	RW	0000_003Fh
660h	LPUART2 trigger input connections (LPUART2)	32	RW	0000_003Fh
680h	LPUART3 trigger input connections (LPUART3)	32	RW	0000_003Fh
6A0h	LPUART4 trigger input connections (LPUART4)	32	RW	0000_003Fh
6C0h	LPUART5 trigger input connections (LPUART5)	32	RW	0000_003Fh
6E0h - 6ECh	FlexIO Trigger Input Connections (FLEXIO_TRIG0 - FLEXIO_TRIG3)	32	RW	0000_007Fh
A00h	Trigger filter prescaler (TRIGFIL_PRSC)	32	RW	0000_0000h
A04h	Trigger filter stat (TRIGFIL_STAT0)	32	R	0000_0000h
A10h - A3Ch	TRIGFIL control (TRIGFIL0 - TRIGFIL11)	32	RW	0000_0000h

13.6.1.2 Capture select register for CTIMER inputs (CTIMER0CAP0 - CTIMER0CAP3)


Offset

Register	Offset
CTIMER0CAP0	20h
CTIMER0CAP1	24h
CTIMER0CAP2	28h
CTIMER0CAP3	2Ch

Function

For each of the 5 standard timers, numbered $i = 0$ to 4 there are 4 $TIMERiCAPj$, with $j = 0$ to 3, each allowing selecting between 25 external or internal input sources. The output of $TIMER0CAP0$ Input multiplexing register 0 selects the source for $TIMER0$ capture input 0. The output of $TIMER0CAP1$ Input multiplexing register 1 selects the source for $TIMER0$ capture input 1, and so forth up to $TIMER4CAP3$. Input multiplexing register 3, which selects the input for $TIMER4$ capture input 3.

Diagram

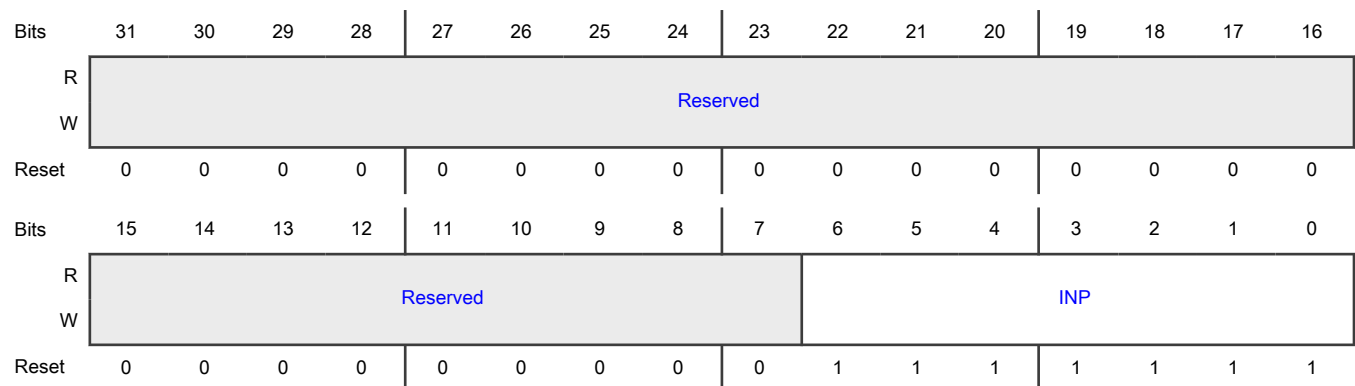

Fields

Field	Function
31-7 —	Reserved
6-0 INP	Input number for CTIMER0 000_0000b - Reserved 000_0001b - CT_INP0 input is selected 000_0010b - CT_INP1 input is selected 000_0011b - CT_INP2 input is selected 000_0100b - CT_INP3 input is selected 000_0101b - CT_INP4 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	000_0110b - CT_INP5 input is selected
	000_0111b - CT_INP6 input is selected
	000_1000b - CT_INP7 input is selected
	000_1001b - CT_INP8 input is selected
	000_1010b - CT_INP9 input is selected
	000_1011b - CT_INP10 input is selected
	000_1100b - CT_INP11 input is selected
	000_1101b - CT_INP12 input is selected
	000_1110b - CT_INP13 input is selected
	000_1111b - CT_INP14 input is selected
	001_0000b - CT_INP15 input is selected
	001_0001b - CT_INP16 input is selected
	001_0010b - CT_INP17 input is selected
	001_0011b - CT_INP18 input is selected
	001_0100b - CT_INP19 input is selected
	001_0101b - USB0 usb0 start of frame input is selected
	001_0110b - AOIO_OUT0 input is selected
	001_0111b - AOIO_OUT1 input is selected
	001_1000b - AOIO_OUT2 input is selected
	001_1001b - AOIO_OUT3 input is selected
	001_1010b - ADC0_tcomp[0]
	001_1011b - ADC0_tcomp[1]
	001_1100b - ADC0_tcomp[2]
	001_1101b - ADC0_tcomp[3] input is selected
	001_1110b - CMP0_OUT is selected
	001_1111b - CMP1_OUT is selected
	010_0000b - CMP2_OUT is selected
	010_0001b - CTimer1_MAT1 input is selected
	010_0010b - CTimer1_MAT2 input is selected
	010_0011b - CTimer1_MAT3 input is selected
	010_0100b - CTimer2_MAT1 input is selected
	010_0101b - CTimer2_MAT2 input is selected
	010_0110b - CTimer2_MAT3 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	010_0111b - QDC0_CMP_FLAG0 is selected 010_1000b - QDC0_CMP_FLAG1 input is selected 010_1001b - QDC0_CMP_FLAG2 input is selected 010_1010b - QDC0_CMP_FLAG3 input is selected 010_1011b - QDC0_POS_MATCH0 input is selected 010_1100b - PWM0_SM0_MUX_TRIG0 input is selected 010_1101b - PWM0_SM1_MUX_TRIG0 input is selected 010_1110b - PWM0_SM2_MUX_TRIG0 input is selected 010_1111b - PWM0_SM3_MUX_TRIG0 input is selected 011_0000b - LPI2C0 Master End of Packet input is selected 011_0001b - LPI2C0 Slave End of Packet input is selected 011_0010b - LPI2C1 Master End of Packet input is selected 011_0011b - LPI2C1 Slave End of Packet input is selected 011_0100b - LPSPi0 End of Frame input is selected 011_0101b - LPSPi0 Received Data Word input is selected 011_0110b - LPSPi1 End of Frame input is selected 011_0111b - LPSPi1 Received Data Word input is selected 011_1000b - LPUART0 Received Data Word input is selected 011_1001b - LPUART0 Transmitted Data Word input is selected 011_1010b - LPUART0 Receive Line Idle input is selected 011_1011b - LPUART1 Received Data Word input is selected 011_1100b - LPUART1 Transmitted Data Word input is selected 011_1101b - LPUART1 Receive Line Idle input is selected 011_1110b - LPUART2 Received Data Word input is selected 011_1111b - LPUART2 Transmitted Data Word input is selected 100_0000b - LPUART2 Receive Line Idle input is selected 100_0001b - LPUART3 Received Data Word input is selected 100_0010b - LPUART3 Transmitted Data Word input is selected 100_0011b - LPUART3 Receive Line Idle input is selected 100_0100b - LPUART4 Received Data Word input is selected 100_0101b - LPUART4 Transmitted Data Word input is selected 100_0110b - LPUART4 Receive Line Idle input is selected 100_0111b - AOI1_OUT0 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	100_1000b - AOI1_OUT1 input is selected
	100_1001b - AOI1_OUT2 input is selected
	100_1010b - AOI1_OUT3 input is selected
	100_1011b - ADC1_tcomp[0] input is selected
	100_1100b - ADC1_tcomp[1] input is selected
	100_1101b - ADC1_tcomp[2] input is selected
	100_1110b - ADC1_tcomp[3] input is selected
	100_1111b - CTimer3_MAT1 input is selected
	101_0000b - CTimer3_MAT2 input is selected
	101_0001b - CTimer3_MAT3 input is selected
	101_0010b - CTimer4_MAT1 input is selected
	101_0011b - CTimer4_MAT2 input is selected
	101_0100b - CTimer4_MAT3 input is selected
	101_0101b - QDC1_CMP_FLAG0 input is selected
	101_0110b - QDC1_CMP_FLAG1 input is selected
	101_0111b - QDC1_CMP_FLAG2 input is selected
	101_1000b - QDC1_CMP_FLAG3 input is selected
	101_1001b - QDC1_POS_MATCH0 input is selected
	101_1010b - PWM1_SM0_MUX_TRIG0 input is selected
	101_1011b - PWM1_SM1_MUX_TRIG0 input is selected
	101_1100b - PWM1_SM2_MUX_TRIG0 input is selected
	101_1101b - PWM1_SM3_MUX_TRIG0 input is selected
	101_1110b - LPI2C2 Master End of Packet input is selected
	101_1111b - LPI2C2 Slave End of Packet input is selected
	110_0000b - LPI2C3 Master End of Packet input is selected
	110_0001b - LPI2C3 Slave End of Packet input is selected
	110_0010b - LPUART5 Received Data Word input is selected
	110_0011b - LPUART5 Transmitted Data Word input is selected
	110_0100b - LPUART5 Receive Line Idle input is selected
	110_0101b - Reserved
	110_0110b - Reserved
	110_0111b - Reserved
	110_1000b - Reserved

Table continues on the next page...

Table continued from the previous page...


Field	Function
	110_1001b - ADC2_tcomp[0] input is selected 110_1010b - ADC2_tcomp[1] input is selected 110_1011b - ADC2_tcomp[2] input is selected 110_1100b - ADC2_tcomp[3] input is selected 110_1101b - ADC3_tcomp[0] input is selected 110_1110b - ADC3_tcomp[1] input is selected 110_1111b - ADC3_tcomp[2] input is selected 111_0000b - ADC3_tcomp[3] input is selected All other values are reserved.

13.6.1.3 Trigger register for TIMER0 (TIMER0TRIG)

Offset

Register	Offset
TIMER0TRIG	30h

Diagram

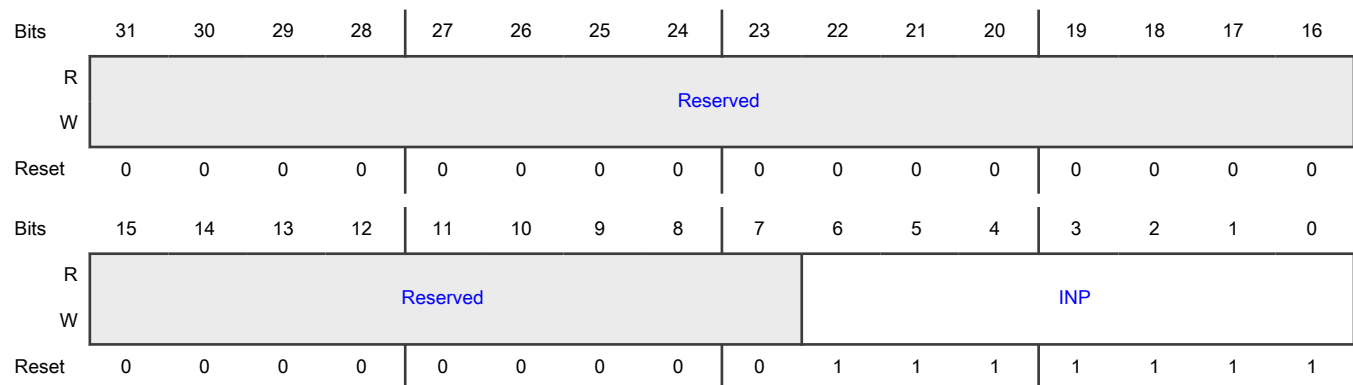

Fields

Field	Function
31-7 —	Reserved
6-0 INP	Input number for CTIMER0

Table continues on the next page...

Table continued from the previous page...

Field	Function
	000_0000b - Reserved
	000_0001b - CT_INP0 input is selected
	000_0010b - CT_INP1 input is selected
	000_0011b - CT_INP2 input is selected
	000_0100b - CT_INP3 input is selected
	000_0101b - CT_INP4 input is selected
	000_0110b - CT_INP5 input is selected
	000_0111b - CT_INP6 input is selected
	000_1000b - CT_INP7 input is selected
	000_1001b - CT_INP8 input is selected
	000_1010b - CT_INP9 input is selected
	000_1011b - CT_INP10 input is selected
	000_1100b - CT_INP11 input is selected
	000_1101b - CT_INP12 input is selected
	000_1110b - CT_INP13 input is selected
	000_1111b - CT_INP14 input is selected
	001_0000b - CT_INP15 input is selected
	001_0001b - CT_INP16 input is selected
	001_0010b - CT_INP17 input is selected
	001_0011b - CT_INP18 input is selected
	001_0100b - CT_INP19 input is selected
	001_0101b - USB0 usb0 start of frame input is selected
	001_0110b - AOIO_OUT0 input is selected
	001_0111b - AOIO_OUT1 input is selected
	001_1000b - AOIO_OUT2 input is selected
	001_1001b - AOIO_OUT3 input is selected
	001_1010b - ADC0_tcomp[0]
	001_1011b - ADC0_tcomp[1]
	001_1100b - ADC0_tcomp[2]
	001_1101b - ADC0_tcomp[3] input is selected
	001_1110b - CMP0_OUT is selected
	001_1111b - CMP1_OUT is selected
	010_0000b - CMP2_OUT is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	010_0001b - CTimer1_MAT1 input is selected
	010_0010b - CTimer1_MAT2 input is selected
	010_0011b - CTimer1_MAT3 input is selected
	010_0100b - CTimer2_MAT1 input is selected
	010_0101b - CTimer2_MAT2 input is selected
	010_0110b - CTimer2_MAT3 input is selected
	010_0111b - QDC0_CMP_FLAG0 is selected
	010_1000b - QDC0_CMP_FLAG1 input is selected
	010_1001b - QDC0_CMP_FLAG2 input is selected
	010_1010b - QDC0_CMP_FLAG3 input is selected
	010_1011b - QDC0_POS_MATCH0 input is selected
	010_1100b - PWM0_SM0_MUX_TRIG0 input is selected
	010_1101b - PWM0_SM1_MUX_TRIG0 input is selected
	010_1110b - PWM0_SM2_MUX_TRIG0 input is selected
	010_1111b - PWM0_SM3_MUX_TRIG0 input is selected
	011_0000b - LPI2C0 Master End of Packet input is selected
	011_0001b - LPI2C0 Slave End of Packet input is selected
	011_0010b - LPI2C1 Master End of Packet input is selected
	011_0011b - LPI2C1 Slave End of Packet input is selected
	011_0100b - LPSPi0 End of Frame input is selected
	011_0101b - LPSPi0 Received Data Word input is selected
	011_0110b - LPSPi1 End of Frame input is selected
	011_0111b - LPSPi1 Received Data Word input is selected
	011_1000b - LPUART0 Received Data Word input is selected
	011_1001b - LPUART0 Transmitted Data Word input is selected
	011_1010b - LPUART0 Receive Line Idle input is selected
	011_1011b - LPUART1 Received Data Word input is selected
	011_1100b - LPUART1 Transmitted Data Word input is selected
	011_1101b - LPUART1 Receive Line Idle input is selected
	011_1110b - LPUART2 Received Data Word input is selected
	011_1111b - LPUART2 Transmitted Data Word input is selected
	100_0000b - LPUART2 Receive Line Idle input is selected
	100_0001b - LPUART3 Received Data Word input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	100_0010b - LPUART3 Transmitted Data Word input is selected
	100_0011b - LPUART3 Receive Line Idle input is selected
	100_0100b - LPUART4 Received Data Word input is selected
	100_0101b - LPUART4 Transmitted Data Word input is selected
	100_0110b - LPUART4 Receive Line Idle input is selected
	100_0111b - AOI1_OUT0 input is selected
	100_1000b - AOI1_OUT1 input is selected
	100_1001b - AOI1_OUT2 input is selected
	100_1010b - AOI1_OUT3 input is selected
	100_1011b - ADC1_tcomp[0] input is selected
	100_1100b - ADC1_tcomp[1] input is selected
	100_1101b - ADC1_tcomp[2] input is selected
	100_1110b - ADC1_tcomp[3] input is selected
	100_1111b - CTimer3_MAT1 input is selected
	101_0000b - CTimer3_MAT2 input is selected
	101_0001b - CTimer3_MAT3 input is selected
	101_0010b - CTimer4_MAT1 input is selected
	101_0011b - CTimer4_MAT2 input is selected
	101_0100b - CTimer4_MAT3 input is selected
	101_0101b - QDC1_CMP_FLAG0 input is selected
	101_0110b - QDC1_CMP_FLAG1 input is selected
	101_0111b - QDC1_CMP_FLAG2 input is selected
	101_1000b - QDC1_CMP_FLAG3 input is selected
	101_1001b - QDC1_POS_MATCH0 input is selected
	101_1010b - PWM1_SM0_MUX_TRIG0 input is selected
	101_1011b - PWM1_SM1_MUX_TRIG0 input is selected
	101_1100b - PWM1_SM2_MUX_TRIG0 input is selected
	101_1101b - PWM1_SM2_MUX_TRIG0 input is selected
	101_1110b - LPI2C2 Master End of Packet input is selected
	101_1111b - LPI2C2 Slave End of Packet input is selected
	110_0000b - LPI2C3 Master End of Packet input is selected
	110_0001b - LPI2C3 Slave End of Packet input is selected
	110_0010b - LPUART5 Received Data Word input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	110_0011b - LPUART5 Transmitted Data Word input is selected 110_0100b - LPUART5 Receive Line Idle input is selected 110_0101b - Reserved 110_0110b - Reserved 110_0111b - Reserved 110_1000b - Reserved 110_1001b - ADC2_tcomp[0] input is selected 110_1010b - ADC2_tcomp[1] input is selected 110_1011b - ADC2_tcomp[2] input is selected 110_1100b - ADC2_tcomp[3] input is selected 110_1101b - ADC3_tcomp[0] input is selected 110_1110b - ADC3_tcomp[1] input is selected 110_1111b - ADC3_tcomp[2] input is selected 111_0000b - ADC3_tcomp[3] input is selected All other values are reserved.

13.6.1.4 Capture select register for CTIMER inputs (CTIMER1CAP0 - CTIMER1CAP3)


Offset

Register	Offset
CTIMER1CAP0	40h
CTIMER1CAP1	44h
CTIMER1CAP2	48h
CTIMER1CAP3	4Ch

Function

For each of the 5 standard timers, numbered $i = 0$ to 4 there are 4 $TIMERiCAPj$, with $j = 0$ to 3, each allowing selecting between 25 external or internal input sources. The output of $TIMER0CAP0$ Input multiplexing register 0 selects the source for $TIMER0$ capture input 0. The output of $TIMER0CAP1$ Input multiplexing register 1 selects the source for $TIMER0$ capture input 1, and so forth up to $TIMER4CAP3$. Input multiplexing register 3, which selects the input for $TIMER4$ capture input 3.

Diagram

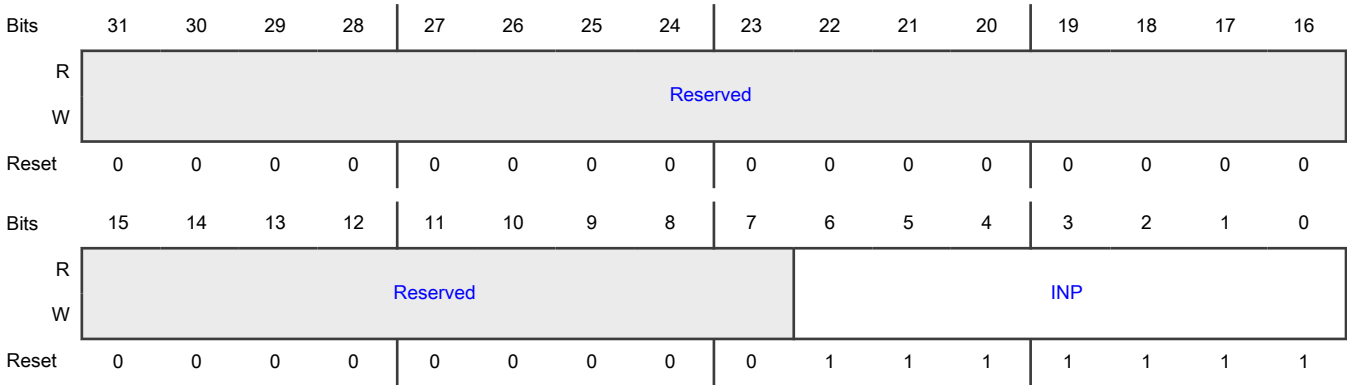

Fields

Field	Function
31-7 —	Reserved
6-0 INP	Input number for CTIMER1 000_0000b - Reserved 000_0001b - CT_INP0 input is selected 000_0010b - CT_INP1 input is selected 000_0011b - CT_INP2 input is selected 000_0100b - CT_INP3 input is selected 000_0101b - CT_INP4 input is selected 000_0110b - CT_INP5 input is selected 000_0111b - CT_INP6 input is selected 000_1000b - CT_INP7 input is selected 000_1001b - CT_INP8 input is selected 000_1010b - CT_INP9 input is selected 000_1011b - CT_INP10 input is selected 000_1100b - CT_INP11 input is selected 000_1101b - CT_INP12 input is selected 000_1110b - CT_INP13 input is selected 000_1111b - CT_INP14 input is selected 001_0000b - CT_INP15 input is selected 001_0001b - CT_INP16 input is selected 001_0010b - CT_INP17 input is selected 001_0011b - CT_INP18 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	001_0100b - CT_INP19 input is selected
	001_0101b - USB0 usb0 start of frame input is selected
	001_0110b - AOI0_OUT0 input is selected
	001_0111b - AOI0_OUT1 input is selected
	001_1000b - AOI0_OUT2 input is selected
	001_1001b - AOI0_OUT3 input is selected
	001_1010b - ADC0_tcomp[0]
	001_1011b - ADC0_tcomp[1]
	001_1100b - ADC0_tcomp[2]
	001_1101b - ADC0_tcomp[3] input is selected
	001_1110b - CMP0_OUT is selected
	001_1111b - CMP1_OUT is selected
	010_0000b - CMP2_OUT is selected
	010_0001b - CTimer0_MAT1 input is selected
	010_0010b - CTimer0_MAT2 input is selected
	010_0011b - CTimer0_MAT3 input is selected
	010_0100b - CTimer2_MAT1 input is selected
	010_0101b - CTimer2_MAT2 input is selected
	010_0110b - CTimer2_MAT3 input is selected
	010_0111b - QDC0_CMP_FLAG0 is selected
	010_1000b - QDC0_CMP_FLAG1 input is selected
	010_1001b - QDC0_CMP_FLAG2 input is selected
	010_1010b - QDC0_CMP_FLAG3 input is selected
	010_1011b - QDC0_POS_MATCH0 input is selected
	010_1100b - PWM0_SM0_MUX_TRIG0 input is selected
	010_1101b - PWM0_SM1_MUX_TRIG0 input is selected
	010_1110b - PWM0_SM2_MUX_TRIG0 input is selected
	010_1111b - PWM0_SM3_MUX_TRIG0 input is selected
	011_0000b - LPI2C0 Master End of Packet input is selected
	011_0001b - LPI2C0 Slave End of Packet input is selected
	011_0010b - LPI2C1 Master End of Packet input is selected
	011_0011b - LPI2C1 Slave End of Packet input is selected
	011_0100b - LPSPi0 End of Frame input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	011_0101b - LPSPi0 Received Data Word input is selected 011_0110b - LPSPi1 End of Frame input is selected 011_0111b - LPSPi1 Received Data Word input is selected 011_1000b - LPUART0 Received Data Word input is selected 011_1001b - LPUART0 Transmitted Data Word input is selected 011_1010b - LPUART0 Receive Line Idle input is selected 011_1011b - LPUART1 Received Data Word input is selected 011_1100b - LPUART1 Transmitted Data Word input is selected 011_1101b - LPUART1 Receive Line Idle input is selected 011_1110b - LPUART2 Received Data Word input is selected 011_1111b - LPUART2 Transmitted Data Word input is selected 100_0000b - LPUART2 Receive Line Idle input is selected 100_0001b - LPUART3 Received Data Word input is selected 100_0010b - LPUART3 Transmitted Data Word input is selected 100_0011b - LPUART3 Receive Line Idle input is selected 100_0100b - LPUART4 Received Data Word input is selected 100_0101b - LPUART4 Transmitted Data Word input is selected 100_0110b - LPUART4 Receive Line Idle input is selected 100_0111b - AOI1_OUT0 input is selected 100_1000b - AOI1_OUT1 input is selected 100_1001b - AOI1_OUT2 input is selected 100_1010b - AOI1_OUT3 input is selected 100_1011b - ADC1_tcomp[0] input is selected 100_1100b - ADC1_tcomp[1] input is selected 100_1101b - ADC1_tcomp[2] input is selected 100_1110b - ADC1_tcomp[3] input is selected 100_1111b - CTimer3_MAT1 input is selected 101_0000b - CTimer3_MAT2 input is selected 101_0001b - CTimer3_MAT3 input is selected 101_0010b - CTimer4_MAT1 input is selected 101_0011b - CTimer4_MAT2 input is selected 101_0100b - CTimer4_MAT3 input is selected 101_0101b - QDC1_CMP_FLAG0 input is selected

Table continues on the next page...

Table continued from the previous page...


Field	Function
	101_0110b - QDC1_CMP_FLAG1 input is selected 101_0111b - QDC1_CMP_FLAG2 input is selected 101_1000b - QDC1_CMP_FLAG3 input is selected 101_1001b - QDC1_POS_MATCH0 input is selected 101_1010b - PWM1_SM0_MUX_TRIG0 input is selected 101_1011b - PWM1_SM1_MUX_TRIG0 input is selected 101_1100b - PWM1_SM2_MUX_TRIG0 input is selected 101_1101b - PWM1_SM2_MUX_TRIG0 input is selected 101_1110b - LPI2C2 Master End of Packet input is selected 101_1111b - LPI2C2 Slave End of Packet input is selected 110_0000b - LPI2C3 Master End of Packet input is selected 110_0001b - LPI2C3 Slave End of Packet input is selected 110_0010b - LPUART5 Received Data Word input is selected 110_0011b - LPUART5 Transmitted Data Word input is selected 110_0100b - LPUART5 Receive Line Idle input is selected 110_0101b - Reserved 110_0110b - Reserved 110_0111b - Reserved 110_1000b - Reserved 110_1001b - ADC2_tcomp[0] input is selected 110_1010b - ADC2_tcomp[1] input is selected 110_1011b - ADC2_tcomp[2] input is selected 110_1100b - ADC2_tcomp[3] input is selected 110_1101b - ADC3_tcomp[0] input is selected 110_1110b - ADC3_tcomp[1] input is selected 110_1111b - ADC3_tcomp[2] input is selected 111_0000b - ADC3_tcomp[3] input is selected All other values are reserved.

13.6.1.5 Trigger register for TIMER1 (TIMER1TRIG)

Offset

Register	Offset
TIMER1TRIG	50h

Diagram

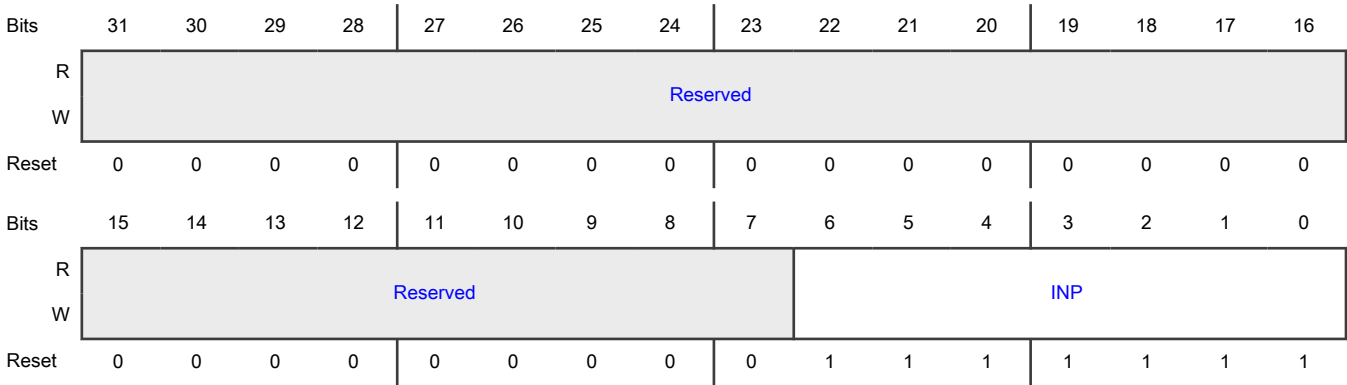

Fields

Field	Function
31-7 —	Reserved
6-0 INP	Input number for CTIMER1 000_0000b - Reserved 000_0001b - CT_INP0 input is selected 000_0010b - CT_INP1 input is selected 000_0011b - CT_INP2 input is selected 000_0100b - CT_INP3 input is selected 000_0101b - CT_INP4 input is selected 000_0110b - CT_INP5 input is selected 000_0111b - CT_INP6 input is selected 000_1000b - CT_INP7 input is selected 000_1001b - CT_INP8 input is selected 000_1010b - CT_INP9 input is selected 000_1011b - CT_INP10 input is selected 000_1100b - CT_INP11 input is selected 000_1101b - CT_INP12 input is selected 000_1110b - CT_INP13 input is selected 000_1111b - CT_INP14 input is selected 001_0000b - CT_INP15 input is selected 001_0001b - CT_INP16 input is selected 001_0010b - CT_INP17 input is selected 001_0011b - CT_INP18 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	001_0100b - CT_INP19 input is selected
	001_0101b - USB0 usb0 start of frame input is selected
	001_0110b - AOI0_OUT0 input is selected
	001_0111b - AOI0_OUT1 input is selected
	001_1000b - AOI0_OUT2 input is selected
	001_1001b - AOI0_OUT3 input is selected
	001_1010b - ADC0_tcomp[0]
	001_1011b - ADC0_tcomp[1]
	001_1100b - ADC0_tcomp[2]
	001_1101b - ADC0_tcomp[3] input is selected
	001_1110b - CMP0_OUT is selected
	001_1111b - CMP1_OUT is selected
	010_0000b - CMP2_OUT is selected
	010_0001b - CTimer0_MAT1 input is selected
	010_0010b - CTimer0_MAT2 input is selected
	010_0011b - CTimer0_MAT3 input is selected
	010_0100b - CTimer2_MAT1 input is selected
	010_0101b - CTimer2_MAT2 input is selected
	010_0110b - CTimer2_MAT3 input is selected
	010_0111b - QDC0_CMP_FLAG0 is selected
	010_1000b - QDC0_CMP_FLAG1 input is selected
	010_1001b - QDC0_CMP_FLAG2 input is selected
	010_1010b - QDC0_CMP_FLAG3 input is selected
	010_1011b - QDC0_POS_MATCH0 input is selected
	010_1100b - PWM0_SM0_MUX_TRIG0 input is selected
	010_1101b - PWM0_SM1_MUX_TRIG0 input is selected
	010_1110b - PWM0_SM2_MUX_TRIG0 input is selected
	010_1111b - PWM0_SM3_MUX_TRIG0 input is selected
	011_0000b - LPI2C0 Master End of Packet input is selected
	011_0001b - LPI2C0 Slave End of Packet input is selected
	011_0010b - LPI2C1 Master End of Packet input is selected
	011_0011b - LPI2C1 Slave End of Packet input is selected
	011_0100b - LPSPi0 End of Frame input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	011_0101b - LPSPi0 Received Data Word input is selected
	011_0110b - LPSPi1 End of Frame input is selected
	011_0111b - LPSPi1 Received Data Word input is selected
	011_1000b - LPUART0 Received Data Word input is selected
	011_1001b - LPUART0 Transmitted Data Word input is selected
	011_1010b - LPUART0 Receive Line Idle input is selected
	011_1011b - LPUART1 Received Data Word input is selected
	011_1100b - LPUART1 Transmitted Data Word input is selected
	011_1101b - LPUART1 Receive Line Idle input is selected
	011_1110b - LPUART2 Received Data Word input is selected
	011_1111b - LPUART2 Transmitted Data Word input is selected
	100_0000b - LPUART2 Receive Line Idle input is selected
	100_0001b - LPUART3 Received Data Word input is selected
	100_0010b - LPUART3 Transmitted Data Word input is selected
	100_0011b - LPUART3 Receive Line Idle input is selected
	100_0100b - LPUART4 Received Data Word input is selected
	100_0101b - LPUART4 Transmitted Data Word input is selected
	100_0110b - LPUART4 Receive Line Idle input is selected
	100_0111b - AOI1_OUT0 input is selected
	100_1000b - AOI1_OUT1 input is selected
	100_1001b - AOI1_OUT2 input is selected
	100_1010b - AOI1_OUT3 input is selected
	100_1011b - ADC1_tcomp[0] input is selected
	100_1100b - ADC1_tcomp[1] input is selected
	100_1101b - ADC1_tcomp[2] input is selected
	100_1110b - ADC1_tcomp[3] input is selected
	100_1111b - CTimer3_MAT1 input is selected
	101_0000b - CTimer3_MAT2 input is selected
	101_0001b - CTimer3_MAT3 input is selected
	101_0010b - CTimer4_MAT1 input is selected
	101_0011b - CTimer4_MAT2 input is selected
	101_0100b - CTimer4_MAT3 input is selected
	101_0101b - QDC1_CMP_FLAG0 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	101_0110b - QDC1_CMP_FLAG1 input is selected 101_0111b - QDC1_CMP_FLAG2 input is selected 101_1000b - QDC1_CMP_FLAG3 input is selected 101_1001b - QDC1_POS_MATCH0 input is selected 101_1010b - PWM1_SM0_MUX_TRIG0 input is selected 101_1011b - PWM1_SM1_MUX_TRIG0 input is selected 101_1100b - PWM1_SM2_MUX_TRIG0 input is selected 101_1101b - PWM1_SM2_MUX_TRIG0 input is selected 101_1110b - LPI2C2 Master End of Packet input is selected 101_1111b - LPI2C2 Slave End of Packet input is selected 110_0000b - LPI2C3 Master End of Packet input is selected 110_0001b - LPI2C3 Slave End of Packet input is selected 110_0010b - LPUART5 Received Data Word input is selected 110_0011b - LPUART5 Transmitted Data Word input is selected 110_0100b - LPUART5 Receive Line Idle input is selected 110_0101b - Reserved 110_0110b - Reserved 110_0111b - Reserved 110_1000b - Reserved 110_1001b - ADC2_tcomp[0] input is selected 110_1010b - ADC2_tcomp[1] input is selected 110_1011b - ADC2_tcomp[2] input is selected 110_1100b - ADC2_tcomp[3] input is selected 110_1101b - ADC3_tcomp[0] input is selected 110_1110b - ADC3_tcomp[1] input is selected 110_1111b - ADC3_tcomp[2] input is selected 111_0000b - ADC3_tcomp[3] input is selected All other values are reserved.

13.6.1.6 Capture select register for CTIMER inputs (CTIMER2CAP0 - CTIMER2CAP3)


Offset

Register	Offset
CTIMER2CAP0	60h
CTIMER2CAP1	64h
CTIMER2CAP2	68h
CTIMER2CAP3	6Ch

Function

For each of the 5 standard timers, numbered $i = 0$ to 4 there are 4 $TIMERiCAPj$, with $j = 0$ to 3, each allowing selecting between 25 external or internal input sources. The output of $TIMER0CAP0$ Input multiplexing register 0 selects the source for $TIMER0$ capture input 0. The output of $TIMER0CAP1$ Input multiplexing register 1 selects the source for $TIMER0$ capture input 1, and so forth up to $TIMER4CAP3$. Input multiplexing register 3, which selects the input for $TIMER4$ capture input 3.

Diagram

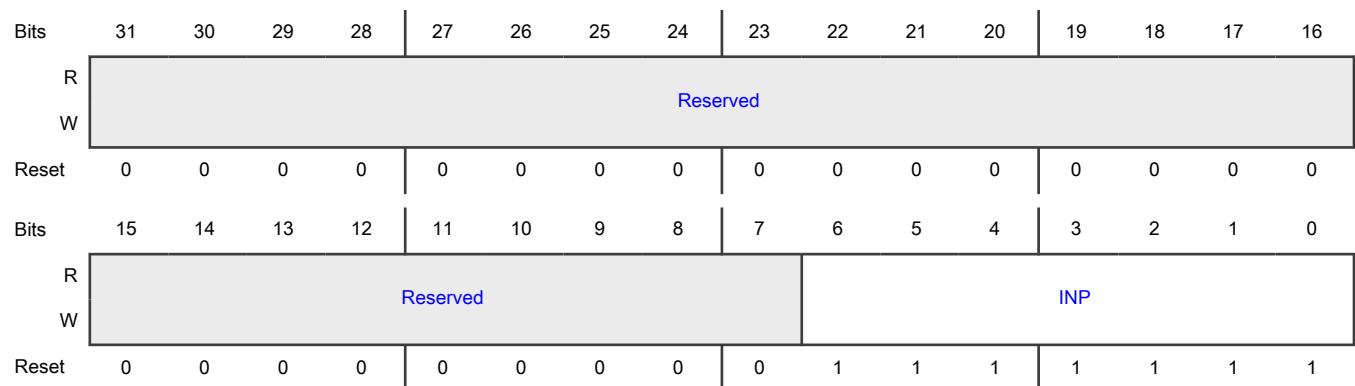

Fields

Field	Function
31-7 —	Reserved
6-0 INP	Input number for CTIMER2 000_0000b - Reserved 000_0001b - CT_INP0 input is selected 000_0010b - CT_INP1 input is selected 000_0011b - CT_INP2 input is selected 000_0100b - CT_INP3 input is selected 000_0101b - CT_INP4 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	000_0110b - CT_INP5 input is selected
	000_0111b - CT_INP6 input is selected
	000_1000b - CT_INP7 input is selected
	000_1001b - CT_INP8 input is selected
	000_1010b - CT_INP9 input is selected
	000_1011b - CT_INP10 input is selected
	000_1100b - CT_INP11 input is selected
	000_1101b - CT_INP12 input is selected
	000_1110b - CT_INP13 input is selected
	000_1111b - CT_INP14 input is selected
	001_0000b - CT_INP15 input is selected
	001_0001b - CT_INP16 input is selected
	001_0010b - CT_INP17 input is selected
	001_0011b - CT_INP18 input is selected
	001_0100b - CT_INP19 input is selected
	001_0101b - USB0 usb0 start of frame input is selected
	001_0110b - AOIO_OUT0 input is selected
	001_0111b - AOIO_OUT1 input is selected
	001_1000b - AOIO_OUT2 input is selected
	001_1001b - AOIO_OUT3 input is selected
	001_1010b - ADC0_tcomp[0]
	001_1011b - ADC0_tcomp[1]
	001_1100b - ADC0_tcomp[2]
	001_1101b - ADC0_tcomp[3] input is selected
	001_1110b - CMP0_OUT is selected
	001_1111b - CMP1_OUT is selected
	010_0000b - CMP2_OUT is selected
	010_0001b - CTimer0_MAT1 input is selected
	010_0010b - CTimer0_MAT2 input is selected
	010_0011b - CTimer0_MAT3 input is selected
	010_0100b - CTimer1_MAT1 input is selected
	010_0101b - CTimer1_MAT2 input is selected
	010_0110b - CTimer1_MAT3 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	010_0111b - QDC0_CMP_FLAG0 is selected 010_1000b - QDC0_CMP_FLAG1 input is selected 010_1001b - QDC0_CMP_FLAG2 input is selected 010_1010b - QDC0_CMP_FLAG3 input is selected 010_1011b - QDC0_POS_MATCH0 input is selected 010_1100b - PWM0_SM0_MUX_TRIG0 input is selected 010_1101b - PWM0_SM1_MUX_TRIG0 input is selected 010_1110b - PWM0_SM2_MUX_TRIG0 input is selected 010_1111b - PWM0_SM3_MUX_TRIG0 input is selected 011_0000b - LPI2C0 Master End of Packet input is selected 011_0001b - LPI2C0 Slave End of Packet input is selected 011_0010b - LPI2C1 Master End of Packet input is selected 011_0011b - LPI2C1 Slave End of Packet input is selected 011_0100b - LPSPi0 End of Frame input is selected 011_0101b - LPSPi0 Received Data Word input is selected 011_0110b - LPSPi1 End of Frame input is selected 011_0111b - LPSPi1 Received Data Word input is selected 011_1000b - LPUART0 Received Data Word input is selected 011_1001b - LPUART0 Transmitted Data Word input is selected 011_1010b - LPUART0 Receive Line Idle input is selected 011_1011b - LPUART1 Received Data Word input is selected 011_1100b - LPUART1 Transmitted Data Word input is selected 011_1101b - LPUART1 Receive Line Idle input is selected 011_1110b - LPUART2 Received Data Word input is selected 011_1111b - LPUART2 Transmitted Data Word input is selected 100_0000b - LPUART2 Receive Line Idle input is selected 100_0001b - LPUART3 Received Data Word input is selected 100_0010b - LPUART3 Transmitted Data Word input is selected 100_0011b - LPUART3 Receive Line Idle input is selected 100_0100b - LPUART4 Received Data Word input is selected 100_0101b - LPUART4 Transmitted Data Word input is selected 100_0110b - LPUART4 Receive Line Idle input is selected 100_0111b - AOI1_OUT0 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	100_1000b - AOI1_OUT1 input is selected
	100_1001b - AOI1_OUT2 input is selected
	100_1010b - AOI1_OUT3 input is selected
	100_1011b - ADC1_tcomp[0] input is selected
	100_1100b - ADC1_tcomp[1] input is selected
	100_1101b - ADC1_tcomp[2] input is selected
	100_1110b - ADC1_tcomp[3] input is selected
	100_1111b - CTimer3_MAT1 input is selected
	101_0000b - CTimer3_MAT2 input is selected
	101_0001b - CTimer3_MAT3 input is selected
	101_0010b - CTimer4_MAT1 input is selected
	101_0011b - CTimer4_MAT2 input is selected
	101_0100b - CTimer4_MAT3 input is selected
	101_0101b - QDC1_CMP_FLAG0 input is selected
	101_0110b - QDC1_CMP_FLAG1 input is selected
	101_0111b - QDC1_CMP_FLAG2 input is selected
	101_1000b - QDC1_CMP_FLAG3 input is selected
	101_1001b - QDC1_POS_MATCH0 input is selected
	101_1010b - PWM1_SM0_MUX_TRIG0 input is selected
	101_1011b - PWM1_SM1_MUX_TRIG0 input is selected
	101_1100b - PWM1_SM2_MUX_TRIG0 input is selected
	101_1101b - PWM1_SM2_MUX_TRIG0 input is selected
	101_1110b - LPI2C2 Master End of Packet input is selected
	101_1111b - LPI2C2 Slave End of Packet input is selected
	110_0000b - LPI2C3 Master End of Packet input is selected
	110_0001b - LPI2C3 Slave End of Packet input is selected
	110_0010b - LPUART5 Received Data Word input is selected
	110_0011b - LPUART5 Transmitted Data Word input is selected
	110_0100b - LPUART5 Receive Line Idle input is selected
	110_0101b - Reserved
	110_0110b - Reserved
	110_0111b - Reserved
	110_1000b - Reserved

Table continues on the next page...

Table continued from the previous page...


Field	Function
	110_1001b - ADC2_tcomp[0] input is selected 110_1010b - ADC2_tcomp[1] input is selected 110_1011b - ADC2_tcomp[2] input is selected 110_1100b - ADC2_tcomp[3] input is selected 110_1101b - ADC3_tcomp[0] input is selected 110_1110b - ADC3_tcomp[1] input is selected 110_1111b - ADC3_tcomp[2] input is selected 111_0000b - ADC3_tcomp[3] input is selected All other values are reserved.

13.6.1.7 Trigger register for TIMER2 inputs (TIMER2TRIG)

Offset

Register	Offset
TIMER2TRIG	70h

Diagram

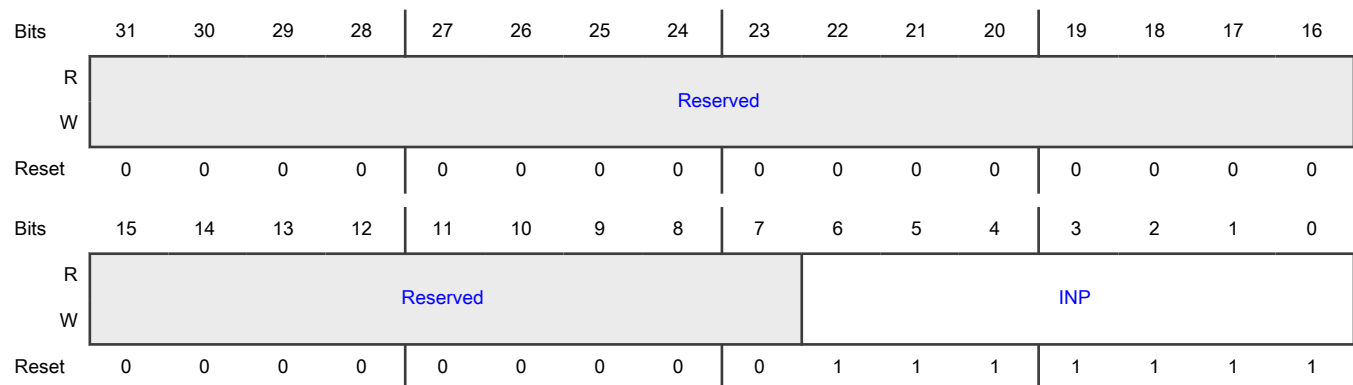

Fields

Field	Function
31-7 —	Reserved
6-0 INP	Input number for CTIMER2

Table continues on the next page...

Table continued from the previous page...

Field	Function
	000_0000b - Reserved
	000_0001b - CT_INP0 input is selected
	000_0010b - CT_INP1 input is selected
	000_0011b - CT_INP2 input is selected
	000_0100b - CT_INP3 input is selected
	000_0101b - CT_INP4 input is selected
	000_0110b - CT_INP5 input is selected
	000_0111b - CT_INP6 input is selected
	000_1000b - CT_INP7 input is selected
	000_1001b - CT_INP8 input is selected
	000_1010b - CT_INP9 input is selected
	000_1011b - CT_INP10 input is selected
	000_1100b - CT_INP11 input is selected
	000_1101b - CT_INP12 input is selected
	000_1110b - CT_INP13 input is selected
	000_1111b - CT_INP14 input is selected
	001_0000b - CT_INP15 input is selected
	001_0001b - CT_INP16 input is selected
	001_0010b - CT_INP17 input is selected
	001_0011b - CT_INP18 input is selected
	001_0100b - CT_INP19 input is selected
	001_0101b - USB0 usb0 start of frame input is selected
	001_0110b - AOIO_OUT0 input is selected
	001_0111b - AOIO_OUT1 input is selected
	001_1000b - AOIO_OUT2 input is selected
	001_1001b - AOIO_OUT3 input is selected
	001_1010b - ADC0_tcomp[0]
	001_1011b - ADC0_tcomp[1]
	001_1100b - ADC0_tcomp[2]
	001_1101b - ADC0_tcomp[3] input is selected
	001_1110b - CMP0_OUT is selected
	001_1111b - CMP1_OUT is selected
	010_0000b - CMP2_OUT is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	010_0001b - CTimer0_MAT1 input is selected
	010_0010b - CTimer0_MAT2 input is selected
	010_0011b - CTimer0_MAT3 input is selected
	010_0100b - CTimer1_MAT1 input is selected
	010_0101b - CTimer1_MAT2 input is selected
	010_0110b - CTimer1_MAT3 input is selected
	010_0111b - QDC0_CMP_FLAG0 is selected
	010_1000b - QDC0_CMP_FLAG1 input is selected
	010_1001b - QDC0_CMP_FLAG2 input is selected
	010_1010b - QDC0_CMP_FLAG3 input is selected
	010_1011b - QDC0_POS_MATCH0 input is selected
	010_1100b - PWM0_SM0_MUX_TRIG0 input is selected
	010_1101b - PWM0_SM1_MUX_TRIG0 input is selected
	010_1110b - PWM0_SM2_MUX_TRIG0 input is selected
	010_1111b - PWM0_SM3_MUX_TRIG0 input is selected
	011_0000b - LPI2C0 Master End of Packet input is selected
	011_0001b - LPI2C0 Slave End of Packet input is selected
	011_0010b - LPI2C1 Master End of Packet input is selected
	011_0011b - LPI2C1 Slave End of Packet input is selected
	011_0100b - LPSPi0 End of Frame input is selected
	011_0101b - LPSPi0 Received Data Word input is selected
	011_0110b - LPSPi1 End of Frame input is selected
	011_0111b - LPSPi1 Received Data Word input is selected
	011_1000b - LPUART0 Received Data Word input is selected
	011_1001b - LPUART0 Transmitted Data Word input is selected
	011_1010b - LPUART0 Receive Line Idle input is selected
	011_1011b - LPUART1 Received Data Word input is selected
	011_1100b - LPUART1 Transmitted Data Word input is selected
	011_1101b - LPUART1 Receive Line Idle input is selected
	011_1110b - LPUART2 Received Data Word input is selected
	011_1111b - LPUART2 Transmitted Data Word input is selected
	100_0000b - LPUART2 Receive Line Idle input is selected
	100_0001b - LPUART3 Received Data Word input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	100_0010b - LPUART3 Transmitted Data Word input is selected
	100_0011b - LPUART3 Receive Line Idle input is selected
	100_0100b - LPUART4 Received Data Word input is selected
	100_0101b - LPUART4 Transmitted Data Word input is selected
	100_0110b - LPUART4 Receive Line Idle input is selected
	100_0111b - AOI1_OUT0 input is selected
	100_1000b - AOI1_OUT1 input is selected
	100_1001b - AOI1_OUT2 input is selected
	100_1010b - AOI1_OUT3 input is selected
	100_1011b - ADC1_tcomp[0] input is selected
	100_1100b - ADC1_tcomp[1] input is selected
	100_1101b - ADC1_tcomp[2] input is selected
	100_1110b - ADC1_tcomp[3] input is selected
	100_1111b - CTimer3_MAT1 input is selected
	101_0000b - CTimer3_MAT2 input is selected
	101_0001b - CTimer3_MAT3 input is selected
	101_0010b - CTimer4_MAT1 input is selected
	101_0011b - CTimer4_MAT2 input is selected
	101_0100b - CTimer4_MAT3 input is selected
	101_0101b - QDC1_CMP_FLAG0 input is selected
	101_0110b - QDC1_CMP_FLAG1 input is selected
	101_0111b - QDC1_CMP_FLAG2 input is selected
	101_1000b - QDC1_CMP_FLAG3 input is selected
	101_1001b - QDC1_POS_MATCH0 input is selected
	101_1010b - PWM1_SM0_MUX_TRIG0 input is selected
	101_1011b - PWM1_SM1_MUX_TRIG0 input is selected
	101_1100b - PWM1_SM2_MUX_TRIG0 input is selected
	101_1101b - PWM1_SM2_MUX_TRIG0 input is selected
	101_1110b - LPI2C2 Master End of Packet input is selected
	101_1111b - LPI2C2 Slave End of Packet input is selected
	110_0000b - LPI2C3 Master End of Packet input is selected
	110_0001b - LPI2C3 Slave End of Packet input is selected
	110_0010b - LPUART5 Received Data Word input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	110_0011b - LPUART5 Transmitted Data Word input is selected 110_0100b - LPUART5 Receive Line Idle input is selected 110_0101b - Reserved 110_0110b - Reserved 110_0111b - Reserved 110_1000b - Reserved 110_1001b - ADC2_tcomp[0] input is selected 110_1010b - ADC2_tcomp[1] input is selected 110_1011b - ADC2_tcomp[2] input is selected 110_1100b - ADC2_tcomp[3] input is selected 110_1101b - ADC3_tcomp[0] input is selected 110_1110b - ADC3_tcomp[1] input is selected 110_1111b - ADC3_tcomp[2] input is selected 111_0000b - ADC3_tcomp[3] input is selected All other values are reserved.

13.6.1.8 SmartDMA Trigger Input Connections (SmartDMA_TRIG0 - SmartDMA_TRIG7)

Offset


For a = 0 to 7:

Register	Offset
SmartDMA_TRIGa	A0h + (a × 4h)

Function

This register is used to select the SmartDMA trigger inputs.

Diagram

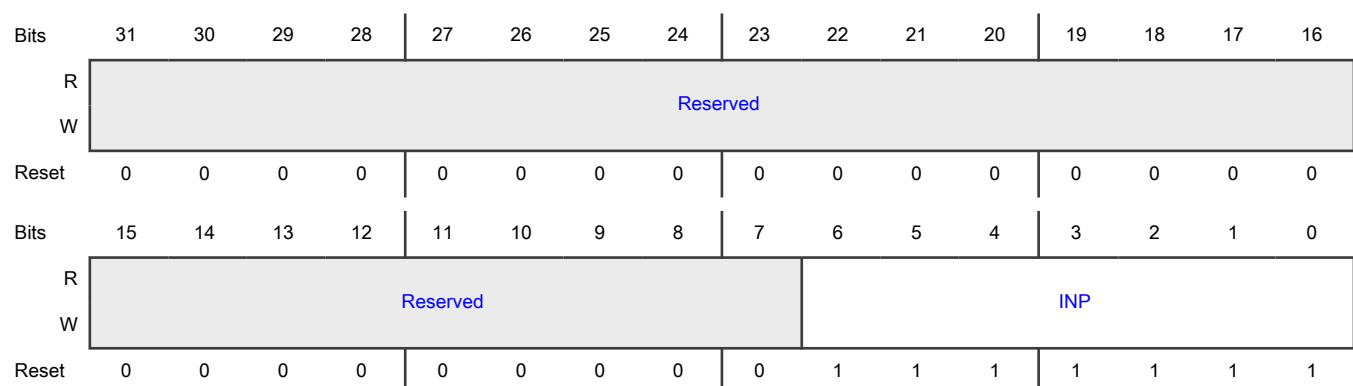

Fields

Field	Function
31-7 —	Reserved
6-0 INP	Input number for SmartDMA. 000_0000b - Reserved 000_0001b - GPIO P0_16 input is selected 000_0010b - GPIO P0_17 input is selected 000_0011b - GPIO P1_8 input is selected 000_0100b - GPIO P1_9 input is selected 000_0101b - GPIO P1_10 input is selected 000_0110b - GPIO P1_11 input is selected 000_0111b - GPIO P1_12 input is selected 000_1000b - GPIO P1_13 input is selected 000_1001b - GPIO P2_0 input is selected 000_1010b - GPIO P2_1 input is selected 000_1011b - GPIO P2_2 input is selected 000_1100b - GPIO P2_3 input is selected 000_1101b - GPIO P2_6 input is selected 000_1110b - GPIO P3_8 input is selected 000_1111b - GPIO P3_9 input is selected 001_0000b - GPIO P3_10 input is selected 001_0001b - GPIO P3_11 input is selected 001_0010b - GPIO P3_12 input is selected 001_0011b - GPIO0 Pin Event Trig input is selected 001_0100b - GPIO1 Pin Event Trig input is selected 001_0101b - GPIO2 Pin Event Trig input is selected 001_0110b - GPIO3 Pin Event Trig input is selected 001_0111b - GPIO4 Pin Event Trig input is selected 001_1000b - ARM_TXEV input is selected 001_1001b - AOI0_OUT0 input is selected 001_1010b - AOI1_OUT1 input is selected 001_1011b - DMA_IRQ input is selected 001_1100b - MAU_IRQ input is selected 001_1101b - WUU_IRQ input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	001_1110b - CTimer0_MAT2 input is selected
	001_1111b - CTimer0_MAT3 input is selected
	010_0000b - CTimer1_MAT2 input is selected
	010_0001b - CTimer1_MAT3 input is selected
	010_0010b - CTimer2_MAT2 input is selected
	010_0011b - CTimer2_MAT3 input is selected
	010_0100b - CTimer3_MAT2 input is selected
	010_0101b - CTimer3_MAT3 input is selected
	010_0110b - CTimer4_MAT2 input is selected
	010_0111b - CTimer4_MAT3 input is selected
	010_1000b - OSTIMER_IRQ input is selected
	010_1001b - PWM0_IRQ input is selected
	010_1010b - PWM1_IRQ input is selected
	010_1011b - QDC0_IRQ input is selected
	010_1100b - QDC1_IRQ input is selected
	010_1101b - RTC_Alarm_IRQ input is selected
	010_1110b - RTC_1Hz_IRQ input is selected
	010_1111b - uTICK_IRQ input is selected
	011_0000b - WDT_IRQ input is selected
	011_0001b - Wakeup_Timer_IRQ input is selected
	011_0010b - CAN0_IRQ input is selected
	011_0011b - CAN1_IRQ input is selected
	011_0100b - FlexIO_IRQ input is selected
	011_0101b - FlexIO_Shifer0_DMA_Req input is selected
	011_0110b - FlexIO_Shifer1_DMA_Req input is selected
	011_0111b - FlexIO_Shifer2_DMA_Req input is selected
	011_1000b - FlexIO_Shifer3_DMA_Req input is selected
	011_1001b - I3C0_IRQ input is selected
	011_1010b - LPI2C0_IRQ input is selected
	011_1011b - LPI2C1_IRQ input is selected
	011_1100b - LPSPi0_IRQ input is selected
	011_1101b - LPSPi1_IRQ input is selected
	011_1110b - LPUART0_IRQ input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	011_1111b - LPUART1_IRQ input is selected 100_0000b - LPUART2_IRQ input is selected 100_0001b - LPUART3_IRQ input is selected 100_0010b - USB0_SOF input is selected 100_0011b - Reserved 100_0100b - ADC0_IRQ input is selected 100_0101b - ADC1_IRQ input is selected 100_0110b - ADC2_IRQ input is selected 100_0111b - ADC3_IRQ input is selected 100_1000b - CMP0_IRQ input is selected 100_1001b - CMP1_IRQ input is selected 100_1010b - CMP2_IRQ input is selected 100_1011b - CMP0_OUT input is selected 100_1100b - CMP1_OUT input is selected 100_1101b - CMP2_OUT input is selected 100_1110b - DAC0_IRQ input is selected 100_1111b - SLCD_IRQ input is selected All other values are reserved.

13.6.1.9 Selection for frequency measurement reference clock (FREQMEAS_REF)


Offset

Register	Offset
FREQMEAS_REF	180h

Function

This register selects a clock for the reference clock of the frequency measure function. By default, no clock is selected.

Diagram

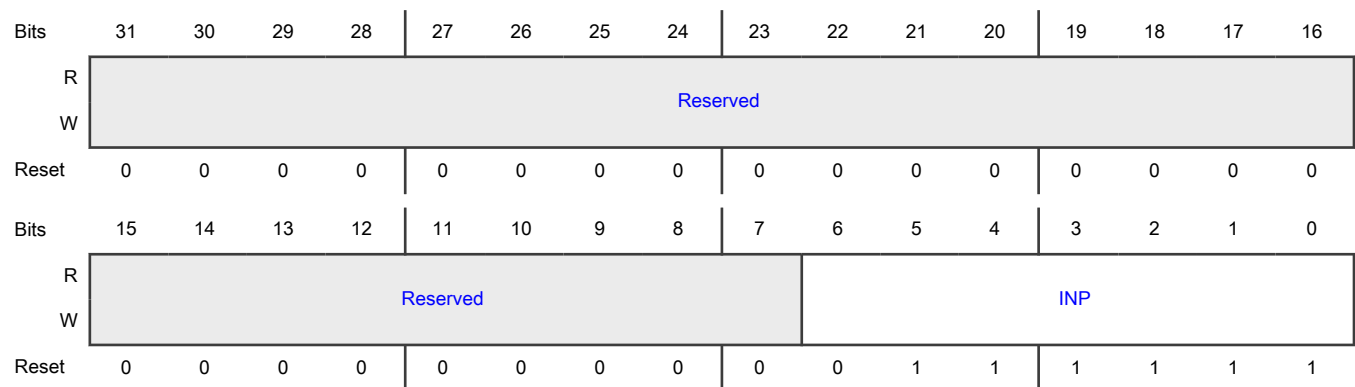

Fields

Field	Function
31-7 —	Reserved
6-0 INP	Clock source number (binary value) for frequency measure function target clock. 000_0000b - Reserved 000_0001b - clk_in input is selected 000_0010b - FRO_OSC_12M input is selected 000_0011b - fro_hf_div input is selected 000_0100b - Reserved 000_0101b - clk_16k[1] input is selected 000_0110b - SLOW_CLK input is selected 000_0111b - FREQME_CLK_IN0 input is selected 000_1000b - FREQME_CLK_IN1 input is selected input is selected 000_1001b - AOIO_OUT0 input is selected 000_1010b - AOIO_OUT1 000_1011b - PWM0_SM0_MUX_TRIG0 000_1100b - PWM0_SM0_MUX_TRIG1 000_1101b - PWM0_SM1_MUX_TRIG0 000_1110b - PWM0_SM1_MUX_TRIG1 000_1111b - PWM0_SM2_MUX_TRIG0 001_0000b - PWM0_SM2_MUX_TRIG1 001_0001b - PWM0_SM3_MUX_TRIG0 001_0010b - PWM0_SM3_MUX_TRIG1 001_0011b - Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
	001_0100b - Reserved
	001_0101b - Reserved
	001_0110b - Reserved
	001_0111b - Reserved
	001_1000b - Reserved
	001_1001b - Reserved
	001_1010b - Reserved
	001_1011b - Reserved
	001_1100b - Reserved
	001_1101b - Reserved
	001_1110b - Reserved
	001_1111b - Reserved
	010_0000b - AOI1_OUT0 input is selected
	010_0001b - AOI1_OUT1 input is selected
	010_0010b - PWM1_SM0_MUX_TRIG0 input is selected
	010_0011b - PWM1_SM0_MUX_TRIG1 input is selected
	010_0100b - PWM1_SM1_MUX_TRIG0 input is selected
	010_0101b - PWM1_SM1_MUX_TRIG1 input is selected
	010_0110b - PWM1_SM2_MUX_TRIG0 input is selected
	010_0111b - PWM1_SM2_MUX_TRIG1 input is selected
	010_1000b - PWM1_SM3_MUX_TRIG0 input is selected
	010_1001b - PWM1_SM3_MUX_TRIG1 input is selected
	All other values are reserved.

13.6.1.10 Selection for frequency measurement reference clock (FREQMEAS_TAR)


Offset

Register	Offset
FREQMEAS_TAR	184h

Function

This register selects a clock for the target clock of the frequency measure function. By default, no clock is selected.

Diagram

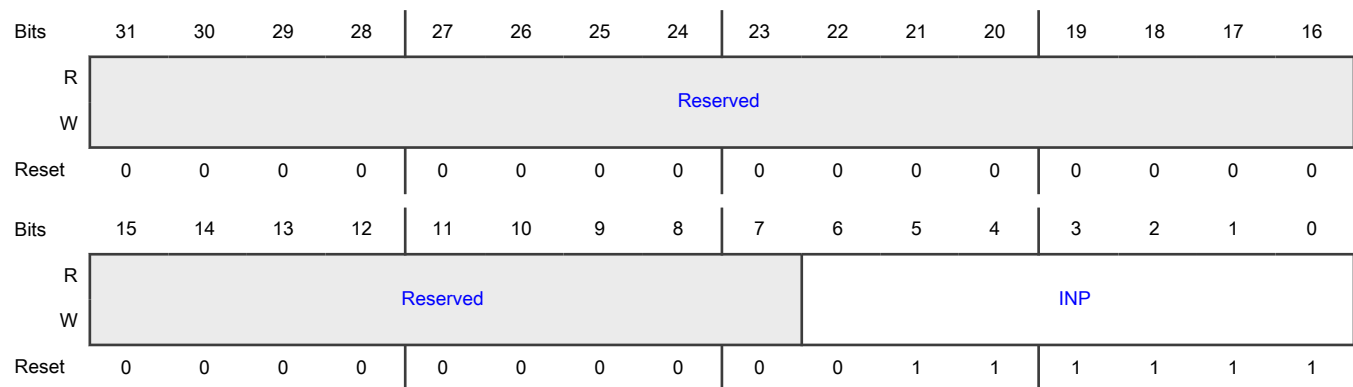

Fields

Field	Function
31-7 —	Reserved
6-0 INP	Clock source number (binary value) for frequency measure function target clock. 000_0000b - Reserved 000_0001b - clk_in input is selected 000_0010b - FRO_OSC_12M input is selected 000_0011b - fro_hf_div input is selected 000_0100b - Reserved 000_0101b - clk_16k[1] input is selected 000_0110b - SLOW_CLK input is selected 000_0111b - FREQME_CLK_IN0 input is selected 000_1000b - FREQME_CLK_IN1 input is selected input is selected 000_1001b - AOIO_OUT0 input is selected 000_1010b - AOIO_OUT1 000_1011b - PWM0_SM0_MUX_TRIG0 000_1100b - PWM0_SM0_MUX_TRIG1 000_1101b - PWM0_SM1_MUX_TRIG0 000_1110b - PWM0_SM1_MUX_TRIG1 000_1111b - PWM0_SM2_MUX_TRIG0 001_0000b - PWM0_SM2_MUX_TRIG1 001_0001b - PWM0_SM3_MUX_TRIG0 001_0010b - PWM0_SM3_MUX_TRIG1 001_0011b - Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
	001_0100b - Reserved
	001_0101b - Reserved
	001_0110b - Reserved
	001_0111b - Reserved
	001_1000b - Reserved
	001_1001b - Reserved
	001_1010b - Reserved
	001_1011b - Reserved
	001_1100b - Reserved
	001_1101b - Reserved
	001_1110b - Reserved
	001_1111b - Reserved
	010_0000b - AOI1_OUT0 input is selected
	010_0001b - AOI1_OUT1 input is selected
	010_0010b - PWM1_SM0_MUX_TRIG0 input is selected
	010_0011b - PWM1_SM0_MUX_TRIG1 input is selected
	010_0100b - PWM1_SM1_MUX_TRIG0 input is selected
	010_0101b - PWM1_SM1_MUX_TRIG1 input is selected
	010_0110b - PWM1_SM2_MUX_TRIG0 input is selected
	010_0111b - PWM1_SM2_MUX_TRIG1 input is selected
	010_1000b - PWM1_SM3_MUX_TRIG0 input is selected
	010_1001b - PWM1_SM3_MUX_TRIG1 input is selected
	All other values are reserved.

13.6.1.11 Capture select register for CTIMER inputs (CTIMER3CAP0 - CTIMER3CAP3)


Offset

Register	Offset
CTIMER3CAP0	1A0h
CTIMER3CAP1	1A4h
CTIMER3CAP2	1A8h
CTIMER3CAP3	1ACh

Function

For each of the 5 standard timers, numbered i = 0 to 4 there are 4 TIMERiCAPTj, with j = 0 to 3, each allowing selecting between 25 external or internal input sources. The output of TIMER0CAPT0 Input multiplexing register 0 selects the source for TIMER0 capture input 0. The output of TIMER0CAPT1 Input multiplexing register 1 selects the source for TIMER0 capture input 1, and so forth up to TIMER4CAPT3. Input multiplexing register 3, which selects the input for TIMER4 capture input 3.

Diagram

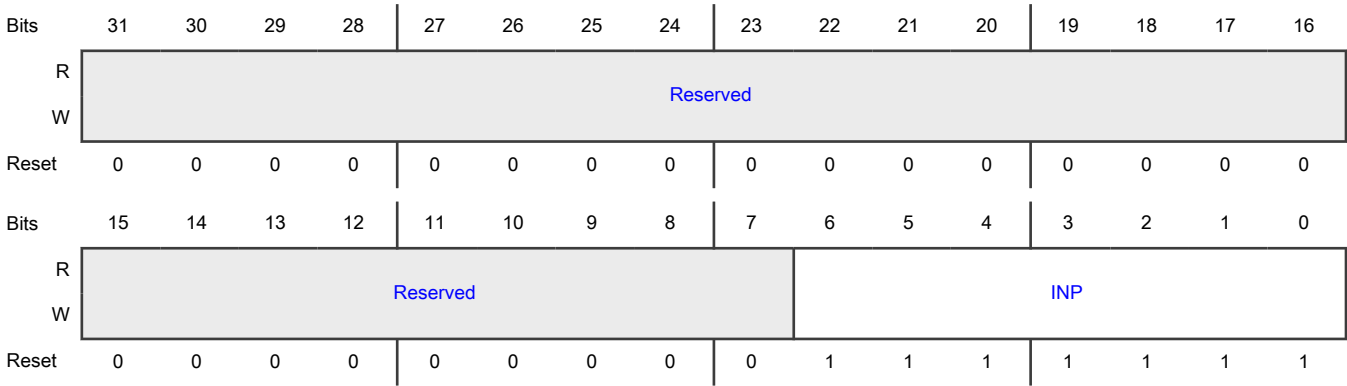

Fields

Field	Function
31-7 —	Reserved
6-0 INP	Input number for CTIMER3 000_0000b - Reserved 000_0001b - CT_INP0 input is selected 000_0010b - CT_INP1 input is selected 000_0011b - CT_INP2 input is selected 000_0100b - CT_INP3 input is selected 000_0101b - CT_INP4 input is selected 000_0110b - CT_INP5 input is selected 000_0111b - CT_INP6 input is selected 000_1000b - CT_INP7 input is selected 000_1001b - CT_INP8 input is selected 000_1010b - CT_INP9 input is selected 000_1011b - CT_INP10 input is selected 000_1100b - CT_INP11 input is selected 000_1101b - CT_INP12 input is selected 000_1110b - CT_INP13 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	000_1111b - CT_INP14 input is selected
	001_0000b - CT_INP15 input is selected
	001_0001b - CT_INP16 input is selected
	001_0010b - CT_INP17 input is selected
	001_0011b - CT_INP18 input is selected
	001_0100b - CT_INP19 input is selected
	001_0101b - USB0 usb0 start of frame input is selected
	001_0110b - AOIO_OUT0 input is selected
	001_0111b - AOIO_OUT1 input is selected
	001_1000b - AOIO_OUT2 input is selected
	001_1001b - AOIO_OUT3 input is selected
	001_1010b - ADC0_tcomp[0]
	001_1011b - ADC0_tcomp[1]
	001_1100b - ADC0_tcomp[2]
	001_1101b - ADC0_tcomp[3] input is selected
	001_1110b - CMP0_OUT is selected
	001_1111b - CMP1_OUT is selected
	010_0000b - CMP2_OUT is selected
	010_0001b - CTimer0_MAT1 input is selected
	010_0010b - CTimer0_MAT2 input is selected
	010_0011b - CTimer0_MAT3 input is selected
	010_0100b - CTimer1_MAT1 input is selected
	010_0101b - CTimer1_MAT2 input is selected
	010_0110b - CTimer1_MAT3 input is selected
	010_0111b - QDC0_CMP_FLAG0 is selected
	010_1000b - QDC0_CMP_FLAG1 input is selected
	010_1001b - QDC0_CMP_FLAG2 input is selected
	010_1010b - QDC0_CMP_FLAG3 input is selected
	010_1011b - QDC0_POS_MATCH0 input is selected
	010_1100b - PWM0_SM0_MUX_TRIG0 input is selected
	010_1101b - PWM0_SM1_MUX_TRIG0 input is selected
	010_1110b - PWM0_SM2_MUX_TRIG0 input is selected
	010_1111b - PWM0_SM3_MUX_TRIG0 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	011_0000b - LPI2C0 Master End of Packet input is selected 011_0001b - LPI2C0 Slave End of Packet input is selected 011_0010b - LPI2C1 Master End of Packet input is selected 011_0011b - LPI2C1 Slave End of Packet input is selected 011_0100b - LPSPi0 End of Frame input is selected 011_0101b - LPSPi0 Received Data Word input is selected 011_0110b - LPSPi1 End of Frame input is selected 011_0111b - LPSPi1 Received Data Word input is selected 011_1000b - LPUART0 Received Data Word input is selected 011_1001b - LPUART0 Transmitted Data Word input is selected 011_1010b - LPUART0 Receive Line Idle input is selected 011_1011b - LPUART1 Received Data Word input is selected 011_1100b - LPUART1 Transmitted Data Word input is selected 011_1101b - LPUART1 Receive Line Idle input is selected 011_1110b - LPUART2 Received Data Word input is selected 011_1111b - LPUART2 Transmitted Data Word input is selected 100_0000b - LPUART2 Receive Line Idle input is selected 100_0001b - LPUART3 Received Data Word input is selected 100_0010b - LPUART3 Transmitted Data Word input is selected 100_0011b - LPUART3 Receive Line Idle input is selected 100_0100b - LPUART4 Received Data Word input is selected 100_0101b - LPUART4 Transmitted Data Word input is selected 100_0110b - LPUART4 Receive Line Idle input is selected 100_0111b - AOI1_OUT0 input is selected 100_1000b - AOI1_OUT1 input is selected 100_1001b - AOI1_OUT2 input is selected 100_1010b - AOI1_OUT3 input is selected 100_1011b - ADC1_tcomp[0] input is selected 100_1100b - ADC1_tcomp[1] input is selected 100_1101b - ADC1_tcomp[2] input is selected 100_1110b - ADC1_tcomp[3] input is selected 100_1111b - CTimer2_MAT1 input is selected 101_0000b - CTimer2_MAT2 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	101_0001b - CTimer2_MAT3 input is selected
	101_0010b - CTimer4_MAT1 input is selected
	101_0011b - CTimer4_MAT2 input is selected
	101_0100b - CTimer4_MAT3 input is selected
	101_0101b - QDC1_CMP_FLAG0 input is selected
	101_0110b - QDC1_CMP_FLAG1 input is selected
	101_0111b - QDC1_CMP_FLAG2 input is selected
	101_1000b - QDC1_CMP_FLAG3 input is selected
	101_1001b - QDC1_POS_MATCH0 input is selected
	101_1010b - PWM1_SM0_MUX_TRIG0 input is selected
	101_1011b - PWM1_SM1_MUX_TRIG0 input is selected
	101_1100b - PWM1_SM2_MUX_TRIG0 input is selected
	101_1101b - PWM1_SM2_MUX_TRIG0 input is selected
	101_1110b - LPI2C2 Master End of Packet input is selected
	101_1111b - LPI2C2 Slave End of Packet input is selected
	110_0000b - LPI2C3 Master End of Packet input is selected
	110_0001b - LPI2C3 Slave End of Packet input is selected
	110_0010b - LPUART5 Received Data Word input is selected
	110_0011b - LPUART5 Transmitted Data Word input is selected
	110_0100b - LPUART5 Receive Line Idle input is selected
	110_0101b - Reserved
	110_0110b - Reserved
	110_0111b - Reserved
	110_1000b - Reserved
	110_1001b - ADC2_tcomp[0] input is selected
	110_1010b - ADC2_tcomp[1] input is selected
	110_1011b - ADC2_tcomp[2] input is selected
	110_1100b - ADC2_tcomp[3] input is selected
	110_1101b - ADC3_tcomp[0] input is selected
	110_1110b - ADC3_tcomp[1] input is selected
	110_1111b - ADC3_tcomp[2] input is selected
	111_0000b - ADC3_tcomp[3] input is selected
	111_0001b - TRIG_IN0 input is selected

Table continues on the next page...

Table continued from the previous page...


Field	Function
	111_0010b - TRIG_IN1 input is selected 111_0011b - TRIG_IN2 input is selected 111_0100b - TRIG_IN3 input is selected 111_0101b - TRIG_IN4 input is selected 111_0110b - TRIG_IN5 input is selected 111_0111b - TRIG_IN6 input is selected 111_1000b - TRIG_IN7 input is selected 111_1001b - TRIG_IN8 input is selected 111_1010b - TRIG_IN9 input is selected 111_1011b - TRIG_IN10 input is selected 111_1100b - TRIG_IN11 input is selected All other values are reserved.

13.6.1.12 Trigger register for TIMER3 (TIMER3TRIG)

Offset

Register	Offset
TIMER3TRIG	1B0h

Diagram

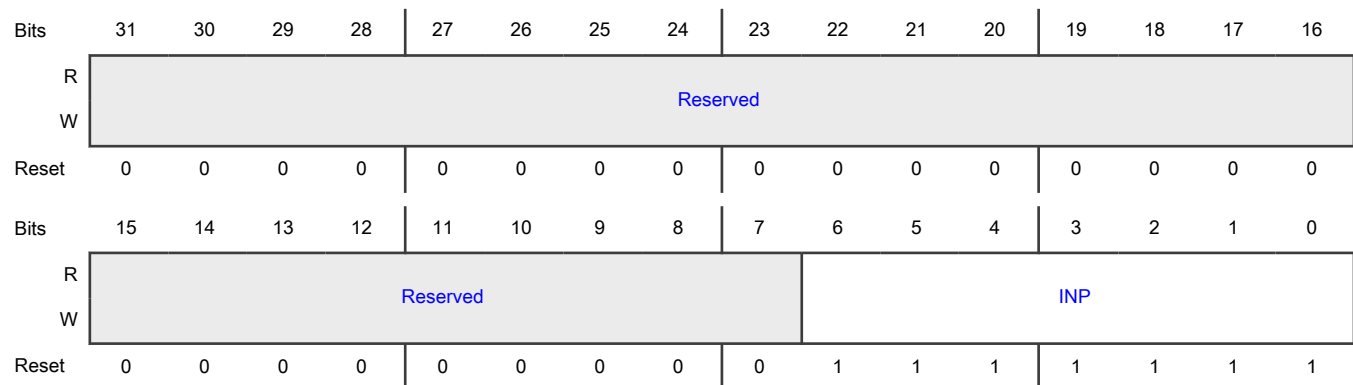

Fields

Field	Function
31-7	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
—	
6-0 INP	Input number for CTIMER3 000_0000b - Reserved 000_0001b - CT_INP0 input is selected 000_0010b - CT_INP1 input is selected 000_0011b - CT_INP2 input is selected 000_0100b - CT_INP3 input is selected 000_0101b - CT_INP4 input is selected 000_0110b - CT_INP5 input is selected 000_0111b - CT_INP6 input is selected 000_1000b - CT_INP7 input is selected 000_1001b - CT_INP8 input is selected 000_1010b - CT_INP9 input is selected 000_1011b - CT_INP10 input is selected 000_1100b - CT_INP11 input is selected 000_1101b - CT_INP12 input is selected 000_1110b - CT_INP13 input is selected 000_1111b - CT_INP14 input is selected 001_0000b - CT_INP15 input is selected 001_0001b - CT_INP16 input is selected 001_0010b - CT_INP17 input is selected 001_0011b - CT_INP18 input is selected 001_0100b - CT_INP19 input is selected 001_0101b - USB0 usb0 start of frame input is selected 001_0110b - AOI0_OUT0 input is selected 001_0111b - AOI0_OUT1 input is selected 001_1000b - AOI0_OUT2 input is selected 001_1001b - AOI0_OUT3 input is selected 001_1010b - ADC0_tcomp[0] 001_1011b - ADC0_tcomp[1] 001_1100b - ADC0_tcomp[2] 001_1101b - ADC0_tcomp[3] input is selected 001_1110b - CMP0_OUT is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	001_1111b - CMP1_OUT is selected
	010_0000b - CMP2_OUT is selected
	010_0001b - CTimer0_MAT1 input is selected
	010_0010b - CTimer0_MAT2 input is selected
	010_0011b - CTimer0_MAT3 input is selected
	010_0100b - CTimer1_MAT1 input is selected
	010_0101b - CTimer1_MAT2 input is selected
	010_0110b - CTimer1_MAT3 input is selected
	010_0111b - QDC0_CMP_FLAG0 is selected
	010_1000b - QDC0_CMP_FLAG1 input is selected
	010_1001b - QDC0_CMP_FLAG2 input is selected
	010_1010b - QDC0_CMP_FLAG3 input is selected
	010_1011b - QDC0_POS_MATCH0 input is selected
	010_1100b - PWM0_SM0_MUX_TRIG0 input is selected
	010_1101b - PWM0_SM1_MUX_TRIG0 input is selected
	010_1110b - PWM0_SM2_MUX_TRIG0 input is selected
	010_1111b - PWM0_SM3_MUX_TRIG0 input is selected
	011_0000b - LPI2C0 Master End of Packet input is selected
	011_0001b - LPI2C0 Slave End of Packet input is selected
	011_0010b - LPI2C1 Master End of Packet input is selected
	011_0011b - LPI2C1 Slave End of Packet input is selected
	011_0100b - LPSPi0 End of Frame input is selected
	011_0101b - LPSPi0 Received Data Word input is selected
	011_0110b - LPSPi1 End of Frame input is selected
	011_0111b - LPSPi1 Received Data Word input is selected
	011_1000b - LPUART0 Received Data Word input is selected
	011_1001b - LPUART0 Transmitted Data Word input is selected
	011_1010b - LPUART0 Receive Line Idle input is selected
	011_1011b - LPUART1 Received Data Word input is selected
	011_1100b - LPUART1 Transmitted Data Word input is selected
	011_1101b - LPUART1 Receive Line Idle input is selected
	011_1110b - LPUART2 Received Data Word input is selected
	011_1111b - LPUART2 Transmitted Data Word input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	100_0000b - LPUART2 Receive Line Idle input is selected
	100_0001b - LPUART3 Received Data Word input is selected
	100_0010b - LPUART3 Transmitted Data Word input is selected
	100_0011b - LPUART3 Receive Line Idle input is selected
	100_0100b - LPUART4 Received Data Word input is selected
	100_0101b - LPUART4 Transmitted Data Word input is selected
	100_0110b - LPUART4 Receive Line Idle input is selected
	100_0111b - AOI1_OUT0 input is selected
	100_1000b - AOI1_OUT1 input is selected
	100_1001b - AOI1_OUT2 input is selected
	100_1010b - AOI1_OUT3 input is selected
	100_1011b - ADC1_tcomp[0] input is selected
	100_1100b - ADC1_tcomp[1] input is selected
	100_1101b - ADC1_tcomp[2] input is selected
	100_1110b - ADC1_tcomp[3] input is selected
	100_1111b - CTimer2_MAT1 input is selected
	101_0000b - CTimer2_MAT2 input is selected
	101_0001b - CTimer2_MAT3 input is selected
	101_0010b - CTimer4_MAT1 input is selected
	101_0011b - CTimer4_MAT2 input is selected
	101_0100b - CTimer4_MAT3 input is selected
	101_0101b - QDC1_CMP_FLAG0 input is selected
	101_0110b - QDC1_CMP_FLAG1 input is selected
	101_0111b - QDC1_CMP_FLAG2 input is selected
	101_1000b - QDC1_CMP_FLAG3 input is selected
	101_1001b - QDC1_POS_MATCH0 input is selected
	101_1010b - PWM1_SM0_MUX_TRIG0 input is selected
	101_1011b - PWM1_SM1_MUX_TRIG0 input is selected
	101_1100b - PWM1_SM2_MUX_TRIG0 input is selected
	101_1101b - PWM1_SM2_MUX_TRIG0 input is selected
	101_1110b - LPI2C2 Master End of Packet input is selected
	101_1111b - LPI2C2 Slave End of Packet input is selected
	110_0000b - LPI2C3 Master End of Packet input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	110_0001b - LPI2C3 Slave End of Packet input is selected 110_0010b - LPUART5 Received Data Word input is selected 110_0011b - LPUART5 Transmitted Data Word input is selected 110_0100b - LPUART5 Receive Line Idle input is selected 110_0101b - Reserved 110_0110b - Reserved 110_0111b - Reserved 110_1000b - Reserved 110_1001b - ADC2_tcomp[0] input is selected 110_1010b - ADC2_tcomp[1] input is selected 110_1011b - ADC2_tcomp[2] input is selected 110_1100b - ADC2_tcomp[3] input is selected 110_1101b - ADC3_tcomp[0] input is selected 110_1110b - ADC3_tcomp[1] input is selected 110_1111b - ADC3_tcomp[2] input is selected 111_0000b - ADC3_tcomp[3] input is selected 111_0001b - TRIG_IN0 input is selected 111_0010b - TRIG_IN1 input is selected 111_0011b - TRIG_IN2 input is selected 111_0100b - TRIG_IN3 input is selected 111_0101b - TRIG_IN4 input is selected 111_0110b - TRIG_IN5 input is selected 111_0111b - TRIG_IN6 input is selected 111_1000b - TRIG_IN7 input is selected 111_1001b - TRIG_IN8 input is selected 111_1010b - TRIG_IN9 input is selected 111_1011b - TRIG_IN10 input is selected 111_1100b - TRIG_IN11 input is selected All other values are reserved.

13.6.1.13 Capture select register for CTIMER inputs (CTIMER4CAP0 - CTIMER4CAP3)


Offset

Register	Offset
CTIMER4CAP0	1C0h
CTIMER4CAP1	1C4h
CTIMER4CAP2	1C8h
CTIMER4CAP3	1CCh

Function

For each of the 5 standard timers, numbered $i = 0$ to 4 there are 4 $TIMERiCAPj$, with $j = 0$ to 3, each allowing selecting between 25 external or internal input sources. The output of $TIMER0CAP0$ Input multiplexing register 0 selects the source for $TIMER0$ capture input 0. The output of $TIMER0CAP1$ Input multiplexing register 1 selects the source for $TIMER0$ capture input 1, and so forth up to $TIMER4CAP3$. Input multiplexing register 3, which selects the input for $TIMER4$ capture input 3.

Diagram

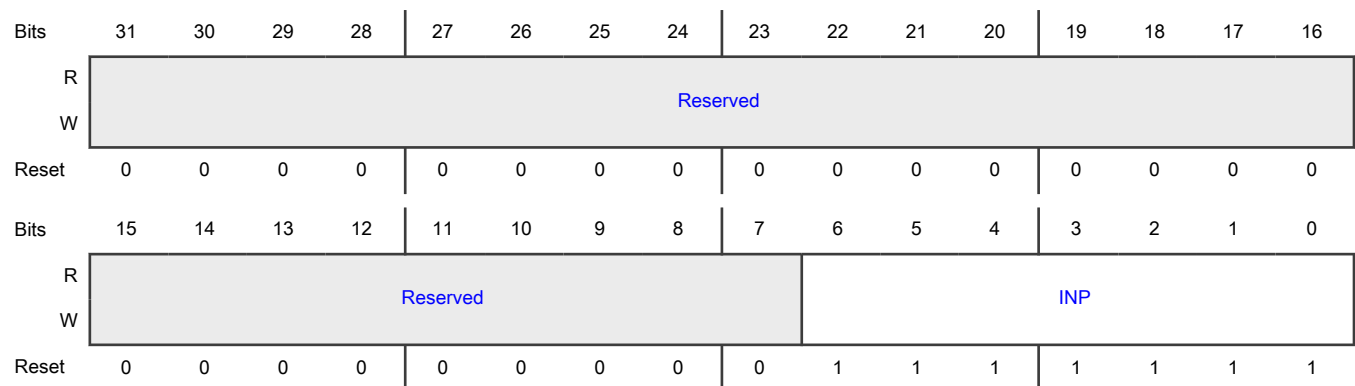

Fields

Field	Function
31-7 —	Reserved
6-0 INP	Input number for CTIMER4 000_0000b - Reserved 000_0001b - CT_INP0 input is selected 000_0010b - CT_INP1 input is selected 000_0011b - CT_INP2 input is selected 000_0100b - CT_INP3 input is selected 000_0101b - CT_INP4 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	000_0110b - CT_INP5 input is selected
	000_0111b - CT_INP6 input is selected
	000_1000b - CT_INP7 input is selected
	000_1001b - CT_INP8 input is selected
	000_1010b - CT_INP9 input is selected
	000_1011b - CT_INP10 input is selected
	000_1100b - CT_INP11 input is selected
	000_1101b - CT_INP12 input is selected
	000_1110b - CT_INP13 input is selected
	000_1111b - CT_INP14 input is selected
	001_0000b - CT_INP15 input is selected
	001_0001b - CT_INP16 input is selected
	001_0010b - CT_INP17 input is selected
	001_0011b - CT_INP18 input is selected
	001_0100b - CT_INP19 input is selected
	001_0101b - USB0 usb0 start of frame input is selected
	001_0110b - AOIO_OUT0 input is selected
	001_0111b - AOIO_OUT1 input is selected
	001_1000b - AOIO_OUT2 input is selected
	001_1001b - AOIO_OUT3 input is selected
	001_1010b - ADC0_tcomp[0]
	001_1011b - ADC0_tcomp[1]
	001_1100b - ADC0_tcomp[2]
	001_1101b - ADC0_tcomp[3] input is selected
	001_1110b - CMP0_OUT is selected
	001_1111b - CMP1_OUT is selected
	010_0000b - CMP2_OUT is selected
	010_0001b - CTimer0_MAT1 input is selected
	010_0010b - CTimer0_MAT2 input is selected
	010_0011b - CTimer0_MAT3 input is selected
	010_0100b - CTimer1_MAT1 input is selected
	010_0101b - CTimer1_MAT2 input is selected
	010_0110b - CTimer1_MAT3 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	010_0111b - QDC0_CMP_FLAG0 is selected
	010_1000b - QDC0_CMP_FLAG1 input is selected
	010_1001b - QDC0_CMP_FLAG2 input is selected
	010_1010b - QDC0_CMP_FLAG3 input is selected
	010_1011b - QDC0_POS_MATCH0 input is selected
	010_1100b - PWM0_SM0_MUX_TRIG0 input is selected
	010_1101b - PWM0_SM1_MUX_TRIG0 input is selected
	010_1110b - PWM0_SM2_MUX_TRIG0 input is selected
	010_1111b - PWM0_SM3_MUX_TRIG0 input is selected
	011_0000b - LPI2C0 Master End of Packet input is selected
	011_0001b - LPI2C0 Slave End of Packet input is selected
	011_0010b - LPI2C1 Master End of Packet input is selected
	011_0011b - LPI2C1 Slave End of Packet input is selected
	011_0100b - LPSPi0 End of Frame input is selected
	011_0101b - LPSPi0 Received Data Word input is selected
	011_0110b - LPSPi1 End of Frame input is selected
	011_0111b - LPSPi1 Received Data Word input is selected
	011_1000b - LPUART0 Received Data Word input is selected
	011_1001b - LPUART0 Transmitted Data Word input is selected
	011_1010b - LPUART0 Receive Line Idle input is selected
	011_1011b - LPUART1 Received Data Word input is selected
	011_1100b - LPUART1 Transmitted Data Word input is selected
	011_1101b - LPUART1 Receive Line Idle input is selected
	011_1110b - LPUART2 Received Data Word input is selected
	011_1111b - LPUART2 Transmitted Data Word input is selected
	100_0000b - LPUART2 Receive Line Idle input is selected
	100_0001b - LPUART3 Received Data Word input is selected
	100_0010b - LPUART3 Transmitted Data Word input is selected
	100_0011b - LPUART3 Receive Line Idle input is selected
	100_0100b - LPUART4 Received Data Word input is selected
	100_0101b - LPUART4 Transmitted Data Word input is selected
	100_0110b - LPUART4 Receive Line Idle input is selected
	100_0111b - AOI1_OUT0 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	100_1000b - AOI1_OUT1 input is selected
	100_1001b - AOI1_OUT2 input is selected
	100_1010b - AOI1_OUT3 input is selected
	100_1011b - ADC1_tcomp[0] input is selected
	100_1100b - ADC1_tcomp[1] input is selected
	100_1101b - ADC1_tcomp[2] input is selected
	100_1110b - ADC1_tcomp[3] input is selected
	100_1111b - CTimer2_MAT1 input is selected
	101_0000b - CTimer2_MAT2 input is selected
	101_0001b - CTimer2_MAT3 input is selected
	101_0010b - CTimer3_MAT1 input is selected
	101_0011b - CTimer3_MAT2 input is selected
	101_0100b - CTimer3_MAT3 input is selected
	101_0101b - QDC1_CMP_FLAG0 input is selected
	101_0110b - QDC1_CMP_FLAG1 input is selected
	101_0111b - QDC1_CMP_FLAG2 input is selected
	101_1000b - QDC1_CMP_FLAG3 input is selected
	101_1001b - QDC1_POS_MATCH0 input is selected
	101_1010b - PWM1_SM0_MUX_TRIG0 input is selected
	101_1011b - PWM1_SM1_MUX_TRIG0 input is selected
	101_1100b - PWM1_SM2_MUX_TRIG0 input is selected
	101_1101b - PWM1_SM2_MUX_TRIG0 input is selected
	101_1110b - LPI2C2 Master End of Packet input is selected
	101_1111b - LPI2C2 Slave End of Packet input is selected
	110_0000b - LPI2C3 Master End of Packet input is selected
	110_0001b - LPI2C3 Slave End of Packet input is selected
	110_0010b - LPUART5 Received Data Word input is selected
	110_0011b - LPUART5 Transmitted Data Word input is selected
	110_0100b - LPUART5 Receive Line Idle input is selected
	110_0101b - Reserved
	110_0110b - Reserved
	110_0111b - Reserved
	110_1000b - Reserved

Table continues on the next page...

Table continued from the previous page...


Field	Function
	110_1001b - ADC2_tcomp[0] input is selected 110_1010b - ADC2_tcomp[1] input is selected 110_1011b - ADC2_tcomp[2] input is selected 110_1100b - ADC2_tcomp[3] input is selected 110_1101b - ADC3_tcomp[0] input is selected 110_1110b - ADC3_tcomp[1] input is selected 110_1111b - ADC3_tcomp[2] input is selected 111_0000b - ADC3_tcomp[3] input is selected 111_0001b - TRIG_IN0 input is selected 111_0010b - TRIG_IN1 input is selected 111_0011b - TRIG_IN2 input is selected 111_0100b - TRIG_IN3 input is selected 111_0101b - TRIG_IN4 input is selected 111_0110b - TRIG_IN5 input is selected 111_0111b - TRIG_IN6 input is selected 111_1000b - TRIG_IN7 input is selected 111_1001b - TRIG_IN8 input is selected 111_1010b - TRIG_IN9 input is selected 111_1011b - TRIG_IN10 input is selected 111_1100b - TRIG_IN11 input is selected All other values are reserved.

13.6.1.14 Trigger register for TIMER4 (TIMER4TRIG)

Offset

Register	Offset
TIMER4TRIG	1D0h

Diagram

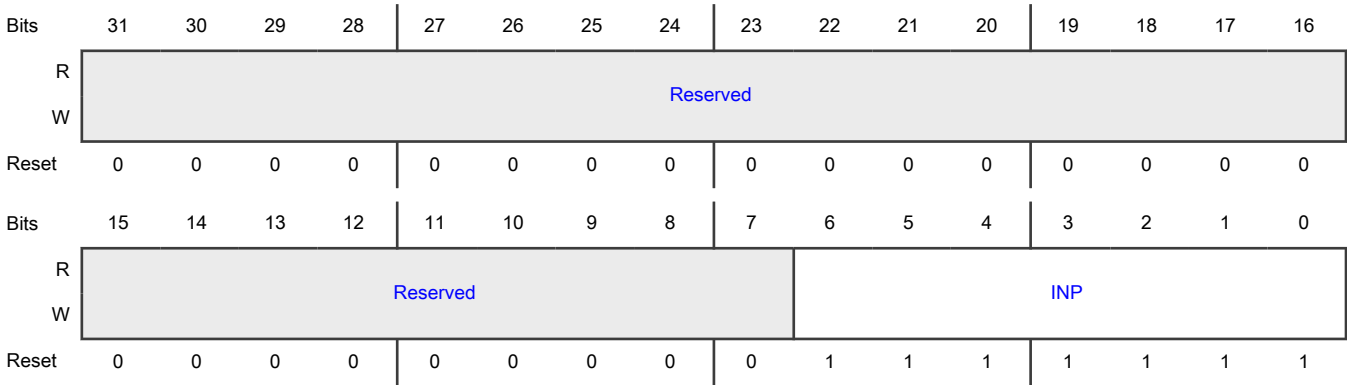

Fields

Field	Function
31-7 —	Reserved
6-0 INP	Input number for CTIMER4 000_0000b - Reserved 000_0001b - CT_INP0 input is selected 000_0010b - CT_INP1 input is selected 000_0011b - CT_INP2 input is selected 000_0100b - CT_INP3 input is selected 000_0101b - CT_INP4 input is selected 000_0110b - CT_INP5 input is selected 000_0111b - CT_INP6 input is selected 000_1000b - CT_INP7 input is selected 000_1001b - CT_INP8 input is selected 000_1010b - CT_INP9 input is selected 000_1011b - CT_INP10 input is selected 000_1100b - CT_INP11 input is selected 000_1101b - CT_INP12 input is selected 000_1110b - CT_INP13 input is selected 000_1111b - CT_INP14 input is selected 001_0000b - CT_INP15 input is selected 001_0001b - CT_INP16 input is selected 001_0010b - CT_INP17 input is selected 001_0011b - CT_INP18 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	001_0100b - CT_INP19 input is selected
	001_0101b - USB0 usb0 start of frame input is selected
	001_0110b - AOIO_OUT0 input is selected
	001_0111b - AOIO_OUT1 input is selected
	001_1000b - AOIO_OUT2 input is selected
	001_1001b - AOIO_OUT3 input is selected
	001_1010b - ADC0_tcomp[0]
	001_1011b - ADC0_tcomp[1]
	001_1100b - ADC0_tcomp[2]
	001_1101b - ADC0_tcomp[3] input is selected
	001_1110b - CMP0_OUT is selected
	001_1111b - CMP1_OUT is selected
	010_0000b - CMP2_OUT is selected
	010_0001b - CTimer0_MAT1 input is selected
	010_0010b - CTimer0_MAT2 input is selected
	010_0011b - CTimer0_MAT3 input is selected
	010_0100b - CTimer1_MAT1 input is selected
	010_0101b - CTimer1_MAT2 input is selected
	010_0110b - CTimer1_MAT3 input is selected
	010_0111b - QDC0_CMP_FLAG0 is selected
	010_1000b - QDC0_CMP_FLAG1 input is selected
	010_1001b - QDC0_CMP_FLAG2 input is selected
	010_1010b - QDC0_CMP_FLAG3 input is selected
	010_1011b - QDC0_POS_MATCH0 input is selected
	010_1100b - PWM0_SM0_MUX_TRIG0 input is selected
	010_1101b - PWM0_SM1_MUX_TRIG0 input is selected
	010_1110b - PWM0_SM2_MUX_TRIG0 input is selected
	010_1111b - PWM0_SM3_MUX_TRIG0 input is selected
	011_0000b - LPI2C0 Master End of Packet input is selected
	011_0001b - LPI2C0 Slave End of Packet input is selected
	011_0010b - LPI2C1 Master End of Packet input is selected
	011_0011b - LPI2C1 Slave End of Packet input is selected
	011_0100b - LPSPi0 End of Frame input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	011_0101b - LPSPi0 Received Data Word input is selected 011_0110b - LPSPi1 End of Frame input is selected 011_0111b - LPSPi1 Received Data Word input is selected 011_1000b - LPUART0 Received Data Word input is selected 011_1001b - LPUART0 Transmitted Data Word input is selected 011_1010b - LPUART0 Receive Line Idle input is selected 011_1011b - LPUART1 Received Data Word input is selected 011_1100b - LPUART1 Transmitted Data Word input is selected 011_1101b - LPUART1 Receive Line Idle input is selected 011_1110b - LPUART2 Received Data Word input is selected 011_1111b - LPUART2 Transmitted Data Word input is selected 100_0000b - LPUART2 Receive Line Idle input is selected 100_0001b - LPUART3 Received Data Word input is selected 100_0010b - LPUART3 Transmitted Data Word input is selected 100_0011b - LPUART3 Receive Line Idle input is selected 100_0100b - LPUART4 Received Data Word input is selected 100_0101b - LPUART4 Transmitted Data Word input is selected 100_0110b - LPUART4 Receive Line Idle input is selected 100_0111b - AOI1_OUT0 input is selected 100_1000b - AOI1_OUT1 input is selected 100_1001b - AOI1_OUT2 input is selected 100_1010b - AOI1_OUT3 input is selected 100_1011b - ADC1_tcomp[0] input is selected 100_1100b - ADC1_tcomp[1] input is selected 100_1101b - ADC1_tcomp[2] input is selected 100_1110b - ADC1_tcomp[3] input is selected 100_1111b - CTimer2_MAT1 input is selected 101_0000b - CTimer2_MAT2 input is selected 101_0001b - CTimer2_MAT3 input is selected 101_0010b - CTimer3_MAT1 input is selected 101_0011b - CTimer3_MAT2 input is selected 101_0100b - CTimer3_MAT3 input is selected 101_0101b - QDC1_CMP_FLAG0 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	101_0110b - QDC1_CMP_FLAG1 input is selected
	101_0111b - QDC1_CMP_FLAG2 input is selected
	101_1000b - QDC1_CMP_FLAG3 input is selected
	101_1001b - QDC1_POS_MATCH0 input is selected
	101_1010b - PWM1_SM0_MUX_TRIG0 input is selected
	101_1011b - PWM1_SM1_MUX_TRIG0 input is selected
	101_1100b - PWM1_SM2_MUX_TRIG0 input is selected
	101_1101b - PWM1_SM2_MUX_TRIG0 input is selected
	101_1110b - LPI2C2 Master End of Packet input is selected
	101_1111b - LPI2C2 Slave End of Packet input is selected
	110_0000b - LPI2C3 Master End of Packet input is selected
	110_0001b - LPI2C3 Slave End of Packet input is selected
	110_0010b - LPUART5 Received Data Word input is selected
	110_0011b - LPUART5 Transmitted Data Word input is selected
	110_0100b - LPUART5 Receive Line Idle input is selected
	110_0101b - Reserved
	110_0110b - Reserved
	110_0111b - Reserved
	110_1000b - Reserved
	110_1001b - ADC2_tcomp[0] input is selected
	110_1010b - ADC2_tcomp[1] input is selected
	110_1011b - ADC2_tcomp[2] input is selected
	110_1100b - ADC2_tcomp[3] input is selected
	110_1101b - ADC3_tcomp[0] input is selected
	110_1110b - ADC3_tcomp[1] input is selected
	110_1111b - ADC3_tcomp[2] input is selected
	111_0000b - ADC3_tcomp[3] input is selected
	111_0001b - TRIG_IN0 input is selected
	111_0010b - TRIG_IN1 input is selected
	111_0011b - TRIG_IN2 input is selected
	111_0100b - TRIG_IN3 input is selected
	111_0101b - TRIG_IN4 input is selected
	111_0110b - TRIG_IN5 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	111_0111b - TRIG_IN6 input is selected 111_1000b - TRIG_IN7 input is selected 111_1001b - TRIG_IN8 input is selected 111_1010b - TRIG_IN9 input is selected 111_1011b - TRIG_IN10 input is selected 111_1100b - TRIG_IN11 input is selected All other values are reserved.

13.6.1.15 AOI1 trigger input connections 0 (AOI1_INPUT0 - AOI1_INPUT15)

Offset


For a = 0 to 15:

Register	Offset
AOI1_INPUTa	200h + (a × 4h)

Function

This register is used to select the AOIO1 trigger inputs.

Diagram

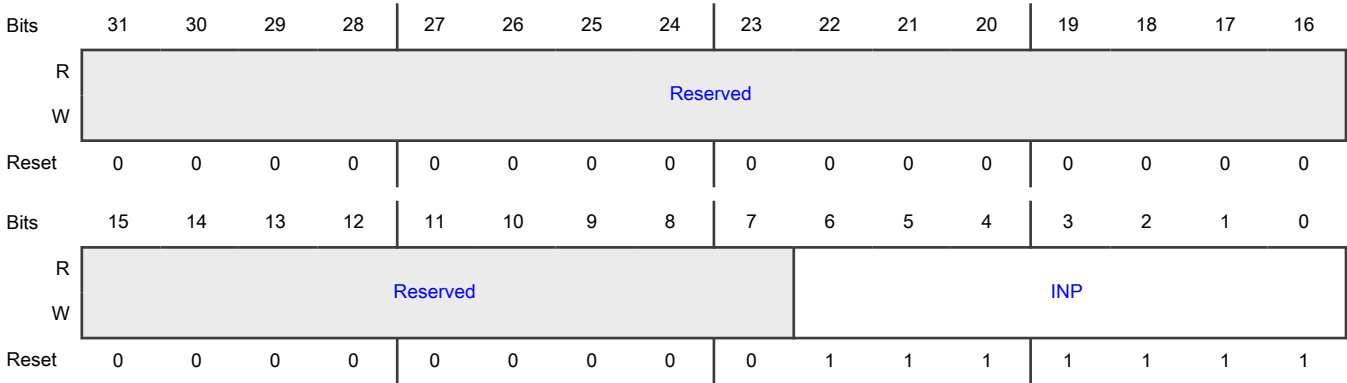

Fields

Field	Function
31-7 —	Reserved
6-0	AOI0 trigger input connections

Table continues on the next page...

Table continued from the previous page...

Field	Function
INP	000_0000b - Reserved 000_0001b - ADC0_tcomp[0] input is selected 000_0010b - ADC0_tcomp[1] input is selected 000_0011b - ADC0_tcomp[2] input is selected 000_0100b - ADC0_tcomp[3] input is selected 000_0101b - CMP0_OUT input is selected 000_0110b - CMP1_OUT input is selected 000_0111b - CMP2_OUT input is selected 000_1000b - CTimer0_MAT0 input is selected 000_1001b - CTimer0_MAT1 input is selected 000_1010b - CTimer0_MAT2 input is selected 000_1011b - CTimer0_MAT3 input is selected 000_1100b - CTimer1_MAT0 000_1101b - CTimer1_MAT1 input is selected 000_1110b - CTimer1_MAT2 input is selected 000_1111b - CTimer1_MAT3 input is selected 001_0000b - CTimer2_MAT0 input is selected 001_0001b - CTimer2_MAT1 input is selected 001_0010b - CTimer2_MAT2 input is selected 001_0011b - CTimer2_MAT3 input is selected 001_0100b - LPTMR0 input is selected 001_0101b - Reserved 001_0110b - QDC0_CMP_FLAG0 input is selected 001_0111b - QDC0_CMP_FLAG1 input is selected 001_1000b - QDC0_CMP_FLAG2 input is selected 001_1001b - QDC0_CMP_FLAG3 input is selected 001_1010b - QDC0_POS_MATCH0 input is selected 001_1011b - PWM0_SM0_MUX_TRIG0 input is selected 001_1100b - PWM0_SM0_MUX_TRIG1 input is selected 001_1101b - PWM0_SM1_MUX_TRIG0 input is selected 001_1110b - PWM0_SM1_MUX_TRIG1 input is selected 001_1111b - PWM0_SM2_MUX_TRIG0 input is selected 010_0000b - PWM0_SM2_MUX_TRIG1 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	010_0001b - PWM0_SM3_MUX_TRIG0 input is selected
	010_0010b - PWM0_SM3_MUX_TRIG1 input is selected
	010_0011b - TRIG_IN0 input is selected
	010_0100b - TRIG_IN1 input is selected
	010_0101b - TRIG_IN2 input is selected
	010_0110b - TRIG_IN3 input is selected
	010_0111b - TRIG_IN4 input is selected
	010_1000b - TRIG_IN5 input is selected
	010_1001b - TRIG_IN6 input is selected
	010_1010b - TRIG_IN7 input is selected
	010_1011b - TRIG_IN8 input is selected
	010_1100b - TRIG_IN9 input is selected
	010_1101b - TRIG_IN10 input is selected
	010_1110b - TRIG_IN11 input is selected
	010_1111b - GPIO0 Pin Event Trig 0 input is selected
	011_0000b - GPIO1 Pin Event Trig 0 input is selected
	011_0001b - GPIO2 Pin Event Trig 0 input is selected
	011_0010b - GPIO3 Pin Event Trig 0 input is selected
	011_0011b - GPIO4 Pin Event Trig 0 input is selected
	011_0100b - ADC1_tcomp[0] input is selected
	011_0101b - ADC1_tcomp[1] input is selected
	011_0110b - ADC1_tcomp[2] input is selected
	011_0111b - ADC1_tcomp[3] input is selected
	011_1000b - CTimer3_MAT0 input is selected
	011_1001b - CTimer3_MAT1 input is selected
	011_1010b - CTimer3_MAT2 input is selected
	011_1011b - CTimer3_MAT3 input is selected
	011_1100b - CTimer4_MAT0 input is selected
	011_1101b - CTimer4_MAT1 input is selected
	011_1110b - CTimer4_MAT2 input is selected
	011_1111b - CTimer4_MAT3 input is selected
	100_0000b - FlexIO CH0 input is selected
	100_0001b - FlexIO CH1 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	100_0010b - FlexIO CH2 input is selected 100_0011b - FlexIO CH3 input is selected 100_0100b - QDC1_CMP_FLAG0 input is selected 100_0101b - QDC1_CMP_FLAG1 input is selected 100_0110b - QDC1_CMP_FLAG2 input is selected 100_0111b - QDC1_CMP_FLAG3 input is selected 100_1000b - QDC1_POS_MATCH0 input is selected 100_1001b - PWM1_SM0_MUX_TRIG0 input is selected 100_1010b - PWM1_SM0_MUX_TRIG1 input is selected 100_1011b - PWM1_SM1_MUX_TRIG0 input is selected 100_1100b - PWM1_SM1_MUX_TRIG1 input is selected 100_1101b - PWM1_SM2_MUX_TRIG0 input is selected 100_1110b - PWM1_SM2_MUX_TRIG1 input is selected 100_1111b - PWM1_SM3_MUX_TRIG0 input is selected 101_0000b - PWM1_SM3_MUX_TRIG1 input is selected 101_0001b - PWM0_SM0_A_Output 101_0010b - PWM0_SM0_B_Output 101_0011b - PWM0_SM1_A_Output 101_0100b - PWM0_SM1_B_Output 101_0101b - PWM0_SM2_A_Output 101_0110b - PWM0_SM2_B_Output 101_0111b - PWM0_SM3_A_Output 101_1000b - PWM0_SM3_B_Output 101_1001b - ADC2_tcomp[0] input is selected 101_1010b - ADC2_tcomp[1] input is selected 101_1011b - ADC2_tcomp[2] input is selected 101_1100b - ADC2_tcomp[3] input is selected 101_1101b - ADC3_tcomp[0] input is selected 101_1110b - ADC3_tcomp[1] input is selected 101_1111b - ADC3_tcomp[2] input is selected 110_0000b - ADC3_tcomp[3] input is selected All other values are reserved.

13.6.1.16 CMP0 input connections (CMP0_TRIG)


Offset

Register	Offset
CMP0_TRIG	260h

Function

This register selects the CMP0 trigger inputs.

Diagram

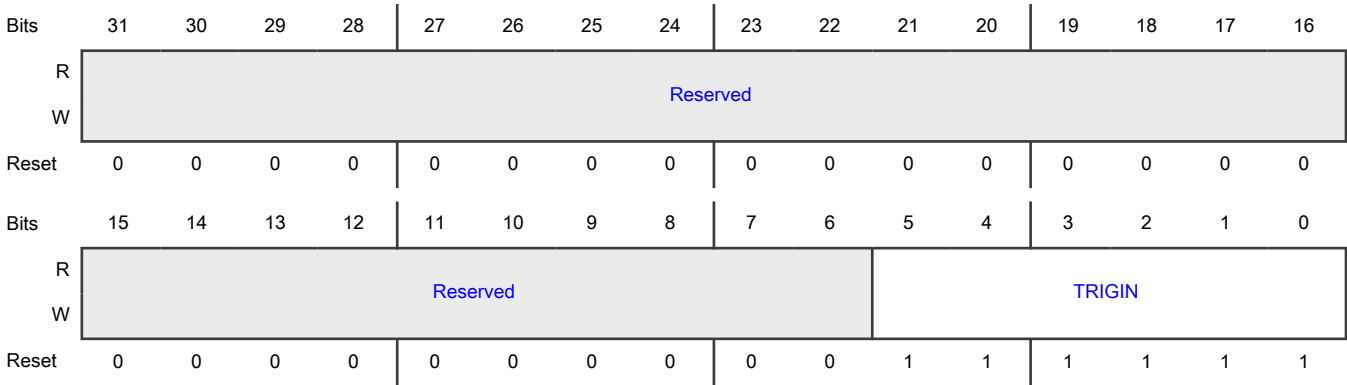

Fields

Field	Function
31-6 —	Reserved
5-0 TRIGIN	CMP0 input trigger 00_0000b - Reserved 00_0001b - Reserved 00_0010b - AOI0_OUT0 input is selected 00_0011b - AOI0_OUT1 input is selected 00_0100b - AOI0_OUT2 input is selected 00_0101b - AOI0_OUT3 input is selected 00_0110b - CMP1_OUT input is selected 00_0111b - CMP2_OUT input is selected 00_1000b - CTimer0_MAT0 input is selected 00_1001b - CTimer0_MAT2 input is selected 00_1010b - CTimer1_MAT0

Table continues on the next page...

Table continued from the previous page...

Field	Function
	00_1011b - CTimer1_MAT2 input is selected
	00_1100b - CTimer2_MAT0 input is selected
	00_1101b - CTimer2_MAT2 input is selected
	00_1110b - LPTMR0 input is selected
	00_1111b - Reserved
	01_0000b - QDC0_POS_MATCH0
	01_0001b - PWM0_SM0_MUX_TRIG0 input is selected
	01_0010b - PWM0_SM0_MUX_TRIG1 input is selected
	01_0011b - PWM0_SM1_MUX_TRIG0 input is selected
	01_0100b - PWM0_SM1_MUX_TRIG1 input is selected
	01_0101b - PWM0_SM2_MUX_TRIG0 input is selected
	01_0110b - PWM0_SM2_MUX_TRIG1 input is selected
	01_0111b - PWM0_SM3_MUX_TRIG0 input is selected
	01_1000b - PWM0_SM3_MUX_TRIG1 input is selected
	01_1001b - GPIO0 Pin Event Trig 0 input is selected
	01_1010b - GPIO1 Pin Event Trig 0 input is selected
	01_1011b - GPIO2 Pin Event Trig 0 input is selected
	01_1100b - GPIO3 Pin Event Trig 0 input is selected
	01_1101b - GPIO4 Pin Event Trig 0 input is selected
	01_1110b - WUU input is selected
	01_1111b - AOI1_OUT0 input is selected
	10_0000b - AOI1_OUT1 input is selected
	10_0001b - AOI1_OUT2 input is selected
	10_0010b - AOI1_OUT3 input is selected
	10_0011b - Reserved
	10_0100b - Reserved
	10_0101b - Reserved
	10_0110b - Reserved
	10_0111b - CTimer3_MAT0
	10_1000b - CTimer3_MAT1
	10_1001b - CTimer4_MAT0 input is selected
	10_1010b - CTimer4_MAT1 input is selected
	10_1011b - Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
	10_1100b - Reserved 10_1101b - Reserved 10_1110b - Reserved 10_1111b - QDC1_POS_MATCH0 input is selected 11_0000b - PWM1_SM0_MUX_TRIG0 input is selected 11_0001b - PWM1_SM0_MUX_TRIG1 input is selected 11_0010b - PWM1_SM1_MUX_TRIG0 input is selected 11_0011b - PWM1_SM1_MUX_TRIG1 input is selected 11_0100b - PWM1_SM2_MUX_TRIG0 input is selected 11_0101b - PWM1_SM2_MUX_TRIG1 input is selected 11_0110b - PWM1_SM3_MUX_TRIG0 input is selected 11_0111b - PWM1_SM2_MUX_TRIG1 input is selected All other values are reserved.

13.6.1.17 ADC Trigger input connections (ADC0_TRIG0 - ADC0_TRIG3)


Offset

Register	Offset
ADC0_TRIG0	280h
ADC0_TRIG1	284h
ADC0_TRIG2	288h
ADC0_TRIG3	28Ch

Function

This register selects the ADC trigger inputs.

Diagram

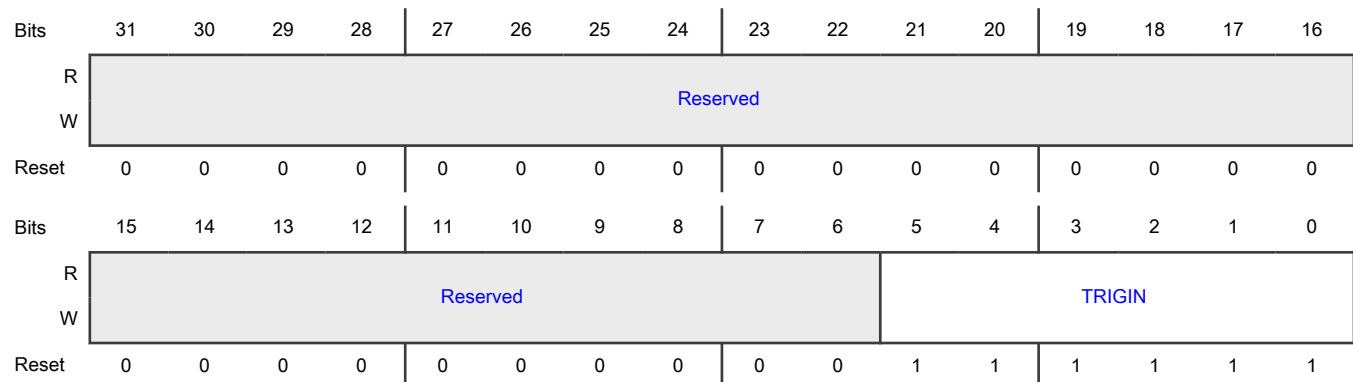

Fields

Field	Function
31-6 —	Reserved
5-0 TRIGIN	ADC0 trigger inputs 00_0000b - Reserved 00_0001b - ARM_TXEV input is selected 00_0010b - AOI0_OUT0 input is selected 00_0011b - AOI0_OUT1 input is selected 00_0100b - AOI0_OUT2 input is selected 00_0101b - AOI0_OUT3 input is selected 00_0110b - CMP0_OUT input is selected 00_0111b - CMP1_OUT input is selected 00_1000b - CMP2_OUT input is selected 00_1001b - CTimer0_MAT0 input is selected 00_1010b - CTimer0_MAT1 input is selected 00_1011b - CTimer1_MAT0 input is selected 00_1100b - CTimer1_MAT1 input is selected 00_1101b - CTimer2_MAT0 input is selected 00_1110b - CTimer2_MAT1 input is selected 00_1111b - LPTMR0 input is selected 01_0000b - Reserved 01_0001b - QDC0_POS_MATCH0 input is selected 01_0010b - PWM0_SM0_OUT_TRIG0 input is selected 01_0011b - PWM0_SM0_OUT_TRIG1 input is selected 01_0100b - PWM0_SM1_OUT_TRIG0 input is selected 01_0101b - PWM0_SM1_OUT_TRIG1 input is selected 01_0110b - PWM0_SM2_OUT_TRIG0 input is selected 01_0111b - PWM0_SM2_OUT_TRIG1 input is selected 01_1000b - PWM0_SM3_OUT_TRIG0 input is selected 01_1001b - PWM0_SM3_OUT_TRIG1 input is selected 01_1010b - GPIO0 Pin Event Trig 0 input is selected 01_1011b - GPIO1 Pin Event Trig 0 input is selected 01_1100b - GPIO2 Pin Event Trig 0 input is selected 01_1101b - GPIO3 Pin Event Trig 0 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	01_1110b - GPIO4 Pin Event Trig 0 input is selected
	01_1111b - Reserved
	10_0000b - Reserved
	10_0001b - AOI1_OUT0 input is selected
	10_0010b - AOI1_OUT1 input is selected
	10_0011b - AOI1_OUT2 input is selected
	10_0100b - AOI1_OUT3 input is selected
	10_0101b - ADC1_tcomp[0] input is selected
	10_0110b - ADC1_tcomp[1] input is selected
	10_0111b - ADC1_tcomp[2] input is selected
	10_1000b - ADC1_tcomp[3] input is selected
	10_1001b - CTimer3_MAT0 input is selected
	10_1010b - CTimer3_MAT1 input is selected
	10_1011b - CTimer4_MAT0 input is selected
	10_1100b - CTimer4_MAT1 input is selected
	10_1101b - FlexIO CH0 input is selected
	10_1110b - FlexIO CH1 input is selected
	10_1111b - FlexIO CH2 input is selected
	11_0000b - FlexIO CH3 input is selected
	11_0001b - QDC1_POS_MATCH0 input is selected
	11_0010b - PWM1_SM0_MUX_TRIG0 input is selected
	11_0011b - PWM1_SM0_MUX_TRIG1 input is selected
	11_0100b - PWM1_SM1_MUX_TRIG0 input is selected
	11_0101b - PWM1_SM1_MUX_TRIG1 input is selected
	11_0110b - PWM1_SM2_MUX_TRIG0 input is selected
	11_0111b - PWM1_SM2_MUX_TRIG1 input is selected
	11_1000b - PWM1_SM3_MUX_TRIG0 input is selected
	11_1001b - PWM1_SM3_MUX_TRIG1 input is selected
	All other values are reserved.

13.6.1.18 ADC Trigger input connections (ADC2_TRIG0 - ADC2_TRIG3)


Offset

Register	Offset
ADC2_TRIG0	2A0h
ADC2_TRIG1	2A4h
ADC2_TRIG2	2A8h
ADC2_TRIG3	2ACh

Function

This register selects the ADC trigger inputs.

Diagram

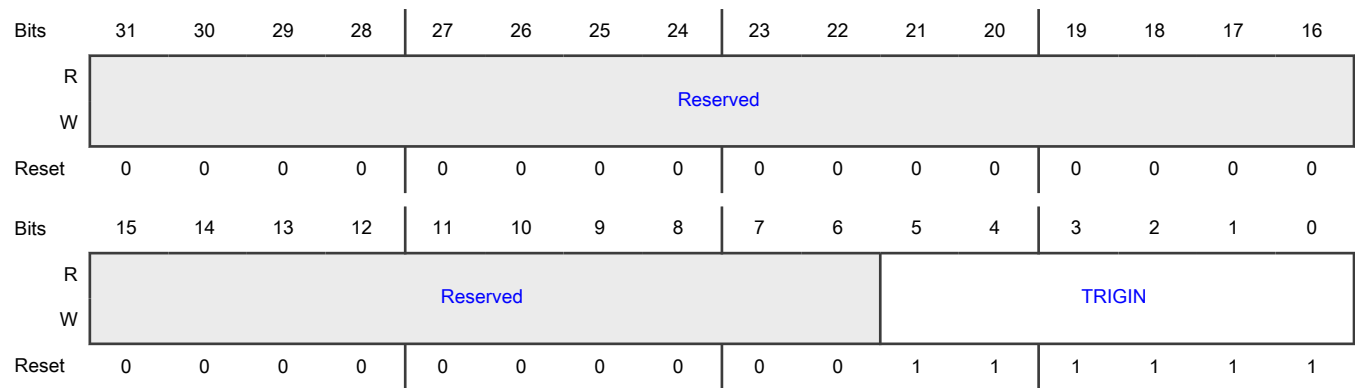

Fields

Field	Function
31-6 —	Reserved
5-0 TRIGIN	ADC2 trigger inputs 00_0000b - Reserved 00_0001b - ARM_TXEV input is selected 00_0010b - AOI0_OUT0 input is selected 00_0011b - AOI0_OUT1 input is selected 00_0100b - AOI0_OUT2 input is selected 00_0101b - AOI0_OUT3 input is selected 00_0110b - CMP0_OUT input is selected 00_0111b - CMP1_OUT input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	00_1000b - CMP2_OUT input is selected
	00_1001b - CTimer0_MAT0 input is selected
	00_1010b - CTimer0_MAT1 input is selected
	00_1011b - CTimer1_MAT0 input is selected
	00_1100b - CTimer1_MAT1 input is selected
	00_1101b - CTimer2_MAT0 input is selected
	00_1110b - CTimer2_MAT1 input is selected
	00_1111b - LPTMR0 input is selected
	01_0000b - Reserved
	01_0001b - QDC0_POS_MATCH0 input is selected
	01_0010b - PWM0_SM0_OUT_TRIG0 input is selected
	01_0011b - PWM0_SM0_OUT_TRIG1 input is selected
	01_0100b - PWM0_SM1_OUT_TRIG0 input is selected
	01_0101b - PWM0_SM1_OUT_TRIG1 input is selected
	01_0110b - PWM0_SM2_OUT_TRIG0 input is selected
	01_0111b - PWM0_SM2_OUT_TRIG1 input is selected
	01_1000b - PWM0_SM3_OUT_TRIG0 input is selected
	01_1001b - PWM0_SM3_OUT_TRIG1 input is selected
	01_1010b - GPIO0 Pin Event Trig 0 input is selected
	01_1011b - GPIO1 Pin Event Trig 0 input is selected
	01_1100b - GPIO2 Pin Event Trig 0 input is selected
	01_1101b - GPIO3 Pin Event Trig 0 input is selected
	01_1110b - GPIO4 Pin Event Trig 0 input is selected
	01_1111b - Reserved
	10_0000b - Reserved
	10_0001b - AOI1_OUT0 input is selected
	10_0010b - AOI1_OUT1 input is selected
	10_0011b - AOI1_OUT2 input is selected
	10_0100b - AOI1_OUT3 input is selected
	10_0101b - ADC3_tcomp[0] input is selected
	10_0110b - ADC3_tcomp[1] input is selected
	10_0111b - ADC3_tcomp[2] input is selected
	10_1000b - ADC3_tcomp[3] input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	10_1001b - CTimer3_MAT0 input is selected 10_1010b - CTimer3_MAT1 input is selected 10_1011b - CTimer4_MAT0 input is selected 10_1100b - CTimer4_MAT1 input is selected 10_1101b - FlexIO CH0 input is selected 10_1110b - FlexIO CH1 input is selected 10_1111b - FlexIO CH2 input is selected 11_0000b - FlexIO CH3 input is selected 11_0001b - QDC1_POS_MATCH0 input is selected 11_0010b - PWM1_SM0_MUX_TRIG0 input is selected 11_0011b - PWM1_SM0_MUX_TRIG1 input is selected 11_0100b - PWM1_SM1_MUX_TRIG0 input is selected 11_0101b - PWM1_SM1_MUX_TRIG1 input is selected 11_0110b - PWM1_SM2_MUX_TRIG0 input is selected 11_0111b - PWM1_SM2_MUX_TRIG1 input is selected 11_1000b - PWM1_SM3_MUX_TRIG0 input is selected 11_1001b - PWM1_SM3_MUX_TRIG1 input is selected All other values are reserved.

13.6.1.19 ADC Trigger input connections (ADC1_TRIG0 - ADC1_TRIG3)


Offset

Register	Offset
ADC1_TRIG0	2C0h
ADC1_TRIG1	2C4h
ADC1_TRIG2	2C8h
ADC1_TRIG3	2CCh

Function

This register selects the ADC trigger inputs.

Diagram

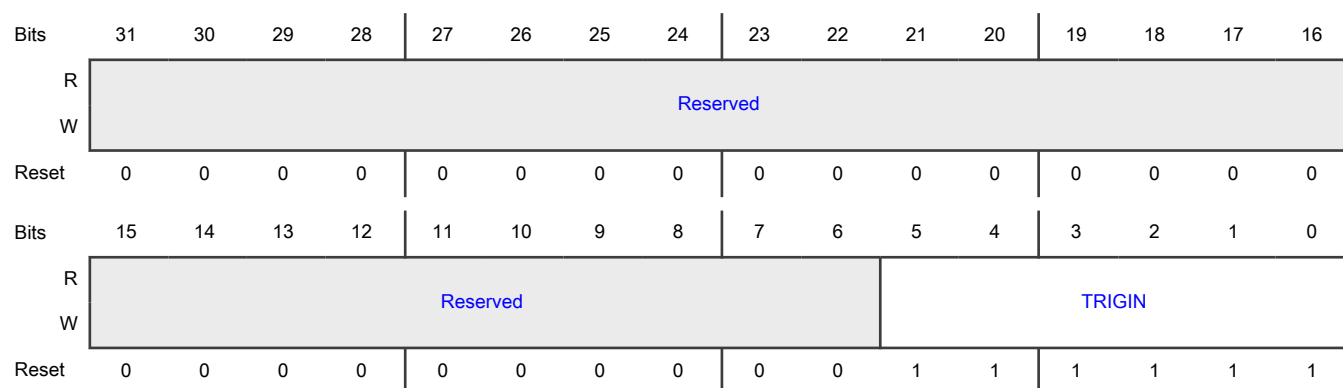

Fields

Field	Function
31-6 —	Reserved
5-0 TRIGIN	ADC1 trigger inputs 00_0000b - Reserved 00_0001b - ARM_TXEV input is selected 00_0010b - AOI0_OUT0 input is selected 00_0011b - AOI0_OUT1 input is selected 00_0100b - AOI0_OUT2 input is selected 00_0101b - AOI0_OUT3 input is selected 00_0110b - CMP0_OUT input is selected 00_0111b - CMP1_OUT input is selected 00_1000b - CMP2_OUT input is selected 00_1001b - CTimer0_MAT0 input is selected 00_1010b - CTimer0_MAT1 input is selected 00_1011b - CTimer1_MAT0 input is selected 00_1100b - CTimer1_MAT1 input is selected 00_1101b - CTimer2_MAT0 input is selected 00_1110b - CTimer2_MAT1 input is selected 00_1111b - LPTMR0 input is selected 01_0000b - Reserved 01_0001b - QDC0_POS_MATCH0 input is selected 01_0010b - PWM0_SM0_OUT_TRIG0 input is selected 01_0011b - PWM0_SM0_OUT_TRIG1 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	01_0100b - PWM0_SM1_OUT_TRIG0 input is selected
	01_0101b - PWM0_SM1_OUT_TRIG1 input is selected
	01_0110b - PWM0_SM2_OUT_TRIG0 input is selected
	01_0111b - PWM0_SM2_OUT_TRIG1 input is selected
	01_1000b - PWM0_SM3_OUT_TRIG0 input is selected
	01_1001b - PWM0_SM3_OUT_TRIG1 input is selected
	01_1010b - GPIO0 Pin Event Trig 0 input is selected
	01_1011b - GPIO1 Pin Event Trig 0 input is selected
	01_1100b - GPIO2 Pin Event Trig 0 input is selected
	01_1101b - GPIO3 Pin Event Trig 0 input is selected
	01_1110b - GPIO4 Pin Event Trig 0 input is selected
	01_1111b - Reserved
	10_0000b - Reserved
	10_0001b - AOI1_OUT0 input is selected
	10_0010b - AOI1_OUT1 input is selected
	10_0011b - AOI1_OUT2 input is selected
	10_0100b - AOI1_OUT3 input is selected
	10_0101b - ADC0_tcomp[0] input is selected
	10_0110b - ADC0_tcomp[1] input is selected
	10_0111b - ADC0_tcomp[2] input is selected
	10_1000b - ADC0_tcomp[3] input is selected
	10_1001b - CTimer3_MAT0 input is selected
	10_1010b - CTimer3_MAT1 input is selected
	10_1011b - CTimer4_MAT0 input is selected
	10_1100b - CTimer4_MAT1 input is selected
	10_1101b - FlexIO CH0 input is selected
	10_1110b - FlexIO CH1 input is selected
	10_1111b - FlexIO CH2 input is selected
	11_0000b - FlexIO CH3 input is selected
	11_0001b - QDC1_POS_MATCH0 input is selected
	11_0010b - PWM1_SM0_MUX_TRIG0 input is selected
	11_0011b - PWM1_SM0_MUX_TRIG1 input is selected
	11_0100b - PWM1_SM1_MUX_TRIG0 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	11_0101b - PWM1_SM1_MUX_TRIG1 input is selected 11_0110b - PWM1_SM2_MUX_TRIG0 input is selected 11_0111b - PWM1_SM2_MUX_TRIG1 input is selected 11_1000b - PWM1_SM3_MUX_TRIG0 input is selected 11_1001b - PWM1_SM3_MUX_TRIG1 input is selected All other values are reserved.

13.6.1.20 ADC Trigger input connections (ADC3_TRIG0 - ADC3_TRIG3)

Offset

Register	Offset
ADC3_TRIG0	2E0h
ADC3_TRIG1	2E4h
ADC3_TRIG2	2E8h
ADC3_TRIG3	2ECh

Function

This register selects the ADC trigger inputs.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	Reserved															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserved												TRIGIN			
W																
Reset	0	0	0	0	0	0	0	0	0	0	1	1	1	1	1	1

Fields

Field	Function
31-6	Reserved
—	

Table continues on the next page...

Table continued from the previous page...

Field	Function
5-0 TRIGIN	ADC3 trigger inputs 00_0000b - Reserved 00_0001b - ARM_TXEV input is selected 00_0010b - AOI0_OUT0 input is selected 00_0011b - AOI0_OUT1 input is selected 00_0100b - AOI0_OUT2 input is selected 00_0101b - AOI0_OUT3 input is selected 00_0110b - CMP0_OUT input is selected 00_0111b - CMP1_OUT input is selected 00_1000b - CMP2_OUT input is selected 00_1001b - CTimer0_MAT0 input is selected 00_1010b - CTimer0_MAT1 input is selected 00_1011b - CTimer1_MAT0 input is selected 00_1100b - CTimer1_MAT1 input is selected 00_1101b - CTimer2_MAT0 input is selected 00_1110b - CTimer2_MAT1 input is selected 00_1111b - LPTMR0 input is selected 01_0000b - Reserved 01_0001b - QDC0_POS_MATCH0 input is selected 01_0010b - PWM0_SM0_OUT_TRIG0 input is selected 01_0011b - PWM0_SM0_OUT_TRIG1 input is selected 01_0100b - PWM0_SM1_OUT_TRIG0 input is selected 01_0101b - PWM0_SM1_OUT_TRIG1 input is selected 01_0110b - PWM0_SM2_OUT_TRIG0 input is selected 01_0111b - PWM0_SM2_OUT_TRIG1 input is selected 01_1000b - PWM0_SM3_OUT_TRIG0 input is selected 01_1001b - PWM0_SM3_OUT_TRIG1 input is selected 01_1010b - GPIO0 Pin Event Trig 0 input is selected 01_1011b - GPIO1 Pin Event Trig 0 input is selected 01_1100b - GPIO2 Pin Event Trig 0 input is selected 01_1101b - GPIO3 Pin Event Trig 0 input is selected 01_1110b - GPIO4 Pin Event Trig 0 input is selected 01_1111b - Reserved

Table continues on the next page...

Table continued from the previous page...


Field	Function
	10_0000b - Reserved 10_0001b - AOI1_OUT0 input is selected 10_0010b - AOI1_OUT1 input is selected 10_0011b - AOI1_OUT2 input is selected 10_0100b - AOI1_OUT3 input is selected 10_0101b - ADC2_tcomp[0] input is selected 10_0110b - ADC2_tcomp[1] input is selected 10_0111b - ADC2_tcomp[2] input is selected 10_1000b - ADC2_tcomp[3] input is selected 10_1001b - CTimer3_MAT0 input is selected 10_1010b - CTimer3_MAT1 input is selected 10_1011b - CTimer4_MAT0 input is selected 10_1100b - CTimer4_MAT1 input is selected 10_1101b - FlexIO CH0 input is selected 10_1110b - FlexIO CH1 input is selected 10_1111b - FlexIO CH2 input is selected 11_0000b - FlexIO CH3 input is selected 11_0001b - QDC1_POS_MATCH0 input is selected 11_0010b - PWM1_SM0_MUX_TRIG0 input is selected 11_0011b - PWM1_SM0_MUX_TRIG1 input is selected 11_0100b - PWM1_SM1_MUX_TRIG0 input is selected 11_0101b - PWM1_SM1_MUX_TRIG1 input is selected 11_0110b - PWM1_SM2_MUX_TRIG0 input is selected 11_0111b - PWM1_SM2_MUX_TRIG1 input is selected 11_1000b - PWM1_SM3_MUX_TRIG0 input is selected 11_1001b - PWM1_SM3_MUX_TRIG1 input is selected All other values are reserved.

13.6.1.21 DAC0 Trigger input connections. (DAC0_TRIG)

Offset

Register	Offset
DAC0_TRIG	300h

Diagram

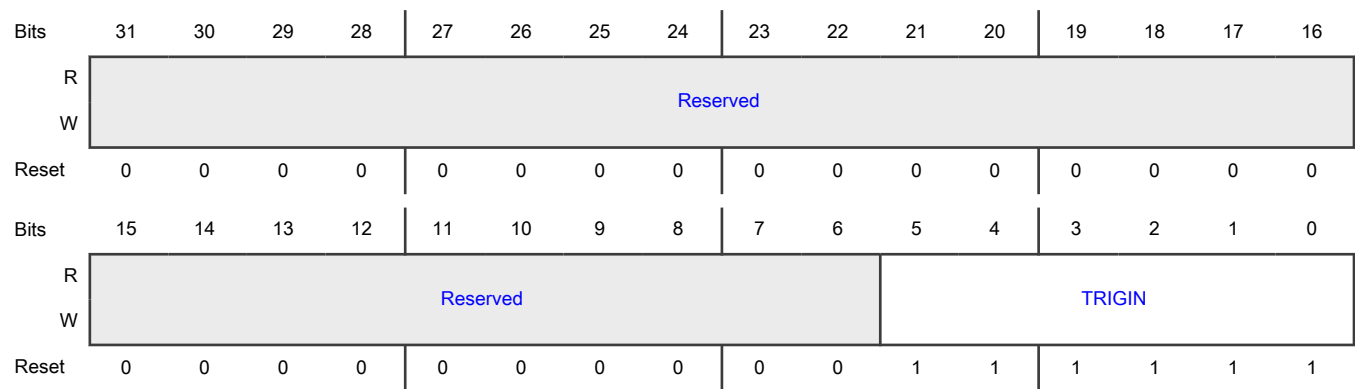

Fields

Field	Function
31-6 —	Reserved
5-0 TRIGIN	DAC0 trigger input 00_0000b - Reserved 00_0001b - ARM_TXEV 00_0010b - AOI0_OUT0 input is selected 00_0011b - AOI0_OUT1 input is selected 00_0100b - AOI0_OUT2 input is selected 00_0101b - AOI0_OUT3 input is selected 00_0110b - CMP0_OUT input is selected 00_0111b - CMP1_OUT input is selected 00_1000b - CMP2_OUT input is selected 00_1001b - CTimer0_MAT0 input is selected 00_1010b - CTimer0_MAT1 input is selected 00_1011b - CTimer1_MAT0 input is selected 00_1100b - CTimer1_MAT1 input is selected 00_1101b - CTimer2_MAT0 input is selected 00_1110b - CTimer2_MAT1 input is selected 00_1111b - LPTMR0 input is selected 01_0000b - Reserved 01_0001b - Reserved 01_0010b - PWM0_SM0_MUX_TRIG0 input is selected 01_0011b - PWM0_SM0_MUX_TRIG1 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	01_0100b - PWM0_SM1_MUX_TRIG0 input is selected
	01_0101b - PWM0_SM1_MUX_TRIG1 input is selected
	01_0110b - Reserved
	01_0111b - Reserved
	01_1000b - Reserved
	01_1001b - Reserved
	01_1010b - GPIO0 Pin Event Trig 0 input is selected
	01_1011b - GPIO1 Pin Event Trig 0 input is selected
	01_1100b - GPIO2 Pin Event Trig 0 input is selected
	01_1101b - GPIO3 Pin Event Trig 0 input is selected
	01_1110b - GPIO4 Pin Event Trig 0 input is selected
	01_1111b - WUU input is selected
	10_0000b - Reserved
	10_0001b - AOI1_OUT0 input is selected
	10_0010b - AOI1_OUT1 input is selected
	10_0011b - AOI1_OUT2 input is selected
	10_0100b - AOI1_OUT3 input is selected
	10_0101b - ADC0_tcomp[0] input is selected
	10_0110b - ADC0_tcomp[1] input is selected
	10_0111b - ADC1_tcomp[0] input is selected
	10_1000b - ADC1_tcomp[1] input is selected
	10_1001b - CTimer3_MAT0 input is selected
	10_1010b - CTimer3_MAT1 input is selected
	10_1011b - CTimer4_MAT0 input is selected
	10_1100b - CTimer4_MAT1 input is selected
	10_1101b - Reserved
	10_1110b - Reserved
	10_1111b - Reserved
	11_0000b - Reserved
	11_0001b - Reserved
	11_0010b - PWM1_SM0_MUX_TRIG0 input is selected
	11_0011b - PWM1_SM0_MUX_TRIG1 input is selected
	11_0100b - PWM1_SM1_MUX_TRIG0 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	11_0101b - PWM1_SM1_MUX_TRIG1 input is selected 11_0110b - Reserved 11_0111b - Reserved 11_1000b - Reserved 11_1001b - Reserved 11_1010b - ADC2_tcomp[0] input is selected 11_1011b - ADC2_tcomp[1] input is selected 11_1100b - ADC3_tcomp[0] input is selected 11_1101b - ADC3_tcomp[1] input is selected All other values are reserved.

13.6.1.22 QDC0 Trigger Input Connections (QDC0_TRIG)

Offset

Register	Offset
QDC0_TRIG	360h

Function

This register selects the QDC0 trigger inputs.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	Reserved															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserved								INP							
W																
Reset	0	0	0	0	0	0	0	0	0	1	1	1	1	1	1	1

Fields

Field	Function
31-7	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
—	
6-0 INP	QDC0 input connections 000_0000b - Reserved 000_0001b - ARM_TXEV input is selected 000_0010b - AOI0_OUT0 input is selected 000_0011b - AOI0_OUT1 input is selected 000_0100b - AOI0_OUT2 input is selected 000_0101b - AOI0_OUT3 input is selected 000_0110b - CMP0_OUT input is selected 000_0111b - CMP1_OUT input is selected 000_1000b - CMP2_OUT input is selected 000_1001b - CTimer0_MAT2 input is selected 000_1010b - CTimer0_MAT3 000_1011b - CTimer1_MAT2 input is selected 000_1100b - CTimer1_MAT3 input is selected 000_1101b - CTimer2_MAT2 input is selected 000_1110b - CTimer2_MAT3 input is selected 000_1111b - Reserved 001_0000b - PWM0_SM0_MUX_TRIG0 input is selected 001_0001b - PWM0_SM0_MUX_TRIG1 input is selected 001_0010b - PWM0_SM1_MUX_TRIG0 input is selected 001_0011b - PWM0_SM1_MUX_TRIG1 input is selected 001_0100b - PWM0_SM2_MUX_TRIG0 input is selected 001_0101b - PWM0_SM2_MUX_TRIG1 input is selected 001_0110b - PWM0_SM3_MUX_TRIG0 input is selected 001_0111b - PWM0_SM3_MUX_TRIG1 input is selected 001_1000b - TRIG_IN0 input is selected 001_1001b - TRIG_IN1 input is selected 001_1010b - TRIG_IN2 input is selected 001_1011b - TRIG_IN3 input is selected 001_1100b - TRIG_IN4 input is selected 001_1101b - TRIG_IN5 input is selected 001_1110b - TRIG_IN6 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	001_1111b - TRIG_IN7 input is selected
	010_0000b - TRIG_IN8 input is selected
	010_0001b - TRIG_IN9 input is selected
	010_0010b - TRIG_IN10 input is selected
	010_0011b - TRIG_IN11 input is selected
	010_0100b - GPIO0 Pin Event Trig 0 is selected
	010_0101b - GPIO1 Pin Event Trig 0 input is selected
	010_0110b - GPIO2 Pin Event Trig 0 input is selected
	010_0111b - GPIO3 Pin Event Trig 0 input is selected
	010_1000b - GPIO4 Pin Event Trig 0 input is selected
	010_1001b - AOI1_OUT0 input is selected
	010_1010b - AOI1_OUT1 input is selected
	010_1011b - AOI1_OUT2 input is selected
	010_1100b - AOI1_OUT3 input is selected
	010_1101b - Reserved
	010_1110b - Reserved
	010_1111b - Reserved
	011_0000b - Reserved
	011_0001b - CTimer3_MAT2 input is selected
	011_0010b - CTimer3_MAT3 input is selected
	011_0011b - CTimer4_MAT2 input is selected
	011_0100b - CTimer4_MAT3 input is selected
	011_0101b - Reserved
	011_0110b - Reserved
	011_0111b - Reserved
	011_1000b - Reserved
	011_1001b - Reserved
	011_1010b - Reserved
	011_1011b - Reserved
	011_1100b - Reserved
	011_1101b - Reserved
	011_1110b - PWM1_SM0_OUT_TRIG0 input is selected
	011_1111b - PWM1_SM0_OUT_TRIG1 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	100_0000b - PWM1_SM1_OUT_TRIG0 input is selected 100_0001b - PWM1_SM1_OUT_TRIG1 input is selected 100_0010b - PWM1_SM2_OUT_TRIG0 input is selected 100_0011b - PWM1_SM2_OUT_TRIG1 input is selected 100_0100b - PWM1_SM3_MUX_TRIG0 input is selected 100_0101b - PWM1_SM3_MUX_TRIG1 input is selected All other values are reserved.

13.6.1.23 QDC0 Trigger Input Connections (QDC0_HOME)

Offset

Register	Offset
QDC0_HOME	364h

Function

This register selects the QDC0 trigger inputs.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	Reserved															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserved								INP							
W																
Reset	0	0	0	0	0	0	0	0	0	1	1	1	1	1	1	1

Fields

Field	Function
31-7 —	Reserved
6-0 INP	QDC0 input connections

Table continues on the next page...

Table continued from the previous page...

Field	Function
	000_0000b - Reserved
	000_0001b - ARM_TXEV input is selected
	000_0010b - AOI0_OUT0 input is selected
	000_0011b - AOI0_OUT1 input is selected
	000_0100b - AOI0_OUT2 input is selected
	000_0101b - AOI0_OUT3 input is selected
	000_0110b - CMP0_OUT input is selected
	000_0111b - CMP1_OUT input is selected
	000_1000b - CMP2_OUT input is selected
	000_1001b - CTimer0_MAT2 input is selected
	000_1010b - CTimer0_MAT3
	000_1011b - CTimer1_MAT2 input is selected
	000_1100b - CTimer1_MAT3 input is selected
	000_1101b - CTimer2_MAT2 input is selected
	000_1110b - CTimer2_MAT3 input is selected
	000_1111b - Reserved
	001_0000b - PWM0_SM0_MUX_TRIG0 input is selected
	001_0001b - PWM0_SM0_MUX_TRIG1 input is selected
	001_0010b - PWM0_SM1_MUX_TRIG0 input is selected
	001_0011b - PWM0_SM1_MUX_TRIG1 input is selected
	001_0100b - PWM0_SM2_MUX_TRIG0 input is selected
	001_0101b - PWM0_SM2_MUX_TRIG1 input is selected
	001_0110b - PWM0_SM3_MUX_TRIG0 input is selected
	001_0111b - PWM0_SM3_MUX_TRIG1 input is selected
	001_1000b - TRIG_IN0 input is selected
	001_1001b - TRIG_IN1 input is selected
	001_1010b - TRIG_IN2 input is selected
	001_1011b - TRIG_IN3 input is selected
	001_1100b - TRIG_IN4 input is selected
	001_1101b - TRIG_IN5 input is selected
	001_1110b - TRIG_IN6 input is selected
	001_1111b - TRIG_IN7 input is selected
	010_0000b - TRIG_IN8 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	010_0001b - TRIG_IN9 input is selected
	010_0010b - TRIG_IN10 input is selected
	010_0011b - TRIG_IN11 input is selected
	010_0100b - GPIO0 Pin Event Trig 0 is selected
	010_0101b - GPIO1 Pin Event Trig 0 input is selected
	010_0110b - GPIO2 Pin Event Trig 0 input is selected
	010_0111b - GPIO3 Pin Event Trig 0 input is selected
	010_1000b - GPIO4 Pin Event Trig 0 input is selected
	010_1001b - AOI1_OUT0 input is selected
	010_1010b - AOI1_OUT1 input is selected
	010_1011b - AOI1_OUT2 input is selected
	010_1100b - AOI1_OUT3 input is selected
	010_1101b - Reserved
	010_1110b - Reserved
	010_1111b - Reserved
	011_0000b - Reserved
	011_0001b - CTimer3_MAT2 input is selected
	011_0010b - CTimer3_MAT3 input is selected
	011_0011b - CTimer4_MAT2 input is selected
	011_0100b - CTimer4_MAT3 input is selected
	011_0101b - Reserved
	011_0110b - Reserved
	011_0111b - Reserved
	011_1000b - Reserved
	011_1001b - Reserved
	011_1010b - Reserved
	011_1011b - Reserved
	011_1100b - Reserved
	011_1101b - Reserved
	011_1110b - PWM1_SM0_OUT_TRIG0 input is selected
	011_1111b - PWM1_SM0_OUT_TRIG1 input is selected
	100_0000b - PWM1_SM1_OUT_TRIG0 input is selected
	100_0001b - PWM1_SM1_OUT_TRIG1 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	100_0010b - PWM1_SM2_OUT_TRIG0 input is selected 100_0011b - PWM1_SM2_OUT_TRIG1 input is selected 100_0100b - PWM1_SM3_MUX_TRIG0 input is selected 100_0101b - PWM1_SM3_MUX_TRIG1 input is selected All other values are reserved.

13.6.1.24 QDC0 Trigger Input Connections (QDC0_INDEX)

Offset

Register	Offset
QDC0_INDEX	368h

Function

This register selects the QDC0 trigger inputs.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	Reserved															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserved								INP							
W																
Reset	0	0	0	0	0	0	0	0	0	1	1	1	1	1	1	1

Fields

Field	Function
31-7 —	Reserved
6-0 INP	QDC0 input connections 000_0000b - Reserved 000_0001b - ARM_TXEV input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	000_0010b - AOI0_OUT0 input is selected
	000_0011b - AOI0_OUT1 input is selected
	000_0100b - AOI0_OUT2 input is selected
	000_0101b - AOI0_OUT3 input is selected
	000_0110b - CMP0_OUT input is selected
	000_0111b - CMP1_OUT input is selected
	000_1000b - CMP2_OUT input is selected
	000_1001b - CTimer0_MAT2 input is selected
	000_1010b - CTimer0_MAT3
	000_1011b - CTimer1_MAT2 input is selected
	000_1100b - CTimer1_MAT3 input is selected
	000_1101b - CTimer2_MAT2 input is selected
	000_1110b - CTimer2_MAT3 input is selected
	000_1111b - Reserved
	001_0000b - PWM0_SM0_MUX_TRIG0 input is selected
	001_0001b - PWM0_SM0_MUX_TRIG1 input is selected
	001_0010b - PWM0_SM1_MUX_TRIG0 input is selected
	001_0011b - PWM0_SM1_MUX_TRIG1 input is selected
	001_0100b - PWM0_SM2_MUX_TRIG0 input is selected
	001_0101b - PWM0_SM2_MUX_TRIG1 input is selected
	001_0110b - PWM0_SM3_MUX_TRIG0 input is selected
	001_0111b - PWM0_SM3_MUX_TRIG1 input is selected
	001_1000b - TRIG_IN0 input is selected
	001_1001b - TRIG_IN1 input is selected
	001_1010b - TRIG_IN2 input is selected
	001_1011b - TRIG_IN3 input is selected
	001_1100b - TRIG_IN4 input is selected
	001_1101b - TRIG_IN5 input is selected
	001_1110b - TRIG_IN6 input is selected
	001_1111b - TRIG_IN7 input is selected
	010_0000b - TRIG_IN8 input is selected
	010_0001b - TRIG_IN9 input is selected
	010_0010b - TRIG_IN10 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	010_0011b - TRIG_IN11 input is selected
	010_0100b - GPIO0 Pin Event Trig 0 is selected
	010_0101b - GPIO1 Pin Event Trig 0 input is selected
	010_0110b - GPIO2 Pin Event Trig 0 input is selected
	010_0111b - GPIO3 Pin Event Trig 0 input is selected
	010_1000b - GPIO4 Pin Event Trig 0 input is selected
	010_1001b - AOI1_OUT0 input is selected
	010_1010b - AOI1_OUT1 input is selected
	010_1011b - AOI1_OUT2 input is selected
	010_1100b - AOI1_OUT3 input is selected
	010_1101b - Reserved
	010_1110b - Reserved
	010_1111b - Reserved
	011_0000b - Reserved
	011_0001b - CTimer3_MAT2 input is selected
	011_0010b - CTimer3_MAT3 input is selected
	011_0011b - CTimer4_MAT2 input is selected
	011_0100b - CTimer4_MAT3 input is selected
	011_0101b - Reserved
	011_0110b - Reserved
	011_0111b - Reserved
	011_1000b - Reserved
	011_1001b - Reserved
	011_1010b - Reserved
	011_1011b - Reserved
	011_1100b - Reserved
	011_1101b - Reserved
	011_1110b - PWM1_SM0_OUT_TRIG0 input is selected
	011_1111b - PWM1_SM0_OUT_TRIG1 input is selected
	100_0000b - PWM1_SM1_OUT_TRIG0 input is selected
	100_0001b - PWM1_SM1_OUT_TRIG1 input is selected
	100_0010b - PWM1_SM2_OUT_TRIG0 input is selected
	100_0011b - PWM1_SM2_OUT_TRIG1 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	100_0100b - PWM1_SM3_MUX_TRIG0 input is selected 100_0101b - PWM1_SM3_MUX_TRIG1 input is selected All other values are reserved.

13.6.1.25 QDC0 Trigger Input Connections (QDC0_PHASEB)

Offset

Register	Offset
QDC0_PHASEB	36Ch

Function

This register selects the QDC0 trigger inputs.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	Reserved															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserved								INP							
W																
Reset	0	0	0	0	0	0	0	0	0	1	1	1	1	1	1	1

Fields

Field	Function
31-7 —	Reserved
6-0 INP	QDC0 input connections 000_0000b - Reserved 000_0001b - ARM_TXEV input is selected 000_0010b - AOIO_OUT0 input is selected 000_0011b - AOIO_OUT1 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	000_0100b - AOIO_OUT2 input is selected
	000_0101b - AOIO_OUT3 input is selected
	000_0110b - CMP0_OUT input is selected
	000_0111b - CMP1_OUT input is selected
	000_1000b - CMP2_OUT input is selected
	000_1001b - CTimer0_MAT2 input is selected
	000_1010b - CTimer0_MAT3
	000_1011b - CTimer1_MAT2 input is selected
	000_1100b - CTimer1_MAT3 input is selected
	000_1101b - CTimer2_MAT2 input is selected
	000_1110b - CTimer2_MAT3 input is selected
	000_1111b - Reserved
	001_0000b - PWM0_SM0_MUX_TRIG0 input is selected
	001_0001b - PWM0_SM0_MUX_TRIG1 input is selected
	001_0010b - PWM0_SM1_MUX_TRIG0 input is selected
	001_0011b - PWM0_SM1_MUX_TRIG1 input is selected
	001_0100b - PWM0_SM2_MUX_TRIG0 input is selected
	001_0101b - PWM0_SM2_MUX_TRIG1 input is selected
	001_0110b - PWM0_SM3_MUX_TRIG0 input is selected
	001_0111b - PWM0_SM3_MUX_TRIG1 input is selected
	001_1000b - TRIG_IN0 input is selected
	001_1001b - TRIG_IN1 input is selected
	001_1010b - TRIG_IN2 input is selected
	001_1011b - TRIG_IN3 input is selected
	001_1100b - TRIG_IN4 input is selected
	001_1101b - TRIG_IN5 input is selected
	001_1110b - TRIG_IN6 input is selected
	001_1111b - TRIG_IN7 input is selected
	010_0000b - TRIG_IN8 input is selected
	010_0001b - TRIG_IN9 input is selected
	010_0010b - TRIG_IN10 input is selected
	010_0011b - TRIG_IN11 input is selected
	010_0100b - GPIO0 Pin Event Trig 0 is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	010_0101b - GPIO1 Pin Event Trig 0 input is selected
	010_0110b - GPIO2 Pin Event Trig 0 input is selected
	010_0111b - GPIO3 Pin Event Trig 0 input is selected
	010_1000b - GPIO4 Pin Event Trig 0 input is selected
	010_1001b - AOI1_OUT0 input is selected
	010_1010b - AOI1_OUT1 input is selected
	010_1011b - AOI1_OUT2 input is selected
	010_1100b - AOI1_OUT3 input is selected
	010_1101b - Reserved
	010_1110b - Reserved
	010_1111b - Reserved
	011_0000b - Reserved
	011_0001b - CTimer3_MAT2 input is selected
	011_0010b - CTimer3_MAT3 input is selected
	011_0011b - CTimer4_MAT2 input is selected
	011_0100b - CTimer4_MAT3 input is selected
	011_0101b - Reserved
	011_0110b - Reserved
	011_0111b - Reserved
	011_1000b - Reserved
	011_1001b - Reserved
	011_1010b - Reserved
	011_1011b - Reserved
	011_1100b - Reserved
	011_1101b - Reserved
	011_1110b - PWM1_SM0_OUT_TRIG0 input is selected
	011_1111b - PWM1_SM0_OUT_TRIG1 input is selected
	100_0000b - PWM1_SM1_OUT_TRIG0 input is selected
	100_0001b - PWM1_SM1_OUT_TRIG1 input is selected
	100_0010b - PWM1_SM2_OUT_TRIG0 input is selected
	100_0011b - PWM1_SM2_OUT_TRIG1 input is selected
	100_0100b - PWM1_SM3_MUX_TRIG0 input is selected
	100_0101b - PWM1_SM3_MUX_TRIG1 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	All other values are reserved.

13.6.1.26 QDC0 Trigger Input Connections (QDC0_PHASEA)

Offset

Register	Offset
QDC0_PHASEA	370h

Function

This register selects the QDC0 trigger inputs.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	Reserved															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserved								INP							
W																
Reset	0	0	0	0	0	0	0	0	0	1	1	1	1	1	1	1

Fields

Field	Function
31-7 —	Reserved
6-0 INP	QDC0 input connections 000_0000b - Reserved 000_0001b - ARM_TXEV input is selected 000_0010b - AOI0_OUT0 input is selected 000_0011b - AOI0_OUT1 input is selected 000_0100b - AOI0_OUT2 input is selected 000_0101b - AOI0_OUT3 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	000_0110b - CMP0_OUT input is selected
	000_0111b - CMP1_OUT input is selected
	000_1000b - CMP2_OUT input is selected
	000_1001b - CTimer0_MAT2 input is selected
	000_1010b - CTimer0_MAT3
	000_1011b - CTimer1_MAT2 input is selected
	000_1100b - CTimer1_MAT3 input is selected
	000_1101b - CTimer2_MAT2 input is selected
	000_1110b - CTimer2_MAT3 input is selected
	000_1111b - Reserved
	001_0000b - PWM0_SM0_MUX_TRIG0 input is selected
	001_0001b - PWM0_SM0_MUX_TRIG1 input is selected
	001_0010b - PWM0_SM1_MUX_TRIG0 input is selected
	001_0011b - PWM0_SM1_MUX_TRIG1 input is selected
	001_0100b - PWM0_SM2_MUX_TRIG0 input is selected
	001_0101b - PWM0_SM2_MUX_TRIG1 input is selected
	001_0110b - Reserved
	001_0111b - Reserved
	001_1000b - TRIG_IN0 input is selected
	001_1001b - TRIG_IN1 input is selected
	001_1010b - TRIG_IN2 input is selected
	001_1011b - TRIG_IN3 input is selected
	001_1100b - TRIG_IN4 input is selected
	001_1101b - TRIG_IN5 input is selected
	001_1110b - TRIG_IN6 input is selected
	001_1111b - TRIG_IN7 input is selected
	010_0000b - TRIG_IN8 input is selected
	010_0001b - TRIG_IN9 input is selected
	010_0010b - TRIG_IN10 input is selected
	010_0011b - TRIG_IN11 input is selected
	010_0100b - GPIO0 Pin Event Trig 0 is selected
	010_0101b - GPIO1 Pin Event Trig 0 input is selected
	010_0110b - GPIO2 Pin Event Trig 0 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	010_0111b - GPIO3 Pin Event Trig 0 input is selected 010_1000b - GPIO4 Pin Event Trig 0 input is selected 010_1001b - AOI1_OUT0 input is selected 010_1010b - AOI1_OUT1 input is selected 010_1011b - AOI1_OUT2 input is selected 010_1100b - AOI1_OUT3 input is selected 010_1101b - Reserved 010_1110b - Reserved 010_1111b - Reserved 011_0000b - Reserved 011_0001b - CTimer3_MAT2 input is selected 011_0010b - CTimer3_MAT3 input is selected 011_0011b - CTimer4_MAT2 input is selected 011_0100b - CTimer4_MAT3 input is selected 011_0101b - Reserved 011_0110b - Reserved 011_0111b - Reserved 011_1000b - Reserved 011_1001b - Reserved 011_1010b - Reserved 011_1011b - Reserved 011_1100b - Reserved 011_1101b - Reserved 011_1110b - PWM1_SM0_OUT_TRIG0 input is selected 011_1111b - PWM1_SM0_OUT_TRIG1 input is selected 100_0000b - PWM1_SM1_OUT_TRIG0 input is selected 100_0001b - PWM1_SM1_OUT_TRIG1 input is selected 100_0010b - PWM1_SM2_OUT_TRIG0 input is selected 100_0011b - PWM1_SM2_OUT_TRIG1 input is selected 100_0100b - PWM1_SM3_MUX_TRIG0 input is selected 100_0101b - PWM1_SM3_MUX_TRIG1 input is selected All other values are reserved.

13.6.1.27 QDC0 Trigger Input Connections (QDC0_ICAP1)


Offset

Register	Offset
QDC0_ICAP1	374h

Function

This register selects the QDC0 trigger inputs.

Diagram

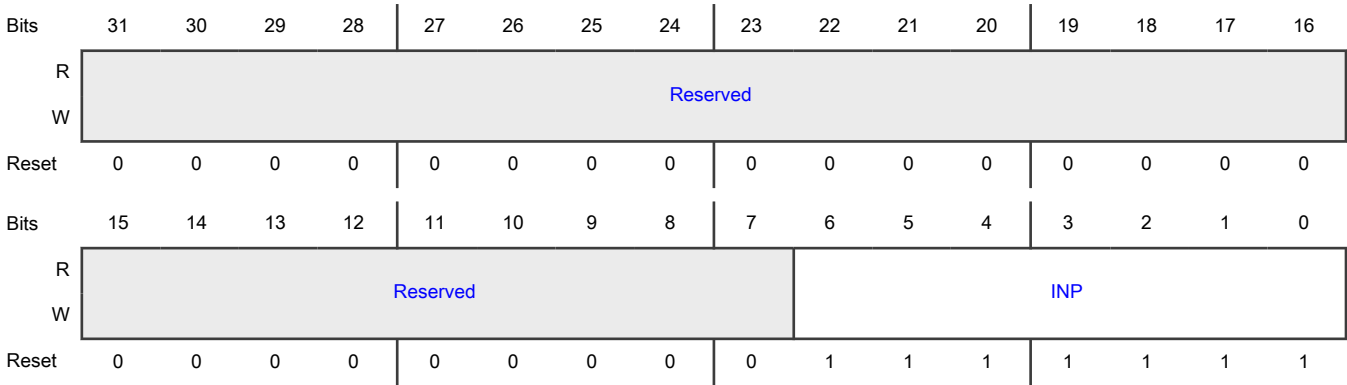

Fields

Field	Function
31-7 —	Reserved
6-0 INP	QDC0 input connections 000_0000b - Reserved 000_0001b - ARM_TXEV input is selected 000_0010b - AOI0_OUT0 input is selected 000_0011b - AOI0_OUT1 input is selected 000_0100b - AOI0_OUT2 input is selected 000_0101b - AOI0_OUT3 input is selected 000_0110b - CMP0_OUT input is selected 000_0111b - CMP1_OUT input is selected 000_1000b - CMP2_OUT input is selected 000_1001b - CTimer0_MAT2 input is selected 000_1010b - CTimer0_MAT3

Table continues on the next page...

Table continued from the previous page...

Field	Function
	000_1011b - CTimer1_MAT2 input is selected
	000_1100b - CTimer1_MAT3 input is selected
	000_1101b - CTimer2_MAT2 input is selected
	000_1110b - CTimer2_MAT3 input is selected
	000_1111b - Reserved
	001_0000b - PWM0_SM0_MUX_TRIG0 input is selected
	001_0001b - PWM0_SM0_MUX_TRIG1 input is selected
	001_0010b - PWM0_SM1_MUX_TRIG0 input is selected
	001_0011b - PWM0_SM1_MUX_TRIG1 input is selected
	001_0100b - PWM0_SM2_MUX_TRIG0 input is selected
	001_0101b - PWM0_SM2_MUX_TRIG1 input is selected
	001_0110b - PWM0_SM3_MUX_TRIG0 input is selected
	001_0111b - PWM0_SM3_MUX_TRIG1 input is selected
	001_1000b - TRIG_IN0 input is selected
	001_1001b - TRIG_IN1 input is selected
	001_1010b - TRIG_IN2 input is selected
	001_1011b - TRIG_IN3 input is selected
	001_1100b - TRIG_IN4 input is selected
	001_1101b - TRIG_IN5 input is selected
	001_1110b - TRIG_IN6 input is selected
	001_1111b - TRIG_IN7 input is selected
	010_0000b - TRIG_IN8 input is selected
	010_0001b - TRIG_IN9 input is selected
	010_0010b - TRIG_IN10 input is selected
	010_0011b - TRIG_IN11 input is selected
	010_0100b - GPIO0 Pin Event Trig 0 is selected
	010_0101b - GPIO1 Pin Event Trig 0 input is selected
	010_0110b - GPIO2 Pin Event Trig 0 input is selected
	010_0111b - GPIO3 Pin Event Trig 0 input is selected
	010_1000b - GPIO4 Pin Event Trig 0 input is selected
	010_1001b - AOI1_OUT0 input is selected
	010_1010b - AOI1_OUT1 input is selected
	010_1011b - AOI1_OUT2 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	010_1100b - AOI1_OUT3 input is selected 010_1101b - Reserved 010_1110b - Reserved 010_1111b - Reserved 011_0000b - Reserved 011_0001b - CTimer3_MAT2 input is selected 011_0010b - CTimer3_MAT3 input is selected 011_0011b - CTimer4_MAT2 input is selected 011_0100b - CTimer4_MAT3 input is selected 011_0101b - Reserved 011_0110b - Reserved 011_0111b - Reserved 011_1000b - Reserved 011_1001b - Reserved 011_1010b - Reserved 011_1011b - Reserved 011_1100b - Reserved 011_1101b - Reserved 011_1110b - PWM1_SM0_OUT_TRIG0 input is selected 011_1111b - PWM1_SM0_OUT_TRIG1 input is selected 100_0000b - PWM1_SM1_OUT_TRIG0 input is selected 100_0001b - PWM1_SM1_OUT_TRIG1 input is selected 100_0010b - PWM1_SM2_OUT_TRIG0 input is selected 100_0011b - PWM1_SM2_OUT_TRIG1 input is selected 100_0100b - PWM1_SM3_MUX_TRIG0 input is selected 100_0101b - PWM1_SM3_MUX_TRIG1 input is selected All other values are reserved.

13.6.1.28 QDC0 Trigger Input Connections (QDC0_ICAP2)


Offset

Register	Offset
QDC0_ICAP2	378h

Function

This register selects the QDC0 trigger inputs.

Diagram

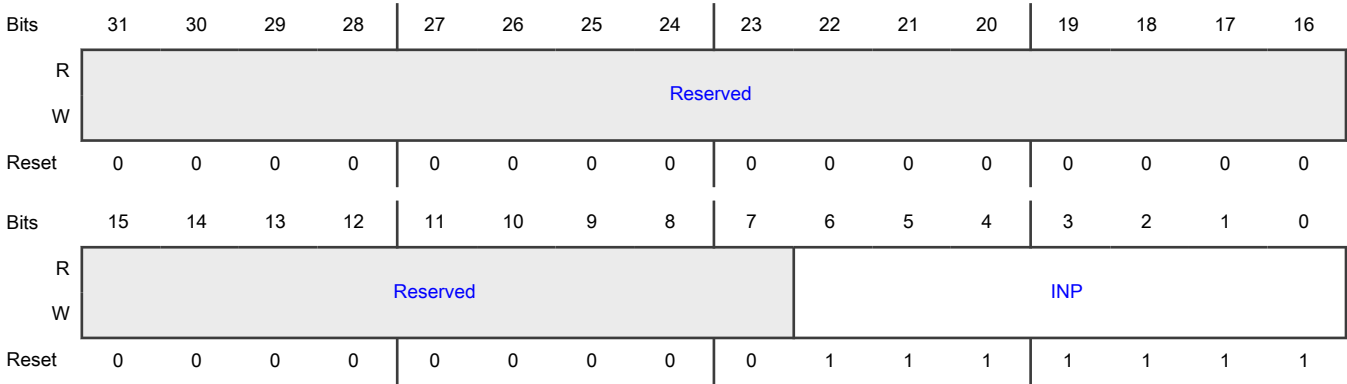

Fields

Field	Function
31-7 —	Reserved
6-0 INP	QDC0 input connections 000_0000b - Reserved 000_0001b - ARM_TXEV input is selected 000_0010b - AOI0_OUT0 input is selected 000_0011b - AOI0_OUT1 input is selected 000_0100b - AOI0_OUT2 input is selected 000_0101b - AOI0_OUT3 input is selected 000_0110b - CMP0_OUT input is selected 000_0111b - CMP1_OUT input is selected 000_1000b - CMP2_OUT input is selected 000_1001b - CTimer0_MAT2 input is selected 000_1010b - CTimer0_MAT3 000_1011b - CTimer1_MAT2 input is selected 000_1100b - CTimer1_MAT3 input is selected 000_1101b - CTimer2_MAT2 input is selected 000_1110b - CTimer2_MAT3 input is selected 000_1111b - Reserved 001_0000b - PWM0_SM0_MUX_TRIG0 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	001_0001b - PWM0_SM0_MUX_TRIG1 input is selected
	001_0010b - PWM0_SM1_MUX_TRIG0 input is selected
	001_0011b - PWM0_SM1_MUX_TRIG1 input is selected
	001_0100b - PWM0_SM2_MUX_TRIG0 input is selected
	001_0101b - PWM0_SM2_MUX_TRIG1 input is selected
	001_0110b - PWM0_SM3_MUX_TRIG0 input is selected
	001_0111b - PWM0_SM3_MUX_TRIG1 input is selected
	001_1000b - TRIG_IN0 input is selected
	001_1001b - TRIG_IN1 input is selected
	001_1010b - TRIG_IN2 input is selected
	001_1011b - TRIG_IN3 input is selected
	001_1100b - TRIG_IN4 input is selected
	001_1101b - TRIG_IN5 input is selected
	001_1110b - TRIG_IN6 input is selected
	001_1111b - TRIG_IN7 input is selected
	010_0000b - TRIG_IN8 input is selected
	010_0001b - TRIG_IN9 input is selected
	010_0010b - TRIG_IN10 input is selected
	010_0011b - TRIG_IN11 input is selected
	010_0100b - GPIO0 Pin Event Trig 0 is selected
	010_0101b - GPIO1 Pin Event Trig 0 input is selected
	010_0110b - GPIO2 Pin Event Trig 0 input is selected
	010_0111b - GPIO3 Pin Event Trig 0 input is selected
	010_1000b - GPIO4 Pin Event Trig 0 input is selected
	010_1001b - AOI1_OUT0 input is selected
	010_1010b - AOI1_OUT1 input is selected
	010_1011b - AOI1_OUT2 input is selected
	010_1100b - AOI1_OUT3 input is selected
	010_1101b - Reserved
	010_1110b - Reserved
	010_1111b - Reserved
	011_0000b - Reserved
	011_0001b - CTimer3_MAT2 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	011_0010b - CTimer3_MAT3 input is selected 011_0011b - CTimer4_MAT2 input is selected 011_0100b - CTimer4_MAT3 input is selected 011_0101b - Reserved 011_0110b - Reserved 011_0111b - Reserved 011_1000b - Reserved 011_1001b - Reserved 011_1010b - Reserved 011_1011b - Reserved 011_1100b - Reserved 011_1101b - Reserved 011_1110b - PWM1_SM0_OUT_TRIG0 input is selected 011_1111b - PWM1_SM0_OUT_TRIG1 input is selected 100_0000b - PWM1_SM1_OUT_TRIG0 input is selected 100_0001b - PWM1_SM1_OUT_TRIG1 input is selected 100_0010b - PWM1_SM2_OUT_TRIG0 input is selected 100_0011b - PWM1_SM2_OUT_TRIG1 input is selected 100_0100b - PWM1_SM3_MUX_TRIG0 input is selected 100_0101b - PWM1_SM3_MUX_TRIG1 input is selected All other values are reserved.


13.6.1.29 QDC0 Trigger Input Connections (QDC0_ICAP3)

Offset

Register	Offset
QDC0_ICAP3	37Ch

Function

This register selects the QDC0 trigger inputs.

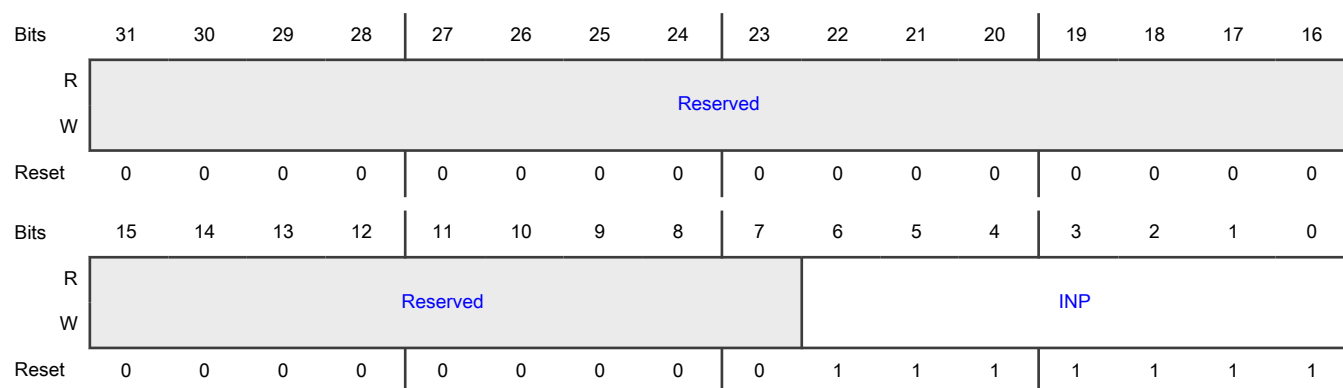Diagram**Fields**

Field	Function
31-7 —	Reserved
6-0 INP	QDC0 input connections 000_0000b - Reserved 000_0001b - ARM_TXEV input is selected 000_0010b - AOI0_OUT0 input is selected 000_0011b - AOI0_OUT1 input is selected 000_0100b - AOI0_OUT2 input is selected 000_0101b - AOI0_OUT3 input is selected 000_0110b - CMP0_OUT input is selected 000_0111b - CMP1_OUT input is selected 000_1000b - CMP2_OUT input is selected 000_1001b - CTimer0_MAT2 input is selected 000_1010b - CTimer0_MAT3 000_1011b - CTimer1_MAT2 input is selected 000_1100b - CTimer1_MAT3 input is selected 000_1101b - CTimer2_MAT2 input is selected 000_1110b - CTimer2_MAT3 input is selected 000_1111b - Reserved 001_0000b - PWM0_SM0_MUX_TRIG0 input is selected 001_0001b - PWM0_SM0_MUX_TRIG1 input is selected 001_0010b - PWM0_SM1_MUX_TRIG0 input is selected 001_0011b - PWM0_SM1_MUX_TRIG1 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	001_0100b - PWM0_SM2_MUX_TRIG0 input is selected
	001_0101b - PWM0_SM2_MUX_TRIG1 input is selected
	001_0110b - PWM0_SM3_MUX_TRIG0 input is selected
	001_0111b - PWM0_SM3_MUX_TRIG1 input is selected
	001_1000b - TRIG_IN0 input is selected
	001_1001b - TRIG_IN1 input is selected
	001_1010b - TRIG_IN2 input is selected
	001_1011b - TRIG_IN3 input is selected
	001_1100b - TRIG_IN4 input is selected
	001_1101b - TRIG_IN5 input is selected
	001_1110b - TRIG_IN6 input is selected
	001_1111b - TRIG_IN7 input is selected
	010_0000b - TRIG_IN8 input is selected
	010_0001b - TRIG_IN9 input is selected
	010_0010b - TRIG_IN10 input is selected
	010_0011b - TRIG_IN11 input is selected
	010_0100b - GPIO0 Pin Event Trig 0 is selected
	010_0101b - GPIO1 Pin Event Trig 0 input is selected
	010_0110b - GPIO2 Pin Event Trig 0 input is selected
	010_0111b - GPIO3 Pin Event Trig 0 input is selected
	010_1000b - GPIO4 Pin Event Trig 0 input is selected
	010_1001b - AOI1_OUT0 input is selected
	010_1010b - AOI1_OUT1 input is selected
	010_1011b - AOI1_OUT2 input is selected
	010_1100b - AOI1_OUT3 input is selected
	010_1101b - Reserved
	010_1110b - Reserved
	010_1111b - Reserved
	011_0000b - Reserved
	011_0001b - CTimer3_MAT2 input is selected
	011_0010b - CTimer3_MAT3 input is selected
	011_0011b - CTimer4_MAT2 input is selected
	011_0100b - CTimer4_MAT3 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	011_0101b - Reserved
	011_0110b - Reserved
	011_0111b - Reserved
	011_1000b - Reserved
	011_1001b - Reserved
	011_1010b - Reserved
	011_1011b - Reserved
	011_1100b - Reserved
	011_1101b - Reserved
	011_1110b - PWM1_SM0_OUT_TRIG0 input is selected
	011_1111b - PWM1_SM0_OUT_TRIG1 input is selected
	100_0000b - PWM1_SM1_OUT_TRIG0 input is selected
	100_0001b - PWM1_SM1_OUT_TRIG1 input is selected
	100_0010b - PWM1_SM2_OUT_TRIG0 input is selected
	100_0011b - PWM1_SM2_OUT_TRIG1 input is selected
	100_0100b - PWM1_SM3_MUX_TRIG0 input is selected
	100_0101b - PWM0_SM3_MUX_TRIG1 input is selected
	All other values are reserved.

13.6.1.30 QDC1 Trigger Input Connections (QDC1_TRIG)


Offset

Register	Offset
QDC1_TRIG	380h

Function

This register selects the QDC1 trigger inputs.

Diagram

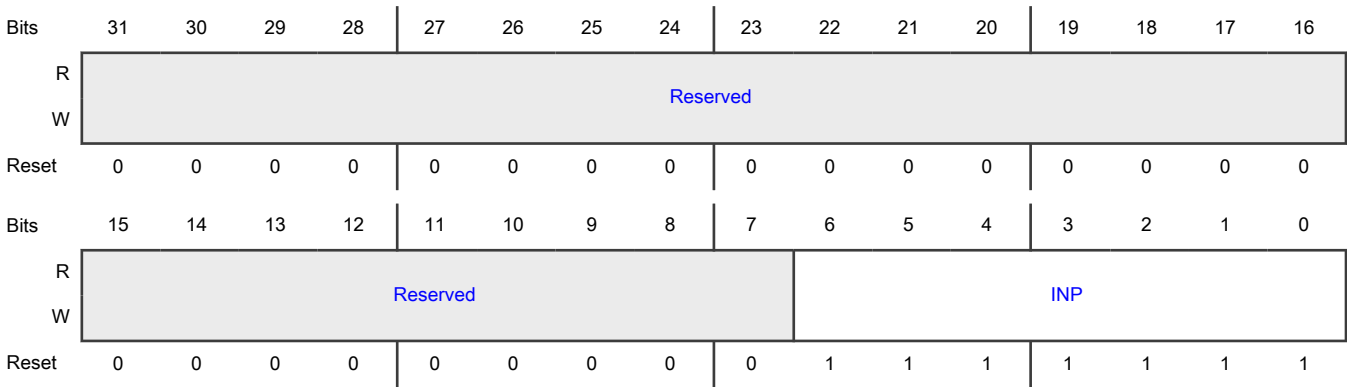

Fields

Field	Function
31-7 —	Reserved
6-0 INP	QDC1 input connections 000_0000b - Reserved 000_0001b - ARM_TXEV input is selected 000_0010b - AOIO_OUT0 input is selected 000_0011b - AOIO_OUT1 input is selected 000_0100b - AOIO_OUT2 input is selected 000_0101b - AOIO_OUT3 input is selected 000_0110b - CMP0_OUT input is selected 000_0111b - CMP1_OUT input is selected 000_1000b - CMP2_OUT input is selected 000_1001b - CTimer0_MAT2 input is selected 000_1010b - CTimer0_MAT3 000_1011b - CTimer1_MAT2 input is selected 000_1100b - CTimer1_MAT3 input is selected 000_1101b - CTimer2_MAT2 input is selected 000_1110b - CTimer2_MAT3 input is selected 000_1111b - Reserved 001_0000b - PWM0_SM0_MUX_TRIG0 input is selected 001_0001b - PWM0_SM0_MUX_TRIG1 input is selected 001_0010b - PWM0_SM1_MUX_TRIG0 input is selected 001_0011b - PWM0_SM1_MUX_TRIG1 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	001_0100b - PWM0_SM2_MUX_TRIG0 input is selected
	001_0101b - PWM0_SM2_MUX_TRIG1 input is selected
	001_0110b - PWM0_SM3_MUX_TRIG0 input is selected
	001_0111b - PWM0_SM3_MUX_TRIG1 input is selected
	001_1000b - TRIG_IN0 input is selected
	001_1001b - TRIG_IN1 input is selected
	001_1010b - TRIG_IN2 input is selected
	001_1011b - TRIG_IN3 input is selected
	001_1100b - TRIG_IN4 input is selected
	001_1101b - TRIG_IN5 input is selected
	001_1110b - TRIG_IN6 input is selected
	001_1111b - TRIG_IN7 input is selected
	010_0000b - TRIG_IN8 input is selected
	010_0001b - TRIG_IN9 input is selected
	010_0010b - TRIG_IN10 input is selected
	010_0011b - TRIG_IN11 input is selected
	010_0100b - GPIO0 Pin Event Trig 0 is selected
	010_0101b - GPIO1 Pin Event Trig 0 input is selected
	010_0110b - GPIO2 Pin Event Trig 0 input is selected
	010_0111b - GPIO3 Pin Event Trig 0 input is selected
	010_1000b - GPIO4 Pin Event Trig 0 input is selected
	010_1001b - AOI1_OUT0 input is selected
	010_1010b - AOI1_OUT1 input is selected
	010_1011b - AOI1_OUT2 input is selected
	010_1100b - AOI1_OUT3 input is selected
	010_1101b - Reserved
	010_1110b - Reserved
	010_1111b - Reserved
	011_0000b - Reserved
	011_0001b - CTimer3_MAT2 input is selected
	011_0010b - CTimer3_MAT3 input is selected
	011_0011b - CTimer4_MAT2 input is selected
	011_0100b - CTimer4_MAT3 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	011_0101b - Reserved
	011_0110b - Reserved
	011_0111b - Reserved
	011_1000b - Reserved
	011_1001b - Reserved
	011_1010b - Reserved
	011_1011b - Reserved
	011_1100b - Reserved
	011_1101b - Reserved
	011_1110b - PWM1_SM0_OUT_TRIG0 input is selected
	011_1111b - PWM1_SM0_OUT_TRIG1 input is selected
	100_0000b - PWM1_SM1_OUT_TRIG0 input is selected
	100_0001b - PWM1_SM1_OUT_TRIG1 input is selected
	100_0010b - PWM1_SM2_OUT_TRIG0 input is selected
	100_0011b - PWM1_SM2_OUT_TRIG1 input is selected
	100_0100b - PWM1_SM3_MUX_TRIG0 input is selected
	100_0101b - PWM1_SM3_MUX_TRIG1 input is selected
	All other values are reserved.

13.6.1.31 QDC1 Trigger Input Connections (QDC1_HOME)


Offset

Register	Offset
QDC1_HOME	384h

Function

This register selects the QDC1 trigger inputs.

Diagram

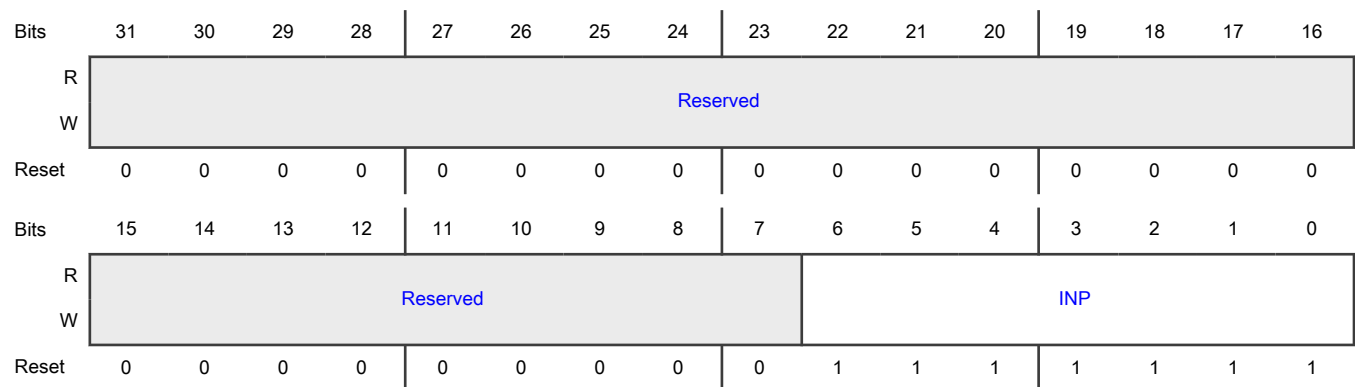

Fields

Field	Function
31-7 —	Reserved
6-0 INP	QDC1 input connections 000_0000b - Reserved 000_0001b - ARM_TXEV input is selected 000_0010b - AOI0_OUT0 input is selected 000_0011b - AOI0_OUT1 input is selected 000_0100b - AOI0_OUT2 input is selected 000_0101b - AOI0_OUT3 input is selected 000_0110b - CMP0_OUT input is selected 000_0111b - CMP1_OUT input is selected 000_1000b - CMP2_OUT input is selected 000_1001b - CTimer0_MAT2 input is selected 000_1010b - CTimer0_MAT3 000_1011b - CTimer1_MAT2 input is selected 000_1100b - CTimer1_MAT3 input is selected 000_1101b - CTimer2_MAT2 input is selected 000_1110b - CTimer2_MAT3 input is selected 000_1111b - Reserved 001_0000b - PWM0_SM0_MUX_TRIG0 input is selected 001_0001b - PWM0_SM0_MUX_TRIG1 input is selected 001_0010b - PWM0_SM1_MUX_TRIG0 input is selected 001_0011b - PWM0_SM1_MUX_TRIG1 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	001_0100b - PWM0_SM2_MUX_TRIG0 input is selected
	001_0101b - PWM0_SM2_MUX_TRIG1 input is selected
	001_0110b - PWM0_SM3_MUX_TRIG0 input is selected
	001_0111b - PWM0_SM3_MUX_TRIG1 input is selected
	001_1000b - TRIG_IN0 input is selected
	001_1001b - TRIG_IN1 input is selected
	001_1010b - TRIG_IN2 input is selected
	001_1011b - TRIG_IN3 input is selected
	001_1100b - TRIG_IN4 input is selected
	001_1101b - TRIG_IN5 input is selected
	001_1110b - TRIG_IN6 input is selected
	001_1111b - TRIG_IN7 input is selected
	010_0000b - TRIG_IN8 input is selected
	010_0001b - TRIG_IN9 input is selected
	010_0010b - TRIG_IN10 input is selected
	010_0011b - TRIG_IN11 input is selected
	010_0100b - GPIO0 Pin Event Trig 0 is selected
	010_0101b - GPIO1 Pin Event Trig 0 input is selected
	010_0110b - GPIO2 Pin Event Trig 0 input is selected
	010_0111b - GPIO3 Pin Event Trig 0 input is selected
	010_1000b - GPIO4 Pin Event Trig 0 input is selected
	010_1001b - AOI1_OUT0 input is selected
	010_1010b - AOI1_OUT1 input is selected
	010_1011b - AOI1_OUT2 input is selected
	010_1100b - AOI1_OUT3 input is selected
	010_1101b - Reserved
	010_1110b - Reserved
	010_1111b - Reserved
	011_0000b - Reserved
	011_0001b - CTimer3_MAT2 input is selected
	011_0010b - CTimer3_MAT3 input is selected
	011_0011b - CTimer4_MAT2 input is selected
	011_0100b - CTimer4_MAT3 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	011_0101b - Reserved
	011_0110b - Reserved
	011_0111b - Reserved
	011_1000b - Reserved
	011_1001b - Reserved
	011_1010b - Reserved
	011_1011b - Reserved
	011_1100b - Reserved
	011_1101b - Reserved
	011_1110b - PWM1_SM0_OUT_TRIG0 input is selected
	011_1111b - PWM1_SM0_OUT_TRIG1 input is selected
	100_0000b - PWM1_SM1_OUT_TRIG0 input is selected
	100_0001b - PWM1_SM1_OUT_TRIG1 input is selected
	100_0010b - PWM1_SM2_OUT_TRIG0 input is selected
	100_0011b - PWM1_SM2_OUT_TRIG1 input is selected
	100_0100b - PWM1_SM3_MUX_TRIG0 input is selected
	100_0101b - PWM1_SM3_MUX_TRIG1 input is selected
	All other values are reserved.

13.6.1.32 QDC1 Trigger Input Connections (QDC1_INDEX)


Offset

Register	Offset
QDC1_INDEX	388h

Function

This register selects the QDC1 trigger inputs.

Diagram

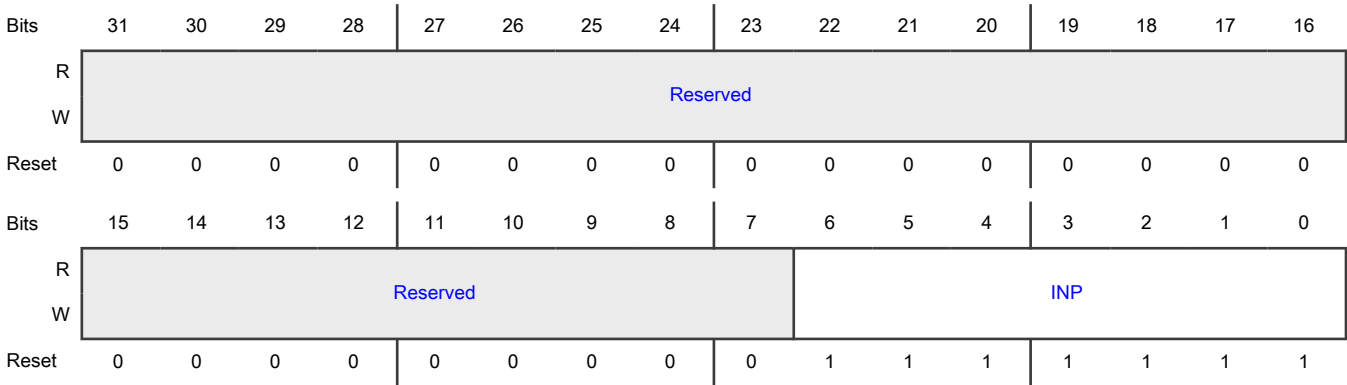

Fields

Field	Function
31-7 —	Reserved
6-0 INP	QDC1 input connections 000_0000b - Reserved 000_0001b - ARM_TXEV input is selected 000_0010b - AOI0_OUT0 input is selected 000_0011b - AOI0_OUT1 input is selected 000_0100b - AOI0_OUT2 input is selected 000_0101b - AOI0_OUT3 input is selected 000_0110b - CMP0_OUT input is selected 000_0111b - CMP1_OUT input is selected 000_1000b - >CMP2_OUT input is selected 000_1001b - CTimer0_MAT2 input is selected 000_1010b - CTimer0_MAT3 000_1011b - CTimer1_MAT2 input is selected 000_1100b - CTimer1_MAT3 input is selected 000_1101b - CTimer2_MAT2 input is selected 000_1110b - CTimer2_MAT3 input is selected 000_1111b - Reserved 001_0000b - PWM0_SM0_MUX_TRIG0 input is selected 001_0001b - PWM0_SM0_MUX_TRIG1 input is selected 001_0010b - PWM0_SM1_MUX_TRIG0 input is selected 001_0011b - PWM0_SM1_MUX_TRIG1 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	001_0100b - PWM0_SM2_MUX_TRIG0 input is selected
	001_0101b - PWM0_SM2_MUX_TRIG1 input is selected
	001_0110b - PWM0_SM3_MUX_TRIG0 input is selected
	001_0111b - PWM0_SM3_MUX_TRIG1 input is selected
	001_1000b - TRIG_IN0 input is selected
	001_1001b - TRIG_IN1 input is selected
	001_1010b - TRIG_IN2 input is selected
	001_1011b - TRIG_IN3 input is selected
	001_1100b - TRIG_IN4 input is selected
	001_1101b - TRIG_IN5 input is selected
	001_1110b - TRIG_IN6 input is selected
	001_1111b - TRIG_IN7 input is selected
	010_0000b - TRIG_IN8 input is selected
	010_0001b - TRIG_IN9 input is selected
	010_0010b - TRIG_IN10 input is selected
	010_0011b - TRIG_IN11 input is selected
	010_0100b - GPIO0 Pin Event Trig 0 is selected
	010_0101b - GPIO1 Pin Event Trig 0 input is selected
	010_0110b - GPIO2 Pin Event Trig 0 input is selected
	010_0111b - GPIO3 Pin Event Trig 0 input is selected
	010_1000b - GPIO4 Pin Event Trig 0 input is selected
	010_1001b - AOI1_OUT0 input is selected
	010_1010b - AOI1_OUT1 input is selected
	010_1011b - AOI1_OUT2 input is selected
	010_1100b - AOI1_OUT3 input is selected
	010_1101b - Reserved
	010_1110b - Reserved
	010_1111b - Reserved
	011_0000b - Reserved
	011_0001b - CTimer3_MAT2 input is selected
	011_0010b - CTimer3_MAT3 input is selected
	011_0011b - CTimer4_MAT2 input is selected
	011_0100b - CTimer4_MAT3 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	011_0101b - Reserved
	011_0110b - Reserved
	011_0111b - Reserved
	011_1000b - Reserved
	011_1001b - Reserved
	011_1010b - Reserved
	011_1011b - Reserved
	011_1100b - Reserved
	011_1101b - Reserved
	011_1110b - PWM1_SM0_OUT_TRIG0 input is selected
	011_1111b - PWM1_SM0_OUT_TRIG1 input is selected
	100_0000b - PWM1_SM1_OUT_TRIG0 input is selected
	100_0001b - PWM1_SM1_OUT_TRIG1 input is selected
	100_0010b - PWM1_SM2_OUT_TRIG0 input is selected
	100_0011b - PWM1_SM2_OUT_TRIG1 input is selected
	100_0100b - PWM1_SM3_MUX_TRIG0 input is selected
	100_0101b - PWM1_SM3_MUX_TRIG1 input is selected
	All other values are reserved.

13.6.1.33 QDC1 Trigger Input Connections (QDC1_PHASEB)


Offset

Register	Offset
QDC1_PHASEB	38Ch

Function

This register selects the QDC1 trigger inputs.

Diagram

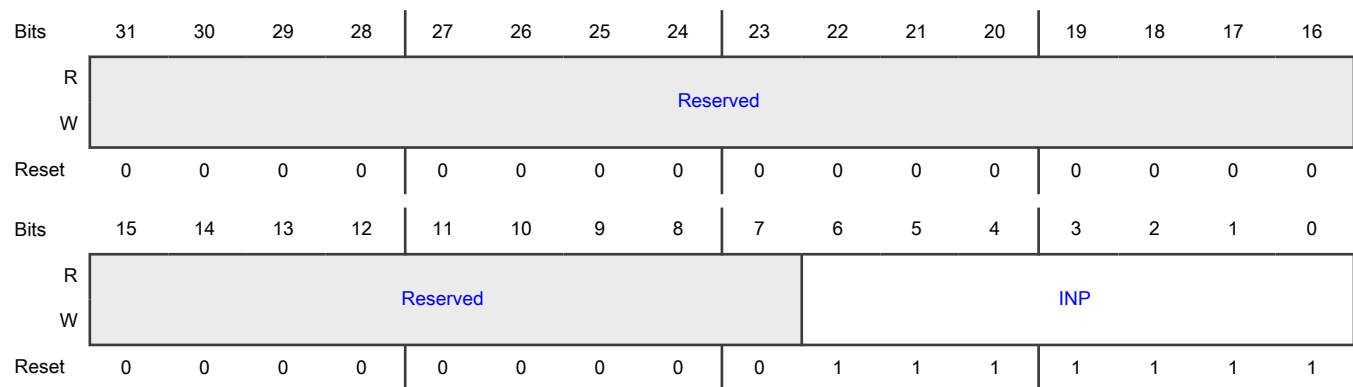

Fields

Field	Function
31-7 —	Reserved
6-0 INP	QDC1 input connections 000_0000b - Reserved 000_0001b - ARM_TXEV input is selected 000_0010b - AOIO_OUT0 input is selected 000_0011b - AOIO_OUT1 input is selected 000_0100b - AOIO_OUT2 input is selected 000_0101b - AOIO_OUT3 input is selected 000_0110b - CMP0_OUT input is selected 000_0111b - CMP1_OUT input is selected 000_1000b - CMP2_OUT input is selected 000_1001b - CTimer0_MAT2 input is selected 000_1010b - CTimer0_MAT3 000_1011b - CTimer1_MAT2 input is selected 000_1100b - CTimer1_MAT3 input is selected 000_1101b - CTimer2_MAT2 input is selected 000_1110b - CTimer2_MAT3 input is selected 000_1111b - Reserved 001_0000b - PWM0_SM0_MUX_TRIG0 input is selected 001_0001b - PWM0_SM0_MUX_TRIG1 input is selected 001_0010b - PWM0_SM1_MUX_TRIG0 input is selected 001_0011b - PWM0_SM1_MUX_TRIG1 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	001_0100b - PWM0_SM2_MUX_TRIG0 input is selected
	001_0101b - PWM0_SM2_MUX_TRIG1 input is selected
	001_0110b - PWM0_SM3_MUX_TRIG0 input is selected
	001_0111b - PWM0_SM3_MUX_TRIG1 input is selected
	001_1000b - TRIG_IN0 input is selected
	001_1001b - TRIG_IN1 input is selected
	001_1010b - TRIG_IN2 input is selected
	001_1011b - TRIG_IN3 input is selected
	001_1100b - TRIG_IN4 input is selected
	001_1101b - TRIG_IN5 input is selected
	001_1110b - TRIG_IN6 input is selected
	001_1111b - TRIG_IN7 input is selected
	010_0000b - TRIG_IN8 input is selected
	010_0001b - TRIG_IN9 input is selected
	010_0010b - TRIG_IN10 input is selected
	010_0011b - TRIG_IN11 input is selected
	010_0100b - GPIO0 Pin Event Trig 0 is selected
	010_0101b - GPIO1 Pin Event Trig 0 input is selected
	010_0110b - GPIO2 Pin Event Trig 0 input is selected
	010_0111b - GPIO3 Pin Event Trig 0 input is selected
	010_1000b - GPIO4 Pin Event Trig 0 input is selected
	010_1001b - AOI1_OUT0 input is selected
	010_1010b - AOI1_OUT1 input is selected
	010_1011b - AOI1_OUT2 input is selected
	010_1100b - AOI1_OUT3 input is selected
	010_1101b - Reserved
	010_1110b - Reserved
	010_1111b - Reserved
	011_0000b - Reserved
	011_0001b - CTimer3_MAT2 input is selected
	011_0010b - CTimer3_MAT3 input is selected
	011_0011b - CTimer4_MAT2 input is selected
	011_0100b - CTimer4_MAT3 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	011_0101b - Reserved
	011_0110b - Reserved
	011_0111b - Reserved
	011_1000b - Reserved
	011_1001b - Reserved
	011_1010b - Reserved
	011_1011b - Reserved
	011_1100b - Reserved
	011_1101b - Reserved
	011_1110b - PWM1_SM0_OUT_TRIG0 input is selected
	011_1111b - PWM1_SM0_OUT_TRIG1 input is selected
	100_0000b - PWM1_SM1_OUT_TRIG0 input is selected
	100_0001b - PWM1_SM1_OUT_TRIG1 input is selected
	100_0010b - PWM1_SM2_OUT_TRIG0 input is selected
	100_0011b - PWM1_SM2_OUT_TRIG1 input is selected
	100_0100b - PWM1_SM3_MUX_TRIG0 input is selected
	100_0101b - PWM1_SM3_MUX_TRIG1 inout is selected
	All other values are reserved.

13.6.1.34 QDC1 Trigger Input Connections (QDC1_PHASEA)


Offset

Register	Offset
QDC1_PHASEA	390h

Function

This register selects the QDC1 trigger inputs.

Diagram

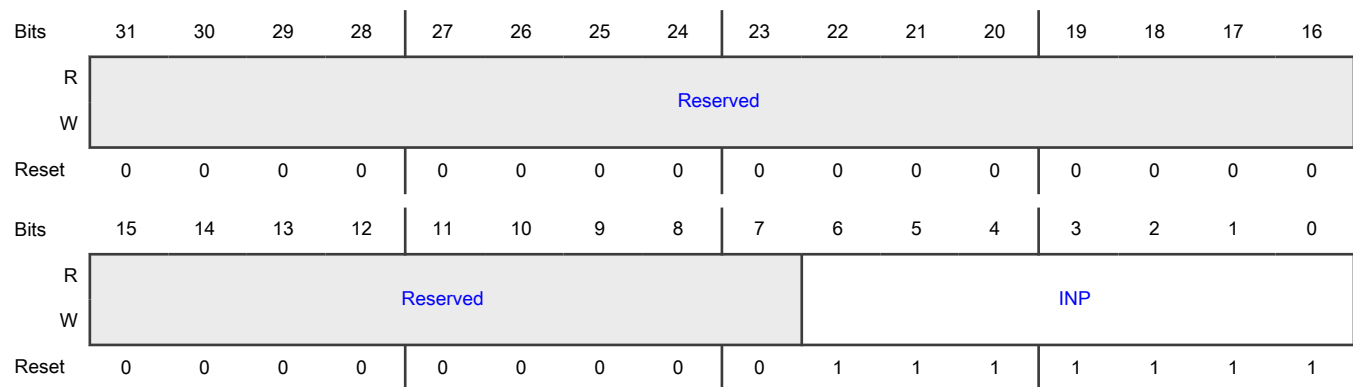

Fields

Field	Function
31-7 —	Reserved
6-0 INP	QDC0 input connections 000_0000b - Reserved 000_0001b - ARM_TXEV input is selected 000_0010b - AOI0_OUT0 input is selected 000_0011b - AOI0_OUT1 input is selected 000_0100b - AOI0_OUT2 input is selected 000_0101b - AOI0_OUT3 input is selected 000_0110b - CMP0_OUT input is selected 000_0111b - CMP1_OUT input is selected 000_1000b - CMP2_OUT input is selected 000_1001b - CTimer0_MAT2 input is selected 000_1010b - CTimer0_MAT3 000_1011b - CTimer1_MAT2 input is selected 000_1100b - CTimer1_MAT3 input is selected 000_1101b - CTimer2_MAT2 input is selected 000_1110b - CTimer2_MAT3 input is selected 000_1111b - Reserved 001_0000b - PWM0_SM0_MUX_TRIG0 input is selected 001_0001b - PWM0_SM0_MUX_TRIG1 input is selected 001_0010b - PWM0_SM1_MUX_TRIG0 input is selected 001_0011b - PWM0_SM1_MUX_TRIG1 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	001_0100b - PWM0_SM2_MUX_TRIG0 input is selected
	001_0101b - PWM0_SM2_MUX_TRIG1 input is selected
	001_0110b - PWM0_SM3_MUX_TRIG0 input is selected
	001_0111b - PWM0_SM3_MUX_TRIG1 input is selected
	001_1000b - TRIG_IN0 input is selected
	001_1001b - TRIG_IN1 input is selected
	001_1010b - TRIG_IN2 input is selected
	001_1011b - TRIG_IN3 input is selected
	001_1100b - TRIG_IN4 input is selected
	001_1101b - TRIG_IN5 input is selected
	001_1110b - TRIG_IN6 input is selected
	001_1111b - TRIG_IN7 input is selected
	010_0000b - TRIG_IN8 input is selected
	010_0001b - TRIG_IN9 input is selected
	010_0010b - TRIG_IN10 input is selected
	010_0011b - TRIG_IN11 input is selected
	010_0100b - GPIO0 Pin Event Trig 0 is selected
	010_0101b - GPIO1 Pin Event Trig 0 input is selected
	010_0110b - GPIO2 Pin Event Trig 0 input is selected
	010_0111b - GPIO3 Pin Event Trig 0 input is selected
	010_1000b - GPIO4 Pin Event Trig 0 input is selected
	010_1001b - AOI1_OUT0 input is selected
	010_1010b - AOI1_OUT1 input is selected
	010_1011b - AOI1_OUT2 input is selected
	010_1100b - AOI1_OUT3 input is selected
	010_1101b - Reserved
	010_1110b - Reserved
	010_1111b - Reserved
	011_0000b - Reserved
	011_0001b - CTimer3_MAT2 input is selected
	011_0010b - CTimer3_MAT3 input is selected
	011_0011b - CTimer4_MAT2 input is selected
	011_0100b - CTimer4_MAT3 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	011_0101b - Reserved
	011_0110b - Reserved
	011_0111b - Reserved
	011_1000b - Reserved
	011_1001b - Reserved
	011_1010b - Reserved
	011_1011b - Reserved
	011_1100b - Reserved
	011_1101b - Reserved
	011_1110b - PWM1_SM0_OUT_TRIG0 input is selected
	011_1111b - PWM1_SM0_OUT_TRIG1 input is selected
	100_0000b - PWM1_SM1_OUT_TRIG0 input is selected
	100_0001b - PWM1_SM1_OUT_TRIG1 input is selected
	100_0010b - PWM1_SM2_OUT_TRIG0 input is selected
	100_0011b - PWM1_SM2_OUT_TRIG1 input is selected
	100_0100b - PWM1_SM3_MUX_TRIG0 input is selected
	100_0101b - PWM1_SM3_MUX_TRIG1 input is selected
	All other values are reserved.

13.6.1.35 QDC1 Trigger Input Connections (QDC1_ICAP1)


Offset

Register	Offset
QDC1_ICAP1	394h

Function

This register selects the QDC1 trigger inputs.

Diagram

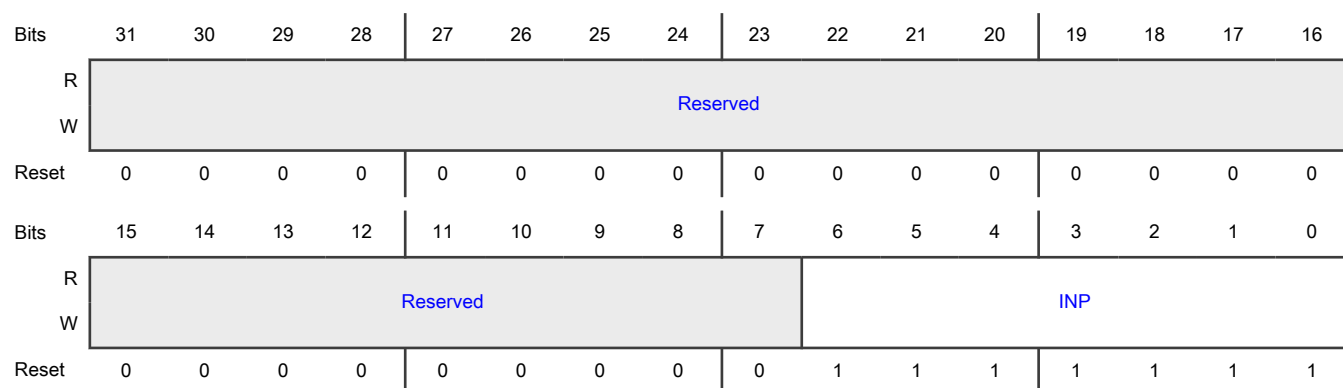

Fields

Field	Function
31-7 —	Reserved
6-0 INP	QDC1 input connections 000_0000b - Reserved 000_0001b - ARM_TXEV input is selected 000_0010b - AOI0_OUT0 input is selected 000_0011b - AOI0_OUT1 input is selected 000_0100b - AOI0_OUT2 input is selected 000_0101b - AOI0_OUT3 input is selected 000_0110b - CMP0_OUT input is selected 000_0111b - CMP1_OUT input is selected 000_1000b - CMP2_OUT input is selected 000_1001b - CTimer0_MAT2 input is selected 000_1010b - CTimer0_MAT3 000_1011b - CTimer1_MAT2 input is selected 000_1100b - CTimer1_MAT3 input is selected 000_1101b - CTimer2_MAT2 input is selected 000_1110b - CTimer2_MAT3 input is selected 000_1111b - Reserved 001_0000b - PWM0_SM0_MUX_TRIG0 input is selected 001_0001b - PWM0_SM0_MUX_TRIG1 input is selected 001_0010b - PWM0_SM1_MUX_TRIG0 input is selected 001_0011b - PWM0_SM1_MUX_TRIG1 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	001_0100b - PWM0_SM2_MUX_TRIG0 input is selected
	001_0101b - PWM0_SM2_MUX_TRIG1 input is selected
	001_0110b - PWM0_SM3_MUX_TRIG0 input is selected
	001_0111b - PWM0_SM3_MUX_TRIG1 input is selected
	001_1000b - TRIG_IN0 input is selected
	001_1001b - TRIG_IN1 input is selected
	001_1010b - TRIG_IN2 input is selected
	001_1011b - TRIG_IN3 input is selected
	001_1100b - TRIG_IN4 input is selected
	001_1101b - TRIG_IN5 input is selected
	001_1110b - TRIG_IN6 input is selected
	001_1111b - TRIG_IN7 input is selected
	010_0000b - TRIG_IN8 input is selected
	010_0001b - TRIG_IN9 input is selected
	010_0010b - TRIG_IN10 input is selected
	010_0011b - TRIG_IN11 input is selected
	010_0100b - GPIO0 Pin Event Trig 0 is selected
	010_0101b - GPIO1 Pin Event Trig 0 input is selected
	010_0110b - GPIO2 Pin Event Trig 0 input is selected
	010_0111b - GPIO3 Pin Event Trig 0 input is selected
	010_1000b - GPIO4 Pin Event Trig 0 input is selected
	010_1001b - AOI1_OUT0 input is selected
	010_1010b - AOI1_OUT1 input is selected
	010_1011b - AOI1_OUT2 input is selected
	010_1100b - AOI1_OUT3 input is selected
	010_1101b - Reserved
	010_1110b - Reserved
	010_1111b - Reserved
	011_0000b - Reserved
	011_0001b - CTimer3_MAT2 input is selected
	011_0010b - CTimer3_MAT3 input is selected
	011_0011b - CTimer4_MAT2 input is selected
	011_0100b - CTimer4_MAT3 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	011_0101b - Reserved
	011_0110b - Reserved
	011_0111b - Reserved
	011_1000b - Reserved
	011_1001b - Reserved
	011_1010b - Reserved
	011_1011b - Reserved
	011_1100b - Reserved
	011_1101b - Reserved
	011_1110b - PWM1_SM0_OUT_TRIG0 input is selected
	011_1111b - PWM1_SM0_OUT_TRIG1 input is selected
	100_0000b - PWM1_SM1_OUT_TRIG0 input is selected
	100_0001b - PWM1_SM1_OUT_TRIG1 input is selected
	100_0010b - PWM1_SM2_OUT_TRIG0 input is selected
	100_0011b - PWM1_SM2_OUT_TRIG1 input is selected
	100_0100b - PWM1_SM3_MUX_TRIG0 input is selected
	100_0101b - PWM1_SM3_MUX_TRIG1 input is selected
	All other values are reserved.

13.6.1.36 QDC1 Trigger Input Connections (QDC1_ICAP2)


Offset

Register	Offset
QDC1_ICAP2	398h

Function

This register selects the QDC1 trigger inputs.

Diagram

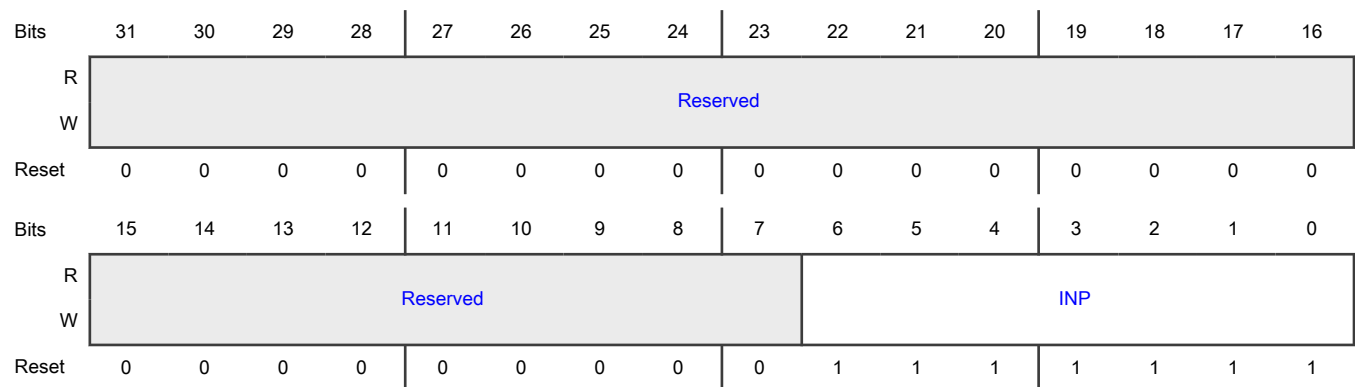

Fields

Field	Function
31-7 —	Reserved
6-0 INP	QDC1 input connections 000_0000b - Reserved 000_0001b - ARM_TXEV input is selected 000_0010b - AOI0_OUT0 input is selected 000_0011b - AOI0_OUT1 input is selected 000_0100b - AOI0_OUT2 input is selected 000_0101b - AOI0_OUT3 input is selected 000_0110b - CMP0_OUT input is selected 000_0111b - CMP1_OUT input is selected 000_1000b - CMP2_OUT input is selected 000_1001b - CTimer0_MAT2 input is selected 000_1010b - CTimer0_MAT3 000_1011b - CTimer1_MAT2 input is selected 000_1100b - CTimer1_MAT3 input is selected 000_1101b - CTimer2_MAT2 input is selected 000_1110b - CTimer2_MAT3 input is selected 000_1111b - Reserved 001_0000b - PWM0_SM0_MUX_TRIG0 input is selected 001_0001b - PWM0_SM0_MUX_TRIG1 input is selected 001_0010b - PWM0_SM1_MUX_TRIG0 input is selected 001_0011b - PWM0_SM1_MUX_TRIG1 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	001_0100b - PWM0_SM2_MUX_TRIG0 input is selected
	001_0101b - PWM0_SM2_MUX_TRIG1 input is selected
	001_0110b - PWM0_SM3_MUX_TRIG0 input is selected
	001_0111b - PWM0_SM3_MUX_TRIG1 input is selected
	001_1000b - TRIG_IN0 input is selected
	001_1001b - TRIG_IN1 input is selected
	001_1010b - TRIG_IN2 input is selected
	001_1011b - TRIG_IN3 input is selected
	001_1100b - TRIG_IN4 input is selected
	001_1101b - TRIG_IN5 input is selected
	001_1110b - TRIG_IN6 input is selected
	001_1111b - TRIG_IN7 input is selected
	010_0000b - TRIG_IN8 input is selected
	010_0001b - TRIG_IN9 input is selected
	010_0010b - TRIG_IN10 input is selected
	010_0011b - TRIG_IN11 input is selected
	010_0100b - GPIO0 Pin Event Trig 0 is selected
	010_0101b - GPIO1 Pin Event Trig 0 input is selected
	010_0110b - GPIO2 Pin Event Trig 0 input is selected
	010_0111b - GPIO3 Pin Event Trig 0 input is selected
	010_1000b - GPIO4 Pin Event Trig 0 input is selected
	010_1001b - AOI1_OUT0 input is selected
	010_1010b - AOI1_OUT1 input is selected
	010_1011b - AOI1_OUT2 input is selected
	010_1100b - AOI1_OUT3 input is selected
	010_1101b - Reserved
	010_1110b - Reserved
	010_1111b - Reserved
	011_0000b - Reserved
	011_0001b - CTimer3_MAT2 input is selected
	011_0010b - CTimer3_MAT3 input is selected
	011_0011b - CTimer4_MAT2 input is selected
	011_0100b - CTimer4_MAT3 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	011_0101b - Reserved 011_0110b - Reserved 011_0111b - Reserved 011_1000b - Reserved 011_1001b - Reserved 011_1010b - Reserved 011_1011b - Reserved 011_1100b - Reserved 011_1101b - Reserved 011_1110b - PWM1_SM0_OUT_TRIG0 input is selected 011_1111b - PWM1_SM0_OUT_TRIG1 input is selected 100_0000b - PWM1_SM1_OUT_TRIG0 input is selected 100_0001b - PWM1_SM1_OUT_TRIG1 input is selected 100_0010b - PWM1_SM2_OUT_TRIG0 input is selected 100_0011b - PWM1_SM2_OUT_TRIG1 input is selected 100_0100b - PWM1_SM3_MUX_TRIG0 input is selected 100_0101b - PWM1_SM3_MUX_TRIG1 input is selected All other values are reserved.

13.6.1.37 QDC1 Trigger Input Connections (QDC1_ICAP3)


Offset

Register	Offset
QDC1_ICAP3	39Ch

Function

This register selects the QDC1 trigger inputs.

Diagram

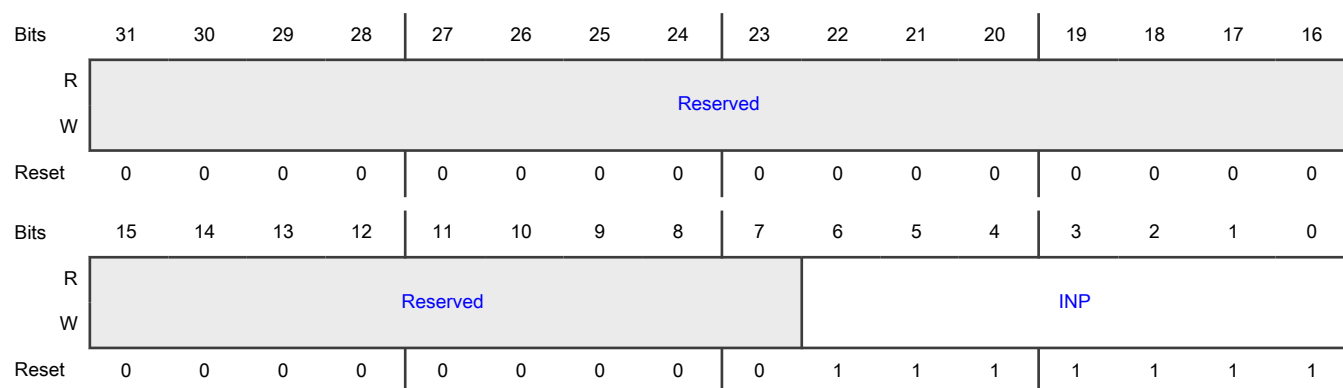

Fields

Field	Function
31-7 —	Reserved
6-0 INP	QDC1 input connections 000_0000b - Reserved 000_0001b - ARM_TXEV input is selected 000_0010b - AOI0_OUT0 input is selected 000_0011b - AOI0_OUT1 input is selected 000_0100b - AOI0_OUT2 input is selected 000_0101b - AOI0_OUT3 input is selected 000_0110b - CMP0_OUT input is selected 000_0111b - CMP1_OUT input is selected 000_1000b - CMP2_OUT input is selected 000_1001b - CTimer0_MAT2 input is selected 000_1010b - CTimer0_MAT3 000_1011b - CTimer1_MAT2 input is selected 000_1100b - CTimer1_MAT3 input is selected 000_1101b - CTimer2_MAT2 input is selected 000_1110b - CTimer2_MAT3 input is selected 000_1111b - Reserved 001_0000b - PWM0_SM0_MUX_TRIG0 input is selected 001_0001b - PWM0_SM0_MUX_TRIG1 input is selected 001_0010b - PWM0_SM1_MUX_TRIG0 input is selected 001_0011b - PWM0_SM1_MUX_TRIG1 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	001_0100b - PWM0_SM2_MUX_TRIG0 input is selected
	001_0101b - PWM0_SM2_MUX_TRIG1 input is selected
	001_0110b - PWM0_SM3_MUX_TRIG0 input is selected
	001_0111b - PWM0_SM3_MUX_TRIG1 input is selected
	001_1000b - TRIG_IN0 input is selected
	001_1001b - TRIG_IN1 input is selected
	001_1010b - TRIG_IN2 input is selected
	001_1011b - TRIG_IN3 input is selected
	001_1100b - TRIG_IN4 input is selected
	001_1101b - TRIG_IN5 input is selected
	001_1110b - TRIG_IN6 input is selected
	001_1111b - TRIG_IN7 input is selected
	010_0000b - TRIG_IN8 input is selected
	010_0001b - TRIG_IN9 input is selected
	010_0010b - TRIG_IN10 input is selected
	010_0011b - TRIG_IN11 input is selected
	010_0100b - GPIO0 Pin Event Trig 0 is selected
	010_0101b - GPIO1 Pin Event Trig 0 input is selected
	010_0110b - GPIO2 Pin Event Trig 0 input is selected
	010_0111b - GPIO3 Pin Event Trig 0 input is selected
	010_1000b - GPIO4 Pin Event Trig 0 input is selected
	010_1001b - AOI1_OUT0 input is selected
	010_1010b - AOI1_OUT1 input is selected
	010_1011b - AOI1_OUT2 input is selected
	010_1100b - AOI1_OUT3 input is selected
	010_1101b - Reserved
	010_1110b - Reserved
	010_1111b - Reserved
	011_0000b - Reserved
	011_0001b - CTimer3_MAT2 input is selected
	011_0010b - CTimer3_MAT3 input is selected
	011_0011b - CTimer4_MAT2 input is selected
	011_0100b - CTimer4_MAT3 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	011_0101b - Reserved
	011_0110b - Reserved
	011_0111b - Reserved
	011_1000b - Reserved
	011_1001b - Reserved
	011_1010b - Reserved
	011_1011b - Reserved
	011_1100b - Reserved
	011_1101b - Reserved
	011_1110b - PWM1_SM0_OUT_TRIG0 input is selected
	011_1111b - PWM1_SM0_OUT_TRIG1 input is selected
	100_0000b - PWM1_SM1_OUT_TRIG0 input is selected
	100_0001b - PWM1_SM1_OUT_TRIG1 input is selected
	100_0010b - PWM1_SM2_OUT_TRIG0 input is selected
	100_0011b - PWM1_SM2_OUT_TRIG1 input is selected
	100_0100b - PWM1_SM3_MUX_TRIG0 input is selected
	100_0101b - PWM1_SM3_MUX_TRIG1 input is selected
	All other values are reserved.

13.6.1.38 PWM0 input trigger connections (FlexPWM0_SM0_EXT_A0)


Offset

Register	Offset
FlexPWM0_SM0_EXT_A0	3A0h

Function

This register selects the PWM0 trigger inputs.

Diagram

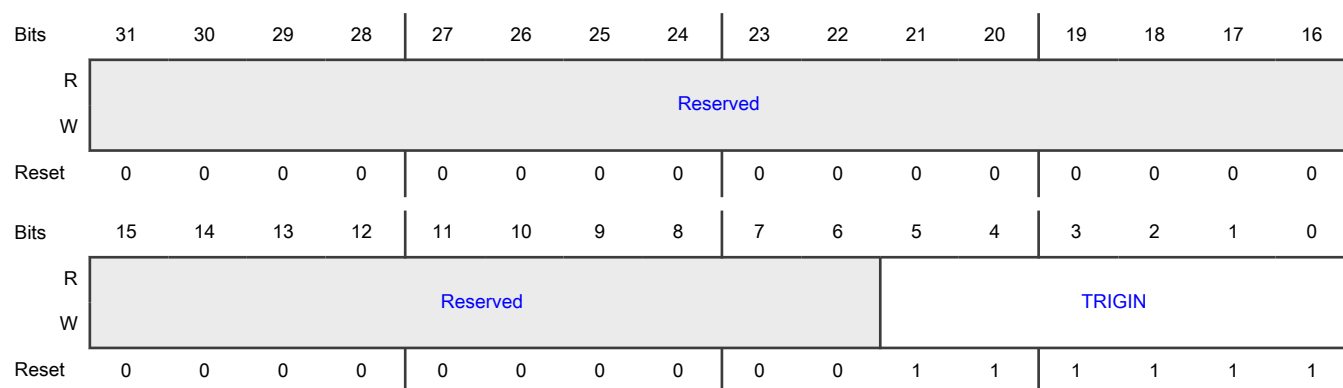

Fields

Field	Function
31-6 —	Reserved
5-0 TRIGIN	EXTA input connections for PWM0 00_0000b - Reserved 00_0001b - ARM_TXEV input is selected 00_0010b - AOI0_OUT0 input is selected 00_0011b - AOI0_OUT1 input is selected 00_0100b - AOI0_OUT2 input is selected 00_0101b - AOI0_OUT3 input is selected 00_0110b - CMP0_OUT input is selected 00_0111b - CMP1_OUT input is selected 00_1000b - CMP2_OUT input is selected 00_1001b - CTimer0_MAT2 input is selected 00_1010b - CTimer0_MAT3 input is selected 00_1011b - CTimer1_MAT2 input is selected 00_1100b - CTimer1_MAT3 input is selected 00_1101b - CTimer2_MAT2 input is selected 00_1110b - CTimer2_MAT3 input is selected 00_1111b - QDC0_CMP_FLAG0 input is selected 01_0000b - QDC0_CMP_FLAG1 input is selected 01_0001b - QDC0_CMP_FLAG2 input is selected 01_0010b - QDC0_CMP_FLAG3 input is selected 01_0011b - QDC0_POS_MATCH0 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	01_0100b - TRIG_IN0 input is selected
	01_0101b - TRIG_IN1 input is selected
	01_0110b - TRIG_IN2 input is selected
	01_0111b - TRIG_IN3 input is selected
	01_1000b - TRIG_IN4 input is selected
	01_1001b - TRIG_IN5 input is selected
	01_1010b - TRIG_IN6 input is selected
	01_1011b - TRIG_IN7 input is selected
	01_1100b - TRIG_IN8 input is selected
	01_1101b - TRIG_IN9 input is selected
	01_1110b - TRIG_IN10 input is selected
	01_1111b - TRIG_IN11 input is selected
	10_0000b - GPIO0 Pin Event Trig 0 input is selected
	10_0001b - GPIO1 Pin Event Trig 0 input is selected
	10_0010b - GPIO2 Pin Event Trig 0 input is selected
	10_0011b - GPIO3 Pin Event Trig 0 input is selected
	10_0100b - GPIO4 Pin Event Trig 0 input is selected
	10_0101b - AOI1_OUT0 input is selected
	10_0110b - AOI1_OUT1 input is selected
	10_0111b - AOI1_OUT2 input is selected
	10_1000b - AOI1_OUT3 input is selected
	10_1001b - Reserved
	10_1010b - Reserved
	10_1011b - Reserved
	10_1100b - Reserved
	10_1101b - CTimer3_MAT2 input is selected
	10_1110b - CTimer3_MAT3 input is selected
	10_1111b - CTimer4_MAT2 input is selected
	11_0000b - CTimer4_MAT3 input is selected
	11_0001b - QDC1_CMP_FLAG0 input is selected
	11_0010b - QDC1_CMP_FLAG1 input is selected
	11_0011b - QDC1_CMP_FLAG2 input is selected
	11_0100b - QDC1_CMP_FLAG3 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	11_0101b - QDC1_POS_MATCH0 input is selected 11_0110b - PWM1_SM0_MUX_TRIG0 input is selected 11_0111b - PWM1_SM0_MUX_TRIG1 input is selected 11_1000b - PWM1_SM1_MUX_TRIG0 input is selected 11_1001b - PWM1_SM1_MUX_TRIG1 input is selected 11_1010b - PWM1_SM2_MUX_TRIG0 input is selected 11_1011b - PWM1_SM2_MUX_TRIG1 input is selected 11_1100b - PWM1_SM3_MUX_TRIG0 input is selected 11_1101b - PWM1_SM3_MUX_TRIG1 input is selected All other values are reserved.

13.6.1.39 PWM0 input trigger connections (FlexPWM0_SM0_EXTSYNC)


Offset

Register	Offset
FlexPWM0_SM0_EXTSY NC	3A4h

Function

This register selects the PWM0 trigger inputs.

Diagram

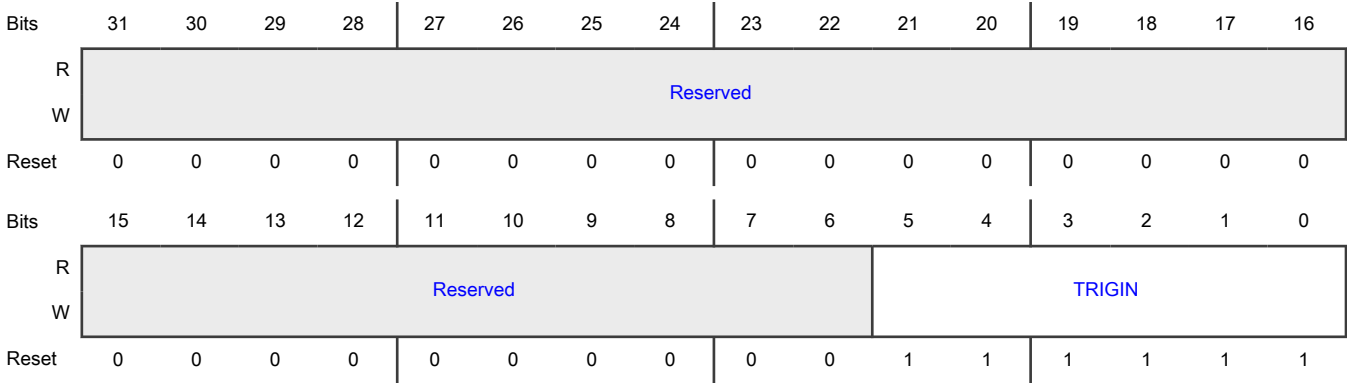

Fields

Field	Function
31-6 —	Reserved
5-0 TRIGIN	EXTSYNC input connections for PWM0 00_0000b - Reserved 00_0001b - ARM_TXEV input is selected 00_0010b - AOI0_OUT0 input is selected 00_0011b - AOI0_OUT1 input is selected 00_0100b - AOI0_OUT2 input is selected 00_0101b - AOI0_OUT3 input is selected 00_0110b - CMP0_OUT input is selected 00_0111b - CMP1_OUT input is selected 00_1000b - CMP2_OUT input is selected 00_1001b - CTimer0_MAT2 input is selected 00_1010b - CTimer0_MAT3 input is selected 00_1011b - CTimer1_MAT2 input is selected 00_1100b - CTimer1_MAT3 input is selected 00_1101b - CTimer2_MAT2 input is selected 00_1110b - CTimer2_MAT3 input is selected 00_1111b - QDC0_CMP_FLAG0 input is selected 01_0000b - QDC0_CMP_FLAG1 input is selected 01_0001b - QDC0_CMP_FLAG2 input is selected 01_0010b - QDC0_CMP_FLAG3 input is selected 01_0011b - QDC0_POS_MATCH0 input is selected 01_0100b - TRIG_IN0 input is selected 01_0101b - TRIG_IN1 input is selected 01_0110b - TRIG_IN2 input is selected 01_0111b - TRIG_IN3 input is selected 01_1000b - TRIG_IN4 input is selected 01_1001b - TRIG_IN5 input is selected 01_1010b - TRIG_IN6 input is selected 01_1011b - TRIG_IN7 input is selected 01_1100b - TRIG_IN8 input is selected 01_1101b - TRIG_IN9 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	01_1110b - TRIG_IN10 input is selected 01_1111b - TRIG_IN11 input is selected 10_0000b - GPIO0 Pin Event Trig 0 input is selected 10_0001b - GPIO1 Pin Event Trig 0 input is selected 10_0010b - GPIO2 Pin Event Trig 0 input is selected 10_0011b - GPIO3 Pin Event Trig 0 input is selected 10_0100b - GPIO4 Pin Event Trig 0 input is selected 10_0101b - AOI1_OUT0 input is selected 10_0110b - AOI1_OUT1 input is selected 10_0111b - AOI1_OUT2 input is selected 10_1000b - AOI1_OUT3 input is selected 10_1001b - Reserved 10_1010b - Reserved 10_1011b - Reserved 10_1100b - Reserved 10_1101b - CTimer3_MAT2 input is selected 10_1110b - CTimer3_MAT3 input is selected 10_1111b - CTimer4_MAT2 input is selected 11_0000b - CTimer4_MAT3 input is selected 11_0001b - QDC1_CMP_FLAG0 input is selected 11_0010b - QDC1_CMP_FLAG1 input is selected 11_0011b - QDC1_CMP_FLAG2 input is selected 11_0100b - QDC1_CMP_FLAG3 input is selected 11_0101b - QDC1_POS_MATCH0 input is selected 11_0110b - PWM1_SM0_MUX_TRIG0 input is selected 11_0111b - PWM1_SM0_MUX_TRIG1 input is selected 11_1000b - PWM1_SM1_MUX_TRIG0 input is selected 11_1001b - PWM1_SM1_MUX_TRIG1 input is selected 11_1010b - PWM1_SM2_MUX_TRIG0 input is selected 11_1011b - PWM1_SM2_MUX_TRIG1 input is selected 11_1100b - PWM1_SM3_MUX_TRIG0 input is selected 11_1101b - PWM1_SM3_MUX_TRIG1 input is selected All other values are reserved.

13.6.1.40 PWM0 input trigger connections (FlexPWM0_SM1_EXT_A)


Offset

Register	Offset
FlexPWM0_SM1_EXT_A	3A8h

Function

This register selects the PWM0 trigger inputs.

Diagram

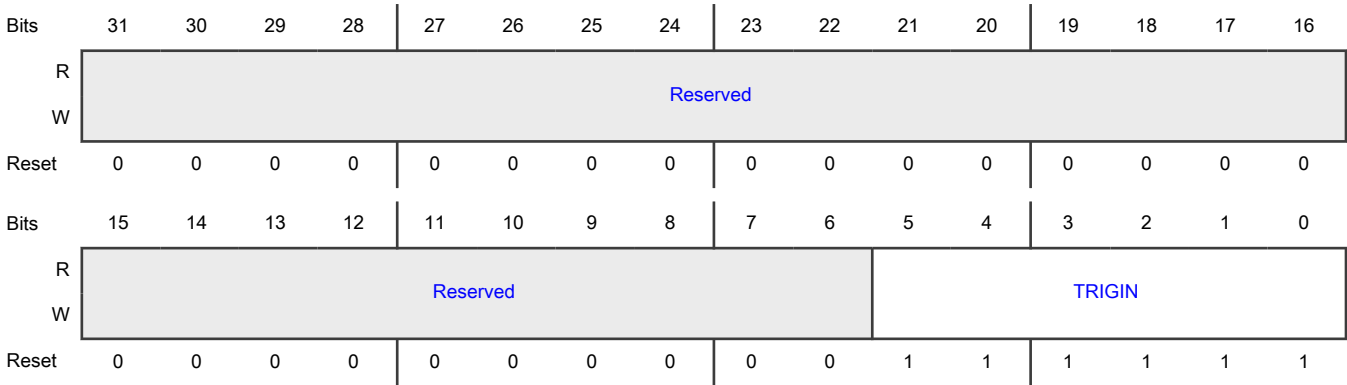

Fields

Field	Function
31-6 —	Reserved
5-0 TRIGIN	EXTA input connections for PWM0 00_0000b - Reserved 00_0001b - ARM_TXEV input is selected 00_0010b - AOI0_OUT0 input is selected 00_0011b - AOI0_OUT1 input is selected 00_0100b - AOI0_OUT2 input is selected 00_0101b - AOI0_OUT3 input is selected 00_0110b - CMP0_OUT input is selected 00_0111b - CMP1_OUT input is selected 00_1000b - CMP2_OUT input is selected 00_1001b - CTimer0_MAT2 input is selected 00_1010b - CTimer0_MAT3 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	00_1011b - CTimer1_MAT2 input is selected
	00_1100b - CTimer1_MAT3 input is selected
	00_1101b - CTimer2_MAT2 input is selected
	00_1110b - CTimer2_MAT3 input is selected
	00_1111b - QDC0_CMP_FLAG0 input is selected
	01_0000b - QDC0_CMP_FLAG1 input is selected
	01_0001b - QDC0_CMP_FLAG2 input is selected
	01_0010b - QDC0_CMP_FLAG3 input is selected
	01_0011b - QDC0_POS_MATCH0 input is selected
	01_0100b - TRIG_IN0 input is selected
	01_0101b - TRIG_IN1 input is selected
	01_0110b - TRIG_IN2 input is selected
	01_0111b - TRIG_IN3 input is selected
	01_1000b - TRIG_IN4 input is selected
	01_1001b - TRIG_IN5 input is selected
	01_1010b - TRIG_IN6 input is selected
	01_1011b - TRIG_IN7 input is selected
	01_1100b - TRIG_IN8 input is selected
	01_1101b - TRIG_IN9 input is selected
	01_1110b - TRIG_IN10 input is selected
	01_1111b - TRIG_IN11 input is selected
	10_0000b - GPIO0 Pin Event Trig 0 input is selected
	10_0001b - GPIO1 Pin Event Trig 0 input is selected
	10_0010b - GPIO2 Pin Event Trig 0 input is selected
	10_0011b - GPIO3 Pin Event Trig 0 input is selected
	10_0100b - GPIO4 Pin Event Trig 0 input is selected
	10_0101b - AOI1_OUT0 input is selected
	10_0110b - AOI1_OUT1 input is selected
	10_0111b - AOI1_OUT2 input is selected
	10_1000b - AOI1_OUT3 input is selected
	10_1001b - Reserved
	10_1010b - Reserved
	10_1011b - Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
	10_1100b - Reserved 10_1101b - CTimer3_MAT2 input is selected 10_1110b - CTimer3_MAT3 input is selected 10_1111b - CTimer4_MAT2 input is selected 11_0000b - CTimer4_MAT3 input is selected 11_0001b - QDC1_CMP_FLAG0 input is selected 11_0010b - QDC1_CMP_FLAG1 input is selected 11_0011b - QDC1_CMP_FLAG2 input is selected 11_0100b - QDC1_CMP_FLAG3 input is selected 11_0101b - QDC1_POS_MATCH0 input is selected 11_0110b - PWM1_SM0_MUX_TRIG0 input is selected 11_0111b - PWM1_SM0_MUX_TRIG1 input is selected 11_1000b - PWM1_SM1_MUX_TRIG0 input is selected 11_1001b - PWM1_SM1_MUX_TRIG1 input is selected 11_1010b - PWM1_SM2_MUX_TRIG0 input is selected 11_1011b - PWM1_SM2_MUX_TRIG1 input is selected 11_1100b - PWM1_SM3_MUX_TRIG0 input is selected 11_1101b - PWM1_SM3_MUX_TRIG1 input is selected All other values are reserved.

13.6.1.41 PWM0 input trigger connections (FlexPWM0_SM1_EXTSYNC)


Offset

Register	Offset
FlexPWM0_SM1_EXTSY NC	3ACh

Function

This register selects the PWM0 trigger inputs.

Diagram

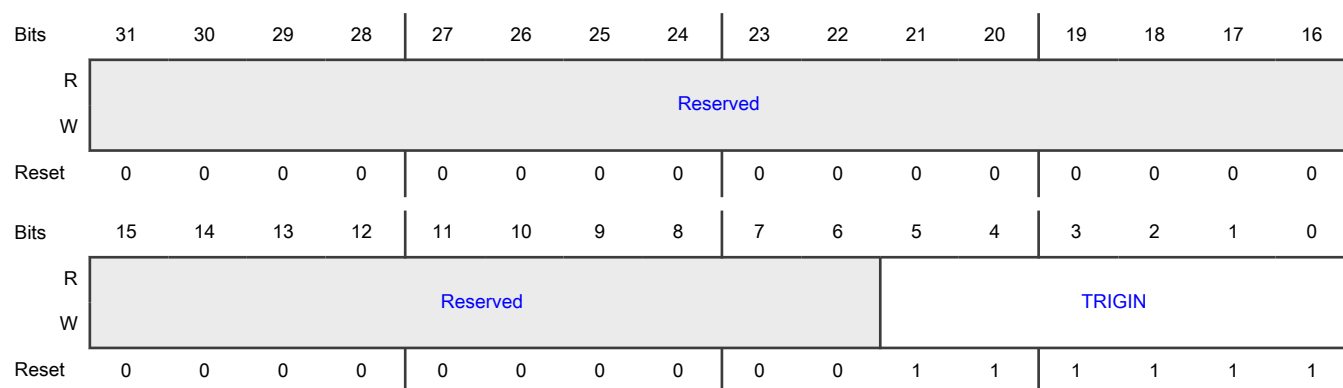

Fields

Field	Function
31-6 —	Reserved
5-0 TRIGIN	EXTSYNC input connections for PWM0 00_0000b - Reserved 00_0001b - ARM_TXEV input is selected 00_0010b - AOI0_OUT0 input is selected 00_0011b - AOI0_OUT1 input is selected 00_0100b - AOI0_OUT2 input is selected 00_0101b - AOI0_OUT3 input is selected 00_0110b - CMP0_OUT input is selected 00_0111b - CMP1_OUT input is selected 00_1000b - CMP2_OUT input is selected 00_1001b - CTimer0_MAT2 input is selected 00_1010b - CTimer0_MAT3 input is selected 00_1011b - CTimer1_MAT2 input is selected 00_1100b - CTimer1_MAT3 input is selected 00_1101b - CTimer2_MAT2 input is selected 00_1110b - CTimer2_MAT3 input is selected 00_1111b - QDC0_CMP_FLAG0 input is selected 01_0000b - QDC0_CMP_FLAG1 input is selected 01_0001b - QDC0_CMP_FLAG2 input is selected 01_0010b - QDC0_CMP_FLAG3 input is selected 01_0011b - QDC0_POS_MATCH0 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	01_0100b - TRIG_IN0 input is selected
	01_0101b - TRIG_IN1 input is selected
	01_0110b - TRIG_IN2 input is selected
	01_0111b - TRIG_IN3 input is selected
	01_1000b - TRIG_IN4 input is selected
	01_1001b - TRIG_IN5 input is selected
	01_1010b - TRIG_IN6 input is selected
	01_1011b - TRIG_IN7 input is selected
	01_1100b - TRIG_IN8 input is selected
	01_1101b - TRIG_IN9 input is selected
	01_1110b - TRIG_IN10 input is selected
	01_1111b - TRIG_IN11 input is selected
	10_0000b - GPIO0 Pin Event Trig 0 input is selected
	10_0001b - GPIO1 Pin Event Trig 0 input is selected
	10_0010b - GPIO2 Pin Event Trig 0 input is selected
	10_0011b - GPIO3 Pin Event Trig 0 input is selected
	10_0100b - GPIO4 Pin Event Trig 0 input is selected
	10_0101b - AOI1_OUT0 input is selected
	10_0110b - AOI1_OUT1 input is selected
	10_0111b - AOI1_OUT2 input is selected
	10_1000b - AOI1_OUT3 input is selected
	10_1001b - Reserved
	10_1010b - Reserved
	10_1011b - Reserved
	10_1100b - Reserved
	10_1101b - CTimer3_MAT2 input is selected
	10_1110b - CTimer3_MAT3 input is selected
	10_1111b - CTimer4_MAT2 input is selected
	11_0000b - CTimer4_MAT3 input is selected
	11_0001b - QDC1_CMP_FLAG0 input is selected
	11_0010b - QDC1_CMP_FLAG1 input is selected
	11_0011b - QDC1_CMP_FLAG2 input is selected
	11_0100b - QDC1_CMP_FLAG3 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	11_0101b - QDC1_POS_MATCH0 input is selected 11_0110b - PWM1_SM0_MUX_TRIG0 input is selected 11_0111b - PWM1_SM0_MUX_TRIG1 input is selected 11_1000b - PWM1_SM1_MUX_TRIG0 input is selected 11_1001b - PWM1_SM1_MUX_TRIG1 input is selected 11_1010b - PWM1_SM2_MUX_TRIG0 input is selected 11_1011b - PWM1_SM2_MUX_TRIG1 input is selected 11_1100b - PWM1_SM3_MUX_TRIG0 input is selected 11_1101b - PWM1_SM3_MUX_TRIG1 input is selected All other values are reserved.

13.6.1.42 PWM0 input trigger connections (FlexPWM0_SM2_EXT_A)

Offset

Register	Offset
FlexPWM0_SM2_EXT_A	3B0h

Function

This register selects the PWM0 trigger inputs.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	Reserved															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserved								TRIGIN							
W																
Reset	0	0	0	0	0	0	0	0	0	0	1	1	1	1	1	1

Fields

Field	Function
31-6	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
—	
5-0 TRIGIN	EXTA input connections for PWM0 00_0000b - Reserved 00_0001b - ARM_TXEV input is selected 00_0010b - AOI0_OUT0 input is selected 00_0011b - AOI0_OUT1 input is selected 00_0100b - AOI0_OUT2 input is selected 00_0101b - AOI0_OUT3 input is selected 00_0110b - CMP0_OUT input is selected 00_0111b - CMP1_OUT input is selected 00_1000b - CMP2_OUT input is selected 00_1001b - CTimer0_MAT2 input is selected 00_1010b - CTimer0_MAT3 input is selected 00_1011b - CTimer1_MAT2 input is selected 00_1100b - CTimer1_MAT3 input is selected 00_1101b - CTimer2_MAT2 input is selected 00_1110b - CTimer2_MAT3 input is selected 00_1111b - QDC0_CMP_FLAG0 input is selected 01_0000b - QDC0_CMP_FLAG1 input is selected 01_0001b - QDC0_CMP_FLAG2 input is selected 01_0010b - QDC0_CMP_FLAG3 input is selected 01_0011b - QDC0_POS_MATCH0 input is selected 01_0100b - TRIG_IN0 input is selected 01_0101b - TRIG_IN1 input is selected 01_0110b - TRIG_IN2 input is selected 01_0111b - TRIG_IN3 input is selected 01_1000b - TRIG_IN4 input is selected 01_1001b - TRIG_IN5 input is selected 01_1010b - TRIG_IN6 input is selected 01_1011b - TRIG_IN7 input is selected 01_1100b - TRIG_IN8 input is selected 01_1101b - TRIG_IN9 input is selected 01_1110b - TRIG_IN10 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	01_1111b - TRIG_IN11 input is selected 10_0000b - GPIO0 Pin Event Trig 0 input is selected 10_0001b - GPIO1 Pin Event Trig 0 input is selected 10_0010b - GPIO2 Pin Event Trig 0 input is selected 10_0011b - GPIO3 Pin Event Trig 0 input is selected 10_0100b - GPIO4 Pin Event Trig 0 input is selected 10_0101b - AOI1_OUT0 input is selected 10_0110b - AOI1_OUT1 input is selected 10_0111b - AOI1_OUT2 input is selected 10_1000b - AOI1_OUT3 input is selected 10_1001b - Reserved 10_1010b - Reserved 10_1011b - Reserved 10_1100b - Reserved 10_1101b - CTimer3_MAT2 input is selected 10_1110b - CTimer3_MAT3 input is selected 10_1111b - CTimer4_MAT2 input is selected 11_0000b - CTimer4_MAT3 input is selected 11_0001b - QDC1_CMP_FLAG0 input is selected 11_0010b - QDC1_CMP_FLAG1 input is selected 11_0011b - QDC1_CMP_FLAG2 input is selected 11_0100b - QDC1_CMP_FLAG3 input is selected 11_0101b - QDC1_POS_MATCH0 input is selected 11_0110b - PWM1_SM0_MUX_TRIG0 input is selected 11_0111b - PWM1_SM0_MUX_TRIG1 input is selected 11_1000b - PWM1_SM1_MUX_TRIG0 input is selected 11_1001b - PWM1_SM1_MUX_TRIG1 input is selected 11_1010b - PWM1_SM2_MUX_TRIG0 input is selected 11_1011b - PWM1_SM2_MUX_TRIG1 input is selected 11_1100b - PWM1_SM3_MUX_TRIG0 input is selected 11_1101b - PWM1_SM3_MUX_TRIG1 input is selected All other values are reserved.

13.6.1.43 PWM0 input trigger connections (FlexPWM0_SM2_EXTSYNC)


Offset

Register	Offset
FlexPWM0_SM2_EXTSY NC	3B4h

Function

This register selects the PWM0 trigger inputs.

Diagram

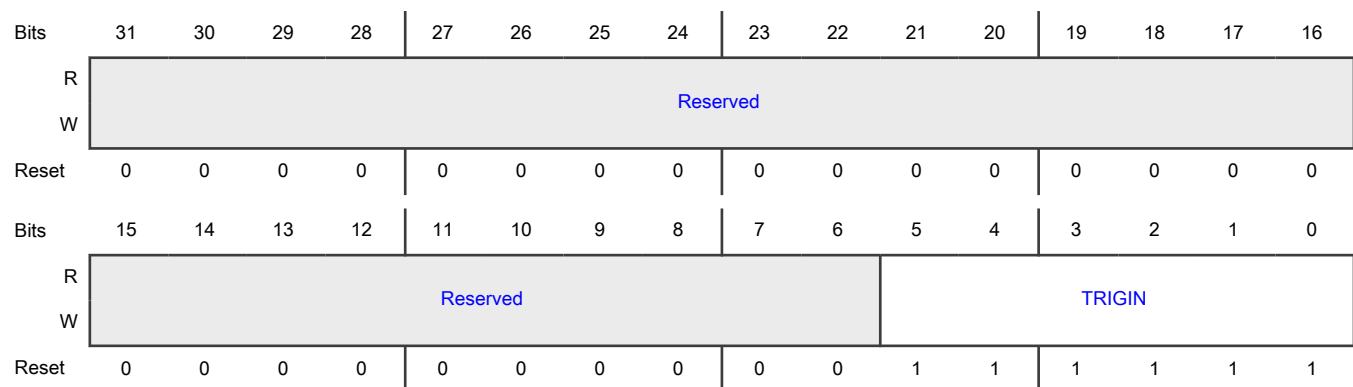

Fields

Field	Function
31-6 —	Reserved
5-0 TRIGIN	EXTSYNC input connections for PWM0 00_0000b - Reserved 00_0001b - ARM_TXEV input is selected 00_0010b - AOI0_OUT0 input is selected 00_0011b - AOI0_OUT1 input is selected 00_0100b - AOI0_OUT2 input is selected 00_0101b - AOI0_OUT3 input is selected 00_0110b - CMP0_OUT input is selected 00_0111b - CMP1_OUT input is selected 00_1000b - CMP2_OUT input is selected 00_1001b - CTimer0_MAT2 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	00_1010b - CTimer0_MAT3 input is selected
	00_1011b - CTimer1_MAT2 input is selected
	00_1100b - CTimer1_MAT3 input is selected
	00_1101b - CTimer2_MAT2 input is selected
	00_1110b - CTimer2_MAT3 input is selected
	00_1111b - QDC0_CMP_FLAG0 input is selected
	01_0000b - QDC0_CMP_FLAG1 input is selected
	01_0001b - QDC0_CMP_FLAG2 input is selected
	01_0010b - QDC0_CMP_FLAG3 input is selected
	01_0011b - QDC0_POS_MATCH0 input is selected
	01_0100b - TRIG_IN0 input is selected
	01_0101b - TRIG_IN1 input is selected
	01_0110b - TRIG_IN2 input is selected
	01_0111b - TRIG_IN3 input is selected
	01_1000b - TRIG_IN4 input is selected
	01_1001b - TRIG_IN5 input is selected
	01_1010b - TRIG_IN6 input is selected
	01_1011b - TRIG_IN7 input is selected
	01_1100b - TRIG_IN8 input is selected
	01_1101b - TRIG_IN9 input is selected
	01_1110b - TRIG_IN10 input is selected
	01_1111b - TRIG_IN11 input is selected
	10_0000b - GPIO0 Pin Event Trig 0 input is selected
	10_0001b - GPIO1 Pin Event Trig 0 input is selected
	10_0010b - GPIO2 Pin Event Trig 0 input is selected
	10_0011b - GPIO3 Pin Event Trig 0 input is selected
	10_0100b - GPIO4 Pin Event Trig 0 input is selected
	10_0101b - AOI1_OUT0 input is selected
	10_0110b - AOI1_OUT1 input is selected
	10_0111b - AOI1_OUT2 input is selected
	10_1000b - AOI1_OUT3 input is selected
	10_1001b - Reserved
	10_1010b - Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
	10_1011b - Reserved 10_1100b - Reserved 10_1101b - CTimer3_MAT2 input is selected 10_1110b - CTimer3_MAT3 input is selected 10_1111b - CTimer4_MAT2 input is selected 11_0000b - CTimer4_MAT3 input is selected 11_0001b - QDC1_CMP_FLAG0 input is selected 11_0010b - QDC1_CMP_FLAG1 input is selected 11_0011b - QDC1_CMP_FLAG2 input is selected 11_0100b - QDC1_CMP_FLAG3 input is selected 11_0101b - QDC1_POS_MATCH0 input is selected 11_0110b - PWM1_SM0_MUX_TRIG0 input is selected 11_0111b - PWM1_SM0_MUX_TRIG1 input is selected 11_1000b - PWM1_SM1_MUX_TRIG0 input is selected 11_1001b - PWM1_SM1_MUX_TRIG1 input is selected 11_1010b - PWM1_SM2_MUX_TRIG0 input is selected 11_1011b - PWM1_SM2_MUX_TRIG1 input is selected 11_1100b - PWM1_SM3_MUX_TRIG0 input is selected 11_1101b - PWM1_SM3_MUX_TRIG1 input is selected All other values are reserved.

13.6.1.44 PWM0 input trigger connections (FlexPWM0_SM3_EXT_A0)


Offset

Register	Offset
FlexPWM0_SM3_EXT_A0	3B8h

Function

This register selects the PWM0 trigger inputs.

Diagram

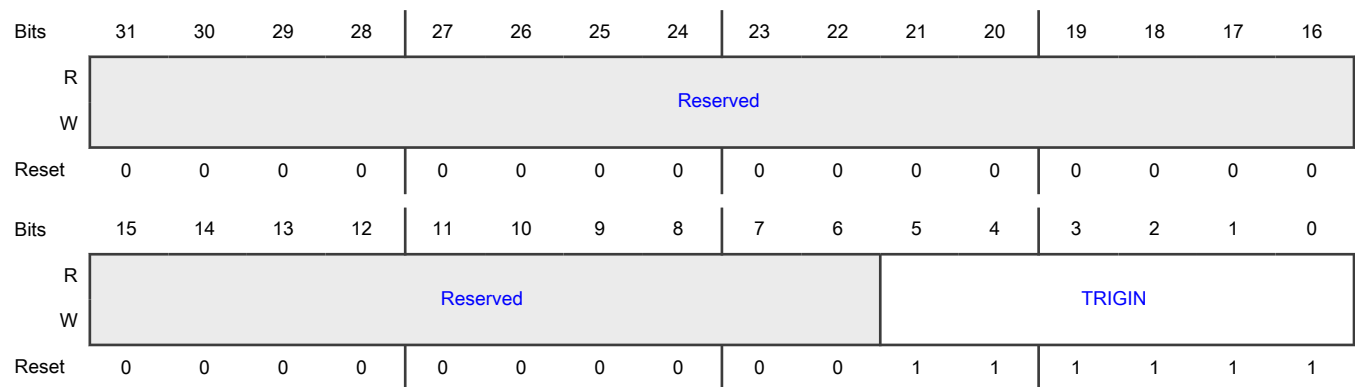

Fields

Field	Function
31-6 —	Reserved
5-0 TRIGIN	EXTA input connections for PWM0 00_0000b - Reserved 00_0001b - ARM_TXEV input is selected 00_0010b - AOI0_OUT0 input is selected 00_0011b - AOI0_OUT1 input is selected 00_0100b - AOI0_OUT2 input is selected 00_0101b - AOI0_OUT3 input is selected 00_0110b - CMP0_OUT input is selected 00_0111b - CMP1_OUT input is selected 00_1000b - CMP2_OUT input is selected 00_1001b - CTimer0_MAT2 input is selected 00_1010b - CTimer0_MAT3 input is selected 00_1011b - CTimer1_MAT2 input is selected 00_1100b - CTimer1_MAT3 input is selected 00_1101b - CTimer2_MAT2 input is selected 00_1110b - CTimer2_MAT3 input is selected 00_1111b - QDC0_CMP_FLAG0 input is selected 01_0000b - QDC0_CMP_FLAG1 input is selected 01_0001b - QDC0_CMP_FLAG2 input is selected 01_0010b - QDC0_CMP_FLAG3 input is selected 01_0011b - QDC0_POS_MATCH0 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	01_0100b - TRIG_IN0 input is selected
	01_0101b - TRIG_IN1 input is selected
	01_0110b - TRIG_IN2 input is selected
	01_0111b - TRIG_IN3 input is selected
	01_1000b - TRIG_IN4 input is selected
	01_1001b - TRIG_IN5 input is selected
	01_1010b - TRIG_IN6 input is selected
	01_1011b - TRIG_IN7 input is selected
	01_1100b - TRIG_IN8 input is selected
	01_1101b - TRIG_IN9 input is selected
	01_1110b - TRIG_IN10 input is selected
	01_1111b - TRIG_IN11 input is selected
	10_0000b - GPIO0 Pin Event Trig 0 input is selected
	10_0001b - GPIO1 Pin Event Trig 0 input is selected
	10_0010b - GPIO2 Pin Event Trig 0 input is selected
	10_0011b - GPIO3 Pin Event Trig 0 input is selected
	10_0100b - GPIO4 Pin Event Trig 0 input is selected
	10_0101b - AOI1_OUT0 input is selected
	10_0110b - AOI1_OUT1 input is selected
	10_0111b - AOI1_OUT2 input is selected
	10_1000b - AOI1_OUT3 input is selected
	10_1001b - Reserved
	10_1010b - Reserved
	10_1011b - Reserved
	10_1100b - Reserved
	10_1101b - CTimer3_MAT2 input is selected
	10_1110b - CTimer3_MAT3 input is selected
	10_1111b - CTimer4_MAT2 input is selected
	11_0000b - CTimer4_MAT3 input is selected
	11_0001b - QDC1_CMP_FLAG0 input is selected
	11_0010b - QDC1_CMP_FLAG1 input is selected
	11_0011b - QDC1_CMP_FLAG2 input is selected
	11_0100b - QDC1_CMP_FLAG3 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	11_0101b - QDC1_POS_MATCH0 input is selected 11_0110b - PWM1_SM0_MUX_TRIG0 input is selected 11_0111b - PWM1_SM0_MUX_TRIG1 input is selected 11_1000b - PWM1_SM1_MUX_TRIG0 input is selected 11_1001b - PWM1_SM1_MUX_TRIG1 input is selected 11_1010b - PWM1_SM2_MUX_TRIG0 input is selected 11_1011b - PWM1_SM2_MUX_TRIG1 input is selected 11_1100b - PWM1_SM3_MUX_TRIG0 input is selected 11_1101b - PWM1_SM3_MUX_TRIG1 input is selected All other values are reserved.

13.6.1.45 PWM0 input trigger connections (FlexPWM0_SM3_EXTSYNC)


Offset

Register	Offset
FlexPWM0_SM3_EXTSY NC	3BCh

Function

This register selects the PWM0 trigger inputs.

Diagram

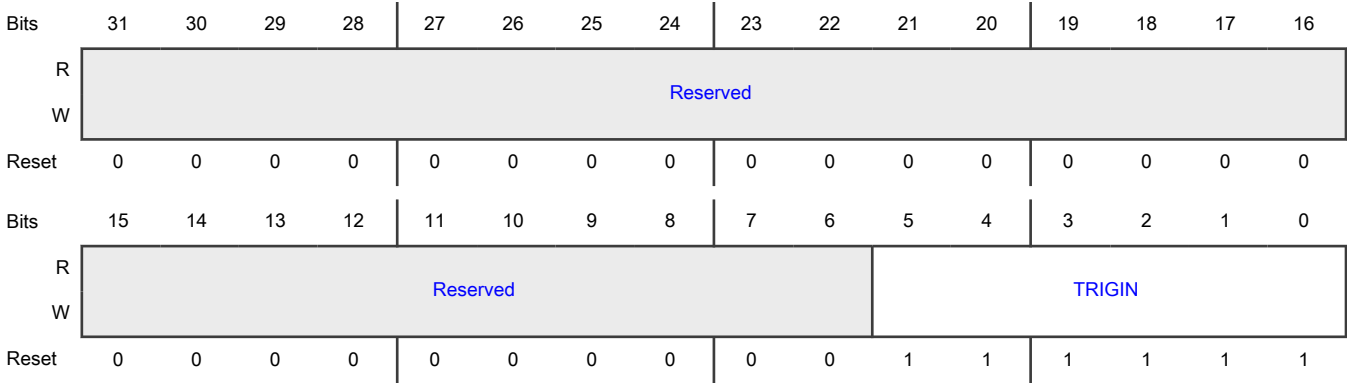

Fields

Field	Function
31-6 —	Reserved
5-0 TRIGIN	EXTSYNC input connections for PWM0 00_0000b - Reserved 00_0001b - ARM_TXEV input is selected 00_0010b - AOI0_OUT0 input is selected 00_0011b - AOI0_OUT1 input is selected 00_0100b - AOI0_OUT2 input is selected 00_0101b - AOI0_OUT3 input is selected 00_0110b - CMP0_OUT input is selected 00_0111b - CMP1_OUT input is selected 00_1000b - CMP2_OUT input is selected 00_1001b - CTimer0_MAT2 input is selected 00_1010b - CTimer0_MAT3 input is selected 00_1011b - CTimer1_MAT2 input is selected 00_1100b - CTimer1_MAT3 input is selected 00_1101b - CTimer2_MAT2 input is selected 00_1110b - CTimer2_MAT3 input is selected 00_1111b - QDC0_CMP_FLAG0 input is selected 01_0000b - QDC0_CMP_FLAG1 input is selected 01_0001b - QDC0_CMP_FLAG2 input is selected 01_0010b - QDC0_CMP_FLAG3 input is selected 01_0011b - QDC0_POS_MATCH0 input is selected 01_0100b - TRIG_IN0 input is selected 01_0101b - TRIG_IN1 input is selected 01_0110b - TRIG_IN2 input is selected 01_0111b - TRIG_IN3 input is selected 01_1000b - TRIG_IN4 input is selected 01_1001b - TRIG_IN5 input is selected 01_1010b - TRIG_IN6 input is selected 01_1011b - TRIG_IN7 input is selected 01_1100b - TRIG_IN8 input is selected 01_1101b - TRIG_IN9 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	01_1110b - TRIG_IN10 input is selected 01_1111b - TRIG_IN11 input is selected 10_0000b - GPIO0 Pin Event Trig 0 input is selected 10_0001b - GPIO1 Pin Event Trig 0 input is selected 10_0010b - GPIO2 Pin Event Trig 0 input is selected 10_0011b - GPIO3 Pin Event Trig 0 input is selected 10_0100b - GPIO4 Pin Event Trig 0 input is selected 10_0101b - AOI1_OUT0 input is selected 10_0110b - AOI1_OUT1 input is selected 10_0111b - AOI1_OUT2 input is selected 10_1000b - AOI1_OUT3 input is selected 10_1001b - Reserved 10_1010b - Reserved 10_1011b - Reserved 10_1100b - Reserved 10_1101b - CTimer3_MAT2 input is selected 10_1110b - CTimer3_MAT3 input is selected 10_1111b - CTimer4_MAT2 input is selected 11_0000b - CTimer4_MAT3 input is selected 11_0001b - QDC1_CMP_FLAG0 input is selected 11_0010b - QDC1_CMP_FLAG1 input is selected 11_0011b - QDC1_CMP_FLAG2 input is selected 11_0100b - QDC1_CMP_FLAG3 input is selected 11_0101b - QDC1_POS_MATCH0 input is selected 11_0110b - PWM1_SM0_MUX_TRIG0 input is selected 11_0111b - PWM1_SM0_MUX_TRIG1 input is selected 11_1000b - PWM1_SM1_MUX_TRIG0 input is selected 11_1001b - PWM1_SM1_MUX_TRIG1 input is selected 11_1010b - PWM1_SM2_MUX_TRIG0 input is selected 11_1011b - PWM1_SM2_MUX_TRIG1 input is selected 11_1100b - PWM1_SM3_MUX_TRIG0 input is selected 11_1101b - PWM1_SM3_MUX_TRIG1 input is selected All other values are reserved.

13.6.1.46 PWM0 Fault Input Trigger Connections (FlexPWM0_FAULT0 - FlexPWM0_FAULT3)


Offset

Register	Offset
FlexPWM0_FAULT0	3C0h
FlexPWM0_FAULT1	3C4h
FlexPWM0_FAULT2	3C8h
FlexPWM0_FAULT3	3CCh

Function

This register selects the PWM0 FAULT inputs.

Diagram

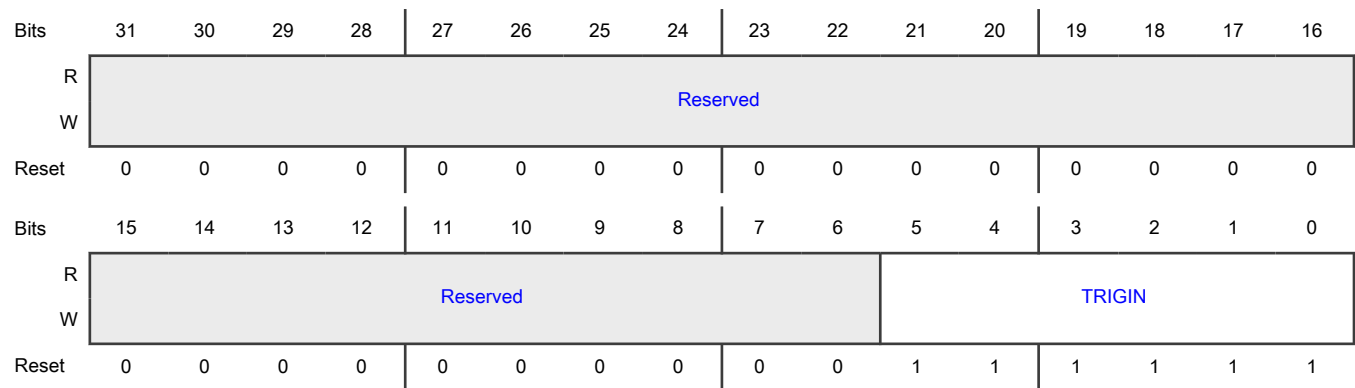

Fields

Field	Function
31-6 —	Reserved
5-0 TRIGIN	FAULT input connections for PWM0 00_0000b - Reserved 00_0001b - ARM_TXEV input is selected 00_0010b - AOI0_OUT0 input is selected 00_0011b - AOI0_OUT1 input is selected 00_0100b - AOI0_OUT2 input is selected 00_0101b - AOI0_OUT3 input is selected 00_0110b - CMP0_OUT input is selected 00_0111b - CMP1_OUT input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	00_1000b - CMP2_OUT input is selected
	00_1001b - CTimer0_MAT2 input is selected
	00_1010b - CTimer0_MAT3 input is selected
	00_1011b - CTimer1_MAT2 input is selected
	00_1100b - CTimer1_MAT3 input is selected
	00_1101b - CTimer2_MAT2 input is selected
	00_1110b - CTimer2_MAT3 input is selected
	00_1111b - QDC0_CMP_FLAG0 input is selected
	01_0000b - QDC0_CMP_FLAG1 input is selected
	01_0001b - QDC0_CMP_FLAG2 input is selected
	01_0010b - QDC0_CMP_FLAG3 input is selected
	01_0011b - QDC0_POS_MATCH0 input is selected
	01_0100b - TRIG_IN0 input is selected
	01_0101b - TRIG_IN1 input is selected
	01_0110b - TRIG_IN2 input is selected
	01_0111b - TRIG_IN3 input is selected
	01_1000b - TRIG_IN4 input is selected
	01_1001b - TRIG_IN5 input is selected
	01_1010b - TRIG_IN6 input is selected
	01_1011b - TRIG_IN7 input is selected
	01_1100b - TRIG_IN8 input is selected
	01_1101b - TRIG_IN9 input is selected
	01_1110b - TRIG_IN10 input is selected
	01_1111b - TRIG_IN11 input is selected
	10_0000b - GPIO0 Pin Event Trig 0 input is selected
	10_0001b - GPIO1 Pin Event Trig 0 input is selected
	10_0010b - GPIO2 Pin Event Trig 0 input is selected
	10_0011b - GPIO3 Pin Event Trig 0 input is selected
	10_0100b - GPIO4 Pin Event Trig 0 input is selected
	10_0101b - AOI1_OUT0 input is selected
	10_0110b - AOI1_OUT1 input is selected
	10_0111b - AOI1_OUT2 input is selected
	10_1000b - AOI1_OUT3 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	10_1001b - Reserved
	10_1010b - Reserved
	10_1011b - Reserved
	10_1100b - Reserved
	10_1101b - CTimer3_MAT2 input is selected
	10_1110b - CTimer3_MAT3 input is selected
	10_1111b - CTimer4_MAT2 input is selected
	11_0000b - CTimer4_MAT3 input is selected
	11_0001b - QDC1_CMP_FLAG0 input is selected
	11_0010b - QDC1_CMP_FLAG1 input is selected
	11_0011b - QDC1_CMP_FLAG2 input is selected
	11_0100b - QDC1_CMP_FLAG3 input is selected
	11_0101b - QDC1_POS_MATCH0 input is selected
	11_0110b - PWM1_SM0_MUX_TRIG0 input is selected
	11_0111b - PWM1_SM0_MUX_TRIG1 input is selected
	11_1000b - PWM1_SM1_MUX_TRIG0 input is selected
	11_1001b - PWM1_SM1_MUX_TRIG1 input is selected
	11_1010b - PWM1_SM2_MUX_TRIG0 input is selected
	11_1011b - PWM1_SM2_MUX_TRIG1 input is selected
	11_1100b - PWM1_SM3_MUX_TRIG0 input is selected
	11_1101b - PWM1_SM3_MUX_TRIG1 input is selected
	All other values are reserved.

13.6.1.47 PWM0 input trigger connections (FlexPWM0_FORCE)


Offset

Register	Offset
FlexPWM0_FORCE	3D0h

Function

This register selects the PWM0 trigger inputs.

Diagram

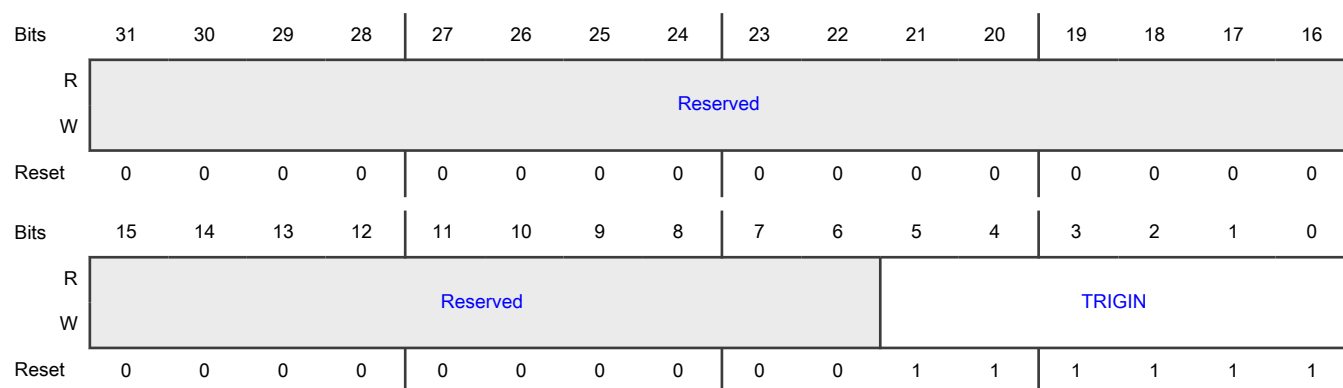

Fields

Field	Function
31-6 —	Reserved
5-0 TRIGIN	Trigger input connections for PWM0 00_0000b - Reserved 00_0001b - ARM_TXEV input is selected 00_0010b - AOI0_OUT0 input is selected 00_0011b - AOI0_OUT1 input is selected 00_0100b - AOI0_OUT2 input is selected 00_0101b - AOI0_OUT3 input is selected 00_0110b - CMP0_OUT input is selected 00_0111b - CMP1_OUT input is selected 00_1000b - CMP2_OUT input is selected 00_1001b - CTimer0_MAT2 input is selected 00_1010b - CTimer0_MAT3 input is selected 00_1011b - CTimer1_MAT2 input is selected 00_1100b - CTimer1_MAT3 input is selected 00_1101b - CTimer2_MAT2 input is selected 00_1110b - CTimer2_MAT3 input is selected 00_1111b - QDC0_CMP_FLAG0 input is selected 01_0000b - QDC0_CMP_FLAG1 input is selected 01_0001b - QDC0_CMP_FLAG2 input is selected 01_0010b - QDC0_CMP_FLAG3 input is selected 01_0011b - QDC0_POS_MATCH0 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	01_0100b - TRIG_IN0 input is selected
	01_0101b - TRIG_IN1 input is selected
	01_0110b - TRIG_IN2 input is selected
	01_0111b - TRIG_IN3 input is selected
	01_1000b - TRIG_IN4 input is selected
	01_1001b - TRIG_IN5 input is selected
	01_1010b - TRIG_IN6 input is selected
	01_1011b - TRIG_IN7 input is selected
	01_1100b - TRIG_IN8 input is selected
	01_1101b - TRIG_IN9 input is selected
	01_1110b - TRIG_IN10 input is selected
	01_1111b - TRIG_IN11 input is selected
	10_0000b - GPIO0 Pin Event Trig 0 input is selected
	10_0001b - GPIO1 Pin Event Trig 0 input is selected
	10_0010b - GPIO2 Pin Event Trig 0 input is selected
	10_0011b - GPIO3 Pin Event Trig 0 input is selected
	10_0100b - GPIO4 Pin Event Trig 0 input is selected
	10_0101b - AOI1_OUT0 input is selected
	10_0110b - AOI1_OUT1 input is selected
	10_0111b - AOI1_OUT2 input is selected
	10_1000b - AOI1_OUT3 input is selected
	10_1001b - Reserved
	10_1010b - Reserved
	10_1011b - Reserved
	10_1100b - Reserved
	10_1101b - CTimer3_MAT2 input is selected
	10_1110b - CTimer3_MAT3 input is selected
	10_1111b - CTimer4_MAT2 input is selected
	11_0000b - CTimer4_MAT3 input is selected
	11_0001b - QDC1_CMP_FLAG0 input is selected
	11_0010b - QDC1_CMP_FLAG1 input is selected
	11_0011b - QDC1_CMP_FLAG2 input is selected
	11_0100b - QDC1_CMP_FLAG3 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	11_0101b - QDC1_POS_MATCH0 input is selected 11_0110b - PWM1_SM0_MUX_TRIG0 input is selected 11_0111b - PWM1_SM0_MUX_TRIG1 input is selected 11_1000b - PWM1_SM1_MUX_TRIG0 input is selected 11_1001b - PWM1_SM1_MUX_TRIG1 input is selected 11_1010b - PWM1_SM2_MUX_TRIG0 input is selected 11_1011b - PWM1_SM2_MUX_TRIG1 input is selected 11_1100b - PWM1_SM3_MUX_TRIG0 input is selected 11_1101b - PWM1_SM3_MUX_TRIG1 input is selected All other values are reserved.

13.6.1.48 PWM1 input trigger connections (FlexPWM1_SM0_EXT_A0)

Offset

Register	Offset
FlexPWM1_SM0_EXT_A0	3E0h

Function

This register selects the PWM1 trigger inputs.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	Reserved															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserved								TRIGIN							
W																
Reset	0	0	0	0	0	0	0	0	0	0	1	1	1	1	1	1

Fields

Field	Function
31-6	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
—	
5-0 TRIGIN	EXTA input connections for PWM0 00_0000b - Reserved 00_0001b - ARM_TXEV input is selected 00_0010b - AOI0_OUT0 input is selected 00_0011b - AOI0_OUT1 input is selected 00_0100b - AOI0_OUT2 input is selected 00_0101b - AOI0_OUT3 input is selected 00_0110b - CMP0_OUT input is selected 00_0111b - CMP1_OUT input is selected 00_1000b - CMP2_OUT input is selected 00_1001b - CTimer0_MAT2 input is selected 00_1010b - CTimer0_MAT3 input is selected 00_1011b - CTimer1_MAT2 input is selected 00_1100b - CTimer1_MAT3 input is selected 00_1101b - CTimer2_MAT2 input is selected 00_1110b - CTimer2_MAT3 input is selected 00_1111b - QDC0_CMP_FLAG0 input is selected 01_0000b - QDC0_CMP_FLAG1 input is selected 01_0001b - QDC0_CMP_FLAG2 input is selected 01_0010b - QDC0_CMP_FLAG3 input is selected 01_0011b - QDC0_POS_MATCH0 input is selected 01_0100b - TRIG_IN0 input is selected 01_0101b - TRIG_IN1 input is selected 01_0110b - TRIG_IN2 input is selected 01_0111b - TRIG_IN3 input is selected 01_1000b - TRIG_IN4 input is selected 01_1001b - TRIG_IN5 input is selected 01_1010b - TRIG_IN6 input is selected 01_1011b - TRIG_IN7 input is selected 01_1100b - TRIG_IN8 input is selected 01_1101b - TRIG_IN9 input is selected 01_1110b - TRIG_IN10 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	01_1111b - TRIG_IN11 input is selected 10_0000b - GPIO0 Pin Event Trig 0 input is selected 10_0001b - GPIO1 Pin Event Trig 0 input is selected 10_0010b - GPIO2 Pin Event Trig 0 input is selected 10_0011b - GPIO3 Pin Event Trig 0 input is selected 10_0100b - GPIO4 Pin Event Trig 0 input is selected 10_0101b - AOI1_OUT0 input is selected 10_0110b - AOI1_OUT1 input is selected 10_0111b - AOI1_OUT2 input is selected 10_1000b - AOI1_OUT3 input is selected 10_1001b - Reserved 10_1010b - Reserved 10_1011b - Reserved 10_1100b - Reserved 10_1101b - CTimer3_MAT2 input is selected 10_1110b - CTimer3_MAT3 input is selected 10_1111b - CTimer4_MAT2 input is selected 11_0000b - CTimer4_MAT3 input is selected 11_0001b - QDC1_CMP_FLAG0 input is selected 11_0010b - QDC1_CMP_FLAG1 input is selected 11_0011b - QDC1_CMP_FLAG2 input is selected 11_0100b - QDC1_CMP_FLAG3 input is selected 11_0101b - QDC1_POS_MATCH0 input is selected 11_0110b - PWM0_SM0_MUX_TRIG0 input is selected 11_0111b - PWM0_SM0_MUX_TRIG1 input is selected 11_1000b - PWM0_SM1_MUX_TRIG0 input is selected 11_1001b - PWM0_SM1_MUX_TRIG1 input is selected 11_1010b - PWM0_SM2_MUX_TRIG0 input is selected 11_1011b - PWM0_SM2_MUX_TRIG1 input is selected 11_1100b - PWM0_SM3_MUX_TRIG0 input is selected 11_1101b - PWM0_SM3_MUX_TRIG1 input is selected All other values are reserved.

13.6.1.49 PWM1 input trigger connections (FlexPWM1_SM0_EXTSYNC)


Offset

Register	Offset
FlexPWM1_SM0_EXTSY NC	3E4h

Function

This register selects the PWM1 trigger inputs.

Diagram

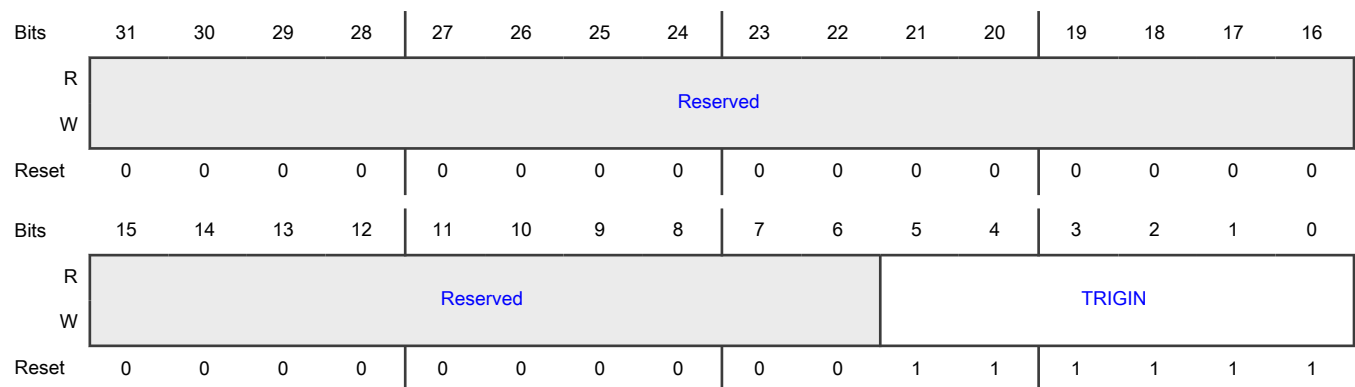

Fields

Field	Function
31-6 —	Reserved
5-0 TRIGIN	EXTSYNC input connections for PWM0 00_0000b - Reserved 00_0001b - ARM_TXEV input is selected 00_0010b - AOI0_OUT0 input is selected 00_0011b - AOI0_OUT1 input is selected 00_0100b - AOI0_OUT2 input is selected 00_0101b - AOI0_OUT3 input is selected 00_0110b - CMP0_OUT input is selected 00_0111b - CMP1_OUT input is selected 00_1000b - CMP2_OUT input is selected 00_1001b - CTimer0_MAT2 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	00_1010b - CTimer0_MAT3 input is selected
	00_1011b - CTimer1_MAT2 input is selected
	00_1100b - CTimer1_MAT3 input is selected
	00_1101b - CTimer2_MAT2 input is selected
	00_1110b - CTimer2_MAT3 input is selected
	00_1111b - QDC0_CMP_FLAG0 input is selected
	01_0000b - QDC0_CMP_FLAG1 input is selected
	01_0001b - QDC0_CMP_FLAG2 input is selected
	01_0010b - QDC0_CMP_FLAG3 input is selected
	01_0011b - QDC0_POS_MATCH0 input is selected
	01_0100b - TRIG_IN0 input is selected
	01_0101b - TRIG_IN1 input is selected
	01_0110b - TRIG_IN2 input is selected
	01_0111b - TRIG_IN3 input is selected
	01_1000b - TRIG_IN4 input is selected
	01_1001b - TRIG_IN5 input is selected
	01_1010b - TRIG_IN6 input is selected
	01_1011b - TRIG_IN7 input is selected
	01_1100b - TRIG_IN8 input is selected
	01_1101b - TRIG_IN9 input is selected
	01_1110b - TRIG_IN10 input is selected
	01_1111b - TRIG_IN11 input is selected
	10_0000b - GPIO0 Pin Event Trig 0 input is selected
	10_0001b - GPIO1 Pin Event Trig 0 input is selected
	10_0010b - GPIO2 Pin Event Trig 0 input is selected
	10_0011b - GPIO3 Pin Event Trig 0 input is selected
	10_0100b - GPIO4 Pin Event Trig 0 input is selected
	10_0101b - AOI1_OUT0 input is selected
	10_0110b - AOI1_OUT1 input is selected
	10_0111b - AOI1_OUT2 input is selected
	10_1000b - AOI1_OUT3 input is selected
	10_1001b - Reserved
	10_1010b - Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
	10_1011b - Reserved 10_1100b - Reserved 10_1101b - CTimer3_MAT2 input is selected 10_1110b - CTimer3_MAT3 input is selected 10_1111b - CTimer4_MAT2 input is selected 11_0000b - CTimer4_MAT3 input is selected 11_0001b - QDC1_CMP_FLAG0 input is selected 11_0010b - QDC1_CMP_FLAG1 input is selected 11_0011b - QDC1_CMP_FLAG2 input is selected 11_0100b - QDC1_CMP_FLAG3 input is selected 11_0101b - QDC1_POS_MATCH0 input is selected 11_0110b - PWM0_SM0_MUX_TRIG0 input is selected 11_0111b - PWM0_SM0_MUX_TRIG1 input is selected 11_1000b - PWM0_SM1_MUX_TRIG0 input is selected 11_1001b - PWM0_SM1_MUX_TRIG1 input is selected 11_1010b - PWM0_SM2_MUX_TRIG0 input is selected 11_1011b - PWM0_SM2_MUX_TRIG1 input is selected 11_1100b - PWM0_SM3_MUX_TRIG0 input is selected 11_1101b - PWM0_SM3_MUX_TRIG1 input is selected All other values are reserved.

13.6.1.50 PWM1 input trigger connections (FlexPWM1_SM1_EXT_A)


Offset

Register	Offset
FlexPWM1_SM1_EXT_A	3E8h

Function

This register selects the PWM1 trigger inputs.

Diagram

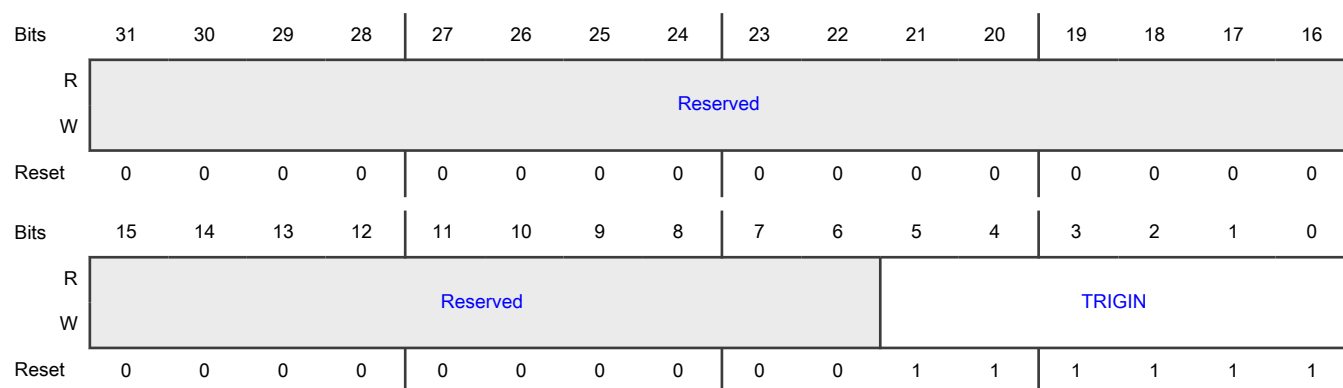

Fields

Field	Function
31-6 —	Reserved
5-0 TRIGIN	EXTA input connections for PWM0 00_0000b - Reserved 00_0001b - ARM_TXEV input is selected 00_0010b - AOI0_OUT0 input is selected 00_0011b - AOI0_OUT1 input is selected 00_0100b - AOI0_OUT2 input is selected 00_0101b - AOI0_OUT3 input is selected 00_0110b - CMP0_OUT input is selected 00_0111b - CMP1_OUT input is selected 00_1000b - CMP2_OUT input is selected 00_1001b - CTimer0_MAT2 input is selected 00_1010b - CTimer0_MAT3 input is selected 00_1011b - CTimer1_MAT2 input is selected 00_1100b - CTimer1_MAT3 input is selected 00_1101b - CTimer2_MAT2 input is selected 00_1110b - CTimer2_MAT3 input is selected 00_1111b - QDC0_CMP_FLAG0 input is selected 01_0000b - QDC0_CMP_FLAG1 input is selected 01_0001b - QDC0_CMP_FLAG2 input is selected 01_0010b - QDC0_CMP_FLAG3 input is selected 01_0011b - QDC0_POS_MATCH0 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	01_0100b - TRIG_IN0 input is selected
	01_0101b - TRIG_IN1 input is selected
	01_0110b - TRIG_IN2 input is selected
	01_0111b - TRIG_IN3 input is selected
	01_1000b - TRIG_IN4 input is selected
	01_1001b - TRIG_IN5 input is selected
	01_1010b - TRIG_IN6 input is selected
	01_1011b - TRIG_IN7 input is selected
	01_1100b - TRIG_IN8 input is selected
	01_1101b - TRIG_IN9 input is selected
	01_1110b - TRIG_IN10 input is selected
	01_1111b - TRIG_IN11 input is selected
	10_0000b - GPIO0 Pin Event Trig 0 input is selected
	10_0001b - GPIO1 Pin Event Trig 0 input is selected
	10_0010b - GPIO2 Pin Event Trig 0 input is selected
	10_0011b - GPIO3 Pin Event Trig 0 input is selected
	10_0100b - GPIO4 Pin Event Trig 0 input is selected
	10_0101b - AOI1_OUT0 input is selected
	10_0110b - AOI1_OUT1 input is selected
	10_0111b - AOI1_OUT2 input is selected
	10_1000b - AOI1_OUT3 input is selected
	10_1001b - Reserved
	10_1010b - Reserved
	10_1011b - Reserved
	10_1100b - Reserved
	10_1101b - CTimer3_MAT2 input is selected
	10_1110b - CTimer3_MAT3 input is selected
	10_1111b - CTimer4_MAT2 input is selected
	11_0000b - CTimer4_MAT3 input is selected
	11_0001b - QDC1_CMP_FLAG0 input is selected
	11_0010b - QDC1_CMP_FLAG1 input is selected
	11_0011b - QDC1_CMP_FLAG2 input is selected
	11_0100b - QDC1_CMP_FLAG3 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	11_0101b - QDC1_POS_MATCH0 input is selected 11_0110b - PWM0_SM0_MUX_TRIG0 input is selected 11_0111b - PWM0_SM0_MUX_TRIG1 input is selected 11_1000b - PWM0_SM1_MUX_TRIG0 input is selected 11_1001b - PWM0_SM1_MUX_TRIG1 input is selected 11_1010b - PWM0_SM2_MUX_TRIG0 input is selected 11_1011b - PWM0_SM2_MUX_TRIG1 input is selected 11_1100b - PWM0_SM3_MUX_TRIG0 input is selected 11_1101b - PWM0_SM3_MUX_TRIG1 input is selected All other values are reserved.

13.6.1.51 PWM1 input trigger connections (FlexPWM1_SM1_EXTSYNC)


Offset

Register	Offset
FlexPWM1_SM1_EXTSY NC	3ECh

Function

This register selects the PWM1 trigger inputs.

Diagram

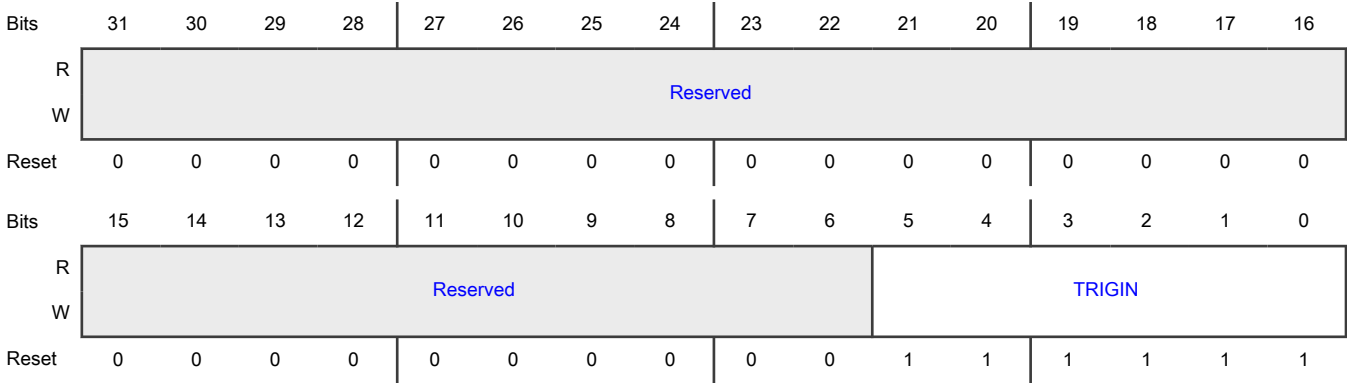

Fields

Field	Function
31-6 —	Reserved
5-0 TRIGIN	EXTSYNC input connections for PWM0 00_0000b - Reserved 00_0001b - ARM_TXEV input is selected 00_0010b - AOIO_OUT0 input is selected 00_0011b - AOIO_OUT1 input is selected 00_0100b - AOIO_OUT2 input is selected 00_0101b - AOIO_OUT3 input is selected 00_0110b - CMP0_OUT input is selected 00_0111b - CMP1_OUT input is selected 00_1000b - CMP2_OUT input is selected 00_1001b - CTimer0_MAT2 input is selected 00_1010b - CTimer0_MAT3 input is selected 00_1011b - CTimer1_MAT2 input is selected 00_1100b - CTimer1_MAT3 input is selected 00_1101b - CTimer2_MAT2 input is selected 00_1110b - CTimer2_MAT3 input is selected 00_1111b - QDC0_CMP_FLAG0 input is selected 01_0000b - QDC0_CMP_FLAG1 input is selected 01_0001b - QDC0_CMP_FLAG2 input is selected 01_0010b - QDC0_CMP_FLAG3 input is selected 01_0011b - QDC0_POS_MATCH0 input is selected 01_0100b - TRIG_IN0 input is selected 01_0101b - TRIG_IN1 input is selected 01_0110b - TRIG_IN2 input is selected 01_0111b - TRIG_IN3 input is selected 01_1000b - TRIG_IN4 input is selected 01_1001b - TRIG_IN5 input is selected 01_1010b - TRIG_IN6 input is selected 01_1011b - TRIG_IN7 input is selected 01_1100b - TRIG_IN8 input is selected 01_1101b - TRIG_IN9 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	01_1110b - TRIG_IN10 input is selected 01_1111b - TRIG_IN11 input is selected 10_0000b - GPIO0 Pin Event Trig 0 input is selected 10_0001b - GPIO1 Pin Event Trig 0 input is selected 10_0010b - GPIO2 Pin Event Trig 0 input is selected 10_0011b - GPIO3 Pin Event Trig 0 input is selected 10_0100b - GPIO4 Pin Event Trig 0 input is selected 10_0101b - AOI1_OUT0 input is selected 10_0110b - AOI1_OUT1 input is selected 10_0111b - AOI1_OUT2 input is selected 10_1000b - AOI1_OUT3 input is selected 10_1001b - Reserved 10_1010b - Reserved 10_1011b - Reserved 10_1100b - Reserved 10_1101b - CTimer3_MAT2 input is selected 10_1110b - CTimer3_MAT3 input is selected 10_1111b - CTimer4_MAT2 input is selected 11_0000b - CTimer4_MAT3 input is selected 11_0001b - QDC1_CMP_FLAG0 input is selected 11_0010b - QDC1_CMP_FLAG1 input is selected 11_0011b - QDC1_CMP_FLAG2 input is selected 11_0100b - QDC1_CMP_FLAG3 input is selected 11_0101b - QDC1_POS_MATCH0 input is selected 11_0110b - PWM0_SM0_MUX_TRIG0 input is selected 11_0111b - PWM0_SM0_MUX_TRIG1 input is selected 11_1000b - PWM0_SM1_MUX_TRIG0 input is selected 11_1001b - PWM0_SM1_MUX_TRIG1 input is selected 11_1010b - PWM0_SM2_MUX_TRIG0 input is selected 11_1011b - PWM0_SM2_MUX_TRIG1 input is selected 11_1100b - PWM0_SM3_MUX_TRIG0 input is selected 11_1101b - PWM0_SM3_MUX_TRIG1 input is selected All other values are reserved.

13.6.1.52 PWM1 input trigger connections (FlexPWM1_SM2_EXT_A)


Offset

Register	Offset
FlexPWM1_SM2_EXT_A	3F0h

Function

This register selects the PWM1 trigger inputs.

Diagram

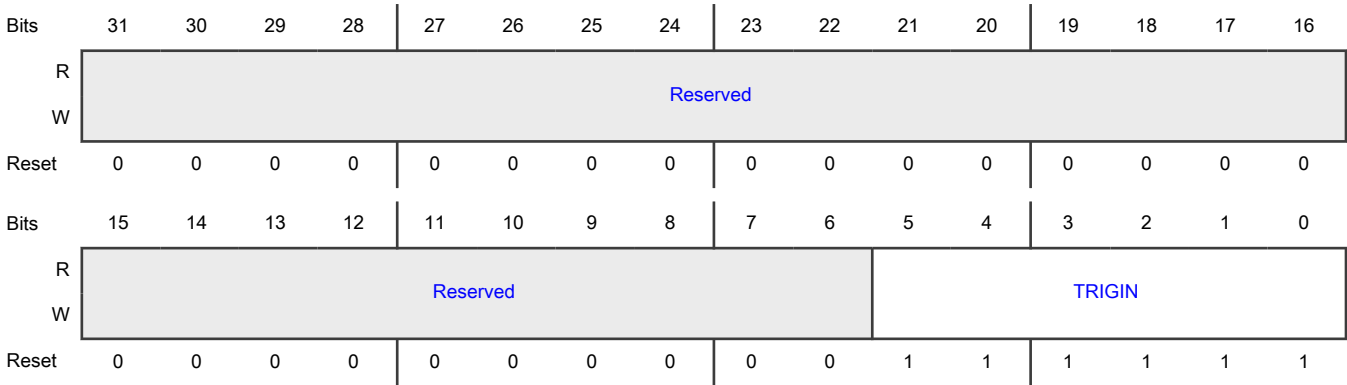

Fields

Field	Function
31-6 —	Reserved
5-0 TRIGIN	EXTA input connections for PWM0 00_0000b - Reserved 00_0001b - ARM_TXEV input is selected 00_0010b - AOI0_OUT0 input is selected 00_0011b - AOI0_OUT1 input is selected 00_0100b - AOI0_OUT2 input is selected 00_0101b - AOI0_OUT3 input is selected 00_0110b - CMP0_OUT input is selected 00_0111b - CMP1_OUT input is selected 00_1000b - CMP2_OUT input is selected 00_1001b - CTimer0_MAT2 input is selected 00_1010b - CTimer0_MAT3 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	00_1011b - CTimer1_MAT2 input is selected
	00_1100b - CTimer1_MAT3 input is selected
	00_1101b - CTimer2_MAT2 input is selected
	00_1110b - CTimer2_MAT3 input is selected
	00_1111b - QDC0_CMP_FLAG0 input is selected
	01_0000b - QDC0_CMP_FLAG1 input is selected
	01_0001b - QDC0_CMP_FLAG2 input is selected
	01_0010b - QDC0_CMP_FLAG3 input is selected
	01_0011b - QDC0_POS_MATCH0 input is selected
	01_0100b - TRIG_IN0 input is selected
	01_0101b - TRIG_IN1 input is selected
	01_0110b - TRIG_IN2 input is selected
	01_0111b - TRIG_IN3 input is selected
	01_1000b - TRIG_IN4 input is selected
	01_1001b - TRIG_IN5 input is selected
	01_1010b - TRIG_IN6 input is selected
	01_1011b - TRIG_IN7 input is selected
	01_1100b - TRIG_IN8 input is selected
	01_1101b - TRIG_IN9 input is selected
	01_1110b - TRIG_IN10 input is selected
	01_1111b - TRIG_IN11 input is selected
	10_0000b - GPIO0 Pin Event Trig 0 input is selected
	10_0001b - GPIO1 Pin Event Trig 0 input is selected
	10_0010b - GPIO2 Pin Event Trig 0 input is selected
	10_0011b - GPIO3 Pin Event Trig 0 input is selected
	10_0100b - GPIO4 Pin Event Trig 0 input is selected
	10_0101b - AOI1_OUT0 input is selected
	10_0110b - AOI1_OUT1 input is selected
	10_0111b - AOI1_OUT2 input is selected
	10_1000b - AOI1_OUT3 input is selected
	10_1001b - Reserved
	10_1010b - Reserved
	10_1011b - Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
	10_1100b - Reserved 10_1101b - CTimer3_MAT2 input is selected 10_1110b - CTimer3_MAT3 input is selected 10_1111b - CTimer4_MAT2 input is selected 11_0000b - CTimer4_MAT3 input is selected 11_0001b - QDC1_CMP_FLAG0 input is selected 11_0010b - QDC1_CMP_FLAG1 input is selected 11_0011b - QDC1_CMP_FLAG2 input is selected 11_0100b - QDC1_CMP_FLAG3 input is selected 11_0101b - QDC1_POS_MATCH0 input is selected 11_0110b - PWM0_SM0_MUX_TRIG0 input is selected 11_0111b - PWM0_SM0_MUX_TRIG1 input is selected 11_1000b - PWM0_SM1_MUX_TRIG0 input is selected 11_1001b - PWM0_SM1_MUX_TRIG1 input is selected 11_1010b - PWM0_SM2_MUX_TRIG0 input is selected 11_1011b - PWM0_SM2_MUX_TRIG1 input is selected 11_1100b - PWM0_SM3_MUX_TRIG0 input is selected 11_1101b - PWM0_SM3_MUX_TRIG1 input is selected All other values are reserved.


13.6.1.53 PWM1 input trigger connections (FlexPWM1_SM2_EXTSYNC)

Offset

Register	Offset
FlexPWM1_SM2_EXTSY NC	3F4h

Function

This register selects the PWM1 trigger inputs.

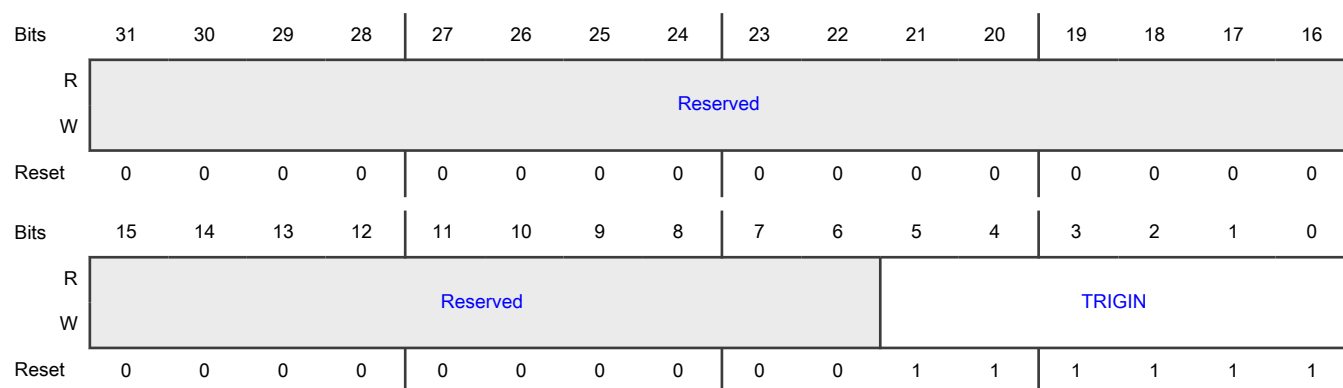Diagram**Fields**

Field	Function
31-6 —	Reserved
5-0 TRIGIN	EXTSYNC input connections for PWM0 00_0000b - Reserved 00_0001b - ARM_TXEV input is selected 00_0010b - AOI0_OUT0 input is selected 00_0011b - AOI0_OUT1 input is selected 00_0100b - AOI0_OUT2 input is selected 00_0101b - AOI0_OUT3 input is selected 00_0110b - CMP0_OUT input is selected 00_0111b - CMP1_OUT input is selected 00_1000b - CMP2_OUT input is selected 00_1001b - CTimer0_MAT2 input is selected 00_1010b - CTimer0_MAT3 input is selected 00_1011b - CTimer1_MAT2 input is selected 00_1100b - CTimer1_MAT3 input is selected 00_1101b - CTimer2_MAT2 input is selected 00_1110b - CTimer2_MAT3 input is selected 00_1111b - QDC0_CMP_FLAG0 input is selected 01_0000b - QDC0_CMP_FLAG1 input is selected 01_0001b - QDC0_CMP_FLAG2 input is selected 01_0010b - QDC0_CMP_FLAG3 input is selected 01_0011b - QDC0_POS_MATCH0 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	01_0100b - TRIG_IN0 input is selected
	01_0101b - TRIG_IN1 input is selected
	01_0110b - TRIG_IN2 input is selected
	01_0111b - TRIG_IN3 input is selected
	01_1000b - TRIG_IN4 input is selected
	01_1001b - TRIG_IN5 input is selected
	01_1010b - TRIG_IN6 input is selected
	01_1011b - TRIG_IN7 input is selected
	01_1100b - TRIG_IN8 input is selected
	01_1101b - TRIG_IN9 input is selected
	01_1110b - TRIG_IN10 input is selected
	01_1111b - TRIG_IN11 input is selected
	10_0000b - GPIO0 Pin Event Trig 0 input is selected
	10_0001b - GPIO1 Pin Event Trig 0 input is selected
	10_0010b - GPIO2 Pin Event Trig 0 input is selected
	10_0011b - GPIO3 Pin Event Trig 0 input is selected
	10_0100b - GPIO4 Pin Event Trig 0 input is selected
	10_0101b - AOI1_OUT0 input is selected
	10_0110b - AOI1_OUT1 input is selected
	10_0111b - AOI1_OUT2 input is selected
	10_1000b - AOI1_OUT3 input is selected
	10_1001b - Reserved
	10_1010b - Reserved
	10_1011b - Reserved
	10_1100b - Reserved
	10_1101b - CTimer3_MAT2 input is selected
	10_1110b - CTimer3_MAT3 input is selected
	10_1111b - CTimer4_MAT2 input is selected
	11_0000b - CTimer4_MAT3 input is selected
	11_0001b - QDC1_CMP_FLAG0 input is selected
	11_0010b - QDC1_CMP_FLAG1 input is selected
	11_0011b - QDC1_CMP_FLAG2 input is selected
	11_0100b - QDC1_CMP_FLAG3 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	11_0101b - QDC1_POS_MATCH0 input is selected 11_0110b - PWM0_SM0_MUX_TRIG0 input is selected 11_0111b - PWM0_SM0_MUX_TRIG1 input is selected 11_1000b - PWM0_SM1_MUX_TRIG0 input is selected 11_1001b - PWM0_SM1_MUX_TRIG1 input is selected 11_1010b - PWM0_SM2_MUX_TRIG0 input is selected 11_1011b - PWM0_SM2_MUX_TRIG1 input is selected 11_1100b - PWM0_SM3_MUX_TRIG0 input is selected 11_1101b - PWM0_SM3_MUX_TRIG1 input is selected All other values are reserved.

13.6.1.54 PWM1 input trigger connections (FlexPWM1_SM3_EXT_A0)

Offset

Register	Offset
FlexPWM1_SM3_EXT_A0	3F8h

Function

This register selects the PWM1 trigger inputs.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	Reserved															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserved												TRIGIN			
W																
Reset	0	0	0	0	0	0	0	0	0	0	1	1	1	1	1	1

Fields

Field	Function
31-6	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
—	
5-0 TRIGIN	EXTA input connections for PWM0 00_0000b - Reserved 00_0001b - ARM_TXEV input is selected 00_0010b - AOI0_OUT0 input is selected 00_0011b - AOI0_OUT1 input is selected 00_0100b - AOI0_OUT2 input is selected 00_0101b - AOI0_OUT3 input is selected 00_0110b - CMP0_OUT input is selected 00_0111b - CMP1_OUT input is selected 00_1000b - CMP2_OUT input is selected 00_1001b - CTimer0_MAT2 input is selected 00_1010b - CTimer0_MAT3 input is selected 00_1011b - CTimer1_MAT2 input is selected 00_1100b - CTimer1_MAT3 input is selected 00_1101b - CTimer2_MAT2 input is selected 00_1110b - CTimer2_MAT3 input is selected 00_1111b - QDC0_CMP_FLAG0 input is selected 01_0000b - QDC0_CMP_FLAG1 input is selected 01_0001b - QDC0_CMP_FLAG2 input is selected 01_0010b - QDC0_CMP_FLAG3 input is selected 01_0011b - QDC0_POS_MATCH0 input is selected 01_0100b - TRIG_IN0 input is selected 01_0101b - TRIG_IN1 input is selected 01_0110b - TRIG_IN2 input is selected 01_0111b - TRIG_IN3 input is selected 01_1000b - TRIG_IN4 input is selected 01_1001b - TRIG_IN5 input is selected 01_1010b - TRIG_IN6 input is selected 01_1011b - TRIG_IN7 input is selected 01_1100b - TRIG_IN8 input is selected 01_1101b - TRIG_IN9 input is selected 01_1110b - TRIG_IN10 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	01_1111b - TRIG_IN11 input is selected 10_0000b - GPIO0 Pin Event Trig 0 input is selected 10_0001b - GPIO1 Pin Event Trig 0 input is selected 10_0010b - GPIO2 Pin Event Trig 0 input is selected 10_0011b - GPIO3 Pin Event Trig 0 input is selected 10_0100b - GPIO4 Pin Event Trig 0 input is selected 10_0101b - AOI1_OUT0 input is selected 10_0110b - AOI1_OUT1 input is selected 10_0111b - AOI1_OUT2 input is selected 10_1000b - AOI1_OUT3 input is selected 10_1001b - Reserved 10_1010b - Reserved 10_1011b - Reserved 10_1100b - Reserved 10_1101b - CTimer3_MAT2 input is selected 10_1110b - CTimer3_MAT3 input is selected 10_1111b - CTimer4_MAT2 input is selected 11_0000b - CTimer4_MAT3 input is selected 11_0001b - QDC1_CMP_FLAG0 input is selected 11_0010b - QDC1_CMP_FLAG1 input is selected 11_0011b - QDC1_CMP_FLAG2 input is selected 11_0100b - QDC1_CMP_FLAG3 input is selected 11_0101b - QDC1_POS_MATCH0 input is selected 11_0110b - PWM0_SM0_MUX_TRIG0 input is selected 11_0111b - PWM0_SM0_MUX_TRIG1 input is selected 11_1000b - PWM0_SM1_MUX_TRIG0 input is selected 11_1001b - PWM0_SM1_MUX_TRIG1 input is selected 11_1010b - PWM0_SM2_MUX_TRIG0 input is selected 11_1011b - PWM0_SM2_MUX_TRIG1 input is selected 11_1100b - PWM0_SM3_MUX_TRIG0 input is selected 11_1101b - PWM0_SM3_MUX_TRIG1 input is selected All other values are reserved.

13.6.1.55 PWM1 input trigger connections (FlexPWM1_SM3_EXTSYNC)


Offset

Register	Offset
FlexPWM1_SM3_EXTSY NC	3FCh

Function

This register selects the PWM1 trigger inputs.

Diagram

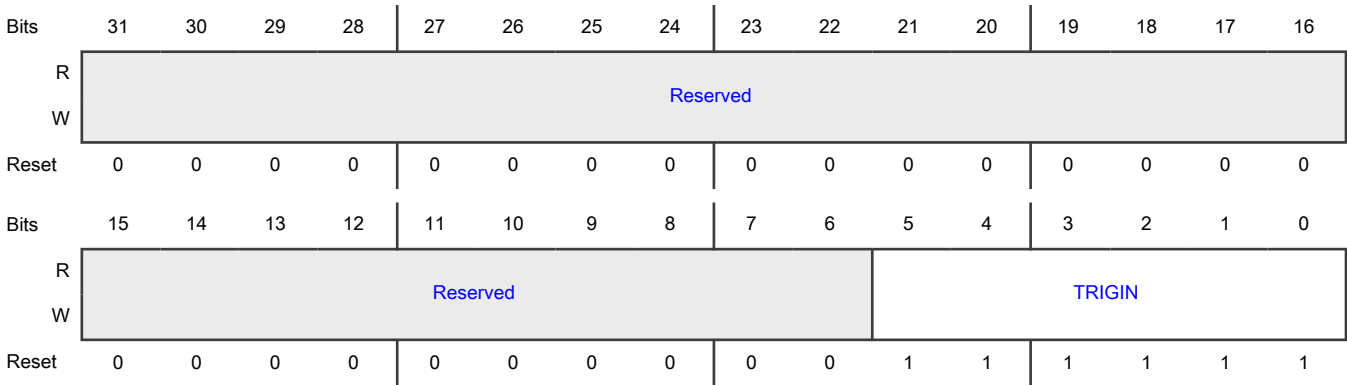

Fields

Field	Function
31-6 —	Reserved
5-0 TRIGIN	EXTSYNC input connections for PWM0 00_0000b - Reserved 00_0001b - ARM_TXEV input is selected 00_0010b - AOI0_OUT0 input is selected 00_0011b - AOI0_OUT1 input is selected 00_0100b - AOI0_OUT2 input is selected 00_0101b - AOI0_OUT3 input is selected 00_0110b - CMP0_OUT input is selected 00_0111b - CMP1_OUT input is selected 00_1000b - CMP2_OUT input is selected 00_1001b - CTimer0_MAT2 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	00_1010b - CTimer0_MAT3 input is selected
	00_1011b - CTimer1_MAT2 input is selected
	00_1100b - CTimer1_MAT3 input is selected
	00_1101b - CTimer2_MAT2 input is selected
	00_1110b - CTimer2_MAT3 input is selected
	00_1111b - QDC0_CMP_FLAG0 input is selected
	01_0000b - QDC0_CMP_FLAG1 input is selected
	01_0001b - QDC0_CMP_FLAG2 input is selected
	01_0010b - QDC0_CMP_FLAG3 input is selected
	01_0011b - QDC0_POS_MATCH0 input is selected
	01_0100b - TRIG_IN0 input is selected
	01_0101b - TRIG_IN1 input is selected
	01_0110b - TRIG_IN2 input is selected
	01_0111b - TRIG_IN3 input is selected
	01_1000b - TRIG_IN4 input is selected
	01_1001b - TRIG_IN5 input is selected
	01_1010b - TRIG_IN6 input is selected
	01_1011b - TRIG_IN7 input is selected
	01_1100b - TRIG_IN8 input is selected
	01_1101b - TRIG_IN9 input is selected
	01_1110b - TRIG_IN10 input is selected
	01_1111b - TRIG_IN11 input is selected
	10_0000b - GPIO0 Pin Event Trig 0 input is selected
	10_0001b - GPIO1 Pin Event Trig 0 input is selected
	10_0010b - GPIO2 Pin Event Trig 0 input is selected
	10_0011b - GPIO3 Pin Event Trig 0 input is selected
	10_0100b - GPIO4 Pin Event Trig 0 input is selected
	10_0101b - AOI1_OUT0 input is selected
	10_0110b - AOI1_OUT1 input is selected
	10_0111b - AOI1_OUT2 input is selected
	10_1000b - AOI1_OUT3 input is selected
	10_1001b - Reserved
	10_1010b - Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
	10_1011b - Reserved 10_1100b - Reserved 10_1101b - CTimer3_MAT2 input is selected 10_1110b - CTimer3_MAT3 input is selected 10_1111b - CTimer4_MAT2 input is selected 11_0000b - CTimer4_MAT3 input is selected 11_0001b - QDC1_CMP_FLAG0 input is selected 11_0010b - QDC1_CMP_FLAG1 input is selected 11_0011b - QDC1_CMP_FLAG2 input is selected 11_0100b - QDC1_CMP_FLAG3 input is selected 11_0101b - QDC1_POS_MATCH0 input is selected 11_0110b - PWM0_SM0_MUX_TRIG0 input is selected 11_0111b - PWM0_SM0_MUX_TRIG1 input is selected 11_1000b - PWM0_SM1_MUX_TRIG0 input is selected 11_1001b - PWM0_SM1_MUX_TRIG1 input is selected 11_1010b - PWM0_SM2_MUX_TRIG0 input is selected 11_1011b - PWM0_SM2_MUX_TRIG1 input is selected 11_1100b - PWM0_SM3_MUX_TRIG0 input is selected 11_1101b - PWM0_SM3_MUX_TRIG1 input is selected All other values are reserved.

13.6.1.56 PWM1 Fault Input Trigger Connections (FlexPWM1_FAULT0 - FlexPWM1_FAULT3)


Offset

Register	Offset
FlexPWM1_FAULT0	400h
FlexPWM1_FAULT1	404h
FlexPWM1_FAULT2	408h
FlexPWM1_FAULT3	40Ch

Function

This register selects the PWM1 FAULT inputs.

Diagram

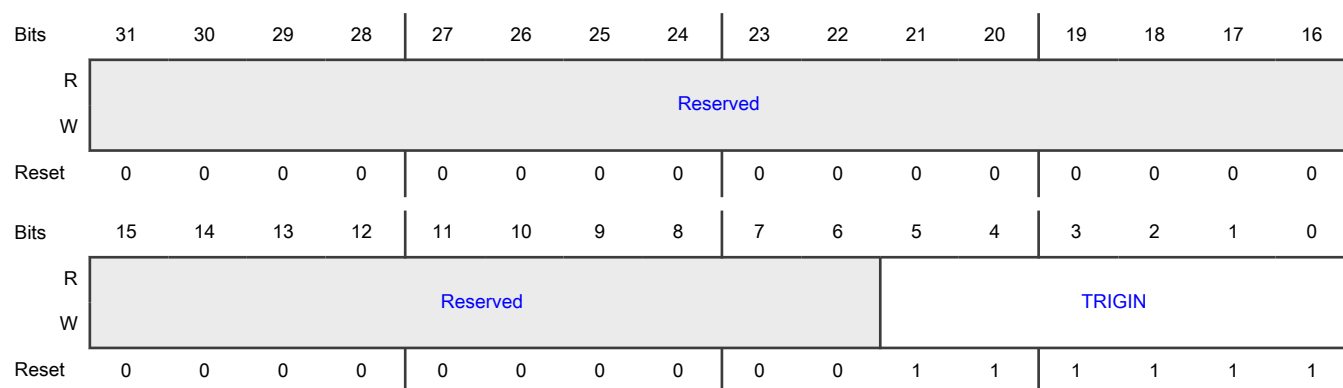

Fields

Field	Function
31-6 —	Reserved
5-0 TRIGIN	FAULT input connections for PWM1 00_0000b - Reserved 00_0001b - ARM_TXEV input is selected 00_0010b - AOI0_OUT0 input is selected 00_0011b - AOI0_OUT1 input is selected 00_0100b - AOI0_OUT2 input is selected 00_0101b - AOI0_OUT3 input is selected 00_0110b - CMP0_OUT input is selected 00_0111b - CMP1_OUT input is selected 00_1000b - CMP2_OUT input is selected 00_1001b - CTimer0_MAT2 input is selected 00_1010b - CTimer0_MAT3 input is selected 00_1011b - CTimer1_MAT2 input is selected 00_1100b - CTimer1_MAT3 input is selected 00_1101b - CTimer2_MAT2 input is selected 00_1110b - CTimer2_MAT3 input is selected 00_1111b - QDC0_CMP_FLAG0 input is selected 01_0000b - QDC0_CMP_FLAG1 input is selected 01_0001b - QDC0_CMP_FLAG2 input is selected 01_0010b - QDC0_CMP_FLAG3 input is selected 01_0011b - QDC0_POS_MATCH0 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	01_0100b - TRIG_IN0 input is selected
	01_0101b - TRIG_IN1 input is selected
	01_0110b - TRIG_IN2 input is selected
	01_0111b - TRIG_IN3 input is selected
	01_1000b - TRIG_IN4 input is selected
	01_1001b - TRIG_IN5 input is selected
	01_1010b - TRIG_IN6 input is selected
	01_1011b - TRIG_IN7 input is selected
	01_1100b - TRIG_IN8 input is selected
	01_1101b - TRIG_IN9 input is selected
	01_1110b - TRIG_IN10 input is selected
	01_1111b - TRIG_IN11 input is selected
	10_0000b - GPIO0 Pin Event Trig 0 input is selected
	10_0001b - GPIO1 Pin Event Trig 0 input is selected
	10_0010b - GPIO2 Pin Event Trig 0 input is selected
	10_0011b - GPIO3 Pin Event Trig 0 input is selected
	10_0100b - GPIO4 Pin Event Trig 0 input is selected
	10_0101b - AOI1_OUT0 input is selected
	10_0110b - AOI1_OUT1 input is selected
	10_0111b - AOI1_OUT2 input is selected
	10_1000b - AOI1_OUT3 input is selected
	10_1001b - Reserved
	10_1010b - Reserved
	10_1011b - Reserved
	10_1100b - Reserved
	10_1101b - CTimer3_MAT2 input is selected
	10_1110b - CTimer3_MAT3 input is selected
	10_1111b - CTimer4_MAT2 input is selected
	11_0000b - CTimer4_MAT3 input is selected
	11_0001b - QDC1_CMP_FLAG0 input is selected
	11_0010b - QDC1_CMP_FLAG1 input is selected
	11_0011b - QDC1_CMP_FLAG2 input is selected
	11_0100b - QDC1_CMP_FLAG3 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	11_0101b - QDC1_POS_MATCH0 input is selected 11_0110b - PWM0_SM0_MUX_TRIG0 input is selected 11_0111b - PWM0_SM0_MUX_TRIG1 input is selected 11_1000b - PWM0_SM1_MUX_TRIG0 input is selected 11_1001b - PWM0_SM1_MUX_TRIG1 input is selected 11_1010b - PWM0_SM2_MUX_TRIG0 input is selected 11_1011b - PWM0_SM2_MUX_TRIG1 input is selected 11_1100b - PWM0_SM3_MUX_TRIG0 input is selected 11_1101b - PWM0_SM3_MUX_TRIG1 input is selected All other values are reserved.

13.6.1.57 PWM1 input trigger connections (FlexPWM1_FORCE)

Offset

Register	Offset
FlexPWM1_FORCE	410h

Function

This register selects the PWM1 trigger inputs.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	Reserved															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserved								TRIGIN							
W																
Reset	0	0	0	0	0	0	0	0	0	0	1	1	1	1	1	1

Fields

Field	Function
31-6	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
—	
5-0 TRIGIN	Trigger input connections for PWM1 00_0000b - Reserved 00_0001b - ARM_TXEV input is selected 00_0010b - AOI0_OUT0 input is selected 00_0011b - AOI0_OUT1 input is selected 00_0100b - AOI0_OUT2 input is selected 00_0101b - AOI0_OUT3 input is selected 00_0110b - CMP0_OUT input is selected 00_0111b - CMP1_OUT input is selected 00_1000b - CMP2_OUT input is selected 00_1001b - CTimer0_MAT2 input is selected 00_1010b - CTimer0_MAT3 input is selected 00_1011b - CTimer1_MAT2 input is selected 00_1100b - CTimer1_MAT3 input is selected 00_1101b - CTimer2_MAT2 input is selected 00_1110b - CTimer2_MAT3 input is selected 00_1111b - QDC0_CMP_FLAG0 input is selected 01_0000b - QDC0_CMP_FLAG1 input is selected 01_0001b - QDC0_CMP_FLAG2 input is selected 01_0010b - QDC0_CMP_FLAG3 input is selected 01_0011b - QDC0_POS_MATCH0 input is selected 01_0100b - TRIG_IN0 input is selected 01_0101b - TRIG_IN1 input is selected 01_0110b - TRIG_IN2 input is selected 01_0111b - TRIG_IN3 input is selected 01_1000b - TRIG_IN4 input is selected 01_1001b - TRIG_IN5 input is selected 01_1010b - TRIG_IN6 input is selected 01_1011b - TRIG_IN7 input is selected 01_1100b - TRIG_IN8 input is selected 01_1101b - TRIG_IN9 input is selected 01_1110b - TRIG_IN10 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	01_1111b - TRIG_IN11 input is selected 10_0000b - GPIO0 Pin Event Trig 0 input is selected 10_0001b - GPIO1 Pin Event Trig 0 input is selected 10_0010b - GPIO2 Pin Event Trig 0 input is selected 10_0011b - GPIO3 Pin Event Trig 0 input is selected 10_0100b - GPIO4 Pin Event Trig 0 input is selected 10_0101b - AOI1_OUT0 input is selected 10_0110b - AOI1_OUT1 input is selected 10_0111b - AOI1_OUT2 input is selected 10_1000b - AOI1_OUT3 input is selected 10_1001b - Reserved 10_1010b - Reserved 10_1011b - Reserved 10_1100b - Reserved 10_1101b - CTimer3_MAT2 input is selected 10_1110b - CTimer3_MAT3 input is selected 10_1111b - CTimer4_MAT2 input is selected 11_0000b - CTimer4_MAT3 input is selected 11_0001b - QDC1_CMP_FLAG0 input is selected 11_0010b - QDC1_CMP_FLAG1 input is selected 11_0011b - QDC1_CMP_FLAG2 input is selected 11_0100b - QDC1_CMP_FLAG3 input is selected 11_0101b - QDC1_POS_MATCH0 input is selected 11_0110b - PWM0_SM0_MUX_TRIG0 input is selected 11_0111b - PWM0_SM0_MUX_TRIG1 input is selected 11_1000b - PWM0_SM1_MUX_TRIG0 input is selected 11_1001b - PWM0_SM1_MUX_TRIG1 input is selected 11_1010b - PWM0_SM2_MUX_TRIG0 input is selected 11_1011b - PWM0_SM2_MUX_TRIG1 input is selected 11_1100b - PWM0_SM3_MUX_TRIG0 input is selected 11_1101b - PWM0_SM3_MUX_TRIG1 input is selected All other values are reserved.

13.6.1.58 PWM0 external clock trigger (PWM0_EXT_CLK)

Offset

Register	Offset
PWM0_EXT_CLK	420h

Function

PWM0 external clock trigger connections

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	Reserved															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserved												TRIGIN			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	1	1	1	1

Fields

Field	Function
31-4 —	Reserved
3-0 TRIGIN	Trigger input connections for PWM 0000b - Reserved 0001b - clk_16k[1] input is selected 0010b - clk_in input is selected 0011b - AOI0_OUT0 input is selected 0100b - AOI0_OUT1 input is selected 0101b - EXTTRIG_IN0 input is selected 0110b - EXTTRIG_IN7 input is selected 0111b - AOI1_OUT0 input is selected 1000b - AOI1_OUT1 input is selected All other values are reserved.

13.6.1.59 PWM1 external clock trigger (PWM1_EXT_CLK)


Offset

Register	Offset
PWM1_EXT_CLK	424h

Function

PWM1 external clock trigger connections

Diagram

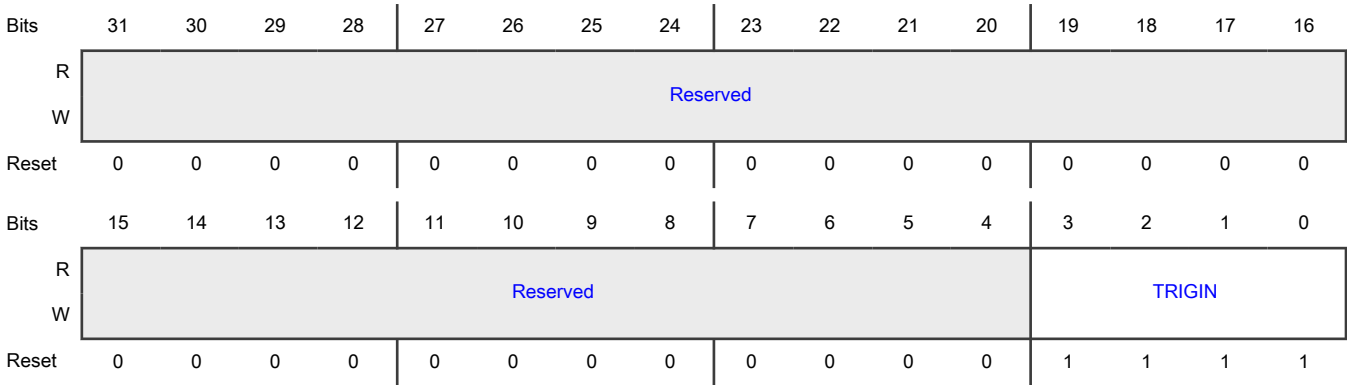

Fields

Field	Function
31-4 —	Reserved
3-0 TRIGIN	Trigger input connections for PWM 0000b - Reserved 0001b - clk_16k[1] input is selected 0010b - clk_in input is selected 0011b - AOI0_OUT0 input is selected 0100b - AOI0_OUT1 input is selected 0101b - EXTTRIG_IN0 input is selected 0110b - EXTTRIG_IN7 input is selected 0111b - AOI1_OUT0 input is selected 1000b - AOI1_OUT1 input is selected All other values are reserved.

13.6.1.60 AOI0 trigger input connections 0 (AOI0_INPUT0 - AOI0_INPUT15)

Offset

For a = 0 to 15:

Register	Offset
AOI0_INPUTa	440h + (a × 4h)

Function

This register is used to select the AOI00 trigger inputs.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	Reserved															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserved								INP							
W																
Reset	0	0	0	0	0	0	0	0	0	1	1	1	1	1	1	1

Fields

Field	Function
31-7 —	Reserved
6-0 INP	AOI0 trigger input connections 000_0000b - Reserved 000_0001b - ADC0_tcomp[0] input is selected 000_0010b - ADC0_tcomp[1] input is selected 000_0011b - ADC0_tcomp[2] input is selected 000_0100b - ADC0_tcomp[3] input is selected 000_0101b - CMP0_OUT input is selected 000_0110b - CMP1_OUT input is selected 000_0111b - CMP2_OUT input is selected 000_1000b - CTimer0_MAT0 input is selected 000_1001b - CTimer0_MAT1 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	000_1010b - CTimer0_MAT2 input is selected
	000_1011b - CTimer0_MAT3 input is selected
	000_1100b - CTimer1_MAT0 input is selected
	000_1101b - CTimer1_MAT1 input is selected
	000_1110b - CTimer1_MAT2 input is selected
	000_1111b - CTimer1_MAT3 input is selected
	001_0000b - CTimer2_MAT0 input is selected
	001_0001b - CTimer2_MAT1 input is selected
	001_0010b - CTimer2_MAT2 input is selected
	001_0011b - CTimer2_MAT3 input is selected
	001_0100b - LPTMR0 input is selected
	001_0101b - Reserved
	001_0110b - QDC0_CMP_FLAG0 input is selected
	001_0111b - QDC0_CMP_FLAG1 input is selected
	001_1000b - QDC0_CMP_FLAG2 input is selected
	001_1001b - QDC0_CMP_FLAG3 input is selected
	001_1010b - QDC0_POS_MATCH0 input is selected
	001_1011b - PWM0_SM0_MUX_TRIG0 0 input is selected
	001_1100b - PWM0_SM0_MUX_TRIG1 input is selected
	001_1101b - PWM0_SM1_MUX_TRIG0 input is selected
	001_1110b - PWM0_SM1_MUX_TRIG1 input is selected
	001_1111b - PWM0_SM2_MUX_TRIG0 input is selected
	010_0000b - PWM0_SM2_MUX_TRIG1 input is selected
	010_0001b - PWM0_SM3_MUX_TRIG0 input is selected
	010_0010b - PWM0_SM3_MUX_TRIG1 input is selected
	010_0011b - TRIG_IN0 input is selected
	010_0100b - TRIG_IN1 input is selected
	010_0101b - TRIG_IN2 input is selected
	010_0110b - TRIG_IN3 input is selected
	010_0111b - TRIG_IN4 input is selected
	010_1000b - TRIG_IN5 input is selected
	010_1001b - TRIG_IN6 input is selected
	010_1010b - TRIG_IN7 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	010_1011b - TRIG_IN8 input is selected
	010_1100b - TRIG_IN9 input is selected
	010_1101b - TRIG_IN10 input is selected
	010_1110b - TRIG_IN11 input is selected
	010_1111b - GPIO0 Pin Event Trig 0 input is selected
	011_0000b - GPIO1 Pin Event Trig 0 input is selected
	011_0001b - GPIO2 Pin Event Trig 0 input is selected
	011_0010b - GPIO3 Pin Event Trig 0 input is selected
	011_0011b - GPIO4 Pin Event Trig 0 input is selected
	011_0100b - ADC1_tcomp[0] input is selected
	011_0101b - ADC1_tcomp[1] input is selected
	011_0110b - ADC1_tcomp[2] input is selected
	011_0111b - ADC1_tcomp[3] input is selected
	011_1000b - CTimer3_MAT0 input is selected
	011_1001b - CTimer3_MAT1 input is selected
	011_1010b - CTimer3_MAT2 input is selected
	011_1011b - CTimer3_MAT3 input is selected
	011_1100b - CTimer4_MAT0 input is selected
	011_1101b - CTimer4_MAT1 input is selected
	011_1110b - CTimer4_MAT2 input is selected
	011_1111b - CTimer4_MAT3 input is selected
	100_0000b - FlexIO CH0 input is selected
	100_0001b - FlexIO CH1 input is selected
	100_0010b - FlexIO CH2 input is selected
	100_0011b - FlexIO CH3 input is selected
	100_0100b - QDC1_CMP_FLAG0 input is selected
	100_0101b - QDC1_CMP_FLAG1 input is selected
	100_0110b - QDC1_CMP_FLAG2 input is selected
	100_0111b - QDC1_CMP_FLAG3 input is selected
	100_1000b - QDC1_POS_MATCH0 input is selected
	100_1001b - PWM1_SM0_MUX_TRIG0 input is selected
	100_1010b - PWM1_SM0_MUX_TRIG1 input is selected
	100_1011b - PWM1_SM1_MUX_TRIG0 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	100_1100b - PWM1_SM1_MUX_TRIG1 input is selected 100_1101b - PWM1_SM2_MUX_TRIG0 input is selected 100_1110b - PWM1_SM2_MUX_TRIG1 input is selected 100_1111b - PWM1_SM3_MUX_TRIG0 input is selected 101_0000b - PWM1_SM3_MUX_TRIG1 input is selected 101_0001b - PWM0_SM0_A_Output 101_0010b - PWM0_SM0_B_Output 101_0011b - PWM0_SM1_A_Output 101_0100b - PWM0_SM1_B_Output 101_0101b - PWM0_SM2_A_Output 101_0110b - PWM0_SM2_B_Output 101_0111b - PWM0_SM3_A_Output 101_1000b - PWM0_SM3_B_Output 101_1001b - ADC2_tcomp[0] input is selected 101_1010b - ADC2_tcomp[1] input is selected 101_1011b - ADC2_tcomp[2] input is selected 101_1100b - ADC2_tcomp[3] input is selected 101_1101b - ADC3_tcomp[0] input is selected 101_1110b - ADC3_tcomp[1] input is selected 101_1111b - ADC3_tcomp[2] input is selected 110_0000b - ADC3_tcomp[3] input is selected All other values are reserved.

13.6.1.61 USB-FS trigger input connections (USBFS_TRIG)


Offset

Register	Offset
USBFS_TRIG	480h

Function

This register is used to select the USB-FS trigger inputs.

Diagram

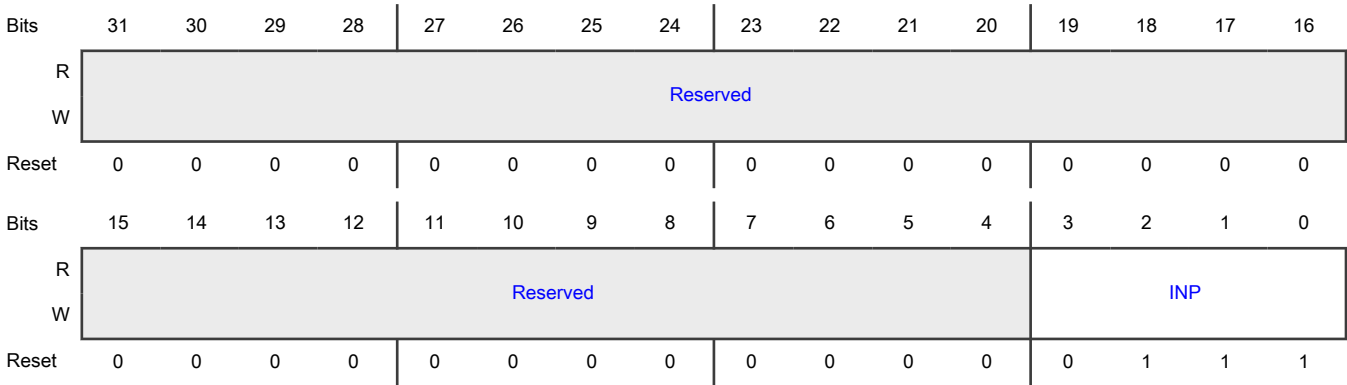

Fields

Field	Function
31-4 —	Reserved
3-0 INP	USB-FS trigger input connections. 0000b - Reserved 0001b - LPUART0 lpuart_trg_txdata input is selected 0010b - LPUART1 lpuart_trg_txdata input is selected 0011b - LPUART2 lpuart_trg_txdata input is selected 0100b - LPUART3 lpuart_trg_txdata input is selected 0101b - LPUART4 lpuart_trg_txdata input is selected 0110b - LPUART5 lpuart_trg_txdata input is selected All other values are reserved.

13.6.1.62 EXT trigger connections (EXT_TRIG0 - EXT_TRIG7)

Offset


For a = 0 to 7:

Register	Offset
EXT_TRIGa	4C0h + (a × 4h)

Function

This register is used to select the EXT trigger inputs.

Diagram

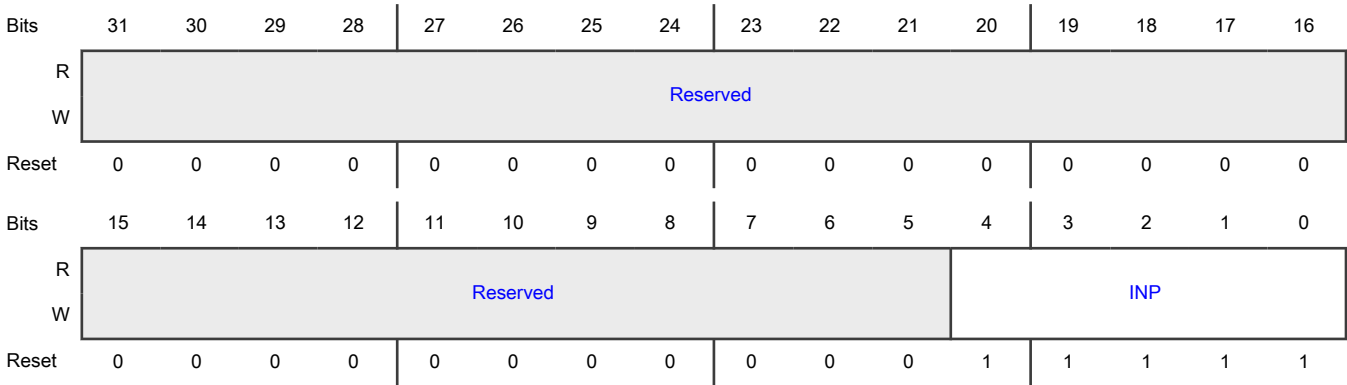

Fields

Field	Function
31-5 —	Reserved
4-0 INP	EXT trigger input connections 0_0000b - Reserved 0_0001b - Reserved 0_0010b - AOI0_OUT0 input is selected 0_0011b - AOI0_OUT1 input is selected 0_0100b - AOI0_OUT2 input is selected 0_0101b - AOI0_OUT3 input is selected 0_0110b - CMP0_OUT input is selected 0_0111b - CMP1_OUT input is selected 0_1000b - CMP2_OUT input is selected 0_1001b - LPUART0 ipp_do_lpuart_txd input is selected 0_1010b - LPUART1 ipp_do_lpuart_txd input is selected 0_1011b - LPUART2 ipp_do_lpuart_txd input is selected 0_1100b - LPUART3 ipp_do_lpuart_txd input is selected 0_1101b - LPUART4 ipp_do_lpuart_txd input is selected 0_1110b - AOI1_OUT0 input is selected 0_1111b - AOI1_OUT1 input is selected 1_0000b - AOI1_OUT2 input is selected 1_0001b - RTC_1Hz_CLK input is selected 1_0010b - LPUART5 ipp_do_lpuart_txd input is selected All other values are reserved.

13.6.1.63 CMP1 input connections (CMP1_TRIG)


Offset

Register	Offset
CMP1_TRIG	4E0h

Function

This register selects the CMP1 trigger inputs.

Diagram

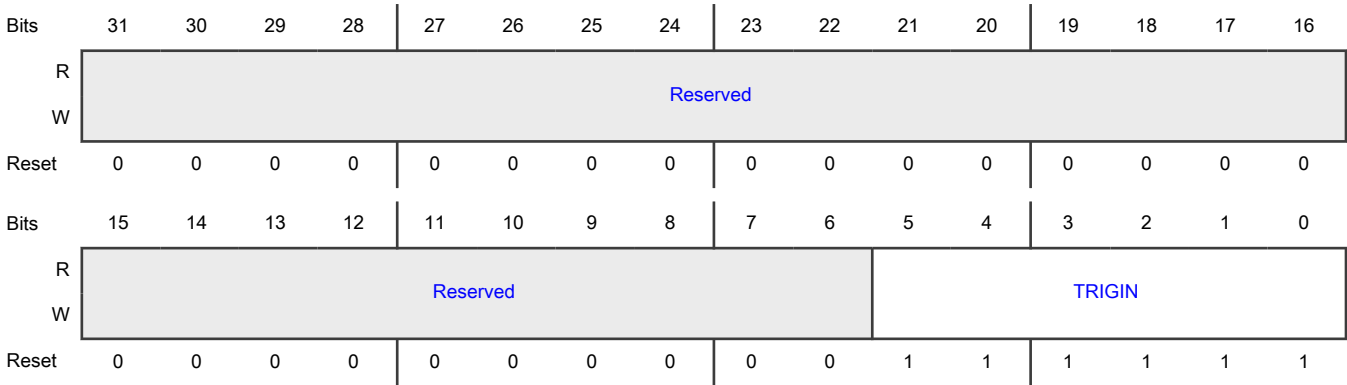

Fields

Field	Function
31-6 —	Reserved
5-0 TRIGIN	CMP1 input trigger 00_0000b - Reserved 00_0001b - Reserved 00_0010b - AOI0_OUT0 input is selected 00_0011b - AOI0_OUT1 input is selected 00_0100b - AOI0_OUT2 input is selected 00_0101b - AOI0_OUT3 input is selected 00_0110b - CMP0_OUT input is selected 00_0111b - CMP2_OUT input is selected 00_1000b - CTimer0_MAT0 input is selected 00_1001b - CTimer0_MAT2 input is selected 00_1010b - CTimer1_MAT0

Table continues on the next page...

Table continued from the previous page...

Field	Function
	00_1011b - CTimer1_MAT2 input is selected
	00_1100b - CTimer2_MAT0 input is selected
	00_1101b - CTimer2_MAT2 input is selected
	00_1110b - LPTMR0 input is selected
	00_1111b - Reserved
	01_0000b - QDC0_POS_MATCH0
	01_0001b - PWM0_SM0_MUX_TRIG0 input is selected
	01_0010b - PWM0_SM0_MUX_TRIG1 input is selected
	01_0011b - PWM0_SM1_MUX_TRIG0 input is selected
	01_0100b - PWM0_SM1_MUX_TRIG1 input is selected
	01_0101b - PWM0_SM2_MUX_TRIG0 input is selected
	01_0110b - PWM0_SM2_MUX_TRIG1 input is selected
	01_0111b - PWM0_SM3_MUX_TRIG0 input is selected
	01_1000b - PWM0_SM3_MUX_TRIG1 input is selected
	01_1001b - GPIO0 Pin Event Trig 0 input is selected
	01_1010b - GPIO1 Pin Event Trig 0 input is selected
	01_1011b - GPIO2 Pin Event Trig 0 input is selected
	01_1100b - GPIO3 Pin Event Trig 0 input is selected
	01_1101b - GPIO4 Pin Event Trig 0 input is selected
	01_1110b - WUU input is selected
	01_1111b - AOI1_OUT0 input is selected
	10_0000b - AOI1_OUT1 input is selected
	10_0001b - AOI1_OUT2 input is selected
	10_0010b - AOI1_OUT3 input is selected
	10_0011b - Reserved
	10_0100b - Reserved
	10_0101b - Reserved
	10_0110b - Reserved
	10_0111b - CTimer3_MAT0
	10_1000b - CTimer3_MAT1
	10_1001b - CTimer4_MAT0 input is selected
	10_1010b - CTimer4_MAT1 input is selected
	10_1011b - Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
	10_1100b - Reserved
	10_1101b - Reserved
	10_1110b - Reserved
	10_1111b - QDC1_POS_MATCH0 input is selected
	11_0000b - PWM1_SM0_MUX_TRIG0 input is selected
	11_0001b - PWM1_SM0_MUX_TRIG1 input is selected
	11_0010b - PWM1_SM1_MUX_TRIG0 input is selected
	11_0011b - PWM1_SM1_MUX_TRIG1 input is selected
	11_0100b - PWM1_SM2_MUX_TRIG0 input is selected
	11_0101b - PWM1_SM2_MUX_TRIG1 input is selected
	11_0110b - PWM1_SM3_MUX_TRIG0 input is selected
	11_0111b - PWM1_SM2_MUX_TRIG1 input is selected
	All other values are reserved.

13.6.1.64 CMP2 input connections (CMP2_TRIG)


Offset

Register	Offset
CMP2_TRIG	500h

Function

This register selects the CMP2 trigger inputs.

Diagram

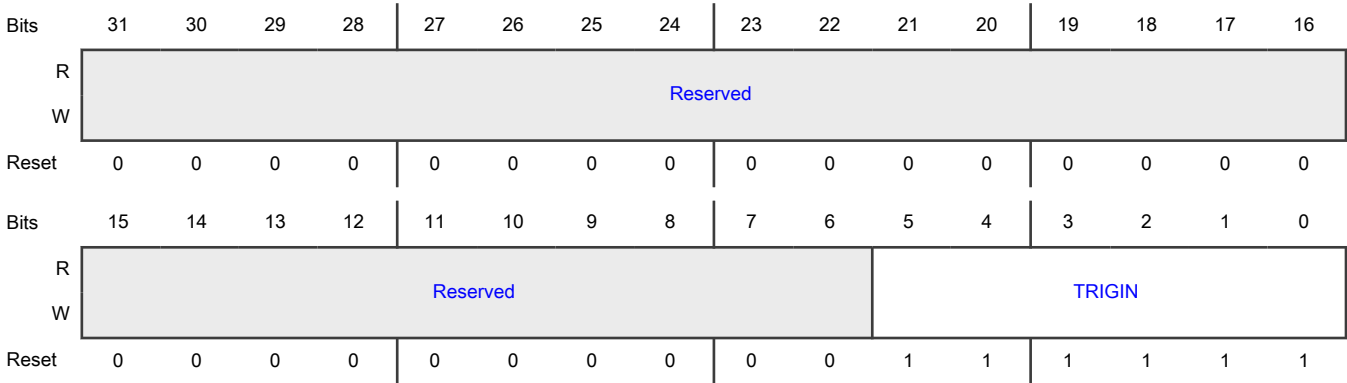

Fields

Field	Function
31-6 —	Reserved
5-0 TRIGIN	CMP2 input trigger 00_0000b - Reserved 00_0001b - Reserved 00_0010b - AOI0_OUT0 input is selected 00_0011b - AOI0_OUT1 input is selected 00_0100b - AOI0_OUT2 input is selected 00_0101b - AOI0_OUT3 input is selected 00_0110b - CMP0_OUT input is selected 00_0111b - CMP1_OUT input is selected 00_1000b - CTimer0_MAT0 input is selected 00_1001b - CTimer0_MAT2 input is selected 00_1010b - CTimer1_MAT0 00_1011b - CTimer1_MAT2 input is selected 00_1100b - CTimer2_MAT0 input is selected 00_1101b - CTimer2_MAT2 input is selected 00_1110b - LPTMR0 input is selected 00_1111b - Reserved 01_0000b - QDC0_POS_MATCH0 input is selected 01_0001b - PWM0_SM0_MUX_TRIG0 input is selected 01_0010b - PWM0_SM0_MUX_TRIG1 input is selected 01_0011b - PWM0_SM1_MUX_TRIG0 input is selected 01_0100b - PWM0_SM1_MUX_TRIG1 input is selected 01_0101b - PWM0_SM2_MUX_TRIG0 input is selected 01_0110b - PWM0_SM2_MUX_TRIG1 input is selected 01_0111b - PWM0_SM3_MUX_TRIG0 input is selected 01_1000b - PWM0_SM3_MUX_TRIG1 input is selected 01_1001b - GPIO0 Pin Event Trig 0 input is selected 01_1010b - GPIO1 Pin Event Trig 0 input is selected 01_1011b - GPIO2 Pin Event Trig 0 input is selected 01_1100b - GPIO3 Pin Event Trig 0 input is selected 01_1101b - GPIO4 Pin Event Trig 0 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	01_1110b - WUU input is selected 01_1111b - AOI1_OUT0 input is selected 10_0000b - AOI1_OUT1 input is selected 10_0001b - AOI1_OUT2 input is selected 10_0010b - AOI1_OUT3 input is selected 10_0011b - Reserved 10_0100b - Reserved 10_0101b - Reserved 10_0110b - Reserved 10_0111b - CTimer3_MAT0 10_1000b - CTimer3_MAT1 10_1001b - CTimer4_MAT0 input is selected 10_1010b - CTimer4_MAT1 input is selected 10_1011b - Reserved 10_1100b - Reserved 10_1101b - Reserved 10_1110b - Reserved 10_1111b - QDC1_POS_MATCH0 input is selected 11_0000b - PWM1_SM0_MUX_TRIG0 input is selected 11_0001b - PWM1_SM0_MUX_TRIG1 input is selected 11_0010b - PWM1_SM1_MUX_TRIG0 input is selected 11_0011b - PWM1_SM1_MUX_TRIG1 input is selected 11_0100b - PWM1_SM2_MUX_TRIG0 input is selected 11_0101b - PWM1_SM2_MUX_TRIG1 input is selected 11_0110b - PWM1_SM3_MUX_TRIG0 input is selected 11_0111b - PWM1_SM2_MUX_TRIG1 input is selected All other values are reserved.

13.6.1.65 LPI2C2 trigger input connections (LPI2C2_TRIG)


Offset

Register	Offset
LPI2C2_TRIG	540h

Function

This register is used to select the LPI2C2 trigger inputs.

Diagram

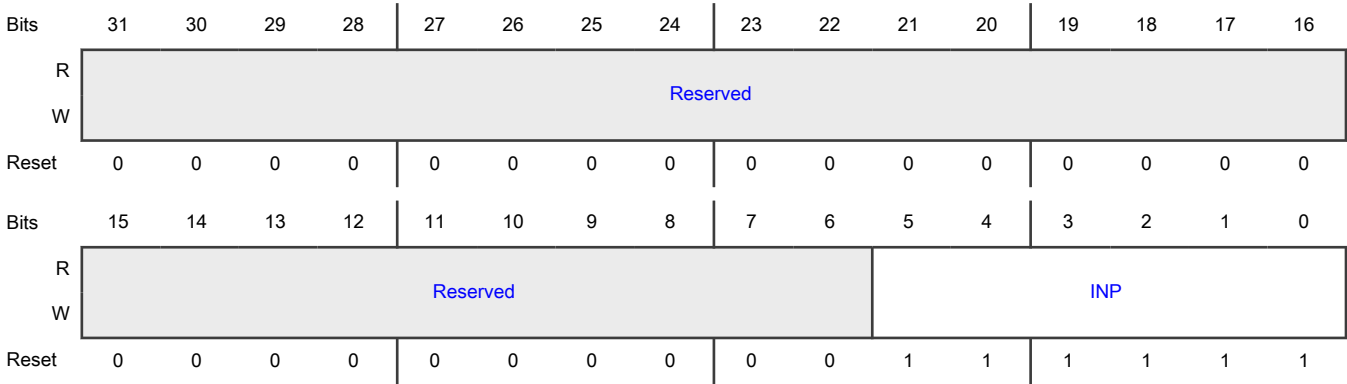

Fields

Field	Function
31-6 —	Reserved
5-0 INP	LPI2C2 trigger input connections 00_0000b - Reserved 00_0001b - Reserved 00_0010b - AOI0_OUT0 input is selected 00_0011b - AOI0_OUT1 input is selected 00_0100b - AOI0_OUT2 input is selected 00_0101b - AOI0_OUT3 input is selected 00_0110b - CMP0_OUT input is selected 00_0111b - CMP1_OUT input is selected 00_1000b - CMP2_OUT input is selected 00_1001b - CTimer0_MAT0 input is selected 00_1010b - CTimer0_MAT1 input is selected 00_1011b - CTimer1_MAT0 input is selected 00_1100b - CTimer1_MAT1 input is selected 00_1101b - CTimer2_MAT0 input is selected 00_1110b - CTimer2_MAT1 input is selected 00_1111b - LPTMR0 input is selected 01_0000b - Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
	01_0001b - TRIG_IN0 input is selected 01_0010b - TRIG_IN1 input is selected 01_0011b - TRIG_IN2 input is selected 01_0100b - TRIG_IN3 input is selected 01_0101b - TRIG_IN4 input is selected 01_0110b - TRIG_IN5 input is selected 01_0111b - TRIG_IN6 input is selected 01_1000b - TRIG_IN7 input is selected 01_1001b - GPIO0 Pin Event Trig 0 input is selected 01_1010b - GPIO1 Pin Event Trig 0 input is selected 01_1011b - GPIO2 Pin Event Trig 0 input is selected 01_1100b - GPIO3 Pin Event Trig 0 input is selected 01_1101b - GPIO4 Pin Event Trig 0 input is selected 01_1110b - WUU input is selected 01_1111b - AOI1_OUT0 input is selected 10_0000b - AOI1_OUT1 input is selected 10_0001b - AOI1_OUT2 input is selected 10_0010b - AOI1_OUT3 input is selected 10_0011b - CTimer3_MAT2 input is selected 10_0100b - CTimer3_MAT3 input is selected 10_0101b - CTimer4_MAT2 input is selected 10_0110b - CTimer4_MAT3 input is selected 10_0111b - FlexIO CH0 input is selected 10_1000b - FlexIO CH1 input is selected 10_1001b - FlexIO CH2 input is selected 10_1010b - FlexIO CH3 input is selected All other values are reserved.

13.6.1.66 LPI2C3 trigger input connections (LPI2C3_TRIG)


Offset

Register	Offset
LPI2C3_TRIG	560h

Function

This register is used to select the LPI2C3 trigger inputs.

Diagram

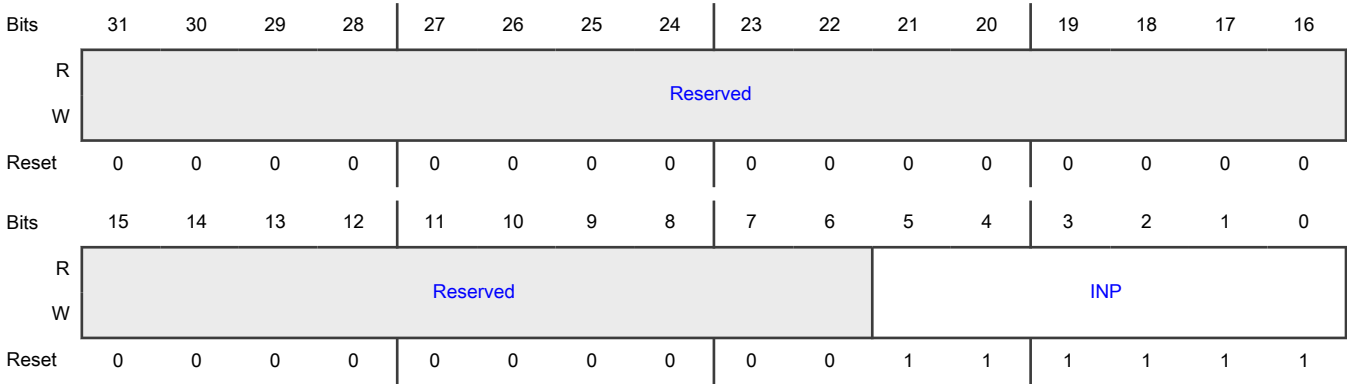

Fields

Field	Function
31-6 —	Reserved
5-0 INP	LPI2C3 trigger input connections 00_0000b - Reserved 00_0001b - Reserved 00_0010b - AOI0_OUT0 input is selected 00_0011b - AOI0_OUT1 input is selected 00_0100b - AOI0_OUT2 input is selected 00_0101b - AOI0_OUT3 input is selected 00_0110b - CMP0_OUT input is selected 00_0111b - CMP1_OUT input is selected 00_1000b - CMP2_OUT input is selected 00_1001b - CTimer0_MAT0 input is selected 00_1010b - CTimer0_MAT1 input is selected 00_1011b - CTimer1_MAT0 input is selected 00_1100b - CTimer1_MAT1 input is selected 00_1101b - CTimer2_MAT0 input is selected 00_1110b - CTimer2_MAT1 input is selected 00_1111b - LPTMR0 input is selected 01_0000b - Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
	01_0001b - TRIG_IN0 input is selected 01_0010b - TRIG_IN1 input is selected 01_0011b - TRIG_IN2 input is selected 01_0100b - TRIG_IN3 input is selected 01_0101b - TRIG_IN4 input is selected 01_0110b - TRIG_IN5 input is selected 01_0111b - TRIG_IN6 input is selected 01_1000b - TRIG_IN7 input is selected 01_1001b - GPIO0 Pin Event Trig 0 input is selected 01_1010b - GPIO1 Pin Event Trig 0 input is selected 01_1011b - GPIO2 Pin Event Trig 0 input is selected 01_1100b - GPIO3 Pin Event Trig 0 input is selected 01_1101b - GPIO4 Pin Event Trig 0 input is selected 01_1110b - WUU input is selected 01_1111b - AOI1_OUT0 input is selected 10_0000b - AOI1_OUT1 input is selected 10_0001b - AOI1_OUT2 input is selected 10_0010b - AOI1_OUT3 input is selected 10_0011b - CTimer3_MAT2 input is selected 10_0100b - CTimer3_MAT3 input is selected 10_0101b - CTimer4_MAT2 input is selected 10_0110b - CTimer4_MAT3 input is selected 10_0111b - FlexIO CH0 input is selected 10_1000b - FlexIO CH1 input is selected 10_1001b - FlexIO CH2 input is selected 10_1010b - FlexIO CH3 input is selected All other values are reserved.

13.6.1.67 LPI2C0 trigger input connections (LPI2C0_TRIG)


Offset

Register	Offset
LPI2C0_TRIG	5A0h

Function

This register is used to select the LPI2C0 trigger inputs.

Diagram

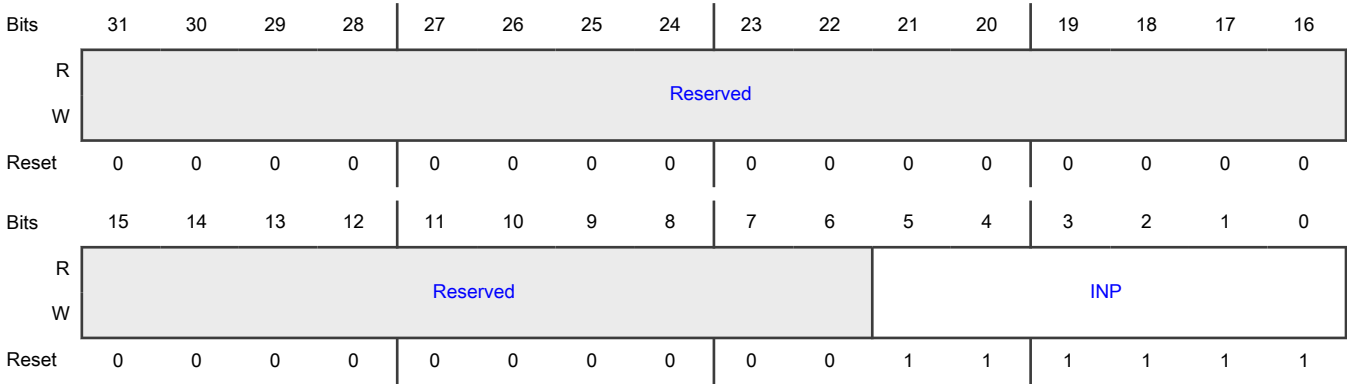

Fields

Field	Function
31-6 —	Reserved
5-0 INP	LPI2C0 trigger input connections 00_0000b - Reserved 00_0001b - Reserved 00_0010b - AOI0_OUT0 input is selected 00_0011b - AOI0_OUT1 input is selected 00_0100b - AOI0_OUT2 input is selected 00_0101b - AOI0_OUT3 input is selected 00_0110b - CMP0_OUT input is selected 00_0111b - CMP1_OUT input is selected 00_1000b - CMP2_OUT input is selected 00_1001b - CTimer0_MAT0 input is selected 00_1010b - CTimer0_MAT1 input is selected 00_1011b - CTimer1_MAT0 input is selected 00_1100b - CTimer1_MAT1 input is selected 00_1101b - CTimer2_MAT0 input is selected 00_1110b - CTimer2_MAT1 input is selected 00_1111b - LPTMR0 input is selected 01_0000b - Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
	01_0001b - TRIG_IN0 input is selected 01_0010b - TRIG_IN1 input is selected 01_0011b - TRIG_IN2 input is selected 01_0100b - TRIG_IN3 input is selected 01_0101b - TRIG_IN4 input is selected 01_0110b - TRIG_IN5 input is selected 01_0111b - TRIG_IN6 input is selected 01_1000b - TRIG_IN7 input is selected 01_1001b - GPIO0 Pin Event Trig 0 input is selected 01_1010b - GPIO1 Pin Event Trig 0 input is selected 01_1011b - GPIO2 Pin Event Trig 0 input is selected 01_1100b - GPIO3 Pin Event Trig 0 input is selected 01_1101b - GPIO4 Pin Event Trig 0 input is selected 01_1110b - WUU input is selected 01_1111b - AOI1_OUT0 input is selected 10_0000b - AOI1_OUT1 input is selected 10_0001b - AOI1_OUT2 input is selected 10_0010b - AOI1_OUT3 input is selected 10_0011b - CTimer3_MAT2 input is selected 10_0100b - CTimer3_MAT3 input is selected 10_0101b - CTimer4_MAT2 input is selected 10_0110b - CTimer4_MAT3 input is selected 10_0111b - FlexIO CH0 input is selected 10_1000b - FlexIO CH1 input is selected 10_1001b - FlexIO CH2 input is selected 10_1010b - FlexIO CH3 input is selected All other values are reserved.

13.6.1.68 LPI2C1 trigger input connections (LPI2C1_TRIG)


Offset

Register	Offset
LPI2C1_TRIG	5C0h

Function

This register is used to select the LPI2C1 trigger inputs.

Diagram

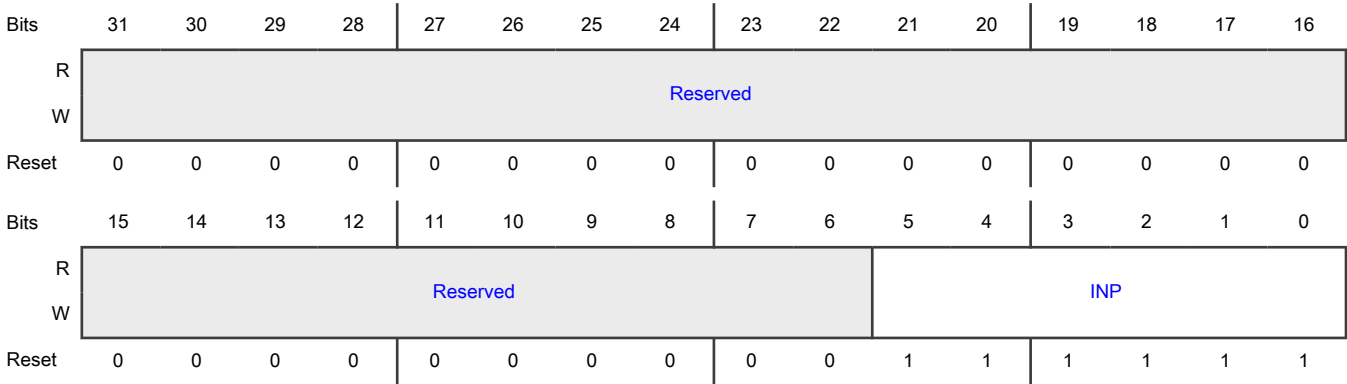

Fields

Field	Function
31-6 —	Reserved
5-0 INP	LPI2C1 trigger input connections 00_0000b - Reserved 00_0001b - Reserved 00_0010b - AOI0_OUT0 input is selected 00_0011b - AOI0_OUT1 input is selected 00_0100b - AOI0_OUT2 input is selected 00_0101b - AOI0_OUT3 input is selected 00_0110b - CMP0_OUT input is selected 00_0111b - CMP1_OUT input is selected 00_1000b - CMP2_OUT input is selected 00_1001b - CTimer0_MAT0 input is selected 00_1010b - CTimer0_MAT1 input is selected 00_1011b - CTimer1_MAT0 input is selected 00_1100b - CTimer1_MAT1 input is selected 00_1101b - CTimer2_MAT0 input is selected 00_1110b - CTimer2_MAT1 input is selected 00_1111b - LPTMR0 input is selected 01_0000b - Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
	01_0001b - TRIG_IN0 input is selected 01_0010b - TRIG_IN1 input is selected 01_0011b - TRIG_IN2 input is selected 01_0100b - TRIG_IN3 input is selected 01_0101b - TRIG_IN4 input is selected 01_0110b - TRIG_IN5 input is selected 01_0111b - TRIG_IN6 input is selected 01_1000b - TRIG_IN7 input is selected 01_1001b - GPIO0 Pin Event Trig 0 input is selected 01_1010b - GPIO1 Pin Event Trig 0 input is selected 01_1011b - GPIO2 Pin Event Trig 0 input is selected 01_1100b - GPIO3 Pin Event Trig 0 input is selected 01_1101b - GPIO4 Pin Event Trig 0 input is selected 01_1110b - WUU input is selected 01_1111b - AOI1_OUT0 input is selected 10_0000b - AOI1_OUT1 input is selected 10_0001b - AOI1_OUT2 input is selected 10_0010b - AOI1_OUT3 input is selected 10_0011b - CTimer3_MAT2 input is selected 10_0100b - CTimer3_MAT3 input is selected 10_0101b - CTimer4_MAT2 input is selected 10_0110b - CTimer4_MAT3 input is selected 10_0111b - FlexIO CH0 input is selected 10_1000b - FlexIO CH1 input is selected 10_1001b - FlexIO CH2 input is selected 10_1010b - FlexIO CH3 input is selected All other values are reserved.

13.6.1.69 LPSPi0 trigger input connections (LPSPi0_TRIG)


Offset

Register	Offset
LPSPi0_TRIG	5E0h

Function

This register is used to select the LPSPiO trigger inputs.

Diagram

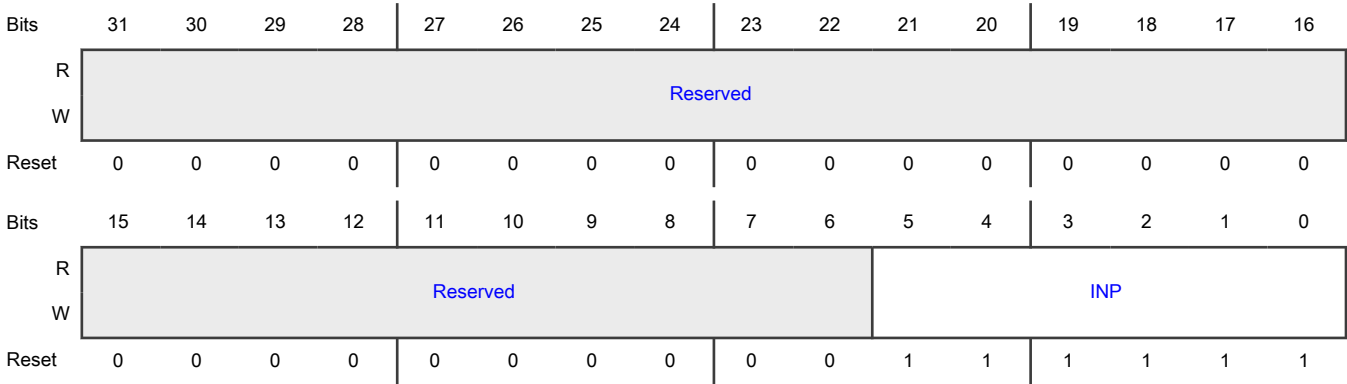

Fields

Field	Function
31-6 —	Reserved
5-0 INP	LPSPiO trigger input connections 00_0000b - Reserved 00_0001b - Reserved 00_0010b - AOIO_OUT0 input is selected 00_0011b - AOIO_OUT1 input is selected 00_0100b - AOIO_OUT2 input is selected 00_0101b - AOIO_OUT3 input is selected 00_0110b - CMP0_OUT input is selected 00_0111b - CMP1_OUT input is selected 00_1000b - CMP2_OUT input is selected 00_1001b - CTimer0_MAT1 input is selected 00_1010b - CTimer0_MAT2 input is selected 00_1011b - CTimer1_MAT1 input is selected 00_1100b - CTimer1_MAT2 input is selected 00_1101b - CTimer2_MAT1 input is selected 00_1110b - CTimer2_MAT2 input is selected 00_1111b - LPTMR0 input is selected 01_0000b - Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
	01_0001b - TRIG_IN0 input is selected 01_0010b - TRIG_IN1 input is selected 01_0011b - TRIG_IN2 input is selected 01_0100b - TRIG_IN3 input is selected 01_0101b - TRIG_IN4 input is selected 01_0110b - TRIG_IN5 input is selected 01_0111b - TRIG_IN6 input is selected 01_1000b - TRIG_IN7 input is selected 01_1001b - GPIO0 Pin Event Trig 0 input is selected 01_1010b - GPIO1 Pin Event Trig 0 input is selected 01_1011b - GPIO2 Pin Event Trig 0 input is selected 01_1100b - GPIO3 Pin Event Trig 0 input is selected 01_1101b - GPIO4 Pin Event Trig 0 input is selected 01_1110b - WUU input is selected 01_1111b - AOI1_OUT0 input is selected 10_0000b - AOI1_OUT1 input is selected 10_0001b - AOI1_OUT2 input is selected 10_0010b - AOI1_OUT3 input is selected 10_0011b - CTimer3_MAT2 input is selected 10_0100b - CTimer3_MAT3 input is selected 10_0101b - CTimer4_MAT2 input is selected 10_0110b - CTimer4_MAT3 input is selected 10_0111b - FlexIO CH0 input is selected 10_1000b - FlexIO CH1 input is selected 10_1001b - FlexIO CH2 input is selected 10_1010b - FlexIO CH3 input is selected All other values are reserved.

13.6.1.70 LPSP11 trigger input connections (LPSP11_TRIG)


Offset

Register	Offset
LPSP11_TRIG	600h

Function

This register is used to select the LPSPi1 trigger inputs.

Diagram

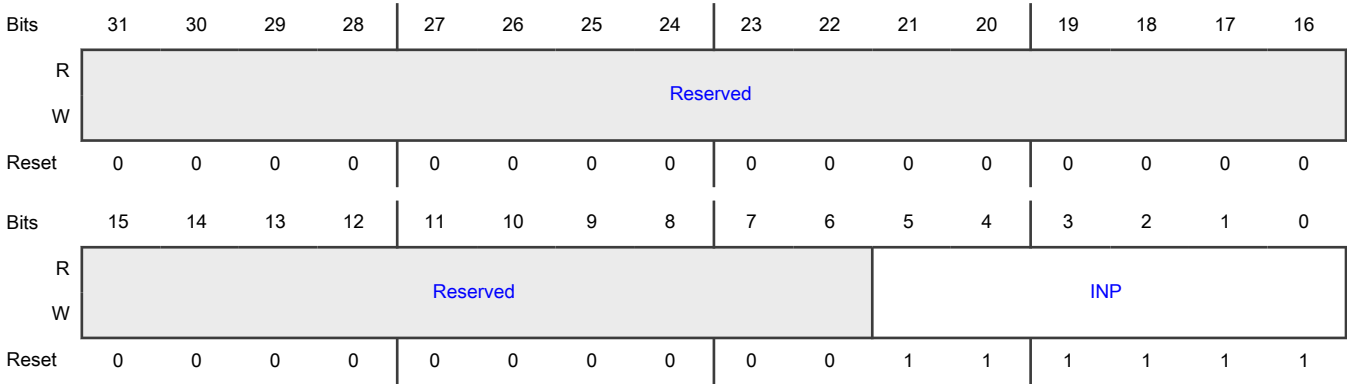

Fields

Field	Function
31-6 —	Reserved
5-0 INP	LPSPi1 trigger input connections 00_0000b - Reserved 00_0001b - Reserved 00_0010b - AOI0_OUT0 input is selected 00_0011b - AOI0_OUT1 input is selected 00_0100b - AOI0_OUT2 input is selected 00_0101b - AOI0_OUT3 input is selected 00_0110b - CMP0_OUT input is selected 00_0111b - CMP1_OUT input is selected 00_1000b - CMP2_OUT input is selected 00_1001b - CTimer0_MAT1 input is selected 00_1010b - CTimer0_MAT2 input is selected 00_1011b - CTimer1_MAT1 input is selected 00_1100b - CTimer1_MAT2 input is selected 00_1101b - CTimer2_MAT1 input is selected 00_1110b - CTimer2_MAT2 input is selected 00_1111b - LPTMR0 input is selected 01_0000b - Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
	01_0001b - TRIG_IN0 input is selected 01_0010b - TRIG_IN1 input is selected 01_0011b - TRIG_IN2 input is selected 01_0100b - TRIG_IN3 input is selected 01_0101b - TRIG_IN4 input is selected 01_0110b - TRIG_IN5 input is selected 01_0111b - TRIG_IN6 input is selected 01_1000b - TRIG_IN7 input is selected 01_1001b - GPIO0 Pin Event Trig 0 input is selected 01_1010b - GPIO1 Pin Event Trig 0 input is selected 01_1011b - GPIO2 Pin Event Trig 0 input is selected 01_1100b - GPIO3 Pin Event Trig 0 input is selected 01_1101b - GPIO4 Pin Event Trig 0 input is selected 01_1110b - WUU input is selected 01_1111b - AOI1_OUT0 input is selected 10_0000b - AOI1_OUT1 input is selected 10_0001b - AOI1_OUT2 input is selected 10_0010b - AOI1_OUT3 input is selected 10_0011b - CTimer3_MAT2 input is selected 10_0100b - CTimer3_MAT3 input is selected 10_0101b - CTimer4_MAT2 input is selected 10_0110b - CTimer4_MAT3 input is selected 10_0111b - FlexIO CH0 input is selected 10_1000b - FlexIO CH1 input is selected 10_1001b - FlexIO CH2 input is selected 10_1010b - FlexIO CH3 input is selected All other values are reserved.

13.6.1.71 LPUART0 trigger input connections (LPUART0)


Offset

Register	Offset
LPUART0	620h

Function

This register is used to select the LPUART0 trigger inputs.

Diagram

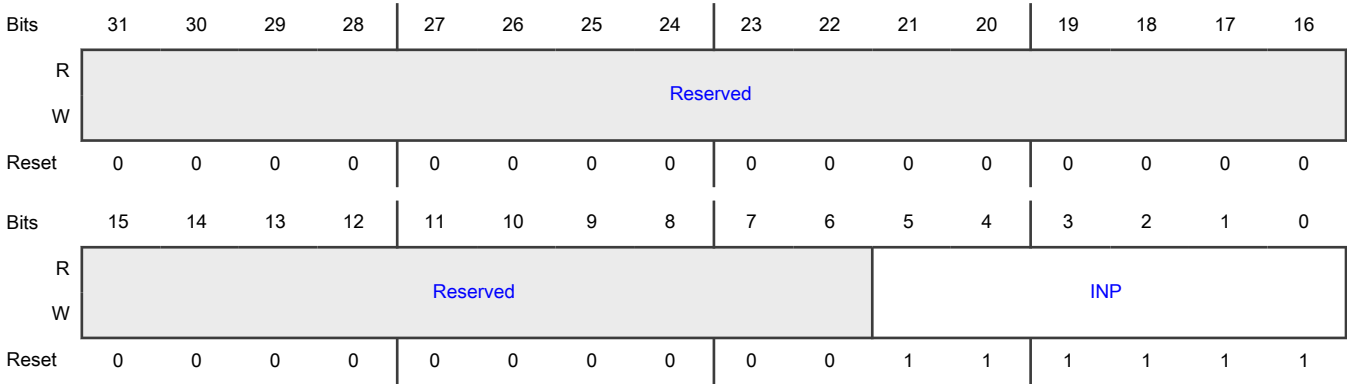

Fields

Field	Function
31-6 —	Reserved
5-0 INP	LPUART0 trigger input connections 00_0000b - Reserved 00_0001b - Reserved 00_0010b - AOI0_OUT0 input is selected 00_0011b - AOI0_OUT1 input is selected 00_0100b - AOI0_OUT2 input is selected 00_0101b - AOI0_OUT3 input is selected 00_0110b - CMP0_OUT input is selected 00_0111b - CMP1_OUT input is selected 00_1000b - CMP2_OUT input is selected 00_1001b - CTimer0_MAT2 input is selected 00_1010b - CTimer0_MAT3 input is selected 00_1011b - CTimer1_MAT2 input is selected 00_1100b - CTimer1_MAT3 input is selected 00_1101b - CTimer2_MAT2 input is selected 00_1110b - CTimer2_MAT3 input is selected 00_1111b - LPTMR0 input is selected 01_0000b - Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
	01_0001b - TRIG_IN0 input is selected 01_0010b - TRIG_IN1 input is selected 01_0011b - TRIG_IN2 input is selected 01_0100b - TRIG_IN3 input is selected 01_0101b - TRIG_IN4 input is selected 01_0110b - TRIG_IN5 input is selected 01_0111b - TRIG_IN6 input is selected 01_1000b - TRIG_IN7 input is selected 01_1001b - TRIG_IN8 input is selected 01_1010b - TRIG_IN9 input is selected 01_1011b - TRIG_IN10 input is selected 01_1100b - TRIG_IN11 input is selected 01_1101b - GPIO0 Pin Event Trig 0 input is selected 01_1110b - GPIO1 Pin Event Trig 0 input is selected 01_1111b - GPIO2 Pin Event Trig 0 input is selected 10_0000b - GPIO3 Pin Event Trig 0 input is selected 10_0001b - GPIO4 Pin Event Trig 0 input is selected 10_0010b - WUU selected 10_0011b - USB0 ipp_ind_uart_rxd_usbmux input is selected 10_0100b - AOI1_OUT0 input is selected 10_0101b - AOI1_OUT1 input is selected 10_0110b - AOI1_OUT2 input is selected 10_0111b - AOI1_OUT3 input is selected 10_1000b - CTimer3_MAT2 input is selected 10_1001b - CTimer3_MAT3 input is selected 10_1010b - CTimer4_MAT2 input is selected 10_1011b - CTimer4_MAT3 input is selected 10_1100b - FlexIO CH0 input is selected 10_1101b - FlexIO CH1 input is selected 10_1110b - FlexIO CH2 input is selected 10_1111b - FlexIO CH3 input is selected All other values are reserved.

13.6.1.72 LPUART1 trigger input connections (LPUART1)


Offset

Register	Offset
LPUART1	640h

Function

This register is used to select the LPUART1 trigger inputs.

Diagram

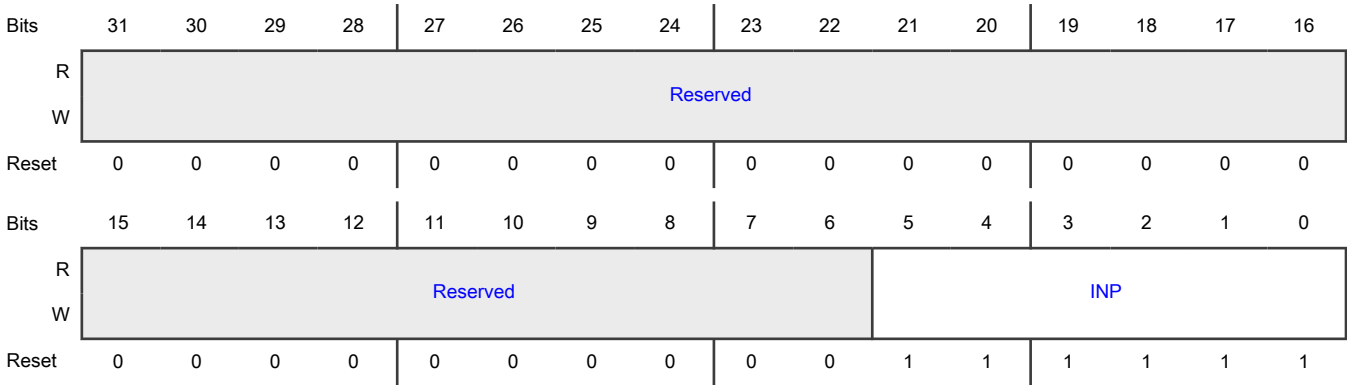

Fields

Field	Function
31-6 —	Reserved
5-0 INP	LPUART1 trigger input connections 00_0000b - Reserved 00_0001b - Reserved 00_0010b - AOI0_OUT0 input is selected 00_0011b - AOI0_OUT1 input is selected 00_0100b - AOI0_OUT2 input is selected 00_0101b - AOI0_OUT3 input is selected 00_0110b - CMP0_OUT input is selected 00_0111b - CMP1_OUT input is selected 00_1000b - CMP2_OUT input is selected 00_1001b - CTimer0_MAT2 input is selected 00_1010b - CTimer0_MAT3 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	00_1011b - CTimer1_MAT2 input is selected
	00_1100b - CTimer1_MAT3 input is selected
	00_1101b - CTimer2_MAT2 input is selected
	00_1110b - CTimer2_MAT3 input is selected
	00_1111b - LPTMR0 input is selected
	01_0000b - Reserved
	01_0001b - TRIG_IN0 input is selected
	01_0010b - TRIG_IN1 input is selected
	01_0011b - TRIG_IN2 input is selected
	01_0100b - TRIG_IN3 input is selected
	01_0101b - TRIG_IN4 input is selected
	01_0110b - TRIG_IN5 input is selected
	01_0111b - TRIG_IN6 input is selected
	01_1000b - TRIG_IN7 input is selected
	01_1001b - TRIG_IN8 input is selected
	01_1010b - TRIG_IN9 input is selected
	01_1011b - TRIG_IN10 input is selected
	01_1100b - TRIG_IN11 input is selected
	01_1101b - GPIO0 Pin Event Trig 0 input is selected
	01_1110b - GPIO1 Pin Event Trig 0 input is selected
	01_1111b - GPIO2 Pin Event Trig 0 input is selected
	10_0000b - GPIO3 Pin Event Trig 0 input is selected
	10_0001b - GPIO4 Pin Event Trig 0 input is selected
	10_0010b - WUU selected
	10_0011b - USB0 ipp_ind_uart_rxd_usbmux input is selected
	10_0100b - AOI1_OUT0 input is selected
	10_0101b - AOI1_OUT1 input is selected
	10_0110b - AOI1_OUT2 input is selected
	10_0111b - AOI1_OUT3 input is selected
	10_1000b - CTimer3_MAT2 input is selected
	10_1001b - CTimer3_MAT3 input is selected
	10_1010b - CTimer4_MAT2 input is selected
	10_1011b - CTimer4_MAT3 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	10_1100b - FlexIO CH0 input is selected 10_1101b - FlexIO CH1 input is selected 10_1110b - FlexIO CH2 input is selected 10_1111b - FlexIO CH3 input is selected All other values are reserved.

13.6.1.73 LPUART2 trigger input connections (LPUART2)

Offset

Register	Offset
LPUART2	660h

Function

This register is used to select the LPUART2 trigger inputs.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	Reserved															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserved								INP							
W																
Reset	0	0	0	0	0	0	0	0	0	0	1	1	1	1	1	1

Fields

Field	Function
31-6 —	Reserved
5-0 INP	LPUART2 trigger input connections 00_0000b - Reserved 00_0001b - Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
	00_0010b - AOI0_OUT0 input is selected
	00_0011b - AOI0_OUT1 input is selected
	00_0100b - AOI0_OUT2 input is selected
	00_0101b - AOI0_OUT3 input is selected
	00_0110b - CMP0_OUT input is selected
	00_0111b - CMP1_OUT input is selected
	00_1000b - CMP2_OUT input is selected
	00_1001b - CTimer0_MAT2 input is selected
	00_1010b - CTimer0_MAT3 input is selected
	00_1011b - CTimer1_MAT2 input is selected
	00_1100b - CTimer1_MAT3 input is selected
	00_1101b - CTimer2_MAT2 input is selected
	00_1110b - CTimer2_MAT3 input is selected
	00_1111b - LPTMR0 input is selected
	01_0000b - Reserved
	01_0001b - TRIG_IN0 input is selected
	01_0010b - TRIG_IN1 input is selected
	01_0011b - TRIG_IN2 input is selected
	01_0100b - TRIG_IN3 input is selected
	01_0101b - TRIG_IN4 input is selected
	01_0110b - TRIG_IN5 input is selected
	01_0111b - TRIG_IN6 input is selected
	01_1000b - TRIG_IN7 input is selected
	01_1001b - TRIG_IN8 input is selected
	01_1010b - TRIG_IN9 input is selected
	01_1011b - TRIG_IN10 input is selected
	01_1100b - TRIG_IN11 input is selected
	01_1101b - GPIO0 Pin Event Trig 0 input is selected
	01_1110b - GPIO1 Pin Event Trig 0 input is selected
	01_1111b - GPIO2 Pin Event Trig 0 input is selected
	10_0000b - GPIO3 Pin Event Trig 0 input is selected
	10_0001b - GPIO4 Pin Event Trig 0 input is selected
	10_0010b - WUU selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	10_0011b - USB0 ipp_ind_uart_rxd_usbmux input is selected 10_0100b - AOI1_OUT0 input is selected 10_0101b - AOI1_OUT1 input is selected 10_0110b - AOI1_OUT2 input is selected 10_0111b - AOI1_OUT3 input is selected 10_1000b - CTimer3_MAT2 input is selected 10_1001b - CTimer3_MAT3 input is selected 10_1010b - CTimer4_MAT2 input is selected 10_1011b - CTimer4_MAT3 input is selected 10_1100b - FlexIO CH0 input is selected 10_1101b - FlexIO CH1 input is selected 10_1110b - FlexIO CH2 input is selected 10_1111b - FlexIO CH3 input is selected All other values are reserved.

13.6.1.74 LPUART3 trigger input connections (LPUART3)

Offset

Register	Offset
LPUART3	680h

Function

This register is used to select the LPUART3 trigger inputs.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	Reserved															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserved												INP			
W																
Reset	0	0	0	0	0	0	0	0	0	0	1	1	1	1	1	1

Fields

Field	Function
31-6 —	Reserved
5-0 INP	LPUART3 trigger input connections 00_0000b - Reserved 00_0001b - Reserved 00_0010b - AOI0_OUT0 input is selected 00_0011b - AOI0_OUT1 input is selected 00_0100b - AOI0_OUT2 input is selected 00_0101b - AOI0_OUT3 input is selected 00_0110b - CMP0_OUT input is selected 00_0111b - CMP1_OUT input is selected 00_1000b - CMP2_OUT input is selected 00_1001b - CTimer0_MAT2 input is selected 00_1010b - CTimer0_MAT3 input is selected 00_1011b - CTimer1_MAT2 input is selected 00_1100b - CTimer1_MAT3 input is selected 00_1101b - CTimer2_MAT2 input is selected 00_1110b - CTimer2_MAT3 input is selected 00_1111b - LPTMR0 input is selected 01_0000b - Reserved 01_0001b - TRIG_IN0 input is selected 01_0010b - TRIG_IN1 input is selected 01_0011b - TRIG_IN2 input is selected 01_0100b - TRIG_IN3 input is selected 01_0101b - TRIG_IN4 input is selected 01_0110b - TRIG_IN5 input is selected 01_0111b - TRIG_IN6 input is selected 01_1000b - TRIG_IN7 input is selected 01_1001b - TRIG_IN8 input is selected 01_1010b - TRIG_IN9 input is selected 01_1011b - TRIG_IN10 input is selected 01_1100b - TRIG_IN11 input is selected 01_1101b - GPIO0 Pin Event Trig 0 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	01_1110b - GPIO1 Pin Event Trig 0 input is selected 01_1111b - GPIO2 Pin Event Trig 0 input is selected 10_0000b - GPIO3 Pin Event Trig 0 input is selected 10_0001b - GPIO4 Pin Event Trig 0 input is selected 10_0010b - WUU selected 10_0011b - USB0 ipp_ind_uart_rxd_usbmux input is selected 10_0100b - AOI1_OUT0 input is selected 10_0101b - AOI1_OUT1 input is selected 10_0110b - AOI1_OUT2 input is selected 10_0111b - AOI1_OUT3 input is selected 10_1000b - CTimer3_MAT2 input is selected 10_1001b - CTimer3_MAT3 input is selected 10_1010b - CTimer4_MAT2 input is selected 10_1011b - CTimer4_MAT3 input is selected 10_1100b - FlexIO CH0 input is selected 10_1101b - FlexIO CH1 input is selected 10_1110b - FlexIO CH2 input is selected 10_1111b - FlexIO CH3 input is selected All other values are reserved.

13.6.1.75 LPUART4 trigger input connections (LPUART4)


Offset

Register	Offset
LPUART4	6A0h

Function

This register is used to select the LPUART4 trigger inputs.

Diagram

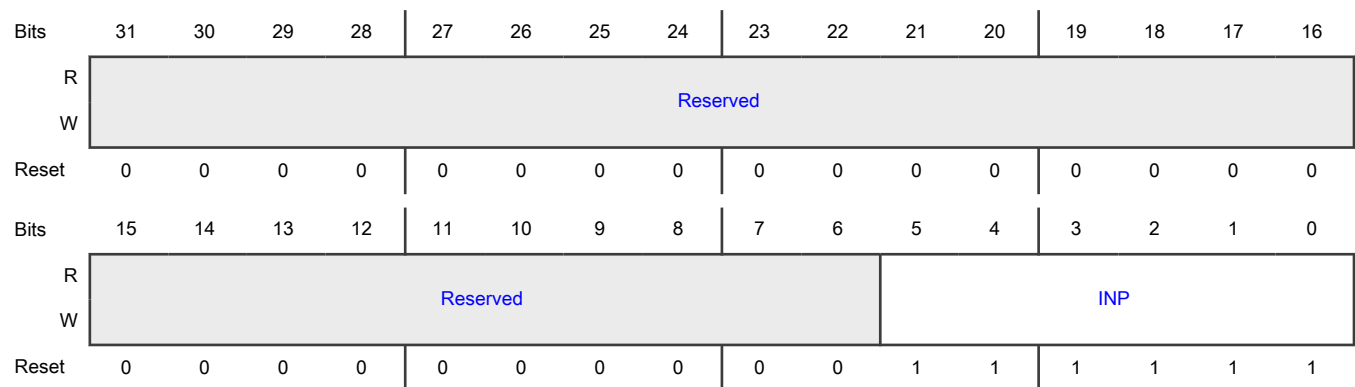

Fields

Field	Function
31-6 —	Reserved
5-0 INP	LPUART4 trigger input connections 00_0000b - Reserved 00_0001b - Reserved 00_0010b - AOI0_OUT0 input is selected 00_0011b - AOI0_OUT1 input is selected 00_0100b - AOI0_OUT2 input is selected 00_0101b - AOI0_OUT3 input is selected 00_0110b - CMP0_OUT input is selected 00_0111b - CMP1_OUT input is selected 00_1000b - CMP2_OUT input is selected 00_1001b - CTimer0_MAT2 input is selected 00_1010b - CTimer0_MAT3 input is selected 00_1011b - CTimer1_MAT2 input is selected 00_1100b - CTimer1_MAT3 input is selected 00_1101b - CTimer2_MAT2 input is selected 00_1110b - CTimer2_MAT3 input is selected 00_1111b - LPTMR0 input is selected 01_0000b - Reserved 01_0001b - TRIG_IN0 input is selected 01_0010b - TRIG_IN1 input is selected 01_0011b - TRIG_IN2 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	01_0100b - TRIG_IN3 input is selected
	01_0101b - TRIG_IN4 input is selected
	01_0110b - TRIG_IN5 input is selected
	01_0111b - TRIG_IN6 input is selected
	01_1000b - TRIG_IN7 input is selected
	01_1001b - TRIG_IN8 input is selected
	01_1010b - TRIG_IN9 input is selected
	01_1011b - TRIG_IN10 input is selected
	01_1100b - TRIG_IN11 input is selected
	01_1101b - GPIO0 Pin Event Trig 0 input is selected
	01_1110b - GPIO1 Pin Event Trig 0 input is selected
	01_1111b - GPIO2 Pin Event Trig 0 input is selected
	10_0000b - GPIO3 Pin Event Trig 0 input is selected
	10_0001b - GPIO4 Pin Event Trig 0 input is selected
	10_0010b - WUU selected
	10_0011b - USB0 ipp_ind_uart_rxd_usbmux input is selected
	10_0100b - AOI1_OUT0 input is selected
	10_0101b - AOI1_OUT1 input is selected
	10_0110b - AOI1_OUT2 input is selected
	10_0111b - AOI1_OUT3 input is selected
	10_1000b - CTimer3_MAT2 input is selected
	10_1001b - CTimer3_MAT3 input is selected
	10_1010b - CTimer4_MAT2 input is selected
	10_1011b - CTimer4_MAT3 input is selected
	10_1100b - FlexIO CH0 input is selected
	10_1101b - FlexIO CH1 input is selected
	10_1110b - FlexIO CH2 input is selected
	10_1111b - FlexIO CH3 input is selected
	All other values are reserved.

13.6.1.76 LPUART5 trigger input connections (LPUART5)


Offset

Register	Offset
LPUART5	6C0h

Function

This register is used to select the LPUART4 trigger inputs.

Diagram

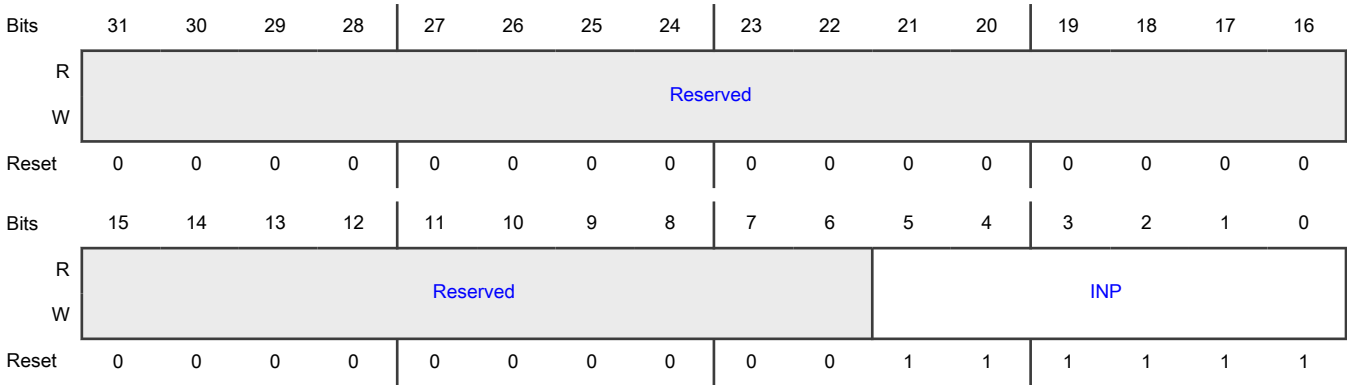

Fields

Field	Function
31-6 —	Reserved
5-0 INP	LPUART5 trigger input connections 00_0000b - Reserved 00_0001b - Reserved 00_0010b - AOI0_OUT0 input is selected 00_0011b - AOI0_OUT1 input is selected 00_0100b - AOI0_OUT2 input is selected 00_0101b - AOI0_OUT3 input is selected 00_0110b - CMP0_OUT input is selected 00_0111b - CMP1_OUT input is selected 00_1000b - CMP2_OUT input is selected 00_1001b - CTimer0_MAT2 input is selected 00_1010b - CTimer0_MAT3 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	00_1011b - CTimer1_MAT2 input is selected
	00_1100b - CTimer1_MAT3 input is selected
	00_1101b - CTimer2_MAT2 input is selected
	00_1110b - CTimer2_MAT3 input is selected
	00_1111b - LPTMR0 input is selected
	01_0000b - Reserved
	01_0001b - TRIG_IN0 input is selected
	01_0010b - TRIG_IN1 input is selected
	01_0011b - TRIG_IN2 input is selected
	01_0100b - TRIG_IN3 input is selected
	01_0101b - TRIG_IN4 input is selected
	01_0110b - TRIG_IN5 input is selected
	01_0111b - TRIG_IN6 input is selected
	01_1000b - TRIG_IN7 input is selected
	01_1001b - TRIG_IN8 input is selected
	01_1010b - TRIG_IN9 input is selected
	01_1011b - TRIG_IN10 input is selected
	01_1100b - TRIG_IN11 input is selected
	01_1101b - GPIO0 Pin Event Trig 0 input is selected
	01_1110b - GPIO1 Pin Event Trig 0 input is selected
	01_1111b - GPIO2 Pin Event Trig 0 input is selected
	10_0000b - GPIO3 Pin Event Trig 0 input is selected
	10_0001b - GPIO4 Pin Event Trig 0 input is selected
	10_0010b - WUU selected
	10_0011b - USB0 ipp_ind_uart_rxd_usbmux input is selected
	10_0100b - AOI1_OUT0 input is selected
	10_0101b - AOI1_OUT1 input is selected
	10_0110b - AOI1_OUT2 input is selected
	10_0111b - AOI1_OUT3 input is selected
	10_1000b - CTimer3_MAT2 input is selected
	10_1001b - CTimer3_MAT3 input is selected
	10_1010b - CTimer4_MAT2 input is selected
	10_1011b - CTimer4_MAT3 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	10_1100b - FlexIO CH0 input is selected 10_1101b - FlexIO CH1 input is selected 10_1110b - FlexIO CH2 input is selected 10_1111b - FlexIO CH3 input is selected All other values are reserved.

13.6.1.77 FlexIO Trigger Input Connections (FLEXIO_TRIG0 - FLEXIO_TRIG3)


Offset

Register	Offset
FLEXIO_TRIG0	6E0h
FLEXIO_TRIG1	6E4h
FLEXIO_TRIG2	6E8h
FLEXIO_TRIG3	6ECh

Function

This register is used to select the FlexIO trigger inputs.

Diagram

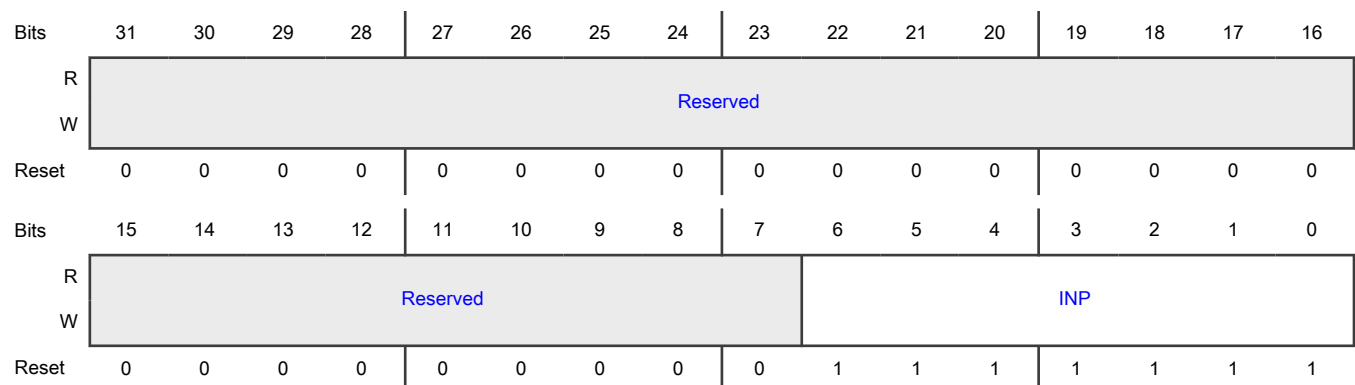

Fields

Field	Function
31-7 —	Reserved
6-0	Input number for FlexIO0.

Table continues on the next page...

Table continued from the previous page...

Field	Function
INP	000_0000b - Reserved 000_0001b - AOI0_OUT0 input is selected 000_0010b - AOI0_OUT1 input is selected 000_0011b - AOI0_OUT2 input is selected 000_0100b - AOI0_OUT3 input is selected 000_0101b - ADC0_tcomp[0] input is selected 000_0110b - ADC0_tcomp[1] input is selected 000_0111b - ADC0_tcomp[2] input is selected 000_1000b - ADC0_tcomp[3] input is selected 000_1001b - CMP0_OUT input is selected 000_1010b - CMP1_OUT input is selected 000_1011b - CMP2_OUT input is selected 000_1100b - CTimer0_MAT1 input is selected 000_1101b - CTimer0_MAT2 input is selected 000_1110b - CTimer1_MAT1 input is selected 000_1111b - CTimer1_MAT2 input is selected 001_0000b - CTimer2_MAT1 input is selected 001_0001b - CTimer2_MAT2 input is selected 001_0010b - LPTMR0 input is selected 001_0011b - Reserved 001_0100b - PWM0_SM0_MUX_TRIG0 input is selected 001_0101b - PWM0_SM1_MUX_TRIG0 input is selected 001_0110b - PWM0_SM2_MUX_TRIG0 input is selected 001_0111b - PWM0_SM3_MUX_TRIG0 input is selected 001_1000b - TRIG_IN0 input is selected 001_1001b - TRIG_IN1 input is selected 001_1010b - TRIG_IN2 input is selected 001_1011b - TRIG_IN3 input is selected 001_1100b - TRIG_IN4 input is selected 001_1101b - TRIG_IN5 input is selected 001_1110b - TRIG_IN6 input is selected 001_1111b - TRIG_IN7 input is selected 010_0000b - GPIO0 Pin Event Trig 0 input is selected

Table continues on the next page...

Table continued from the previous page...

Field	Function
	010_0001b - GPIO1 Pin Event Trig 0 input is selected
	010_0010b - GPIO2 Pin Event Trig 0 input is selected
	010_0011b - GPIO3 Pin Event Trig 0 input is selected
	010_0100b - GPIO4 Pin Event Trig 0 input is selected
	010_0101b - WUU input is selected
	010_0110b - LPI2C0 Master End of Packet
	010_0111b - LPI2C0 Slave End of Packet
	010_1000b - LPI2C1 Master End of Packet
	010_1001b - LPI2C1 Slave End of Packet
	010_1010b - LPSPi0 End of Frame
	010_1011b - LPSPi0 Received Data Word
	010_1100b - LPSPi1 End of Frame
	010_1101b - LPSPi1 Received Data Word
	010_1110b - LPUART0 Received Data Word
	010_1111b - LPUART0 Transmitted Data Word
	011_0000b - LPUART0 Receive Line Idle
	011_0001b - LPUART1 Received Data Word
	011_0010b - LPUART1 Transmitted Data Word
	011_0011b - LPUART1 Receive Line Idle
	011_0100b - LPUART2 Received Data Word
	011_0101b - LPUART2 Transmitted Data Word
	011_0110b - LPUART2 Receive Line Idle
	011_0111b - LPUART3 Received Data Word
	011_1000b - LPUART3 Transmitted Data Word
	011_1001b - LPUART3 Receive Line Idle
	011_1010b - LPUART4 Received Data Word
	011_1011b - LPUART4 Transmitted Data Word
	011_1100b - LPUART4 Receive Line Idle
	011_1101b - AOI1_OUT0 input is selected
	011_1110b - AOI1_OUT1 input is selected
	011_1111b - AOI1_OUT2 input is selected
	100_0000b - AOI1_OUT3 input is selected
	100_0001b - ADC1_tcomp[0] input is selected

Table continues on the next page...

Table continued from the previous page...


Field	Function
	100_0010b - ADC1_tcomp[1] input is selected
	100_0011b - ADC1_tcomp[2] input is selected
	100_0100b - ADC1_tcomp[3] input is selected
	100_0101b - CTimer3_MAT2 input is selected
	100_0110b - CTimer3_MAT3 input is selected
	100_0111b - CTimer4_MAT2 input is selected
	100_1000b - CTimer4_MAT3 input is selected
	100_1001b - PWM1_SM0_MUX_TRIG0 input is selected
	100_1010b - PWM1_SM1_MUX_TRIG0 input is selected
	100_1011b - PWM1_SM2_MUX_TRIG0 input is selected
	100_1100b - PWM1_SM3_MUX_TRIG0 input is selected
	100_1101b - LPI2C2 Master End of Packet
	100_1110b - LPI2C2 Slave End of Packet
	100_1111b - LPI2C3 Master End of Packet
	101_0000b - LPI2C3 Slave End of Packet
	All other values are reserved.

13.6.1.78 Trigger filter prescaler (TRIGFIL_PRSC)

Offset

Register	Offset
TRIGFIL_PRSC	A00h

Diagram

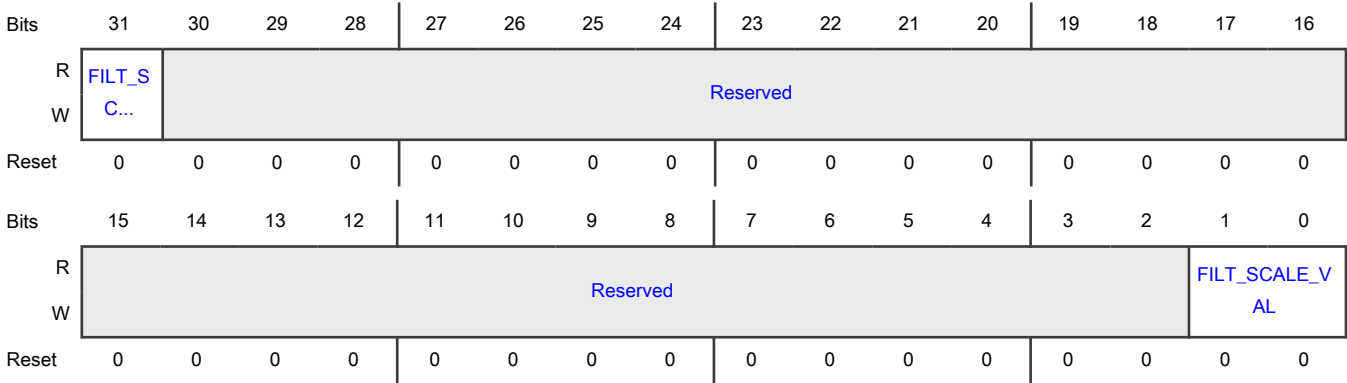

Fields


Field	Function
31 FILT_SCALE_EN	Enable trigger filter prescaler 0b - Disable prescaler 1b - Enabled prescaler
30-2 —	Reserved
1-0 FILT_SCALE_VAL	Filter Prescaler Value 00b - Bypass the clock 01b - Divide 2 10b - Divide 4 11b - Divide 8

13.6.1.79 Trigger filter stat (TRIGFIL_STAT0)

Offset

Register	Offset
TRIGFIL_STAT0	A04h

Diagram

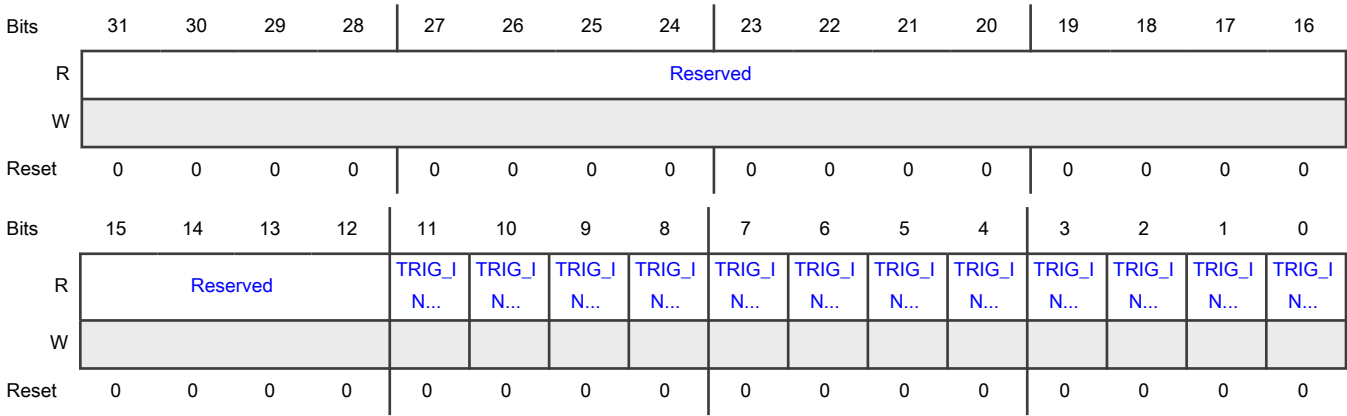

Fields

Field	Function
31-12 —	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
11 TRIG_IN11_VAL	TRIG_IN value 0b - TRIG_IN11 is 0 1b - TRIG_IN11 is 1
10 TRIG_IN10_VAL	TRIG_IN value 0b - TRIG_IN10 is 0 1b - TRIG_IN10 is 1
9 TRIG_IN9_VAL	TRIG_IN value 0b - TRIG_IN9 is 0 1b - TRIG_IN9 is 1
8 TRIG_IN8_VAL	TRIG_IN value 0b - TRIG_IN8 is 0 1b - TRIG_IN8 is 1
7 TRIG_IN7_VAL	TRIG_IN value 0b - TRIG_IN7 is 0 1b - TRIG_IN7 is 1
6 TRIG_IN6_VAL	TRIG_IN value 0b - TRIG_IN6 is 0 1b - TRIG_IN6 is 1
5 TRIG_IN5_VAL	TRIG_IN value 0b - TRIG_IN5 is 0 1b - TRIG_IN5 is 1
4 TRIG_IN4_VAL	TRIG_IN value 0b - TRIG_IN4 is 0 1b - TRIG_IN4 is 1
3 TRIG_IN3_VAL	TRIG_IN value 0b - TRIG_IN3 is 0 1b - TRIG_IN3 is 1
2 TRIG_IN2_VAL	TRIG_IN value 0b - TRIG_IN2 is 0 1b - TRIG_IN2 is 1
1 TRIG_IN1_VAL	TRIG_IN value

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - TRIG_IN1 is 0 1b - TRIG_IN1 is 1
0 TRIG_IN0_VAL	TRIG_IN value 0b - TRIG_IN0 is 0 1b - TRIG_IN0 is 1


13.6.1.80 TRIGFIL control (TRIGFIL0 - TRIGFIL11)

Offset

For a = 0 to 11:

Register	Offset
TRIGFILa	A10h + (a × 4h)

Diagram

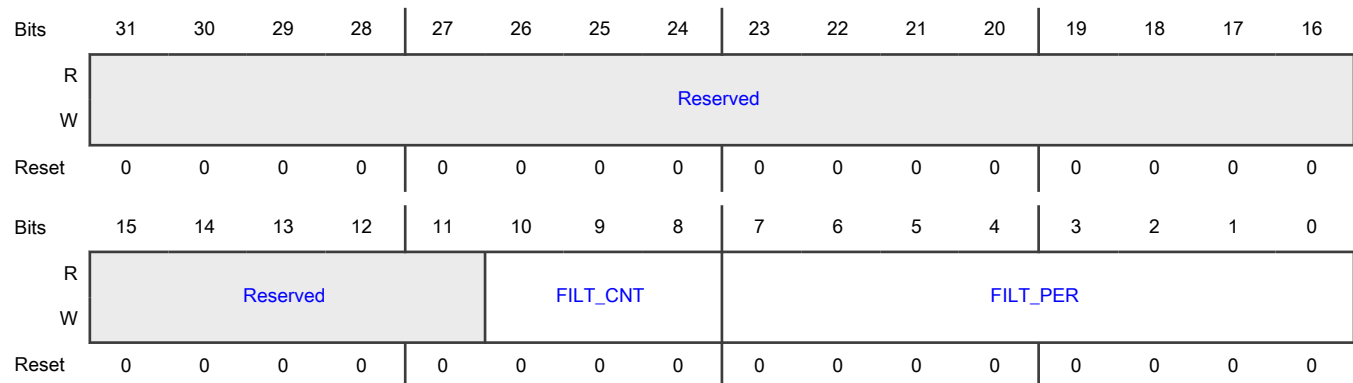

Fields

Field	Function
31-11 —	Reserved
10-8 FILT_CNT	Input Filter Sample Count These bits represent the number of consecutive samples that must agree prior to the input filter accepting an input transition. The number of samples is the decimal value of this field plus three: the bit field value of 0-7 represents 3-10 samples, respectively. The value of FILT_CNT affects the input latency.

Table continues on the next page...

Table continued from the previous page...

Field	Function
7-0 FILT_PER	Input Filter Sample Period These bits represent the sampling period (in IPBus clock cycles) of the fault pin input filter. Each input is sampled multiple times at the rate specified by this field. If FILT_PER is 0x00 (default), then the input filter is bypassed. The value of FILT_PER affects the input latency. When changing values for FILT_PER from one non-zero value to another non-zero value, first write a value of zero to clear the filter.

Chapter 14

System Controller (SYSCON)

14.1 Chip-specific SYSCON information

Table 72. Reference links to related information

Topic	Related module	Reference
Full description	SYSCON	SYSCON
System memory map		Memory map
Clocking		Clock distribution
Power Management		Power Management
Signal multiplexing	Port control	Signal multiplexing

14.1.1 Module instances

This device has one instance of SYSCON module.

14.1.2 Configuration

Configure the SYSCON block as follows:

- No clock configuration is needed. The clock to the SYSCON block is always enabled.
- The SYSCON block controls use of the CLKOUT pin, which must also be configured through Port control module.

14.2 Overview

The SYSCON module provides controls and configurations on the system and peripherals for the multiple functions.

14.2.1 Features

The SYSCON module supports the following features and configurations:

- System and bus configuration
 - AHB matrix priority
 - CPUs control and status
 - CPU debug access
 - CPU LPCAC control
 - NMI source select
 - Calibrate system tick timer
 - Boot control
- System/Peripherals - clock select and control
 - Allows enabling and selection of clocks to individual peripherals and memories
 - Allows configuration of clock dividers
- Memory configuration
 - ROM access

- RAM ECC
- FLASH cache, bus error
- Gray-2-Binary converter
 - Allows decoding gray value coming from OS Event Timer
- Peripherals configuration
 - PWM control
 - CTIMER global start
- Security configuration
 - Security control
 - Security attestation
- Reset control
 - Monitors and release resets to individual peripherals
- Device ID register

14.3 Functional description

The MRCC submodule provides on-chip modules their own dedicated MRCC bits for clock gating, reset control and configuration options. Generally, MRCC register contains a clock configuration (CC = {MRCC_GLB_ACC[peripherals name], MRCC_GLB_CC[peripherals name]}) field for the module's clocks.

NOTE

Before a module can be used, its clocks must be enabled (CC != 00) and it must be released from reset (MRCC_GLB_RST[peripherals name] = 1). If a module is *not* released from reset (MRCC_GLB_RST[peripherals name] = 0), an attempt to access a register within that module is terminated with a bus error.

If a module has a functional clock, its MRCC register may provide options for the clock source, selected by programming the mux select (MUX) field. The selected functional clock source can then be divided by programming the divider (DIV) field.

NOTE

Before configuring a functional clock, the module's clocks must be disabled (CC = 0b00).

14.4 Signals

Table 73. SYSCON pin description

Function	Type	Pin	Description
CLKOUT	O	P0_6, P3_6, P3_8, P4_2	CLKOUT clock output.

14.5 Memory map and register definition

This section includes the SYSCON module memory map and detailed descriptions of all registers.

14.5.1 SYSCON register descriptions

14.5.1.1 SYSCON memory map

SYSCON.syscon base address: 4009_1000h

Offset	Register	Width (In bits)	Access	Reset value
200h	AHB Matrix Remap Control (REMAP)	32	RW	0000_0000h
210h	AHB Matrix Priority Control (AHBMATPRIO)	32	RW	0000_0000h
23Ch	Non-Secure CPU0 System Tick Calibration (CPU0NSTCKCAL)	32	RW	0000_0000h
248h	NMI Source Select (NMISRC)	32	RW	0000_0000h
24Ch	Protect Level Control (PROTLVL)	32	RW	0000_0000h
378h	SLOW_CLK Clock Divider (SLOWCLKDIV)	32	RW	0000_0005h
37Ch	BUS_CLK Clock Divider (BUSCLKDIV)	32	RW	0000_0001h
380h	System Clock Divider (AHBCLKDIV)	32	RW	0000_0000h
388h	FRO_HF_DIV Clock Divider (FROHFDIV)	32	RW	4000_0000h
38Ch	FRO_LF_DIV Clock Divider (FROLFDIV)	32	RW	4000_0000h
3E4h	PLL1_CLK_DIV Clock Divider (PLL1CLKDIV)	32	RW	4000_0000h
3FCh	Clock Configuration Unlock (CLKUNLOCK)	32	RW	0000_0000h
400h	NVM Control (NVM_CTRL)	32	RW	0002_0400h
414h	SmartDMA Interrupt Hijack (SmartDMAINT)	32	RW	See section
470h	Controls RAM Interleave Integration (RAM_INTERLEAVE)	32	RW	0000_0000h
80Ch	CPU Status (CPUSTAT)	32	R	0000_0000h
824h	LPCAC Control (LPCAC_CTRL)	32	RW	0000_0031h
938h	PWM0 Submodule Control (PWM0SUBCTL)	32	RW	0000_0000h
93Ch	PWM1 Submodule Control (PWM1SUBCTL)	32	RW	0000_0000h
940h	CTIMER Global Start Enable (CTIMERGLOBALSTARTEN)	32	RW	0000_0000h
944h	RAM Control (RAM_CTRL)	32	RW	0000_0001h
B60h	Gray to Binary Converter Gray Code [31:0] (GRAY_CODE_LSB)	32	RW	0000_0000h
B64h	Gray to Binary Converter Gray Code [41:32] (GRAY_CODE_MSB)	32	RW	0000_0000h
B68h	Gray to Binary Converter Binary Code [31:0] (BINARY_CODE_LSB)	32	R	0000_0000h
B6Ch	Gray to Binary Converter Binary Code [41:32] (BINARY_CODE_MSB)	32	R	0000_0000h
FA0h	Control Write Access to Security (DEBUG_LOCK_EN)	32	RW	0000_000Ah
FB4h	CPU0 Software Debug Access (SWD_ACCESS_CPU0)	32	RW	0000_0000h
FC0h	Debug Authentication BEACON (DEBUG_AUTH_BEACON)	32	RW	0000_0000h
FF0h	JTAG Chip ID (JTAG_ID)	32	R	0726_802Bh
FF4h	Device Type (DEVICE_TYPE)	32	R	See section
FF8h	Device ID (DEVICE_ID0)	32	R	See section

14.5.1.2 AHB Matrix Remap Control (REMAP)

Offset

Register	Offset
REMAP	200h

Function

The Multilayer AHB Matrix remap for all masters, when they attempt to access the matrix slave port.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	LOCK	Reserved				USB0				Reserved						
W	1															
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserved		PKC		Reserved		DMA0		SmartDMA_D		SmartDMA_I		CPU0_SBUS		Reserved	
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31 LOCK	This 1-bit field provides a mechanism to limit writes to this register to protect its contents. Once set, this bit remains asserted until a system reset. 0b - This register is not locked and can be altered. 1b - This register is locked and cannot be altered until a system reset.
30-26 —	Reserved Read value is undefined, only zero should be written.
25-24 USB0	RAMX0 address remap for USB0 00b - RAMX0: alias space is disabled. 01b - RAMX0: same alias space as CPU0_SBUS
23-14 —	Reserved Read value is undefined, only zero should be written.
13-12 PKC	RAMX0 address remap for PKC 00b - RAMX0: alias space is disabled. 01b - RAMX0: same alias space as CPU0_SBUS

Table continues on the next page...

Table continued from the previous page...

Field	Function
11-10 —	Reserved Read value is undefined, only zero should be written.
9-8 DMA0	RAMX0 address remap for DMA0 00b - RAMX0: alias space is disabled. 01b - RAMX0: same alias space as CPU0_SBUS
7-6 SmartDMA_D	RAMX0 address remap for SmartDMA D-BUS 00b - RAMX0: alias space is disabled. 01b - RAMX0: same alias space as CPU0_SBUS
5-4 SmartDMA_I	RAMX0 address remap for SmartDMA I-BUS 00b - RAMX0: alias space is disabled. 01b - RAMX0: same alias space as CPU0_SBUS
3-2 CPU0_SBUS	RAMX0 address remap for CPU System bus 00b - RAMX0: alias space is disabled. 01b - RAMX0: alias space is enabled. It's linear address space from bottom of system ram. The start address is $0x20000000 + (\text{system ram size} - \text{RAMX size}) * 1024$.
1-0 —	Reserved Read value is undefined, only zero should be written.

14.5.1.3 AHB Matrix Priority Control (AHBMATPRIO)

Offset

Register	Offset
AHBMATPRIO	210h

Function

The Multilayer AHB Matrix arbitrates between masters, when they attempt to access the same matrix slave port at the same time. The priority values are 3 = highest, 0 = lowest. When the priority is the same, the master with the lower master number is given priority.

NOTE

Be careful when modifying this register as improper settings can seriously degrade the performance.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	Reserved				Reserved				Reserved				Reserved			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserved				Reserved				CPU1_SBUS_S mart...				CPU0_SBUS			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-30 —	Reserved
29-28 —	Reserved
27-26 —	Reserved
25-24 USB_FS_ENET	USB-FS bus master priority level 00b - level 0 01b - level 1 10b - level 2 11b - level 3
23-22 —	Reserved
21-20 —	Reserved
19-18 —	Reserved
17-16 —	Reserved
15-14 —	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
13-12 PKC_ELS	PKC and ELS bus master priority level 00b - level 0 01b - level 1 10b - level 2 11b - level 3
11-10 —	Reserved
9-8 DMA0	DMA0 controller bus master priority level 00b - level 0 01b - level 1 10b - level 2 11b - level 3
7-6 CPU1_SBUS_S martDMA_D	SmartDMA-D bus master priority level 00b - level 0 01b - level 1 10b - level 2 11b - level 3
5-4 CPU1_CBUS_S martDMA_I	SmartDMA-I bus master priority level 00b - level 0 01b - level 1 10b - level 2 11b - level 3
3-2 CPU0_SBUS	CPU0 S-AHB bus master priority level 00b - level 0 01b - level 1 10b - level 2 11b - level 3
1-0 CPU0_CBUS	CPU0 C-AHB bus master priority level 00b - level 0 01b - level 1 10b - level 2 11b - level 3

14.5.1.4 Non-Secure CPU0 System Tick Calibration (CPU0NSTCKCAL)


Offset

Register	Offset
CPU0NSTCKCAL	23Ch

Function

The CPU0NSTCKCAL register allows software to set up a default value for the SYST_CALIB register in the System Tick Timer of non-secure part of the CPU0.

Diagram

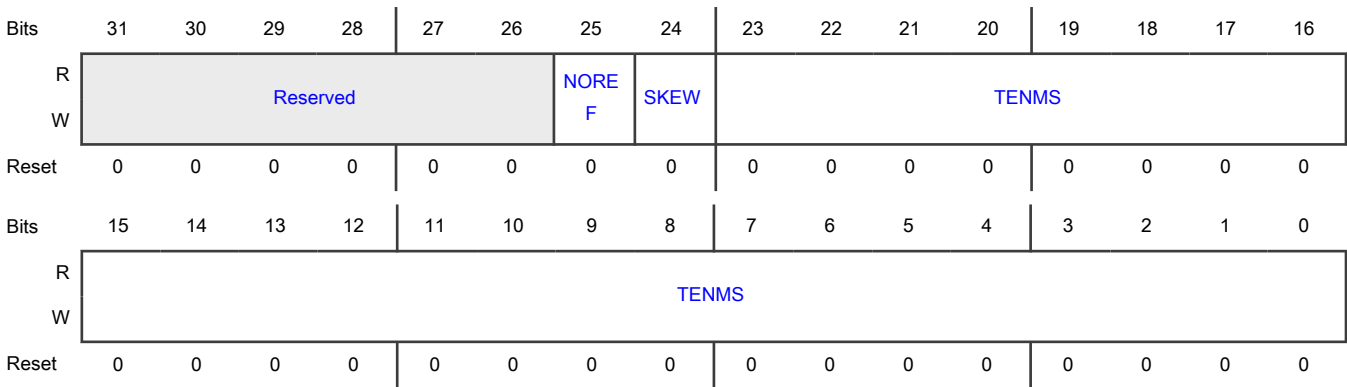

Fields

Field	Function
31-26 —	Reserved
25 NOREF	Indicates whether the device provides a reference clock to the processor. 0b - Reference clock is provided 1b - No reference clock is provided
24 SKEW	Indicates whether the TENMS value is exact. 0b - TENMS value is exact 1b - TENMS value is not exact or not given
23-0 TENMS	Reload value for 10 ms (100 Hz) timing, subject to system clock skew errors. If the value reads as zero, the calibration value is not known.

14.5.1.5 NMI Source Select (NMISRC)

Offset

Register	Offset
NMISRC	248h

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	NMIEN	Reserv	Reserved													
W	CP...	ed														
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserved								IRQCPU0							
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31 NMIENCPU0	Enables the Non-Maskable Interrupt (NMI) source selected by IRQCPU0. 0b - Disable. 1b - Enable.
30 —	Reserved
29-16 —	Reserved
15-8 —	Reserved
7-0 IRQCPU0	The IRQ number of the interrupt that acts as the Non-Maskable Interrupt (NMI) for CPU0, if enabled by NMIENCPU0.


14.5.1.6 Protect Level Control (PROTLVL)

Offset

Register	Offset
PROTLVL	24Ch

Function

This register is privileged access only.

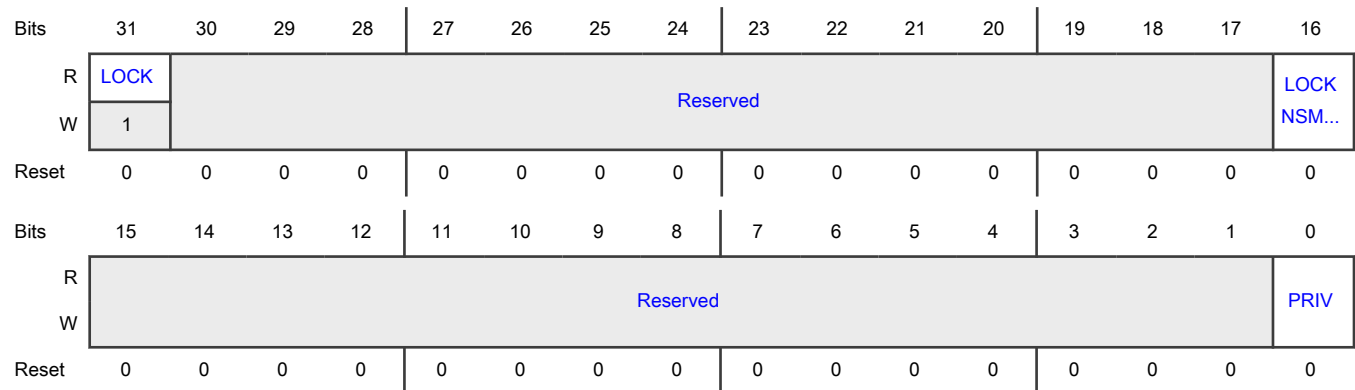
Diagram**Fields**

Field	Function
31 LOCK	This 1-bit field provides a mechanism to limit writes to this register to protect its contents. Once set, this bit remains asserted until a system reset. 0b - This register is not locked and can be altered. 1b - This register is locked and cannot be altered until a system reset.
30-17 —	Reserved
16 LOCKNSMPU	Control write access to Nonsecure MPU memory regions. 0b - Unlock these registers. privileged access to Nonsecure MPU memory regions is allowed. 1b - Disable writes to the MPU_CTRL_NS, MPU_RNR_NS, MPU_RBAR_NS, MPU_RLAR_NS, MPU_RBAR_A_NSn and MPU_RLAR_A_NSn. All writes to the registers are ignored.
15-1 —	Reserved
0 PRIV	Control privileged access of EIM, ERM, Flexcan, MBC, SCG. 0b - privileged access is disabled. the peripherals could be access in user mode. 1b - privileged access is enabled. the peripherals could be access in privilege mode.

14.5.1.7 SLOW_CLK Clock Divider (SLOWCLKDIV)**Offset**

Register	Offset
SLOWCLKDIV	378h

Diagram

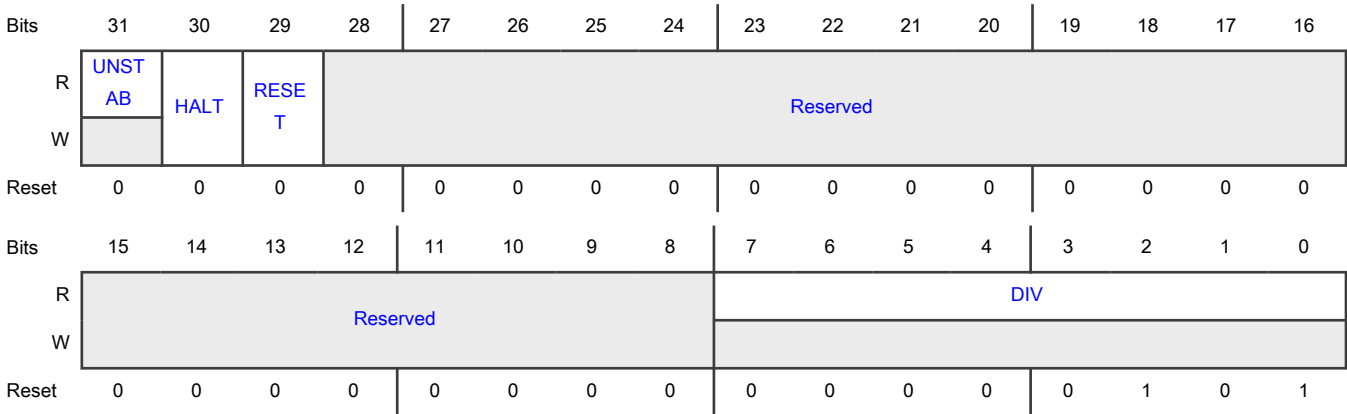

Fields


Field	Function
31 UNSTAB	Divider status flag 0b - Divider clock is stable 1b - Clock frequency is not stable
30 HALT	Halts the divider counter 0b - Divider clock is running 1b - Divider clock is stopped
29 RESET	Resets the divider counter NOTE Limited to configure RESET bit when HALT bit is set to 1 0b - Divider is not reset 1b - Divider is reset
28-8 —	Reserved
7-0 DIV	Clock divider value The divider value = (DIV + 1)

14.5.1.8 BUS_CLK Clock Divider (BUSCLKDIV)

Offset

Register	Offset
BUSCLKDIV	37Ch

Diagram

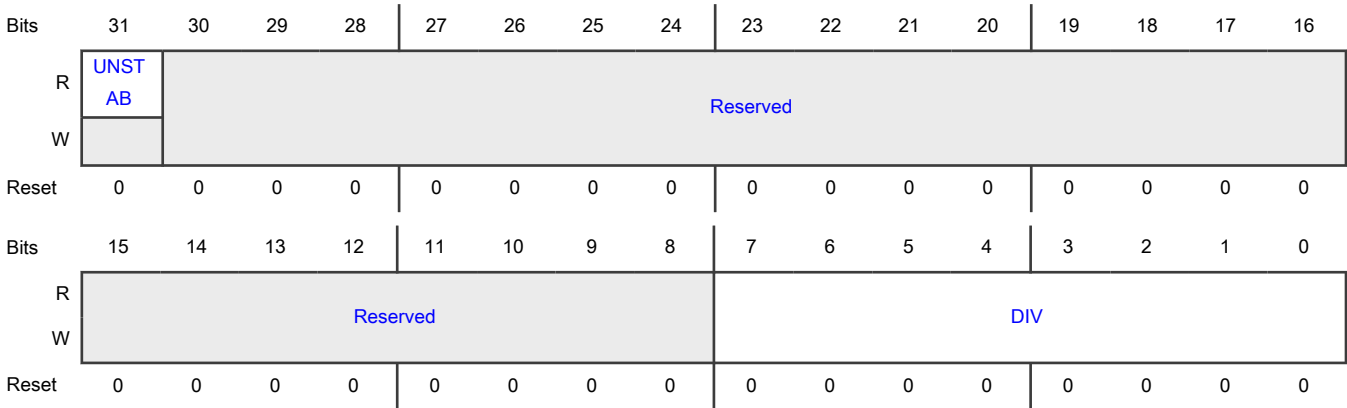

Fields

Field	Function
31 UNSTAB	Divider status flag 0b - Divider clock is stable 1b - Clock frequency is not stable
30-8 —	Reserved
7-0 DIV	Clock divider value The divider value = (DIV + 1)

14.5.1.10 FRO_HF_DIV Clock Divider (FROHFDIV)


Offset

Register	Offset
FROHFDIV	388h

Function

This register is used to generate fro_hf_div clock from fro_hf clock.

Diagram

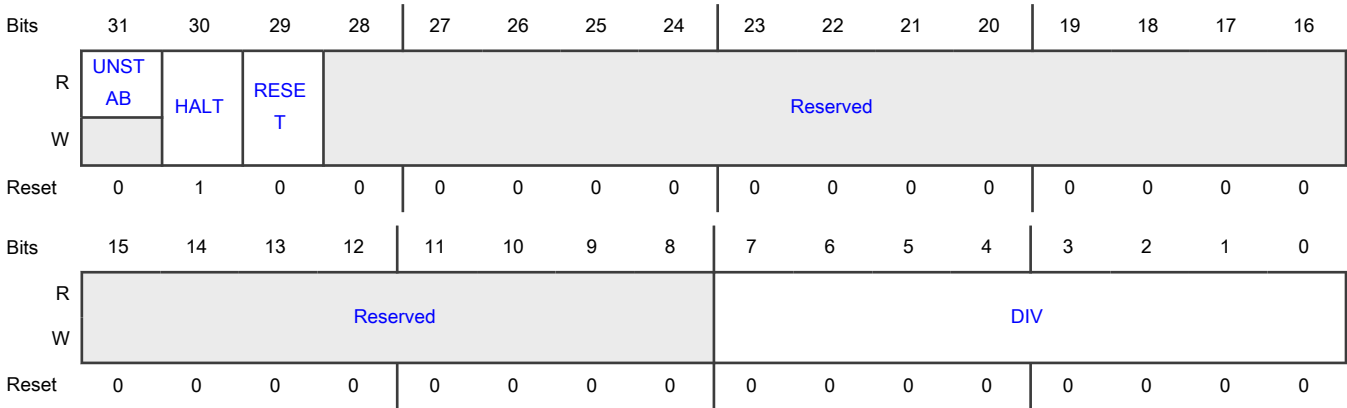

Fields

Field	Function
31 UNSTAB	Divider status flag 0b - Divider clock is stable 1b - Clock frequency is not stable
30 HALT	Halts the divider counter 0b - Divider clock is running 1b - Divider clock is stopped
29 RESET	Resets the divider counter 0b - Divider is not reset 1b - Divider is reset
28-8 —	Reserved
7-0 DIV	Clock divider value The divider value = (DIV + 1)


14.5.1.11 FRO_LF_DIV Clock Divider (FROLFDIV)

Offset

Register	Offset
FROLFDIV	38Ch

Function

This register is used to generate fro_lf_div clock from fro_lf clock.

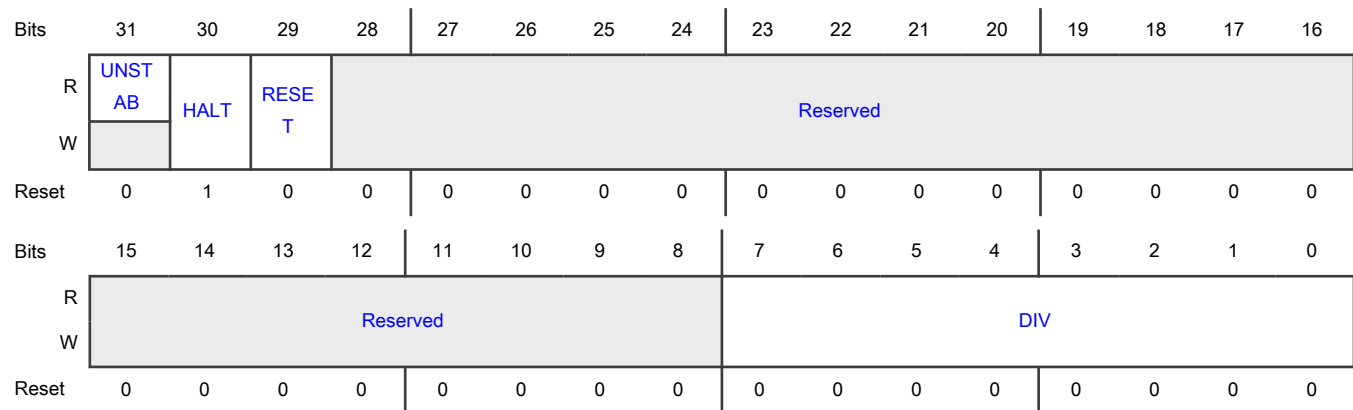Diagram**Fields**


Field	Function
31 UNSTAB	Divider status flag 0b - Divider clock is stable 1b - Clock frequency is not stable
30 HALT	Halts the divider counter 0b - Divider clock is running 1b - Divider clock is stopped
29 RESET	Resets the divider counter 0b - Divider is not reset 1b - Divider is reset
28-8 —	Reserved
7-0 DIV	Clock divider value The divider value = (DIV + 1)

14.5.1.12 PLL1_CLK_DIV Clock Divider (PLL1CLKDIV)**Offset**

Register	Offset
PLL1CLKDIV	3E4h

Function

This register is used to generate pll1_clk_div clock from pll1_clk clock.

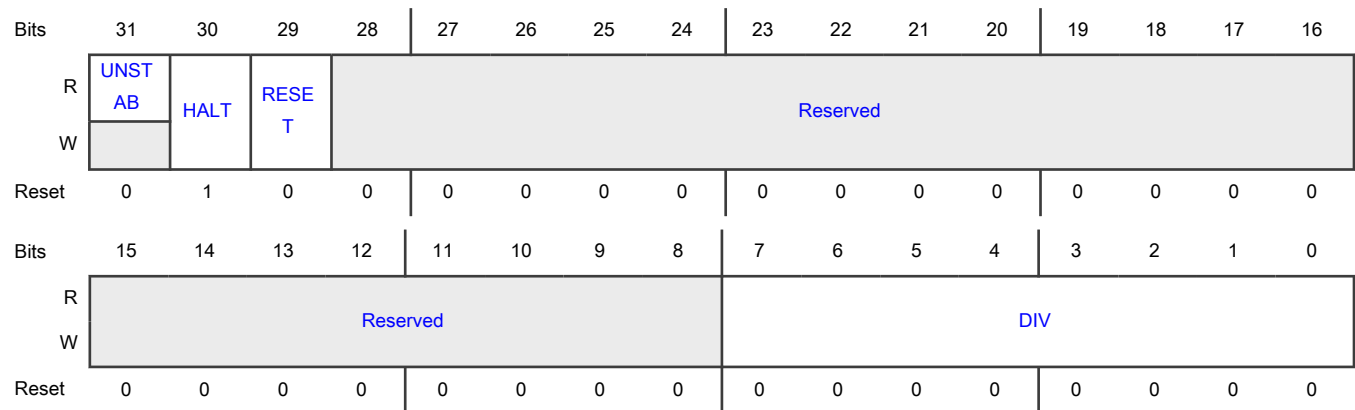Diagram**Fields**

Field	Function
31 UNSTAB	Divider status flag 0b - Divider clock is stable 1b - Clock frequency is not stable
30 HALT	Halts the divider counter 0b - Divider clock is running 1b - Divider clock is stopped
29 RESET	Resets the divider counter 0b - Divider is not reset 1b - Divider is reset
28-8 —	Reserved
7-0 DIV	Clock divider value The divider value = (DIV + 1)


14.5.1.13 Clock Configuration Unlock (CLKUNLOCK)**Offset**

Register	Offset
CLKUNLOCK	3FCh

Function

This register controls access to the clock select and divider configuration registers.

Diagram

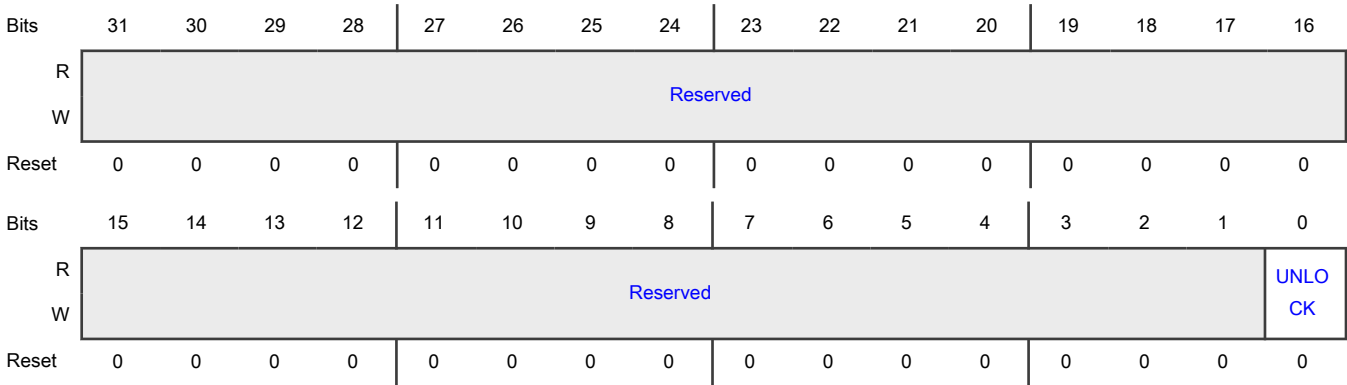

Fields


Field	Function
31-1 —	Reserved
0 UNLOCK	Controls clock configuration registers access (for example, SLOWCLKDIV, BUSCLKDIV, AHBCLKDIV, FROHFDIV, FROLFDIV, PLLxCLKDIV, MRCC_xxx_CLKDIV, MRCC_xxx_CLKSEL, MRCC_GLB_xxx) 0b - Updates are allowed to all clock configuration registers 1b - Freezes all clock configuration registers update.

14.5.1.14 NVM Control (NVM_CTRL)

Offset

Register	Offset
NVM_CTRL	400h

Diagram

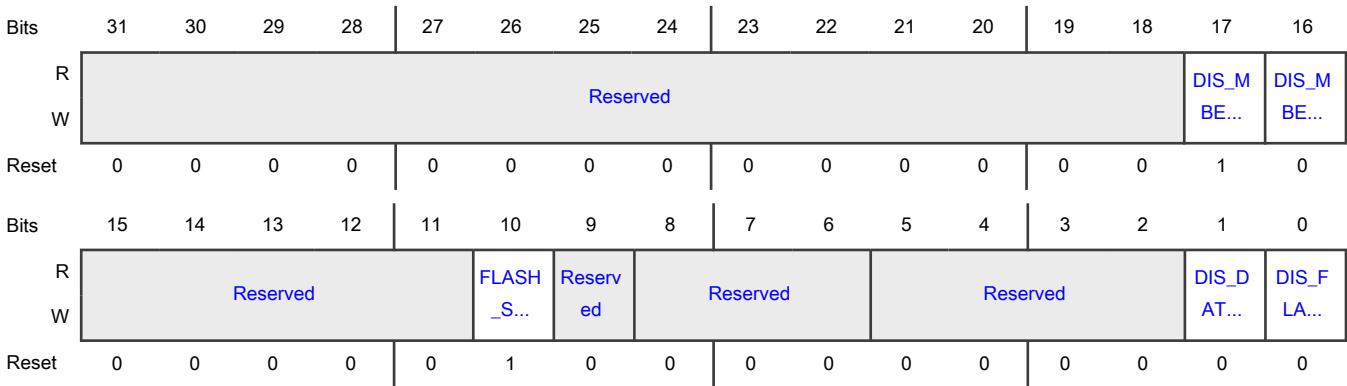

Fields

Field	Function
31-18 —	Reserved
17 DIS_MBECC_ERR_DATA	Bus error on data multi-bit ECC error control NOTE Set this field to 0 if you want to enable flash speculative 0b - Enables bus error on multi-bit ECC error for data 1b - Disables bus error on multi-bit ECC error for data
16 DIS_MBECC_ERR_INST	Bus error on data multi-bit ECC error control NOTE Set this field to 0 if you want to enable flash speculative 0b - Enables bus error on multi-bit ECC error for instruction 1b - Disables bus error on multi-bit ECC error for instruction
15-11 —	Reserved
10 FLASH_STALL_EN	FLASH stall on busy control 0b - No stall on FLASH busy 1b - Stall on FLASH busy
9 —	Reserved Keep the default value.
8-6 —	Reserved
5-2 —	Reserved
1 DIS_DATA_SPEC	Flash data speculation control NOTE If DIS_MBECC_ERR_DATA and/or DIS_MBECC_ERR_INST are set, then speculation will not be enabled, even if this bit is cleared. 0b - Enables data speculation 1b - Disables data speculation
0	Flash speculation control

Table continues on the next page...

Table continued from the previous page...

Field	Function
DIS_FLASH_SPEC	NOTE If DIS_MBECC_ERR_DATA and/or DIS_MBECC_ERR_INST are set, then speculation will not be enabled, even if this bit is cleared. 0b - Enables flash speculation 1b - Disables flash speculation

14.5.1.15 SmartDMA Interrupt Hijack (SmartDMAINT)

Offset

Register	Offset
SmartDMAINT	414h

Function

Bits directly control the SmartDMA hijacking the system interrupts.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R											INT21	INT20	INT19	INT18	INT17	INT16
W	Reserved								Reserved							
Reset	u	u	u	u	u	u	u	u	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	INT15	INT14	INT13	INT12	INT11	INT10	INT9	INT8	INT7	INT6	INT5	INT4	INT3	INT2	INT1	INT0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-24	Reserved Read value is undefined, only zero should be written.
—	
23-22	Reserved Read value is undefined, only zero should be written.
—	
21	SmartDMA hijack NVIC IRQ75

Table continues on the next page...

Table continued from the previous page...

Field	Function
INT21	0b - Disable 1b - Enable
20 INT20	SmartDMA hijack NVIC IRQ74 0b - Disable 1b - Enable
19 INT19	SmartDMA hijack NVIC IRQ73 0b - Disable 1b - Enable
18 INT18	SmartDMA hijack NVIC IRQ72 0b - Disable 1b - Enable
17 INT17	SmartDMA hijack NVIC IRQ71 0b - Disable 1b - Enable
16 INT16	SmartDMA hijack NVIC IRQ64 0b - Disable 1b - Enable
15 INT15	SmartDMA hijack NVIC IRQ62 0b - Disable 1b - Enable
14 INT14	SmartDMA hijack NVIC IRQ59 0b - Disable 1b - Enable
13 INT13	SmartDMA hijack NVIC IRQ41 0b - Disable 1b - Enable
12 INT12	SmartDMA hijack NVIC IRQ40 0b - Disable 1b - Enable
11 INT11	SmartDMA hijack NVIC IRQ39 0b - Disable 1b - Enable

Table continues on the next page...

Table continued from the previous page...

Field	Function
10 INT10	SmartDMA hijack NVIC IRQ36 0b - Disable 1b - Enable
9 INT9	SmartDMA hijack NVIC IRQ34 0b - Disable 1b - Enable
8 INT8	SmartDMA hijack NVIC IRQ33 0b - Disable 1b - Enable
7 INT7	SmartDMA hijack NVIC IRQ32 0b - Disable 1b - Enable
6 INT6	SmartDMA hijack NVIC IRQ31 0b - Disable 1b - Enable
5 INT5	SmartDMA hijack NVIC IRQ29 0b - Disable 1b - Enable
4 INT4	SmartDMA hijack NVIC IRQ28 0b - Disable 1b - Enable
3 INT3	SmartDMA hijack NVIC IRQ27 0b - Disable 1b - Enable
2 INT2	SmartDMA hijack NVIC IRQ26 0b - Disable 1b - Enable
1 INT1	SmartDMA hijack NVIC IRQ23 0b - Disable 1b - Enable
0	SmartDMA hijack NVIC IRQ2

Table continues on the next page...

Table continued from the previous page...


Field	Function
INT0	0b - Disable 1b - Enable

14.5.1.16 Controls RAM Interleave Integration (RAM_INTERLEAVE)

Offset

Register	Offset
RAM_INTERLEAVE	470h

Diagram

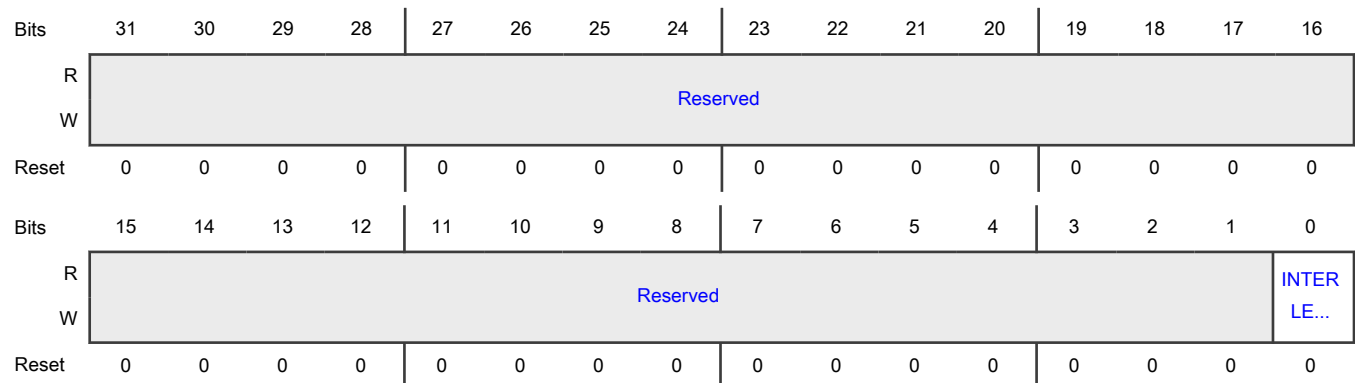

Fields


Field	Function
31-1 —	Reserved
0 INTERLEAVE	Controls RAM access for RAMA1 and RAMA2 0b - RAM access is consecutive. 1b - RAM access is interleaved. This setting is need for PKC L0 memory access.

14.5.1.17 CPU Status (CPUSTAT)

Offset

Register	Offset
CPUSTAT	80Ch

Diagram

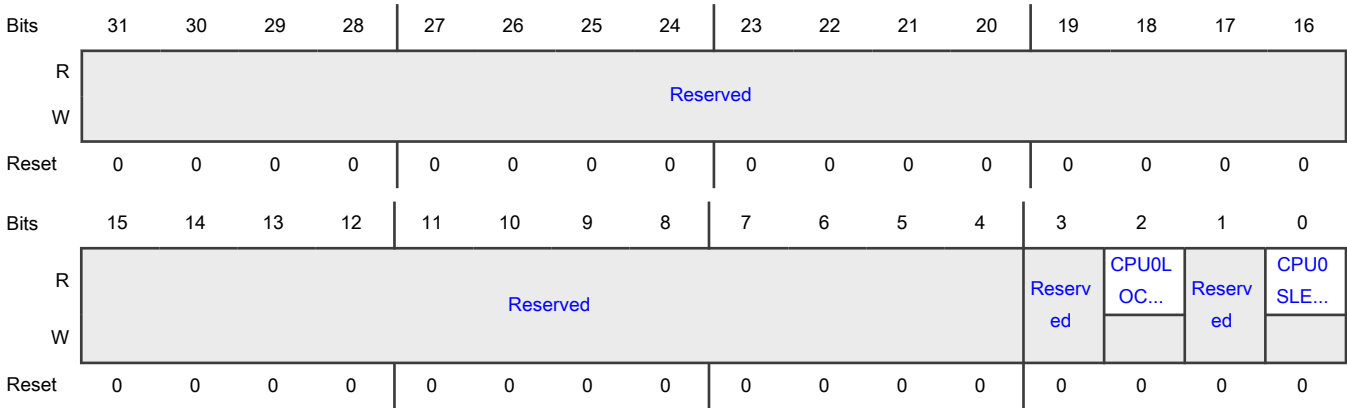

Fields


Field	Function
31-4 —	Reserved
3 —	Reserved
2 CPU0LOCKUP	CPU0 lockup state 0b - CPU is not in lockup 1b - CPU is in lockup
1 —	Reserved
0 CPU0SLEEPIN G	CPU0 sleeping state 0b - CPU is not sleeping 1b - CPU is sleeping

14.5.1.18 LPCAC Control (LPCAC_CTRL)

Offset

Register	Offset
LPCAC_CTRL	824h

Diagram

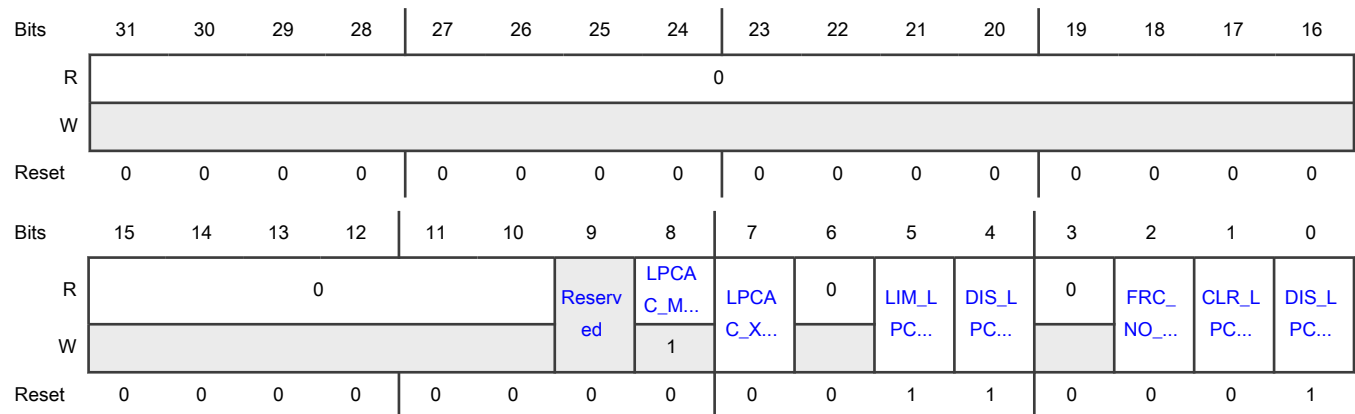

Fields

Field	Function
31-10 —	Reserved
9 —	Reserved
8 LPCAC_MEM_ REQ	Request LPCAC memories. 0b - Configure shared memories RAMX1 as general memories. 1b - Configure shared memories RAMX1 as LPCAC memories, write one lock until a system reset.
7 LPCAC_XOM	LPCAC XOM(eXecute-Only-Memory) attribute control Controls if the instruction fetch attribute is used as part of the address input to the LPCAC. When XOM regions in the internal flash are not configured at the MBC, then this option should be disabled so that instructions and data can be stored within the same cache line. This provides the best cache efficiency for non-XOM applications. When XOM areas in the internal flash are configured at the MBC, then this bit must be set so that instructions and data are cached using separate lines within the LPCAC. 0b - Disabled. 1b - Enabled.
6 —	Reserved
5 LIM_LPCAC_W TBF	Limit LPCAC Write Through Buffer. 0b - Write buffer enabled when transaction is bufferable. 1b - Write buffer enabled when transaction is cacheable and bufferable
4	Disable LPCAC Write Through Buffer.

Table continues on the next page...

Table continued from the previous page...


Field	Function
DIS_LPCAC_W TBF	0b - Enables write through buffer 1b - Disables write through buffer
3 —	Reserved
2 FRC_NO_ALLO C	Forces no allocation. 0b - Forces allocation 1b - Forces no allocation
1 CLR_LPCAC	Clears the cache function. 0b - Unclears the cache 1b - Clears the cache
0 DIS_LPCAC	Disables/enables the cache function. 0b - Enabled 1b - Disabled

14.5.1.19 PWM0 Submodule Control (PWM0SUBCTL)

Offset

Register	Offset
PWM0SUBCTL	938h

Diagram

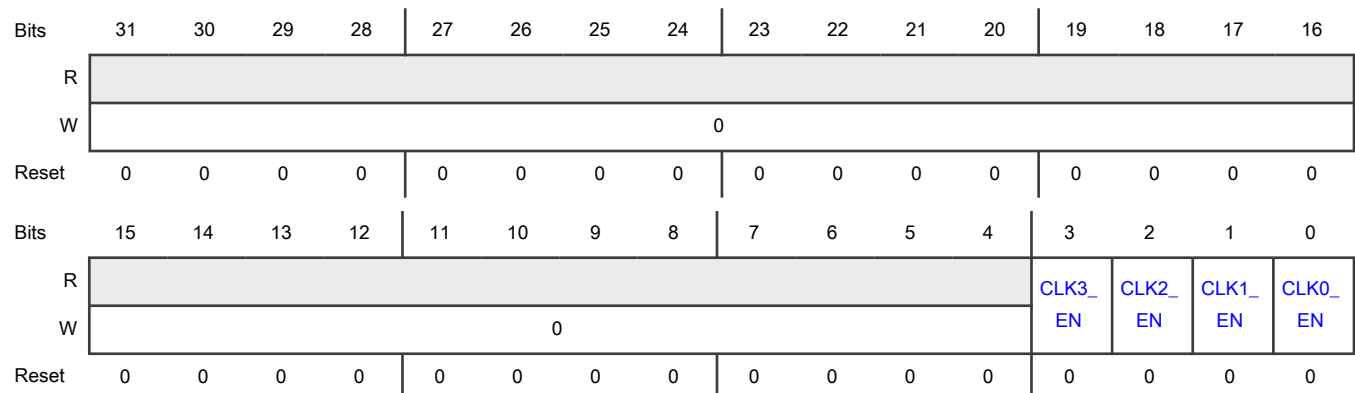

Fields


Field	Function
31-16 —	Reserved
15-4 —	Reserved
3-0 CLKn_EN	Enables PWM0 SUB Clockn 0b - Disable 1b - Enable

14.5.1.20 PWM1 Submodule Control (PWM1SUBCTL)

Offset

Register	Offset
PWM1SUBCTL	93Ch

Diagram

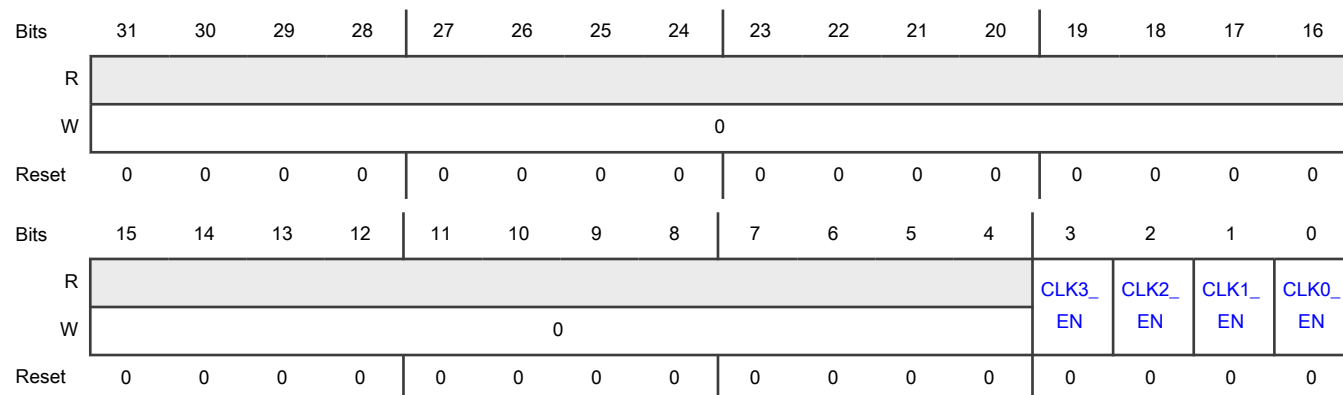

Fields

Field	Function
31-16 —	Reserved
15-4 —	Reserved
3-0	Enables PWM1 SUB Clockn

Table continues on the next page...

Table continued from the previous page...

Field	Function
CLKn_EN	0b - Disable 1b - Enable

14.5.1.21 CTIMER Global Start Enable (CTIMERGLOBALSTARTEN)


Offset

Register	Offset
CTIMERGLOBALSTARTEN	940h

Function

Refer to CTIMERn TCR.AGCEN

Diagram

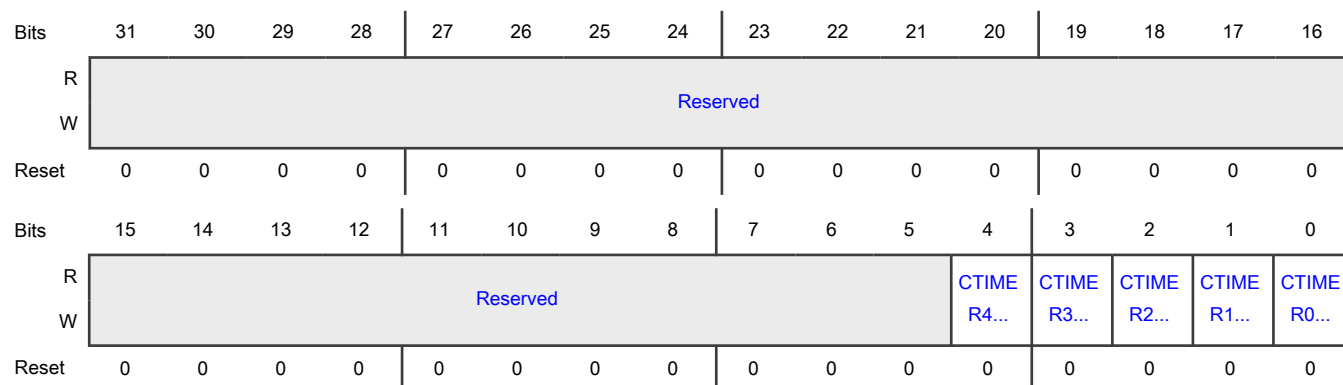

Fields

Field	Function
31-5 —	Reserved
4 CTIMER4_CLK _EN	Enables the CTIMER4 function clock 0b - Disable 1b - Enable
3 CTIMER3_CLK _EN	Enables the CTIMER3 function clock 0b - Disable 1b - Enable

Table continues on the next page...

Table continued from the previous page...

Field	Function
2 CTIMER2_CLK_EN	Enables the CTIMER2 function clock 0b - Disable 1b - Enable
1 CTIMER1_CLK_EN	Enables the CTIMER1 function clock 0b - Disable 1b - Enable
0 CTIMER0_CLK_EN	Enables the CTIMER0 function clock 0b - Disable 1b - Enable

14.5.1.22 RAM Control (RAM_CTRL)

Offset

Register	Offset
RAM_CTRL	944h

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	Reserved								Reserv	Reserv	Reserv	Reserv	RAMC	RAMB	RAMX	RAMA
W									ed	ed	ed	ed	_CG...	_CG...	_CG...	_CG...
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserved								Reserv	Reserv	Reserv	Reserv	Reserv	Reserv	Reserv	RAMA
W									ed	ed	ed	ed	ed	ed	ed	_EC...
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1

Fields

Field	Function
31-24 —	Reserved
23 —	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
22 —	Reserved
21 —	Reserved
20 —	Reserved
19 RAMC.CG_OV ERRIDE	RAMC bank clock gating control 0b - Memory bank clock is gated automatically if no access more than 16 clock cycles 1b - Auto clock gating feature is disabled
18 RAMB.CG_OV ERRIDE	RAMB bank clock gating control 0b - Memory bank clock is gated automatically if no access more than 16 clock cycles 1b - Auto clock gating feature is disabled
17 RAMX.CG_OV ERRIDE	RAMX bank clock gating control 0b - Memory bank clock is gated automatically if no access more than 16 clock cycles 1b - Auto clock gating feature is disabled
16 RAMA.CG_OV ERRIDE	RAMA bank clock gating control, only available when RAMA_ECC_ENABLE = 0. 0b - Memory bank clock is gated automatically if no access more than 16 clock cycles. Auto-clkgating using bank_adapter gives a timeout counter for each bank. Once it expires upon no access per specified width (16 cycles), then clock to the bank is stopped high and one cycle penalty will be incurred if a read is the first access after the break). A write will incur no penalty. 1b - Auto clock gating feature is disabled
15-8 —	Reserved
7 —	Reserved
6 —	Reserved
5 —	Reserved
4 —	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
3 —	Reserved
2 —	Reserved
1 —	Reserved
0 RAMA_ECC_ENABLE	RAMA ECC enable 0b - ECC is disabled 1b - ECC is enabled

14.5.1.23 Gray to Binary Converter Gray Code [31:0] (GRAY_CODE_LSB)


Offset

Register	Offset
GRAY_CODE_LSB	B60h

Function

The Gray Code LSB Input register (CODE_GRAY_LSB) contains the least-significant portion of the Gray code to be converted back to binary.

Diagram

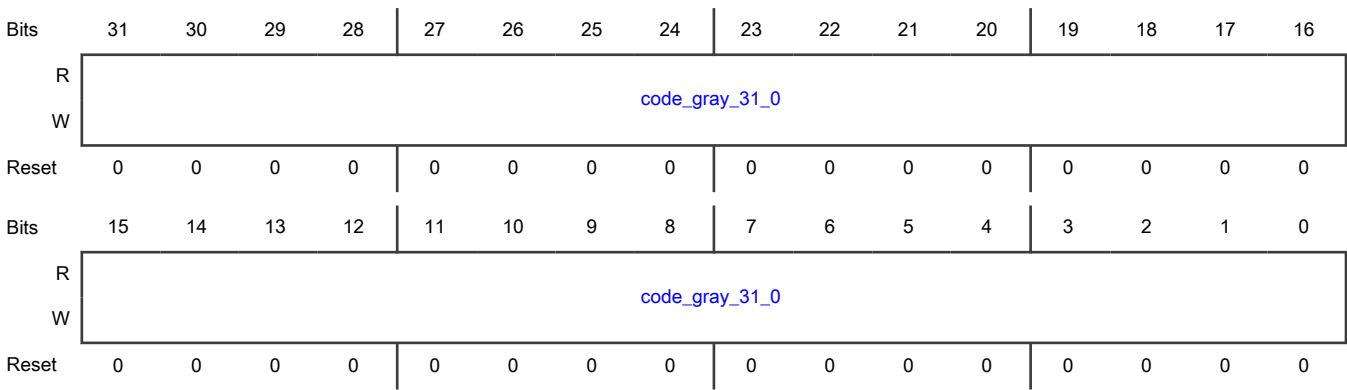

Fields

Field	Function
31-0 code_gray_31_0	Gray code [31:0] CODE_GRAY_LSB is the least-significant 32 bits of the 42-bit Gray code to be converted.

14.5.1.24 Gray to Binary Converter Gray Code [41:32] (GRAY_CODE_MSB)


Offset

Register	Offset
GRAY_CODE_MSB	B64h

Function

The Gray Code MSB Input register (CODE_GRAY_MSB) contains the most-significant portion of the Gray code to be converted back to binary.

Diagram

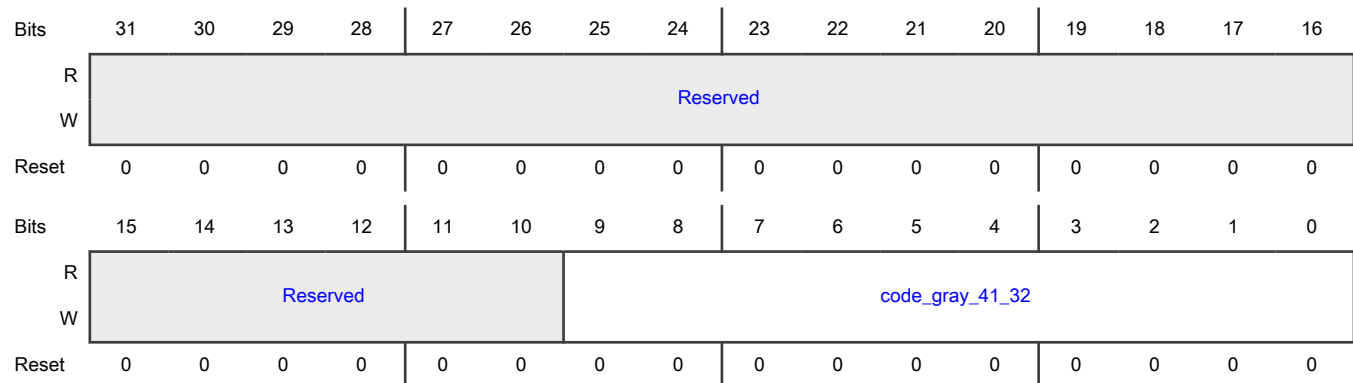

Fields

Field	Function
31-10 —	Reserved
9-0 code_gray_41_32	Gray code [41:32] CODE_GRAY_MSB is the most-significant 10 bits of the 42-bit Gray code to be converted.

14.5.1.25 Gray to Binary Converter Binary Code [31:0] (BINARY_CODE_LSB)


Offset

Register	Offset
BINARY_CODE_LSB	B68h

Function

The Binary Code LSB register (BINARY_CODE_LSB) contains the least-significant portion of the code converted from Gray to binary coding.

Diagram

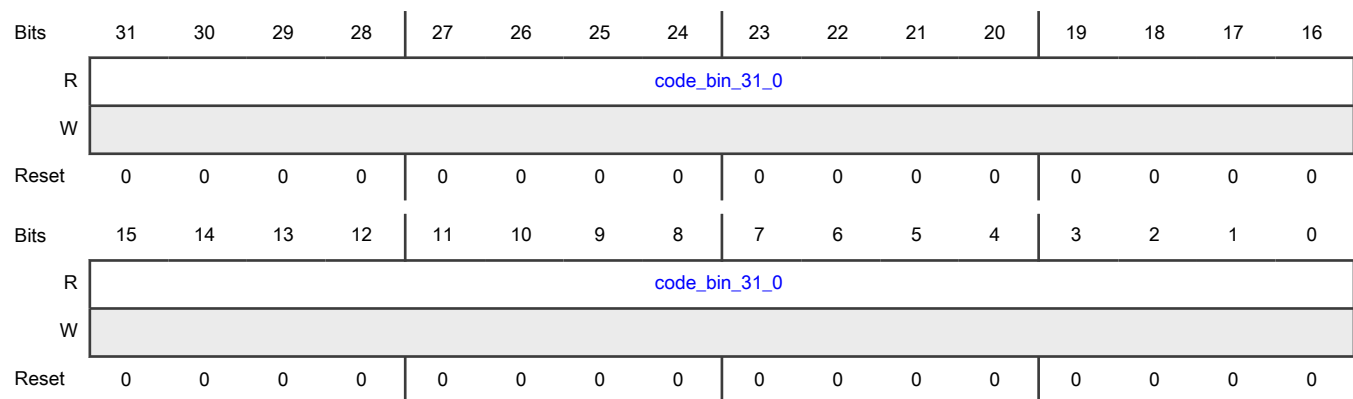

Fields

Field	Function
31-0	Binary code [31:0]
code_bin_31_0	code_bin_31_0 is the least-significant 32 bits of the 42-bit converted code.

14.5.1.26 Gray to Binary Converter Binary Code [41:32] (BINARY_CODE_MSB)


Offset

Register	Offset
BINARY_CODE_MSB	B6Ch

Function

The Binary Code MSB register (BINARY_CODE_MSB) contains the most-significant portion of the code converted from Gray to binary coding.

Diagram

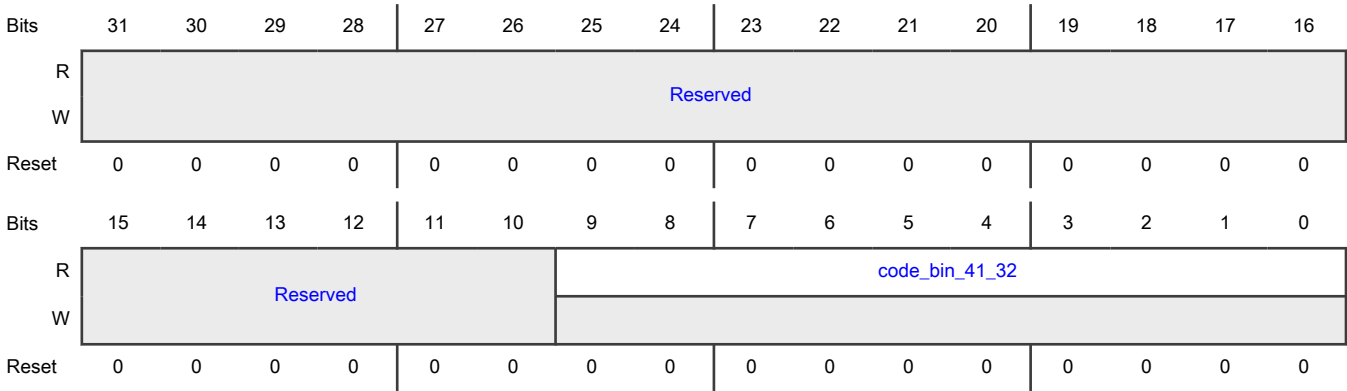

Fields

Field	Function
31-10 —	Reserved
9-0 code_bin_41_32	Binary code [41:32] code_bin_41_32 is the most-significant 10 bits of the 42-bit converted code.

14.5.1.27 Control Write Access to Security (DEBUG_LOCK_EN)


Offset

Register	Offset
DEBUG_LOCK_EN	FA0h

Function

Controls write access to the SWD_ACCESS_CPU0, DEBUG_FEATURES, DEBUG_FEATURES_DP and DEBUG_AUTH_BEACON registers

Diagram

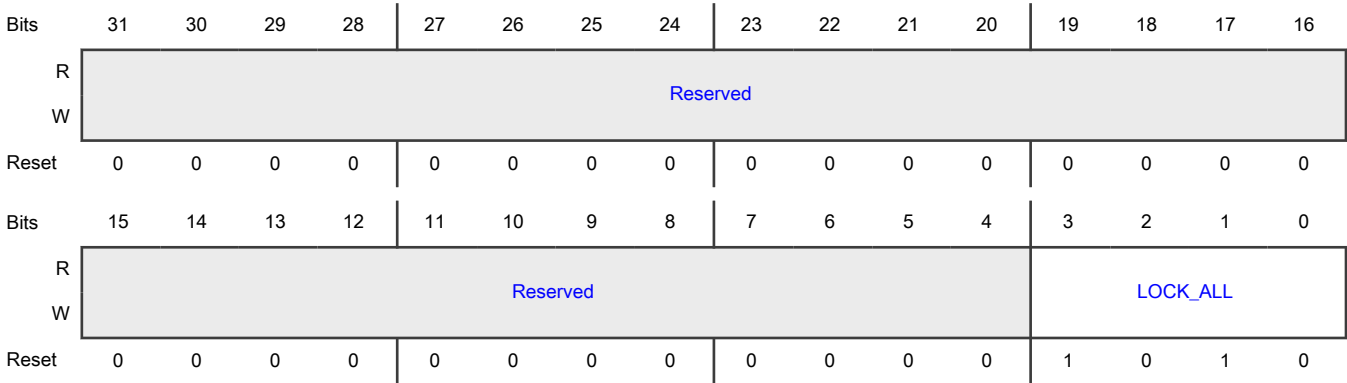

Fields

Field	Function
31-4 —	Reserved
3-0 LOCK_ALL	Controls write access to the security registers Controls write access to the SWD_ACCESS_CPU0, DEBUG_FEATURES, DEBUG_FEATURES_DP and DEBUG_AUTH_BEACON registers 0000b - Any other value than b1010: disables write access to all registers 1010b - Enables write access to all registers

14.5.1.28 CPU0 Software Debug Access (SWD_ACCESS_CPU0)**Offset**


Register	Offset
SWD_ACCESS_CPU0	FB4h

Function

This register is used by ROM during DEBUG authentication mechanism to enable debug access port for CPU0. write once only.

NOTE

Reset on PoR only

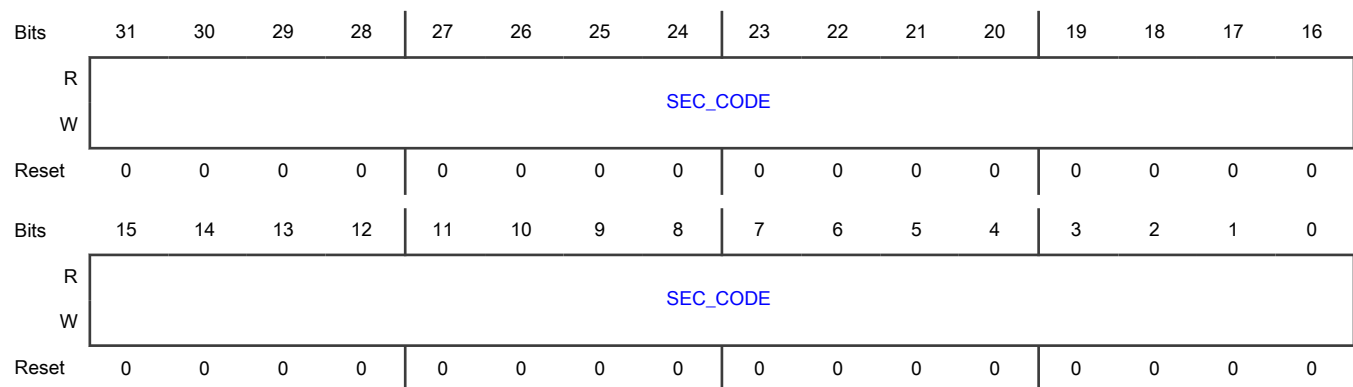Diagram**Fields**

Field	Function
31-0	CPU0 SWD-AP: 0x12345678

Table continues on the next page...

Field	Function
SEC_CODE	0000_0000_0000_0000_0000_0000_0000b - CPU0 DAP is not allowed. Reading back register is read as 0x5. 0001_0010_0011_0100_0101_0110_0111_1000b - Value to write to enable CPU0 SWD access. Reading back register is read as 0xA.

14.5.1.29 Debug Authentication BEACON (DEBUG_AUTH_BEACON)

Offset

Register	Offset
DEBUG_AUTH_BEACON	FC0h


Function

This register protected by security. ROM sets register (read-only) with value received in debug credentials before passing control to the user code. This can be used to extend debug authentication control for the customer application.

NOTE

Reset on PoR only

Diagram

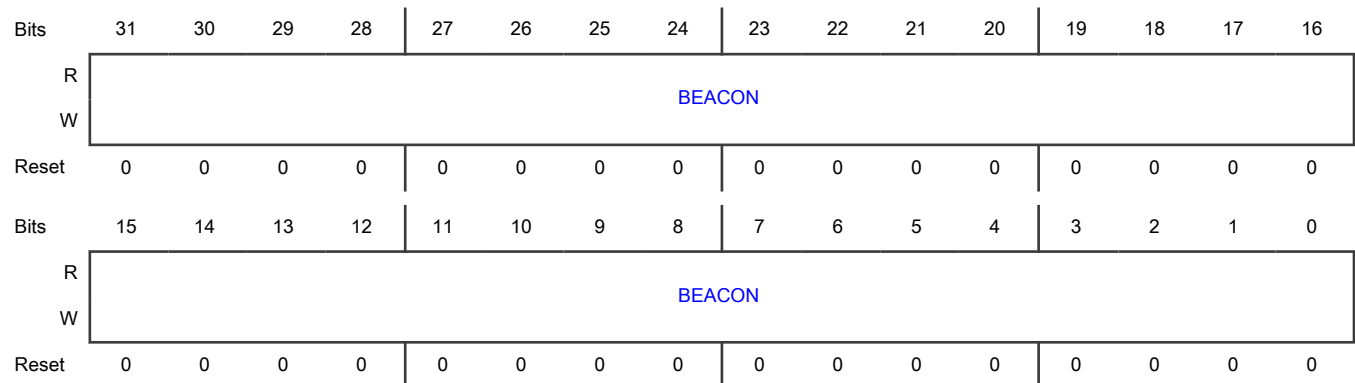

Fields


Field	Function
31-0 BEACON	Sets by the debug authentication code in ROM to pass the debug beacons (Credential Beacon and Authentication Beacon) to the application code.

14.5.1.30 JTAG Chip ID (JTAG_ID)

Offset

Register	Offset
JTAG_ID	FF0h

Diagram

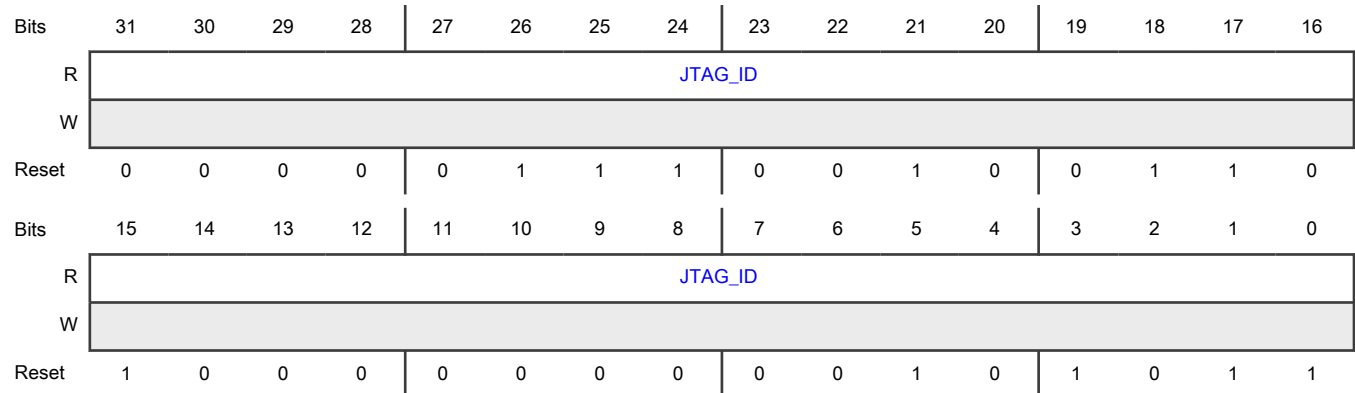

Fields


Field	Function
31-0 JTAG_ID	Indicates the device ID

14.5.1.31 Device Type (DEVICE_TYPE)

Offset

Register	Offset
DEVICE_TYPE	FF4h

Diagram

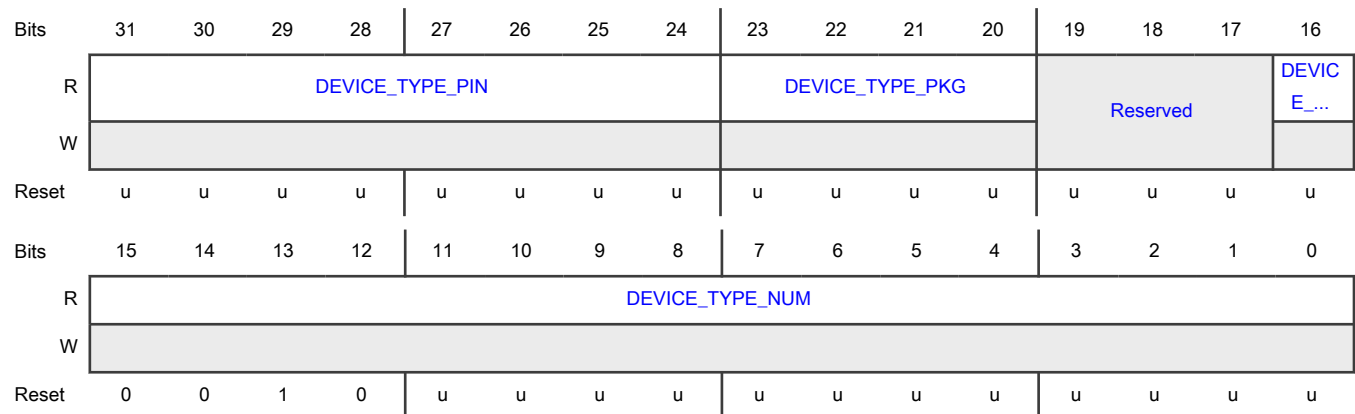

Fields

Field	Function
31-24 DEVICE_TYPE_PIN	Indicates the device's pin number
23-20 DEVICE_TYPE_PKG	Indicates the device's package type 0000b - HLQFP 0001b - HTQFP 0010b - BGA 0011b - HDQFP 0100b - QFN 0101b - CSP 0110b - LQFP
19-17 —	Reserved
16 DEVICE_TYPE_SEC	Indicates the device type 0b - Non Secure 1b - Secure
15-0 DEVICE_TYPE_NUM	Indicates the device part number [15:12]: ... 0010b: Axxx ... [11:0]: 3 digital of the part unumber.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	For example: A156: 0x2156 A176: 0x2176 A256: 0x2256 A346: 0x2346

14.5.1.32 Device ID (DEVICE_ID0)

Offset

Register	Offset
DEVICE_ID0	FF8h

Function

This register contains the device ID.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	Reserved				SECURITY				ROM_REV_MINOR				Reserved			
W																
Reset	0	0	0	0	u	u	u	u	u	u	u	u	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserved								FLASH_SIZE				RAM_SIZE			
W																
Reset	0	0	0	0	0	0	0	0	u	u	u	u	u	u	u	u

Fields

Field	Function
31-28 —	Reserved
27-24 SECURITY	0101b - Secure version. (All values other than 1010b represent the secure version.) 1010b - Non secure version.
23-20	Indicates the device's ROM revision

Table continues on the next page...

Table continued from the previous page...

Field	Function
ROM_REV_MIN OR	
19-8 —	Reserved
7-4 FLASH_SIZE	Indicates the device's flash size 0000b - 32KB. 0001b - 64KB. 0010b - 128KB. 0011b - 256KB. 0100b - 512KB. 0101b - 768KB. 0110b - 1MB. 0111b - 1.5MB. 1000b - 2MB.
3-0 RAM_SIZE	Indicates the device's ram size 0000b - 8KB. 0001b - 16KB. 0010b - 32KB. 0011b - 64KB. 0100b - 96KB. 0101b - 128KB. 0110b - 160KB. 0111b - 192KB. 1000b - 256KB. 1001b - 288KB. 1010b - 352KB. 1011b - 512KB.

14.5.2 MRCC register descriptions

14.5.2.1 MRCC memory map

SYSCON.MRCC base address: 4009_1000h

Offset	Register	Width (In bits)	Access	Reset value
0h	Peripheral Reset Control 0 (MRCC_GLB_RST0)	32	RW	0000_0000h
4h	Peripheral Reset Control Set 0 (MRCC_GLB_RST0_SET)	32	W	0000_0000h
8h	Peripheral Reset Control Clear 0 (MRCC_GLB_RST0_CLR)	32	W	0000_0000h
10h	Peripheral Reset Control 1 (MRCC_GLB_RST1)	32	RW	0000_0000h
14h	Peripheral Reset Control Set 1 (MRCC_GLB_RST1_SET)	32	W	0000_0000h
18h	Peripheral Reset Control Clear 1 (MRCC_GLB_RST1_CLR)	32	W	0000_0000h
20h	Peripheral Reset Control 2 (MRCC_GLB_RST2)	32	RW	0000_0000h
24h	Peripheral Reset Control Set 2 (MRCC_GLB_RST2_SET)	32	W	0000_0000h
28h	Peripheral Reset Control Clear 2 (MRCC_GLB_RST2_CLR)	32	W	0000_0000h
40h	AHB Clock Control 0 (MRCC_GLB_CC0)	32	RW	0001_0000h
44h	AHB Clock Control Set 0 (MRCC_GLB_CC0_SET)	32	W	0001_0000h
48h	AHB Clock Control Clear 0 (MRCC_GLB_CC0_CLR)	32	W	0001_0000h
50h	AHB Clock Control 1 (MRCC_GLB_CC1)	32	RW	0000_0000h
54h	AHB Clock Control Set 1 (MRCC_GLB_CC1_SET)	32	W	0000_0000h
58h	AHB Clock Control Clear 1 (MRCC_GLB_CC1_CLR)	32	W	0000_0000h
60h	AHB Clock Control 2 (MRCC_GLB_CC2)	32	RW	0000_0000h
64h	AHB Clock Control Set 2 (MRCC_GLB_CC2_SET)	32	W	0000_0000h
68h	AHB Clock Control Clear 2 (MRCC_GLB_CC2_CLR)	32	W	0000_0000h
80h	Control Automatic Clock Gating 0 (MRCC_GLB_ACC0)	32	RW	0001_0200h
84h	Control Automatic Clock Gating 1 (MRCC_GLB_ACC1)	32	RW	0000_0000h
88h	Control Automatic Clock Gating 2 (MRCC_GLB_ACC2)	32	RW	0000_040Eh
A0h	I3C0_FCLK clock selection control (MRCC_I3C0_FCLK_CLKSEL)	32	RW	0000_0007h
A4h	I3C0_FCLK clock divider control (MRCC_I3C0_FCLK_CLKDIV)	32	RW	4000_0000h
A8h	CTIMER0 clock selection control (MRCC_CTIMER0_CLKSEL)	32	RW	0000_0007h
ACh	CTIMER0 clock divider control (MRCC_CTIMER0_CLKDIV)	32	RW	4000_0000h
B0h	CTIMER1 clock selection control (MRCC_CTIMER1_CLKSEL)	32	RW	0000_0007h
B4h	CTIMER1 clock divider control (MRCC_CTIMER1_CLKDIV)	32	RW	4000_0000h
B8h	CTIMER2 clock selection control (MRCC_CTIMER2_CLKSEL)	32	RW	0000_0007h
BCh	CTIMER2 clock divider control (MRCC_CTIMER2_CLKDIV)	32	RW	4000_0000h
C0h	CTIMER3 clock selection control (MRCC_CTIMER3_CLKSEL)	32	RW	0000_0007h
C4h	CTIMER3 clock divider control (MRCC_CTIMER3_CLKDIV)	32	RW	4000_0000h
C8h	CTIMER4 clock selection control (MRCC_CTIMER4_CLKSEL)	32	RW	0000_0007h

Table continues on the next page...

Table continued from the previous page...

Offset	Register	Width (In bits)	Access	Reset value
CCh	CTIMER4 clock divider control (MRCC_CTIMER4_CLKDIV)	32	RW	4000_0000h
D4h	WWDT0 clock divider control (MRCC_WWDT0_CLKDIV)	32	RW	0000_0000h
D8h	FLEXIO0 clock selection control (MRCC_FLEXIO0_CLKSEL)	32	RW	0000_0007h
DCh	FLEXIO0 clock divider control (MRCC_FLEXIO0_CLKDIV)	32	RW	4000_0000h
E0h	LPI2C0 clock selection control (MRCC_LPI2C0_CLKSEL)	32	RW	0000_0007h
E4h	LPI2C0 clock divider control (MRCC_LPI2C0_CLKDIV)	32	RW	4000_0000h
E8h	LPI2C1 clock selection control (MRCC_LPI2C1_CLKSEL)	32	RW	0000_0007h
ECh	LPI2C1 clock divider control (MRCC_LPI2C1_CLKDIV)	32	RW	4000_0000h
F0h	LPSP10 clock selection control (MRCC_LPSP10_CLKSEL)	32	RW	0000_0007h
F4h	LPSP10 clock divider control (MRCC_LPSP10_CLKDIV)	32	RW	4000_0000h
F8h	LPSP11 clock selection control (MRCC_LPSP11_CLKSEL)	32	RW	0000_0007h
FCh	LPSP11 clock divider control (MRCC_LPSP11_CLKDIV)	32	RW	4000_0000h
100h	LPUART0 clock selection control (MRCC_LPUART0_CLKSEL)	32	RW	0000_0007h
104h	LPUART0 clock divider control (MRCC_LPUART0_CLKDIV)	32	RW	4000_0000h
108h	LPUART1 clock selection control (MRCC_LPUART1_CLKSEL)	32	RW	0000_0007h
10Ch	LPUART1 clock divider control (MRCC_LPUART1_CLKDIV)	32	RW	4000_0000h
110h	LPUART2 clock selection control (MRCC_LPUART2_CLKSEL)	32	RW	0000_0007h
114h	LPUART2 clock divider control (MRCC_LPUART2_CLKDIV)	32	RW	4000_0000h
118h	LPUART3 clock selection control (MRCC_LPUART3_CLKSEL)	32	RW	0000_0007h
11Ch	LPUART3 clock divider control (MRCC_LPUART3_CLKDIV)	32	RW	4000_0000h
120h	LPUART4 clock selection control (MRCC_LPUART4_CLKSEL)	32	RW	0000_0007h
124h	LPUART4 clock divider control (MRCC_LPUART4_CLKDIV)	32	RW	4000_0000h
128h	USB0 clock selection control (MRCC_USB0_CLKSEL)	32	RW	0000_0003h
12Ch	USB0 clock divider control (MRCC_USB0_CLKDIV)	32	RW	4000_0000h
130h	LPTMR0 clock selection control (MRCC_LPTMR0_CLKSEL)	32	RW	0000_0007h
134h	LPTMR0 clock divider control (MRCC_LPTMR0_CLKDIV)	32	RW	4000_0000h
138h	OSTIMER0 clock selection control (MRCC_OSTIMER0_CLKSEL)	32	RW	0000_0003h
140h	ADCx clock selection control (MRCC_ADC_CLKSEL)	32	RW	0000_0007h
144h	ADCx clock divider control (MRCC_ADC_CLKDIV)	32	RW	4000_0000h
14Ch	CMP0_FUNC clock divider control (MRCC_CMP0_FUNC_CLKDIV)	32	RW	4000_0000h
150h	CMP0_RR clock selection control (MRCC_CMP0_RR_CLKSEL)	32	RW	0000_0007h

Table continues on the next page...

Table continued from the previous page...

Offset	Register	Width (In bits)	Access	Reset value
154h	CMP0_RR clock divider control (MRCC_CMP0_RR_CLKDIV)	32	RW	4000_0000h
15Ch	CMP1_FUNC clock divider control (MRCC_CMP1_FUNC_CLKDIV)	32	RW	4000_0000h
160h	CMP1_RR clock selection control (MRCC_CMP1_RR_CLKSEL)	32	RW	0000_0007h
164h	CMP1_RR clock divider control (MRCC_CMP1_RR_CLKDIV)	32	RW	4000_0000h
16Ch	CMP2_FUNC clock divider control (MRCC_CMP2_FUNC_CLKDIV)	32	RW	4000_0000h
170h	CMP2_RR clock selection control (MRCC_CMP2_RR_CLKSEL)	32	RW	0000_0007h
174h	CMP2_RR clock divider control (MRCC_CMP2_RR_CLKDIV)	32	RW	4000_0000h
178h	DAC0 clock selection control (MRCC_DAC0_CLKSEL)	32	RW	0000_0007h
17Ch	DAC0 clock divider control (MRCC_DAC0_CLKDIV)	32	RW	4000_0000h
180h	FLEXCAN0 clock selection control (MRCC_FLEXCAN0_CLKSEL)	32	RW	0000_0007h
184h	FLEXCAN0 clock divider control (MRCC_FLEXCAN0_CLKDIV)	32	RW	4000_0000h
188h	FLEXCAN1 clock selection control (MRCC_FLEXCAN1_CLKSEL)	32	RW	0000_0007h
18Ch	FLEXCAN1 clock divider control (MRCC_FLEXCAN1_CLKDIV)	32	RW	4000_0000h
190h	LPI2C2 clock selection control (MRCC_LPI2C2_CLKSEL)	32	RW	0000_0007h
194h	LPI2C2 clock divider control (MRCC_LPI2C2_CLKDIV)	32	RW	4000_0000h
198h	LPI2C3 clock selection control (MRCC_LPI2C3_CLKSEL)	32	RW	0000_0007h
19Ch	LPI2C3 clock divider control (MRCC_LPI2C3_CLKDIV)	32	RW	4000_0000h
1A0h	LPUART5 clock selection control (MRCC_LPUART5_CLKSEL)	32	RW	0000_0007h
1A4h	LPUART5 clock divider control (MRCC_LPUART5_CLKDIV)	32	RW	4000_0000h
1A8h	DBG_TRACE clock selection control (MRCC_DBG_TRACE_CLKSEL)	32	RW	0000_0000h
1ACh	DBG_TRACE clock divider control (MRCC_DBG_TRACE_CLKDIV)	32	RW	0000_0000h
1B0h	CLKOUT clock selection control (MRCC_CLKOUT_CLKSEL)	32	RW	0000_0007h
1B4h	CLKOUT clock divider control (MRCC_CLKOUT_CLKDIV)	32	RW	4000_0000h
1B8h	SYSTICK clock selection control (MRCC_SYSTICK_CLKSEL)	32	RW	0000_0003h
1BCh	SYSTICK clock divider control (MRCC_SYSTICK_CLKDIV)	32	RW	4000_0000h

14.5.2.2 Peripheral Reset Control 0 (MRCC_GLB_RST0)

Offset

Register	Offset
MRCC_GLB_RST0	0h

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	FLEXP	QDC1	QDC0	USB0	LPUA	LPUA	LPUA	LPUA	LPUA	LPSPI	LPSPI	LPI2C	LPI2C	FLEXI	AOI1	Reserv
W	WM0				RT4	RT3	RT2	RT1	RT0	1	0	1	0	O0		ed
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	ERM0	EIM0	CRC0	AOI0	DMA0	SMAR	Reserv	UTICK	FREQ	CTIME	CTIME	CTIME	CTIME	CTIME	I3C0	INPUT
W						TDM...	ed	0	ME	R4	R3	R2	R1	R0		MU...
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31 FLEXPWM0	FLEXPWM0 0b - Peripheral is held in reset 1b - Peripheral is released from reset
30 QDC1	QDC1 0b - Peripheral is held in reset 1b - Peripheral is released from reset
29 QDC0	QDC0 0b - Peripheral is held in reset 1b - Peripheral is released from reset
28 USB0	USB0 0b - Peripheral is held in reset 1b - Peripheral is released from reset
27 LPUART4	LPUART4 0b - Peripheral is held in reset 1b - Peripheral is released from reset
26 LPUART3	LPUART3 0b - Peripheral is held in reset 1b - Peripheral is released from reset
25 LPUART2	LPUART2 0b - Peripheral is held in reset 1b - Peripheral is released from reset
24 LPUART1	LPUART1

Table continues on the next page...

Table continued from the previous page...

Field	Function
LPUART1	0b - Peripheral is held in reset 1b - Peripheral is released from reset
23 LPUART0	LPUART0 0b - Peripheral is held in reset 1b - Peripheral is released from reset
22 LPSPI1	LPSPI1 0b - Peripheral is held in reset 1b - Peripheral is released from reset
21 LPSPI0	LPSPI0 0b - Peripheral is held in reset 1b - Peripheral is released from reset
20 LPI2C1	LPI2C1 0b - Peripheral is held in reset 1b - Peripheral is released from reset
19 LPI2C0	LPI2C0 0b - Peripheral is held in reset 1b - Peripheral is released from reset
18 FLEXIO0	FLEXIO0 0b - Peripheral is held in reset 1b - Peripheral is released from reset
17 AOI1	AOI1 0b - Peripheral is held in reset 1b - Peripheral is released from reset
16 —	reserved reserved
15 ERM0	ERM0 0b - Peripheral is held in reset 1b - Peripheral is released from reset
14 EIM0	EIM0 0b - Peripheral is held in reset 1b - Peripheral is released from reset

Table continues on the next page...

Table continued from the previous page...

Field	Function
13 CRC0	CRC0 0b - Peripheral is held in reset 1b - Peripheral is released from reset
12 AOI0	AOI0 0b - Peripheral is held in reset 1b - Peripheral is released from reset
11 DMA0	DMA0 0b - Peripheral is held in reset 1b - Peripheral is released from reset
10 SMARTDMA0	SMARTDMA0 0b - Peripheral is held in reset 1b - Peripheral is released from reset
9 —	reserved reserved
8 UTICK0	UTICK0 0b - Peripheral is held in reset 1b - Peripheral is released from reset
7 FREQME	FREQME 0b - Peripheral is held in reset 1b - Peripheral is released from reset
6 CTIMER4	CTIMER4 0b - Peripheral is held in reset 1b - Peripheral is released from reset
5 CTIMER3	CTIMER3 0b - Peripheral is held in reset 1b - Peripheral is released from reset
4 CTIMER2	CTIMER2 0b - Peripheral is held in reset 1b - Peripheral is released from reset
3 CTIMER1	CTIMER1 0b - Peripheral is held in reset 1b - Peripheral is released from reset

Table continues on the next page...

Table continued from the previous page...

Field	Function
2 CTIMER0	CTIMER0 0b - Peripheral is held in reset 1b - Peripheral is released from reset
1 I3C0	I3C0 0b - Peripheral is held in reset 1b - Peripheral is released from reset
0 INPUTMUX0	INPUTMUX0 0b - Peripheral is held in reset 1b - Peripheral is released from reset

14.5.2.3 Peripheral Reset Control Set n (MRCC_GLB_RST0_SET - MRCC_GLB_RST2_SET)


Offset

Register	Offset
MRCC_GLB_RST0_SET	4h
MRCC_GLB_RST1_SET	14h
MRCC_GLB_RST2_SET	24h

Function

Writing a 1 to a bit position in a write-only MRCC_GLB_RSTn_SET register sets the corresponding position in MRCC_GLB_RSTn.

Diagram

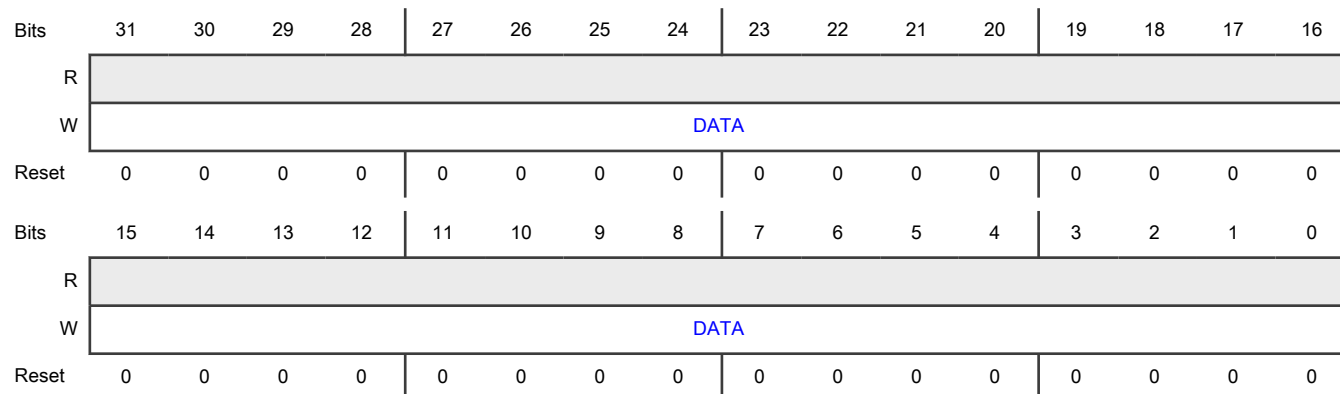

Fields


Field	Function
31-0 DATA	Data array value, refer to corresponding position in MRCC_GLB_RSTn.

14.5.2.4 Peripheral Reset Control Clear n (MRCC_GLB_RST0_CLR - MRCC_GLB_RST2_CLR)**Offset**

Register	Offset
MRCC_GLB_RST0_CLR	8h
MRCC_GLB_RST1_CLR	18h
MRCC_GLB_RST2_CLR	28h

Function

Writing a 1 to a bit position in a write-only MRCC_GLB_RSTn_CLR register clears the corresponding position in MRCC_GLB_RSTn.

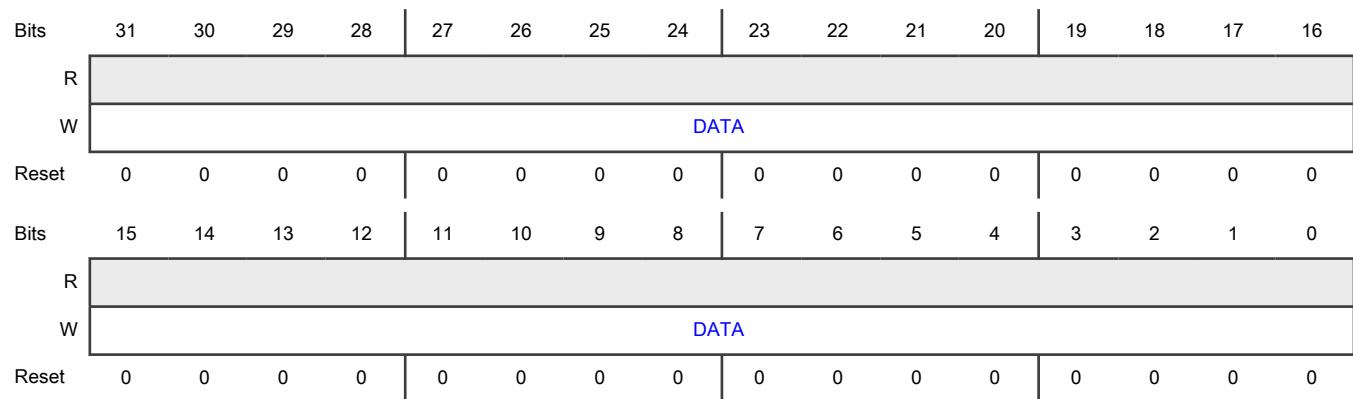Diagram**Fields**

Field	Function
31-0 DATA	Data array value, refer to corresponding position in MRCC_GLB_RSTn.

14.5.2.5 Peripheral Reset Control 1 (MRCC_GLB_RST1)

Offset

Register	Offset
MRCC_GLB_RST1	10h

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	Reserv	Reserv	ADC3	ADC2	Reserv	TRNG	Reserv	PKC0	Reserv	LPUA	LPI2C	LPI2C	FLEX	FLEX	SLCD	PORT
W	ed	ed			ed	0	ed		ed	RT5	3	2	CAN1	CAN0	0	4
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	PORT	PORT	PORT	PORT	OPAM	OPAM	OPAM	OPAM	DAC0	CMP2	CMP1	Reserv	ADC1	ADC0	OSTIM	FLEXP
W	3	2	1	0	P3	P2	P1	P0				ed			ER0	WM1
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31	reserved
—	reserved
30	Reserved
—	
29	ADC3
ADC3	0b - Peripheral is held in reset 1b - Peripheral is released from reset
28	ADC2
ADC2	0b - Peripheral is held in reset 1b - Peripheral is released from reset
27	reserved
—	reserved
26	TRNG0
TRNG0	0b - Peripheral is held in reset 1b - Peripheral is released from reset
25	reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
—	reserved
24 PKC0	PKC0 0b - Peripheral is held in reset 1b - Peripheral is released from reset
23 —	reserved reserved
22 LPUART5	LPUART5 0b - Peripheral is held in reset 1b - Peripheral is released from reset
21 LPI2C3	LPI2C3 0b - Peripheral is held in reset 1b - Peripheral is released from reset
20 LPI2C2	LPI2C2 0b - Peripheral is held in reset 1b - Peripheral is released from reset
19 FLEXCAN1	FLEXCAN1 0b - Peripheral is held in reset 1b - Peripheral is released from reset
18 FLEXCAN0	FLEXCAN0 0b - Peripheral is held in reset 1b - Peripheral is released from reset
17 SLCD0	SLCD0 0b - Peripheral is held in reset 1b - Peripheral is released from reset
16 PORT4	PORT4 0b - Peripheral is held in reset 1b - Peripheral is released from reset
15 PORT3	PORT3 0b - Peripheral is held in reset 1b - Peripheral is released from reset
14	PORT2

Table continues on the next page...

Table continued from the previous page...

Field	Function
PORT2	0b - Peripheral is held in reset 1b - Peripheral is released from reset
13 PORT1	PORT1 0b - Peripheral is held in reset 1b - Peripheral is released from reset
12 PORT0	PORT0 0b - Peripheral is held in reset 1b - Peripheral is released from reset
11 OPAMP3	OPAMP3 0b - Peripheral is held in reset 1b - Peripheral is released from reset
10 OPAMP2	OPAMP2 0b - Peripheral is held in reset 1b - Peripheral is released from reset
9 OPAMP1	OPAMP1 0b - Peripheral is held in reset 1b - Peripheral is released from reset
8 OPAMP0	OPAMP0 0b - Peripheral is held in reset 1b - Peripheral is released from reset
7 DAC0	DAC0 0b - Peripheral is held in reset 1b - Peripheral is released from reset
6 CMP2	CMP2 0b - Peripheral is held in reset 1b - Peripheral is released from reset
5 CMP1	CMP1 0b - Peripheral is held in reset 1b - Peripheral is released from reset
4 —	reserved reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
3 ADC1	ADC1 0b - Peripheral is held in reset 1b - Peripheral is released from reset
2 ADC0	ADC0 0b - Peripheral is held in reset 1b - Peripheral is released from reset
1 OSTIMER0	OSTIMER0 0b - Peripheral is held in reset 1b - Peripheral is released from reset
0 FLEXPWM1	FLEXPWM1 0b - Peripheral is held in reset 1b - Peripheral is released from reset

14.5.2.6 Peripheral Reset Control 2 (MRCC_GLB_RST2)

Offset

Register	Offset
MRCC_GLB_RST2	20h

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	
R	Reserved																
W																	
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	
R	Reserved								MAU0	GPIO4	GPIO3	GPIO2	GPIO1	GPIO0	Reserved		
W																	
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	

Fields

Field	Function
31-10	reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
—	reserved
9 MAU0	MAU0 0b - Peripheral is held in reset 1b - Peripheral is released from reset
8 GPIO4	GPIO4 0b - Peripheral is held in reset 1b - Peripheral is released from reset
7 GPIO3	GPIO3 0b - Peripheral is held in reset 1b - Peripheral is released from reset
6 GPIO2	GPIO2 0b - Peripheral is held in reset 1b - Peripheral is released from reset
5 GPIO1	GPIO1 0b - Peripheral is held in reset 1b - Peripheral is released from reset
4 GPIO0	GPIO0 0b - Peripheral is held in reset 1b - Peripheral is released from reset
3-0 —	reserved reserved

14.5.2.7 AHB Clock Control 0 (MRCC_GLB_CC0)

Offset

Register	Offset
MRCC_GLB_CC0	40h

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	FLEXP	QDC1	QDC0	USB0	LPUA	LPUA	LPUA	LPUA	LPUA	LPSPI	LPSPI	LPI2C	LPI2C	FLEXI	AOI1	Reserv
W	WM0				RT4	RT3	RT2	RT1	RT0	1	0	1	0	O0		ed
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	ERM0	EIM0	CRC0	AOI0	DMA0	SMAR	WWD	UTICK	FREQ	CTIME	CTIME	CTIME	CTIME	CTIME	I3C0	INPUT
W						TDM...	T0	0	ME	R4	R3	R2	R1	R0		MU...
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31 FLEXPWM0	FLEXPWM0 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
30 QDC1	QDC1 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
29 QDC0	QDC0 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
28 USB0	USB0 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
27 LPUART4	LPUART4 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
26 LPUART3	LPUART3 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
25 LPUART2	LPUART2 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
24	LPUART1

Table continues on the next page...

Table continued from the previous page...

Field	Function
LPUART1	0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
23 LPUART0	LPUART0 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
22 LPSPI1	LPSPI1 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
21 LPSPI0	LPSPI0 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
20 LPI2C1	LPI2C1 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
19 LPI2C0	LPI2C0 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
18 FLEXIO0	FLEXIO0 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
17 AOI1	AOI1 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
16 —	reserved reserved
15 ERM0	ERM0 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
14 EIM0	EIM0 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled

Table continues on the next page...

Table continued from the previous page...

Field	Function
13 CRC0	CRC0 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
12 AOI0	AOI0 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
11 DMA0	DMA0 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
10 SMARTDMA0	SMARTDMA0 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
9 WWDT0	WWDT0 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
8 UTICK0	UTICK0 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
7 FREQME	FREQME 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
6 CTIMER4	CTIMER4 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
5 CTIMER3	CTIMER3 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
4 CTIMER2	CTIMER2 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
3 CTIMER1	CTIMER1

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
2 CTIMER0	CTIMER0 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
1 I3C0	I3C0 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
0 INPUTMUX0	INPUTMUX0 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled

14.5.2.8 AHB Clock Control Set 0 (MRCC_GLB_CC0_SET)


Offset

Register	Offset
MRCC_GLB_CC0_SET	44h

Function

Writing a 1 to a bit position in a write-only MRCC_GLB_CCn_SET register sets the corresponding position in MRCC_GLB_CCn.

Diagram

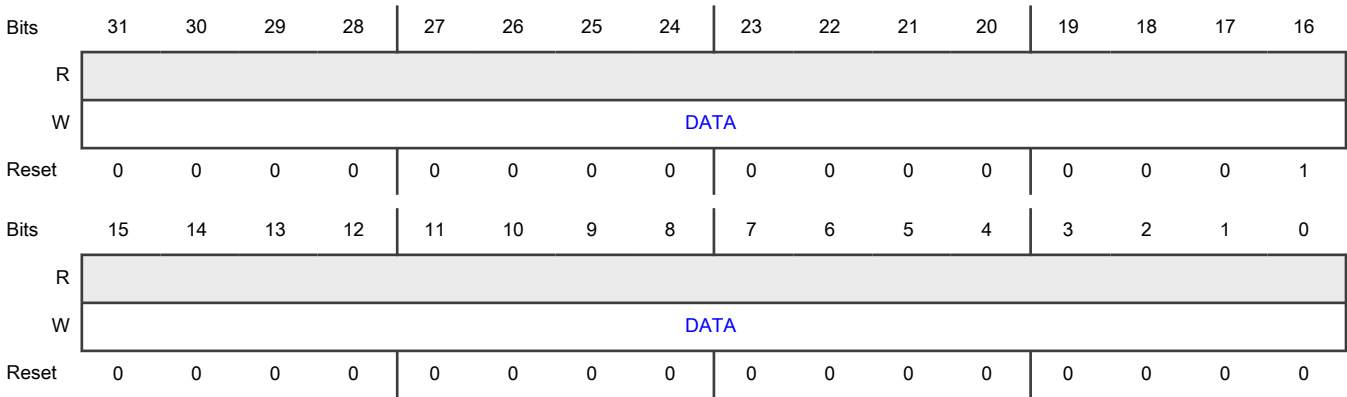

Fields

Field	Function
31-0 DATA	Data array value, refer to corresponding position in MRCC_GLB_CCn.

14.5.2.9 AHB Clock Control Clear 0 (MRCC_GLB_CC0_CLR)**Offset**

Register	Offset
MRCC_GLB_CC0_CLR	48h

Function

Writing a 1 to a bit position in a write-only MRCC_GLB_CCn_CLR register clears the corresponding position in MRCC_GLB_CCn.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R																
W	DATA															
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R																
W	DATA															
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-0 DATA	Data array value, refer to corresponding position in MRCC_GLB_CCn.

14.5.2.10 AHB Clock Control 1 (MRCC_GLB_CC1)**Offset**

Register	Offset
MRCC_GLB_CC1	50h

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	Reserv	Reserv	ADC3	ADC2	UDF0	TRNG0	SGI0	PKC0	TDET0	LPUART5	LPI2C3	LPI2C2	FLEXCAN1	FLEXCAN0	SLCD0	PORT4
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	PORT3	PORT2	PORT1	PORT0	OPAMP3	OPAMP2	OPAMP1	OPAMP0	DAC0	CMP2	CMP1	CMP0	ADC1	ADC0	OSTIMER0	FLEXPWM1
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31 —	Reserved
30 —	Reserved
29 ADC3	ADC3 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
28 ADC2	ADC2 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
27 UDF0	UDF0 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
26 TRNG0	TRNG0 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
25 SGI0	SGI0 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
24 PKC0	PKC0 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled

Table continues on the next page...

Table continued from the previous page...

Field	Function
23 TDET0	TDET0 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
22 LPUART5	LPUART5 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
21 LPI2C3	LPI2C3 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
20 LPI2C2	LPI2C2 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
19 FLEXCAN1	FLEXCAN1 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
18 FLEXCAN0	FLEXCAN0 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
17 SLCD0	SLCD0 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
16 PORT4	PORT4 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
15 PORT3	PORT3 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
14 PORT2	PORT2 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
13 PORT1	PORT1

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
12 PORT0	PORT0 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
11 OPAMP3	OPAMP3 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
10 OPAMP2	OPAMP2 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
9 OPAMP1	OPAMP1 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
8 OPAMP0	OPAMP0 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
7 DAC0	DAC0 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
6 CMP2	CMP2 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
5 CMP1	CMP1 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
4 CMP0	CMP0 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
3 ADC1	ADC1 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled

Table continues on the next page...

Table continued from the previous page...

Field	Function
2 ADC0	ADC0 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
1 OSTIMER0	OSTIMER0 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
0 FLEXPWM1	FLEXPWM1 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled

14.5.2.11 AHB Clock Control Set n (MRCC_GLB_CC1_SET - MRCC_GLB_CC2_SET)


Offset

Register	Offset
MRCC_GLB_CC1_SET	54h
MRCC_GLB_CC2_SET	64h

Function

Writing a 1 to a bit position in a write-only MRCC_GLB_CCn_SET register sets the corresponding position in MRCC_GLB_CCn.

Diagram

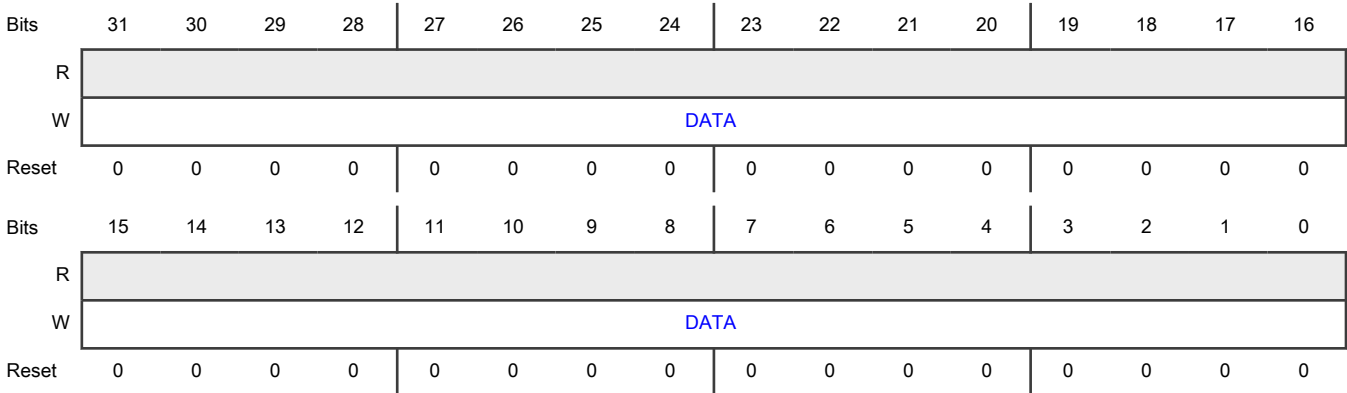

Fields

Field	Function
31-0 DATA	Data array value, refer to corresponding position in MRCC_GLB_CCn.

14.5.2.12 AHB Clock Control Clear n (MRCC_GLB_CC1_CLR - MRCC_GLB_CC2_CLR)**Offset**

Register	Offset
MRCC_GLB_CC1_CLR	58h
MRCC_GLB_CC2_CLR	68h

Function

Writing a 1 to a bit position in a write-only MRCC_GLB_CCn_CLR register clears the corresponding position in MRCC_GLB_CCn.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R																
W	DATA															
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R																
W	DATA															
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0


Fields

Field	Function
31-0 DATA	Data array value, refer to corresponding position in MRCC_GLB_CCn.

14.5.2.13 AHB Clock Control 2 (MRCC_GLB_CC2)**Offset**

Register	Offset
MRCC_GLB_CC2	60h

Diagram

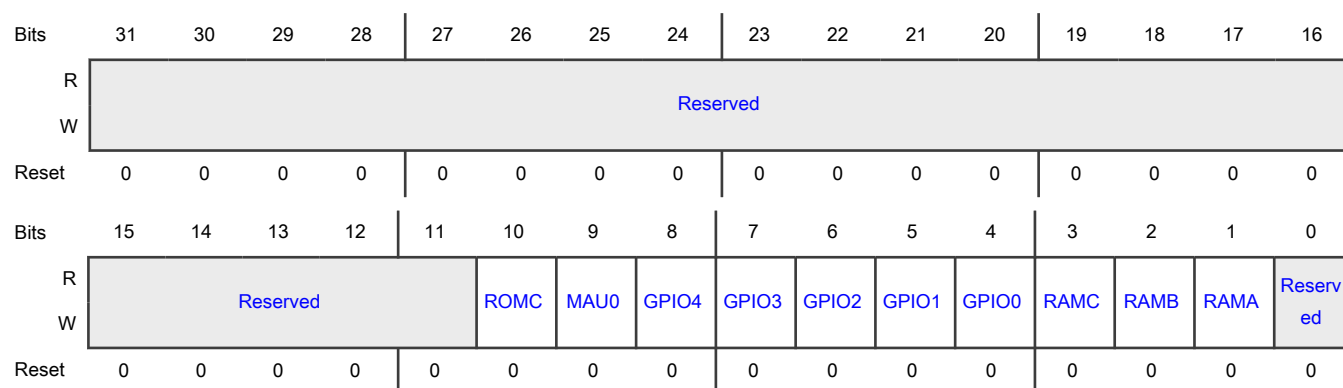

Fields

Field	Function
31-11 —	reserved reserved
10 ROMC	ROMC 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
9 MAU0	MAU0 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
8 GPIO4	GPIO4 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
7 GPIO3	GPIO3 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
6 GPIO2	GPIO2 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
5 GPIO1	GPIO1 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
4 GPIO0	GPIO0 0b - Peripheral clock is disabled

Table continues on the next page...

Table continued from the previous page...

Field	Function
	1b - Peripheral clock is enabled
3 RAMC	RAMC 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
2 RAMB	RAMB 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
1 RAMA	RAMA 0b - Peripheral clock is disabled 1b - Peripheral clock is enabled
0 —	Reserved

14.5.2.14 Control Automatic Clock Gating 0 (MRCC_GLB_ACC0)

Offset

Register	Offset
MRCC_GLB_ACC0	80h

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	FLEXP	QDC1	QDC0	USB0	LPUA	LPUA	LPUA	LPUA	LPUA	LPSP1	LPSP1	LPI2C	LPI2C	FLEXI	AOI1	Reserv
W	WM0				RT4	RT3	RT2	RT1	RT0	1	0	1	0	O0		ed
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	ERM0	EIM0	CRC0	AOI0	DMA0	SMAR	WWD	UTICK	FREQ	CTIME	CTIME	CTIME	CTIME	CTIME	I3C0	INPUT
W						TDM...	T0	0	ME	R4	R3	R2	R1	R0		MU...
Reset	0	0	0	0	0	0	1	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31 FLEXPWM0	FLEXPWM0 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
30 QDC1	QDC1 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
29 QDC0	QDC0 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
28 USB0	USB0 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
27 LPUART4	LPUART4 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
26 LPUART3	LPUART3 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
25 LPUART2	LPUART2 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
24 LPUART1	LPUART1 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
23 LPUART0	LPUART0 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
22 LPSPI1	LPSPI1 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
21 LPSPI0	LPSPI0

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
20 LPI2C1	LPI2C1 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
19 LPI2C0	LPI2C0 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
18 FLEXIO0	FLEXIO0 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
17 AOI1	AOI1 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
16 —	reserved reserved
15 ERM0	ERM0 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
14 EIM0	EIM0 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
13 CRC0	CRC0 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
12 AOI0	AOI0 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
11 DMA0	DMA0 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled

Table continues on the next page...

Table continued from the previous page...

Field	Function
10 SMARTDMA0	SMARTDMA0 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
9 WWDT0	WWDT0 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
8 UTICK0	UTICK0 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
7 FREQME	FREQME 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
6 CTIMER4	CTIMER4 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
5 CTIMER3	CTIMER3 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
4 CTIMER2	CTIMER2 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
3 CTIMER1	CTIMER1 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
2 CTIMER0	CTIMER0 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
1 I3C0	I3C0 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
0	INPUTMUX0

Table continues on the next page...

Table continued from the previous page...

Field	Function
INPUTMUX0	0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled

14.5.2.15 Control Automatic Clock Gating 1 (MRCC_GLB_ACC1)

Offset

Register	Offset
MRCC_GLB_ACC1	84h

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	Reserv	Reserv	ADC3	ADC2	UDF0	TRNG0	SGI0	PKC0	Reserv	LPUA	LPI2C	LPI2C	FLEX	FLEX	SLCD	PORT
W	ed	ed				0			ed	RT5	3	2	CAN1	CAN0	0	4
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	PORT	PORT	PORT	PORT	OPAM	OPAM	OPAM	OPAM	DAC0	CMP2	CMP1	CMP0	ADC1	ADC0	OSTIM	FLEXP
W	3	2	1	0	P3	P2	P1	P0							ER0	WM1
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31	reserved
—	reserved
30	Reserved
—	
29	ADC3
ADC3	0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
28	ADC2
ADC2	0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled

Table continues on the next page...

Table continued from the previous page...

Field	Function
27 UDF0	UDF0 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
26 TRNG0	TRNG0 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
25 SGI0	SGI0 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
24 PKC0	PKC0 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
23 —	reserved reserved
22 LPUART5	LPUART5 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
21 LPI2C3	LPI2C3 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
20 LPI2C2	LPI2C2 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
19 FLEXCAN1	FLEXCAN1 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
18 FLEXCAN0	FLEXCAN0 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
17 SLCD0	SLCD0 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled

Table continues on the next page...

Table continued from the previous page...

Field	Function
16 PORT4	PORT4 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
15 PORT3	PORT3 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
14 PORT2	PORT2 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
13 PORT1	PORT1 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
12 PORT0	PORT0 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
11 OPAMP3	OPAMP3 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
10 OPAMP2	OPAMP2 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
9 OPAMP1	OPAMP1 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
8 OPAMP0	OPAMP0 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
7 DAC0	DAC0 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
6 CMP2	CMP2

Table continues on the next page...


Table continued from the previous page...

Field	Function
	0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
5 CMP1	CMP1 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
4 CMP0	CMP0 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
3 ADC1	ADC1 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
2 ADC0	ADC0 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
1 OSTIMER0	OSTIMER0 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
0 FLEXPWM1	FLEXPWM1 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled

14.5.2.16 Control Automatic Clock Gating 2 (MRCC_GLB_ACC2)

Offset

Register	Offset
MRCC_GLB_ACC2	88h

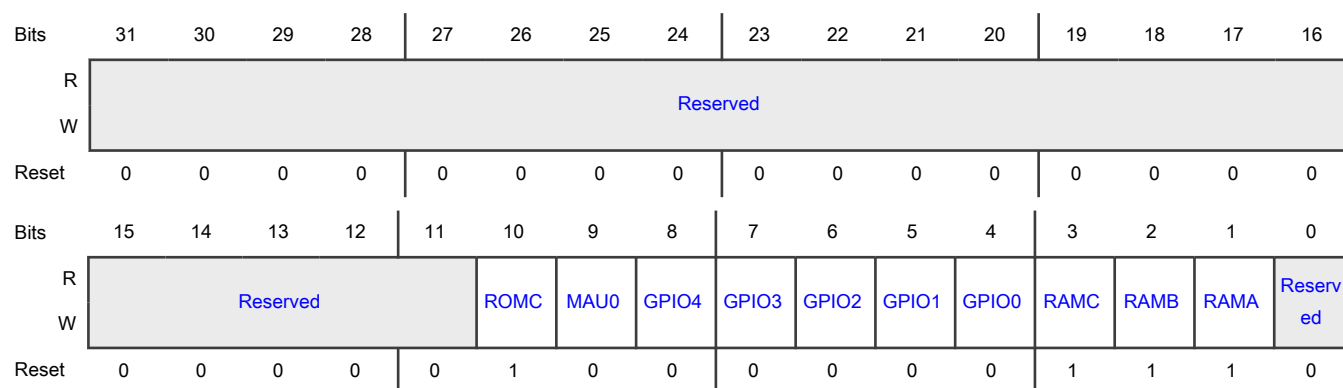Diagram**Fields**

Field	Function
31-11 —	reserved reserved
10 ROMC	ROMC 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
9 MAU0	MAU0 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
8 GPIO4	GPIO4 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
7 GPIO3	GPIO3 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
6 GPIO2	GPIO2 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
5 GPIO1	GPIO1 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
4 GPIO0	GPIO0 0b - Automatic clock gating is disabled

Table continues on the next page...

Table continued from the previous page...


Field	Function
	1b - Automatic clock gating is enabled
3 RAMC	RAMC 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
2 RAMB	RAMB 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
1 RAMA	RAMA 0b - Automatic clock gating is disabled 1b - Automatic clock gating is enabled
0	reserved
—	reserved

14.5.2.17 I3C0_FCLK clock selection control (MRCC_I3C0_FCLK_CLKSEL)

Offset

Register	Offset
MRCC_I3C0_FCLK_CLKSEL	A0h

Diagram

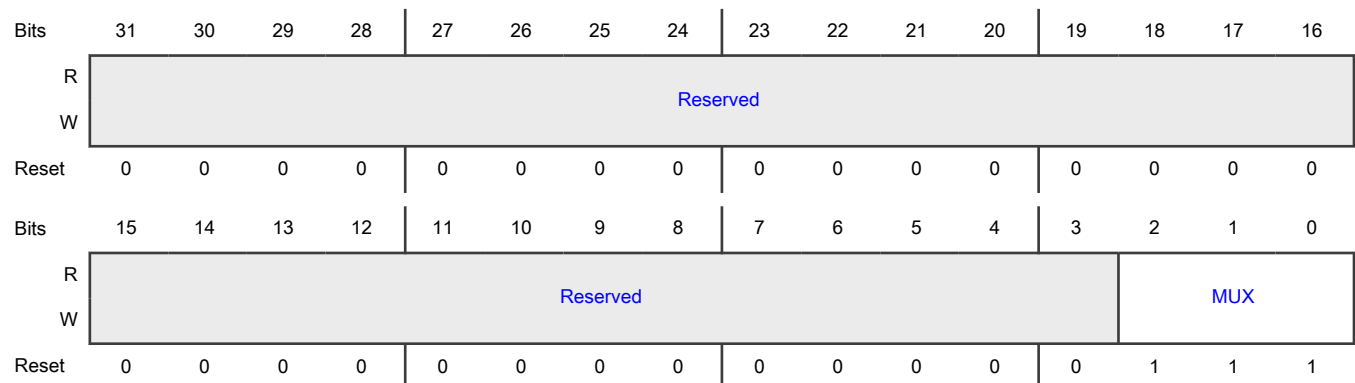

Fields


Field	Function
31-3	reserved
—	reserved
2-0 MUX	Functional Clock Mux Select Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. 000b - FRO_LF_DIV 010b - FRO_HF_DIV 011b - CLK_IN 101b - CLK_1M 110b - PLL1_CLK_DIV 111b - Reserved(NO Clock)

14.5.2.18 I3C0_FCLK clock divider control (MRCC_I3C0_FCLK_CLKDIV)

Offset

Register	Offset
MRCC_I3C0_FCLK_CLK DIV	A4h

Diagram

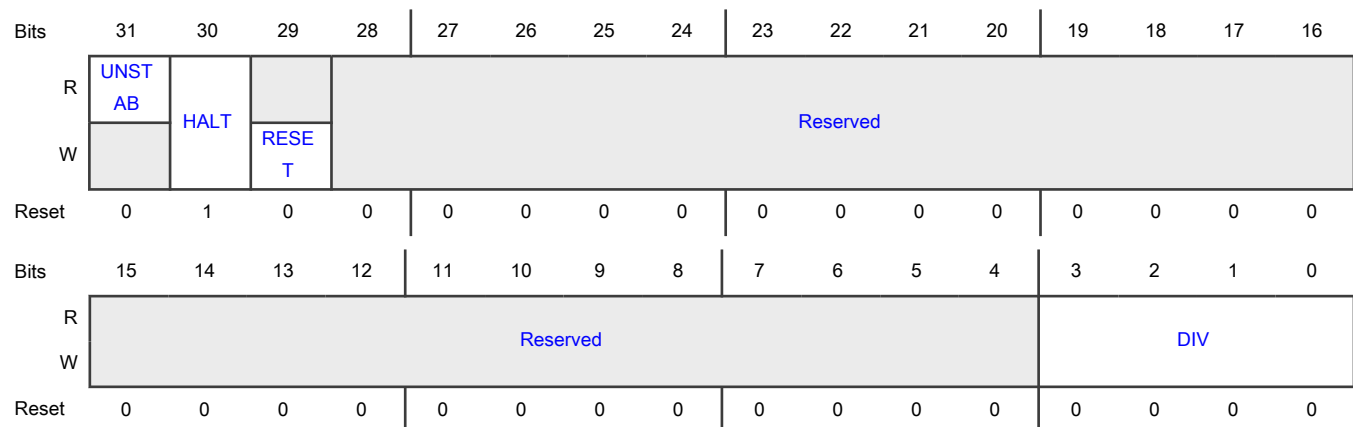

Fields

Field	Function
31	Divider status flag

Table continues on the next page...

Table continued from the previous page...


Field	Function
UNSTAB	Determines the stability of the divider clock. 0b - Divider clock is stable 1b - Clock frequency isn't stable
30 HALT	Halt divider counter Halt divider counter 0b - Divider clock is running 1b - Divider clock is stopped
29 RESET	Reset divider counter Reset divider counter 0b - Divider isn't reset 1b - Divider is reset
28-4 —	reserved reserved
3-0 DIV	Functional Clock Divider Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. divider value = (DIV+1)

14.5.2.19 CTIMER0 clock selection control (MRCC_CTIMER0_CLKSEL)

Offset

Register	Offset
MRCC_CTIMER0_CLKSEL	A8h
EL	

Diagram

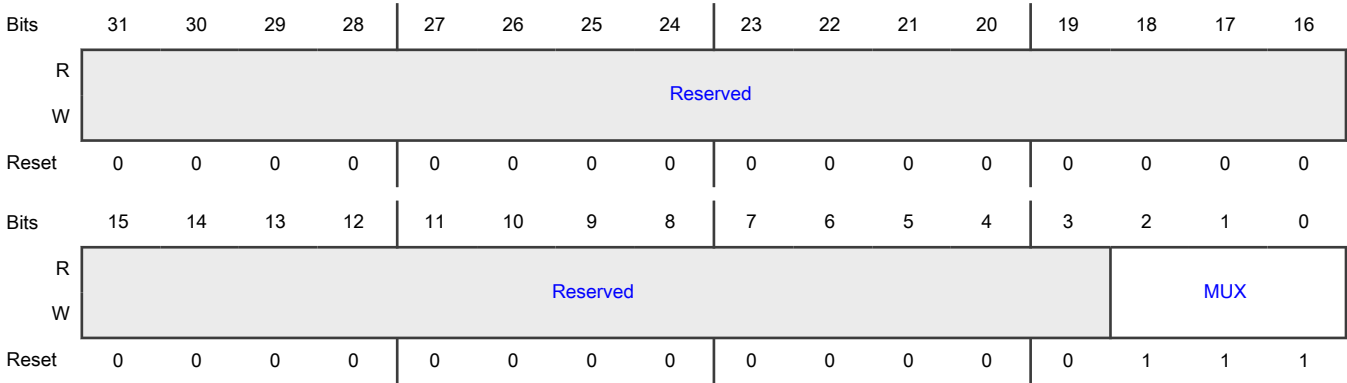

Fields


Field	Function
31-3	reserved
—	reserved
2-0 MUX	Functional Clock Mux Select Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. 000b - FRO_LF_DIV 001b - FRO_HF_GATED 011b - CLK_IN 100b - CLK_16K 101b - CLK_1M 110b - PLL1_CLK_DIV 111b - Reserved(NO Clock)

14.5.2.20 CTIMER0 clock divider control (MRCC_CTIMER0_CLKDIV)

Offset

Register	Offset
MRCC_CTIMER0_CLKDIV	ACh

Diagram

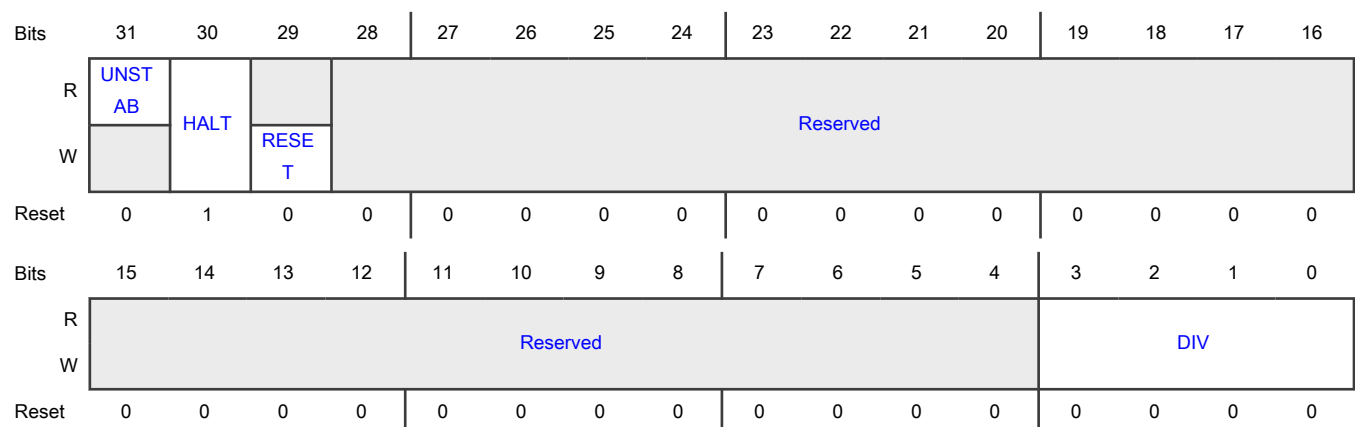

Fields


Field	Function
31 UNSTAB	Divider status flag Determines the stability of the divider clock. 0b - Divider clock is stable 1b - Clock frequency isn't stable
30 HALT	Halt divider counter Halt divider counter 0b - Divider clock is running 1b - Divider clock is stopped
29 RESET	Reset divider counter Reset divider counter 0b - Divider isn't reset 1b - Divider is reset
28-4 —	reserved reserved
3-0 DIV	Functional Clock Divider Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. divider value = (DIV+1)

14.5.2.21 CTIMER1 clock selection control (MRCC_CTIMER1_CLKSEL)

Offset

Register	Offset
MRCC_CTIMER1_CLKSEL	B0h

Diagram

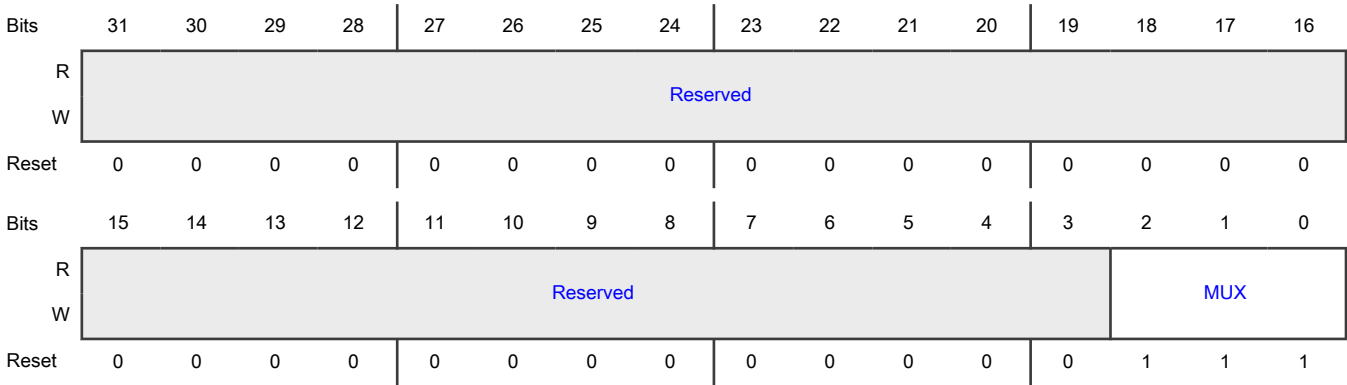


Fields

Field	Function
31-3	reserved
—	reserved
2-0	Functional Clock Mux Select
MUX	Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. 000b - FRO_LF_DIV 001b - FRO_HF_GATED 011b - CLK_IN 100b - CLK_16K 101b - CLK_1M 110b - PLL1_CLK_DIV 111b - Reserved(NO Clock)

14.5.2.22 CTIMER1 clock divider control (MRCC_CTIMER1_CLKDIV)

Offset

Register	Offset
MRCC_CTIMER1_CLKDIV	B4h

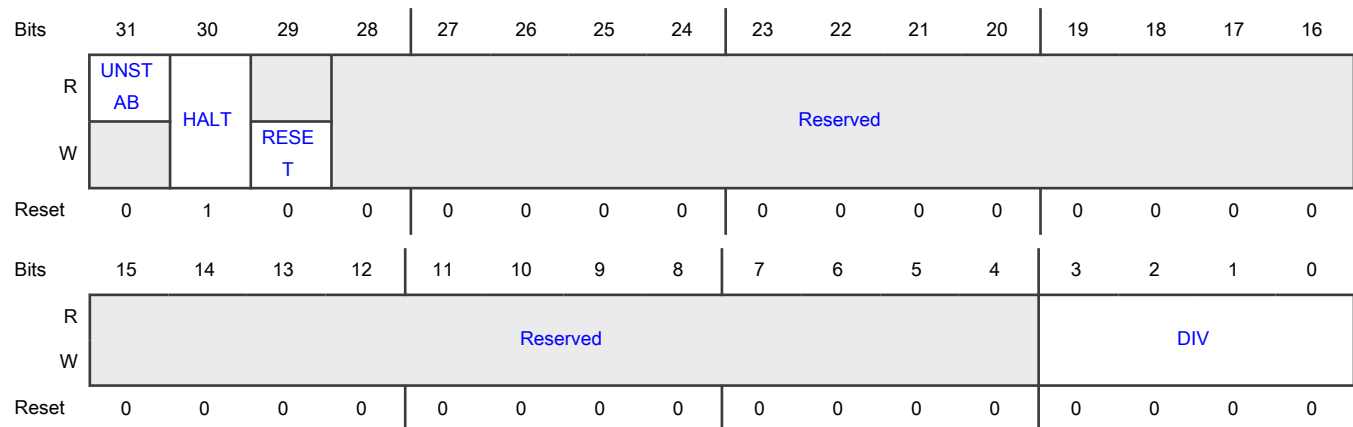Diagram**Fields**


Field	Function
31 UNSTAB	Divider status flag Determines the stability of the divider clock. 0b - Divider clock is stable 1b - Clock frequency isn't stable
30 HALT	Halt divider counter Halt divider counter 0b - Divider clock is running 1b - Divider clock is stopped
29 RESET	Reset divider counter Reset divider counter 0b - Divider isn't reset 1b - Divider is reset
28-4 —	reserved reserved
3-0 DIV	Functional Clock Divider Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. divider value = (DIV+1)

14.5.2.23 CTIMER2 clock selection control (MRCC_CTIMER2_CLKSEL)

Offset

Register	Offset
MRCC_CTIMER2_CLKSEL	B8h

Diagram

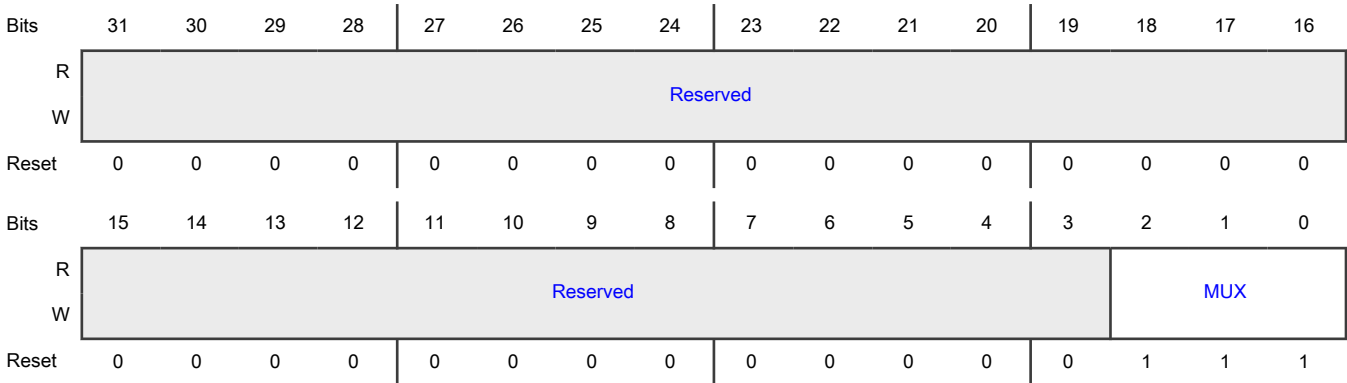

Fields


Field	Function
31-3	reserved
—	reserved
2-0 MUX	Functional Clock Mux Select Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. 000b - FRO_LF_DIV 001b - FRO_HF_GATED 011b - CLK_IN 100b - CLK_16K 101b - CLK_1M 110b - PLL1_CLK_DIV 111b - Reserved(NO Clock)

14.5.2.24 CTIMER2 clock divider control (MRCC_CTIMER2_CLKDIV)

Offset

Register	Offset
MRCC_CTIMER2_CLKDIV	BCh

Diagram

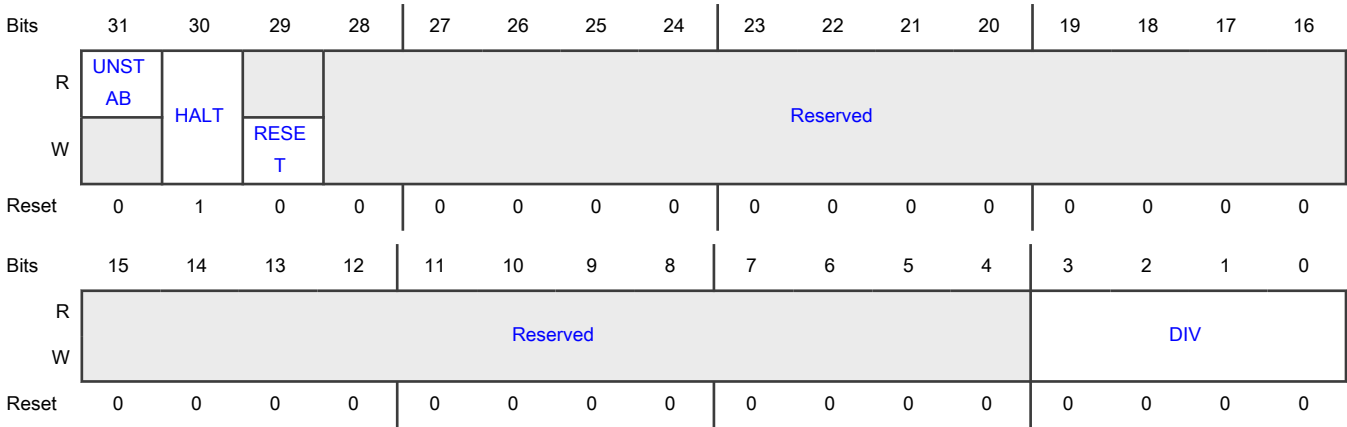

Fields

Field	Function
31 UNSTAB	Divider status flag Determines the stability of the divider clock. 0b - Divider clock is stable 1b - Clock frequency isn't stable
30 HALT	Halt divider counter Halt divider counter 0b - Divider clock is running 1b - Divider clock is stopped
29 RESET	Reset divider counter Reset divider counter 0b - Divider isn't reset 1b - Divider is reset
28-4 —	reserved reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
3-0 DIV	Functional Clock Divider Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. divider value = (DIV+1)

14.5.2.25 CTIMER3 clock selection control (MRCC_CTIMER3_CLKSEL)

Offset

Register	Offset
MRCC_CTIMER3_CLKSEL	C0h

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	Reserved															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserved												MUX			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1	1

Fields

Field	Function
31-3 —	reserved reserved
2-0 MUX	Functional Clock Mux Select Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. 000b - FRO_LF_DIV 001b - FRO_HF_GATED 011b - CLK_IN 100b - CLK_16K

Table continues on the next page...

Table continued from the previous page...


Field	Function
	101b - CLK_1M
	110b - PLL1_CLK_DIV
	111b - Reserved(NO Clock)

14.5.2.26 CTIMER3 clock divider control (MRCC_CTIMER3_CLKDIV)

Offset

Register	Offset
MRCC_CTIMER3_CLKDIV	C4h

Diagram

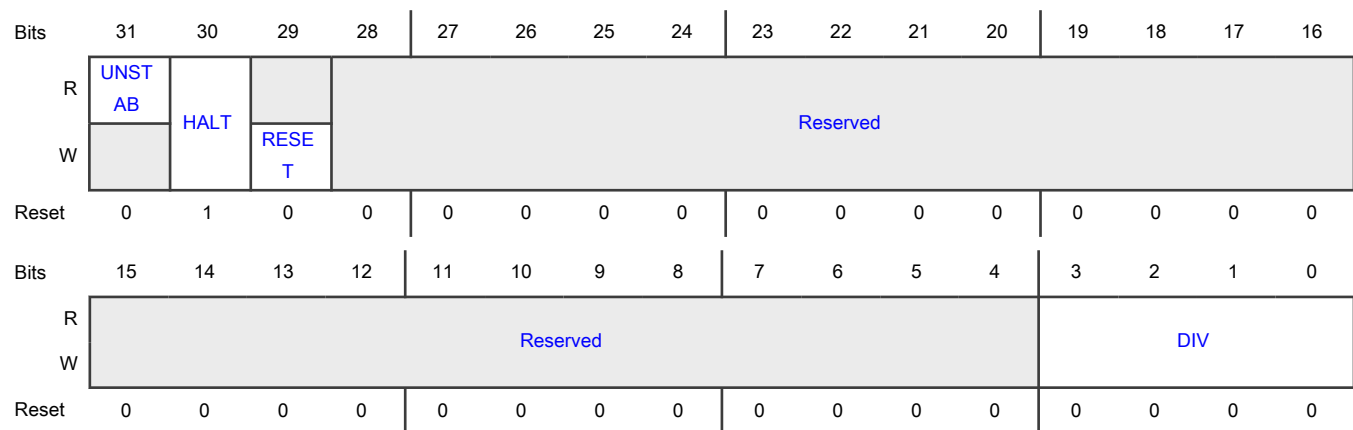

Fields

Field	Function
31 UNSTAB	Divider status flag Determines the stability of the divider clock. 0b - Divider clock is stable 1b - Clock frequency isn't stable
30 HALT	Halt divider counter Halt divider counter 0b - Divider clock is running 1b - Divider clock is stopped

Table continues on the next page...

Table continued from the previous page...

Field	Function
29 RESET	Reset divider counter Reset divider counter 0b - Divider isn't reset 1b - Divider is reset
28-4 —	reserved reserved
3-0 DIV	Functional Clock Divider Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. divider value = (DIV+1)

14.5.2.27 CTIMER4 clock selection control (MRCC_CTIMER4_CLKSEL)

Offset

Register	Offset
MRCC_CTIMER4_CLKSEL	C8h

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	Reserved															
W	Reserved															
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserved												MUX			
W	Reserved												MUX			
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1	1

Fields

Field	Function
31-3 —	reserved reserved
2-0	Functional Clock Mux Select

Table continues on the next page...

Table continued from the previous page...

Field	Function
MUX	Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. 000b - FRO_LF_DIV 001b - FRO_HF_GATED 011b - CLK_IN 100b - CLK_16K 101b - CLK_1M 110b - PLL1_CLK_DIV 111b - Reserved(NO Clock)

14.5.2.28 CTIMER4 clock divider control (MRCC_CTIMER4_CLKDIV)

Offset

Register	Offset
MRCC_CTIMER4_CLKDIV	CCh

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	UNST AB				Reserved											
W		HALT	RESE T													
Reset	0	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserved												DIV			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31 UNSTAB	Divider status flag Determines the stability of the divider clock. 0b - Divider clock is stable

Table continues on the next page...

Table continued from the previous page...


Field	Function
	1b - Clock frequency isn't stable
30 HALT	Halt divider counter Halt divider counter 0b - Divider clock is running 1b - Divider clock is stopped
29 RESET	Reset divider counter Reset divider counter 0b - Divider isn't reset 1b - Divider is reset
28-4 —	reserved reserved
3-0 DIV	Functional Clock Divider Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. divider value = (DIV+1)

14.5.2.29 WWDT0 clock divider control (MRCC_WWDT0_CLKDIV)

Offset

Register	Offset
MRCC_WWDT0_CLKDIV	D4h

Diagram

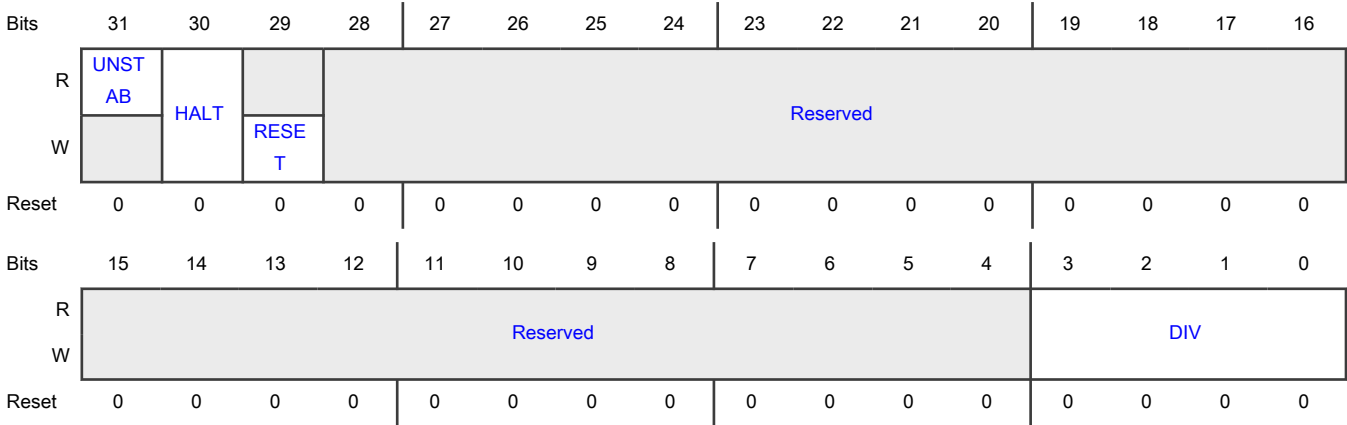


Fields

Field	Function
31 UNSTAB	Divider status flag Determines the stability of the divider clock. 0b - Divider clock is stable 1b - Clock frequency isn't stable
30 HALT	Halt divider counter Halt divider counter 0b - Divider clock is running 1b - Divider clock is stopped
29 RESET	Reset divider counter Reset divider counter 0b - Divider isn't reset 1b - Divider is reset
28-4 —	reserved reserved
3-0 DIV	Functional Clock Divider Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. divider value = (DIV+1)

14.5.2.30 FLEXIO0 clock selection control (MRCC_FLEXIO0_CLKSEL)**Offset**

Register	Offset
MRCC_FLEXIO0_CLKSEL	D8h

Diagram

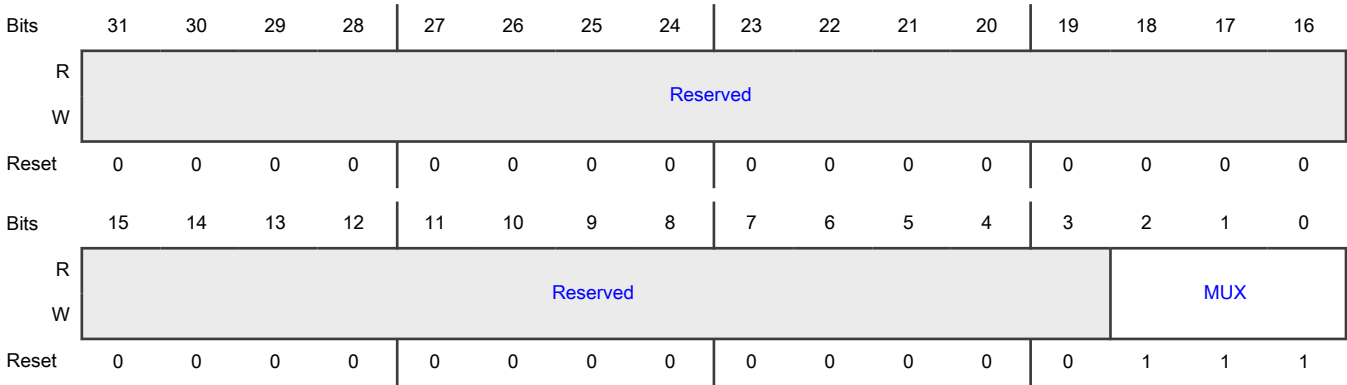

Fields


Field	Function
31-3	reserved
—	reserved
2-0	Functional Clock Mux Select
MUX	Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. 000b - FRO_LF_DIV 001b - FRO_HF_GATED 011b - CLK_IN 101b - CLK_1M 110b - PLL1_CLK_DIV 111b - Reserved(NO Clock)

14.5.2.31 FLEXIO0 clock divider control (MRCC_FLEXIO0_CLKDIV)

Offset

Register	Offset
MRCC_FLEXIO0_CLKDIV	DCh

Diagram

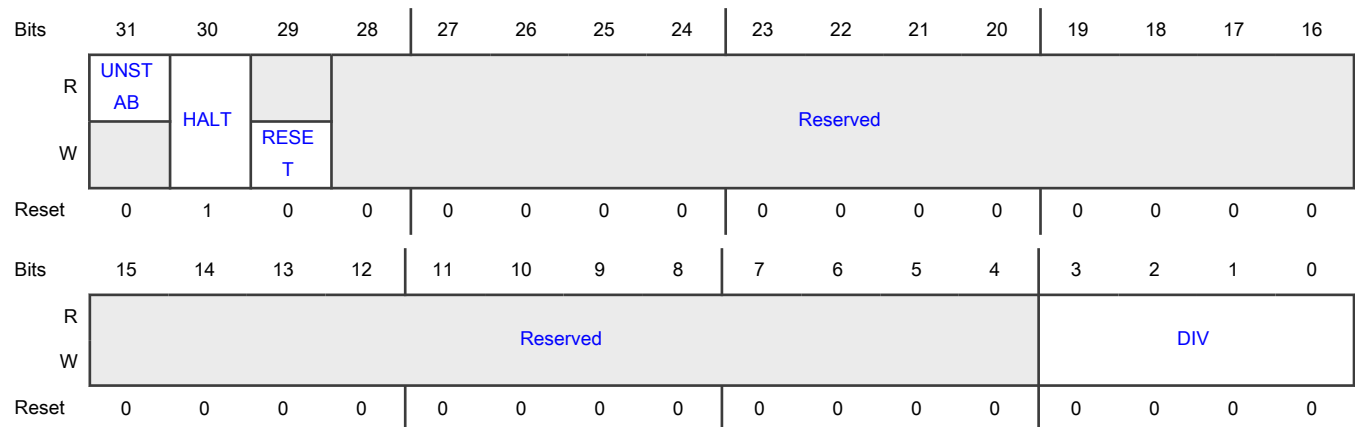

Fields

Field	Function
31 UNSTAB	Divider status flag Determines the stability of the divider clock. 0b - Divider clock is stable 1b - Clock frequency isn't stable
30 HALT	Halt divider counter Halt divider counter 0b - Divider clock is running 1b - Divider clock is stopped
29 RESET	Reset divider counter Reset divider counter 0b - Divider isn't reset 1b - Divider is reset
28-4 —	reserved reserved
3-0 DIV	Functional Clock Divider Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. divider value = (DIV+1)

14.5.2.32 LPI2C0 clock selection control (MRCC_LPI2C0_CLKSEL)

Offset

Register	Offset
MRCC_LPI2C0_CLKSEL	E0h

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	Reserved															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserved												MUX			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1	1

Fields


Field	Function
31-3	reserved
—	reserved
2-0 MUX	Functional Clock Mux Select Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. 000b - FRO_LF_DIV 010b - FRO_HF_DIV 011b - CLK_IN 101b - CLK_1M 110b - PLL1_CLK_DIV 111b - Reserved(NO Clock)

14.5.2.33 LPI2C0 clock divider control (MRCC_LPI2C0_CLKDIV)

Offset

Register	Offset
MRCC_LPI2C0_CLKDIV	E4h

Diagram

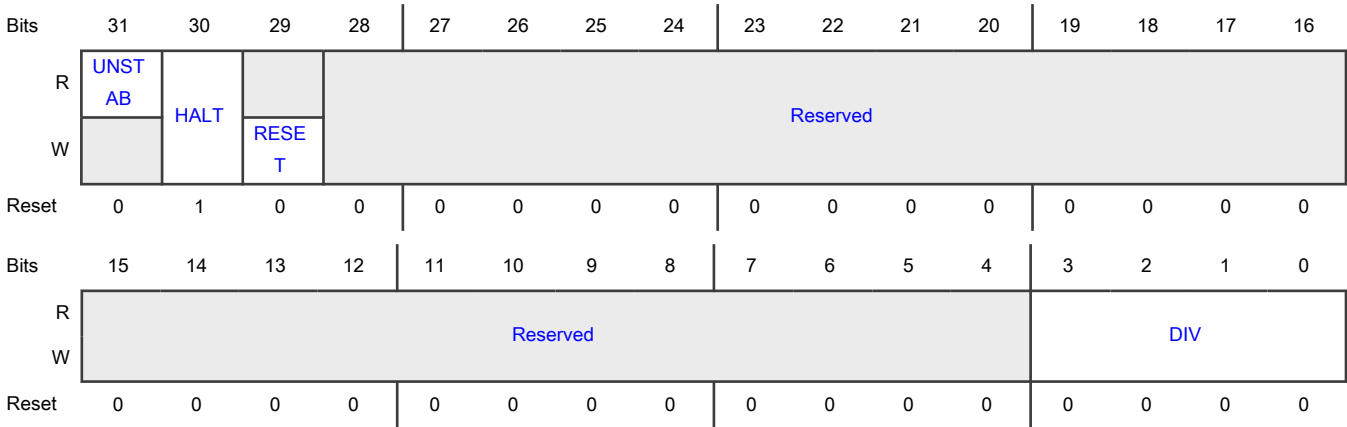

Fields

Field	Function
31 UNSTAB	Divider status flag Determines the stability of the divider clock. 0b - Divider clock is stable 1b - Clock frequency isn't stable
30 HALT	Halt divider counter Halt divider counter 0b - Divider clock is running 1b - Divider clock is stopped
29 RESET	Reset divider counter Reset divider counter 0b - Divider isn't reset 1b - Divider is reset
28-4 —	reserved reserved
3-0 DIV	Functional Clock Divider Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. divider value = (DIV+1)

14.5.2.34 LPI2C1 clock selection control (MRCC_LPI2C1_CLKSEL)

Offset

Register	Offset
MRCC_LPI2C1_CLKSEL	E8h

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	Reserved															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserved												MUX			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1	1

Fields


Field	Function
31-3	reserved
—	reserved
2-0 MUX	Functional Clock Mux Select Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. 000b - FRO_LF_DIV 010b - FRO_HF_DIV 011b - CLK_IN 101b - CLK_1M 110b - PLL1_CLK_DIV 111b - Reserved(NO Clock)

14.5.2.35 LPI2C1 clock divider control (MRCC_LPI2C1_CLKDIV)

Offset

Register	Offset
MRCC_LPI2C1_CLKDIV	ECh

Diagram

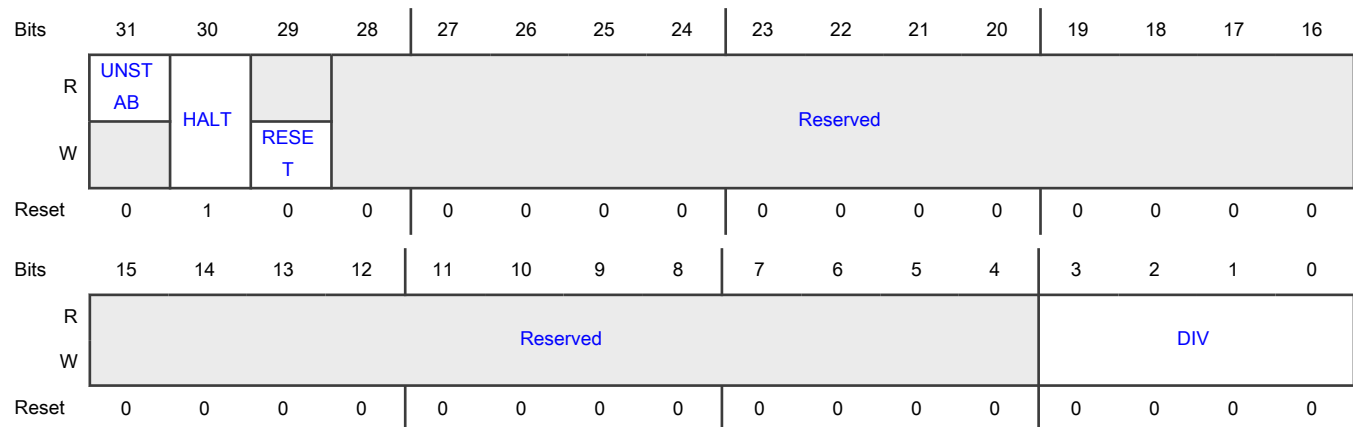

Fields

Field	Function
31 UNSTAB	Divider status flag Determines the stability of the divider clock. 0b - Divider clock is stable 1b - Clock frequency isn't stable
30 HALT	Halt divider counter Halt divider counter 0b - Divider clock is running 1b - Divider clock is stopped
29 RESET	Reset divider counter Reset divider counter 0b - Divider isn't reset 1b - Divider is reset
28-4 —	reserved reserved
3-0 DIV	Functional Clock Divider Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. divider value = (DIV+1)

14.5.2.36 LPSPi0 clock selection control (MRCC_LPSPi0_CLKSEL)

Offset

Register	Offset
MRCC_LPSPi0_CLKSEL	F0h

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	Reserved															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserved												MUX			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1	1

Fields


Field	Function
31-3	reserved
—	reserved
2-0 MUX	Functional Clock Mux Select Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. 000b - FRO_LF_DIV 010b - FRO_HF_DIV 011b - CLK_IN 101b - CLK_1M 110b - PLL1_CLK_DIV 111b - Reserved(NO Clock)

14.5.2.37 LPSPi0 clock divider control (MRCC_LPSPi0_CLKDIV)

Offset

Register	Offset
MRCC_LPSPi0_CLKDIV	F4h

Diagram

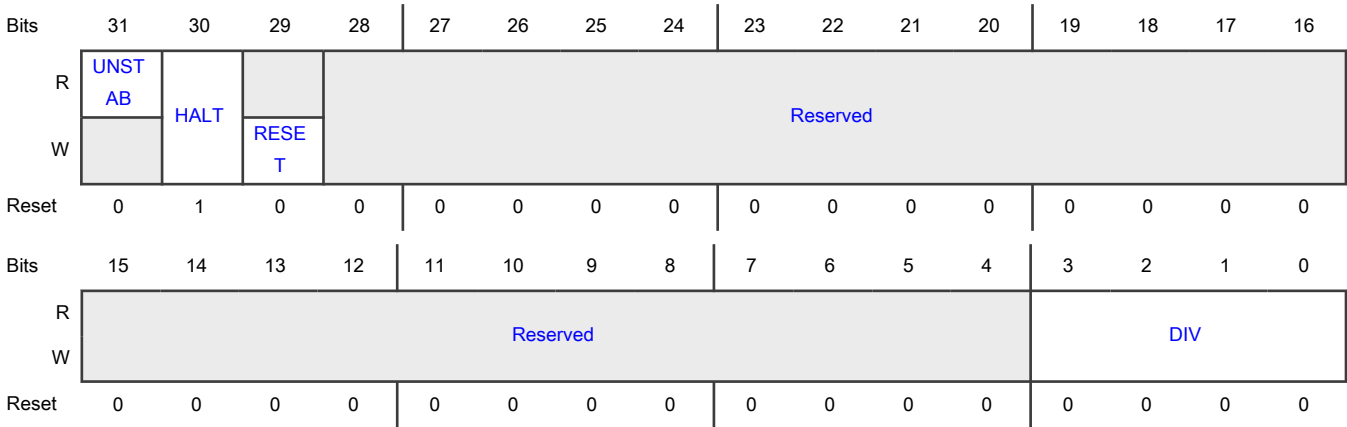

Fields

Field	Function
31 UNSTAB	Divider status flag Determines the stability of the divider clock. 0b - Divider clock is stable 1b - Clock frequency isn't stable
30 HALT	Halt divider counter Halt divider counter 0b - Divider clock is running 1b - Divider clock is stopped
29 RESET	Reset divider counter Reset divider counter 0b - Divider isn't reset 1b - Divider is reset
28-4 —	reserved reserved
3-0 DIV	Functional Clock Divider Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. divider value = (DIV+1)

14.5.2.38 LPSP11 clock selection control (MRCC_LPSP11_CLKSEL)

Offset

Register	Offset
MRCC_LPSP11_CLKSEL	F8h

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	Reserved															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserved												MUX			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1	1

Fields


Field	Function
31-3	reserved
—	reserved
2-0 MUX	Functional Clock Mux Select Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. 000b - FRO_LF_DIV 010b - FRO_HF_DIV 011b - CLK_IN 101b - CLK_1M 110b - PLL1_CLK_DIV 111b - Reserved(NO Clock)

14.5.2.39 LPSP11 clock divider control (MRCC_LPSP11_CLKDIV)

Offset

Register	Offset
MRCC_LPSP11_CLKDIV	FCh

Diagram

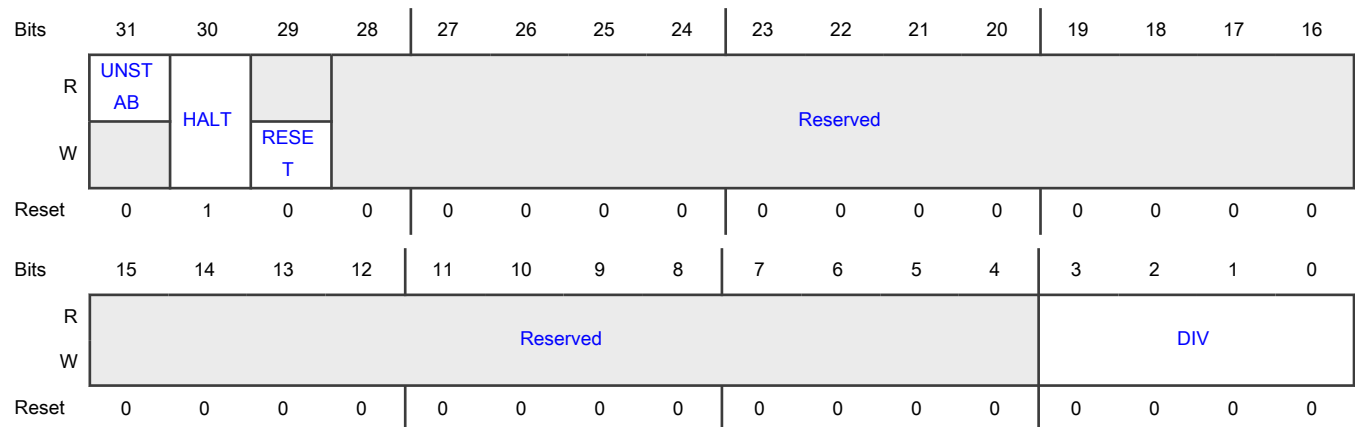

Fields


Field	Function
31 UNSTAB	Divider status flag Determines the stability of the divider clock. 0b - Divider clock is stable 1b - Clock frequency isn't stable
30 HALT	Halt divider counter Halt divider counter 0b - Divider clock is running 1b - Divider clock is stopped
29 RESET	Reset divider counter Reset divider counter 0b - Divider isn't reset 1b - Divider is reset
28-4 —	reserved reserved
3-0 DIV	Functional Clock Divider Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. divider value = (DIV+1)

14.5.2.40 LPUART0 clock selection control (MRCC_LPUART0_CLKSEL)

Offset

Register	Offset
MRCC_LPUART0_CLKSEL	100h

Diagram

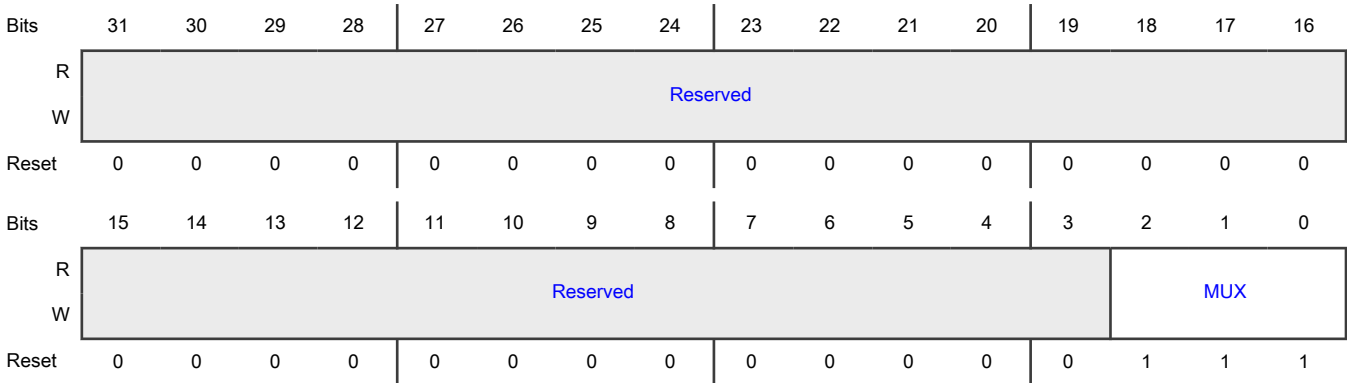

Fields


Field	Function
31-3	reserved
—	reserved
2-0 MUX	Functional Clock Mux Select Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. 000b - FRO_LF_DIV 010b - FRO_HF_DIV 011b - CLK_IN 100b - CLK_16K 101b - CLK_1M 110b - PLL1_CLK_DIV 111b - Reserved(NO Clock)

14.5.2.41 LPUART0 clock divider control (MRCC_LPUART0_CLKDIV)

Offset

Register	Offset
MRCC_LPUART0_CLKDIV	104h

Diagram

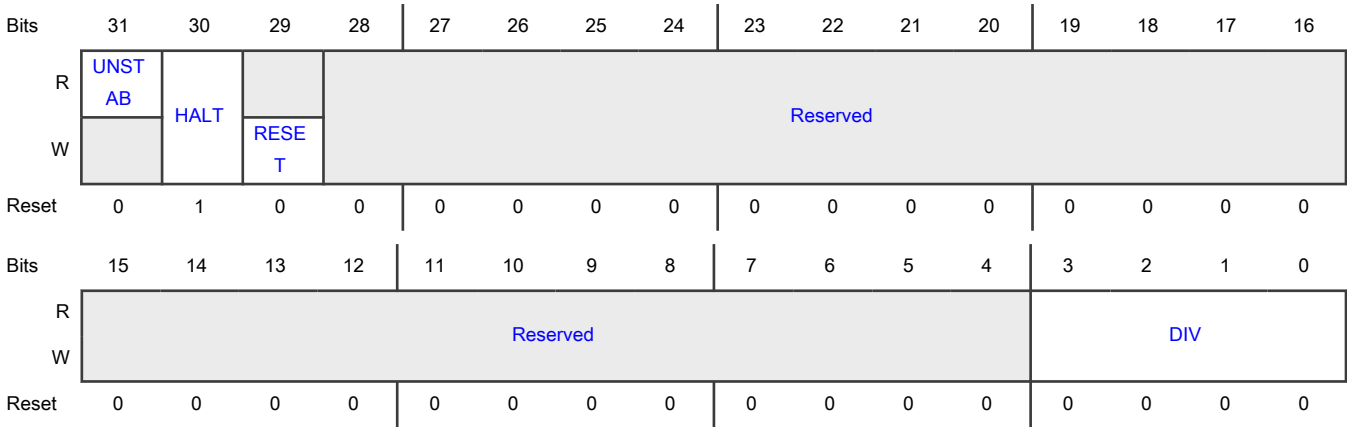

Fields

Field	Function
31 UNSTAB	Divider status flag Determines the stability of the divider clock. 0b - Divider clock is stable 1b - Clock frequency isn't stable
30 HALT	Halt divider counter Halt divider counter 0b - Divider clock is running 1b - Divider clock is stopped
29 RESET	Reset divider counter Reset divider counter 0b - Divider isn't reset 1b - Divider is reset
28-4 —	reserved reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
3-0 DIV	Functional Clock Divider Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. divider value = (DIV+1)

14.5.2.42 LPUART1 clock selection control (MRCC_LPUART1_CLKSEL)

Offset

Register	Offset
MRCC_LPUART1_CLKSEL	108h

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	Reserved															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserved												MUX			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1	1

Fields

Field	Function
31-3 —	reserved reserved
2-0 MUX	Functional Clock Mux Select Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. 000b - FRO_LF_DIV 010b - FRO_HF_DIV 011b - CLK_IN 100b - CLK_16K

Table continues on the next page...

Table continued from the previous page...


Field	Function
	101b - CLK_1M
	110b - PLL1_CLK_DIV
	111b - Reserved(NO Clock)

14.5.2.43 LPUART1 clock divider control (MRCC_LPUART1_CLKDIV)

Offset

Register	Offset
MRCC_LPUART1_CLKDIV	10Ch

Diagram

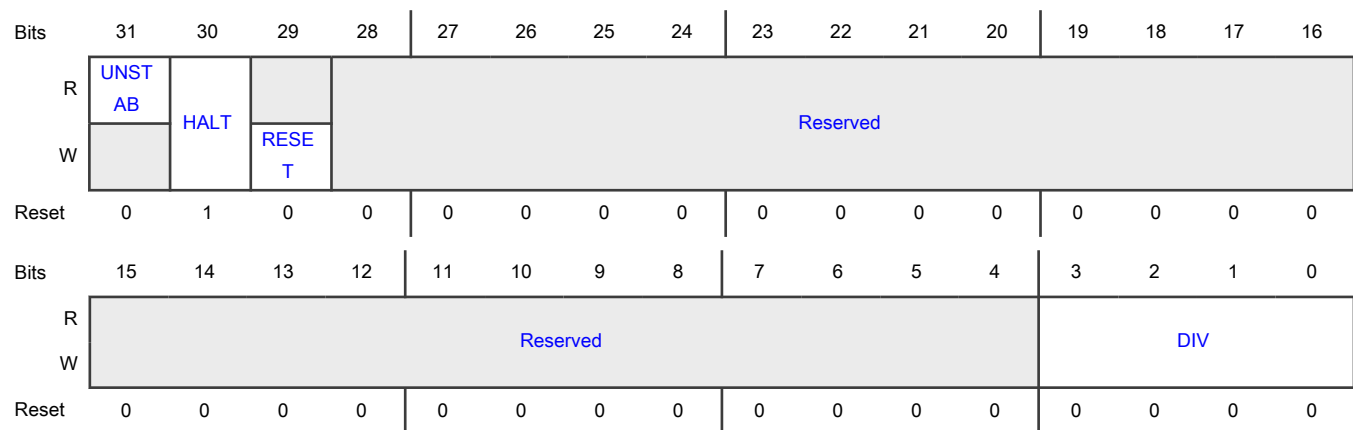

Fields

Field	Function
31 UNSTAB	Divider status flag Determines the stability of the divider clock. 0b - Divider clock is stable 1b - Clock frequency isn't stable
30 HALT	Halt divider counter Halt divider counter 0b - Divider clock is running 1b - Divider clock is stopped

Table continues on the next page...

Table continued from the previous page...


Field	Function
29 RESET	Reset divider counter Reset divider counter 0b - Divider isn't reset 1b - Divider is reset
28-4 —	reserved reserved
3-0 DIV	Functional Clock Divider Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. divider value = (DIV+1)

14.5.2.44 LPUART2 clock selection control (MRCC_LPUART2_CLKSEL)

Offset

Register	Offset
MRCC_LPUART2_CLKSEL	110h

Diagram

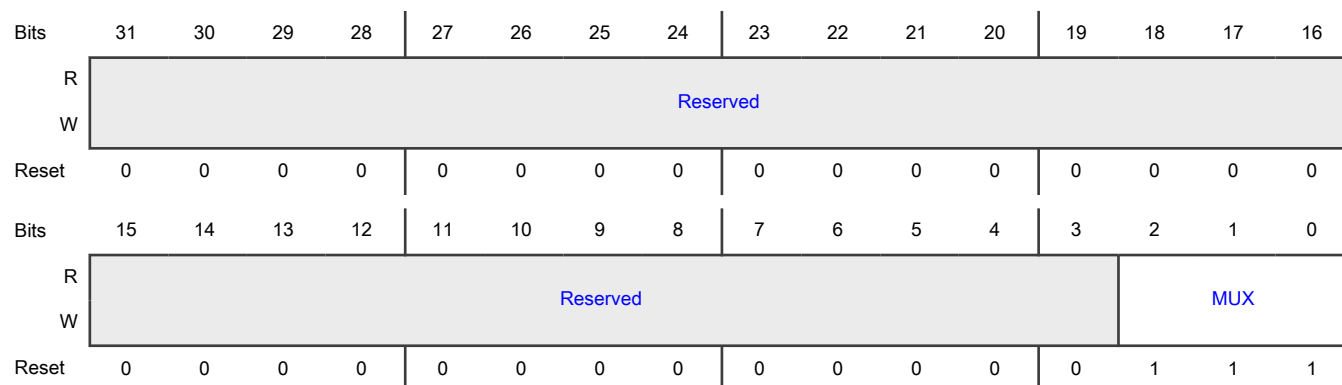

Fields

Field	Function
31-3 —	reserved reserved
2-0	Functional Clock Mux Select

Table continues on the next page...

Table continued from the previous page...

Field	Function
MUX	Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. 000b - FRO_LF_DIV 010b - FRO_HF_DIV 011b - CLK_IN 100b - CLK_16K 101b - CLK_1M 110b - PLL1_CLK_DIV 111b - Reserved(NO Clock)

14.5.2.45 LPUART2 clock divider control (MRCC_LPUART2_CLKDIV)

Offset

Register	Offset
MRCC_LPUART2_CLKDIV	114h

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	UNST AB				Reserved											
W		HALT	RESE T													
Reset	0	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserved												DIV			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31 UNSTAB	Divider status flag Determines the stability of the divider clock. 0b - Divider clock is stable

Table continues on the next page...

Table continued from the previous page...


Field	Function
	1b - Clock frequency isn't stable
30 HALT	Halt divider counter Halt divider counter 0b - Divider clock is running 1b - Divider clock is stopped
29 RESET	Reset divider counter Reset divider counter 0b - Divider isn't reset 1b - Divider is reset
28-4 —	reserved reserved
3-0 DIV	Functional Clock Divider Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. divider value = (DIV+1)

14.5.2.46 LPUART3 clock selection control (MRCC_LPUART3_CLKSEL)

Offset

Register	Offset
MRCC_LPUART3_CLKSEL EL	118h

Diagram

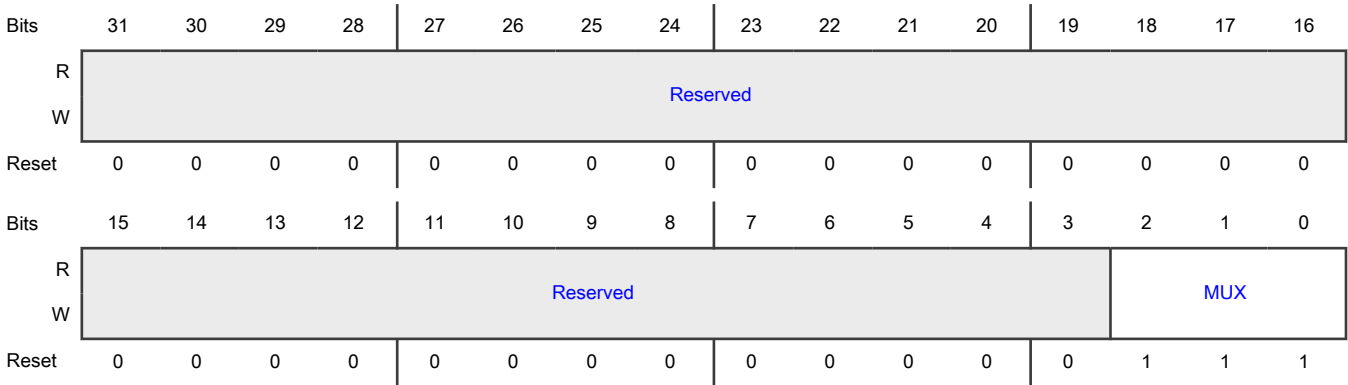

Fields


Field	Function
31-3	reserved
—	reserved
2-0 MUX	Functional Clock Mux Select Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. 000b - FRO_LF_DIV 010b - FRO_HF_DIV 011b - CLK_IN 100b - CLK_16K 101b - CLK_1M 110b - PLL1_CLK_DIV 111b - Reserved(NO Clock)

14.5.2.47 LPUART3 clock divider control (MRCC_LPUART3_CLKDIV)

Offset

Register	Offset
MRCC_LPUART3_CLKDIV	11Ch

Diagram

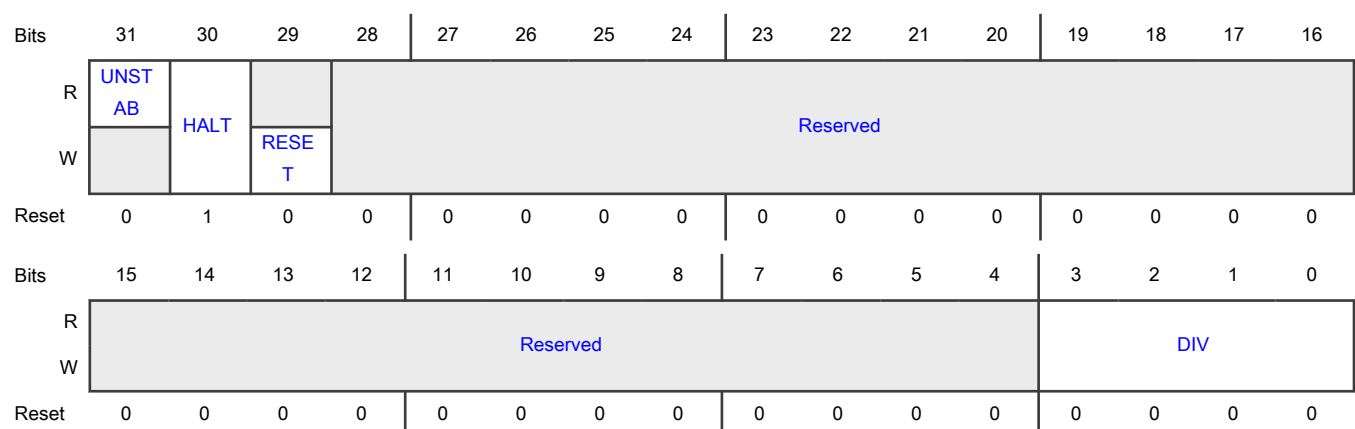


Fields

Field	Function
31 UNSTAB	Divider status flag Determines the stability of the divider clock. 0b - Divider clock is stable 1b - Clock frequency isn't stable
30 HALT	Halt divider counter Halt divider counter 0b - Divider clock is running 1b - Divider clock is stopped
29 RESET	Reset divider counter Reset divider counter 0b - Divider isn't reset 1b - Divider is reset
28-4 —	reserved reserved
3-0 DIV	Functional Clock Divider Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. divider value = (DIV+1)

14.5.2.48 LPUART4 clock selection control (MRCC_LPUART4_CLKSEL)**Offset**

Register	Offset
MRCC_LPUART4_CLKSEL	120h

Diagram

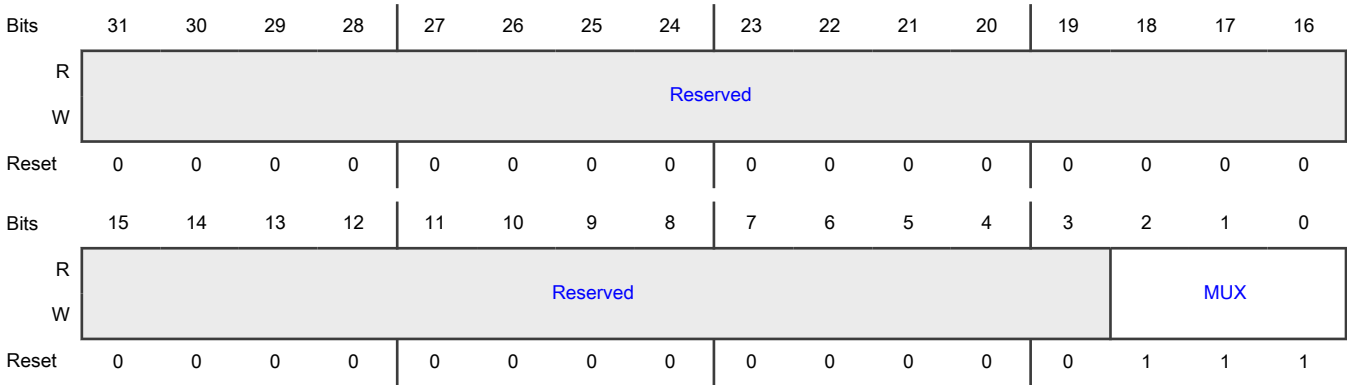

Fields


Field	Function
31-3	reserved
—	reserved
2-0	Functional Clock Mux Select
MUX	Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. 000b - FRO_LF_DIV 010b - FRO_HF_DIV 011b - CLK_IN 100b - CLK_16K 101b - CLK_1M 110b - PLL1_CLK_DIV 111b - Reserved(NO Clock)

14.5.2.49 LPUART4 clock divider control (MRCC_LPUART4_CLKDIV)

Offset

Register	Offset
MRCC_LPUART4_CLKDIV	124h

Diagram

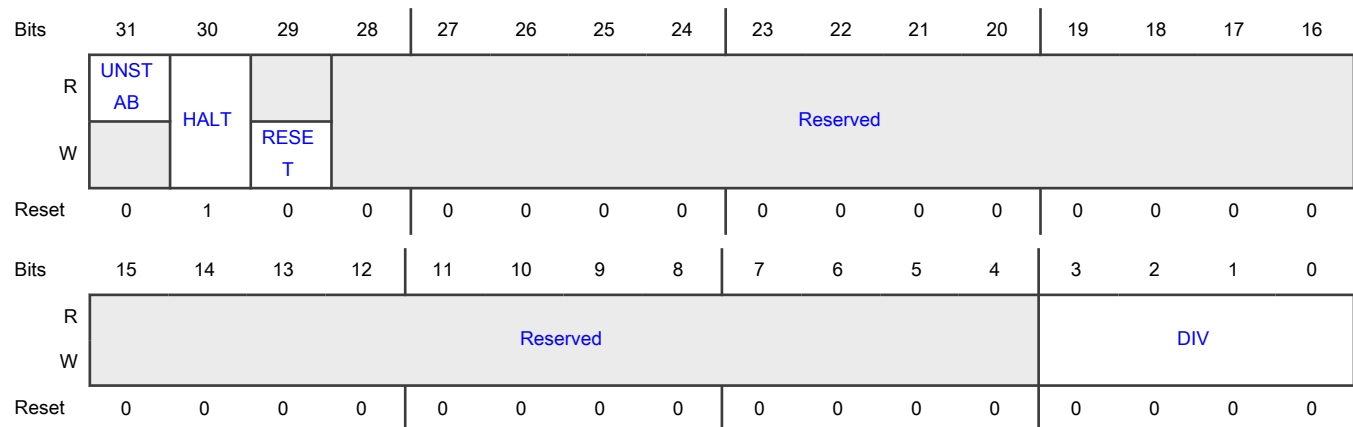

Fields

Field	Function
31 UNSTAB	Divider status flag Determines the stability of the divider clock. 0b - Divider clock is stable 1b - Clock frequency isn't stable
30 HALT	Halt divider counter Halt divider counter 0b - Divider clock is running 1b - Divider clock is stopped
29 RESET	Reset divider counter Reset divider counter 0b - Divider isn't reset 1b - Divider is reset
28-4 —	reserved reserved
3-0 DIV	Functional Clock Divider Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. divider value = (DIV+1)

14.5.2.50 USB0 clock selection control (MRCC_USB0_CLKSEL)

Offset

Register	Offset
MRCC_USB0_CLKSEL	128h

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	Reserved															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserved												MUX			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1

Fields


Field	Function
31-2	reserved
—	reserved
1-0 MUX	Functional Clock Mux Select Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. 00b - PLL1_CLK 01b - CLK_48M 10b - CLK_IN 11b - Reserved(NO Clock)

14.5.2.51 USB0 clock divider control (MRCC_USB0_CLKDIV)

Offset

Register	Offset
MRCC_USB0_CLKDIV	12Ch

Diagram

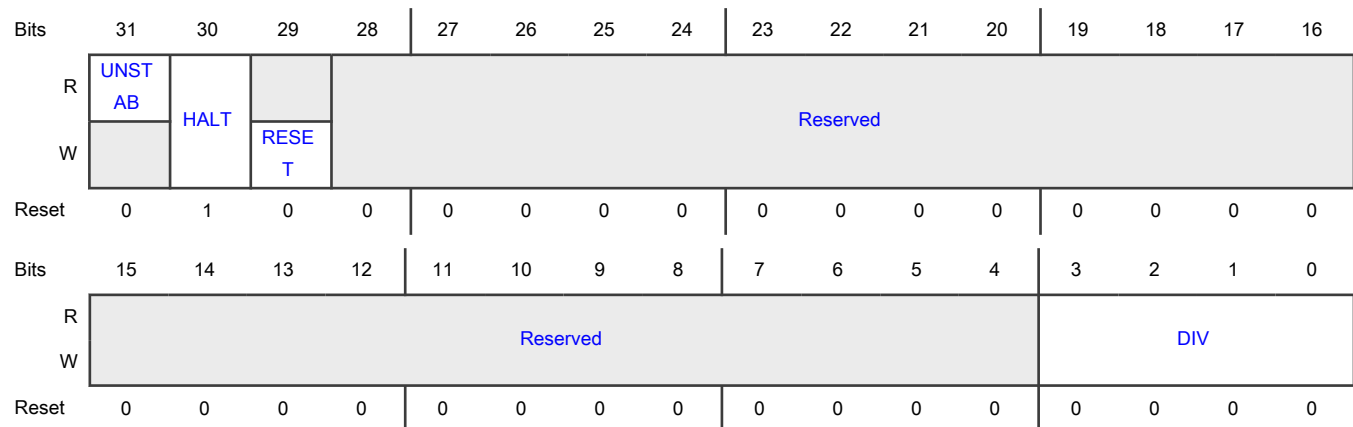

Fields


Field	Function
31 UNSTAB	Divider status flag Determines the stability of the divider clock. 0b - Divider clock is stable 1b - Clock frequency isn't stable
30 HALT	Halt divider counter Halt divider counter 0b - Divider clock is running 1b - Divider clock is stopped
29 RESET	Reset divider counter Reset divider counter 0b - Divider isn't reset 1b - Divider is reset
28-4 —	reserved reserved
3-0 DIV	Functional Clock Divider Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. divider value = (DIV+1)

14.5.2.52 LPTMR0 clock selection control (MRCC_LPTMR0_CLKSEL)

Offset

Register	Offset
MRCC_LPTMR0_CLKSEL	130h

Diagram

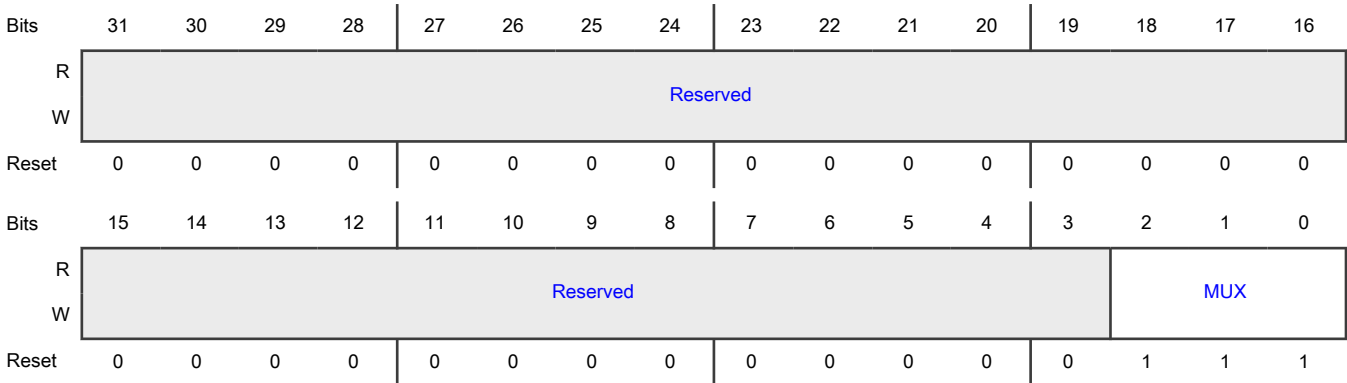

Fields


Field	Function
31-3	reserved
—	reserved
2-0 MUX	Functional Clock Mux Select Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. 000b - FRO_LF_DIV 010b - FRO_HF_DIV 011b - CLK_IN 101b - CLK_1M 110b - PLL1_CLK_DIV 111b - Reserved(NO Clock)

14.5.2.53 LPTMR0 clock divider control (MRCC_LPTMR0_CLKDIV)

Offset

Register	Offset
MRCC_LPTMR0_CLKDIV	134h
V	

Diagram

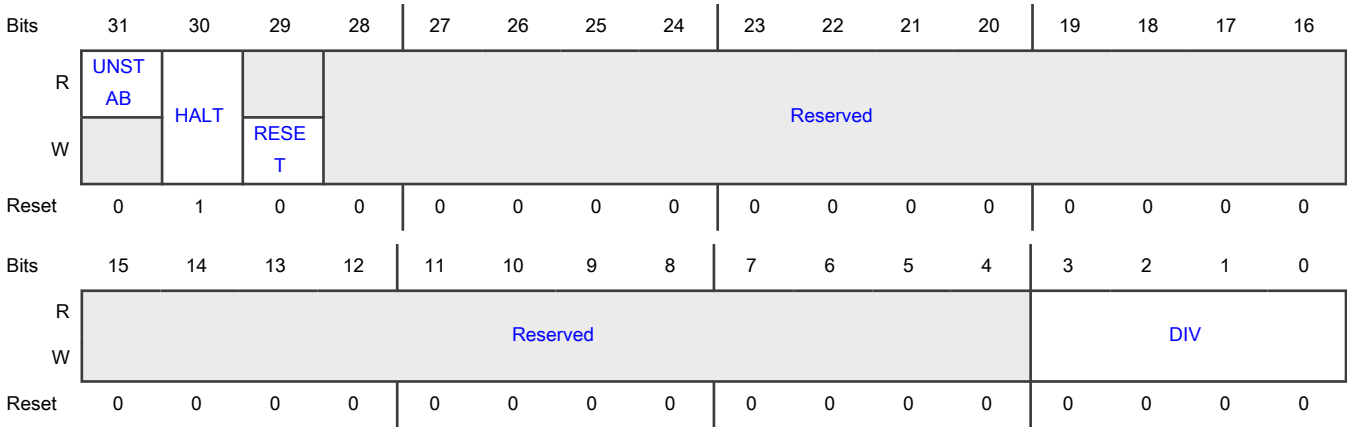

Fields

Field	Function
31 UNSTAB	Divider status flag Determines the stability of the divider clock. 0b - Divider clock is stable 1b - Clock frequency isn't stable
30 HALT	Halt divider counter Halt divider counter 0b - Divider clock is running 1b - Divider clock is stopped
29 RESET	Reset divider counter Reset divider counter 0b - Divider isn't reset 1b - Divider is reset
28-4 —	reserved reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
3-0 DIV	Functional Clock Divider Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. divider value = (DIV+1)

14.5.2.54 OSTIMER0 clock selection control (MRCC_OSTIMER0_CLKSEL)

Offset

Register	Offset
MRCC_OSTIMER0_CLKSEL	138h

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	Reserved															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserved														MUX	
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1

Fields

Field	Function
31-2 —	reserved reserved
1-0 MUX	Functional Clock Mux Select Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. 00b - CLK_16K 10b - CLK_1M 11b - Reserved2(NO Clock)

14.5.2.55 ADCx clock selection control (MRCC_ADC_CLKSEL)

Offset

Register	Offset
MRCC_ADC_CLKSEL	140h

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	Reserved															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserved												MUX			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1	1

Fields


Field	Function
31-3	reserved
—	reserved
2-0 MUX	Functional Clock Mux Select Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. 000b - FRO_LF_DIV 001b - FRO_HF_GATED 011b - CLK_IN 101b - CLK_1M 110b - PLL1_CLK_DIV 111b - Reserved(NO Clock)

14.5.2.56 ADCx clock divider control (MRCC_ADC_CLKDIV)

Offset

Register	Offset
MRCC_ADC_CLKDIV	144h

Diagram

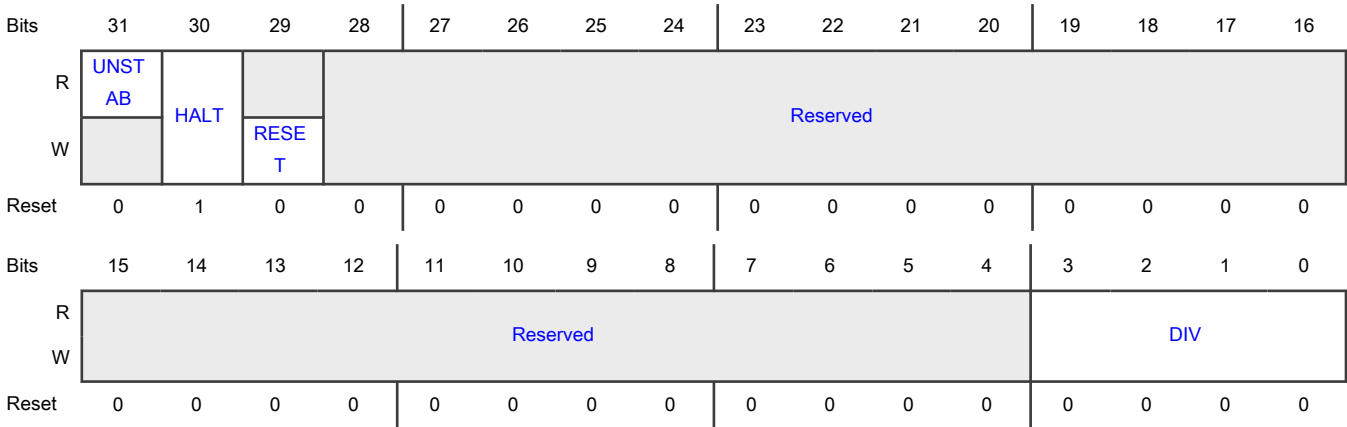

Fields


Field	Function
31 UNSTAB	Divider status flag Determines the stability of the divider clock. 0b - Divider clock is stable 1b - Clock frequency isn't stable
30 HALT	Halt divider counter Halt divider counter 0b - Divider clock is running 1b - Divider clock is stopped
29 RESET	Reset divider counter Reset divider counter 0b - Divider isn't reset 1b - Divider is reset
28-4 —	reserved reserved
3-0 DIV	Functional Clock Divider Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. divider value = (DIV+1)

14.5.2.57 CMP0_FUNC clock divider control (MRCC_CMP0_FUNC_CLKDIV)

Offset

Register	Offset
MRCC_CMP0_FUNC_C LKDIV	14Ch

Diagram

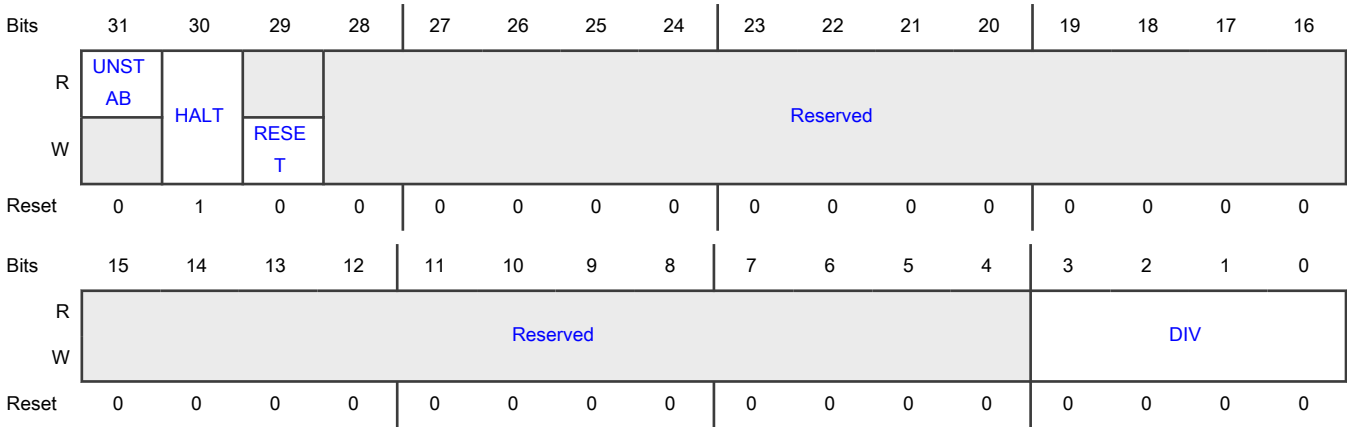

Fields

Field	Function
31 UNSTAB	Divider status flag Determines the stability of the divider clock. 0b - Divider clock is stable 1b - Clock frequency isn't stable
30 HALT	Halt divider counter Halt divider counter 0b - Divider clock is running 1b - Divider clock is stopped
29 RESET	Reset divider counter Reset divider counter 0b - Divider isn't reset 1b - Divider is reset
28-4 —	reserved reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
3-0 DIV	Functional Clock Divider Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. divider value = (DIV+1)

14.5.2.58 CMP0_RR clock selection control (MRCC_CMP0_RR_CLKSEL)

Offset

Register	Offset
MRCC_CMP0_RR_CLKSEL	150h

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	Reserved															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserved												MUX			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1	1

Fields


Field	Function
31-3 —	reserved reserved
2-0 MUX	Functional Clock Mux Select Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. 000b - FRO_LF_DIV 010b - FRO_HF_DIV 011b - CLK_IN 101b - CLK_1M 110b - PLL1_CLK_DIV 111b - Reserved(NO Clock)

14.5.2.59 CMP0_RR clock divider control (MRCC_CMP0_RR_CLKDIV)

Offset

Register	Offset
MRCC_CMP0_RR_CLKDIV	154h

Diagram

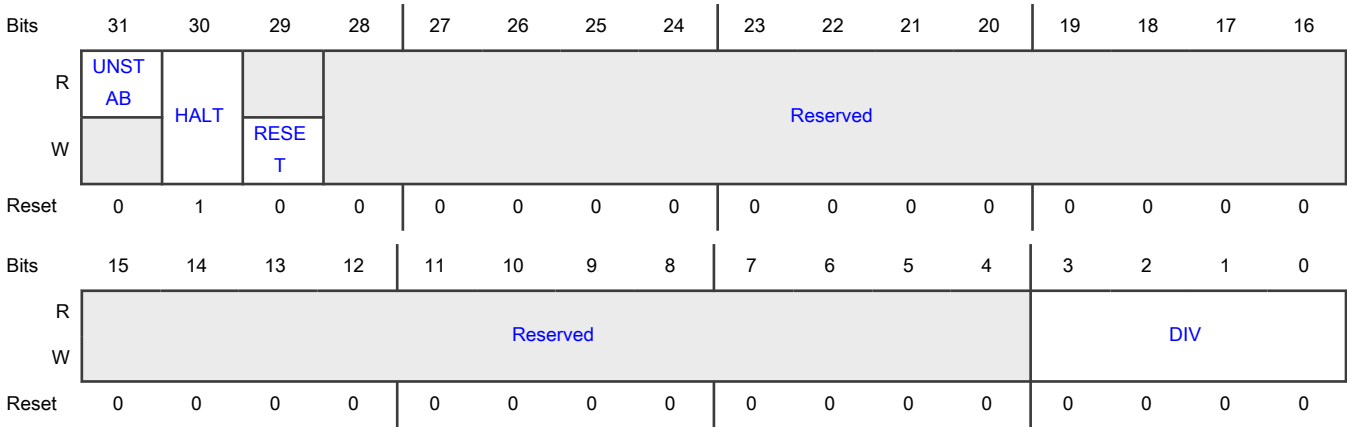

Fields

Field	Function
31 UNSTAB	Divider status flag Determines the stability of the divider clock. 0b - Divider clock is stable 1b - Clock frequency isn't stable
30 HALT	Halt divider counter Halt divider counter 0b - Divider clock is running 1b - Divider clock is stopped
29 RESET	Reset divider counter Reset divider counter 0b - Divider isn't reset 1b - Divider is reset
28-4 —	reserved reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
3-0 DIV	Functional Clock Divider Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. divider value = (DIV+1)

14.5.2.60 CMP1_FUNC clock divider control (MRCC_CMP1_FUNC_CLKDIV)

Offset

Register	Offset
MRCC_CMP1_FUNC_C LKDIV	15Ch

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	UNST AB				Reserved											
W		HALT	RESE T													
Reset	0	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserved												DIV			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31 UNSTAB	Divider status flag Determines the stability of the divider clock. 0b - Divider clock is stable 1b - Clock frequency isn't stable
30 HALT	Halt divider counter Halt divider counter 0b - Divider clock is running 1b - Divider clock is stopped

Table continues on the next page...

Table continued from the previous page...


Field	Function
29 RESET	Reset divider counter Reset divider counter 0b - Divider isn't reset 1b - Divider is reset
28-4 —	reserved reserved
3-0 DIV	Functional Clock Divider Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. divider value = (DIV+1)

14.5.2.61 CMP1_RR clock selection control (MRCC_CMP1_RR_CLKSEL)

Offset

Register	Offset
MRCC_CMP1_RR_CLKSEL	160h

Diagram

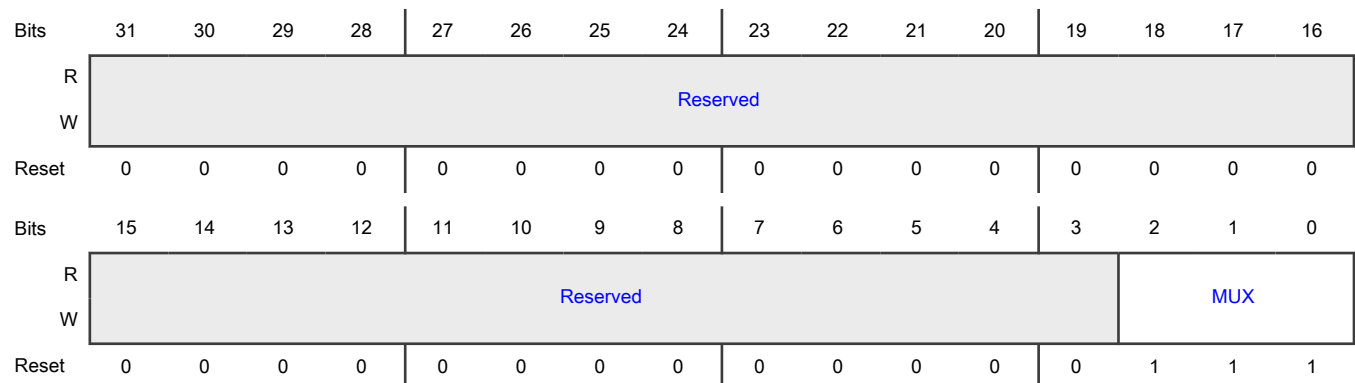

Fields

Field	Function
31-3 —	reserved reserved
2-0	Functional Clock Mux Select

Table continues on the next page...

Table continued from the previous page...


Field	Function
MUX	Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. 000b - FRO_LF_DIV 010b - FRO_HF_DIV 011b - CLK_IN 101b - CLK_1M 110b - PLL1_CLK_DIV 111b - Reserved(NO Clock)

14.5.2.62 CMP1_RR clock divider control (MRCC_CMP1_RR_CLKDIV)

Offset

Register	Offset
MRCC_CMP1_RR_CLK DIV	164h

Diagram

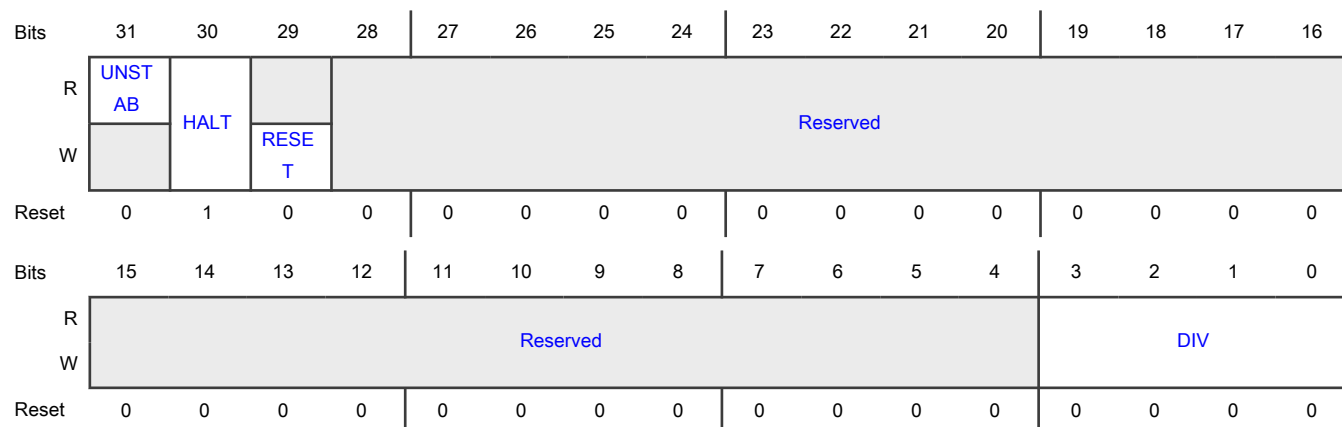

Fields

Field	Function
31 UNSTAB	Divider status flag Determines the stability of the divider clock. 0b - Divider clock is stable 1b - Clock frequency isn't stable

Table continues on the next page...

Table continued from the previous page...


Field	Function
30 HALT	Halt divider counter Halt divider counter 0b - Divider clock is running 1b - Divider clock is stopped
29 RESET	Reset divider counter Reset divider counter 0b - Divider isn't reset 1b - Divider is reset
28-4 —	reserved reserved
3-0 DIV	Functional Clock Divider Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. divider value = (DIV+1)

14.5.2.63 CMP2_FUNC clock divider control (MRCC_CMP2_FUNC_CLKDIV)

Offset

Register	Offset
MRCC_CMP2_FUNC_C LKDIV	16Ch

Diagram

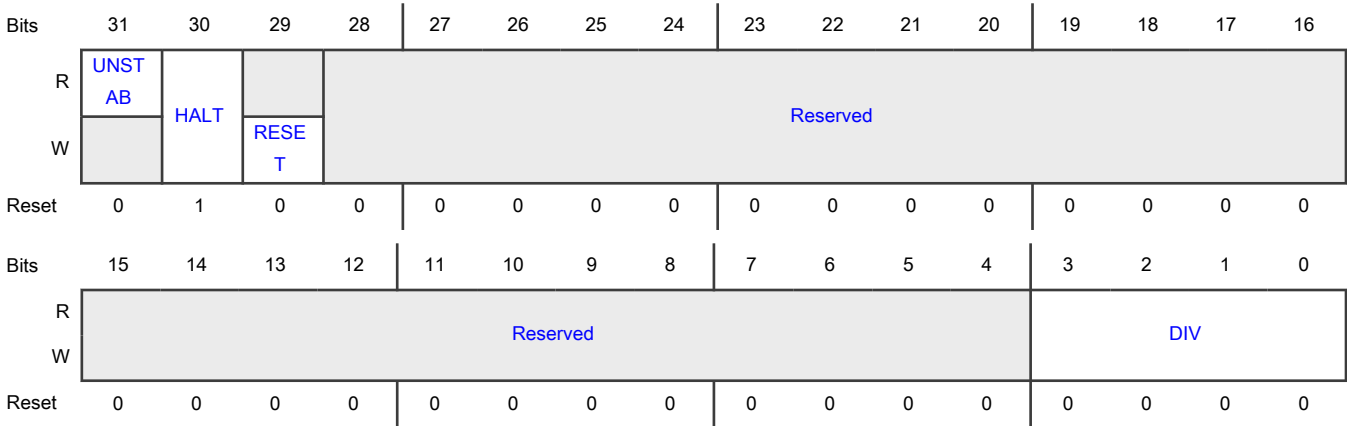


Fields

Field	Function
31 UNSTAB	Divider status flag Determines the stability of the divider clock. 0b - Divider clock is stable 1b - Clock frequency isn't stable
30 HALT	Halt divider counter Halt divider counter 0b - Divider clock is running 1b - Divider clock is stopped
29 RESET	Reset divider counter Reset divider counter 0b - Divider isn't reset 1b - Divider is reset
28-4 —	reserved reserved
3-0 DIV	Functional Clock Divider Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. divider value = (DIV+1)

14.5.2.64 CMP2_RR clock selection control (MRCC_CMP2_RR_CLKSEL)**Offset**

Register	Offset
MRCC_CMP2_RR_CLKSEL	170h

Diagram

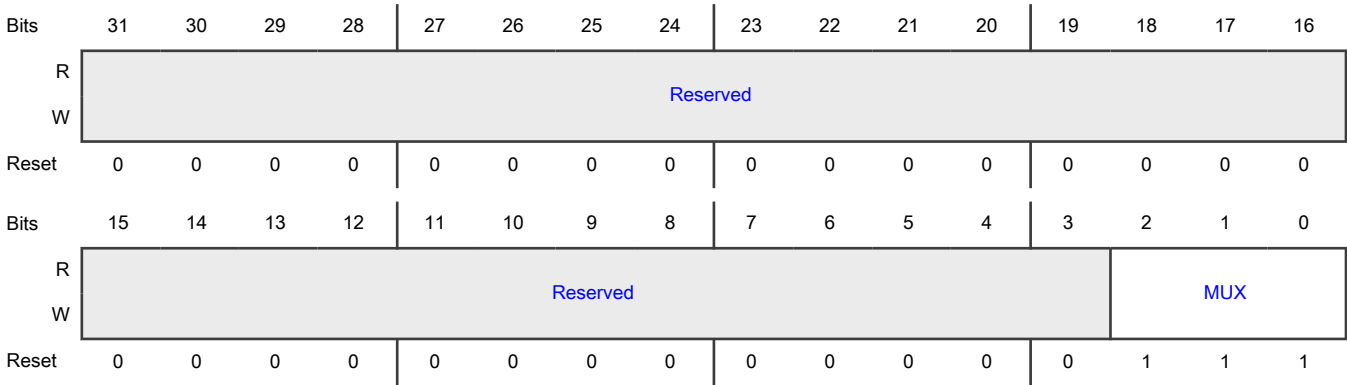

Fields


Field	Function
31-3	reserved
—	reserved
2-0	Functional Clock Mux Select
MUX	Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. 000b - FRO_LF_DIV 010b - FRO_HF_DIV 011b - CLK_IN 101b - CLK_1M 110b - PLL1_CLK_DIV 111b - Reserved(NO Clock)

14.5.2.65 CMP2_RR clock divider control (MRCC_CMP2_RR_CLKDIV)

Offset

Register	Offset
MRCC_CMP2_RR_CLK DIV	174h

Diagram

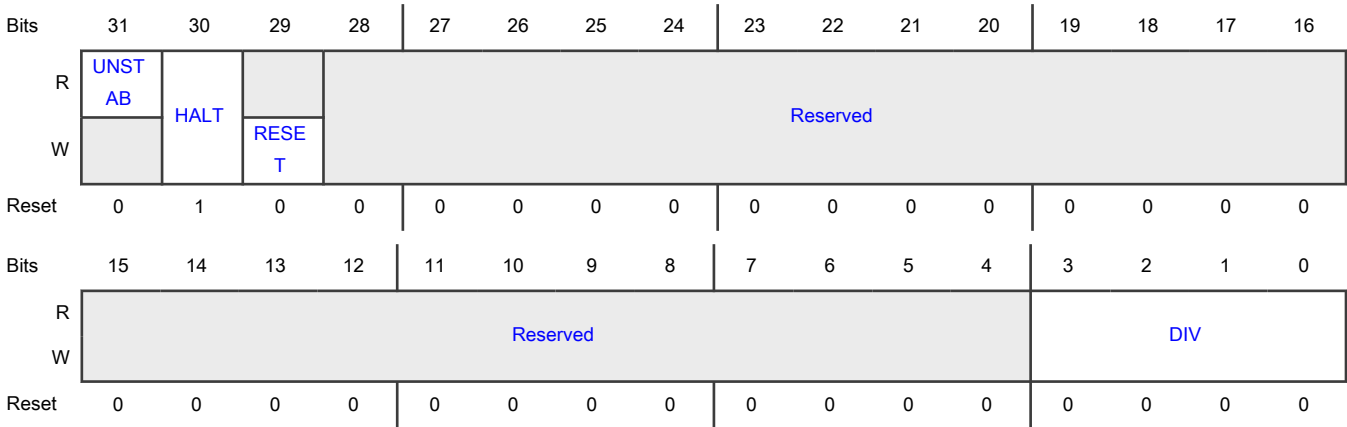

Fields

Field	Function
31 UNSTAB	Divider status flag Determines the stability of the divider clock. 0b - Divider clock is stable 1b - Clock frequency isn't stable
30 HALT	Halt divider counter Halt divider counter 0b - Divider clock is running 1b - Divider clock is stopped
29 RESET	Reset divider counter Reset divider counter 0b - Divider isn't reset 1b - Divider is reset
28-4 —	reserved reserved
3-0 DIV	Functional Clock Divider Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. divider value = (DIV+1)

14.5.2.66 DAC0 clock selection control (MRCC_DAC0_CLKSEL)

Offset

Register	Offset
MRCC_DAC0_CLKSEL	178h

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	Reserved															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserved												MUX			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1	1

Fields


Field	Function
31-3	reserved
—	reserved
2-0 MUX	Functional Clock Mux Select Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. 000b - FRO_LF_DIV 010b - FRO_HF_DIV 011b - CLK_IN 101b - CLK_1M 110b - PLL1_CLK_DIV 111b - Reserved(NO Clock)

14.5.2.67 DAC0 clock divider control (MRCC_DAC0_CLKDIV)

Offset

Register	Offset
MRCC_DAC0_CLKDIV	17Ch

Diagram

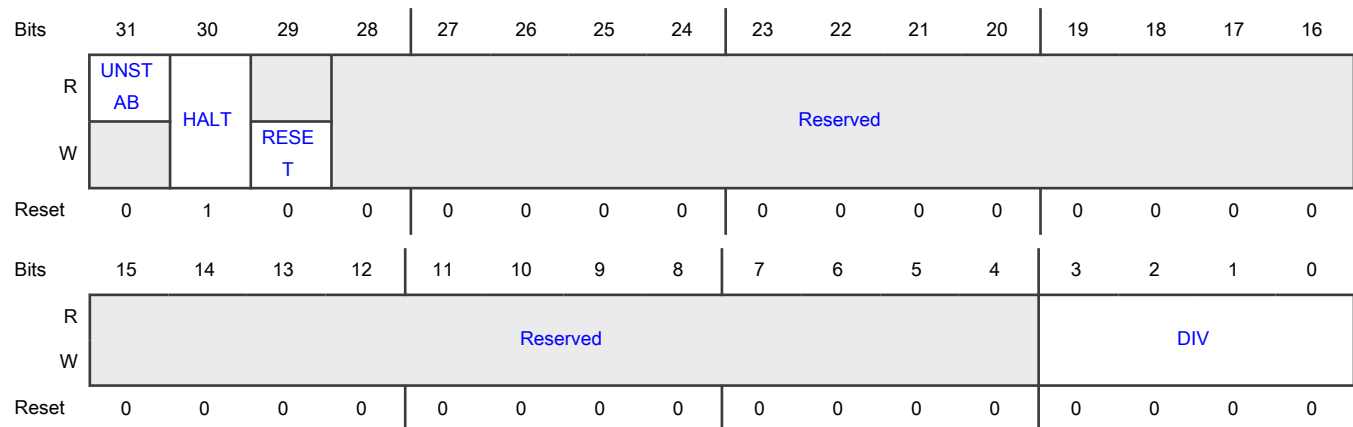

Fields

Field	Function
31 UNSTAB	Divider status flag Determines the stability of the divider clock. 0b - Divider clock is stable 1b - Clock frequency isn't stable
30 HALT	Halt divider counter Halt divider counter 0b - Divider clock is running 1b - Divider clock is stopped
29 RESET	Reset divider counter Reset divider counter 0b - Divider isn't reset 1b - Divider is reset
28-4 —	reserved reserved
3-0 DIV	Functional Clock Divider Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. divider value = (DIV+1)

14.5.2.68 FLEXCAN0 clock selection control (MRCC_FLEXCAN0_CLKSEL)

Offset

Register	Offset
MRCC_FLEXCAN0_CLKSEL	180h

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	Reserved															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserved												MUX			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1	1

Fields


Field	Function
31-3	reserved
—	reserved
2-0 MUX	Functional Clock Mux Select Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. 001b - FRO_HF_GATED 010b - FRO_HF_DIV 011b - CLK_IN 110b - PLL1_CLK 111b - Reserved(NO Clock)

14.5.2.69 FLEXCAN0 clock divider control (MRCC_FLEXCAN0_CLKDIV)

Offset

Register	Offset
MRCC_FLEXCAN0_CLKDIV	184h

Diagram

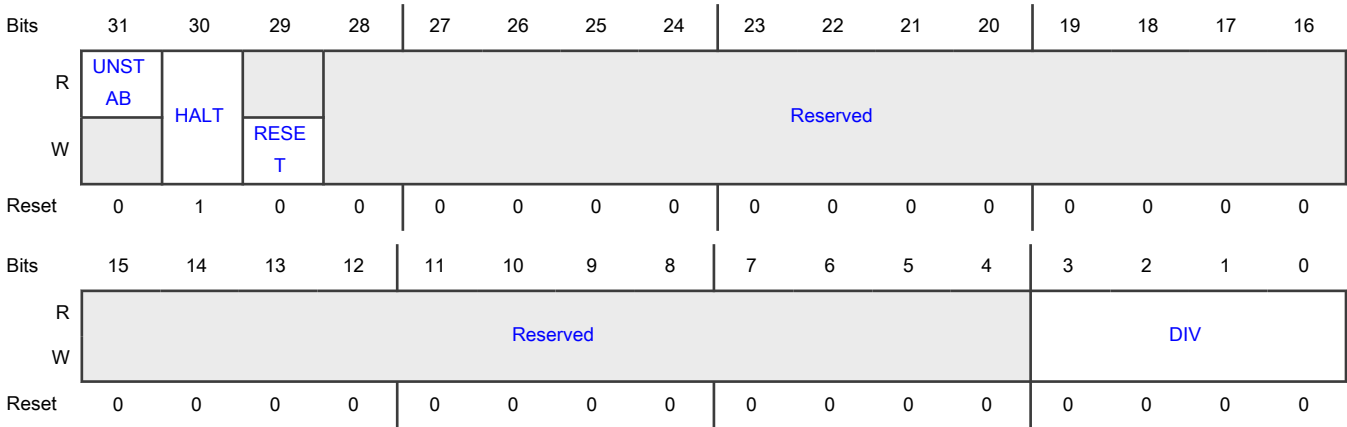

Fields

Field	Function
31 UNSTAB	Divider status flag Determines the stability of the divider clock. 0b - Divider clock is stable 1b - Clock frequency isn't stable
30 HALT	Halt divider counter Halt divider counter 0b - Divider clock is running 1b - Divider clock is stopped
29 RESET	Reset divider counter Reset divider counter 0b - Divider isn't reset 1b - Divider is reset
28-4 —	reserved reserved
3-0 DIV	Functional Clock Divider Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. divider value = (DIV+1)

14.5.2.70 FLEXCAN1 clock selection control (MRCC_FLEXCAN1_CLKSEL)

Offset

Register	Offset
MRCC_FLEXCAN1_CLKSEL	188h

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	Reserved															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserved												MUX			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1	1

Fields


Field	Function
31-3	reserved
—	reserved
2-0 MUX	Functional Clock Mux Select Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. 001b - FRO_HF_GATED 010b - FRO_HF_DIV 011b - CLK_IN 110b - PLL1_CLK 111b - Reserved(NO Clock)

14.5.2.71 FLEXCAN1 clock divider control (MRCC_FLEXCAN1_CLKDIV)

Offset

Register	Offset
MRCC_FLEXCAN1_CLKDIV	18Ch

Diagram

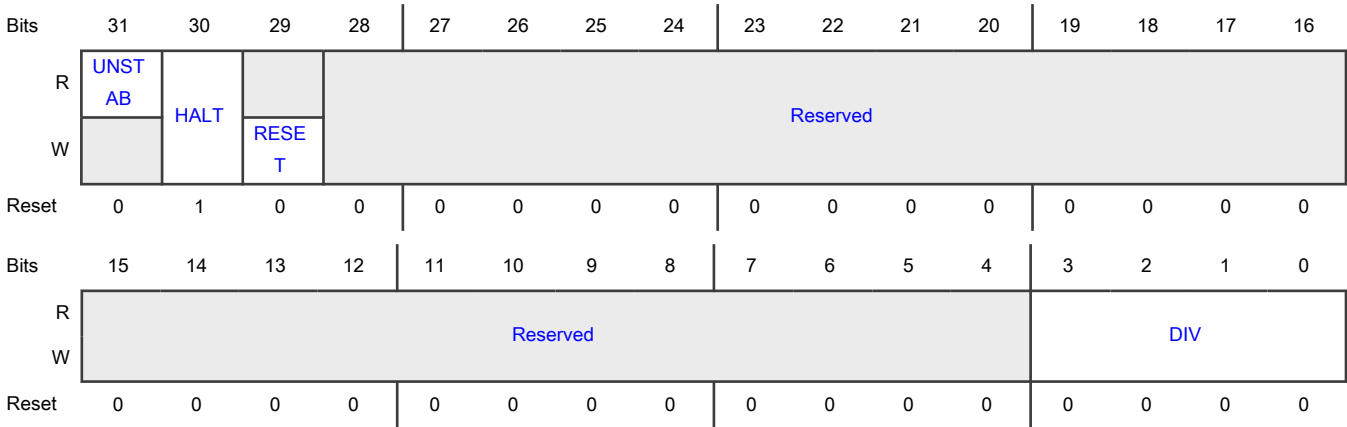

Fields

Field	Function
31 UNSTAB	Divider status flag Determines the stability of the divider clock. 0b - Divider clock is stable 1b - Clock frequency isn't stable
30 HALT	Halt divider counter Halt divider counter 0b - Divider clock is running 1b - Divider clock is stopped
29 RESET	Reset divider counter Reset divider counter 0b - Divider isn't reset 1b - Divider is reset
28-4 —	reserved reserved
3-0 DIV	Functional Clock Divider Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. divider value = (DIV+1)

14.5.2.72 LPI2C2 clock selection control (MRCC_LPI2C2_CLKSEL)

Offset

Register	Offset
MRCC_LPI2C2_CLKSEL	190h

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	Reserved															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserved												MUX			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1	1

Fields


Field	Function
31-3	reserved
—	reserved
2-0 MUX	Functional Clock Mux Select Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. 000b - FRO_LF_DIV 010b - FRO_HF_DIV 011b - CLK_IN 101b - CLK_1M 110b - PLL1_CLK_DIV 111b - Reserved(NO Clock)

14.5.2.73 LPI2C2 clock divider control (MRCC_LPI2C2_CLKDIV)

Offset

Register	Offset
MRCC_LPI2C2_CLKDIV	194h

Diagram

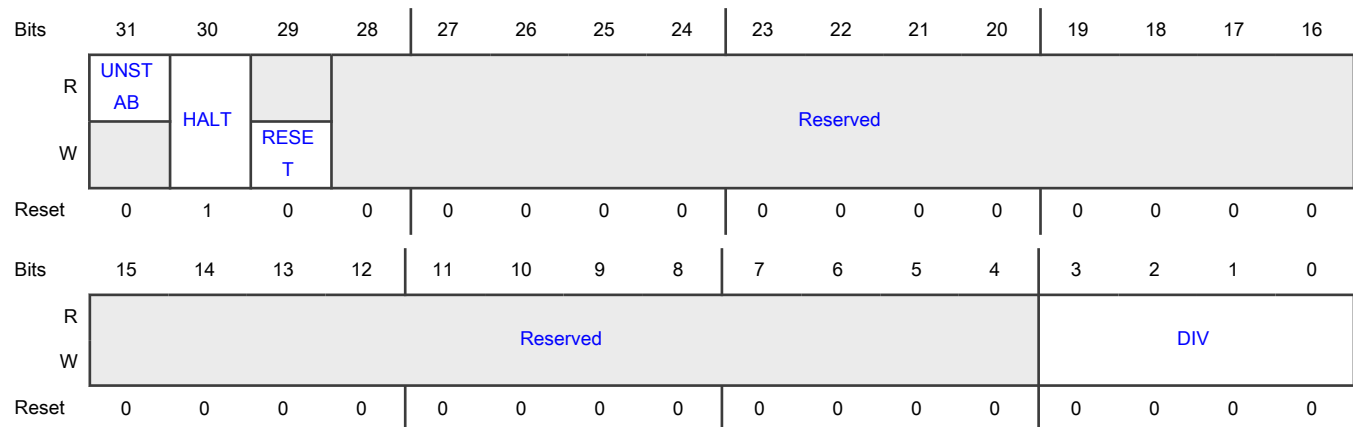

Fields

Field	Function
31 UNSTAB	Divider status flag Determines the stability of the divider clock. 0b - Divider clock is stable 1b - Clock frequency isn't stable
30 HALT	Halt divider counter Halt divider counter 0b - Divider clock is running 1b - Divider clock is stopped
29 RESET	Reset divider counter Reset divider counter 0b - Divider isn't reset 1b - Divider is reset
28-4 —	reserved reserved
3-0 DIV	Functional Clock Divider Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. divider value = (DIV+1)

14.5.2.74 LPI2C3 clock selection control (MRCC_LPI2C3_CLKSEL)

Offset

Register	Offset
MRCC_LPI2C3_CLKSEL	198h

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	Reserved															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserved												MUX			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1	1

Fields


Field	Function
31-3	reserved
—	reserved
2-0 MUX	Functional Clock Mux Select Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. 000b - FRO_LF_DIV 010b - FRO_HF_DIV 011b - CLK_IN 101b - CLK_1M 110b - PLL1_CLK_DIV 111b - Reserved(NO Clock)

14.5.2.75 LPI2C3 clock divider control (MRCC_LPI2C3_CLKDIV)

Offset

Register	Offset
MRCC_LPI2C3_CLKDIV	19Ch

Diagram

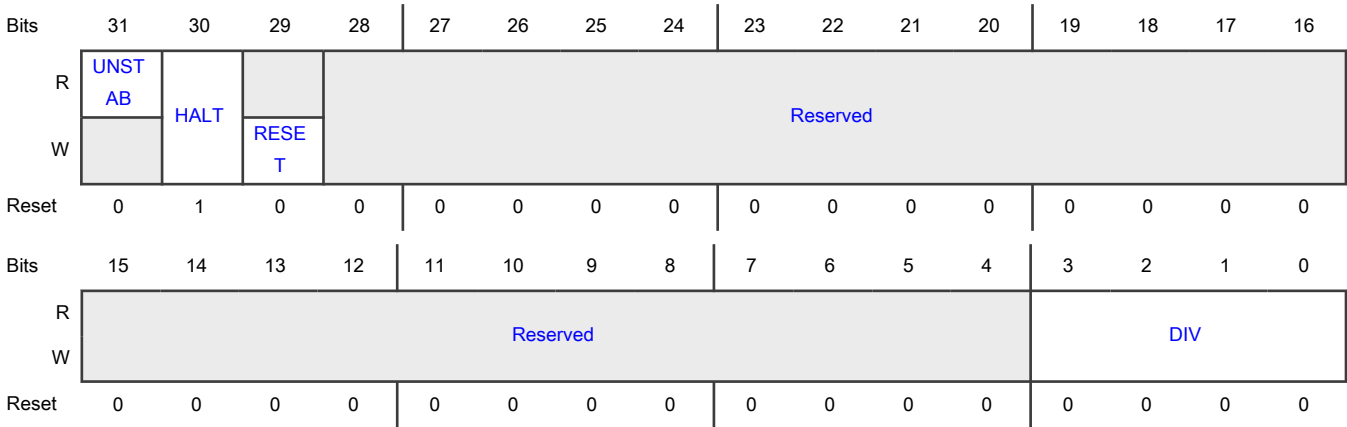

Fields


Field	Function
31 UNSTAB	Divider status flag Determines the stability of the divider clock. 0b - Divider clock is stable 1b - Clock frequency isn't stable
30 HALT	Halt divider counter Halt divider counter 0b - Divider clock is running 1b - Divider clock is stopped
29 RESET	Reset divider counter Reset divider counter 0b - Divider isn't reset 1b - Divider is reset
28-4 —	reserved reserved
3-0 DIV	Functional Clock Divider Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. divider value = (DIV+1)

14.5.2.76 LPUART5 clock selection control (MRCC_LPUART5_CLKSEL)

Offset

Register	Offset
MRCC_LPUART5_CLKSEL	1A0h

Diagram

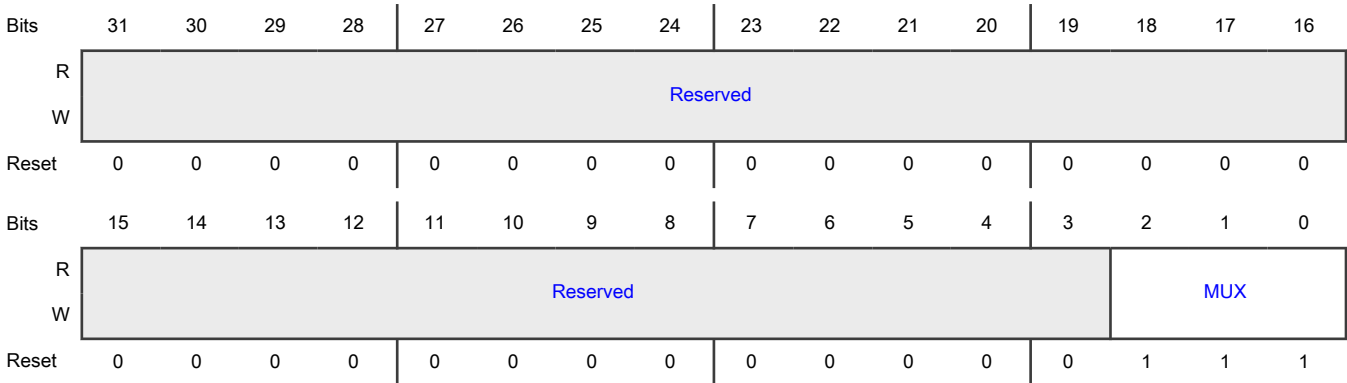

Fields


Field	Function
31-3	reserved
—	reserved
2-0 MUX	Functional Clock Mux Select Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. 000b - FRO_LF_DIV 010b - FRO_HF_DIV 011b - CLK_IN 100b - CLK_16K 101b - CLK_1M 110b - PLL1_CLK_DIV 111b - Reserved(NO Clock)

14.5.2.77 LPUART5 clock divider control (MRCC_LPUART5_CLKDIV)

Offset

Register	Offset
MRCC_LPUART5_CLKDIV	1A4h

Diagram

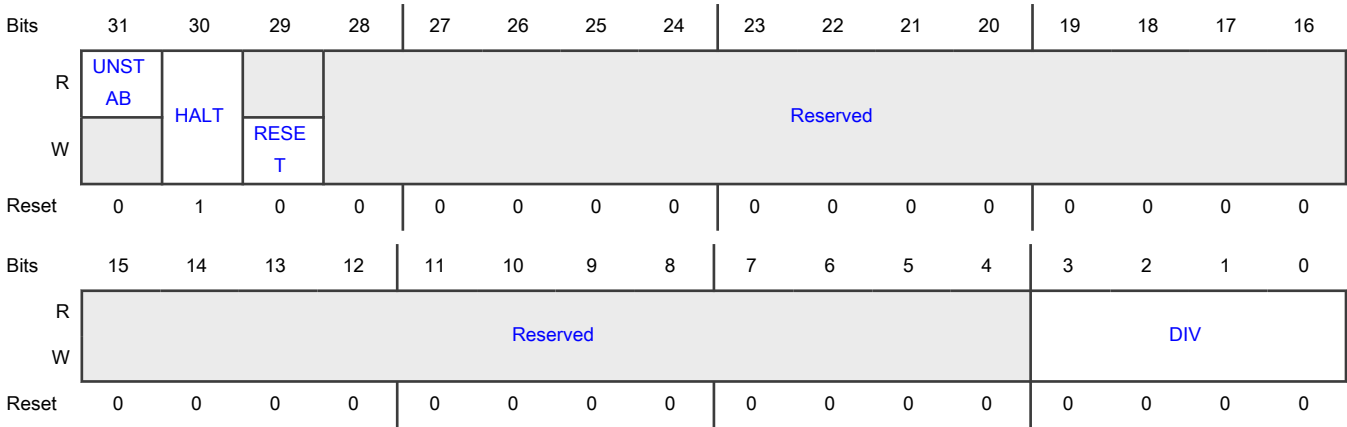

Fields

Field	Function
31 UNSTAB	Divider status flag Determines the stability of the divider clock. 0b - Divider clock is stable 1b - Clock frequency isn't stable
30 HALT	Halt divider counter Halt divider counter 0b - Divider clock is running 1b - Divider clock is stopped
29 RESET	Reset divider counter Reset divider counter 0b - Divider isn't reset 1b - Divider is reset
28-4 —	reserved reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
3-0 DIV	Functional Clock Divider Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. divider value = (DIV+1)

14.5.2.78 DBG_TRACE clock selection control (MRCC_DBG_TRACE_CLKSEL)

Offset

Register	Offset
MRCC_DBG_TRACE_CLKSEL	1A8h

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	Reserved															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserved													MUX		
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields


Field	Function
31-2 —	reserved reserved
1-0 MUX	Functional Clock Mux Select Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. 00b - CPU_CLK 01b - CLK_1M 10b - CLK_16K 11b - Reserved1(NO Clock)

14.5.2.79 DBG_TRACE clock divider control (MRCC_DBG_TRACE_CLKDIV)

Offset

Register	Offset
MRCC_DBG_TRACE_C LKDIV	1ACh

Diagram

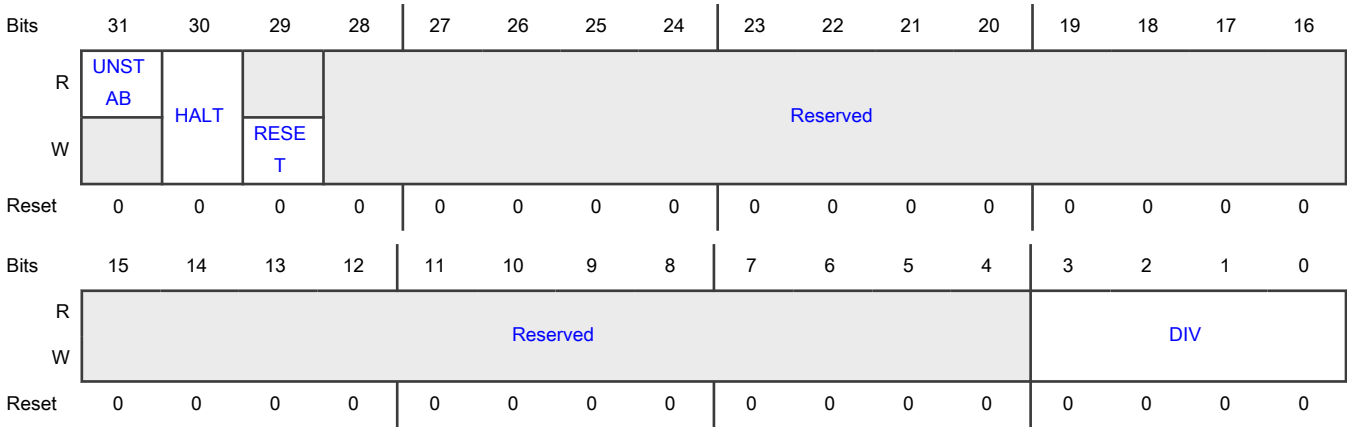

Fields

Field	Function
31 UNSTAB	Divider status flag Determines the stability of the divider clock. 0b - Divider clock is stable 1b - Clock frequency isn't stable
30 HALT	Halt divider counter Halt divider counter 0b - Divider clock is running 1b - Divider clock is stopped
29 RESET	Reset divider counter Reset divider counter 0b - Divider isn't reset 1b - Divider is reset
28-4 —	reserved reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
3-0 DIV	Functional Clock Divider Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. divider value = (DIV+1)

14.5.2.80 CLKOUT clock selection control (MRCC_CLKOUT_CLKSEL)

Offset

Register	Offset
MRCC_CLKOUT_CLKSEL	1B0h

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	Reserved															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserved												MUX			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1	1

Fields

Field	Function
31-3 —	reserved reserved
2-0 MUX	Functional Clock Mux Select Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. 000b - FRO_12M 001b - FRO_HF_DIV 010b - CLK_IN 011b - CLK_16K

Table continues on the next page...

Table continued from the previous page...


Field	Function
	101b - PLL1_CLK 110b - SLOW_CLK 111b - Reserved(NO Clock)

14.5.2.81 CLKOUT clock divider control (MRCC_CLKOUT_CLKDIV)

Offset

Register	Offset
MRCC_CLKOUT_CLKDIV	1B4h

Diagram

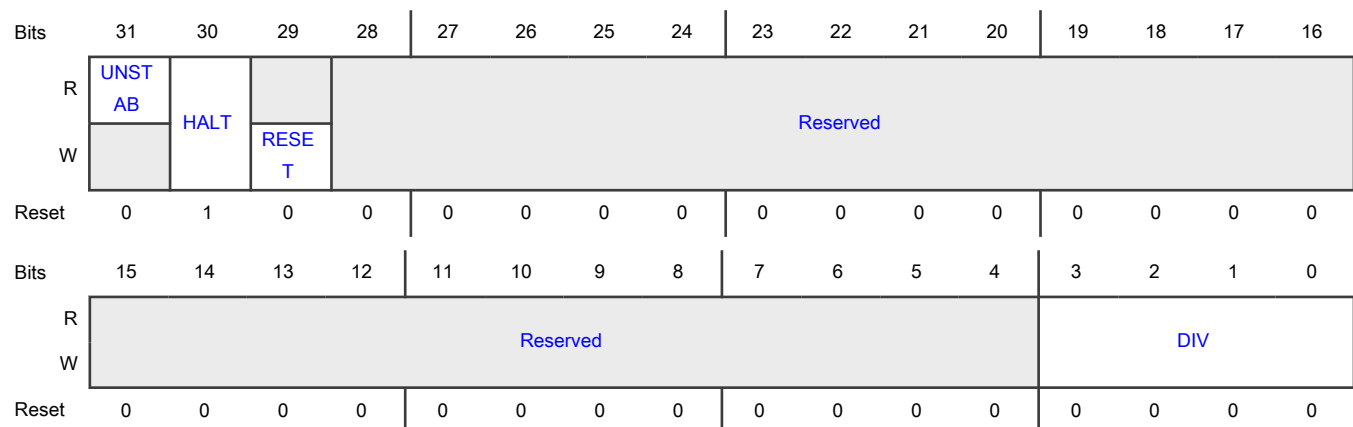

Fields

Field	Function
31 UNSTAB	Divider status flag Determines the stability of the divider clock. 0b - Divider clock is stable 1b - Clock frequency isn't stable
30 HALT	Halt divider counter Halt divider counter 0b - Divider clock is running 1b - Divider clock is stopped

Table continues on the next page...

Table continued from the previous page...

Field	Function
29 RESET	Reset divider counter Reset divider counter 0b - Divider isn't reset 1b - Divider is reset
28-4 —	reserved reserved
3-0 DIV	Functional Clock Divider Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. divider value = (DIV+1)

14.5.2.82 SYSTICK clock selection control (MRCC_SYSTICK_CLKSEL)

Offset

Register	Offset
MRCC_SYSTICK_CLKSEL	1B8h

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	Reserved															
W	Reserved															
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserved														MUX	
W	Reserved														MUX	
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1

Fields

Field	Function
31-2 —	reserved reserved
1-0	Functional Clock Mux Select

Table continues on the next page...

Table continued from the previous page...


Field	Function
MUX	Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. 00b - CPU_CLK 01b - CLK_1M 10b - CLK_16K 11b - Reserved1(NO Clock)

14.5.2.83 SYSTICK clock divider control (MRCC_SYSTICK_CLKDIV)

Offset

Register	Offset
MRCC_SYSTICK_CLKDIV	1BCh

Diagram

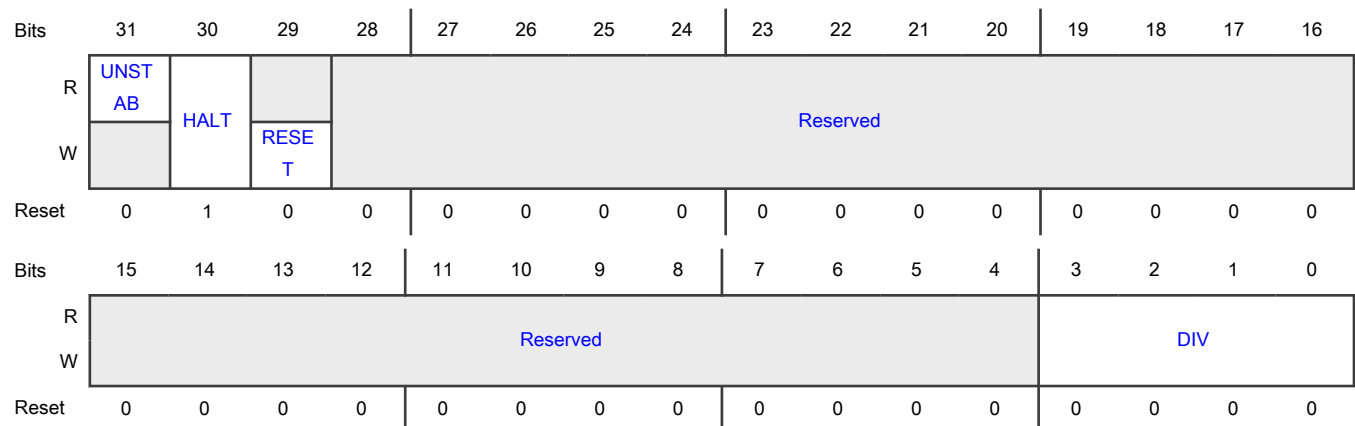

Fields

Field	Function
31 UNSTAB	Divider status flag Determines the stability of the divider clock. 0b - Divider clock is stable 1b - Clock frequency isn't stable
30 HALT	Halt divider counter Halt divider counter

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - Divider clock is running 1b - Divider clock is stopped
29 RESET	Reset divider counter Reset divider counter 0b - Divider isn't reset 1b - Divider is reset
28-4 —	reserved reserved
3-0 DIV	Functional Clock Divider Before change peripheral's functional clock source, should configure the module's MRCC_GLB_CC and MRCC_GLB_ACC bits to 0. divider value = (DIV+1)

14.6 Application information

Peripheral clock is gated by using CC (CC = {MRCC_GLB_ACC.[peripherals name], MRCC_GLB_CC.[peripherals name]})

1. CC = 0b00 : Peripheral clocks are disabled; module does not stall low power mode entry. Clock is always gated, peripheral access causes hard fault.
2. CC = 0b01 : Peripheral clocks are enabled; module does not stall low power mode entry. Clock is never gated unless root clock source is gated in DEEPSLEEP mode.
3. CC = 0b10 : Peripheral clocks are enabled unless module is idle; low power mode entry stalls until module is idle. Only LPUART, LPSPI, LPI2C, FLEXIO, GPIO, FMU support CC=0b10. for other modules, it's same as CC=0b11.
4. CC = 0b11 : Peripheral clocks are enabled unless in DEEPSLEEP (or lower) mode; low power mode entry stalls until module is idle.

NOTE

FMC's CC bits are only available during low power mode, FMC is accessible and no hardfault occurs if CC=0b00 in RUN mode.

Chapter 15

Math Acceleration Unit (MAU)

15.1 Chip-specific MAU information

Table 74. Reference links to related information

Topic	Related module	Reference
Full description	MAU	MAU
System memory map		Memory map
Clocking		Clock distribution
Power Management		Power Management
Signal multiplexing	Port control	

15.1.1 Module instances

This device contains one instance of the MAU module, MAU0.

15.2 Overview

MAUWRAP consists of MAU unit, interface and address decoder. It can realize the interaction between calculation and CPU through AHB interface, and supports reciprocal, square root, reciprocal square root, sine, cosine and arctan algorithms. MAU unit is the center of calculation and supports multiply data type and data size.

15.2.1 Block diagram

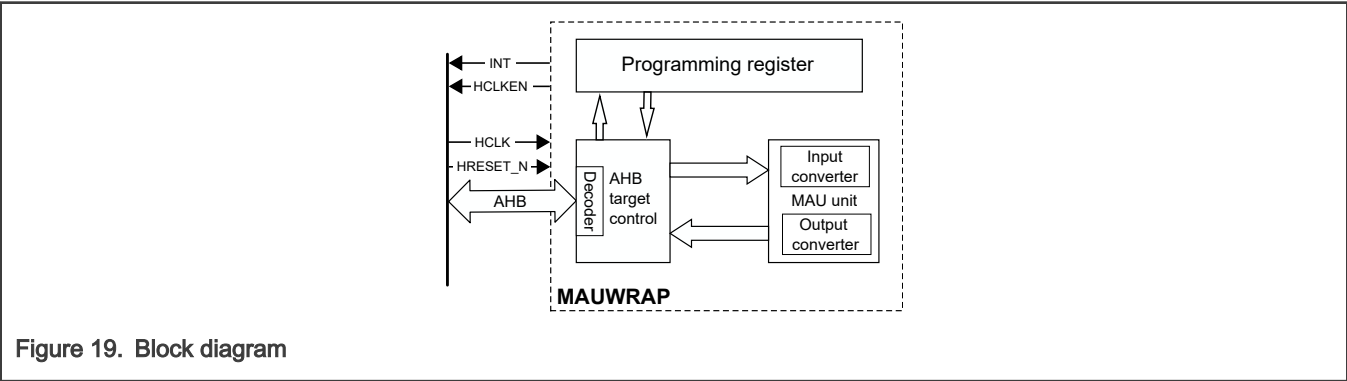


Figure 19. Block diagram

Memory-mapped arithmetic coprocessor connecting a CPU and MAUWRAP via an AMBA-AHB bus:

- CPU coprocessor writes transfer input argument data to MAUWRAP and use its address to control operation mode.
- CPU coprocessor reads retrieve output results from MAUWRAP back to the processor.
- Implementation supports a 'decorated storage' architecture where MAUWRAP operations are encoded into the address of the memory-mapped space.
- A 4 KB address space is allocated to MAUWRAP:
 - The first 2 KB address space (12'h000 - 12'h7ff) is allocated to "direct" programming register reads and writes.
 - The second 2 KB address space (12'h800 - 12'hfff) is allocated to "indirect" transmission of MAUWRAP commands and data operands.

Internally, MAUWRAP supports a 2-terminal (input argument, output result) connection to the MAUWRAP engine:

- Hardware controlled execution flow managed exclusively via AHB bus stalls
- Software programmable control of MAUWRAP operation, input argument size and type
- Independent programmable control of MAUWRAP output result format
- Accumulated “sticky” indicator flags with optional support for interrupt signaling

15.2.2 Features

MAUWRAP has the following features:

- AHB error response.
- Calculation: sine, cosine, arctangent, reciprocal, square root, reciprocal square root
- Data format: UINT8, UINT16, UINT32, INT8, INT16, INT32, Q1.7, Q1.15, Q1.31, Float16, and Float32
- Automatic gating during IDLE state to minimize dynamic power dissipation
- Partial supports AMBA3 AHB Lite.
 - Supports byte-aligned, halfword-aligned and word-aligned types for indirect operation.
 - Supports word-aligned type for direct operation.
- Reading results instantly when ready, without polling or interrupt

15.3 Functional description

15.3.1 Data format

15.3.1.1 UINT

The input and output data of MAUWRAP operation supports UINT8, UINT16, and UINT32 in unsigned integer format. These data formats are equivalent to the standard programming language data types of `uint8_t`, `uint16_t`, and `uint32_t` respectively.

In UINT8 format, numbers are represented by 8 integer bits. The numeric range is therefore 0('h00) to 2^8-1 ('hFF).

In UINT16 format, numbers are represented by 16 integer bits. The numeric range is therefore 0('h0000) to $2^{16}-1$ ('hFFFF).

In UINT32 format, numbers are represented by 32 integer bits. The numeric range is therefore 0('h00000000) to $2^{32}-1$ ('hFFFFFFFF).

15.3.1.2 INT

The input and output data of MAUWRAP operation supports INT8, INT16 and INT32 in signed integer format. These data format are equivalent to the standard programming language data types of `int8_t`, `int16_t` and `int32_t` respectively.

In INT8 format, numbers are represented by one sign bit and 7 integer bits. The numeric range is therefore -2^7 ('h80) to 2^7-1 ('h7F).

In INT16 format, numbers are represented by one sign bit and 15 integer bits. The numeric range is therefore -2^{15} ('h8000) to $2^{15}-1$ ('h7FFF).

In INT32 format, numbers are represented by one sign bit and 31 integer bits. The numeric range is therefore -2^{31} ('h80000000) to $2^{31}-1$ ('h7FFFFFFF).

15.3.1.3 Q1.x

The input and output data of MAUWRAP operation supports Q1.7, Q1.15 and Q1.31 in signed fixed fractional format.

In Q1.7 format, numbers are represented by one sign bit and 7 fractional bits(binary decimal places). The numeric range is therefore -1 ('h80) to $1-2^{-7}$ ('h7F).

In Q1.15 format, numbers are represented by one sign bit and 15 fractional bits(binary decimal places). The numeric range is therefore $-1(\text{'h8000})$ to $1-2^{(-15)}(\text{'h7FFF})$.

In Q1.31 format, numbers are represented by one sign bit and 31 fractional bits(binary decimal places). The numeric range is therefore $-1(\text{'h80000000})$ to $1-2^{(-31)}(\text{'h7FFFFFFF})$.

15.3.1.4 FLOAT

The input and output data of MAUWRAP operation supports Float16 and Float32 in IEEE754 Float Format.

In Float16 format, numbers are represented by one sign bit, 5 exponents bits, and 10 significand bits. The numeric range is therefore $-\infty$ to $+\infty$.

In Float32 format, numbers are represented by one sign bit, 8 exponents bits, and 23 significand bits. The numeric range is therefore $-\infty$ to $+\infty$.

15.3.2 MAUWRAP function

MAUWRAP allocates 4 KB to its memory-mapped programming model. It partitions this space into two equal-sized regions:

- 1st 2 KB (12'h0-12'h7ff) space supporting direct register accesses, and
- 2nd 2 KB (12'h800-12'hfff) space supporting indirect MAUWRAP commands and data transfers.

15.3.2.1 dataType

Table 75. Format of decorated storage address

	BIT11	BIT10	BIT9	BIT8	BIT7	BIT6	BIT5	BIT4	BIT3	BIT2	BIT1	BIT0
Direct operation	0	0	0	0	0	Offset						
Indirect operation	1	dt		ressel		mopc					0	0

- offset[6:0]=Register offset.
- dt[1:0] = dataType: 2'b00 = unsigned int, 2'b01 = signed int, 2'b10 = signed fixed fractional, and 2'b11 = IEEE754 float
- ressel[1:0] = Result Register(RESx) Select: 2'b00 = RES0, 2'b01 = RES1, 2'b10 = RES2, and 2'b11 = RES3
- mopc[4:0] = MAUWRAP Opcode: 5'd0: bypass; 5'd 1: recip(x); 5'd 2: sqrt(x); 5'd 3: 1/sqrt(x); 5'd 8: cos(π *x); 5'd 9: sin(π *x); 5'd 12: atan(x)/ π

15.3.2.2 Esize

MAUWRAP supports:

- byte-aligned, halfword-aligned and word-aligned transfer for indirect operation
- word-aligned transfer for direct operation.

Table 2 lists the relationship between AHB transfer size and data size of indirect or direct operation.

Table 76. Transfer size encoding

AHB Transfer size	dataSize	Description
Byte	8-bit	Byte-aligned transfer, when 8-bit data is written to the indirect address
Halfword	16-bit	Halfword-aligned transfer, when 16-bit data is written to the indirect address

Table continues on the next page...

Table 76. Transfer size encoding (continued)

AHB Transfer size	dataSize	Description
Word	32-bit	Word-aligned transfer, when 32-bit data is written to the indirect address or direct address

15.3.2.1 Direct operation

Software can write and read MAUWRAP registers only through AHB Bus word-aligned transfer, otherwise MAUWRAP can't guarantee the correctness of data.

The result of indirect operation can be stored in any one of result registers (RESx: RES0/RES1/RES2/RES3) in the address range of direct operation by encoding ressel[1:0]. Once the calculation of indirect operation is completed and stored in result registers (RESx: RES0/RES1/RES2/RES3), software can read the result register to get the calculation result.

If indirect operation is byte-aligned type transfer, only RESx[7:0] is available. If indirect operation is halfword-aligned type transfer, only RESx[15:0] is available. If indirect operation is word-aligned type transfer, RESx[31:0] is available.

Table 77. Memory-mapped address encoding for direct operation

	BIT11	BIT10	BIT9	BIT8	BIT7	BIT6	BIT5	BIT4	BIT3	BIT2	BIT1	BIT0	
Direct operation	0	0	0	0	0	Register offset							Register
12'h10	0	0	0	0	0	0	0	1	0	0	0	0	SYS_CTRL
12'h14	0	0	0	0	0	0	0	1	0	1	0	0	GEXP_STATUS_IE
12'h18	0	0	0	0	0	0	0	1	1	0	0	0	GEXP_STATUS
12'h30	0	0	0	0	0	0	1	1	0	0	0	0	OP_CTRL
12'h38	0	0	0	0	0	0	1	1	1	0	0	0	RES_STATUS_IE
12'h3C	0	0	0	0	0	0	1	1	1	1	0	0	RES_STATUS
12'h40	0	0	0	0	0	1	0	0	0	0	0	0	RES0
12'h44	0	0	0	0	0	1	0	0	0	1	0	0	RES1
12'h48	0	0	0	0	0	1	0	0	1	0	0	0	RES2
12'h4C	0	0	0	0	0	1	0	0	1	1	0	0	RES3

15.3.2.2 Indirect operation

Software can select calculations (sine, cosine, arctangent, reciprocal, square root, or reciprocal square root) and data formats (UINT, INT, Q1.x, or FLOAT) to participate in calculations by encoding the memory-mapped address in [Table 78](#).

Table 78. Memory-mapped address encoding for indirect operation

	BIT11	BIT10	BIT9	BIT8	BIT7	BIT6	BIT5	BIT4	BIT3	BIT2	BIT1	BIT0			
Indirect operation	1	dt		ressel		mopc					Reserved		Data format	Result register	Operation
12'h800	1	0	0	0	0	0	0	0	0	0	0	0	UINT	RES0	Bypass
12'h804	1	0	0	0	0	0	0	0	0	1	0	0	UINT	RES0	recip(x)
12'h808	1	0	0	0	0	0	0	0	1	0	0	0	UINT	RES0	sqrt(x)
12'h80c	1	0	0	0	0	0	0	0	1	1	0	0	UINT	RES0	1/sqrt(x)
12'h820	1	0	0	0	0	0	1	0	0	0	0	0	UINT	RES0	cos(π *x)
12'h824	1	0	0	0	0	0	1	0	0	1	0	0	UINT	RES0	sin(π *x)
12'h830	1	0	0	0	0	0	1	1	0	0	0	0	UINT	RES0	atan(x)/ π
12'h880	1	0	0	0	1	0	0	0	0	0	0	0	UINT	RES1	Bypass
12'h884	1	0	0	0	1	0	0	0	0	1	0	0	UINT	RES1	recip(x)
12'h888	1	0	0	0	1	0	0	0	1	0	0	0	UINT	RES1	sqrt(x)
12'h88c	1	0	0	0	1	0	0	0	1	1	0	0	UINT	RES1	1/sqrt(x)
12'h8a0	1	0	0	0	1	0	1	0	0	0	0	0	UINT	RES1	cos(π *x)
12'h8a4	1	0	0	0	1	0	1	0	0	1	0	0	UINT	RES1	sin(π *x)
12'h8b0	1	0	0	0	1	0	1	1	0	0	0	0	UINT	RES1	atan(x)/ π
12'h900	1	0	0	1	0	0	0	0	0	0	0	0	UINT	RES2	Bypass
12'h904	1	0	0	1	0	0	0	0	0	1	0	0	UINT	RES2	recip(x)
12'h908	1	0	0	1	0	0	0	0	1	0	0	0	UINT	RES2	sqrt(x)
12'h90c	1	0	0	1	0	0	0	0	1	1	0	0	UINT	RES2	1/sqrt(x)
12'h920	1	0	0	1	0	0	1	0	0	0	0	0	UINT	RES2	cos(π *x)
12'h924	1	0	0	1	0	0	1	0	0	1	0	0	UINT	RES2	sin(π *x)
12'h930	1	0	0	1	0	0	1	1	0	0	0	0	UINT	RES2	atan(x)/ π
12'h980	1	0	0	1	1	0	0	0	0	0	0	0	UINT	RES3	Bypass
12'h984	1	0	0	1	1	0	0	0	0	1	0	0	UINT	RES3	recip(x)
12'h988	1	0	0	1	1	0	0	0	1	0	0	0	UINT	RES3	sqrt(x)

Table continues on the next page...

Table 78. Memory-mapped address encoding for indirect operation (continued)

	BIT11	BIT10	BIT9	BIT8	BIT7	BIT6	BIT5	BIT4	BIT3	BIT2	BIT1	BIT0			
12'h98c	1	0	0	1	1	0	0	0	1	1	0	0	UINT	RES3	1/sqrt(x)
12'h9a0	1	0	0	1	1	0	1	0	0	0	0	0	UINT	RES3	cos(π *x)
12'h9a4	1	0	0	1	1	0	1	0	0	1	0	0	UINT	RES3	sin(π *x)
12'h9b0	1	0	0	1	1	0	1	1	0	0	0	0	UINT	RES3	atan(x)/ π
12'ha00	1	0	1	0	0	0	0	0	0	0	0	0	INT	RES0	Bypass
12'ha04	1	0	1	0	0	0	0	0	0	1	0	0	INT	RES0	recip(x)
12'ha08	1	0	1	0	0	0	0	0	1	0	0	0	INT	RES0	sqrt(x)
12'ha0c	1	0	1	0	0	0	0	0	1	1	0	0	INT	RES0	1/sqrt(x)
12'ha20	1	0	1	0	0	0	1	0	0	0	0	0	INT	RES0	cos(π *x)
12'ha24	1	0	1	0	0	0	1	0	0	1	0	0	INT	RES0	sin(π *x)
12'ha30	1	0	1	0	0	0	1	1	0	0	0	0	INT	RES0	atan(x)/ π
12'ha80	1	0	1	0	1	0	0	0	0	0	0	0	INT	RES1	Bypass
12'ha84	1	0	1	0	1	0	0	0	0	1	0	0	INT	RES1	recip(x)
12'ha88	1	0	1	0	1	0	0	0	1	0	0	0	INT	RES1	sqrt(x)
12'ha8c	1	0	1	0	1	0	0	0	1	1	0	0	INT	RES1	1/sqrt(x)
12'haa0	1	0	1	0	1	0	1	0	0	0	0	0	INT	RES1	cos(π *x)
12'haa4	1	0	1	0	1	0	1	0	0	1	0	0	INT	RES1	sin(π *x)
12'hab0	1	0	1	0	1	0	1	1	0	0	0	0	INT	RES1	atan(x)/ π
12'hb00	1	0	1	1	0	0	0	0	0	0	0	0	INT	RES2	Bypass
12'hb04	1	0	1	1	0	0	0	0	0	1	0	0	INT	RES2	recip(x)
12'hb08	1	0	1	1	0	0	0	0	1	0	0	0	INT	RES2	sqrt(x)
12'hb0c	1	0	1	1	0	0	0	0	1	1	0	0	INT	RES2	1/sqrt(x)
12'hb20	1	0	1	1	0	0	1	0	0	0	0	0	INT	RES2	cos(π *x)
12'hb24	1	0	1	1	0	0	1	0	0	1	0	0	INT	RES2	sin(π *x)
12'hb30	1	0	1	1	0	0	1	1	0	0	0	0	INT	RES2	atan(x)/ π

Table continues on the next page...

Table 78. Memory-mapped address encoding for indirect operation (continued)

	BIT11	BIT10	BIT9	BIT8	BIT7	BIT6	BIT5	BIT4	BIT3	BIT2	BIT1	BIT0			
12'hb80	1	0	1	1	1	0	0	0	0	0	0	0	INT	RES3	Bypass
12'hb84	1	0	1	1	1	0	0	0	0	1	0	0	INT	RES3	recip(x)
12'hb88	1	0	1	1	1	0	0	0	1	0	0	0	INT	RES3	sqrt(x)
12'hb8c	1	0	1	1	1	0	0	0	1	1	0	0	INT	RES3	1/sqrt(x)
12'hba0	1	0	1	1	1	0	1	0	0	0	0	0	INT	RES3	cos(π *x)
12'hba4	1	0	1	1	1	0	1	0	0	1	0	0	INT	RES3	sin(π *x)
12'hbb0	1	0	1	1	1	0	1	1	0	0	0	0	INT	RES3	atan(x)/ π
12'hc00	1	1	0	0	0	0	0	0	0	0	0	0	Q1.x	RES0	Bypass
12'hc04	1	1	0	0	0	0	0	0	0	1	0	0	Q1.x	RES0	recip(x)
12'hc08	1	1	0	0	0	0	0	0	1	0	0	0	Q1.x	RES0	sqrt(x)
12'hc0c	1	1	0	0	0	0	0	0	1	1	0	0	Q1.x	RES0	1/sqrt(x)
12'hc20	1	1	0	0	0	0	1	0	0	0	0	0	Q1.x	RES0	cos(π *x)
12'hc24	1	1	0	0	0	0	1	0	0	1	0	0	Q1.x	RES0	sin(π *x)
12'hc30	1	1	0	0	0	0	1	1	0	0	0	0	Q1.x	RES0	atan(x)/ π
12'hc80	1	1	0	0	1	0	0	0	0	0	0	0	Q1.x	RES1	Bypass
12'hc84	1	1	0	0	1	0	0	0	0	1	0	0	Q1.x	RES1	recip(x)
12'hc88	1	1	0	0	1	0	0	0	1	0	0	0	Q1.x	RES1	sqrt(x)
12'hc8c	1	1	0	0	1	0	0	0	1	1	0	0	Q1.x	RES1	1/sqrt(x)
12'hca0	1	1	0	0	1	0	1	0	0	0	0	0	Q1.x	RES1	cos(π *x)
12'hca4	1	1	0	0	1	0	1	0	0	1	0	0	Q1.x	RES1	sin(π *x)
12'hcb0	1	1	0	0	1	0	1	1	0	0	0	0	Q1.x	RES1	atan(x)/ π
12'hd00	1	1	0	1	0	0	0	0	0	0	0	0	Q1.x	RES2	Bypass
12'hd04	1	1	0	1	0	0	0	0	0	1	0	0	Q1.x	RES2	recip(x)
12'hd08	1	1	0	1	0	0	0	0	1	0	0	0	Q1.x	RES2	sqrt(x)
12'hd0c	1	1	0	1	0	0	0	0	1	1	0	0	Q1.x	RES2	1/sqrt(x)

Table continues on the next page...

Table 78. Memory-mapped address encoding for indirect operation (continued)

	BIT11	BIT10	BIT9	BIT8	BIT7	BIT6	BIT5	BIT4	BIT3	BIT2	BIT1	BIT0			
12'hd20	1	1	0	1	0	0	1	0	0	0	0	0	Q1.x	RES2	$\cos(\pi^*x)$
12'hd24	1	1	0	1	0	0	1	0	0	1	0	0	Q1.x	RES2	$\sin(\pi^*x)$
12'hd30	1	1	0	1	0	0	1	1	0	0	0	0	Q1.x	RES2	$\text{atan}(x)/\pi$
12'hd80	1	1	0	1	1	0	0	0	0	0	0	0	Q1.x	RES3	Bypass
12'hd84	1	1	0	1	1	0	0	0	0	1	0	0	Q1.x	RES3	$\text{recip}(x)$
12'hd88	1	1	0	1	1	0	0	0	1	0	0	0	Q1.x	RES3	$\text{sqrt}(x)$
12'hd8c	1	1	0	1	1	0	0	0	1	1	0	0	Q1.x	RES3	$1/\text{sqrt}(x)$
12'hda0	1	1	0	1	1	0	1	0	0	0	0	0	Q1.x	RES3	$\cos(\pi^*x)$
12'hda4	1	1	0	1	1	0	1	0	0	1	0	0	Q1.x	RES3	$\sin(\pi^*x)$
12'hdb0	1	1	0	1	1	0	1	1	0	0	0	0	Q1.x	RES3	$\text{atan}(x)/\pi$
12'he00	1	1	1	0	0	0	0	0	0	0	0	0	FLOAT	RES0	Bypass
12'he04	1	1	1	0	0	0	0	0	0	1	0	0	FLOAT	RES0	$\text{recip}(x)$
12'he08	1	1	1	0	0	0	0	0	1	0	0	0	FLOAT	RES0	$\text{sqrt}(x)$
12'he0c	1	1	1	0	0	0	0	0	1	1	0	0	FLOAT	RES0	$1/\text{sqrt}(x)$
12'he20	1	1	1	0	0	0	1	0	0	0	0	0	FLOAT	RES0	$\cos(\pi^*x)$
12'he24	1	1	1	0	0	0	1	0	0	1	0	0	FLOAT	RES0	$\sin(\pi^*x)$
12'he30	1	1	1	0	0	0	1	1	0	0	0	0	FLOAT	RES0	$\text{atan}(x)/\pi$
12'he80	1	1	1	0	1	0	0	0	0	0	0	0	FLOAT	RES1	Bypass
12'he84	1	1	1	0	1	0	0	0	0	1	0	0	FLOAT	RES1	$\text{recip}(x)$
12'he88	1	1	1	0	1	0	0	0	1	0	0	0	FLOAT	RES1	$\text{sqrt}(x)$
12'he8c	1	1	1	0	1	0	0	0	1	1	0	0	FLOAT	RES1	$1/\text{sqrt}(x)$
12'hea0	1	1	1	0	1	0	1	0	0	0	0	0	FLOAT	RES1	$\cos(\pi^*x)$
12'hea4	1	1	1	0	1	0	1	0	0	1	0	0	FLOAT	RES1	$\sin(\pi^*x)$
12'heb0	1	1	1	0	1	0	1	1	0	0	0	0	FLOAT	RES1	$\text{atan}(x)/\pi$
12'hf00	1	1	1	1	0	0	0	0	0	0	0	0	FLOAT	RES2	Bypass

Table continues on the next page...

Table 78. Memory-mapped address encoding for indirect operation (continued)

	BIT11	BIT10	BIT9	BIT8	BIT7	BIT6	BIT5	BIT4	BIT3	BIT2	BIT1	BIT0			
12'hf04	1	1	1	1	0	0	0	0	0	1	0	0	FLOAT	RES2	recip(x)
12'hf08	1	1	1	1	0	0	0	0	1	0	0	0	FLOAT	RES2	sqrt(x)
12'hf0c	1	1	1	1	0	0	0	0	1	1	0	0	FLOAT	RES2	1/sqrt(x)
12'hf20	1	1	1	1	0	0	1	0	0	0	0	0	FLOAT	RES2	cos(π *x)
12'hf24	1	1	1	1	0	0	1	0	0	1	0	0	FLOAT	RES2	sin(π *x)
12'hf30	1	1	1	1	0	0	1	1	0	0	0	0	FLOAT	RES2	atan(x)/ π
12'hf80	1	1	1	1	1	0	0	0	0	0	0	0	FLOAT	RES3	Bypass
12'hf84	1	1	1	1	1	0	0	0	0	1	0	0	FLOAT	RES3	recip(x)
12'hf88	1	1	1	1	1	0	0	0	1	0	0	0	FLOAT	RES3	sqrt(x)
12'hf8c	1	1	1	1	1	0	0	0	1	1	0	0	FLOAT	RES3	1/sqrt(x)
12'hfa0	1	1	1	1	1	0	1	0	0	0	0	0	FLOAT	RES3	cos(π *x)
12'hfa4	1	1	1	1	1	0	1	0	0	1	0	0	FLOAT	RES3	sin(π *x)
12'hfb0	1	1	1	1	1	0	1	1	0	0	0	0	FLOAT	RES3	atan(x)/ π

For the calculations of reciprocal, square root, and reciprocal square root, the integer format (including signed and unsigned) is treated as true integer format. As for other calculations of sine, cosine, and arctangent, the integer format (including signed and unsigned) is treated as Q1.x data format.

For Q1.x data format, MAUWRAP always converts the input data into an internal floating point format with high precision, and then takes this floating point format and produces the output in the same floating point format. Finally, the internal output type converter of MAUWRAP takes the MAUWRAP results and converts it to the output format. The input and output type converters have a built in scaling factor by 2^n , where $n = \{-32 \dots +31\}$.

15.3.2.2.1 Bypass

Bypass is only used to debug, and the output data is always zero.

15.3.2.2.2 Reciprocal

Table 79. Reciprocal parameters

	Type e[1:0]]	Esiz e[1:0]]	Input form at	Data input rang e	Radi an rang e	Float output	X is value read from memory then converted to float	Input scaling	Output scaling			
									UNIT	INT	Q1.x	FLOAT
recip 1/(x)	0	0	UINT 8	[0,2 ⁸)	N/A	[2 ⁻⁸ ,+ ∞]	1/(x)	0	0	0	7	

Table continues on the next page...

Table 79. Reciprocal parameters (continued)

	Type[1:0]	Esiz e[1:0]	Input form at	Data input rang e	Radi an rang e	Float output	X is value read from memory then converted to float	Input scaling	Output scaling			
									UNIT	INT	Q1.x	FLOAT
	0	1	UINT 16	$[0, 2^{16})$	N/A	$[2^{-16}, +\infty]$	$1/(x)$	0	0	0	15	0
	0	2	UINT 32	$[0, 2^{32})$	N/A	$[2^{-32}, +\infty]$	$1/(x)$	0	0	0	31	0
	0	3	rsrv									
	1	0	INT8	$[-2^7, 2^7)$	N/A	$[\pm 2^{-7}, \pm \infty]$	$1/(x)$	0	0	0	7	
	1	1	INT1 6	$[-2^{15}, 2^{15})$	N/A	$[\pm 2^{-15}, \pm \infty]$	$1/(x)$	0	0	0	15	0
	1	2	INT3 2	$[-2^{31}, 2^{31})$	N/A	$[\pm 2^{-31}, \pm \infty]$	$1/(x)$	0	0	0	31	0
	1	3	rsrv									
	2	0	Q1.7	$[-1, +1)$	N/A	$[\pm 1, \pm \infty]$	$1/(x/2^7)$	-7	0	0		
	2	1	Q1.1 5	$[-1, +1)$	N/A	$[\pm 1, \pm \infty]$	$1/(x/2^{15})$	-15	0	0	15	0
	2	2	Q1.3 1	$[-1, +1)$	N/A	$[\pm 1, \pm \infty]$	$1/(x/2^{31})$	-31	0	0	31	0
	2	3	rsrv									
	3	0	rsrv									
	3	1	FLO AT16	$[-\infty, +\infty]$	N/A	$(-\infty, +\infty)$	$1/(x)$	0	0	0	15	0
	3	2	FLO AT32	$[-\infty, +\infty]$	N/A	$(-\infty, +\infty)$	$1/(x)$	0	0	0	31	0
	3	3	rsrv									

Reciprocal calculates the reciprocal of x which is stored in memory. Numbers highlighted in yellow are computed, but not very useful. For example, $\text{UINT8} = \text{recip}(\text{UINT8})$, the only output values are {0, 1, 255}. Everything else is a fraction.

15.3.2.2.3 Square root

Table 80. Square root parameters

	Type[1:0]	Esiz e[1:0]	Input format	Data input range	Radi an range	Float output	X is value read from memory then converted to float	Input scaling	Output scaling			
									UNIT	INT	Q1.x	FLOAT
sqrt $\sqrt{x}$	0	0	UINT8	[0,2 ⁸)	N/A	[0,2 ⁴)	sqrt(x)	0	0	0	7	
	0	1	UINT16	[0,2 ¹⁶)	N/A	[0,2 ⁸)	sqrt(x)	0	0	0	15	0
	0	2	UINT32	[0,2 ³²)	N/A	[0,2 ¹⁶)	sqrt(x)	0	0	0	31	0
	0	3	rsrv									
	1	0	INT8	[-2 ⁷ , 2 ⁷)	N/A	[0,2 ⁴)	sqrt(x)	0	0	0	7	
	1	1	INT16	[-2 ¹⁵ , 2 ¹⁵)	N/A	[0,2 ⁸)	sqrt(x)	0	0	0	15	0
	1	2	INT32	[-2 ³¹ , 2 ³¹)	N/A	[0,2 ¹⁶)	sqrt(x)	0	0	0	31	0
	1	3	rsrv									
	2	0	Q1.7	[-1, +1)	N/A	[0,1)	sqrt(x/2 ⁷)	-7	0	0		
	2	1	Q1.15	[-1, +1)	N/A	[0,1)	sqrt(x/2 ¹⁵)	-15	0	0	15	0
	2	2	Q1.31	[-1, +1)	N/A	[0,1)	sqrt(x/2 ³¹)	-31	0	0	31	0
	2	3	rsrv									
	3	0	rsrv									
	3	1	FLOAT16	[-∞, +∞]	N/A	[0, +∞]	sqrt(x)	0	0	0	15	0
	3	2	FLOAT32	[-∞, +∞]	N/A	[0, +∞]	sqrt(x)	0	0	0	31	0
	3	3	rsrv									

This operation calculates the square root of x which is stored in memory. Numbers highlighted in yellow are computed, but not very useful. For example, Q1.7 = sqrt(INT8). The only output values are {0, 1-2⁻⁷}. Everything else is out of range of Q1.7.

15.3.2.2.4 Reciprocal square root

Table 81. Reciprocal square root parameters

	Type[1:0]	Esiz e[1:0]	Input format	Data input range	Radi an range	Float output	X is value read from memory then converted to float	Input scaling	Output scaling			
									UNIT	INT	Q1.x	FLOAT
rsqrt 1/√ (x)	0	0	UINT8	[0,2 ⁸)	N/A	[2 ⁻⁸ ,+∞]	1/sqrt(x)	0	0	0	7	
	0	1	UINT16	[0,2 ¹⁶)	N/A	[2 ⁻¹⁶ ,+∞]	1/sqrt(x)	0	0	0	15	0
	0	2	UINT32	[0,2 ³²)	N/A	[2 ⁻³² ,+∞]	1/sqrt(x)	0	0	0	31	0
	0	3	rsrv									
	1	0	INT8	[-2 ⁷ ,2 ⁷)	N/A	[±2 ⁻⁷ ,±∞]	1/sqrt(x)	0	0	0	7	
	1	1	INT16	[-2 ¹⁵ ,2 ¹⁵)	N/A	[±2 ⁻¹⁵ ,±∞]	1/sqrt(x)	0	0	0	15	0
	1	2	INT32	[-2 ³¹ ,2 ³¹)	N/A	[±2 ⁻³¹ ,±∞]	1/sqrt(x)	0	0	0	31	0
	1	3	rsrv									
	2	0	Q1.7	[-1,+1)	N/A	[±1,±∞]	1/sqrt(x/2 ⁷)	-7	0	0	7	
	2	1	Q1.15	[-1,+1)	N/A	[±1,±∞]	1/sqrt(x/2 ¹⁵)	-15	0	0	15	0
	2	2	Q1.31	[-1,+1)	N/A	[±1,±∞]	1/sqrt(x/2 ³¹)	-31	0	0	31	0
	2	3	rsrv									
	3	0	rsrv									
	3	1	FLOAT16	[-∞,+∞]	N/A	[-∞,+∞]	1/sqrt(x)	0	0	0	15	0
	3	2	FLOAT32	[-∞,+∞]	N/A	[-∞,+∞]	1/sqrt(x)	0	0	0	31	0
	3	3	rsrv									

This operation calculates the reciprocal square root of x which is stored in memory. Numbers highlighted in yellow are computed, but not very useful. For example, UINT8 = rsqrt(UINT8). The only output values are {0,1,255}. Everything else is a fraction.

15.3.2.2.5 Sine

Table 82. Sine parameters

	Type[1:0]	Esiz e[1:0]	Input form at	Data input rang e	Radi an rang e	Float output	X is value read from memory then converted to float	Input scaling	Output scaling			
									UNIT	INT	Q1.x	FLOAT
sin sin(πx)	0	0	UINT 8	[0,2 ⁸)	[0,+2 π)	[-1,+1)	$\sin(\pi x/2^7)$	-7	7	7	7	
	0	1	UINT 16	[0,2 ¹⁶)	[0,+2 π)	[-1,+1)	$\sin(\pi x/2^{15})$	-15	15	15	15	0
	0	2	UINT 32	[0,2 ³²)	[0,+2 π)	[-1,+1)	$\sin(\pi x/2^{31})$	-31	31	31	31	0
	0	3	rsrv									
	1	0	INT8	[-2 ⁷ , 2 ⁷)	[- π ,+ π)	[-1,+1)	$\sin(\pi x/2^7)$	-7	7	7	7	
	1	1	INT1 6	[-2 ¹⁵ , 2 ¹⁵)	[- π ,+ π)	[-1,+1)	$\sin(\pi x/2^{15})$	-15	15	15	15	0
	1	2	INT3 2	[-2 ³¹ , 2 ³¹)	[- π ,+ π)	[-1,+1)	$\sin(\pi x/2^{31})$	-31	31	31	31	0
	1	3	rsrv									
	2	0	Q1.7	[-1,+ 1)	[- π ,+ π)	[-1,+1)	$\sin(\pi x/2^7)$	-7	7	7	7	
	2	1	Q1.1 5	[-1,+ 1)	[- π ,+ π)	[-1,+1)	$\sin(\pi x/2^{15})$	-15	15	15	15	0
	2	2	Q1.3 1	[-1,+ 1)	[- π ,+ π)	[-1,+1)	$\sin(\pi x/2^{31})$	-31	31	31	31	0
	2	3	rsrv									
	3	0	rsrv									
	3	1	FLO AT16	[- ∞ ,+ ∞)	(-1k π , +1k π)	[-1,+1)	$\sin(\pi x)$	0	15	15	15	0
	3	2	FLO AT32	[- ∞ ,+ ∞)	(-512 k π , +512 k π)	[-1,+1)	$\sin(\pi x)$	0	31	31	31	0
	3	3	rsrv									

This operation calculates the Sine of ($\pi \cdot x$), where x is stored in memory. If software wants to calculate $\sin(x)$, you have to multiply x by $1/\pi$ before writing x to MAUWRAP.

When the input format is selected as {Q1.7, Q1.15, Q1.31}, the number in memory is treated as an integer. It is converted to float and then divided by $2^{\{7, 15, 31\}}$, and then processed by the MAUWRAP as floating point numbers. When the input variables which are unsigned and signed integers, the number in memory is treated as fixed fractional format and has the same operation for MAUWRAP.

When the output type is selected as {Q1.7, Q1.15, Q1.31}, the floating point number generated by MAUWRAP is multiplied by $2^{\{7, 15, 31\}}$, then converted to an integer that is the final result and stored in memory. When the output variables which are unsigned and signed integers, the result has the same operation with fixed fractional format.

For example, use the Q1.7 value of $+127/128=0.9922$ as the input. The actual value stored in memory is $+127$. The input converter would perform $\text{int\_2\_float}(+127/2^7) = 0.9922$, which is the MAUWRAP input.

The MAUWRAP then performs $\sin(\pi \cdot 0.9922) = 0.0245412$.

Then you have these options for the result stored into memory:

- $\text{U8} = \text{float\_2\_int}(0.0245412 \cdot 2^7) = 3$
- $\text{I8} = \text{float\_2\_int}(0.0245412 \cdot 2^7) = 3$
- $\text{Q1.7} = \text{float\_2\_int}(0.0245412 \cdot 2^7) = 3$

If the result is an negative number and needs to convert to unsigned number, it clips at zero and it is not very useful. For example, use the Q1.7 value of $-127/128=-0.9922$ as the input. The actual value stored in memory is -127 , which is the MAUWRAP input.

The MAUWRAP then performs $\sin(\pi \cdot -0.9922) = -0.0245412$.

Then you have these options for the result stored into memory:

- $\text{U8} = \text{float\_2\_int}(-0.0245412 \cdot 2^7) = 0$ (output is unsigned, so it clips at zero)
- $\text{I8} = \text{float\_2\_int}(-0.0245412 \cdot 2^7) = -3$
- $\text{Q1.7} = \text{float\_2\_int}(-0.0245412 \cdot 2^7) = -3$

15.3.2.2.6 Cosine

Table 83. Cosine parameters

	Type e[1:0]]	Esiz e[1:0]]	Input form at	Data input rang e	Radi an rang e	Float output	X is value read from memory then converted to float	Input scaling	Output scaling			
									UNIT	INT	Q1.x	FLOAT
cos cos(πx)	0	0	UINT 8	$[0, 2^8)$	$[0, +2\pi)$	$[-1, +1)$	$\cos(\pi x/2^7)$	-7	7	7	7	
	0	1	UINT 16	$[0, 2^{16})$	$[0, +2\pi)$	$[-1, +1)$	$\cos(\pi x/2^{15})$	-15	15	15	15	0
	0	2	UINT 32	$[0, 2^{32})$	$[0, +2\pi)$	$[-1, +1)$	$\cos(\pi x/2^{31})$	-31	31	31	31	0
	0	3	rsrv									
	1	0	INT8	$[-2^7, 2^7)$	$[-\pi, +\pi)$	$[-1, +1)$	$\cos(\pi x/2^7)$	-7	7	7	7	

Table continues on the next page...

Table 83. Cosine parameters (continued)

	Type[1:0]	Esiz e[1:0]	Input form at	Data input rang e	Radi an rang e	Float output	X is value read from memory then converted to float	Input scaling	Output scaling			
									UNIT	INT	Q1.x	FLOAT
	1	1	INT16	$[-2^{15}, 2^{15})$	$[-\pi, +\pi)$	$[-1, +1)$	$\cos(\pi x / 2^{15})$	-15	15	15	15	0
	1	2	INT32	$[-2^{31}, 2^{31})$	$[-\pi, +\pi)$	$[-1, +1)$	$\cos(\pi x / 2^{31})$	-31	31	31	31	0
	1	3	rsrv									
	2	0	Q1.7	$[-1, +1)$	$[-\pi, +\pi)$	$[-1, +1)$	$\cos(\pi x / 2^7)$	-7	7	7		
	2	1	Q1.15	$[-1, +1)$	$[-\pi, +\pi)$	$[-1, +1)$	$\cos(\pi x / 2^{15})$	-15	15	15	15	0
	2	2	Q1.31	$[-1, +1)$	$[-\pi, +\pi)$	$[-1, +1)$	$\cos(\pi x / 2^{31})$	-31	31	31	31	0
	2	3	rsrv									
	3	0	rsrv									
	3	1	FLOAT16	$[-\infty, +\infty]$	$(-1k\pi, +1k\pi)$	$[-1, +1]$	$\cos(\pi x)$	0	15	15	15	0
	3	2	FLOAT32	$[-\infty, +\infty]$	$(-512k\pi, +512k\pi)$	$[-1, +1]$	$\cos(\pi x)$	0	31	31	31	0
	3	3	rsrv									

This operation calculates the Cosine of ($\pi \cdot x$), where x is stored in memory. If software wants to calculate $\cos(x)$, you have to multiply x by $1/\pi$ before writing x to MAUWRAP. See [Sine](#) for more information on data format converter.

15.3.2.2.7 Arctangent

Table 84. Arctangent parameters

	Type[1:0]	Esiz e[1:0]	Input Format	Data input range	Radi an range	Float output	X is value read from memory then converted to float	Input scaling	Output scaling			
									UNIT	INT	Q1.x	FLOAT
atan atan(x)/ π	0	0	UINT8	[0,2 ⁸)	N/A	[0,+0.25]	$\text{atan}(x/2^7) / \pi$	-7	7	7	7	
	0	1	UINT16	[0,2 ¹⁶)	N/A	[0,+0.25]	$\text{atan}(x/2^{15}) / \pi$	-15	15	15	15	0
	0	2	UINT32	[0,2 ³²)	N/A	[0,+0.25]	$\text{atan}(x/2^{31}) / \pi$	-31	31	31	31	0
	0	3	rsrv									
	1	0	INT8	[-2 ⁷ , 2 ⁷)	N/A	[-0.25,+0.25]	$\text{atan}(x/2^7) / \pi$	-7	7	7	7	
	1	1	INT16	[-2 ¹⁵ , 2 ¹⁵)	N/A	[-0.25,+0.25]	$\text{atan}(x/2^{15}) / \pi$	-15	15	15	15	0
	1	2	INT32	[-2 ³¹ , 2 ³¹)	N/A	[-0.25,+0.25]	$\text{atan}(x/2^{31}) / \pi$	-31	31	31	31	0
	1	3	rsrv									
	2	0	Q1.7	[-1,+1)	N/A	[-0.25,+0.25]	$\text{atan}(x/2^7) / \pi$	-7	7	7		
	2	1	Q1.15	[-1,+1)	N/A	[-0.25,+0.25]	$\text{atan}(x/2^{15}) / \pi$	-15	15	15	15	0
	2	2	Q1.31	[-1,+1)	N/A	[-0.25,+0.25]	$\text{atan}(x/2^{31}) / \pi$	-31	31	31	31	0
	2	3	rsrv									
	3	0	rsrv									
	3	1	FLOAT16	[- ∞ , + ∞]	N/A	[- ∞ , + ∞]	$\text{atan}(x)/\pi$	0	15	15	15	0
	3	2	FLOAT32	[- ∞ , + ∞]	N/A	[- ∞ , + ∞]	$\text{atan}(x)/\pi$	0	31	31	31	0
	3	3	rsrv									

This operation calculates the arctangent of (x) divided by π , where x is stored in memory. If software wants to calculate $\text{atan}(x)$, you have to multiply result by π after reading result from MAUWRAP. See [Sine](#) for more information on data format converter.

15.3.2.3 Override mode

In override mode, dataType applies to the input data. dataType can be overridden and different for the input and output.

Software can configure OP_CTL[OVDT_EN_RES0/1/2/3] and OP_CTL[OVDT_RES0/1/2/3] to override the output dataType of each result register respectively.

- If OVDT_EN_RES0 is set to 0, dataType of the result is equal to the dataType of the input. For example, RES0 = recip(INT8), then the dataType of RES0 is INT8.
- If OVDT_EN_RES0 is set 1 and OVDT_RES0 is set to 0, no matter what the dataType of input is, the dataType of result is always UINT. For example, RES0 = UINT(recip(INT8)), then the dataType of RES0 is UINT8.

15.3.2.4 Bus error response

15.3.2.4.1 Address protection

In order to protect the valid range of direct operation, MAUWRAP generates AHB bus error response when the Address is out of valid range. [Table 85](#) lists the situation of error response.

Table 85. AHB error response

Address[BIT11:BIT0]	AHB read/write	AHB response	Error interrupt
12'h0 - 12'h4c	Read	Okay	NA
	Write	Okay	NA
12'h50 - 12'h7ff	Read	Error	GEXP_STATUS[ERROR]
	Write	Error	GEXP_STATUS[ERROR]
12'h800 - 12'hfff	Read	Error	RES_STATUS[RESx_ERR]
	Write	Invalid operation: Error Valid operation: Okay	RES_STATUS[RESx_ERR]

15.3.2.4.2 Invalid operation

MAUWRAP doesn't support 64-bit AHB transfer and generates AHB bus error response when the address of operation belongs to [Table 86](#).

Invalid operation may update the value of RESx, therefore it makes no sense to read RESx after an invalid operation.

Table 86. Invalid operation of decorated storage address

	BIT11	BIT10:BIT9	BIT8:BIT7	BIT6:BIT2	
AHB byte transfer	1b	11b	NA	NA	AHB error response
AHB byte/halfword/word transfer	1b	NA	NA	Outside of {0, 1, 2, 3, 8, 9, and 12}	AHB error response


15.3.2.5 Nested ISR (Interrupt Service Routine)

MAUWRAP supports nested ISR through software and hardware cooperation. There are two options that can be selected by software, the first has a limit on the number of nested ISRs, but the second has no limit on the number of nested ISRs.

Limited Nested ISRs

Software doesn't need to save and restore status register (STATUS) and result registers (RES0/RES1/RES2/RES3) when an ISR is generated. However, this solution will result in MAUWRAP being unable to support back-to-back writes per task, because each

task can only use one result register. Since there are only 4 result registers (RES0/RES1/RES2/RES3) and different tasks must use different result registers, the maximum number of nested ISRs is 4. Figure 20 depicts the flow of limited nested ISRs

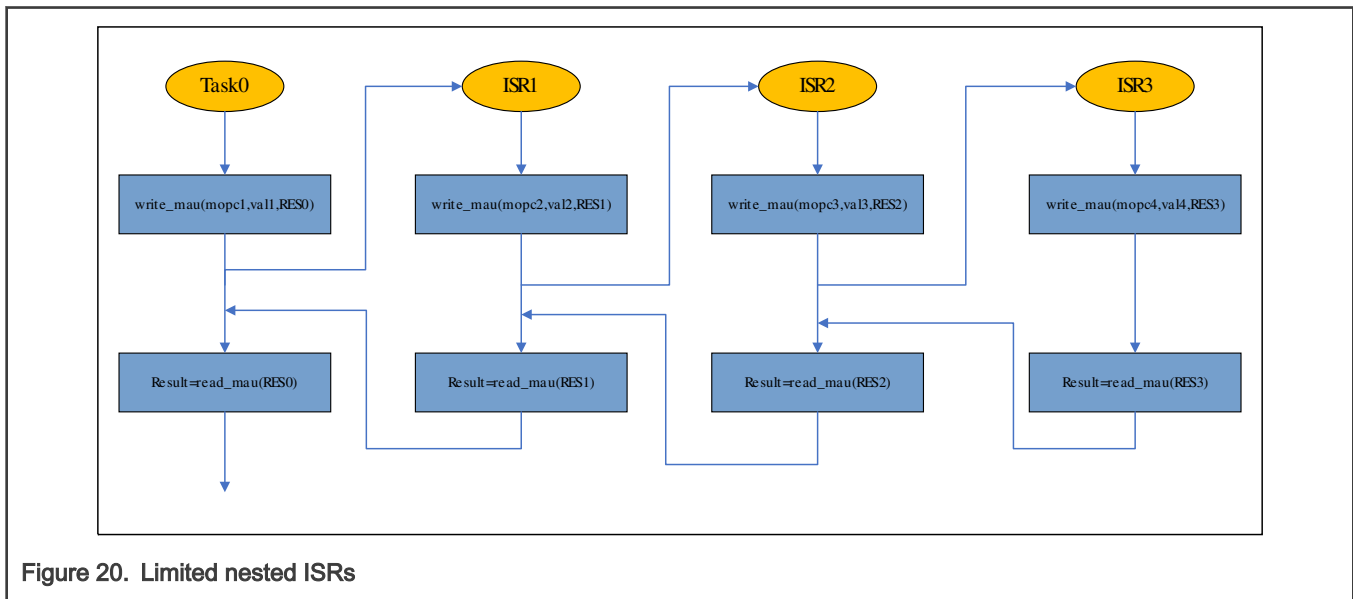

As shown in Figure 20, the flow of Task0 (background task) is as below:

- write_mau (mopc1, val1, RES0) : Software selects RES0 as result register and calculates the result of val1.
- Result=read_mau(RES0) : Software reads the result from RES0.
- The STATUS of Task0 is overwritten by ISR.

The flow of ISR1/ISR2/ISR3 (interrupt task) is as below:

- Interrupt priority: ISR1 < ISR2 < ISR3
- write_mau (mopc2, val2, RES1) : Software selects RES1 as result register and calculates the result of val2.
- Result=read_mau(RES1) : Software reads the result from RES1.
- The STATUS of ISR is overwritten by higher priority ISR.

Unlimited Nested ISRs

Software needs to save and restore status register and result registers when an ISR is generated. This solution supports back-to-back writes per task. The number of back-to-back writes can be controlled by software, but the maximum number of back-to-back writes is 4 because different writes must use different result registers. Figure 21 depicts the flow of limited nested ISRs(4 back-to-back writes).

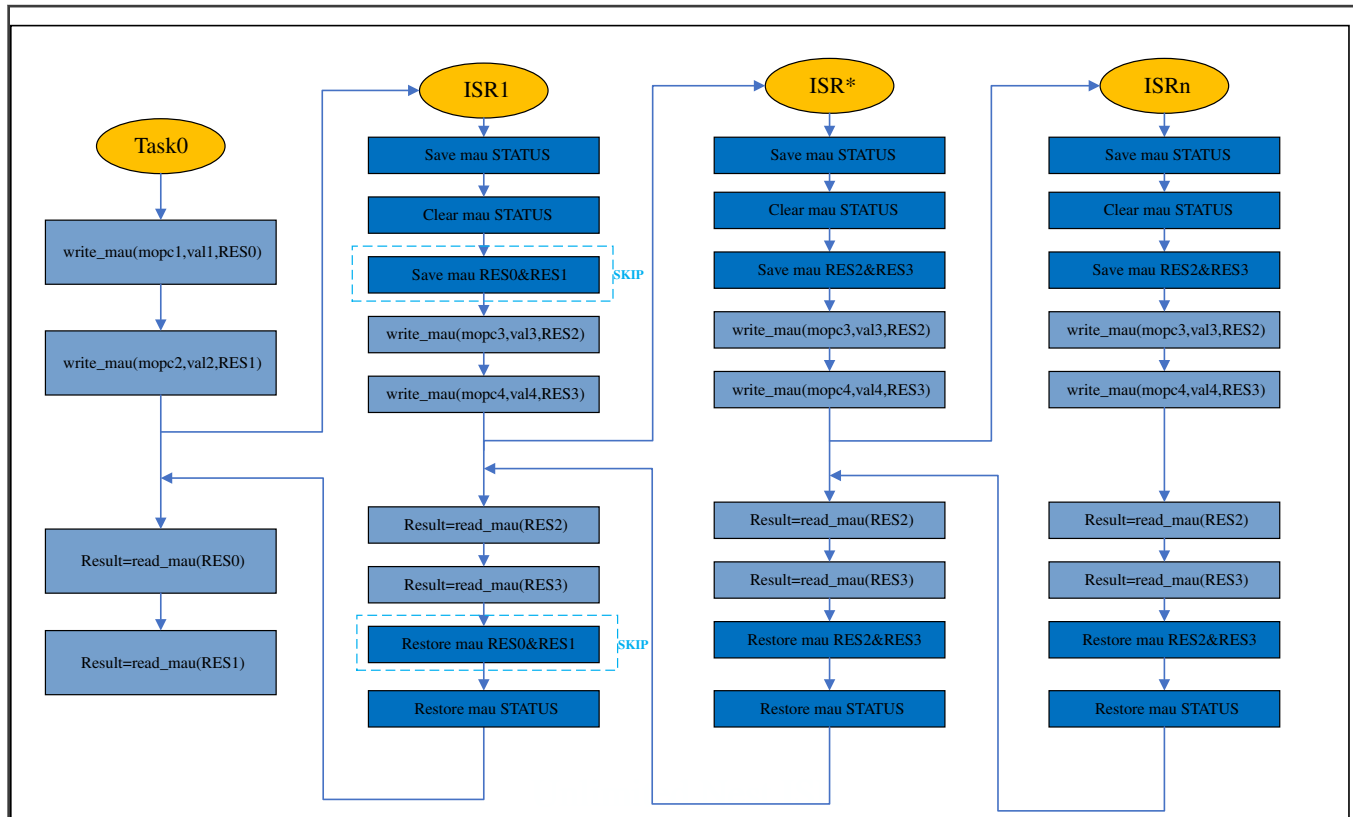


Figure 21. Unlimited Nested ISRs (2 back-to-back writes)

As shown in Figure 21, the flow of Task0 (background task) is as below:

- write_mau (mopc1,val1,RES0) : Software selects RES0 as result register and calculates the result of val1.
- write_mau (mopc2,val2,RES1) : Software selects RES1 as result register and calculates the result of val2.
- Result=read_mau(RES0) : Software reads the result from RES0.
- Result=read_mau(RES1) : Software reads the result from RES1.

The flow of ISR1/ISR*/ISRN (interrupt task) is as below:

- Interrupt priority: $ISR1 < ISR^* < ISRN$
- Save MAUWRAP STATUS: Software saving STATUS that has not completed will stall the read operation until that status is updated.
- Clear MAUWRAP STATUS: Software writes 1 to clear STATUS.
- Save RES0 and RES1: Software saves RES0 and RES1 to stack. If RES0 and RES1 are only used in one task (i.e. Task0). You can skip this step at ISR1.
- Restore RES0 and RES1: Software restores RES0 and RES1 to MAUWRAP at the end of ISR. If RES0 and RES1 are only used in one task (i.e. Task0). You cannot skip this step at ISR1.
- Restore MAUWRAP STATUS: Software restores STATUS to MAUWRAP.
- Save mau RES2 and RES3: Software saves RES2 and RES3 to stack. Since RES2 and RES3 are used in other tasks. You cannot skip this step at ISR* and ISRN.

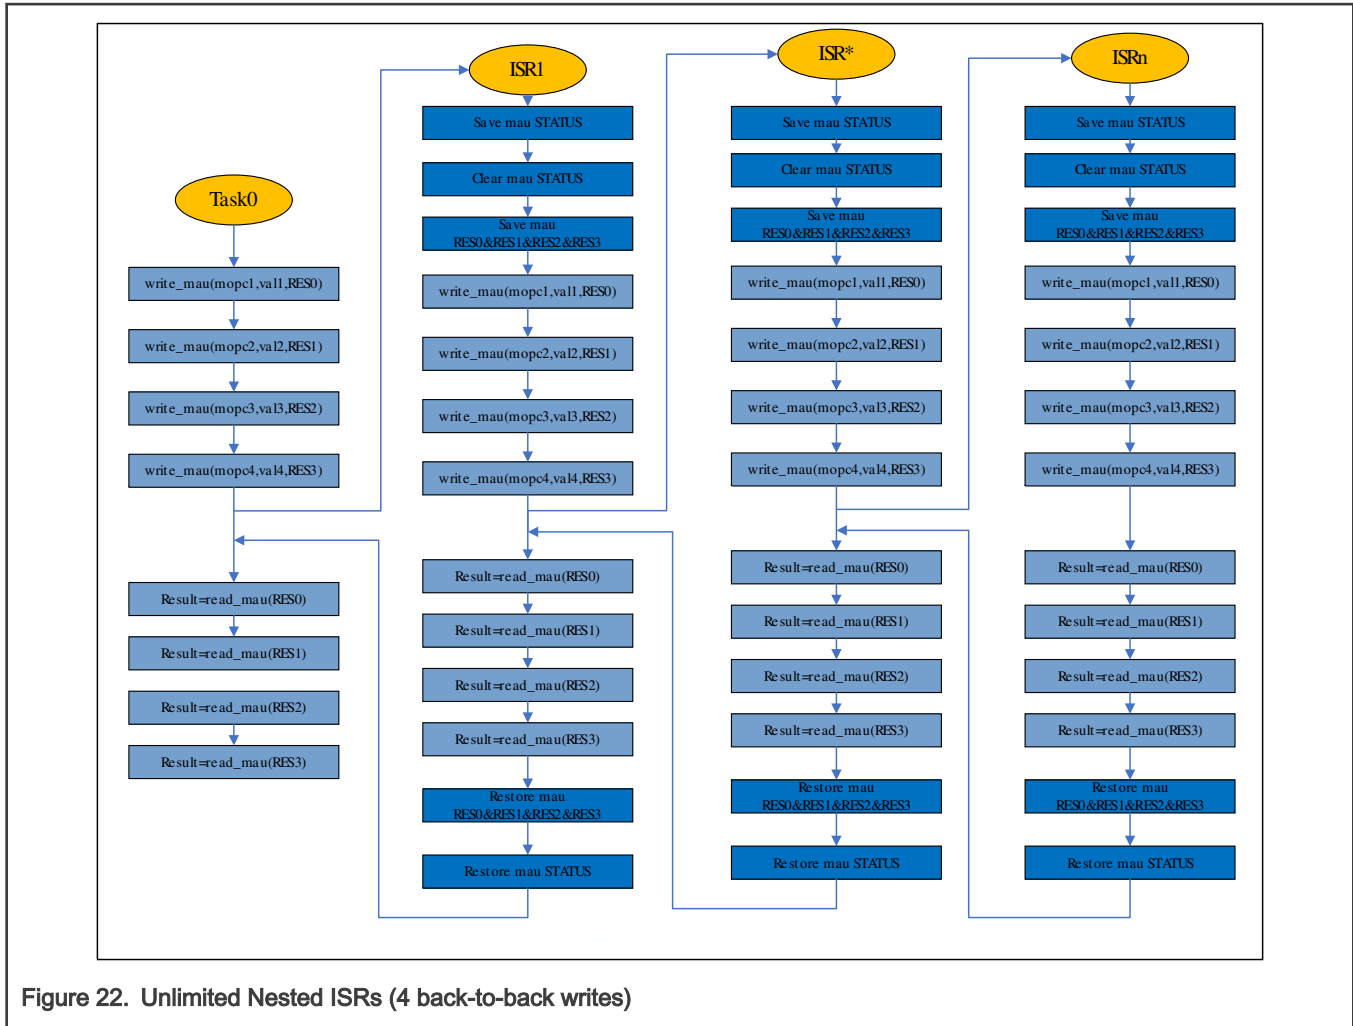


Figure 22. Unlimited Nested ISRs (4 back-to-back writes)

As shown in Figure 22, the flow of Task0 (background task) is as below:

- write_mau(mopc1,va11,RES0) : Software selects RES0 as result register and calculates the result of va11.
- write_mau(mopc2,va12,RES1) : Software selects RES1 as result register and calculates the result of va12.
- write_mau(mopc3,va13,RES2) : Software selects RES2 as result register and calculates the result of va13.
- write_mau(mopc4,va14,RES3) : Software selects RES3 as result register and calculates the result of va14.
- Result=read_mau(RES0) : Software reading the result from RES0 that has not completed will stall the read operation until that result register is updated.
- Result=read_mau(RES1) : Software reading the result from RES1 that has not completed will stall the read operation until that result register is updated.
- Result=read_mau(RES2) : Software reading the result from RES2 that has not completed will stall the read operation until that result register is updated.
- Result=read_mau(RES3) : Software reading the result from RES3 that has not completed will stall the read operation until that result register is updated.

The flow of ISR1/ISR*/ISRn (interrupt task) is as below:

- Interrupt priority: $ISR1 < ISR^* < ISRn$
- Save MAUWRAP STATUS: Software saving STATUS that has not completed will stall the read operation until that status is updated.

- Clear mau STAUS: Software writes 1 to clear STATUS.
- Save RES0, RES1, RES2, and RES3: Software saves RES0, RES1, RES2, and RES3.
- Restore RES0, RES1, RES2, and RES3: Software restores RES0, RES1, RES2, and RES3 to MAUWRAP.
- Restore MAUWRAP STATUS: Software restores STATUS to MAUWRAP.

15.3.3 Clocking

Table 87. MAUWRAP clocks

Type of clock	Description
Bus clock (HCLK)	Controls the access to the MAUWRAP registers and functions the MAUWRAP module.

15.3.4 Reset

MAUWRAP only supports software reset.

Table 88. Software reset

Reset name	Description
HRESET_N	Software reset, which is synchronized to AHB_CLK.

15.3.5 Interrupts

MAUWRAP asserts a direction operation interrupt by asserting GEXP_STATUS and disables the interrupt by negating CEXP_STATUS_EN. MAUWRAP also asserts a result register interrupt by asserting RES_STATUS and disables the interrupt by negating GEXP_STATUS_EN or RES_STATUS_EN.

Table 89. Interrupt

Register	Flag	Interrupt description
GEXP_STATUS	ERROR	Direct operation error
RES_STATUS	NX	IEEE inexact
	UF	IEEE Underflow
	OF	IEEE Overflow
	DZ	IEEE divide by zero
	NV	IEEE invalid
	ERR	Indirect operation error
	OVWR	Overwrite
	FULL	Full

15.4 External signal

There is no external signals for MAUWRAP, all the signals are internal.

15.5 Initialization

This module does not require initialization.

15.6 Application information

15.6.1 CPU mode

MAUWRAP calculates the result immediately when the data is written to indirect address. The read operation will stall until the result register is updated. CPU mode is the fastest way to use MAUWRAP. In this mode, software can control the number of back-to-back writes, but the maximum number is 4 because different writes must use different result register.

If software wants to calculate $\sin(\pi x)$ and $\cos(\pi x)$ continuously, the data format of x is Q1.7 and its value is 8'h7F. $\sin(\pi x)$ selects RES0 as result register and $\cos(\pi x)$ selects RES1 as result register.

To calculate $\sin(\pi x)$ and $\cos(\pi x)$ continuously, do the below steps:

1. Software prepares the data (8'h7F). The data is stored in common register or anywhere. CPU can catch this data. Software can prepare a lot of data at once.
2. CPU writes configuration to direct operation address, for example, 12'h0 – 12'h4c.
3. CPU writes data (8'h7F) to indirect operation address (12'hc24) via AHB bus, for example, $dt[1:0] = 2'b10$, $ressel[1:0] = 2'b00$, $mopc[4:0] = 9$.
4. CPU writes data (8'h7F) to indirect operation address (12'hca0) via AHB bus, for example, $dt[1:0] = 2'b10$, $ressel[1:0] = 2'b01$, $mopc[4:0] = 8$.
5. CPU reading data from RES0 (12'h40) that not completed will stall the read operation until that RES0 is updated.
6. CPU reading data from RES1 (12'h44) that not completed will stall the read operation until that RES1 is updated.
7. Go to step 3 for new indirect operation to initiate a new calculation.

15.6.2 Nested ISR

If the main routine (Task0) is calculating $\sin(\pi x)$ and $\cos(\pi x)$ continuously. An ISR1 for calculating $\sin(\pi x)$ and $\cos(\pi x)$ is generated before reading result registers, then an ISR2 for calculating $\sin(\pi x)$ and $\cos(\pi x)$ is generated before reading result registers.

Assume that the interrupt priority of ISR1 is lower than ISR2. Task0 uses RES0 and RES1 as result registers. ISR1 uses RES2 and RES3 as result registers. ISR2 uses RES2 and RES3 as result registers.

To calculate $\sin(\pi x)$ and $\cos(\pi x)$ continuously, do the below steps.

Software procedure on ISR1:

1. Software save STATUS (8'h3c) to stack.
2. Software writes 32'h00000000 to clear STATUS (8'h3c).
3. Software write data (8'h7F) to indirect address (12'hd24), for example, $dt[1:0] = 2'b10$, $ressel[1:0] = 2'b10$, $mopc[4:0] = 9$.
4. Software write data (8'h7F) to indirect address (12'hda0), for example, $dt[1:0] = 2'b10$, $ressel[1:0] = 2'b11$, $mopc[4:0] = 8$.
5. Software read data from RES2 (12'h48).
6. Software read data from RES3 (12'h4c).
7. Software restore STATUS (8'h3c) to MAUWRAP.

Software procedure on ISR2:

1. Software save STATUS (8'h3c) to stack.
2. Software writes 32'h00000000 to clear STATUS (8'h3c).
3. Software saves RES2 (12'h48) to stack.

4. Software saves RES3 (12'h4c) to stack.
5. Software writes data (8'h7F) to indirect address (12'hd24), for example, dt[1:0] = 2'b10, ressel[1:0] = 2'b10, mopc[4:0] = 9.
6. Software writes data (8'h7F) to indirect address (12'hda0), for example, dt[1:0] = 2'b10, ressel[1:0] = 2'b11, mopc[4:0] = 8.
7. Software reads data from RES2 (12'h48).
8. Software reads data from RES3 (12'h4c).
9. Software restores RES2 (12'h48) to MAUWRAP.
10. Software restores RES3 (12'h4c) to MAUWRAP.
11. Software restores STATUS (8'h3c) to MAUWRAP.

15.7 MAUWRAP register descriptions

15.7.1 MAUWRAP memory map

MAU0 base address: 4010_8000h

Offset	Register	Width (In bits)	Access	Reset value
10h	System Control (SYS_CTLR)	32	RW	0000_0001h
14h	General Exception Status Interrupt Enable (GEXP_STATUS_IE)	32	RW	0000_0000h
18h	General Exception Status (GEXP_STATUS)	32	RW	0000_0000h
30h	Operation Control (OP_CTRL)	32	RW	0000_0000h
38h	Result Status Interrupt Enable (RES_STATUS_IE)	32	RW	0000_0000h
3Ch	Result Status (RES_STATUS)	32	RW	0000_0000h
40h	Result Register 0 (RES0)	32	RW	0000_0000h
44h	Result Register 1 (RES1)	32	RW	0000_0000h
48h	Result Register 2 (RES2)	32	RW	0000_0000h
4Ch	Result Register 3 (RES3)	32	RW	0000_0000h

15.7.2 System Control (SYS_CTLR)


Offset

Register	Offset
SYS_CTLR	10h

Function

Sets control for MAUWRAP.

Diagram

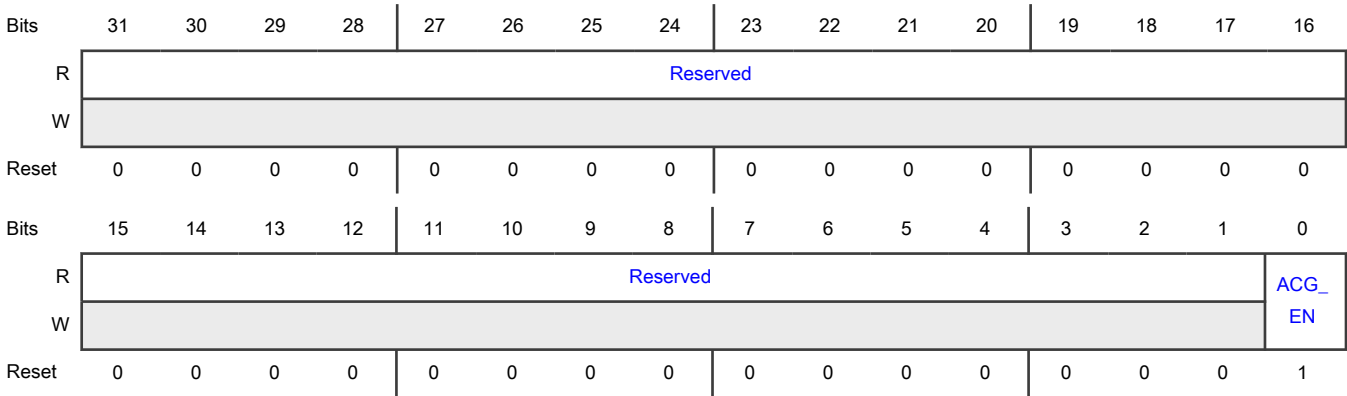

Fields

Field	Function
31-1 —	Reserved
0 ACG_EN	Automatic Clock Gating Enable Enables automatic clock gating. 0b - Disable 1b - Enable

15.7.3 General Exception Status Interrupt Enable (GEXP_STATUS_IE)


Offset

Register	Offset
GEXP_STATUS_IE	14h

Function

Selects which interrupt status is indicated to the host system as the interrupt. These status fields all share the same interrupt lines. Setting any of these fields to 1 enables interrupt generation. The corresponding Status register field generates an interrupt when the corresponding interrupt signal enable field is set.

Diagram

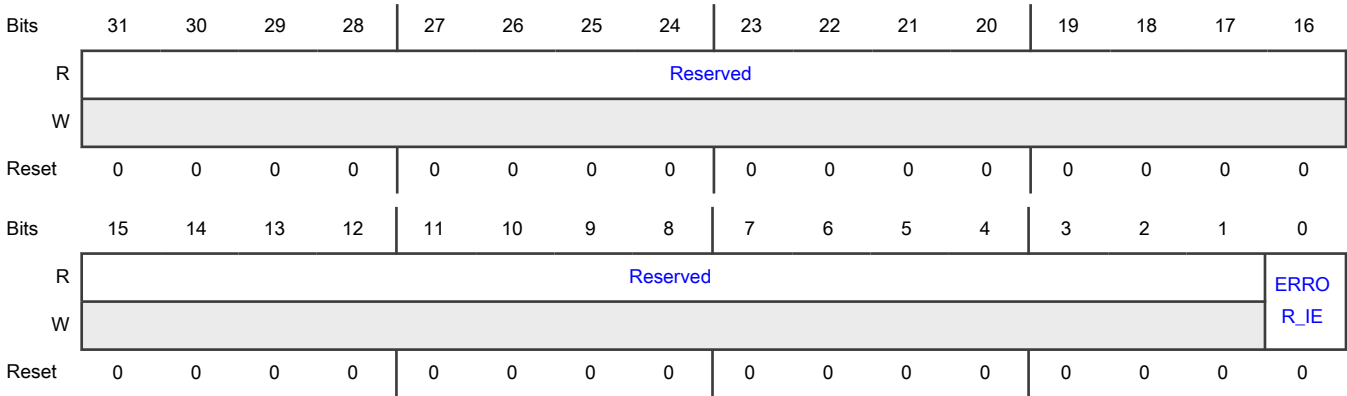

Fields

Field	Function
31-1 —	Reserved
0 ERROR_IE	Direct operation Error Interrupt Enable Enables direct operation error interrupt. 0b - Disable 1b - Enable

15.7.4 General Exception Status (GEXP_STATUS)


Offset

Register	Offset
GEXP_STATUS	18h

Function

Indicates the status of MAUWRAP.

Diagram

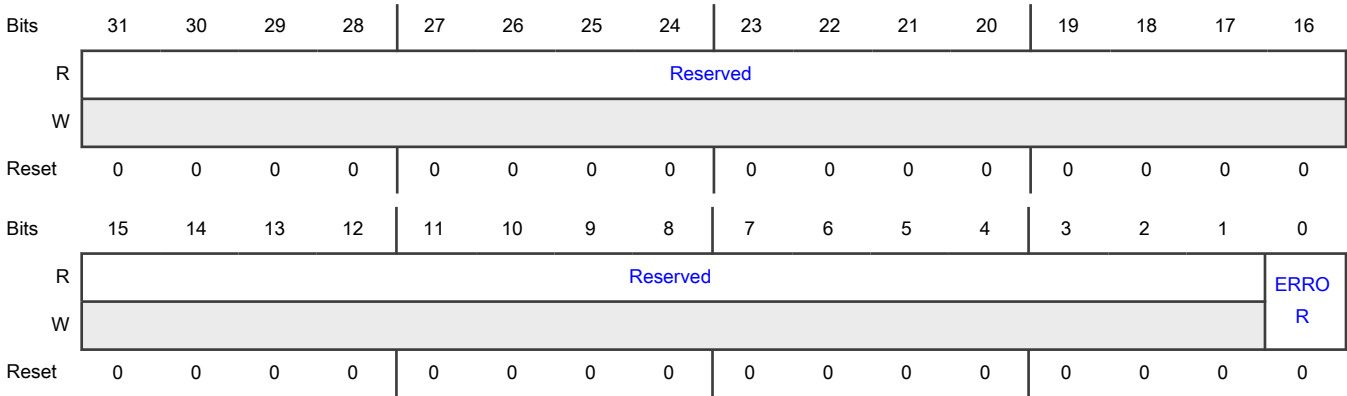

Fields

Field	Function
31-1 —	Reserved
0 ERROR	Direct operation Error Generates a direct operation error when writing or reading address is in the range of 0x50 to 0x7FF (in 12-bit width). 0b - No error is generated. 1b - An error is generated.


15.7.5 Operation Control (OP_CTRL)

Offset

Register	Offset
OP_CTRL	30h

Function

Controls the operation of result registers.

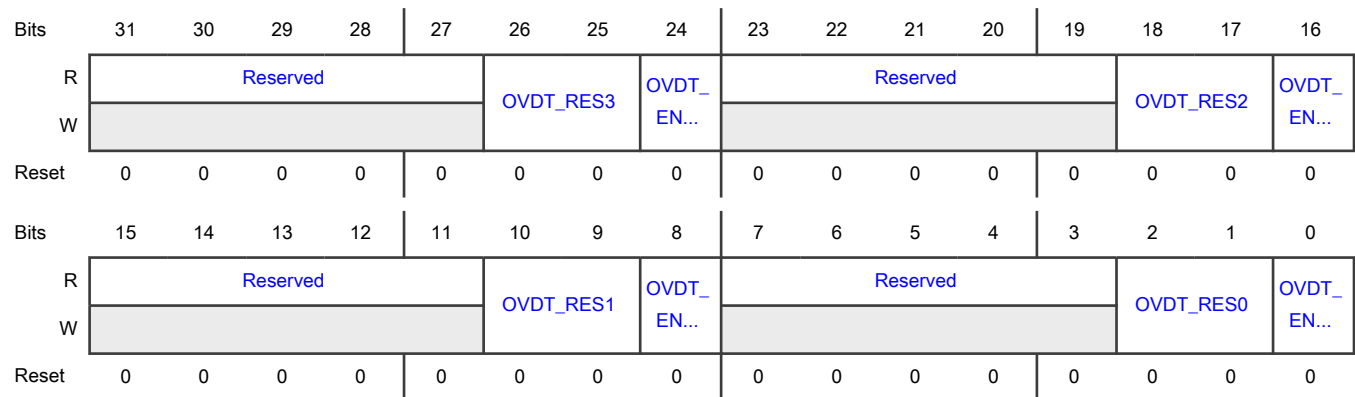Diagram**Fields**

Field	Function
31-27 —	Reserved
26-25 OVDT_RES3	Override RES3 Data Type Overrides the RES3 output data type to a specific data type. 00b - UINT 01b - INT 10b - Q1.X 11b - FLOAT
24 OVDT_EN_RES3	Override RES3 Data Type Enable Enables overriding the RES3 output data type. NOTE This feature is not supported in Bypass operation mode. 0b - Disable 1b - Enable
23-19 —	Reserved
18-17 OVDT_RES2	Override RES2 Data Type Overrides the RES2 output data type to a specific data type. 00b - UINT 01b - INT 10b - Q1.X 11b - FLOAT

Table continues on the next page...

Table continued from the previous page...

Field	Function
16 OVDT_EN_RES2	Override RES2 Data Type Enable Enables overriding the RES2 output data type. NOTE This feature is not supported in Bypass operation mode. 0b - Disable 1b - Enable
15-11 —	Reserved
10-9 OVDT_RES1	Override RES1 Data Type Overrides the RES1 output data type to a specific data type. 00b - UINT 01b - INT 10b - Q1.X 11b - FLOAT
8 OVDT_EN_RES1	Override RES1 Data Type Enable Enables overriding the RES1 output data type. NOTE This feature is not supported in Bypass operation mode. 0b - Disable 1b - Enable
7-3 —	Reserved
2-1 OVDT_RES0	Override RES0 Data Type Overrides the RES0 output data type to a specific data type. 00b - UINT 01b - INT 10b - Q1.X 11b - FLOAT
0 OVDT_EN_RES0	Override RES0 Data Type Enable Enables overriding the RES0 output data type.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	NOTE This feature is not supported in Bypass operation mode. 0b - Disable 1b - Enable

15.7.6 Result Status Interrupt Enable (RES_STATUS_IE)

Offset

Register	Offset
RES_STATUS_IE	38h

Function

Selects which interrupt status is indicated to the host system as the interrupt. These status fields all share the same interrupt lines. Setting any of these fields to 1 enables interrupt generation. The corresponding Status register field generates an interrupt when the corresponding interrupt signal enable field is set.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	Reserved															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserved												RES3_ IE	RES2_ IE	RES1_ IE	RES0_ IE
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-4 —	Reserved
3 RES3_IE	RES3 Interrupt Enable Enables RES3 Interrupt to control all the flags of RES3 (RES_STATUS[31:24]).

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - Disable 1b - Enable
2 RES2_IE	RES2 Interrupt Enable Enables RES2 Interrupt to control all the flags of RES2 (RES_STATUS[23:16]). 0b - Disable 1b - Enable
1 RES1_IE	RES1 Interrupt Enable Enables RES1 Interrupt to control all the flags of RES1 (RES_STATUS[15:8]). 0b - Disable 1b - Enable
0 RES0_IE	RES0 Interrupt Enable Enables RES0 Interrupt to control all the flags of RES0 (RES_STATUS[7:0]). 0b - Disable 1b - Enable

15.7.7 Result Status (RES_STATUS)

Offset

Register	Offset
RES_STATUS	3Ch

Function

Indicates the status of result registers.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	RES3_	RES3_	RES3_	RES3_	RES3_	RES3_	RES3_	RES3_	RES2_	RES2_	RES2_	RES2_	RES2_	RES2_	RES2_	RES2_
W	FU...	OV...	ERR	NV	DZ	OF	UF	NX	FU...	OV...	ERR	NV	DZ	OF	UF	NX
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	RES1_	RES1_	RES1_	RES1_	RES1_	RES1_	RES1_	RES1_	RES0_	RES0_	RES0_	RES0_	RES0_	RES0_	RES0_	RES0_
W	FU...	OV...	ERR	NV	DZ	OF	UF	NX	FU...	OV...	ERR	NV	DZ	OF	UF	NX
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31 RES3_FULL	RES3 Full Flag Indicates that whether RES3 has updated and can be read. This field is asserted when RES3 is updated and negated when RES3 is read. 0b - RES3 has not updated and cannot be read. 1b - RES3 has updated and can be read.
30 RES3_OVWR	RES3 Overwrite Flag Indicates that whether the value of RES3 has not been read yet and is overwritten by a new MAUWRAP result. 0b - The value of RES3 has been read. 1b - The value of RES3 has not been read yet and is overwritten by a new MAUWRAP result.
29 RES3_ERR	RES3 Indirect Operation Error Flag Indicates whether there is an invalid indirect operation, including an indirect read operation, or an illegal indirect write operation. 0b - No invalid indirect operation is detected. 1b - An invalid indirect operation error is detected.
28 RES3_NV	RES3 IEEE Invalid Flag Indicates that whether there is no usefully definable result. 0b - There is usefully definable result. 1b - There is no usefully definable result.
27 RES3_DZ	RES3 IEEE Divide by Zero Flag Indicates that whether an exact infinite result is defined for an operation on finite operands. 0b - No exact infinite result is defined for an operation on finite operands. 1b - An exact infinite result is defined for an operation on finite operands.
26 RES3_OF	RES3 IEEE Overflow Flag Indicates that whether the result format's largest finite number is exceeded. 0b - The result format's largest finite number is not exceeded. 1b - The result format's largest finite number is exceeded.
25 RES3_UF	RES3 IEEE Underflow Flag Indicates that whether a tiny non-zero result is detected. 0b - No tiny non-zero result is detected. 1b - A tiny non-zero result is detected.
24	RES3 IEEE Inexact Flag

Table continues on the next page...

Table continued from the previous page...

Field	Function
RES3_NX	Indicates that whether the result is rounded. 0b - The result is not rounded. 1b - The result is rounded, and as a result some digits lost.
23 RES2_FULL	RES2 Full Flag Indicates that whether RES2 has updated and can be read. This field is asserted when RES2 is updated and negated when RES2 is read. 0b - RES2 has not updated and cannot be read. 1b - RES2 has updated and can be read.
22 RES2_OVWR	RES2 Overwrite Flag Indicates that whether the value of RES2 has not been read yet and is overwritten by a new MAUWRAP result. 0b - The value of RES2 has been read. 1b - The value of RES2 has not been read yet and is overwritten by a new MAUWRAP result.
21 RES2_ERR	RES2 Indirect Operation Error Flag Indicates whether there is an invalid indirect operation, including an indirect read operation, or an illegal indirect write operation. 0b - No invalid indirect operation is detected. 1b - An invalid indirect operation error is detected.
20 RES2_NV	RES2 IEEE Invalid Flag Indicates that whether there is no usefully definable result. 0b - There is usefully definable result. 1b - There is no usefully definable result.
19 RES2_DZ	RES2 IEEE Divide by Zero Flag Indicates that whether an exact infinite result is defined for an operation on finite operands. 0b - No exact infinite result is defined for an operation on finite operands. 1b - An exact infinite result is defined for an operation on finite operands.
18 RES2_OF	RES2 IEEE Overflow Flag Indicates that whether the result format's largest finite number is exceeded. 0b - The result format's largest finite number is not exceeded. 1b - The result format's largest finite number is exceeded.
17 RES2_UF	RES2 IEEE Underflow Flag Indicates that whether a tiny non-zero result is detected.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - No tiny non-zero result is detected. 1b - A tiny non-zero result is detected.
16 RES2_NX	RES2 IEEE Inexact Flag Indicates that whether the result is rounded. 0b - The result is not rounded. 1b - The result is rounded, and as a result some digits lost.
15 RES1_FULL	RES1 Full Flag Indicates that whether RES1 has updated and can be read. This field is asserted when RES1 is updated and negated when RES1 is read. 0b - RES1 has not updated and cannot be read. 1b - RES1 has updated and can be read.
14 RES1_OVWR	RES1 Overwrite Flag Indicates that whether the value of RES1 has not been read yet and is overwritten by a new MAUWRAP result. 0b - The value of RES1 has been read. 1b - The value of RES1 has not been read yet and is overwritten by a new MAUWRAP result.
13 RES1_ERR	RES1 Indirect Operation Error Flag Indicates whether there is an invalid indirect operation, including an indirect read operation, or an illegal indirect write operation. 0b - No invalid indirect operation is detected. 1b - An invalid indirect operation error is detected.
12 RES1_NV	RES1 IEEE Invalid Flag Indicates that whether there is no usefully definable result. 0b - There is usefully definable result. 1b - There is no usefully definable result.
11 RES1_DZ	RES1 IEEE Divide by Zero Flag Indicates that whether an exact infinite result is defined for an operation on finite operands. 0b - No exact infinite result is defined for an operation on finite operands. 1b - An exact infinite result is defined for an operation on finite operands.
10 RES1_OF	RES1 IEEE Overflow Flag Indicates that whether the result format's largest finite number is exceeded. 0b - The result format's largest finite number is not exceeded.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	1b - The result format's largest finite number is exceeded.
9 RES1_UF	RES1 IEEE Underflow Flag Indicates that whether a tiny non-zero result is detected. 0b - No tiny non-zero result is detected. 1b - A tiny non-zero result is detected.
8 RES1_NX	RES1 IEEE Inexact Flag Indicates that whether the result is rounded. 0b - The result is not rounded. 1b - The result is rounded, and as a result some digits lost.
7 RES0_FULL	RES0 Full Flag Indicates that whether RES0 has updated and can be read. This field is asserted when RES0 is updated and negated when RES0 is read. 0b - RES0 has not updated and cannot be read. 1b - RES0 has updated and can be read.
6 RES0_OVWR	RES0 Overwrite Flag Indicates that whether the value of RES0 has not been read yet and is overwritten by a new MAUWRAP result. 0b - The value of RES0 has been read. 1b - The value of RES0 has not been read yet and is overwritten by a new MAUWRAP result.
5 RES0_ERR	RES0 Indirect Operation Error Flag Indicates whether there is an invalid indirect operation, including an indirect read operation, or an illegal indirect write operation. 0b - No invalid indirect operation is detected. 1b - An invalid indirect operation error is detected.
4 RES0_NV	RES0 IEEE Invalid Flag Indicates that whether there is no usefully definable result. 0b - There is usefully definable result. 1b - There is no usefully definable result.
3 RES0_DZ	RES0 IEEE Divide by Zero Flag Indicates that whether an exact infinite result is defined for an operation on finite operands. 0b - No exact infinite result is defined for an operation on finite operands. 1b - An exact infinite result is defined for an operation on finite operands.

Table continues on the next page...

Table continued from the previous page...

Field	Function
2 RES0_OF	RES0 IEEE Overflow Flag Indicates that whether the result format's largest finite number is exceeded. 0b - The result format's largest finite number is not exceeded. 1b - The result format's largest finite number is exceeded.
1 RES0_UF	RES0 IEEE Underflow Flag Indicates that whether a tiny non-zero result is detected. 0b - No tiny non-zero result is detected. 1b - A tiny non-zero result is detected.
0 RES0_NX	RES0 IEEE Inexact Flag Indicates that whether the result is rounded. 0b - The result is not rounded. 1b - The result is rounded, and as a result some digits lost.

15.7.8 Result Register 0 (RES0)


Offset

Register	Offset
RES0	40h

Function

Stores the result of MAUWRAP calculation. This register is selected when the AHB address Bit[8:7] = 2'b00.

Diagram

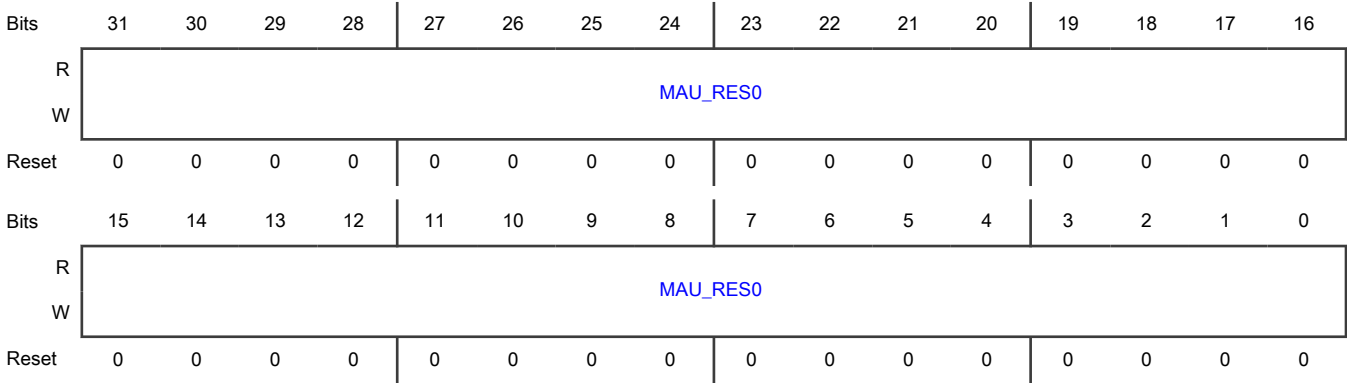

Fields


Field	Function
31-0 MAU_RES0	MAUWRAP Result Register 0 Stores the result of MAUWRAP calculation. If indirect operation is byte-aligned type, only RES0[7:0] is available. If indirect operation is halfword-aligned type, only RES0[15:0] is available. If indirect operation is word-aligned type, RES0[31:0] is available.

15.7.9 Result Register 1 (RES1)**Offset**

Register	Offset
RES1	44h

Function

Stores the result of MAUWRAP calculation. This register is selected when the AHB address Bit[8:7] = 2'b01.

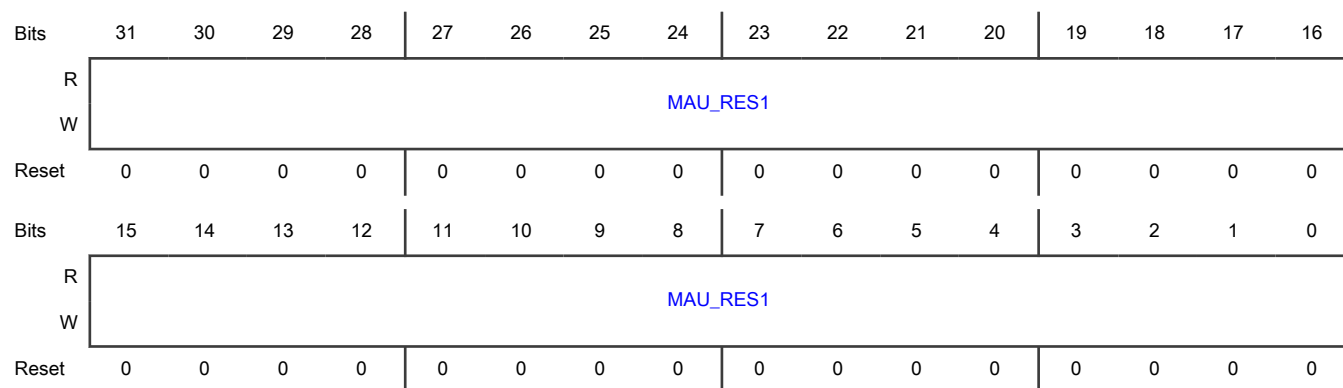Diagram**Fields**

Field	Function
31-0 MAU_RES1	MAUWRAP Result Register 1 Stores the result of MAUWRAP calculation. If indirect operation is byte-aligned type, only RES1[7:0] is available. If indirect operation is halfword-aligned type, only RES1[15:0] is available. If indirect operation is word-aligned type, RES1[31:0] is available.

15.7.10 Result Register 2 (RES2)


Offset

Register	Offset
RES2	48h

Function

Stores the result of MAUWRAP calculation. This register is selected when the AHB address Bit[8:7] = 2'b10.

Diagram

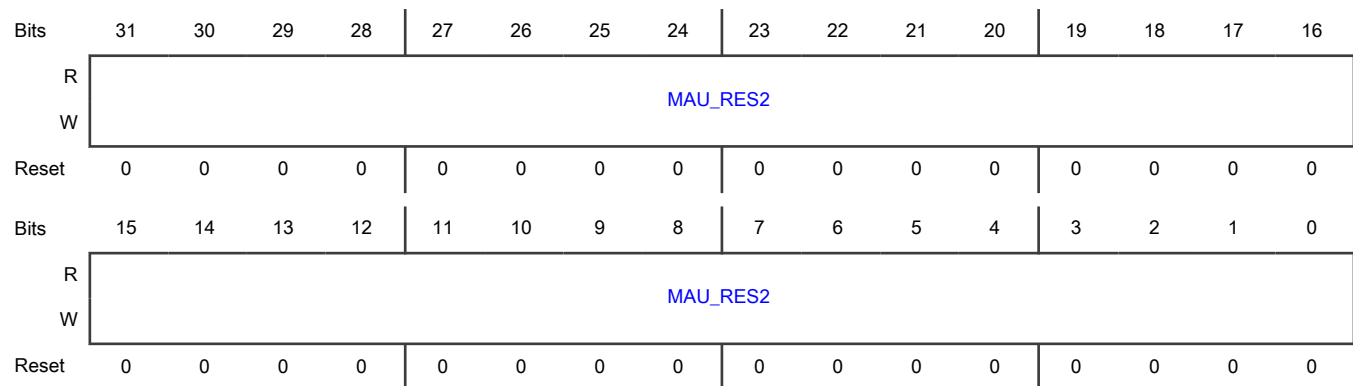

Fields

Field	Function
31-0 MAU_RES2	MAUWRAP Result Register 2 Stores the result of MAUWRAP calculation. If indirect operation is byte-aligned type, only RES2[7:0] is available. If indirect operation is halfword-aligned type, only RES2[15:0] is available. If indirect operation is word-aligned type, RES2[31:0] is available.

15.7.11 Result Register 3 (RES3)


Offset

Register	Offset
RES3	4Ch

Function

Stores the result of MAUWRAP calculation. This register is selected when the AHB address Bit[8:7] = 2'b11.

Diagram

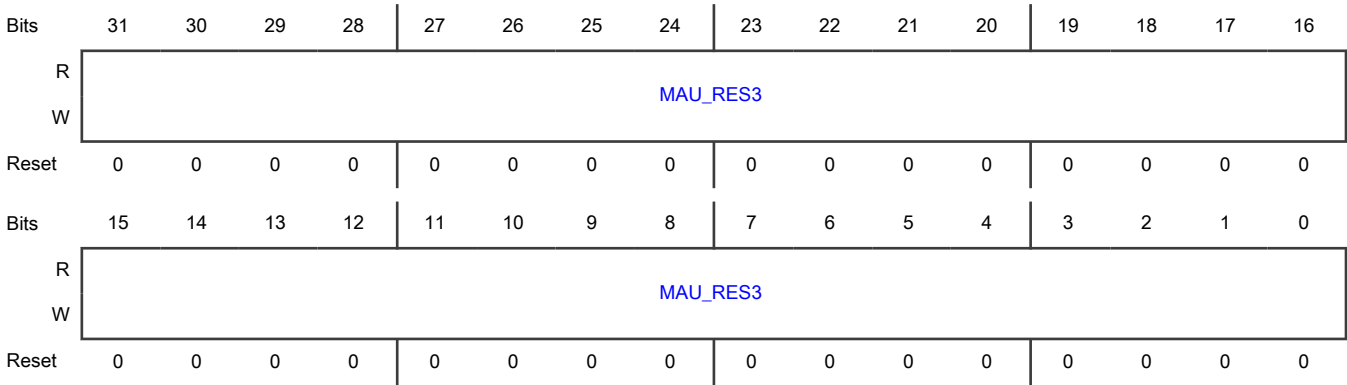

Fields

Field	Function
31-0 MAU_RES3	MAUWRAP Result Register 3 Stores the result of MAUWRAP calculation. If indirect operation is byte-aligned type, only RES3[7:0] is available. If indirect operation is halfword-aligned type, only RES3[15:0] is available. If indirect operation is word-aligned type, RES3[31:0] is available.

Chapter 16

Enhanced DMA Controller (eDMA3)

16.1 Chip-specific eDMA information

Table 90. Reference links to related information

Topic	Related module	Reference
Full description	eDMA	DMA3
System memory map		Memory map
Clocking		Clock distribution
Power Management		Power Management
Signal multiplexing	Port control	Signal multiplexing

16.1.1 Module instances

This device has one 8-channel eDMA controller.

16.1.2 Direct Memory Access Multiplexer (DMAMUX)

The peripheral request line for each channel of the Direct Memory Access Controller (DMA) is driven from a Direct Memory Access Multiplexer (DMAMUX). This is a flexible configuration that allows the user to select the appropriate peripheral to connect to each channel of the DMA Controller. The DMAMUX for this device allows up to 132 DMA request signals (51 unused signals are reserved) to be mapped to each channel. Because of the mux, there is not a correlation between any of the DMA request sources and a specific DMA channel.

The DMAMUX is an integrated component of the DMA Controller.

16.1.2.1 DMAMUX0 Request Assignments

See the attached DMA_Configuration spreadsheet to know the DMA channel and source assignments for DMAMUX0.

16.2 Overview

The enhanced direct memory access (eDMA) controller is capable of performing complex data transfers with minimal intervention from a host processor. The hardware microarchitecture includes:

- A DMA engine that performs:
 - Source address and destination address calculations
 - Data-movement operations
- Local memory containing transfer control descriptors for each of the 8 channels

NOTE

The terminology in this chapter has been updated to align with NXP's inclusive language standards, as shown in the table below.

Table 91. Updated terms

Updated term	Deprecated term
Initiator	Master
Target	Slave

16.2.1 Block diagram

Figure 23 illustrates the components of the eDMA system, including the eDMA module (engine).

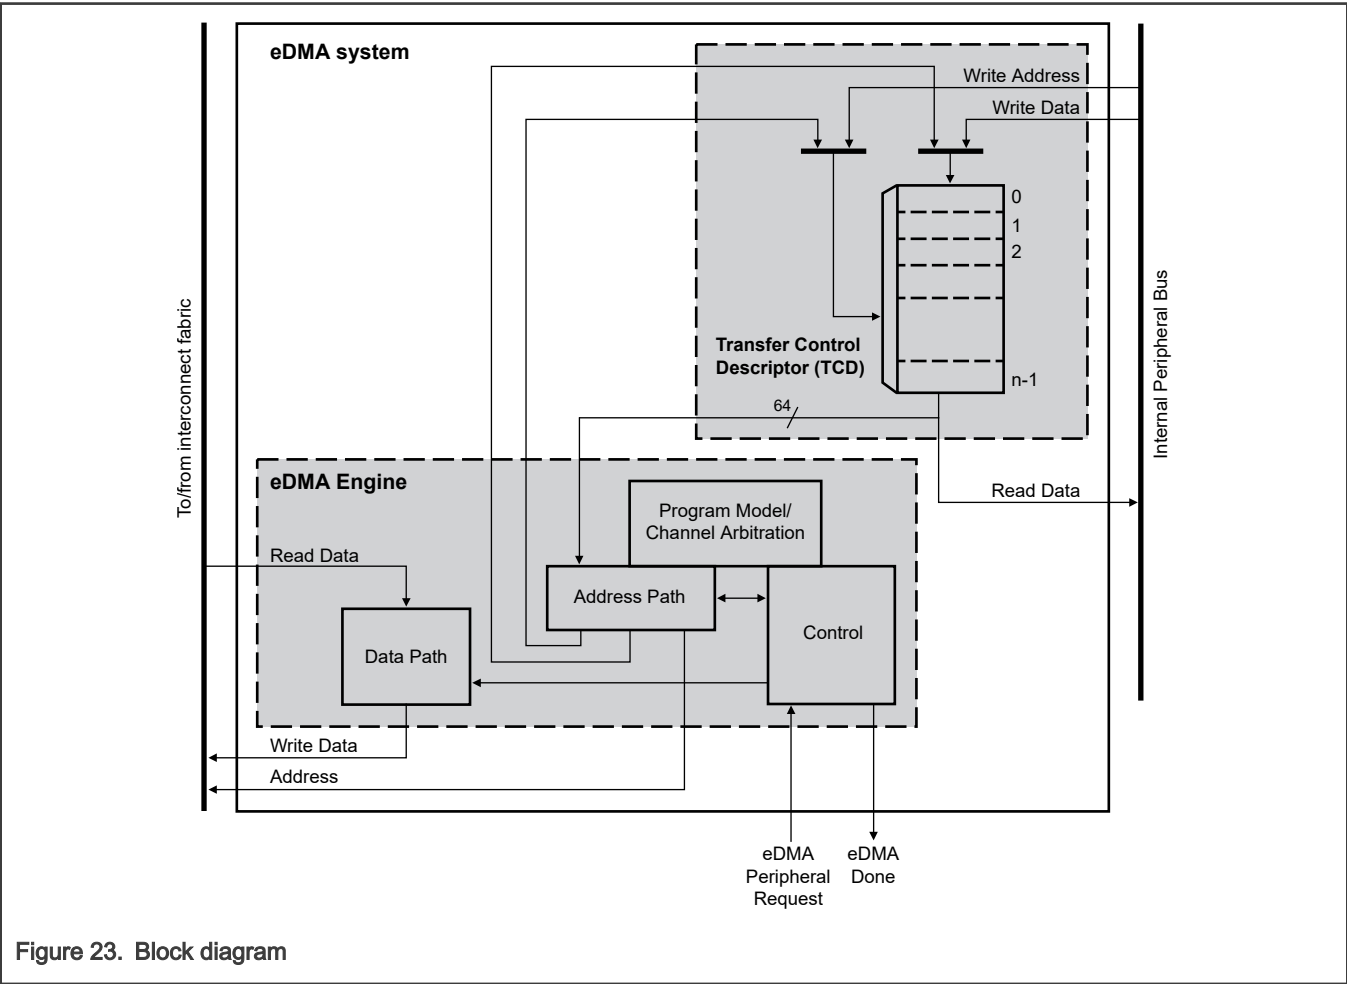


Figure 23. Block diagram

16.2.2 Block parts

The eDMA module is partitioned into two major modules: the eDMA engine and the transfer control descriptor local memory. The eDMA engine is further partitioned into four submodules:

Table 92. eDMA engine submodules

Submodule	Function
Address path	This block: • Implements a primary channel and secondary (preempt) channel • Manages all initiator bus-address calculations All the channels provide the same functionality. This structure allows data transfers associated with one channel to be preempted after the completion of a read/write sequence if a higher priority channel activation is asserted while the primary channel is active.

Table continues on the next page...

Table 92. eDMA engine submodules (continued)

Submodule	Function
	After a channel is activated, it runs until the minor loop is completed, unless preempted by a higher priority channel. This provides a mechanism (enabled by <code>CHn_PRI[ECP]</code>) where a large data transfer can be preempted to minimize the time another channel is blocked from execution. When any channel is selected to execute, the contents of its TCD are read from local memory and loaded into the address path channel x registers for a normal start and into channel y registers for a preemption start. After the minor loop completes execution, the address path hardware writes the new values for the <code>TCDn_{SADDR, DADDR, CITER}</code> back to local memory. If the major iteration count is exhausted, additional processing is performed, including the final address pointer updates, reloading the <code>TCDn_CITER</code> field, and a possible fetch of a new <code>TCDn</code> from memory as part of a scatter/gather operation. See Dynamic scatter/gather for more details.
Data path	This block implements the bus initiator read/write data path. It includes a data buffer and the necessary multiplex logic to support any required data alignment. The internal read data bus is the primary input, and the internal write data bus is the primary output. The address and data path modules directly support the 2-stage pipelined internal bus. The address path module represents the first stage of the bus pipeline (address phase), and the data path module implements the second stage of the pipeline (data phase).
Program model/channel arbitration	This block implements the first section of the eDMA programming model as well as the channel arbitration logic. The programming model registers are connected to the internal peripheral bus. The eDMA peripheral request inputs and interrupt request outputs are also connected to this block (via control logic).
Control	This block provides all the control functions for the eDMA engine. For data transfers where the source and destination sizes are equal, the eDMA engine performs a series of source read/destination write operations until the number of bytes specified in the minor loop byte count has been moved from the source to the destination. For descriptors where the sizes are not equal, multiple accesses of the smaller size data are required for each reference of the larger size. As an example, if the source size references 16-bit data and the destination is 32-bit data, the eDMA performs two reads, then one 32-bit write.

The transfer control descriptor local memory is further partitioned into:

Table 93. Transfer control descriptor memory

Submodule	Description
Memory controller	This logic implements the required dual-ported controller, and manages accesses from the eDMA engine as well as references from the internal peripheral bus. In simultaneous accesses, the eDMA engine is given priority and the peripheral transaction is stalled.
Memory array	TCD storage for each channel's transfer profile.

16.2.3 Features

The eDMA is a highly programmable data-transfer engine optimized to minimize any required intervention from the host processor. It is intended for use in applications where the data size to be transferred is statically known and is not defined within the transferred data itself. The eDMA module features:

- All data movement via dual-address transfers: read from source, write to destination
 - Programmable source and destination addresses and transfer size

- Support for complex address calculations
- 8-channel implementation that performs complex data transfers with minimal intervention from a host processor
 - Internal data buffer, used as temporary storage for all transfers
 - Connections to the crossbar switch for bus driving the data movement
- TCD organized to support two-deep, nested transfer operations
 - 32-byte TCD stored in local memory for each channel
 - An inner data transfer loop defined by a minor byte transfer count
 - An outer data transfer loop defined by a major iteration count
- Channel activation via one of three methods:
 - Explicit software initiation
 - Initiation via a channel-to-channel linking mechanism for continuous transfers
 - Peripheral-paced hardware requests, one per channel
- Fixed-priority and round-robin channel arbitration
- Channel completion reported via programmable interrupt requests
 - One interrupt per channel, which can be asserted at completion of major iteration count
 - Programmable error terminations per channel that are logically summed together to form one error interrupt to the interrupt controller
- Programmable support for scatter/gather DMA processing
- Support for complex data structures

In the discussion of this module, n is used to reference the channel number.

16.3 Functional description

The operation of eDMA is described in the following subsections.

16.3.1 Modes of operation

The eDMA operates in the following modes:

Table 94. Modes of operation

Mode	Description
Normal	In Normal mode, eDMA transfers data between a source and a destination. The source and destination can be a memory block or an I/O block capable of operation with eDMA. A service request initiates a transfer of a specific number of bytes (NBYTES) as specified in the TCD. The minor loop is the sequence of read-write operations that transfers these NBYTES per service request. Each service request executes one iteration of the major loop, which transfers NBYTES of data.
Debug	eDMA operation is configurable in Debug mode via the control register: • If CSR[EDBG] is cleared to 0, eDMA continues to operate. • If CSR[EDBG] is set to 1, eDMA stops transferring data. If Debug mode is entered when a channel is active, eDMA continues operation until the channel retires.

16.3.2 eDMA basic data flow

The basic flow of a data transfer can be partitioned into three segments.

As shown in the following diagram, the first segment involves the channel activation:


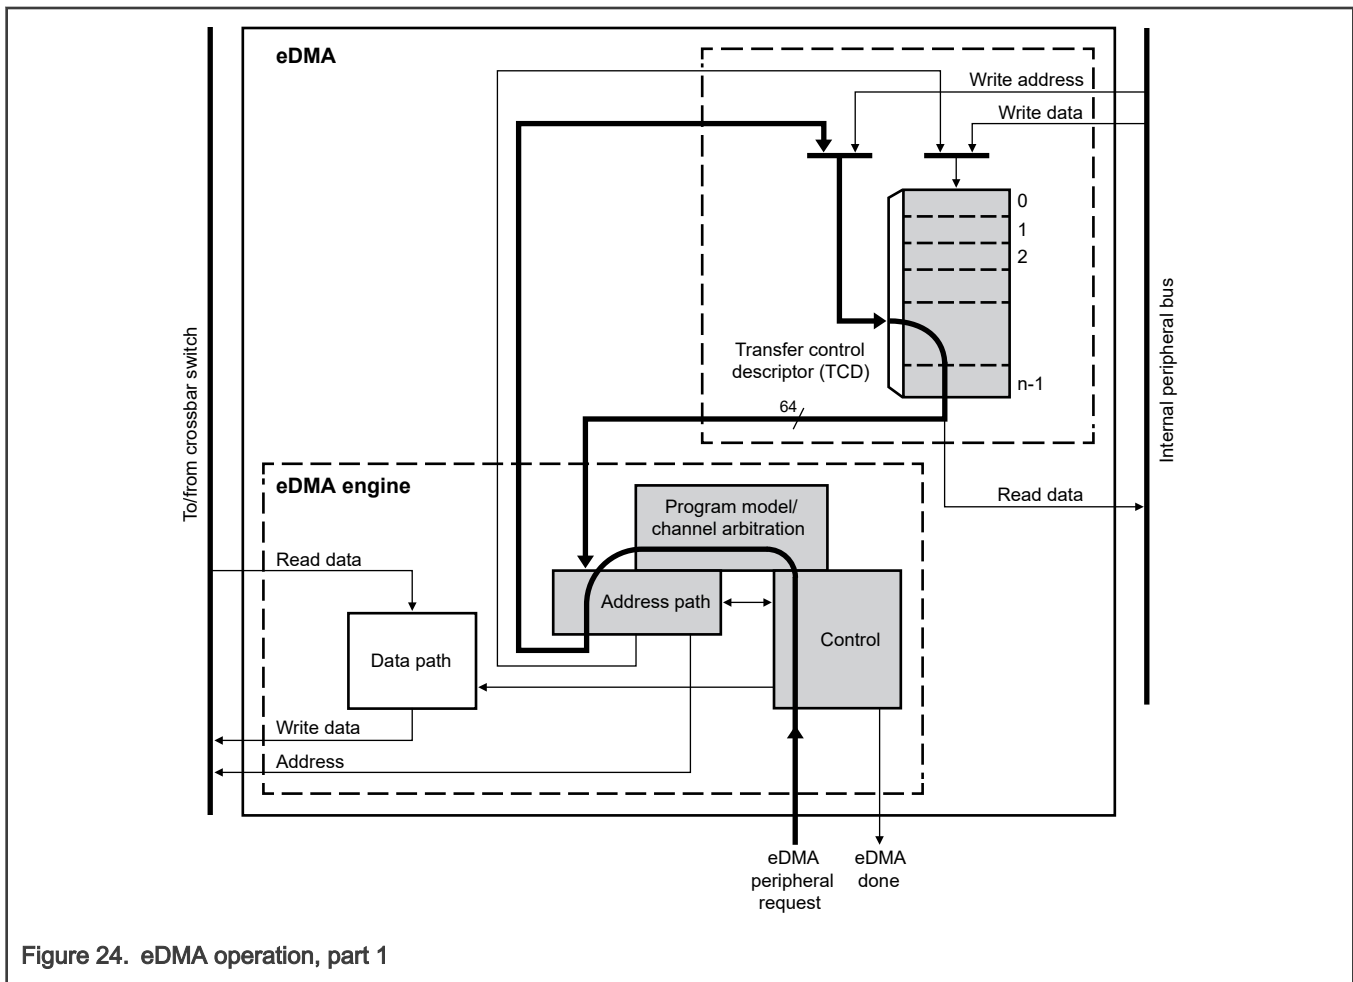


Figure 24. eDMA operation, part 1

This example uses the assertion of the eDMA peripheral request signal to request service for channel n . Channel activation via software and the $TCD_n\_CSR[START]$ field follows the same basic flow as peripheral requests. The eDMA request input signal is registered internally and then routed through the eDMA engine: first through the control module, then into the program model and channel arbitration.

In the next cycle, the channel arbitration begins using fixed-priority plus the optional round-robin algorithm. After arbitration is complete, the activated channel number is sent through the address path and converted into the required address to access the local memory for TCD_n . Next, the TCD memory is accessed and the required descriptor is read from the local memory and then loaded into the eDMA engine address path's primary or secondary channel execution registers. The TCD memory is 64 bits wide to minimize the time needed to fetch the activated channel descriptor and load it into the address path registers.

The following diagram illustrates the second part of the basic data flow:

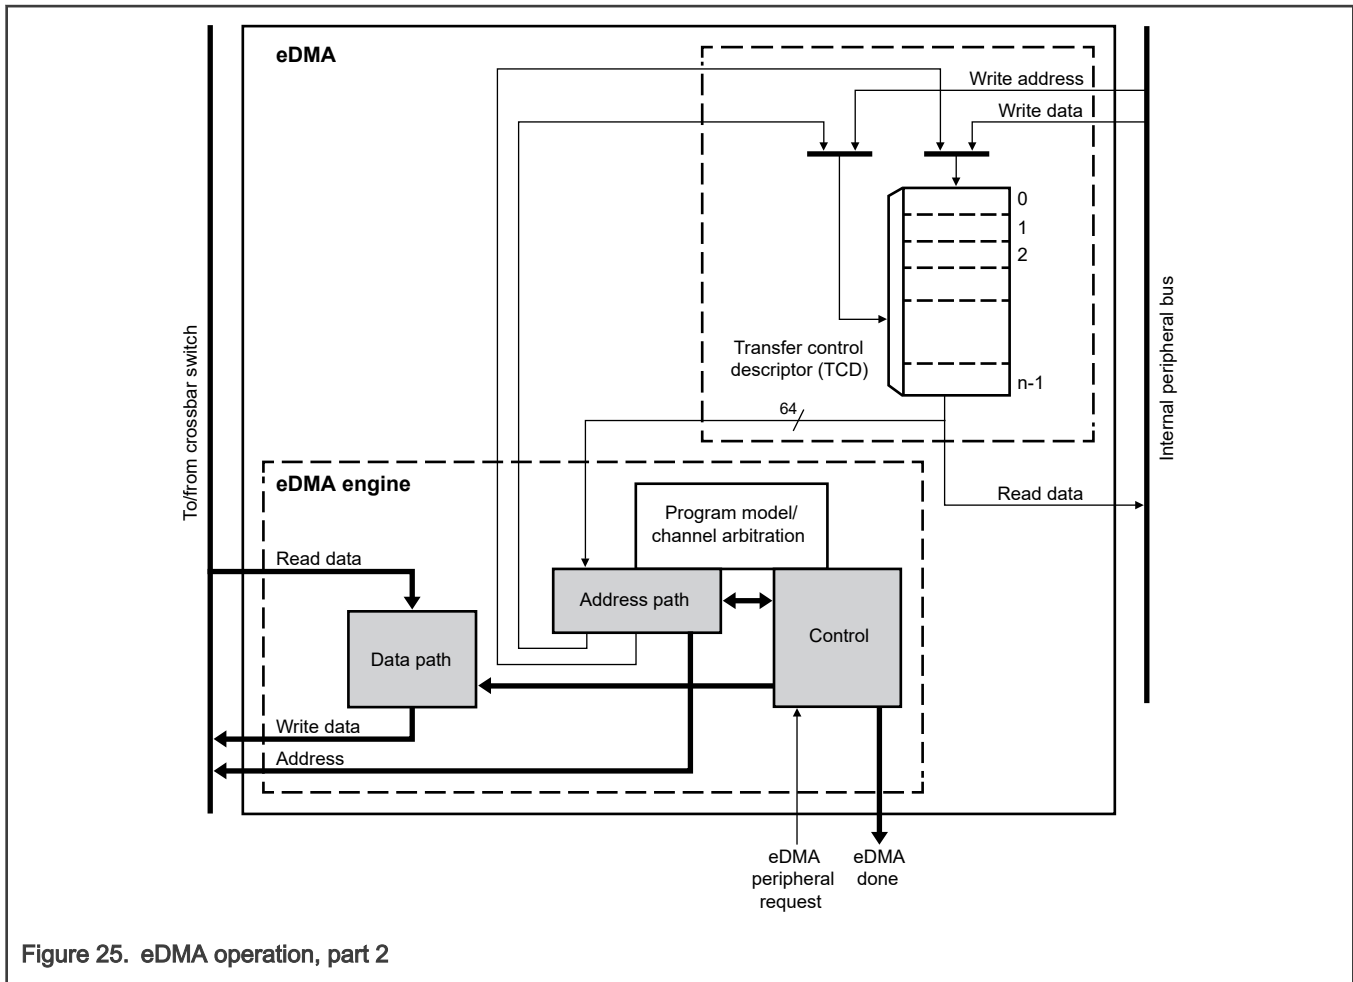

The modules associated with the data transfer (address path, data path, and control) go through the required sequence of source reads and destination writes to perform the actual data movement. The source reads are initiated, and the fetched data is temporarily stored in the data path block until it is gated onto the internal bus during the destination write. This source read/destination write processing continues until the byte count, NBYTES, has been transferred.

After NBYTES of data has been moved, the final phase of the basic data flow is performed. In this segment, the address path logic performs the required updates to certain fields in the appropriate TCD (for example, SADDR, DADDR, CITER). If the major iteration count is exhausted, additional operations are performed. These include the final address adjustments and reloading of the BITER field into the CITER field. Assertion of an optional interrupt request also occurs at this time, as does a possible fetch of a new TCD from memory using the scatter/gather address pointer included in the descriptor (if scatter/gather is enabled). The updates to the TCD memory and the assertion of an interrupt request are shown in the following diagram.

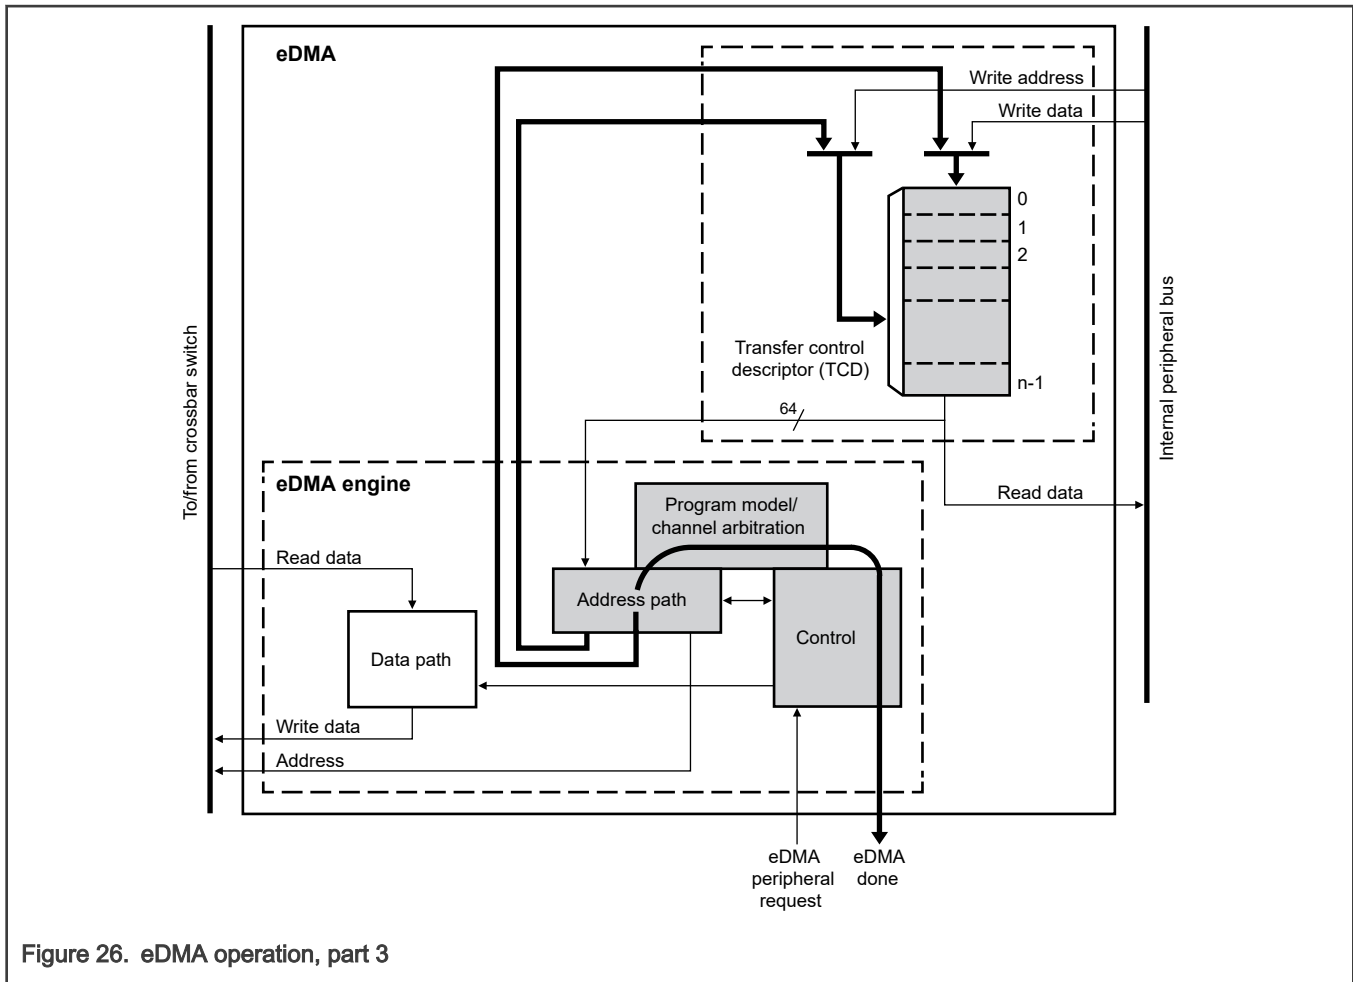


Figure 26. eDMA operation, part 3

16.3.3 Fault reporting and handling

Channel errors are reported in the Error Status register ([CHn_ES](#)) and can be caused by any of the following:

- A configuration error, which is an illegal setting in the transfer control descriptor
- An active channel canceled via a "cancel transfer with error" hardware or software request
- An error termination to a bus initiator read or write cycle

A configuration error is reported when an inconsistent state is represented by one of these factors:

- Starting source or destination address
- Source or destination offsets
- Minor loop byte count
- Transfer size

Each of these possible causes is detailed below:

- The addresses and offsets must be aligned on zero-modulo-transfer-sized boundaries.
- The minor loop byte count must be a multiple of the source and destination transfer sizes.
- All source reads and destination writes must be configured to the natural boundary of the programmed transfer size.

NOTE

To aid in debugging, set the Halt After Error field in the DMA's Control Status register, CSR[HAE]. Upon any error condition, the DMA is halted after the error is recorded. The DMA remains halted and does not process any channel service requests. After the error is fixed, the DMA may be enabled again by clearing the Halt field, CSR[HALT].

- If a scatter/gather operation is enabled upon channel completion, a configuration error is reported if the scatter/gather address (TCDn_DLAST_SGA) is not aligned on a 32-byte boundary.
- If minor loop channel linking is enabled upon channel completion, a configuration error is reported when the link is attempted if the TCDn_CITER[ELINK] field does not equal the TCDn_BITER[ELINK] field.

If enabled, all configuration error conditions, except the scatter/gather and minor-loop link errors, are reported as the channel activates and asserts an error interrupt request. A scatter/gather configuration error is reported when the scatter/gather operation begins at major loop completion if properly enabled. A minor loop channel link configuration error is reported when the link operation is serviced at minor loop completion.

If a system bus read or write is terminated with an error, the data transfer is stopped and the appropriate bus error flag set. In this case, the state of the channel's transfer control descriptor is updated by the eDMA engine with the current source address, destination address, and current iteration count at the point of the fault. When a system bus error occurs, the channel terminates after the next transfer. Due to pipeline effect, the next transfer is already in progress when the bus error is received by the eDMA. If a bus error occurs on the last read prior to beginning the write sequence, the write executes using the data captured during the bus error. If a bus error occurs on the last write prior to switching to the next read sequence, the read sequence executes before the channel terminates due to the destination bus error.

The occurrence of any error causes the eDMA engine to stop normal processing of the active channel immediately (it goes to its error processing states and the transaction to the system bus still has pipeline effect), and the appropriate channel field in the eDMA error register is set to 1. At the same time, the details of the error condition are loaded into the Error Status register (CHn_ES). The major loop complete indicators, setting the transfer control descriptor DONE flag, and the possible assertion of an interrupt request are not affected when an error is detected.

After the error status has been updated, the eDMA engine continues operating by servicing the next appropriate channel. A channel that experiences an error condition is not automatically disabled. If a channel is terminated by an error and then issues another service request before the error is fixed, that channel executes and terminates with the same error condition.

The error status fields are read-only. These error indicators are sticky and cannot be cleared. They show the last recorded error until the DMA is reset. CHn_ES[ERR] is used to determine if a new error condition exists. This field is the logical OR of each channel's error interrupt field (ERR).

After the software has resolved all errors and cleared all of the error interrupt fields, the MP_ES[VLD] is cleared to 0 but the cause of the last error is still indicated.

16.3.4 Channel preemption

The eDMA uses a priority vector value to determine the highest priority channel requesting service.

The priority vector is a combination of:

1. the channel's group priority, CHn_GRPRI
2. the channel's priority level, CHn_PRI[APL]

It can be considered a number composed of these concatenated priority levels: CHn_GRPRI : CHn_PRI[APL]

Priority vector = ((CHn_GRPRI << 8) + (CHn_PRI[APL] << 5) + CH_NUM)

A channel requesting service with the highest priority vector value will receive the next execution slot.

An execution slot is available:

1. immediately if the eDMA is idle
2. when an active channel retires
3. when valid preemption conditions exist

NOTE

Preemption is strictly priority based. Preemption is not bound by a specific group number as defined by CHn_GRPRI.

Channel preemption is enabled on a per-channel basis by setting the CHn_PRI[ECP] field. Channel preemption allows the executing channel's data transfers to temporarily suspend in favor of starting a higher-priority channel. After the preempting channel has completed all of its minor loop data transfers, the preempted channel is restored and resumes execution.

After the restored channel completes one read/write sequence, it is again eligible for preemption. If any higher priority channel is requesting service, the restored channel is suspended, and the higher-priority channel is serviced. Nested preemption, that is, attempting to preempt a preempting channel, is not supported. After a preempting channel begins execution, it cannot be preempted.

A channel's ability to preempt another channel can be disabled by setting CHn_PRI[DPA] to 1. When a channel's preempt ability is disabled, that channel cannot suspend a lower-priority channel's data transfer, regardless of the lower-priority channel's ECP setting. This allows for a pool of low-priority, large-data-moving channels to be defined.

You can configure these low-priority channels to not preempt each other, thus preventing a low-priority channel from consuming the preempt slot normally available to a true high-priority channel. When you enable round-robin channel arbitration mode (CSR[ERCA] is set to 1), any channel with a priority level equal to 0 (CHn_PRI[APL] = 0) has preemption disabled and cannot preempt another channel.

16.3.5 Clocking

The following table describes the clock sources:

Table 95. Clocks

Clock	Description
hclk	Clock used for the DMA engine
ipg_clk	Clock used for the DMA programming model
dma_ram_clk	Clock used for the TCD RAMs

16.3.6 Interrupts

Software can enable the interrupt for each channel for the following events:

1. The major loop is half complete ([INTHALF](#))
2. The major loop is complete ([INTMAJOR](#))
3. A configuration error occurs ([EEI](#))

16.4 External signals

This module has no external signals.

16.5 Initialization

The following sections discuss initialization of the eDMA and programming considerations.

16.5.1 eDMA initialization

To initialize the eDMA:

1. Write to the [MP_CSR](#) if a configuration other than the default is wanted.
2. Write the channel priority levels to the [CHn_PRI](#) registers and group priority levels to the [CHn_GRPRI](#) registers if a configuration other than the default is wanted.

3. Enable error interrupts in the [CHn_CSR\[EEI\]](#) registers if they are wanted.
4. Write the 32-byte TCD for each channel that may request service.
5. Enable any hardware service requests via the [CHn_CSR\[ERQ\]](#) registers.
6. Request channel service via either:
 - Software: setting [TCDn_CSR\[START\]](#)
 - Hardware: target device asserting its eDMA peripheral request signal

After any channel requests service, a channel is selected for execution based on the arbitration and priority levels written into the programmer's model. The eDMA engine reads the entire TCD, including the TCD control and status fields, as shown in [Table 96](#), for the selected channel into its internal address path module.

As the TCD is read, the first transfer is initiated on the internal bus, unless a configuration error is detected. Transfers from the source, defined by TCDn_SADDR, to the destination, defined by TCD_DADDR, continue until the number of bytes specified by TCDn_NBYTES are transferred.

When the transfer is complete, the eDMA engine's local TCDn_SADDR, TCDn_DADDR, and TCDn_CITER are written back to the main TCD memory and any minor loop channel linking is performed, if enabled. If the major loop is exhausted, then eDMA executes further post-processing, such as interrupts, major loop channel linking, and scatter/gather operations, if enabled.

Table 96. TCD control and status (TCDn_CSR) fields

TCDn_CSR field name	Description
START	Control field to start the channel explicitly when using a software-initiated DMA service (automatically cleared by hardware)
EEOP	Control field to enable end-of-packet processing
ESDA	Control field to enable storing of the destination address to system memory after the major loop completes
DREQ	Control field to disable hardware-initiated DMA service requests after major loop completion
BWC	Control field for throttling the bandwidth control of a channel
ESG	Control field to enable the scatter-gather feature
INTHALF	Control field to enable interrupt when major loop is half-complete
INTMAJOR	Control field to enable interrupt when major loop completes

Table 97. Channel control and status (CHn_CSR) fields

CHn_CSR field name	Description
ACTIVE	Status field indicating the channel is currently in execution
DONE	Status field indicating major loop completion (cleared by software when a channel begins execution)
EEI	Control field to enable error interrupts
EARQ	Control field to enable external, asynchronous wakeup event in conjunction with the ERQ field
ERQ	Control field to enable hardware service requests

The following figure shows how each DMA request initiates one minor-loop transfer, or iteration, without CPU intervention. DMA arbitration can occur after each minor loop, and one level of minor loop DMA preemption is allowed. The number of minor loops in a major loop is specified by the beginning iteration count (BITER).

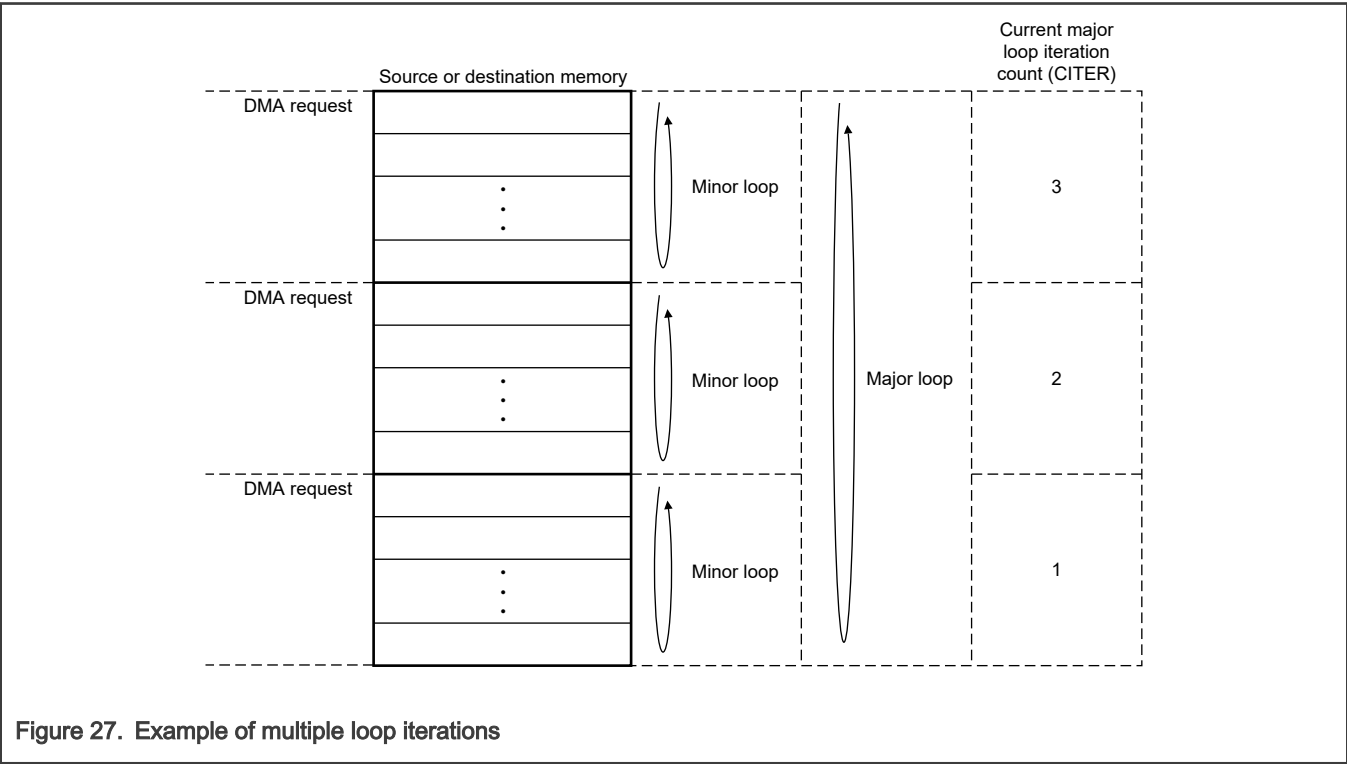


Figure 27. Example of multiple loop iterations

The following figure lists the memory array terms and how the TCD settings are related.

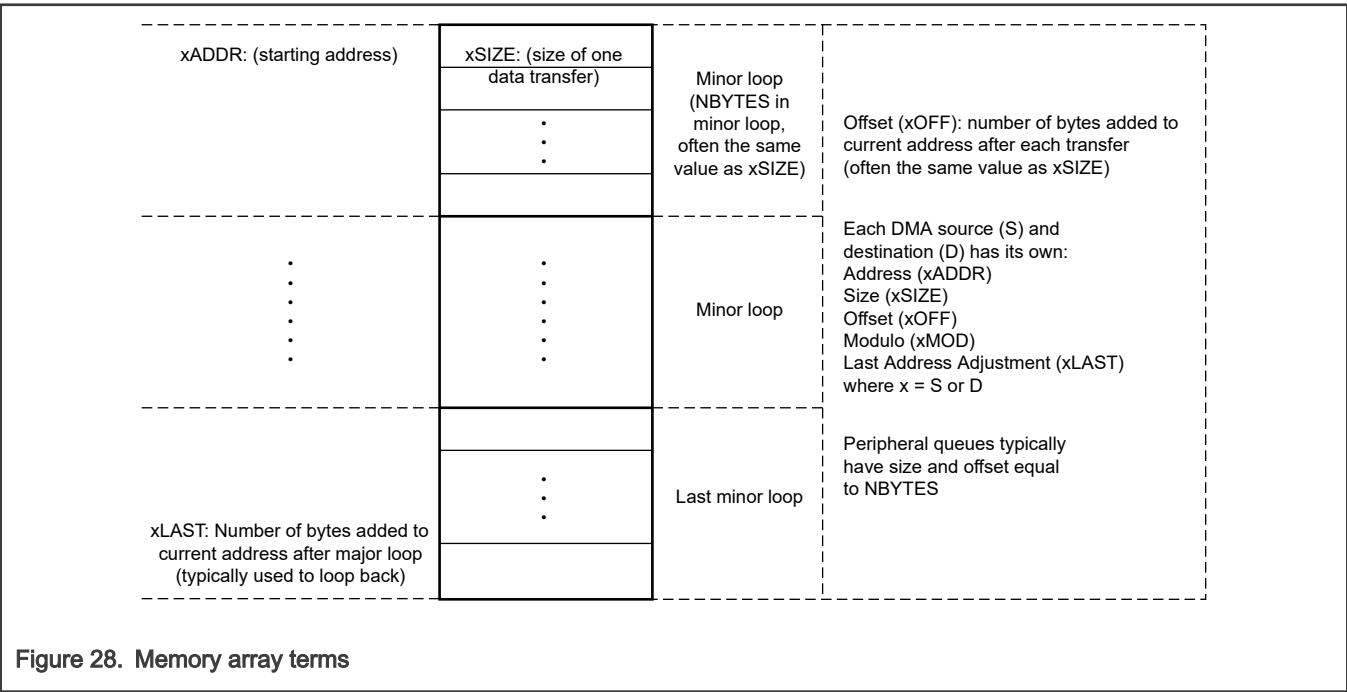


Figure 28. Memory array terms

16.5.2 eDMA arbitration

The eDMA uses a layered arbitration scheme composed of multiple priority levels. The eDMA uses a fixed-priority arbitration scheme with optional round-robin arbitration under specific conditions. The priorities are evaluated in the following order:

Table 98. eDMA arbitration priorities

Priority	Scheme	Description
1 (Highest)	Arbitration group priority	Each channel is assigned an arbitration group via the CHn_GRPRI registers. Priority is given to the highest value (31 being the highest possible value) down to the lowest value (zero, the default).
2	Channel priority	Each channel is assigned a channel priority level via the CHn_PRI registers. The channel priority is a relative priority level within an arbitration group. Priority is given to the highest value (seven being the highest possible value) down to the lowest value (zero, the default). Channel priorities within each arbitration group need not be unique. If multiple channels have the same channel priority level, the channel number will be used to determine priority as defined in row three.
3	Channel number	When two or more channels have the same arbitration group priority and channel priority, the channel number (CHn_NUM) is used to determine the highest priority. Priority is given to the highest channel number. Lowest priority is channel 0. The channel numbers are static and cannot be changed in the programmer's model.
4 (Lowest)	Round-robin	When round-robin is enabled, any channel configured for round-robin operation has lowest priority within an arbitration group. Round-robin is enabled by setting the MP_CSR[ERCA] field to 1. After being enabled, channels with a channel priority of zero (CHn_PRI =0) will use round-robin arbitration. Round-robin arbitration will rotate the channel selection among the channels requesting service with CHn_PRI =0 within the arbitration group. Any non-zero channel within the arbitration group will continue to use fixed-priority arbitration, and if requesting service will be selected over any round-robin channels.

For fixed arbitration, the overall priority can be considered a number composed of three concatenated priority levels: [CHn_GRPRI](#):[CHn_PRI](#):[CH_NUM](#). The largest number has the highest priority and the lowest number has the lowest priority.

For round-robin arbitration, the priority number is `CHn_GRPRI:0:X`. The module rotates through the `CHn_PRI=0` channels requesting service without regard to priority among these channels. Any channel within the arbitration group for which `CHn_PRI` is greater than 0 will be serviced before the round-robin channels.

16.5.3 Programming errors

The eDMA performs various tests on the transfer control descriptor to verify consistency in the descriptor data.

The channel number causing the error is recorded in the Error Status register (`CHn_ES`). If the error source is not removed before the next activation of the problematic channel, the error is detected and recorded again. Setting the halt after error field, `CSR[HAE]`, will halt the DMA and prevent recurrence of the error.

16.5.4 Arbitration mode considerations

This section discusses arbitration considerations for eDMA.

16.5.4.1 Fixed group arbitration, fixed channel arbitration

In this mode, eDMA selects for execution the channel service request from the highest-priority channel in the highest-priority group. If eDMA is programmed so that the channels within a high-priority group have a high number of requests or large data transfers, that group may consume all the bandwidth of the eDMA controller. That is, no lower-priority groups are serviced if there is always at least one DMA request pending on a channel in the highest-priority group when the controller arbitrates the next DMA request. The advantage of this scenario is that latency can be small for channels that need to be serviced quickly.

16.5.4.2 Fixed group arbitration, round-robin channel arbitration

The highest-priority group with a request is serviced. Lower-priority groups are serviced if no pending requests exist in the higher-priority groups.

Within each group, channels are serviced starting with the highest non-zero channel priority. For all channels with a channel priority programmed to 0, selection begins with the highest channel number requesting service and then rotates through to the lowest channel number requesting service. The round-robin channel arbitration can provide a fairness mechanism to lower-priority channels.

This scenario could cause the same bandwidth consumption problem as indicated in [Fixed group arbitration, fixed channel arbitration](#), but all the channels in the highest-priority group will be serviced. Service latency is short on the highest-priority group, but could potentially be very much longer as the group priority decreases.

16.5.5 Performing DMA transfers

This section presents examples on how to perform DMA transfers with the eDMA.

16.5.5.1 Single request

To perform a simple transfer of *n* bytes of data with one activation, set the major loop to one (`TCDn_CITER = TCDn_BITER = 1`). The data transfer begins after the channel service request is acknowledged and the channel is selected to execute. After the transfer is complete, the `CHn_CSR[DONE]` field is set to 1 and an interrupt is generated if properly enabled.

For example, the following TCD entry is configured to transfer 16 bytes of data. The eDMA is programmed for one iteration of the major loop transferring 16 bytes per iteration. The source memory has a byte-wide memory port located at 0x1000. The destination memory has a 32-bit port located at 0x2000. The address offsets are programmed in increments to match the transfer size: one byte for the source, and four bytes for the destination. The final source and destination addresses are adjusted to return to their beginning values.

```
TCDn_CITER = TCDn_BITER = 1
TCDn_NBYTES = 16
TCDn_SADDR = 0x1000
TCDn_SOFF = 1
TCDn_ATTR[SSIZE] = 0
```



```

TCDn_SLAST = -16
TCDn_DADDR = 0x2000
TCDn_DOFF = 4
TCDn_ATTR[DSIZE] = 2
TCDn_DLAST_SGA = -16
TCDn_CSR[INTMAJ] = 1
TCDn_CSR[START] = 1 (should be written last after all other fields have been initialized)
All other TCDn fields = 0

```

This generates the following event sequence:

1. User write to the TCDn_CSR[START] field requests channel service.
2. The channel is selected by arbitration for servicing.
3. eDMA engine writes:
 - CHn_CSR[DONE] = 0
 - TCDn_CSR[START] = 0
 - CHn_CSR[ACTIVE] = 1
4. eDMA engine reads: channel TCD data from local memory to internal register file.
5. The source-to-destination transfers are executed as follows:
 - a. Read byte from location 0x1000, read byte from location 0x1001, read byte from 0x1002, read byte from 0x1003.
 - b. Write 32 bits to location 0x2000 → first iteration of the minor loop.
 - c. Read byte from location 0x1004, read byte from location 0x1005, read byte from 0x1006, read byte from 0x1007.
 - d. Write 32 bits to location 0x2004 → second iteration of the minor loop.
 - e. Read byte from location 0x1008, read byte from location 0x1009, read byte from 0x100A, read byte from 0x100B.
 - f. Write 32 bits to location 0x2008 → third iteration of the minor loop.
 - g. Read byte from location 0x100C, read byte from location 0x100D, read byte from 0x100E, read byte from 0x100F.
 - h. Write 32 bits to location 0x200C → last iteration of the minor loop → major loop complete.
6. The eDMA engine writes: TCDn_SADDR = 0x1000, TCDn_DADDR = 0x2000, TCDn_CITER = 1 (TCDn_BITER).
7. The eDMA engine writes: CHn_CSR[ACTIVE] = 0, CHn_CSR[DONE] = 1, CHn_INT[INT] = 1.
8. The channel retires and the eDMA goes idle or services the next channel.

16.5.5.2 Multiple requests

The following example transfers 32 bytes via two hardware requests, but is otherwise the same as the previous example. The only fields that change are the major loop iteration count and the final address offsets. The eDMA is programmed for two iterations of the major loop, transferring 16 bytes per iteration. After the channel's hardware requests are enabled via the CHn_CSR[ERQ] register field, the target device initiates channel service requests.

```

TCDn_CITER = TCDn_BITER = 2
TCDn_SLAST = -32
TCDn_DLAST_SGA = -32

```

This would generate the following sequence of events:

1. First hardware (eDMA peripheral) requests channel service.
2. The channel is selected by arbitration for servicing.
3. eDMA engine writes: CHn_CSR[DONE] = 0, TCDn_CSR[START] = 0, CHn_CSR[ACTIVE] = 1.

4. eDMA engine reads: channel TCD n data from local memory to internal register file.
5. The source-to-destination transfers are executed as follows:
 - a. Read byte from location 0x1000, read byte from location 0x1001, read byte from 0x1002, read byte from 0x1003.
 - b. Write 32 bits to location 0x2000 → first iteration of the minor loop.
 - c. Read byte from location 0x1004, read byte from location 0x1005, read byte from 0x1006, read byte from 0x1007.
 - d. Write 32 bits to location 0x2004 → second iteration of the minor loop.
 - e. Read byte from location 0x1008, read byte from location 0x1009, read byte from 0x100A, read byte from 0x100B.
 - f. Write 32 bits to location 0x2008 → third iteration of the minor loop.
 - g. Read byte from location 0x100C, read byte from location 0x100D, read byte from 0x100E, read byte from 0x100F.
 - h. Write 32 bits to location 0x200C → last iteration of the minor loop.
6. eDMA engine writes: TCD n _SADDR = 0x1010, TCD n _DADDR = 0x2010, TCD n _CITER = 1.
7. eDMA engine writes: CH n _CSR[ACTIVE] = 0.
8. The channel retires, which concludes one iteration of the major loop. The eDMA goes idle or services the next channel.
9. Second hardware (eDMA peripheral) requests channel service.
10. The channel is selected by arbitration for servicing.
11. eDMA engine writes: CH n _CSR[DONE] = 0, TCD n _CSR[START] = 0, CH n _CSR[ACTIVE] = 1.
12. eDMA engine reads: Channel TCD data from local memory to internal register file.
13. The source-to-destination transfers are executed as follows:
 - a. Read byte from location 0x1010, read byte from location 0x1011, read byte from 0x1012, read byte from 0x1013.
 - b. Write 32 bits to location 0x2010 → first iteration of the minor loop.
 - c. Read byte from location 0x1014, read byte from location 0x1015, read byte from 0x1016, read byte from 0x1017.
 - d. Write 32 bits to location 0x2014 → second iteration of the minor loop.
 - e. Read byte from location 0x1018, read byte from location 0x1019, read byte from 0x101A, read byte from 0x101B.
 - f. Write 32 bits to location 0x2018 → third iteration of the minor loop.
 - g. Read byte from location 0x101C, read byte from location 0x101D, read byte from 0x101E, read byte from 0x101F.
 - h. Write 32 bits to location 0x201C → last iteration of the minor loop → major loop complete.
14. eDMA engine writes: TCD n _SADDR = 0x1000, TCD n _DADDR = 0x2000, TCD n _CITER = 2 (TCD n _BITER).
15. eDMA engine writes: CH n _CSR[ACTIVE] = 0, CH n _CSR[DONE] = 1, CH n _INT[INT] = 1.
16. The channel retires, which concludes with the major loop complete. The eDMA goes idle or services the next channel.

16.5.5.3 Using the modulo feature

The modulo feature of the eDMA allows implementation of a circular data queue in which the size of the queue is a power of 2. xMOD is a 5-bit field for the source and destination in the TCD, and it specifies which lower address bits increment from their original value after the address+offset calculation. All upper address bits remain the same as in the original value. A setting of 0 for this field disables the modulo feature. Modulo addressing applies to cases where the minor loop offset is enabled; that is, the upper address bits remain the same after the minor loop offset is added to the source or destination address.

The following table shows how the transfer addresses are specified based on the setting of the MOD field. Here a circular buffer is created where the address wraps to the original value but the 28 upper address bits (0x1234567x) retain their original value. In this example, the source address is set to 0x12345670, the offset is set to four bytes, and the MOD field is set to four, which allows for a 2⁴ byte (16 byte) queue size.

Table 99. Modulo example

Transfer number	Address
1	0x12345670
2	0x12345674
3	0x12345678
4	0x1234567C
5	0x12345670
6	0x12345674

16.5.6 Monitoring transfer descriptor status

This section discusses how to monitor eDMA status.

16.5.6.1 Testing for minor loop completion

There are two methods to test for minor loop completion when using software-initiated service requests.

1. The first method is to read the TCDn_CITER field and test for a change.
2. The second method, extracted from the sequence shown below, is to test the TCDn_CSR[START] field and the CHn_CSR[ACTIVE] field. The minor-loop-complete condition is indicated by both fields reading 0 after TCDn_CSR[START] is set to 1. Polling the CHn_CSR[ACTIVE] field only may be inconclusive because the active status may be missed if the channel execution is short in duration.

The [CHn_CSR](#) and [TCDn_CSR](#) status fields execute the following sequence for a software-activated channel:

Stage	TCDn_CSR field	CHn_CSR fields		State
	START	ACTIVE	DONE	
1	1	0	0	Initiate channel service request via software.
2	0	1	0	Channel is executing.
3a	0	0	0	Channel has completed the minor loop and is idle.
3b	0	0	1	Channel has completed the major loop and is idle.

The best method to test for minor-loop completion when using hardware-initiated (that is, peripheral-initiated) service requests is to read the TCDn_CITER field and test for a change. The hardware request and acknowledge handshake signals are not visible in the programmer's model.

The TCD status fields execute the following sequence for a hardware-activated channel:

Stage	TCDn_CSR field	CHn_CSR fields		State
	START	ACTIVE	DONE	
1	0	0	0	Initiate channel service request via hardware (peripheral request asserted).
2	0	1	0	Channel is executing.
3a	0	0	0	Channel has completed the minor loop and is idle.
3b	0	0	1	Channel has completed the major loop and is idle.

For both activation types, the major-loop-complete status is explicitly indicated via the CHn_CSR[DONE] field.

The TCDn_CSR[START] field is cleared to 0 automatically when the channel begins execution, regardless of how the channel activates.

16.5.6.2 Reading the transfer descriptors of active channels

The eDMA reads back the true TCDn_SADDR, TCDn_DADDR, and TCDn_NBYTES values if they are read when a channel executes. The true values of SADDR, DADDR, and NBYTES are the values the eDMA engine currently uses in its internal register file, and not the values in the TCD local memory for that channel. The addresses, SADDR and DADDR, and NBYTES (which decrements to zero as the transfer progresses), can give an indication of the progress of the transfer. All other values are read back from the TCD local memory.

16.5.6.3 Checking channel preemption status

A preemptive situation is one in which a preempt-enabled channel is executing and a higher-priority request becomes active. When round-robin channel arbitration mode is enabled, all channels with their channel priority set to 0 lose their preempt ability. Channel priorities of 0 are treated as equal, that is, they are constantly rotating, when round-robin arbitration mode is enabled.

The CHn_CSR[ACTIVE] field for the preempted channel remains asserted throughout the preemption. The preempted channel is temporarily suspended when the preempting channel executes one major loop iteration. If two CHn_CSR[ACTIVE] fields are set simultaneously in the global TCD map, a higher-priority channel is actively preempting a lower-priority channel.

16.5.7 Channel linking

Channel linking (or chaining) is a mechanism in which one channel sets the TCDn_CSR[START] field of another channel (or itself), thus initiating a service request for that channel. When properly enabled, the eDMA engine automatically performs this operation at the major or minor loop completion.

The minor loop channel linking occurs at the completion of the minor loop (or one iteration of the major loop). The TCDn_CITER[ELINK] field determines whether a minor loop link is requested. When enabled, the channel link is made after each iteration of the major loop except for the last. When the major loop is exhausted, only the major loop channel link fields are used to determine if a channel link should be made. For example, using an initial field setting of:

```
MP_CSR[GCLC] = 1
TCDn_CITER[ELINK] = 1
TCDn_CITER[LINKCH] = 0xC
TCDn_CITER[CITER] value = 0x4
TCDn_CSR[MAJORELINK] = 1
TCDn_CSR[MAJORLINKCH] = 0x7
```

executes as:

1. Minor loop done → set TCD12_CSR[START] field
2. Minor loop done → set TCD12_CSR[START] field
3. Minor loop done → set TCD12_CSR[START] field
4. Minor loop done, major loop done → set TCD7_CSR[START] field

When minor loop linking is enabled (TCDn_CITER[ELINK] = 1), the TCDn_CITER[CITER] field uses a nine-bit vector to form the current iteration count. When minor loop linking is disabled (TCDn_CITER[ELINK] = 0), the TCDn_CITER[CITER] field uses a 15-bit vector to form the current iteration count. The bits associated with the TCDn_CITER[LINKCH] field are concatenated onto the CITER value to increase the range of the CITER.

NOTE

The TCDn_CITER[ELINK] field and the TCDn_BITER[ELINK] field must be equal — if they are not, a configuration error is reported. The CITER and BITER vector widths must be equal to calculate the major loop halfway done interrupt point.

The following table summarizes how a DMA channel can link to another DMA channel, that is, use another channel's TCD, at the end of a loop.

Table 100. Channel linking parameters

Wanted link behavior	TCD control field name	Description
Link at end of minor loop	TCDn_CITER[ELINK]	Enable channel-to-channel linking on minor loop completion (current iteration)
	TCDn_CITER[LINKCH]	Link channel number when linking at end of minor loop (current iteration)
Link at end of major loop	TCDn_CSR[MAJORELINK]	Enable channel-to-channel linking on major loop completion
	TCDn_CSR[MAJORLINKCH]	Link channel number when linking at end of major loop

16.5.8 Dynamic programming

This section provides recommended methods to change the programming model during channel execution.

Steps for channel linking:

1. Set **GCLC** = 1
2. For linking after major loop complete:
 - a. Set **MAJORLINKCH** = target channel number
 - b. Set **MAJORELINK** = 1, enable the major loop link
 - c. Upon major loop completion (CITER decrements to 0), the link will be made.
3. For linking on minor loop completion:
 - a. Set **LINKCH** = target channel number
 - b. Set **ELINK** = 1, enable the minor loop link
 - c. Set the beginning iteration count to the same values; **LINKCH** = target channel and **ELINK** = 1,
 - d. Upon minor loop completion (that is, after each service request except when the major loop is complete) the link will be made.

16.5.8.1 Dynamically changing the channel priority

To change group or channel priority levels:

1. Halt the DMA by writing 1 to the CSR[HALT] field.
2. Change the group or channel priorities as wanted.
3. Enable normal DMA operations by writing 0 to the CSR[HALT] field.

16.5.8.2 Dynamic channel linking

Dynamic channel linking is the process of setting the [TCDn_CSR\[MAJORELINK\]](#) field during channel execution (see the diagram in [TCD structure](#)). This field is read from the TCD local memory at the end of channel execution, thus allowing you to enable the feature during channel execution.

Because you are allowed to change the configuration during execution, you need a coherency model. Consider the scenario where you attempt to execute a dynamic channel link by enabling the [TCDn_CSR\[MAJORELINK\]](#) field at the same time the eDMA engine is retiring the channel. TCDn_CSR[MAJORELINK] would be set in the programmer's model, but it would be unclear whether the actual link was made before the channel retired.

We recommend that you use the following coherency model when executing a dynamic channel link request.

1. Write 1 to the [TCDn_CSR\[MAJORELINK\]](#) field.
2. Read back the TCDn_CSR[MAJORELINK] field.
3. Test the TCDn_CSR[MAJORELINK] request status:
 - If TCDn_CSR[MAJORELINK] = 1, the dynamic link attempt was successful.
 - If TCDn_CSR[MAJORELINK] = 0, the attempted dynamic link did not succeed (the channel was already retiring).

For this request, the TCD local memory controller forces the [TCDn_CSR\[MAJORELINK\]](#) field to 0 on any writes to a channel's TCDn_CSR[7:0] after that channel's [CHn_CSR\[DONE\]](#) field is set to 1, indicating the major loop is complete.

NOTE

You must clear the [CHn_CSR\[DONE\]](#) field to 0 before writing to the [TCDn_CSR\[MAJORELINK\]](#) field. The [CHn_CSR\[DONE\]](#) field is cleared to 0 automatically by the eDMA engine after a channel begins execution.

16.5.8.3 Dynamic scatter/gather

Scatter/gather is the process of automatically loading a new TCD into a channel. It allows a DMA channel to use multiple TCDs; this enables a DMA channel to scatter the DMA data to multiple destinations or gather it from multiple sources. When scatter/gather is enabled and the channel has finished its major loop, a new TCD is fetched from system memory and loaded into that channel's descriptor location in the eDMA programmer's model, thus replacing the current descriptor.

Because you are allowed to change the configuration during execution, you need a coherency model. Consider the scenario where you attempt to execute a dynamic scatter/gather operation by enabling the [TCDn_CSR\[ESG\]](#) field at the same time the eDMA engine is retiring the channel. The [TCDn_CSR\[ESG\]](#) field would be set in the programmer's model, but it would be unclear whether the actual scatter/gather request was honored before the channel retired.

Two methods are recommended for executing a dynamic scatter/gather request. Whenever the TCDn_CSR is written, the TCD local memory controller forces the TCDn_CSR[ESG] field to 0 on any writes to a channel's [TCDn_CSR\[7:0\]](#) after that channel's [CHn_CSR\[DONE\]](#) field has been set to 1, indicating the major loop is complete. If attempting to set the ESG, ensure the DONE field is cleared to 0.

NOTE

You must clear the [CHn_CSR\[DONE\]](#) field to 0 before writing the [TCDn_CSR\[ESG\]](#) or [TCDn_CSR\[ESG\]](#) fields. The CHn_CSR[DONE] field is cleared to 0 automatically by the eDMA engine after a channel begins execution and is set to 1 upon major loop completion.

16.5.8.3.1 Method 1 (channel not using major loop channel linking)

For a channel not using major loop channel linking, the coherency model described here may be used for a dynamic scatter/gather request.

When the `TCDn_CSR[MAJORELINK]` field is 0, the `TCDn_CSR[MAJORLINKCH]` field is not used by the eDMA. In this case, the `TCDn_CSR[MAJORLINKCH]` bits may be used for other purposes. This method uses the `TCDn_CSR[MAJORLINKCH]` field as a TCDn_CSR identification (ID).

When the descriptors are built, write a unique TCDn_CSR ID in the `TCDn_CSR[MAJORLINKCH]` field for each TCDn_CSR associated with a channel using dynamic scatter/gather.

1. Write a 1 to the `TCDn_CSR[DREQ]` field. Should a dynamic scatter/gather attempt fail, setting the `TCDn_CSR[DREQ]` field to 1 will prevent future hardware activation of this channel. This stops the channel from executing with a destination address (daddr) that was calculated using a scatter/gather address (written in the next step) instead of a DLAST final offset value.
2. Write the `TCDn_DLAST_SGA` field with the scatter/gather address.
3. Write a 1 to the `TCDn_CSR[ESG]` field.
4. Read back the 16-bit TCDn_CSR control/status field.
5. Test the `TCDn_CSR[ESG]` request status and `TCDn_CSR[MAJORLINKCH]` value:
 - If ESG = 1, the dynamic scatter/gather attempt was successful.
 - If ESG = 0 and the MAJORLINKCH (ID) did not change, the dynamic scatter/gather attempt was not successful (the channel was already retiring).
 - If ESG = 0 and the MAJORLINKCH (ID) changed, the dynamic scatter/gather attempt was successful (the new TCDn_CSR's ESG value cleared the ESG field to 0).

16.5.8.3.2 Method 2 (channel using major loop channel linking)

For a channel using major loop channel linking, the coherency model described here may be used for a dynamic scatter/gather request. This method uses the `TCDn_DLAST_SGA` field as a TCD identification (ID).

1. Write a 1 to the `TCDn_CSR[DREQ]` field. Should a dynamic scatter/gather attempt fail, setting the DREQ field to 1 will prevent a future hardware activation of this channel. This stops the channel from executing with a destination address (DADDR) that was calculated using a scatter/gather address (written in the next step) instead of a DLAST final offset value.
2. Write the `TCDn_DLAST_SGA` field with the scatter/gather address.
3. Write a 1 to the `TCDn_CSR[ESG]` field.
4. Read back the `TCDn_CSR[ESG]` field.
5. Test the `TCDn_CSR[ESG]` request status:
 - If ESG = 1, the dynamic scatter/gather attempt was successful.
 - If ESG = 0, read the 32-bit `TCDn_DLAST_SGA` field.
 - If ESG = 0 and the `TCDn_DLAST_SGA` did not change, the dynamic scatter/gather attempt was not successful (the channel was already retiring).
 - If ESG = 0 and the `TCDn_DLAST_SGA` changed, the dynamic scatter/gather attempt was successful (the new TCDn_CSR's ESG value cleared the ESG field to 0).

16.5.9 Suspend/resume a DMA channel with active hardware service requests

The DMA allows you to move data from memory or peripheral registers to another location in memory or to peripheral registers without CPU interaction. After the DMA and peripherals are configured and active, it is rare but supported to suspend a peripheral's

service request dynamically. In this scenario, there are certain restrictions to disabling a DMA hardware service request. For coherency, you must follow a specific procedure.

16.5.9.1 Suspend an active DMA channel

To suspend an active DMA channel:

1. Stop the DMA service request at the peripheral first. Confirm it has been disabled by reading back the appropriate register in the peripheral.
2. Check the DMA's Hardware Request Status ([MP_HRS](#)) to ensure there is no service request to the DMA channel being suspended. Then disable the hardware service request by clearing the ERQ field to 0 on the appropriate DMA channel.

For example, assume the SPI is set as a initiator for transmitting data via a DMA service request when the TXFIFO has an empty slot. The DMA will transfer the next command and data to the TXFIFO upon the request. If you need to suspend the DMA/SPI transfer loop, perform the following steps:

1. Disable the DMA service request at the SPI.
2. Ensure there is no DMA service request from the SPI by verifying that [MP_HRS\[HRS\]](#) is 0 for the appropriate channel. If no service request is present, disable the DMA channel by clearing the channel's ERQ field to 0. If a service request is present, wait until the request has been processed and the HRS field reads 0.

16.5.9.2 Resume a DMA channel

To resume a DMA channel:

1. Enable the DMA service request on the appropriate channel by setting its ERQ field to 1.
2. Enable the DMA service request at the peripheral.

16.6 Memory map and register definition

The eDMA programming model is partitioned into three parts:


1. The first part defines a number of registers providing overall control functions and is known as the management page.
2. The second part corresponds to the channel (CH) control, status, and configuration.
3. The third part corresponds to the local TCD memory.

TCD memory

Each channel requires a 32-byte transfer control descriptor for defining the data movement operation. Each TCDn definition is presented as 11 registers of 16 or 32 bits. See [EDMA_TCD register descriptions](#) for details.

TCD initialization

Prior to activating a channel, you must initialize its TCD with the appropriate transfer profile.

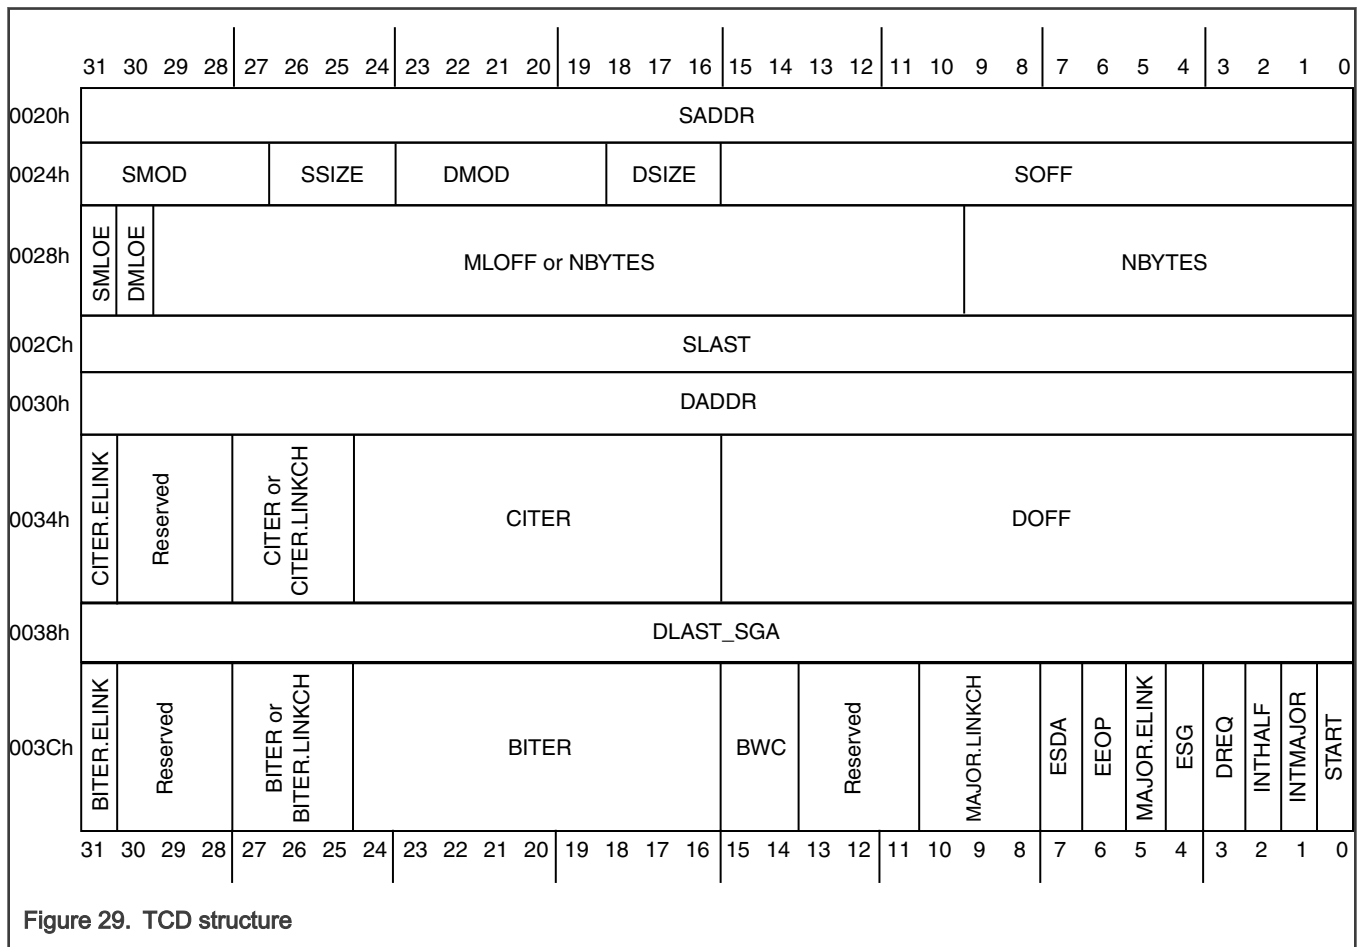TCD structure**Accesses to reserved memory and fields**

- Reading reserved fields in a register returns the value of zero.
- Writes to reserved fields in a register are ignored.
- Reading or writing a reserved memory location generates a bus error.

16.6.1 EDMA_MP register descriptions**16.6.1.1 EDMA_MP memory map**

eDMA_0_MP base address: 4008_0000h

Offset	Register	Width (In bits)	Access	Reset value
0h	Management Page Control (MP_CSR)	32	RW	0031_0000h
4h	Management Page Error Status (MP_ES)	32	R	0000_0000h
8h	Management Page Interrupt Request Status (MP_INT)	32	R	0000_0000h

Table continues on the next page...

Table continued from the previous page...

Offset	Register	Width (In bits)	Access	Reset value
Ch	Management Page Hardware Request Status (MP_HRS)	32	R	0000_0000h
100h - 11Ch	Channel Arbitration Group (CH0_GRPRI - CH7_GRPRI)	32	RW	0000_0000h

16.6.1.2 Management Page Control (MP_CSR)

Offset

Register	Offset
MP_CSR	0h

Function

The Management Page Control register defines the basic operating configuration of the DMA.

Arbitration uses a two-tier priority system; group and channel priority. The eDMA assigns each channel to a priority group. Group arbitration is fixed-priority and cannot be changed. Channel arbitration uses fixed priority and may be configured to use a selective round-robin scheme for specified channels within each priority group. For fixed-priority arbitration, eDMA selects for execution the highest priority channel requesting service in the highest priority arbitration group.

The channel priority registers assign the relative priorities within each arbitration group; see [CHn_PRI](#). All channels with a non-zero CHn_PRI value use fixed-priority arbitration.

When you enable round-robin arbitration, all channels with channel priority set to zero do not have a priority and, of those channels requesting service, are cycled through (from high to low channel number) without regard to priority relative to each other within the same priority group. Any channel with a non-zero CHn_PRI value automatically has a higher priority over the round-robin channels. A channel's priority group is assigned in [Channel Arbitration Group \(CH0_GRPRI - CH7_GRPRI\)](#).

NOTE

For correct operation, changes to the MP_CSR[ERCA, GCLC, GMRC] fields must be performed when the DMA channels are inactive; that is, when the MP_CSR[ACTIVE] field is 0.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	ACTIV	Reserved				ACTIVE_ID				Reserved						
W																
Reset	0	0	0	0	0	0	0	0	0	0	1	1	0	0	0	1
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserved				CX		ECX		GMRC	GCLC	HALT	HAE	Reserv	ERCA	EDBG	Reserv
W	0												0			0
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31 ACTIVE	DMA Active Status 0b - eDMA is idle 1b - eDMA is executing a channel
30-27 —	Reserved
26-24 ACTIVE_ID	Active Channel ID This field identifies the channel number that is executing when the ACTIVE bit is 1.
23-16 —	Reserved
15-10 —	Reserved
9 CX	Cancel Transfer When set to 1, this field cancels the remaining data transfer, stops the executing channel, and forces the minor loop to finish. The cancel takes effect after the last write of the current read/write sequence. CX clears itself to 0 after the cancel has been honored. This cancel retires the channel normally as if the minor loop had been completed. 0b - Normal operation 1b - Cancel the remaining data transfer
8 ECX	Cancel Transfer With Error Cancellation of the remaining data transfer is similar to that of the CX field. Execution of the channel is stopped and the minor loop is forced to finish. The cancellation takes effect after the last write of the current read/write sequence. The ECX field clears itself to 0 after the cancel is honored. In addition to cancelling the transfer, ECX treats the cancel as an error condition, thus updating Management Page Error Status (MP_ES) and generating an optional error interrupt. 0b - Normal operation 1b - Cancel the remaining data transfer
7 GMRC	Global Initiator ID Replication Control NOTE If initiator ID replication is disabled, the privileged protection level (Supervisor mode) for DMA transfers is used. 0b - Initiator ID replication disabled for all channels 1b - Initiator ID replication available and controlled by each channel's CHn_SBR[EMI] setting
6	Global Channel Linking Control

Table continues on the next page...

Table continued from the previous page...

Field	Function
GCLC	0b - Channel linking disabled for all channels 1b - Channel linking available and controlled by each channel's link settings
5 HALT	Halt DMA Operations This field stalls the start of any new channels. Executing channels are allowed to complete. Channel execution resumes when this field is cleared to 0. 0b - Normal operation 1b - Stall the start of any new channels
4 HAE	Halt After Error When this field is set to 1, any error causes the HALT field to be set to 1. Then all service requests are ignored until the HALT field is cleared to 0. 0b - Normal operation 1b - Any error causes the HALT field to be set to 1
3 —	Reserved
2 ERCA	Enable Round Robin Channel Arbitration 0b - Round-robin channel arbitration disabled. Fixed priority arbitration used for channel selection 1b - Round-robin channel arbitration enabled. Round-robin arbitration used for channel selection
1 EDBG	Enable Debug When in debug mode, the DMA stalls the start of a new channel. Executing channels are allowed to complete. DMA resumes channel execution when the system exits debug mode or clears the EDBG field to 0. 0b - Debug mode disabled. When in debug mode, the DMA continues to operate 1b - Debug mode is enabled. When in debug mode, the DMA stalls the start of a new channel
0 —	Reserved

16.6.1.3 Management Page Error Status (MP_ES)

Offset

Register	Offset
MP_ES	4h


Function

The ES provides information concerning the last recorded channel error. Channel errors can be caused by:

- An illegal setting in the transfer control descriptor
- An error termination to a bus initiator read or write cycle
- An uncorrectable error that occurred when the device was accessing the TCD SRAM
- A "cancel transfer with error" request was made via the corresponding cancel transfer field or input signal

Upon any error condition, the software must initialize the TCD of the channel that contains the error, as it is in an incomplete state after an error. See [Fault reporting and handling](#) for more details.

Diagram

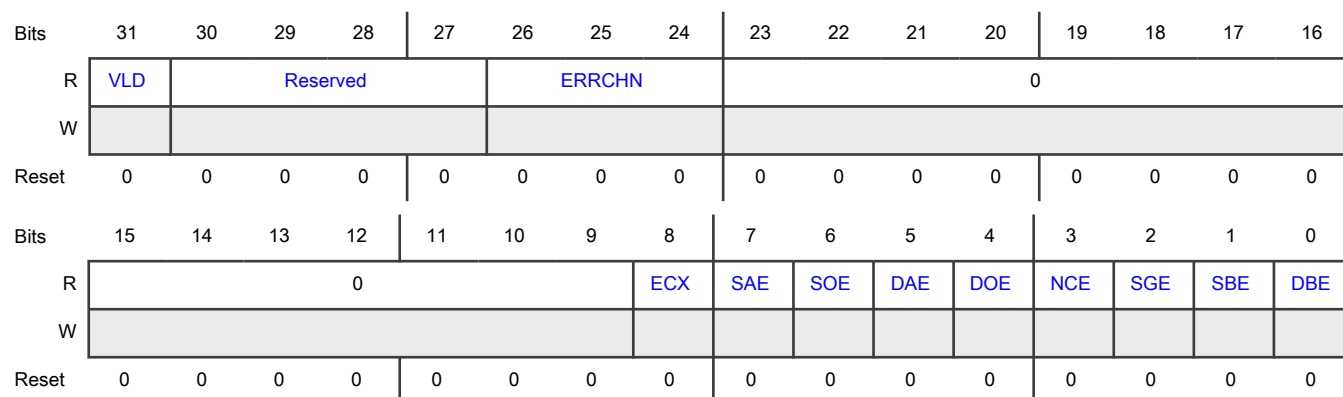

Fields

Field	Function
31 VLD	Valid Logical OR of all CHn_ES[ERR] status fields. 0b - No CHn_ES[ERR] fields are set to 1 1b - At least one CHn_ES[ERR] field is set to 1, indicating a valid error exists that software has not cleared
30-27 —	Reserved
26-24 ERRCHN	Error Channel Number or Canceled Channel Number The channel number of the last recorded error or last recorded error-canceled transfer.
23-9 —	Reserved
8 ECX	Transfer Canceled The ECX operation is a management page function. When employed, the targeted channel's CHn_ES register reports an unspecified error; that is, only the CHn_ES[ERR] field is set to 1. The management page has full view of the error condition. 0b - No canceled transfers 1b - Last recorded entry was a canceled transfer by the error cancel transfer input

Table continues on the next page...

Table continued from the previous page...

Field	Function
7 SAE	Source Address Error When this field is 1, it indicates that TCDn_SADDR is inconsistent with TCDn_ATTR[SSIZE]. 0b - No source address configuration error 1b - Last recorded error was a configuration error detected in the TCDn_SADDR field
6 SOE	Source Offset Error When this field is 1, it indicates that TCDn_SOFF is inconsistent with TCDn_ATTR[SSIZE]. 0b - No source offset configuration error 1b - Last recorded error was a configuration error detected in the TCDn_SOFF field
5 DAE	Destination Address Error When this field is 1, it indicates that TCDn_DADDR is inconsistent with TCDn_ATTR[DSIZE]. 0b - No destination address configuration error 1b - Last recorded error was a configuration error detected in the TCDn_DADDR field
4 DOE	Destination Offset Error When this field is 1, it indicates that TCDn_DOFF is inconsistent with TCDn_ATTR[DSIZE]. 0b - No destination offset configuration error 1b - Last recorded error was a configuration error detected in the TCDn_DOFF field
3 NCE	NBYTES/CITER Configuration Error This error indicates that one of the following has occurred: • TCDn_NBYTES is not a multiple of TCDn_ATTR[SSIZE] and TCDn_ATTR[DSIZE] • TCDn_CITER[CITER] is equal to zero • TCDn_CITER[ELINK] is not equal to TCDn_BITER[ELINK] 0b - No NBYTES/CITER configuration error 1b - The last recorded error was NBYTES equal to zero or a CITER not equal to BITER error. Last recorded error was a configuration error detected in the TCDn_NBYTES or TCDn_CITER fields
2 SGE	Scatter/Gather Configuration Error When this field is 1, it indicates that TCDn_DLAST_SGA is not on a 32-byte boundary. This field is checked at the beginning of a scatter/gather operation after major loop completion if TCDn_CSR[ESG] is enabled. 0b - No scatter/gather configuration error 1b - Last recorded error was a configuration error detected in the TCDn_DLAST_SGA field
1 SBE	Source Bus Error

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - No source bus error 1b - Last recorded error was a bus error on a source read
0 DBE	Destination Bus Error 0b - No destination bus error 1b - Last recorded error was a bus error on a destination write

16.6.1.4 Management Page Interrupt Request Status (MP_INT)


Offset

Register	Offset
MP_INT	8h

Function

This register shows the current state of the interrupt service requests for all eDMA channels.

Diagram

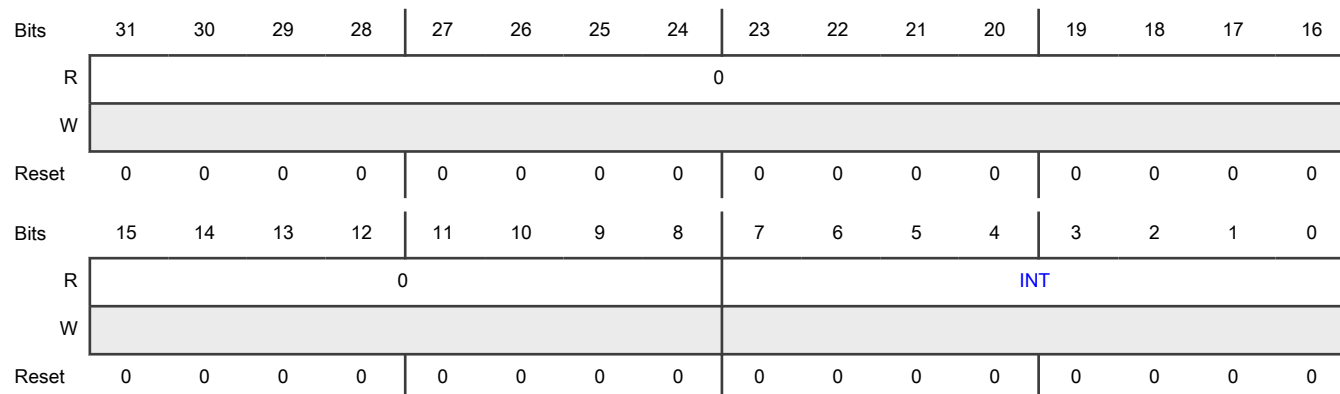

Fields

Field	Function
31-8 —	Reserved
7-0 INT	Interrupt Request Status The INT register presents the interrupt request status for each eDMA channel. Depending on the appropriate field setting in the transfer control descriptors, the eDMA engine generates an interrupt

Table continues on the next page...

Table continued from the previous page...

Field	Function
	on data transfer completion or an error condition. The eDMA routes channel interrupt requests to the interrupt controller. During the interrupt service routine associated with any given channel, it is the software's responsibility to clear the appropriate field in the channel's interrupt request register, CHn_INT, thus negating the interrupt request.
	0b - Interrupt request for corresponding channel not present
	1b - Interrupt request for corresponding channel present

16.6.1.5 Management Page Hardware Request Status (MP_HRS)


Offset

Register	Offset
MP_HRS	Ch

Function

The hardware request status register (HRS) shows the current state of the hardware service request signaling as seen by eDMA's arbitration logic.

Diagram

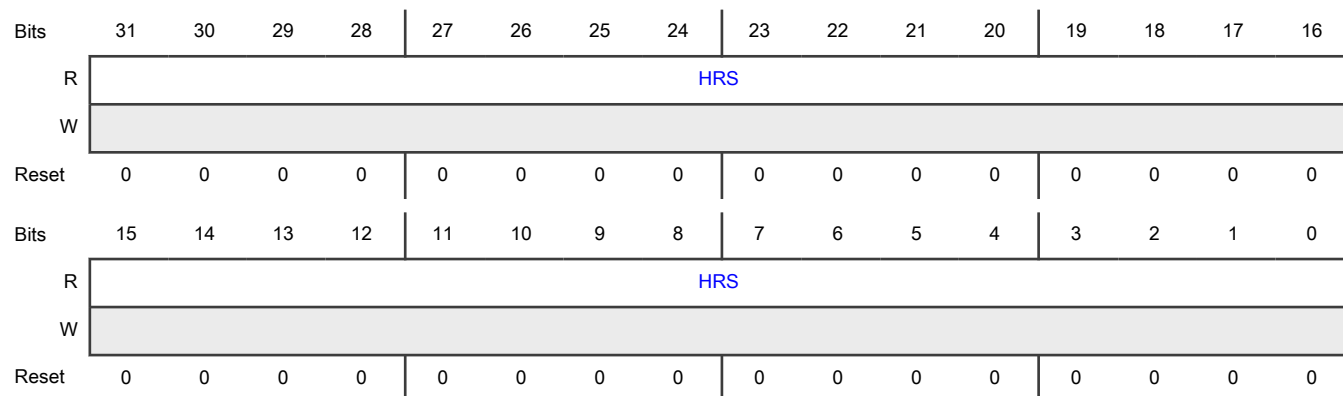

Fields

Field	Function
31-0	Hardware Request Status
HRS	The HRS bit for its respective channel remains asserted for the period when a hardware request is present on the channel.
	0b - Hardware service request for corresponding channel is not present
	1b - Hardware service request for corresponding channel is present

16.6.1.6 Channel Arbitration Group (CH0_GRPRI - CH7_GRPRI)

Offset


For n = 0 to 7:

Register	Offset
CHn_GRPRI	100h + (n × 4h)

Function

The contents of this register define the arbitration group associated with each channel. Using a fixed-priority group arbitration scheme, eDMA evaluates the arbitration group priorities by numeric value from highest group number to lowest; for example, 0 is the lowest priority, 1 is the next higher priority, then 2, 3, and so on. The range of the group priority values is limited to the values of 0 through 31. Within each arbitration group, the channel priority assignment CHn_PRI determines the highest-priority channel.

Diagram

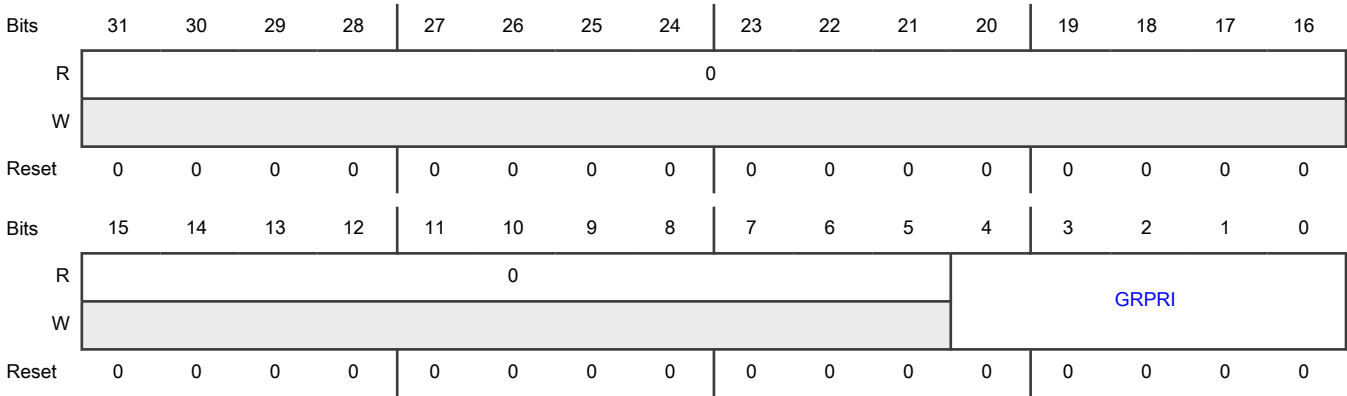

Fields

Field	Function
31-5 —	Reserved
4-0 GRPRI	Arbitration Group For Channel n Fixed-priority arbitration group number.

16.6.2 EDMA_TCD register descriptions

16.6.2.1 EDMA_TCD memory map

eDMA_0_TCD0 base address: 4008_1000h

Offset	Register	Width (In bits)	Access	Reset value
0h - 7000h	Channel Control and Status (CH0_CSR - CH7_CSR)	32	RW	0000_0000h
4h - 7004h	Channel Error Status (CH0_ES - CH7_ES)	32	RW	0000_0000h
8h - 7008h	Channel Interrupt Status (CH0_INT - CH7_INT)	32	RW	0000_0000h
Ch - 700Ch	Channel System Bus (CH0_SBR - CH7_SBR)	32	RW	0000_0005h
10h - 7010h	Channel Priority (CH0_PRI - CH7_PRI)	32	RW	0000_0000h
14h - 7014h	Channel Multiplexor Configuration (CH0_MUX - CH7_MUX)	32	RW	0000_0000h
20h - 7020h	TCD Source Address (TCD0_SADDR - TCD7_SADDR)	32	RW	See section
24h - 7024h	TCD Signed Source Address Offset (TCD0_SOFF - TCD7_SOFF)	16	RW	See section
26h - 7026h	TCD Transfer Attributes (TCD0_ATTR - TCD7_ATTR)	16	RW	See section
28h - 7028h	TCD Transfer Size Without Minor Loop Offsets (TCD0_NBYTES_MLOFFNO - TCD7_NBYTES_MLOFFNO)	32	RW	See section
28h - 7028h	TCD Transfer Size with Minor Loop Offsets (TCD0_NBYTES_MLOFFYES - TCD7_NBYTES_MLOFFYES)	32	RW	See section
2Ch - 702Ch	TCD Last Source Address Adjustment / Store DADDR Address (TCD0_SLAST_SDA - TCD7_SLAST_SDA)	32	RW	See section
30h - 7030h	TCD Destination Address (TCD0_DADDR - TCD7_DADDR)	32	RW	See section
34h - 7034h	TCD Signed Destination Address Offset (TCD0_DOFF - TCD7_DOFF)	16	RW	See section
36h - 7036h	TCD Current Major Loop Count (Minor Loop Channel Linking Disabled) (TCD0_CITER_ELINKNO - TCD7_CITER_ELINKNO)	16	RW	See section
36h - 7036h	TCD Current Major Loop Count (Minor Loop Channel Linking Enabled) (TCD0_CITER_ELINKYES - TCD7_CITER_ELINKYES)	16	RW	See section
38h - 7038h	TCD Last Destination Address Adjustment / Scatter Gather Address (TCD0_DLAST_SGA - TCD7_DLAST_SGA)	32	RW	See section
3Ch - 703Ch	TCD Control and Status (TCD0_CSR - TCD7_CSR)	16	RW	See section
3Eh - 703Eh	TCD Beginning Major Loop Count (Minor Loop Channel Linking Disabled) (TCD0_BITER_ELINKNO - TCD7_BITER_ELINKNO)	16	RW	See section
3Eh - 703Eh	TCD Beginning Major Loop Count (Minor Loop Channel Linking Enabled) (TCD0_BITER_ELINKYES - TCD7_BITER_ELINKYES)	16	RW	See section

16.6.2.2 Channel Control and Status (CH0_CSR - CH7_CSR)

Offset


For n = 0 to 7:

Register	Offset
CHn_CSR	0h + (n × 1000h)

Function

This register contains several fields related to hardware and interrupt requests, configuration, and status for the given channel.

Diagram

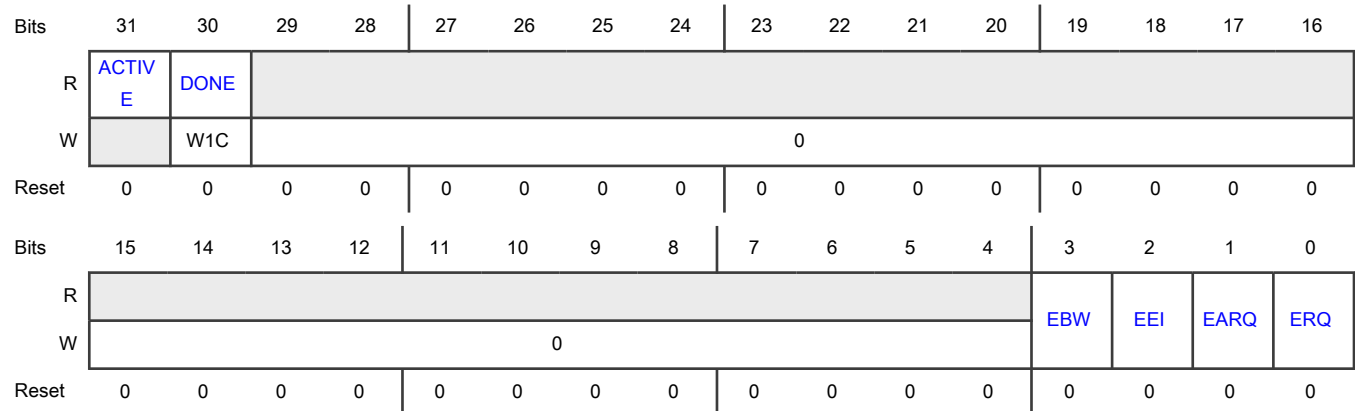

Fields

Field	Function
31 ACTIVE	Channel Active The ACTIVE field indicates the channel was selected by arbitration and is executing the prescribed transfers. The eDMA sets it to 1 when channel service begins, and clears it to 0 as the minor loop completes or when any error condition is detected. Except for dynamic scatter/gather or dynamic channel linking, you must not modify the transfer control descriptor when a channel is active.
30 DONE	Channel Done The DONE field indicates the eDMA has completed the major loop. The eDMA engine sets this field as the CITER count reaches zero. If enabled, the eDMA generates an interrupt request corresponding to this completed channel. The software clears it, or the hardware clears it when the channel is activated. NOTE This field must be cleared to 0 before writing the MAJORELINK or ESG fields.
29-4 —	Reserved
3 EBW	Enable Buffered Writes When buffered writes are enabled, all writes except for the last write sequence of the minor loop are signaled by the eDMA as bufferable. 0b - Buffered writes on system bus disabled. Buffered writes on system bus disabled 1b - Buffered writes on system bus enabled. Bufferable write signal asserted on all system bus writes except during last write sequence
2 EEI	Enable Error Interrupt

Table continues on the next page...

Table continued from the previous page...

Field	Function
	The EEI field enables the error interrupt signal for the channel. The DMA error indicator and the error interrupt enable flag must be asserted before an error interrupt request for a given channel is asserted to the interrupt controller. 0b - Error signal for corresponding channel does not generate error interrupt 1b - Assertion of error signal for corresponding channel generates error interrupt request
1 EARQ	Enable Asynchronous DMA Request The enable asynchronous DMA request field (EARQ) does not affect DMA operations. When set to 1, this field allows the hardware service request enable field (ERQ) to propagate out of the DMA to the power controller. When cleared to 0, this field masks the hardware service request enable field to the power controller. 0b - Disable asynchronous DMA request for the channel 1b - Enable asynchronous DMA request for the channel
0 ERQ	Enable DMA Request Disable a channel's hardware service request at the source before clearing the channel's ERQ field. The DMA hardware request input signal and the enable request field (ERQ) must be asserted before a channel's hardware service request is accepted. The state of the eDMA enable request field does not affect a channel service request made explicitly through software or channel linking. The state of the ERQ field does not affect the channel's START field. 0b - DMA hardware request signal for corresponding channel disabled 1b - DMA hardware request signal for corresponding channel enabled

16.6.2.3 Channel Error Status (CH0_ES - CH7_ES)

Offset

For n = 0 to 7:

Register	Offset
CHn_ES	4h + (n × 1000h)

Function

The ES provides information concerning the last recorded channel error. Channel errors can be caused by:

- An illegal setting in the transfer control descriptor
- An error termination to a bus initiator read or write cycle

The ERR field signals the presence of an error for the channel. The eDMA engine signals the occurrence of an error condition by setting the appropriate field in this register. The outputs of this register are enabled by the contents of the [CHn_CSR\[EEI\]](#) field, then logically summed across all channels to form an error interrupt request, which may be routed to the interrupt controller. In addition, this enabled error status is logically OR'd onto the channel done interrupt, [CHn_INT\[INT\]](#), thus forming a done or error interrupt on a per channel basis.


During the execution of the interrupt service routine associated with any DMA errors, it is software's responsibility to clear the appropriate bit, negating the error-interrupt request. The normal DMA channel completion indicators (setting the transfer control descriptor DONE flag and the possible assertion of an interrupt request) are not affected when eDMA detects an error. The contents of this ERR register field can also be polled because a non-zero value indicates the presence of a channel error, regardless of the state of the EEI mask.

The state of any given channel's error indicators is affected by writes to this register. Writing a 1 to the ERR field clears the channel's error status, and writing a 0 has no effect.

An unspecified error, where only the ERR field is set to 1, indicates that either a transfer was cancelled with an error. The Management Page Error Status register has full view of the error condition.

See [Fault reporting and handling](#) for more details.

Diagram

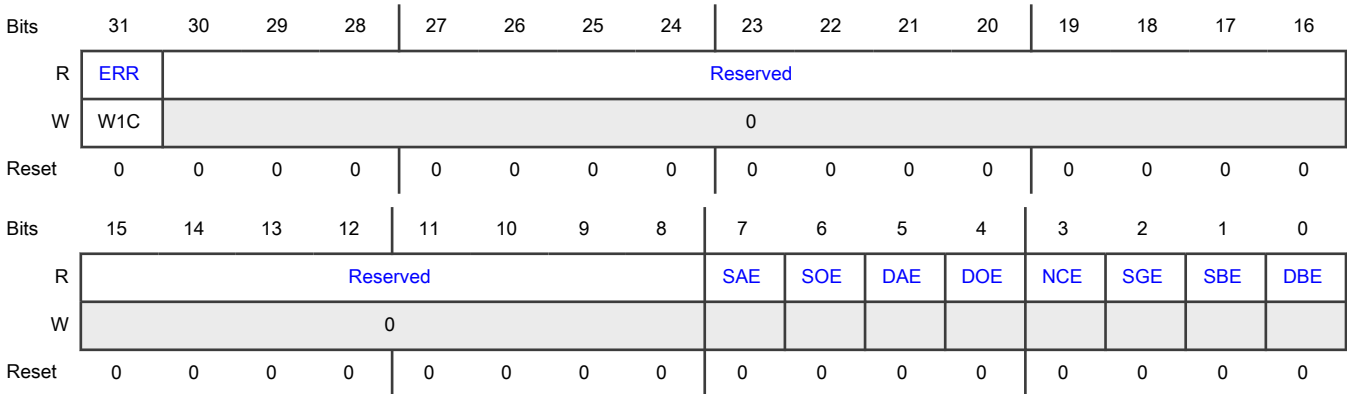

Fields

Field	Function
31 ERR	Error In Channel 0b - An error in this channel has not occurred 1b - An error in this channel has occurred
30-8 —	Reserved
7 SAE	Source Address Error TCDn_SADDR is inconsistent with TCDn_ATTR[SSIZE]. 0b - No source address configuration error 1b - Last recorded error was a configuration error detected in the TCDn_SADDR field
6 SOE	Source Offset Error TCDn_SOFF is inconsistent with TCDn_ATTR[SSIZE]. 0b - No source offset configuration error 1b - Last recorded error was a configuration error detected in the TCDn_SOFF field

Table continues on the next page...

Table continued from the previous page...

Field	Function
5 DAE	Destination Address Error TCDn_DADDR is inconsistent with TCDn_ATTR[DSIZE]. 0b - No destination address configuration error 1b - Last recorded error was a configuration error detected in the TCDn_DADDR field
4 DOE	Destination Offset Error TCDn_DOFF is inconsistent with TCDn_ATTR[DSIZE]. 0b - No destination offset configuration error 1b - Last recorded error was a configuration error detected in the TCDn_DOFF field
3 NCE	NBYTES/CITER Configuration Error This error indicates that one of the following has occurred: • TCDn_NBYTES is not a multiple of TCDn_ATTR[SSIZE] and TCDn_ATTR[DSIZE] • TCDn_CITER[CITER] is equal to zero • TCDn_CITER[ELINK] is not equal to TCDn_BITER[ELINK] 0b - No NBYTES/CITER configuration error 1b - Last recorded error was a configuration error detected in the TCDn_NBYTES or TCDn_CITER fields
2 SGE	Scatter/Gather Configuration Error When this field is 1, it indicates that TCDn_DLAST_SGA is not on a 32-byte boundary. This field is checked at the beginning of a scatter/gather operation after major loop completion if TCDn_CSR[ESG] is enabled. 0b - No scatter/gather configuration error 1b - Last recorded error was a configuration error detected in the TCDn_DLAST_SGA field
1 SBE	Source Bus Error 0b - No source bus error 1b - Last recorded error was bus error on source read
0 DBE	Destination Bus Error 0b - No destination bus error 1b - Last recorded error was bus error on destination write

16.6.2.4 Channel Interrupt Status (CH0_INT - CH7_INT)

Offset

For n = 0 to 7:


Register	Offset
CHn_INT	8h + (n × 1000h)

Function

The INT field signals the presence of an interrupt request for the channel. Depending on the appropriate bit setting in the transfer control descriptors, the eDMA engine generates an interrupt on data transfer completion or an error condition.

The outputs of this register are directly routed to the interrupt controller. During the interrupt service routine associated with any given channel, it is the software's responsibility to clear the appropriate bit, negating the interrupt request. On writes to INT, a 1 clears the channel's interrupt request. A zero has no effect on the channel's current interrupt status.

Diagram

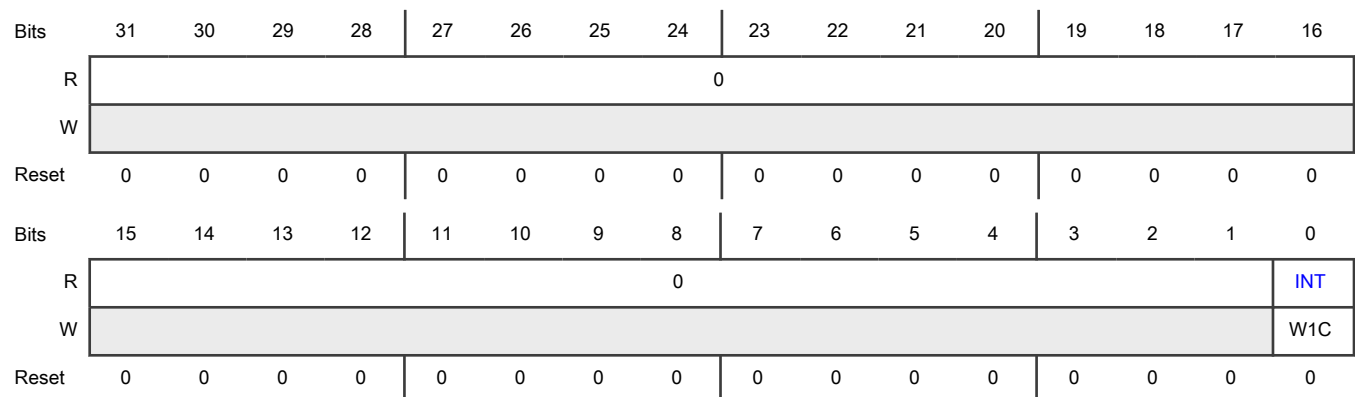

Fields

Field	Function
31-1 —	Reserved
0 INT	Interrupt Request 0b - Interrupt request for corresponding channel cleared 1b - Interrupt request for corresponding channel active

16.6.2.5 Channel System Bus (CH0_SBR - CH7_SBR)

Offset


For n = 0 to 7:

Register	Offset
CHn_SBR	Ch + (n × 1000h)

Function

The Channel System Bus register places identification and attribute information on the system bus interface for the eDMA.

Diagram

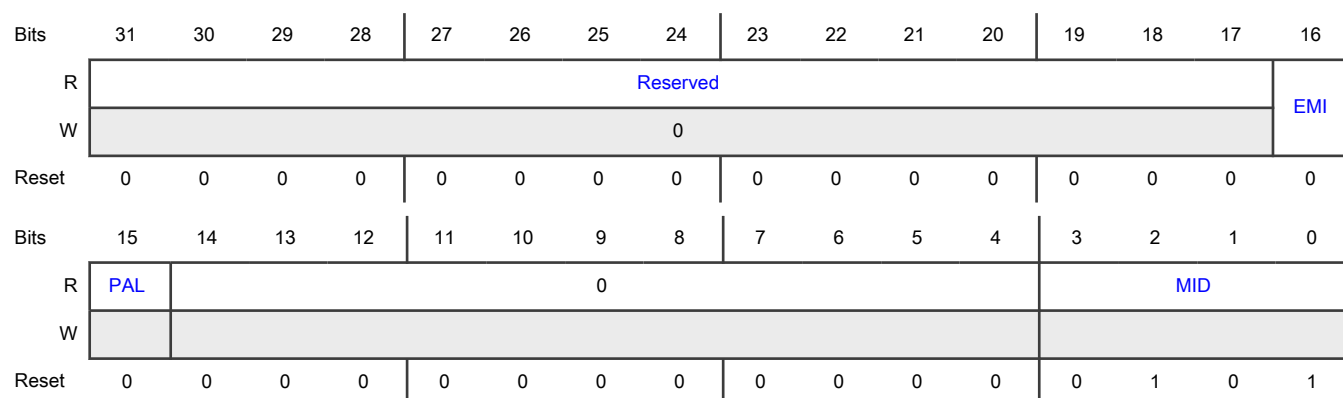

Fields

Field	Function
31-17 —	Reserved
16 EMI	Enable Initiator ID Replication The eDMA initiator ID replication field allows the eDMA to use the same protection level and system bus ID of the initiator programming the eDMA's TCD. When enabled, the eDMA uses the initiator ID and protection level stored in the CHn_SBR registers, instead of the eDMA's default values. When a initiator (for example a core) programs a TCD, its initiator ID is captured when the TCD_n_CSR control attributes are written. A scatter/gather operation does not affect the CHn_SBR registers. You can write the EMI only if MP_CSR[GMRC] = 1, which means Global Initiator ID Replication Control is enabled; otherwise, the EMI is forced to zero. NOTE If initiator ID replication is disabled, the nonsecure, user protection level for DMA transfers is used. 0b - Initiator ID replication is disabled 1b - Initiator ID replication is enabled
15 PAL	Privileged Access Level This field controls DMA's protection level on the system bus when the channel is active. NOTE When you enable initiator ID replication, the value captured in this register is the privilege level of the core or other initiator writing the channel's transfer control descriptor, which is the lower byte of TCD_n_CSR. 0b - User protection level for DMA transfers 1b - Privileged protection level for DMA transfers
14-4 —	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
3-0	Initiator ID
MID	This field controls the DMA's initiator ID on the system bus when the channel is active.
NOTE The ID captured in this register reflects the initiator ID of the core or other initiator writing the channel's control attributes, which are in the lower byte of TCD_n_CSR.	

16.6.2.6 Channel Priority (CH0_PRI - CH7_PRI)

Offset

For n = 0 to 7:

Register	Offset
CHn_PRI	10h + (n × 1000h)

Function

The contents of these registers define unique priorities associated with each channel within the same channel group. Channel grouping is programmed via [Channel Arbitration Group \(CH0_GRPRI - CH7_GRPRI\)](#).


The channel priorities within a group are evaluated by numeric value; for example, 0 is the lowest priority, 1 is the next higher priority, then 2, 3, and so on. Software must program the channel priorities with unique values; otherwise, channel numbers with the same, non-zero value, will be selected based on channel number with the higher channel number having higher priority.

If more than one channel in a group has an arbitration priority level value of zero, then the arbitration mode field [MP_CSR\[ERCA\]](#) is used to determine the arbitration scheme for all channels with APL=0 within a group.

When you enable round-robin channel arbitration ([MP_CSR\[ERCA\]](#) = 1), all channels with APL=0 within a group will use a round-robin arbitration scheme, which rotates among these channels requesting service without regard to priority. Round-robin provides a fairness mechanism within an arbitration group.

When you enable fixed-priority channel arbitration ([MP_CSR\[ERCA\]](#) = 0), eDMA selects channels with APL=0 based on channel number, with the higher channel number having higher priority.

Diagram

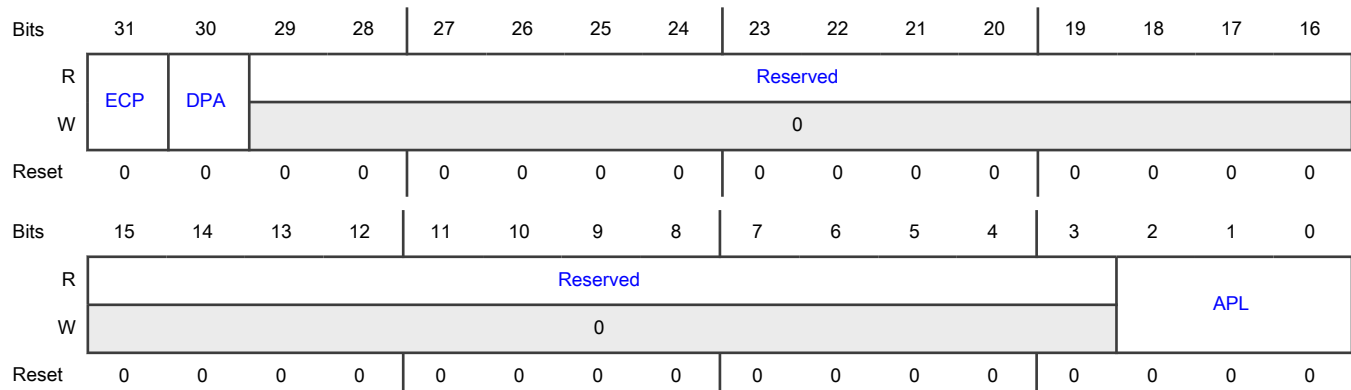

Fields

Field	Function
31 ECP	Enable Channel Preemption 0b - Channel cannot be suspended by a higher-priority channel's service request 1b - Channel can be temporarily suspended by a higher-priority channel's service request
30 DPA	Disable Preempt Ability 0b - Channel can suspend a lower-priority channel 1b - Channel cannot suspend any other channel, regardless of channel priority
29-3 —	Reserved
2-0 APL	Arbitration Priority Level Channel priority level for arbitration within the assigned arbitration group.

16.6.2.7 Channel Multiplexor Configuration (CH0_MUX - CH7_MUX)**Offset**

For n = 0 to 7:

Register	Offset
CHn_MUX	14h + (n × 1000h)


Function

Each of the DMA channels can be independently associated with various peripherals in the system. The Channel Multiplexor Configuration register selects the peripheral assigned to each channel. Service requests from the peripheral should be disabled when configuring a channel to a peripheral source.

Each channel must have a unique value when selecting a peripheral slot in the channel mux configuration. The only value that may overlap is source 0. If there is an attempt to write a mux configuration value that is already consumed by any channel, a mux configuration of 0 (SRC = 0) will be written.

All channels will default to source 0. When a particular peripheral is needed, the channel's mux configuration is set to that source number. When the peripheral is no longer needed, the mux configuration for that channel should be written to 0, thus releasing the resource.

Diagram

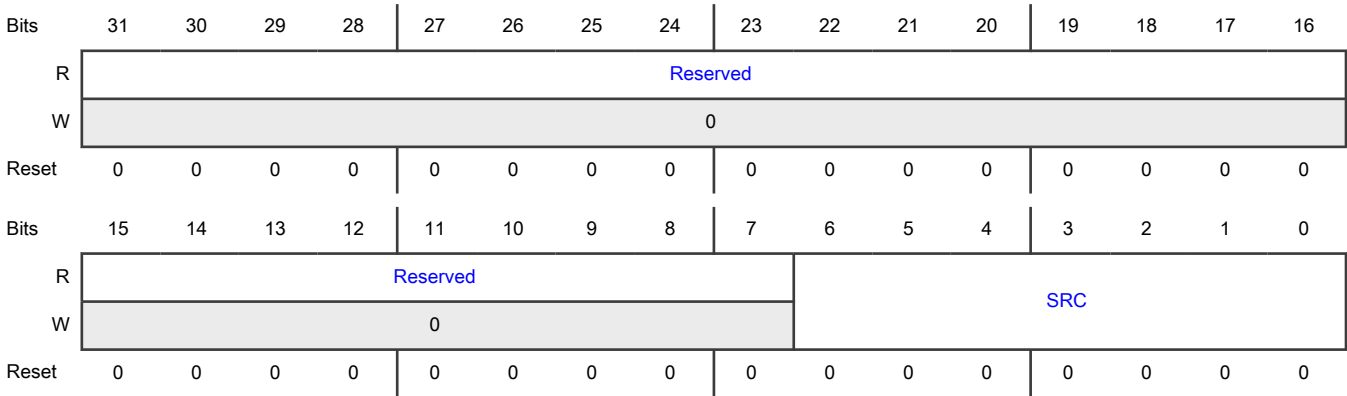

Fields

Field	Function
31-7 —	Reserved
6-0 SRC	Service Request Source Hardware service request source for the channel. NOTE With the exception of 0, attempts to write a value already in use will be forced to 0.

16.6.2.8 TCD Source Address (TCD0_SADDR - TCD7_SADDR)

Offset


For n = 0 to 7:

Register	Offset
TCDn_SADDR	20h + (n × 1000h)

Function

This register contains the address for the read transactions.

Diagram

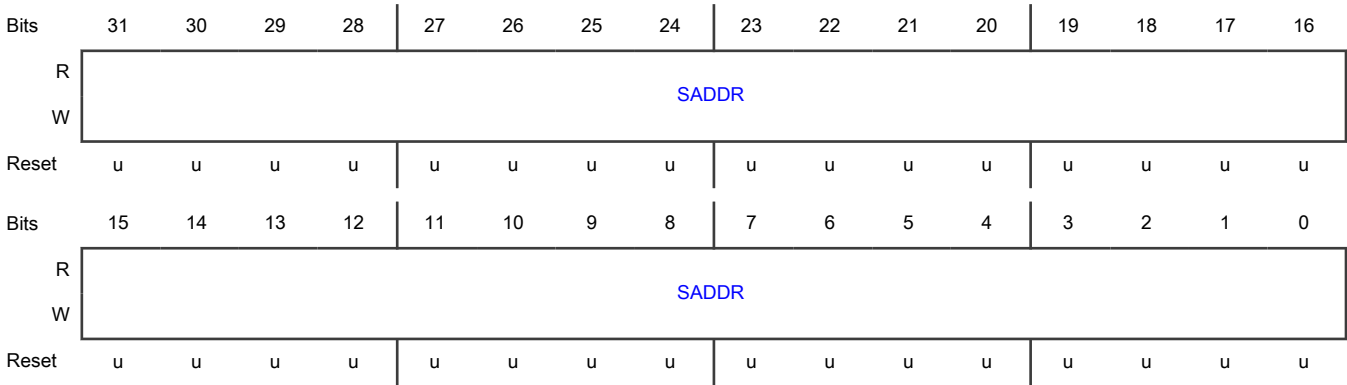

Fields

Field	Function
31-0	Source Address
SADDR	Memory address pointing to the source data.

16.6.2.9 TCD Signed Source Address Offset (TCD0_SOFF - TCD7_SOFF)

Offset


For n = 0 to 7:

Register	Offset
TCDn_SOFF	24h + (n × 1000h)

Function

This register contains the sign-extended value added to Source Address register after each read transaction.

Diagram

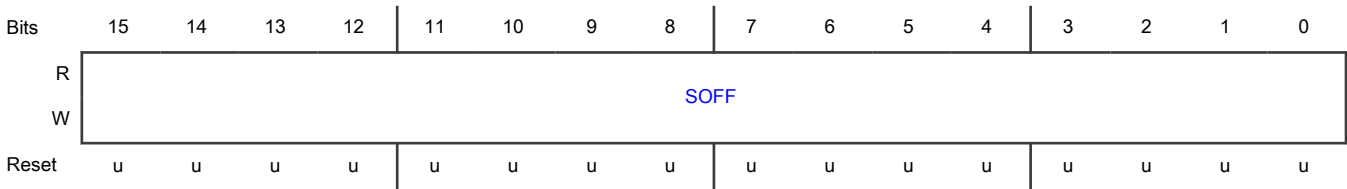

Fields

Field	Function
15-0	Source Address Signed Offset
SOFF	Sign-extended offset applied to the current source address to form the next-state value as each source read is completed.

16.6.2.10 TCD Transfer Attributes (TCD0_ATTR - TCD7_ATTR)

Offset

For n = 0 to 7:

Register	Offset
TCDn_ATTR	26h + (n × 1000h)

Function

This register contains size and option modulo addressing information for source and destination addresses.

Diagram



Fields

Field	Function
15-11 SMOD	Source Address Modulo This field defines a specific address range, which is the value after the SADDR + SOFF calculation is performed on the original register value. Setting this field makes it easy to implement a circular data queue. For data queues requiring power-of-2-sized bytes, the queue must start at a 0-modulo-size address and the SMOD field must be set to the appropriate value for the queue, freezing the required number of upper address bits. The value programmed into this field specifies the number of lower address bits that are allowed to change. For a circular queue application, you typically set TCDn_SOFF[SOFF] to the transfer size to implement post-increment addressing, with the SMOD function constraining the addresses to a 0-modulo-size range. 0_0000b - Source address modulo feature disabled
10-8 SSIZE	Source Data Transfer Size 000b - 8-bit 001b - 16-bit 010b - 32-bit 011b - 64-bit 100b - 16-byte 101b - 32-byte 110b - Reserved 111b - Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
7-3 DMOD	Destination Address Modulo See the SMOD definition.
2-0 DSIZE	Destination Data Transfer Size See the SSIZE definition.

16.6.2.11 TCD Transfer Size Without Minor Loop Offsets (TCDn_NBYTES_MLOFFNO - TCD7_NBYTES_MLOFFNO)

Offset

For n = 0 to 7:

Register	Offset
TCDn_NBYTES_MLOFFNO	28h + (n × 1000h)

Function

The TCDn_NBYTES field defines the number of bytes to transfer per service request.

Minor loop offsets are address offset values added to the final source address (TCDn_SADDR), or destination address (TCDn_DADDR), upon minor loop completion. Minor loop completion is when the channel has finished the service request and has transferred NBYTES. When minor loop offsets are enabled, the minor loop offset value (TCDn_NBYTES_MLOFFYES[MLOFF]) is added to the final source address (TCDn_SADDR), to the final destination address (TCDn_DADDR), or to both, prior to the addresses being written back to the TCD. If the major loop is complete, the minor loop offset is ignored and the major loop address offsets (TCDn_SLAST_SDA and TCDn_DLAST_SGA) are used to compute the next TCDn_SADDR and TCDn_DADDR values.

When minor loop mapping is enabled (SMLOE or DMLOE is 1), TCDn_NBYTES_MLOFFNO/TCDn_NBYTES_MLOFFYES is redefined. A portion of TCDn_NBYTES_MLOFFNO/TCDn_NBYTES_MLOFFYES is used to specify multiple fields:


- A source enable bit (SMLOE) to specify the minor loop offset must be applied to the source address (TCDn_SADDR) upon minor loop completion
- A destination enable bit (DMLOE) to specify the minor loop offset must be applied to the destination address (TCDn_DADDR) upon minor loop completion
- The sign extended minor loop offset value (MLOFF)

The same offset value (MLOFF) is used for both source and destination minor loop offsets. When either minor loop offset is enabled (SMLOE set or DMLOE set), the NBYTES field is reduced to 10 bits. If both minor loop offsets are disabled (SMLOE cleared and DMLOE cleared), the NBYTES field is a 30-bit vector.

One of two register profiles (this register or TCDn_NBYTES_MLOFFYES), defines the number of bytes to transfer per request. Which register to use depends on whether source or destination minor loop mapping is enabled.

TCDn_NBYTES_MLOFFNO/TCDn_NBYTES_MLOFFYES is defined as follows:

- If SMLOE = 0 and DMLOE = 0, then see the TCDn_NBYTES_MLOFFNO register description.
- If either SMLOE or DMLOE is 1, then see the TCDn_NBYTES_MLOFFYES register description.

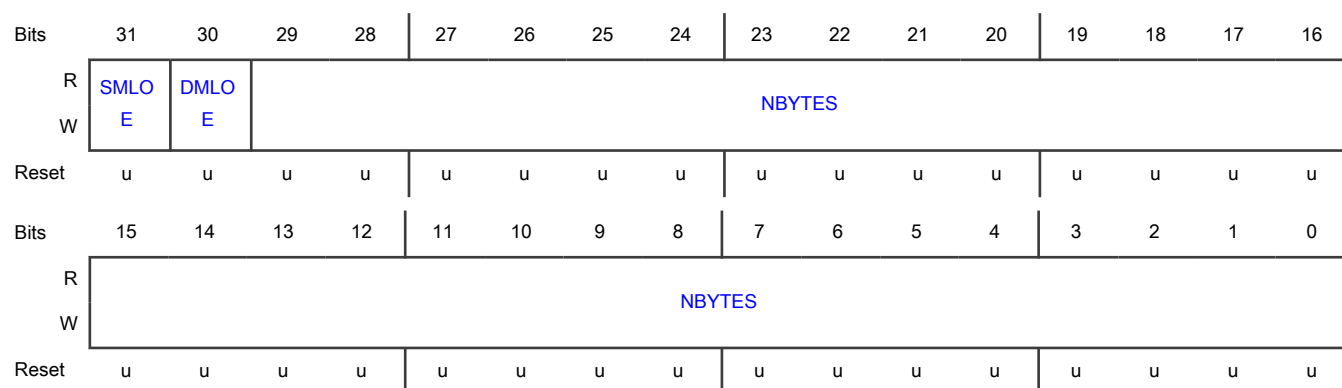Diagram**Fields**

Field	Function
31 SMLOE	Source Minor Loop Offset Enable Selects whether the minor loop offset is applied to the source address upon minor loop completion. 0b - Minor loop offset not applied to SADDR 1b - Minor loop offset applied to SADDR
30 DMLOE	Destination Minor Loop Offset Enable Selects whether the minor loop offset is applied to the destination address upon minor loop completion. 0b - Minor loop offset not applied to DADDR 1b - Minor loop offset applied to DADDR
29-0 NBYTES	Number of Bytes To Transfer Per Service Request Number of bytes to be transferred for each service request of the channel. When a channel activates, the module loads the appropriate TCD contents into the eDMA engine and performs the appropriate reads and writes until the byte transfer count has been reached. This process is normally an indivisible operation and cannot be halted. It can, however, be stalled by using the bandwidth control field, or via preemption. After the byte count is exhausted, the SADDR and DADDR values are written back into the TCD memory, and the major loop iteration count (CITER) is decremented by one and written back to the TCD memory. If the major iteration count is complete, additional processing is performed.

16.6.2.12 TCD Transfer Size with Minor Loop Offsets (TCD0_NBYTES_MLOFFYES - TCD7_NBYTES_MLOFFYES)

Offset

For n = 0 to 7:

Register	Offset
TCDn_NBYTES_MLOFFYES	28h + (n × 1000h)

Function

The TCDn_NBYTES field defines the number of bytes to transfer per service request.

Minor loop offset is an address offset value added to the final source address (TCDn_SADDR) or destination address (TCDn_DADDR) upon minor loop completion. Minor loop completion occurs when the channel has finished the service request and has transferred NBYTES. Minor loop offsets are enabled by setting either the source enable bit (SMLOE) or the destination enable bit (DMLOE).

The source enable bit (SMLOE) specifies the minor loop offset value (MLOFF) that is to be applied to the source address (TCDn_SADDR) upon minor loop completion. The destination enable bit (DMLOE) specifies the minor loop offset (MLOFF) that is to be applied to the destination address (TCDn_DADDR) upon minor loop completion.

If the major loop is complete, the minor loop offsets are ignored and the major loop address offsets (TCDn_SLAST_SDA and TCDn_DLAST_SGA) are used to compute the next TCDn_SADDR and TCDn_DADDR values.


When you enable the minor loop offset overlay (either SMLOE or DMLOE is 1), eDMA redefines [TCDn_NBYTES_MLOFFNO](#)/[TCDn_NBYTES_MLOFFYES](#). A portion of TCDn_NBYTES_MLOFFNO/TCDn_NBYTES_MLOFFYES specifies the sign-extended minor loop offset value (MLOFF). The same offset value (MLOFF) applies to both source and destination minor loop offsets. When the minor loop offset is enabled, you must align it to the transfer size of the source or destination it is associated with. When either minor loop offset is enabled (SMLOE set or DMLOE set), the NBYTES field is reduced to 10 bits. If both minor loop offsets are disabled (SMLOE cleared and DMLOE cleared), the NBYTES field is a 30-bit vector.

One of two register profiles (this register or TCDn_NBYTES_MLOFFNO) defines the number of bytes to transfer per request. Which register to use depends on whether source or destination minor loop mapping is enabled.

TCDn_NBYTES_MLOFFYES is defined as follows:

- If either minor loop offset is enabled (SMLOE or DMLOE = 1), then see the TCDn_NBYTES_MLOFFYES register description.
- If SMLOE and DMLOE are both 0, then see the TCDn_NBYTES_MLOFFNO register description.

Diagram

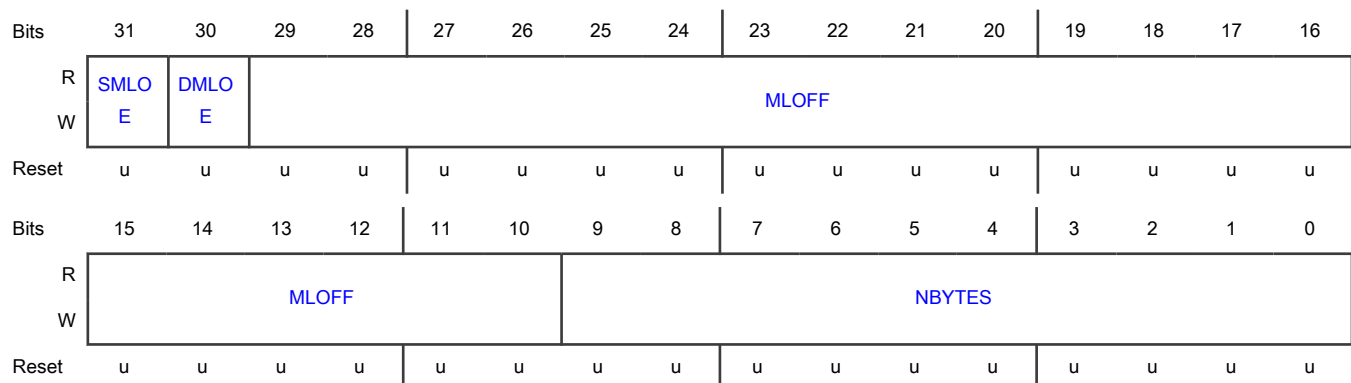

Fields

Field	Function
31 SMLOE	Source Minor Loop Offset Enable Selects whether the minor loop offset is applied to the source address upon minor loop completion. 0b - Minor loop offset not applied to SADDR 1b - Minor loop offset applied to SADDR
30 DMLOE	Destination Minor Loop Offset Enable Selects whether the minor loop offset is applied to the destination address upon minor loop completion. 0b - Minor loop offset not applied to DADDR 1b - Minor loop offset applied to DADDR
29-10 MLOFF	Minor Loop Offset If SMLOE or DMLOE is 1, this field represents a sign-extended offset applied to the source or destination address to form the next-state value after the minor loop completes.
9-0 NBYTES	Number of Bytes To Transfer Per Service Request The number of bytes to be transferred in each service request of the channel. As a channel activates, the module loads the appropriate TCD contents into the eDMA engine and performs the appropriate reads and writes until the minor byte transfer count has been reached. This is an indivisible operation and cannot be halted. It can, however, be stalled by using the bandwidth control field, or via preemption. After the minor count is exhausted, the SADDR and DADDR values are written back into the TCD memory, and the major iteration count is decremented and restored to the TCD memory. If the major iteration count is complete, additional processing is performed.


16.6.2.13 TCD Last Source Address Adjustment / Store DADDR Address (TCD0_SLAST_SDA - TCD7_SLAST_SDA)**Offset**

For n = 0 to 7:

Register	Offset
TCDn_SLAST_SDA	2Ch + (n × 1000h)

Function

This register contains the value added to the source address when the major loop is complete. When the store destination address option is enabled, this field provides a pointer to memory for storing the final destination address.

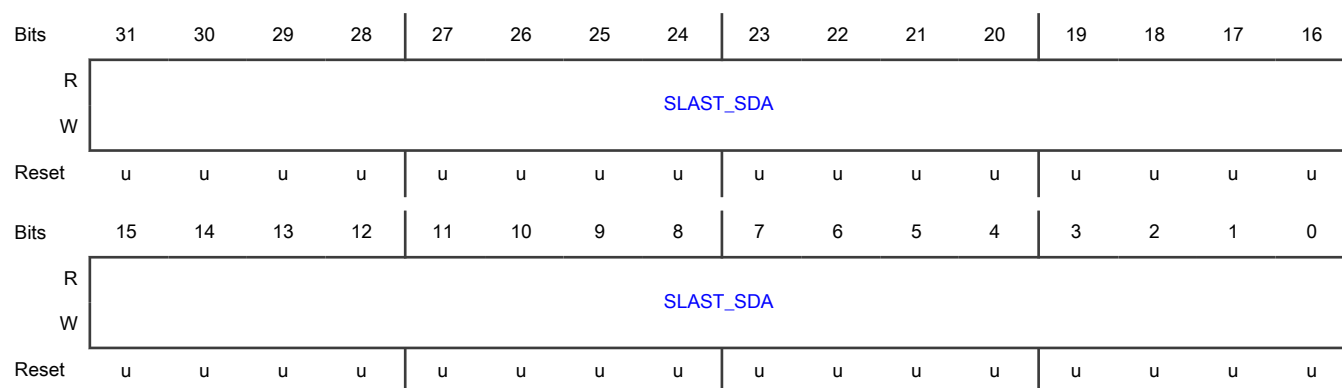Diagram**Fields**

Field	Function
31-0 SLAST_SDA	Last Source Address Adjustment / Store DADDR Address Source last address adjustment or the system memory address for destination address (DADDR) storage. If (TCDn_CSR[ESDA] = 0), then: - Adjustment value is added to the source address at the completion of the major iteration count. This value can be used to restore the source address to the initial value or adjust the address to reference the next data structure. - This field uses two's complement notation for the final source address adjustment. Otherwise: - This address points to the 32-bit-aligned memory location where the destination address (DADDR) is to be stored in system memory. By saving the final destination address in system memory via the ESDA feature, you are able to compute the size of a variable destination data buffer by simply subtracting the beginning DADDR from the final, saved DADDR. This feature is used together with the scatter/gather operation to prevent the loss of the final DADDR, which is overwritten during the scatter/gather operation. The "Store Destination Address" (SDA) value must be a 32-bit-aligned location because the eDMA forces the lower two address bits of the SLAST_SDA field to zero when ESDA is enabled. The module performs this write operation when the major loop is done; that is, when the major iteration count (CITER) decrements to zero.

16.6.2.14 TCD Destination Address (TCD0_DADDR - TCD7_DADDR)**Offset**


For n = 0 to 7:

Register	Offset
TCDn_DADDR	30h + (n × 1000h)

Function

This register contains the address for the write transactions.

Diagram

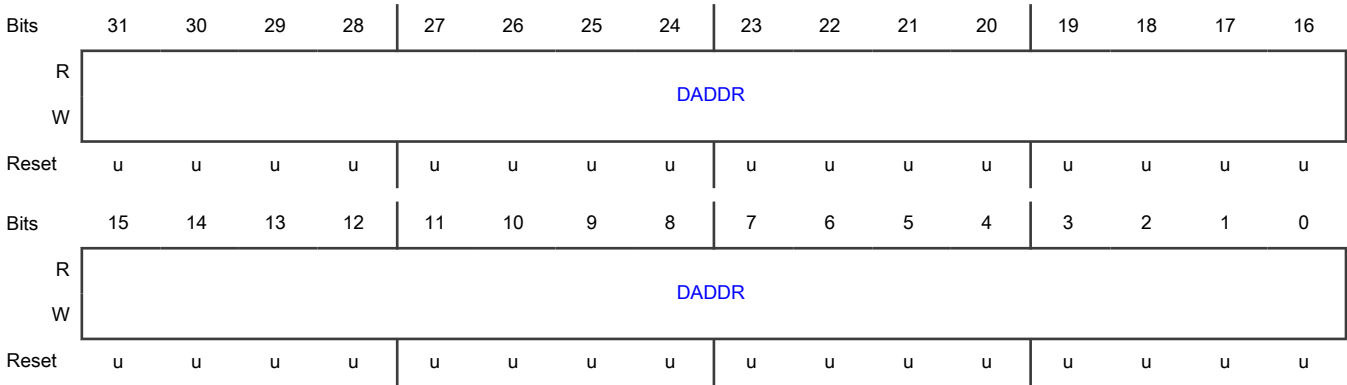

Fields

Field	Function
31-0	Destination Address
DADDR	Memory address pointing to the destination data.

16.6.2.15 TCD Signed Destination Address Offset (TCD0_DOFF - TCD7_DOFF)

Offset


For n = 0 to 7:

Register	Offset
TCDn_DOFF	34h + (n × 1000h)

Function

This register contains the sign-extended value added to Destination Address register after each write transaction.

Diagram

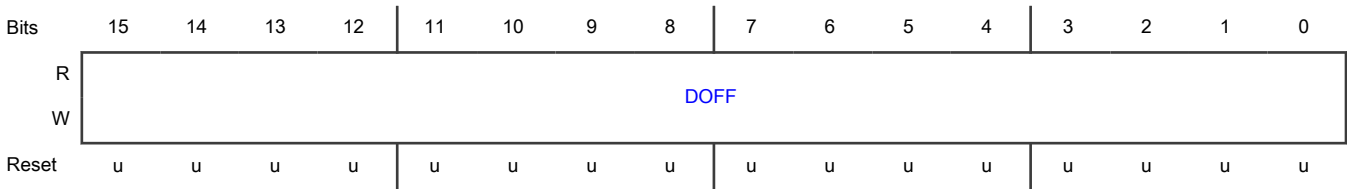

Fields

Field	Function
15-0	Destination Address Signed Offset
DOFF	Sign-extended offset that is applied to the current destination address to form the next-state value as each destination write is completed.

16.6.2.16 TCD Current Major Loop Count (Minor Loop Channel Linking Disabled) (TCD0_CITER_ELINKNO - TCD7_CITER_ELINKNO)

Offset


For n = 0 to 7:

Register	Offset
TCDn_CITER_ELINKNO	36h + (n × 1000h)

Function

If TCDn_CITER[ELINK] is 0, the TCDn_CITER register is defined as follows.

Diagram

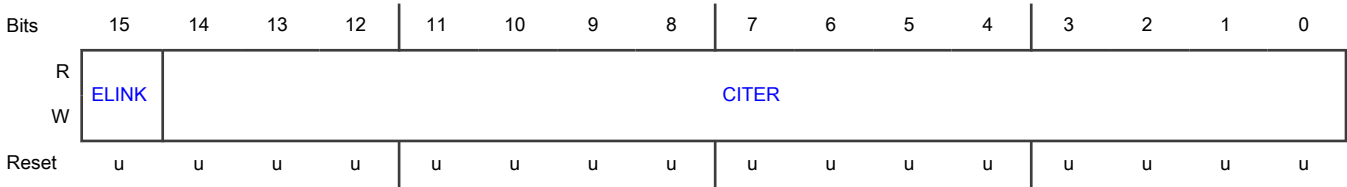

Fields

Field	Function
15 ELINK	Enable Link As the channel completes the minor loop, this flag enables linking to another channel as defined by the relevant LINKCH field. The link target channel initiates a channel service request via an internal mechanism that sets the TCDn_CSR[START] bit of the specified channel to 1. If channel linking is disabled, the CITER value is extended to 15 bits in place of a link channel number. If the major loop is exhausted, this link mechanism is suppressed in favor of MAJORELINK channel linking. NOTE This field must be equal to the BITER[ELINK] field; otherwise, a configuration error is reported. 0b - Channel-to-channel linking disabled 1b - Channel-to-channel linking enabled
14-0 CITER	Current Major Iteration Count This 9-bit (ELINK = 1) or 15-bit (ELINK = 0) count represents the current major loop count for the channel. It is decremented each time the channel finishes a service request and is written back to TCD memory. After the major iteration count is exhausted, the channel performs a number of operations — for example, final source and destination address calculations — and optionally generates an interrupt to signal channel completion before reloading the CITER field from the Beginning Iteration Count (BITER) field.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	NOTE When the CITER field is initially loaded by software, it must be set to the same value as that contained in the BITER field. NOTE If the channel is configured to execute a single service request, the initial values of BITER and CITER should be 0x0001.

16.6.2.17 TCD Current Major Loop Count (Minor Loop Channel Linking Enabled) (TCD0_CITER_ELINKYES - TCD7_CITER_ELINKYES)

Offset


For n = 0 to 7:

Register	Offset
TCDn_CITER_ELINKYES	36h + (n × 1000h)

Function

If TCDn_CITER[ELINK] is 1, the TCDn_CITER register is defined as follows.

Diagram

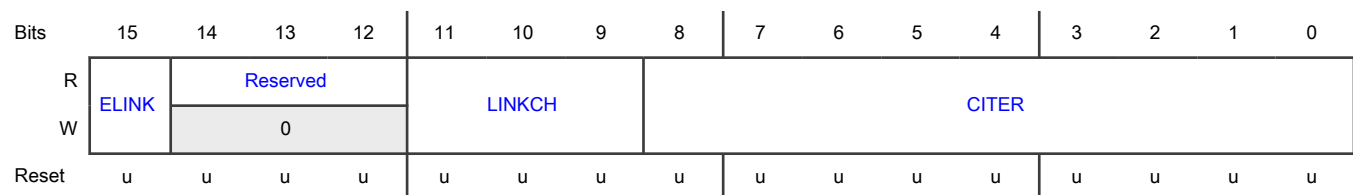

Fields

Field	Function
15 ELINK	Enable Link As the channel completes the minor loop, this flag enables linking to another channel as defined by the relevant LINKCH field. When enabled, an internal mechanism sets the TCDn_CSR[START] field of the specified channel (LINKCH) upon minor loop completion. If channel linking is disabled, the CITER value is extended to 15 bits in place of a link channel number. If the major loop is exhausted, this link mechanism is suppressed in favor of MAJORELINK channel linking.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	NOTE This field must be equal to the BITER[ELINK] field; otherwise, a configuration error is reported. 0b - Channel-to-channel linking disabled 1b - Channel-to-channel linking enabled
14-12 —	Reserved
11-9 LINKCH	Minor Loop Link Channel Number If channel-to-channel linking is enabled (ELINK = 1), then after the minor loop is exhausted the eDMA engine initiates a channel service request to the channel defined by this field by writing that channel's TCDn_CSR[START] field to 1.
8-0 CITER	Current Major Iteration Count This 9-bit (ELINK = 1) or 15-bit (ELINK = 0) count represents the current major loop count for the channel. It is decremented each time the channel finishes a service request and is written back to the TCD memory. After the major iteration count is exhausted, the channel performs a number of operations — for example, final source and destination address calculations — and optionally generates an interrupt to signal channel completion before reloading the CITER field from the Beginning Iteration Count (BITER) field. NOTE When the CITER field is initially loaded by software, it must be set to the same value as that contained in the BITER field. NOTE If the channel is configured to execute a single service request, the initial values of BITER and CITER should be 0x0001.

16.6.2.18 TCD Last Destination Address Adjustment / Scatter Gather Address (TCD0_DLAST_SGA - TCD7_DLAST_SGA)

Offset


For n = 0 to 7:

Register	Offset
TCDn_DLAST_SGA	38h + (n × 1000h)

Function

This register contains the value added to the destination address when the major loop is complete. When the Scatter/Gather option is enabled, this field provides a pointer to memory for fetching a transfer control descriptor to reprogram the channel.

Diagram

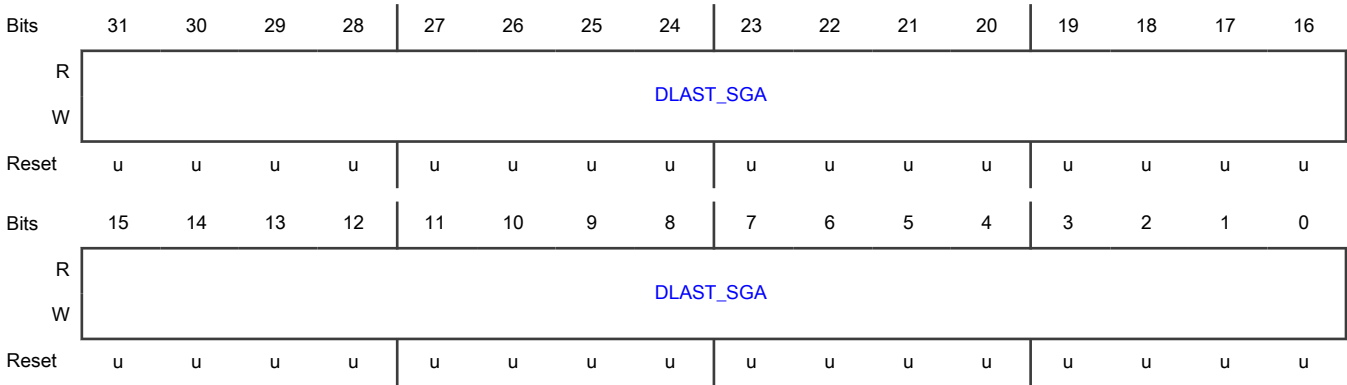

Fields

Field	Function
31-0 DLAST_SGA	Last Destination Address Adjustment / Scatter Gather Address Adjustment of the last destination address or the memory address for the next transfer control descriptor to be loaded into this channel (scatter/gather). If (TCDn_CSR[ESG] = 0) then: - Adjustment value is added to the destination address at the completion of the major iteration count. This value can apply to restore the destination address to the initial value or adjust the address to reference the next data structure. - This field uses two's complement notation for the final destination address adjustment. Otherwise: - This address points to the beginning of a 0-modulo 32-byte region containing the next transfer control descriptor to be loaded into this channel. This channel reload is performed as the major iteration count completes. The scatter/gather address must be 0-modulo 32-byte, or else a configuration error is reported.

16.6.2.19 TCD Control and Status (TCD0_CSR - TCD7_CSR)

Offset

For n = 0 to 7:

Register	Offset
TCDn_CSR	3Ch + (n × 1000h)

Function

This register is used to enable optional features.

Diagram



Fields

Field	Function
15-14 BWC	Bandwidth Control Throttles the amount of bus bandwidth consumed by the eDMA. Generally, as the eDMA processes the minor loop, it continuously generates read/write sequences until the minor count is exhausted. This field forces eDMA to stall after the completion of each read/write access, to control the bus request bandwidth seen by the system bus interconnect. NOTE If the source and destination sizes are equal, this field is ignored between the first and second transfers and after the last write of each minor loop. This behavior is a side effect of reducing start-up latency. 00b - No eDMA engine stalls 01b - Reserved 10b - eDMA engine stalls for 4 cycles after each R/W 11b - eDMA engine stalls for 8 cycles after each R/W
13-11 —	Reserved
10-8 MAJORLINKCH	Major Loop Link Channel Number If (MAJORELINK = 0) then: - No channel-to-channel linking, or chaining, is performed after the major loop counter is exhausted. Otherwise: - After the major loop counter is exhausted, the eDMA engine initiates a channel service request at the channel defined by this field by setting that channel's TCDn_CSR[START] field to 1.
7 ESDA	Enable Store Destination Address As the channel completes the major loop by either the current iteration counter (CITER) decrementing to 0, or by receiving an enabled end-of-packet signal, this field enables writing the destination address (DADDR) to the address stored in the SLAST_SDA field. The value written to system memory is the next DADDR value prior to the DLAST_SGA offset being applied, or overwritten by an enabled scatter/gather operation. When the ESDA bit is 1, SLAST_SDA contains the write pointer instead of the final source address offset. Because this is a pointer and not a final offset, a last source address offset of zero is applied to SADDR instead of the SLAST_SGA value. 0b - Ability to store destination address to system memory disabled

Table continues on the next page...

Table continued from the previous page...

Field	Function
	1b - Ability to store destination address to system memory enabled
6 EEOP	Enable End-Of-Packet Processing When enabled by the EEOP field, an end-of-packet hardware input signal directs eDMA to discontinue executing the active channel, and to treat the shutdown as the major-loop-completed event. If the EEOP field is 1, the end-of-packet signal from supported peripherals is accepted. If the EEOP field is 0, the end-of-packet input is ignored. With an end-of-packet retirement, the current TCD destination address (or ESDA-saved destination address), minus the software-saved initial address (DADDR), reflects the total amount of data transferred. 0b - End-of-packet operation disabled 1b - End-of-packet hardware input signal enabled
5 MAJORELINK	Enable Link When Major Loop Complete As the channel completes the major loop, this flag enables linking to another channel defined by MAJORLINKCH. The link target channel initiates a channel service request via an internal mechanism that sets the TCDn_CSR[START] field of the specified channel. NOTE To support the dynamic linking coherency model, this field is forced to 0 if written when TCDn_CSR[DONE] is 1. 0b - Channel-to-channel linking disabled 1b - Channel-to-channel linking enabled
4 ESG	Enable Scatter/Gather Processing As the channel completes the major loop, this flag enables scatter/gather processing in the current channel. If enabled, the eDMA engine uses TCDn_DLAST_SGA as a memory pointer to a 0-modulo 32-bit address containing a 32-byte data structure, which is loaded as the transfer control descriptor into local memory. NOTE To support the dynamic scatter/gather coherency model, this field is forced to 0 if written when TCDn_CSR[DONE] is 1. 0b - Current channel's TCD is normal format 1b - Current channel's TCD specifies scatter/gather format.
3 DREQ	Disable Request If this flag is 1, the eDMA hardware automatically clears the corresponding ERQ bit when the current major iteration count reaches 0. 0b - No operation. Channel's ERQ field not affected 1b - Clear the ERQ field to 0 upon major loop completion, thus disabling hardware service requests. Channel's ERQ field cleared to 0 when major loop complete
2	Enable Interrupt If Major Counter Half-complete

Table continues on the next page...

Table continued from the previous page...

Field	Function
INTHALF	If this flag is 1, the channel generates an interrupt request by setting the appropriate field in the INT register to 1 when the current major iteration count reaches the halfway point. Specifically, the comparison performed by the eDMA engine is $(CITER = (BITER/2))$. This halfway point interrupt request is provided to support double-buffered, also known as ping-pong, schemes, or other types of data movement where the processor needs an early indication of the transfer's progress. NOTE If $BITER = 1$, do not use INTHALF; use INTMAJOR instead. 0b - Halfway point interrupt disabled 1b - Halfway point interrupt enabled
1 INTMAJOR	Enable Interrupt If Major count complete If this flag is 1, the channel generates an interrupt request by setting the appropriate field in the INT register to 1 when the current major iteration count (CITER) reaches 0. 0b - End-of-major loop interrupt disabled 1b - End-of-major loop interrupt enabled
0 START	Channel Start If this flag is 1, the channel is requesting service. The eDMA hardware automatically clears this flag to 0 after the channel begins execution. 0b - Channel not explicitly started 1b - Channel explicitly started via a software-initiated service request

16.6.2.20 TCD Beginning Major Loop Count (Minor Loop Channel Linking Disabled) (TCD0_BITER_ELINKNO - TCD7_BITER_ELINKNO)

Offset


For $n = 0$ to 7:

Register	Offset
TCDn_BITER_ELINKNO	$3Eh + (n \times 1000h)$

Function

If the TCDn_BITER[ELINK] field is 0, the TCDn_BITER register is defined as follows.

Diagram

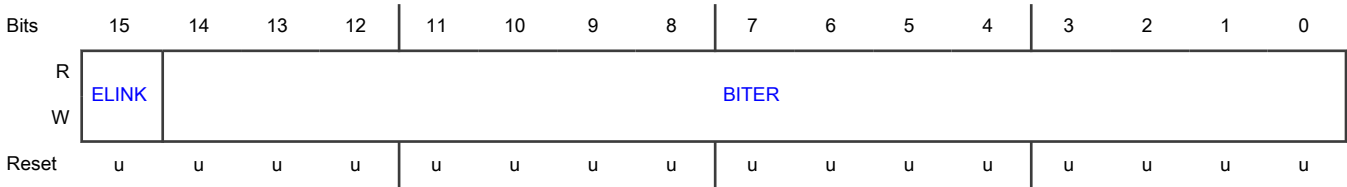

Fields

Field	Function
15 ELINK	Enables Link As the channel completes the minor loop, this flag enables linking to another channel as defined by BITER[LINKCH]. The link target channel initiates a channel service request via an internal mechanism that sets the TCDn_CSR[START] field of the specified channel. If channel linking is disabled, the BITER value extends to 15 bits in place of a link channel number. If the major loop is exhausted, this link mechanism is suppressed in favor of the MAJORELINK channel linking. NOTE When the software loads the TCD, this field must be set equal to the corresponding CITER field; otherwise, a configuration error is reported. As the major iteration count is exhausted, eDMA reloads the contents of this field into the CITER field. 0b - Channel-to-channel linking disabled 1b - Channel-to-channel linking enabled
14-0 BITER	Starting Major Iteration Count As the transfer control descriptor is first loaded by software, this 9-bit (ELINK = 1) or 15-bit (ELINK = 0) field must be set equal to the value in the CITER field. As the major iteration count is exhausted, eDMA reloads the contents of this field into the CITER field. If the channel is configured to execute a single service request, the initial values of BITER and CITER must be 0x0001.

16.6.2.21 TCD Beginning Major Loop Count (Minor Loop Channel Linking Enabled) (TCD0_BITER_ELINKYES - TCD7_BITER_ELINKYES)

Offset


For n = 0 to 7:

Register	Offset
TCDn_BITER_ELINKYES	3Eh + (n × 1000h)

Function

If the TCDn_BITER[ELINK] field is set, the TCDn_BITER register is defined as follows.

Diagram

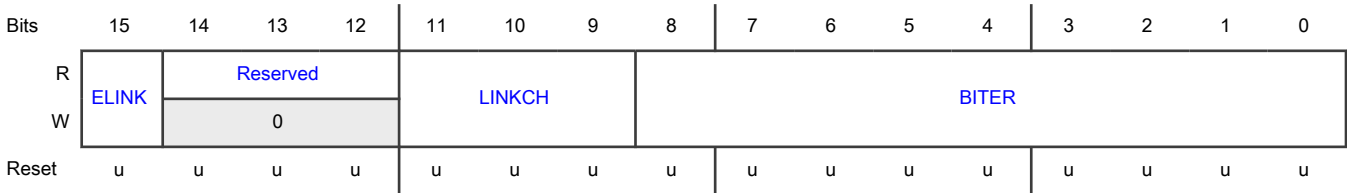

Fields

Field	Function
15 ELINK	Enable Link As the channel completes the minor loop, this flag enables linking to another channel as defined by BITER[LINKCH]. The link target channel initiates a channel service request via an internal mechanism that sets the TCDn_CSR[START] field of the specified channel. If channel linking disables, the BITER value extends to 15 bits in place of a link channel number. If the major loop is exhausted, this link mechanism is suppressed in favor of the MAJORELINK channel linking. NOTE When the software loads the TCD, this field must be set equal to the corresponding CITER field; otherwise, a configuration error is reported. As the major iteration count is exhausted, eDMA reloads the contents of this field into the CITER field. 0b - Channel-to-channel linking disabled 1b - Channel-to-channel linking enabled
14-12 —	Reserved
11-9 LINKCH	Link Channel Number If channel-to-channel linking is enabled (ELINK = 1), then after the minor loop is exhausted, the eDMA engine initiates a channel service request at the channel defined by this field by setting that channel's TCDn_CSR[START] field. NOTE When the software loads the TCD, this field must be set equal to the corresponding CITER field; otherwise, a configuration error is reported. As the major iteration count is exhausted, eDMA reloads the contents of this field into the CITER field.
8-0 BITER	Starting Major Iteration Count As the transfer control descriptor is first loaded by software, this 9-bit (ELINK = 1) or 15-bit (ELINK = 0) field must be set equal to the value in the CITER field. As the major iteration count is exhausted, eDMA reloads the contents of this field into the CITER field. If the channel is configured to execute a single service request, the initial values of BITER and CITER must be 0x0001.

Chapter 17

Wakeup Unit (WUU)

17.1 Chip-specific WUU information

Table 101. Reference links to related information

Topic	Related module	Reference
Full description	WUU	WUU
System memory map		Memory map
Clocking		Clock distribution
Power Management		Power Management
Signal multiplexing	Port control	Signal multiplexing

17.1.1 Module instances

This device contains one instance of the WUU module, WUU0.

17.1.2 Clock signal names

LPO clock is clk_16k[0].

17.1.3 WUU sources

The device uses the following inputs as wakeup sources to the WUU module. The WUU_Px inputs are connections to external physical pins. The WUU_MxIF inputs are connections to the internal peripheral interrupt flags from different modules that can operate in low-power modes. The WUU_MxDR inputs are connections to the internal peripheral Asynchronous DMA or module Triggers from different modules that can operate in low-power modes.

NOTE

In addition to the WUU wakeup sources, the device also wakes from low power modes when NMI or RESET pins are enabled and the respective pin is asserted.

Table 102. Wakeup Sources for WUU inputs

WUU input	Source description
WUU_P0	P0_4
WUU_P1	P0_7
WUU_P2	P0_16
WUU_P3	P0_19
WUU_P4	P0_20
WUU_P5	P0_23
WUU_P6	P1_0 / LPTMR0_ALT3
WUU_P7	P1_3
WUU_P8	P1_4

Table continues on the next page...

Table 102. Wakeup Sources for WUU inputs (continued)

WUU input	Source description
WUU_P9	P1_7
WUU_P10	P1_8
WUU_P11	P1_11
WUU_P12	P1_12
WUU_P13	P1_15
WUU_P14	P1_16
WUU_P15	P1_19
WUU_P16	P4_2
WUU_P17	P4_4
WUU_P18	P2_0
WUU_P19	P2_3
WUU_P20	P2_12
WUU_P21	P2_15
WUU_P22	P3_0
WUU_P23	P3_8
WUU_P24	P3_11
WUU_P25	P3_14
WUU_P26	P3_28
WUU_P27	P3_29
WUU_P28	USB0_DM
WUU_P29	USB0_DP
WUU_P30	P3_27
WUU_P31	CMP1_OUT, CMP1 Hard output
WUU_M0IF	SPC Interrupt
WUU_M1IF	RTC 1Hz Interrupt OR RTC Interrupt
WUU_M2IF	Wake-up Timer
WUU_M3IF	TDET Interrupt
WUU_M4IF	Reserved
WUU_M5IF	Reserved
WUU_M6IF	LPTMR0 Interrupt
WUU_M7IF	Reserved
WUU_M8IF	CMP0 Interrupt

Table continues on the next page...

Table 102. Wakeup Sources for WUU inputs (continued)

WUU input	Source description
WUU_M9IF	Reserved
WUU_M0DR	Reserved
WUU_M1DR	Reserved
WUU_M2DR	Reserved
WUU_M3DR	Reserved
WUU_M4DR	LPTMR0 DMA Request
WUU_M5DR	Reserved
WUU_M6DR	LPTMR0 Trig
WUU_M7DR	Reserved
WUU_M8DR	CMP0 DMA Request
WUU_M9DR	Reserved

17.1.4 Access modes

If the privilege access is disabled by SYSCON.PROTLVL, the peripheral could be access in the user mode. If the privilege access is enabled, the peripheral could be access in the privilege mode.

17.2 Overview

WUU facilitates in selecting external pins and on-chip modules as interrupt wake-up sources from Power Down/Deep Power Down power modes. You can also configure the external pins to act as interrupt wake-up sources in all power modes. WUU helps pins and modules generate a temporary wake-up from Power Down mode for servicing DMA or trigger events. Digital filtering is also available for the external wake-up pins.

See the chip-specific WUU information section for input sources to WUU.

17.2.1 Block diagram

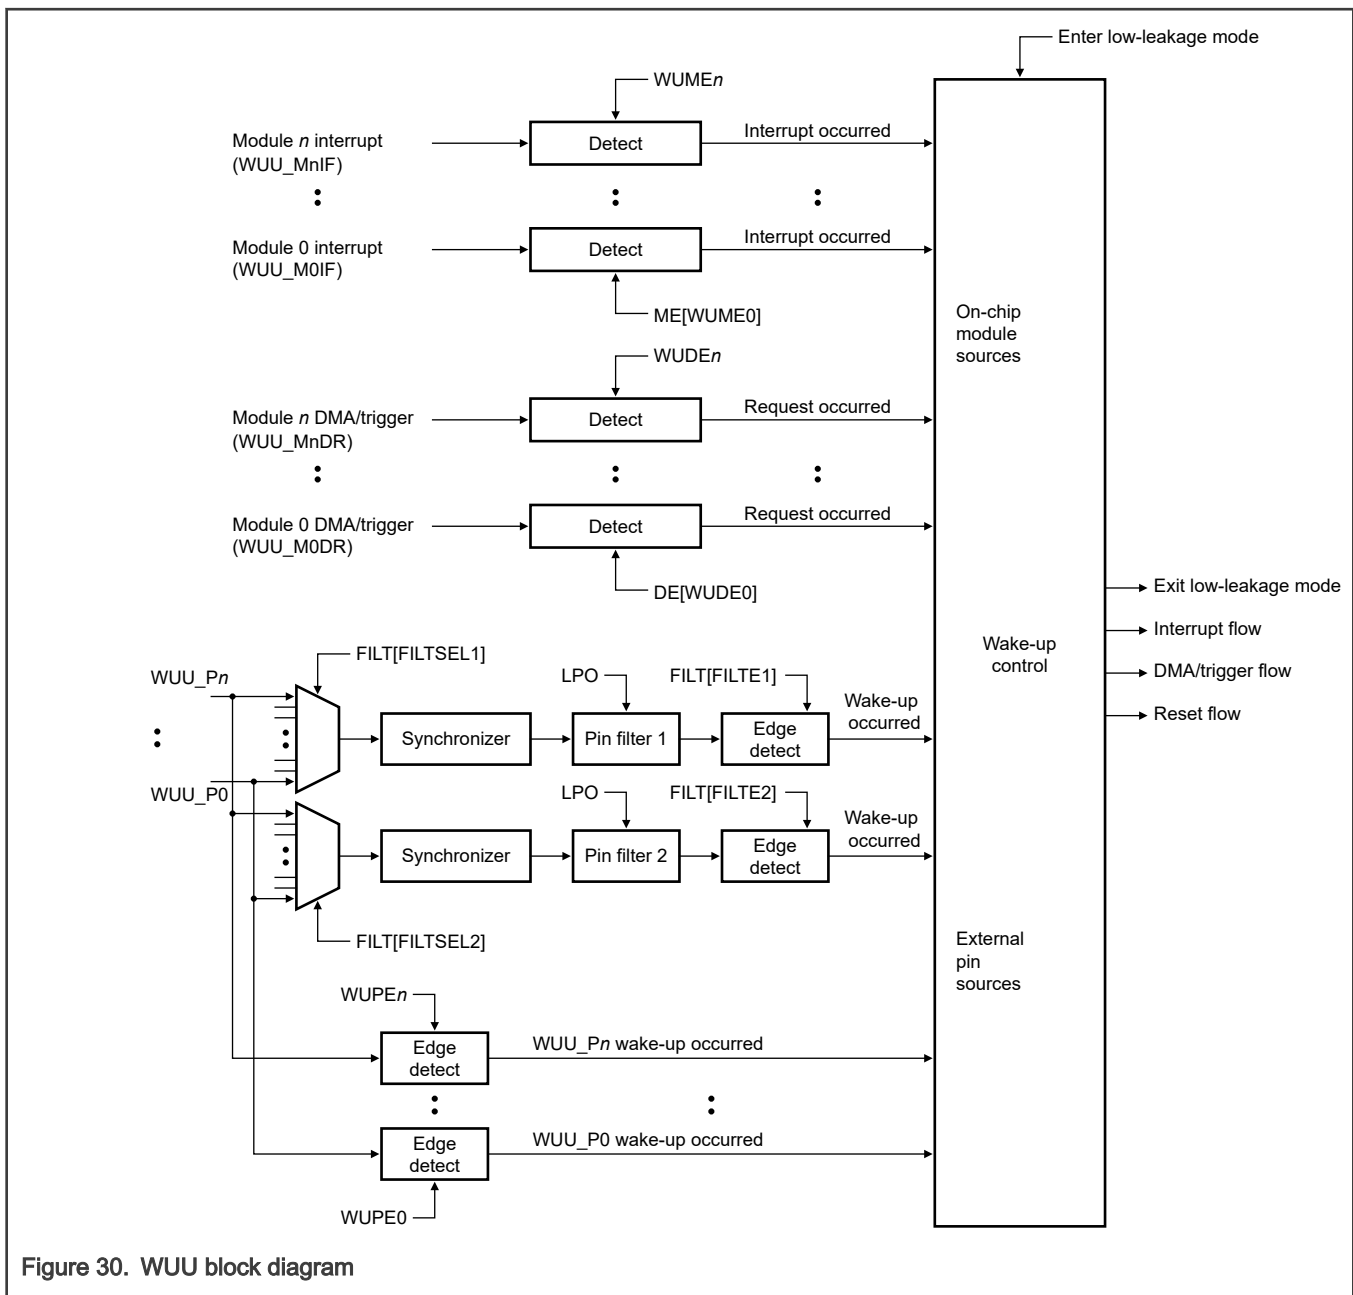


Figure 30. WUU block diagram

17.2.2 Features

- Supports external input pins and on-chip modules with individual enable bits to wake the chip from low-leakage modes.
- Contains input sources that may be external pins or from on-chip modules capable of running in Power Down or Deep Power Down power modes. See the chip-specific WUU information for the wake-up input sources for this chip.
- Supports configuring on-chip modules as DMA or trigger sources for temporary wake-up from Power Down mode.
- Supports configuring external pins as DMA request or trigger sources for temporary wake-up from Power Down mode.
- Provides external input pins programmable for falling-edge, rising-edge, or any edge detection.
- Provides optional digital filters to qualify an external pin detect. Disabling the LPO clock bypasses and disables filters.

- Filters all external input pins; but only 2 filters are available at a given time.
- Enables external input pin and filter detection in all power modes (not limited to Power Down/Deep Power Down power modes).

17.3 Functional description

17.3.1 Operation

WUU allows on-chip modules and external input pins as a source of wake-up from low-leakage modes.

WUU contains pin enables for each external pin and on-chip module. For each external pin, you can disable or select the edge type for the wake-up with the following options:

- Falling edge
- Rising edge
- Either edge

Exit due to a pin event triggers a WUU interrupt after wake-up is complete. When enabling an external pin as a wake-up source, configure the pin as an input pin. You can also configure a pin to generate an interrupt from a Power Down/Deep Power Down mode or a DMA/trigger event for temporary wake-up from Power Down mode. Detection logic for a pin can optionally remain enabled during all power modes using [Pin Mode Configuration \(PMC\)](#).

On the basis of the LPO clock, WUU implements optional 3-cycle glitch filters. Detected external pin must remain asserted until the enabled glitch filter times out. Additional latency of up to two cycles is due to synchronization, which results in a total of up to five cycles of delay before the detect circuit alerts the system to the wake-up event when the filter function is enabled. Two wake-up detect filters are available for selected external pins. Glitch filtering is not provided for the on-chip modules. You can configure a filter to generate an interrupt from Power Down/Deep Power Down mode or a DMA/trigger event for temporary wake-up from Power Down mode. Detection logic for a filter can optionally remain enabled during all power modes using [Pin Filter Mode Configuration \(FMC\)](#).

For on-chip module interrupts, [ME\[WUME_n\]](#) enables the associated module interrupt as a wake-up source. Exit due to a module interrupt will not trigger a WUU interrupt.

For on-chip module DMA/trigger events, [DE\[WUDE_n\]](#) enables the associated module DMA/trigger event as a wake-up source. Exit due to a module DMA/trigger event does not trigger a WUU interrupt.

17.3.2 Modes of operation

WUU becomes functional on entry into a low-leakage power mode. After recovery from Power Down mode, WUU is immediately disabled. After recovery from Deep Power Down mode, WUU continues to detect wake-up events until you have reinitialized the system and deasserted isolation. Detection of external pin/filter events can also optionally remain enabled in all power modes using [Pin Mode Configuration \(PMC\)](#)/[Pin Filter Mode Configuration \(FMC\)](#).

17.3.2.1 Power Down mode

Wake-up events due to either an external pin input (WUU_Px) or an on-chip module interrupt (WUU_MxIF) result in a CPU interrupt flow to begin user code execution. The source of the wake-up determines the subsequent path of code execution:

- Pin events trigger the WUU interrupt service routine.
- Module interrupts trigger that same module's interrupt service routine.

NOTE

The interrupt controller must not mask the WUU interrupt to avoid a scenario where the system does not fully recover from Power Down mode after an external pin event.

Wake-up events due to an on-chip module request (WUU_MxDR) DMA/trigger event result in a temporary exit from Power Down mode to allow the request to be serviced when the CPU clock remains gated. The system reenters Power Down mode after servicing the request.

Wake-up events due to an external pin (WUU_Px) DMA/trigger event result in a temporary exit from Power Down mode to allow the request to be serviced when the CPU clock remains gated. The system reenters Power Down mode after servicing the request.

17.3.2.2 Non-low-leakage modes

WUU is inactive in all non-low-leakage modes, with the exception of external pin/filter detection which can explicitly be kept enabled during all power modes using [Pin Mode Configuration \(PMC\)/Pin Filter Mode Configuration \(FMC\)](#). WUU chips are accessible in non-low-leakage modes and are available for configuring and reading status when bus transactions are possible.

17.3.3 Clocking

During chip low-power operation, in order to provide the wake-up function for the chip, ensure that clocking is available for WUU by the LPO clock. See the chip-specific WUU information for the chip clock connection details.

17.3.4 Reset

WUU resets after VSYS warm reset. This is the global chip reset, but it does not include the reset that asserts due to wake-up from low-power mode.

17.3.5 Interrupts

You can enable on-chip module interrupts as wake-up sources in [Module Interrupt Enable \(ME\)](#).

17.3.6 DMA

You can enable on-chip DMA requests as wake-up sources in [Module DMA/Trigger Enable \(DE\)](#).

With external pin inputs, you can generate a DMA request using either rising edge, falling edge, or both edge detection in [Pin DMA/Trigger Configuration 1 \(PDC1\)](#) and [Pin DMA/Trigger Configuration 2 \(PDC2\)](#).

17.4 External signals

Table 103. External signals

Signal	Description	I/O
WUU_Pn	External pin wake-up inputs; can be enabled to detect a rising edge, a falling edge, or any change.	I
WUU_MnIF	On-chip module interrupt flags	I
WUU_MnDR	On-chip module DMA/trigger events	I

17.5 Initialization

For an enabled module wake-up input, clear the module's flag before entering Power Down or Deep Power Down mode to avoid an immediate exit from the mode.

Clear the flags associated with external input pins, filtered and unfiltered, prior to entry to Power Down or Deep Power Down mode.

When an external wake-up pin filter is first enabled in [Pin Filter \(FILT\)](#), filter operation begins immediately. After enabling an external pin filter or changing its source pin, wait for at least five LPO clock cycles to allow the filter to initialize before entering Power Down or Deep Power Down mode or before enabling filter detection for all power modes in [Pin Filter Mode Configuration \(FMC\)](#).

NOTE

After recovering from a Deep Power Down mode, you must restore the chip configuration before relaxing any power domain isolation controls. In particular, to avoid any WUU flag from being falsely set, restore the pin configuration for the enabled WUU wake-up pins before removing any voltage isolation between power domains.

17.6 Application information

To enable an external pin as a wake-up source in low-power modes, follow these steps:

1. If the flag is not 0, write 1 to [PF\[WUF \$n\$ \]](#).
2. Configure the [PDC \$m\$ \[WUPDC \$n\$ \]](#) as either an interrupt or DMA request.
3. Configure the [PE \$m\$ \[WUPE \$n\$ \]](#) for rising edge, falling edge, or both edge detection.

When you have configured an external pin to be an active wake-up source in all power modes ([PMC\[WUPMC \$n\$ \] = 1](#)), you must not change the corresponding wake-up pin enable ([PE \$m\$ \[WUPE \$n\$ \]](#)) and wake-up pin configuration ([PDC \$m\$ \[WUPDC \$n\$ \]](#)) settings for that pin. To modify the [PE \$m\$ \[WUPE \$n\$ \]](#) or [PDC \$m\$ \[WUPDC \$n\$ \]](#) settings, follow these steps:

1. Write 0 to [PMC\[WUPMC \$n\$ \]](#) for that pin.
2. Update the corresponding [PE \$m\$ \[WUPE \$n\$ \]](#) or [PDC \$m\$ \[WUPDC \$n\$ \]](#) settings as needed.
3. Write 1 to [PMC\[WUPMC \$n\$ \]](#) for that pin.

17.7 Memory map and register definition

This section includes the WUU module memory map and detailed descriptions of all registers.

17.7.1 WUU register descriptions

NOTE

You can write to WUU registers only in Supervisor mode. A bus error results from write accesses in User mode.

VSYS warm reset resets all WUU registers.

17.7.1.1 WUU memory map

WUU0 base address: 4009_2000h

Offset	Register	Width (In bits)	Access	Reset value
0h	Version ID (VERID)	32	R	0100_0001h
4h	Parameter (PARAM)	32	R	2020_2002h
8h	Pin Enable 1 (PE1)	32	RW	0000_0000h
Ch	Pin Enable 2 (PE2)	32	RW	0000_0000h
18h	Module Interrupt Enable (ME)	32	RW	0000_0000h
1Ch	Module DMA/Trigger Enable (DE)	32	RW	0000_0000h
20h	Pin Flag (PF)	32	RW	0000_0000h
30h	Pin Filter (FILT)	32	RW	0000_0000h
38h	Pin DMA/Trigger Configuration 1 (PDC1)	32	RW	0000_0000h
3Ch	Pin DMA/Trigger Configuration 2 (PDC2)	32	RW	0000_0000h
48h	Pin Filter DMA/Trigger Configuration (FDC)	32	RW	0000_0000h
50h	Pin Mode Configuration (PMC)	32	RW	0000_0000h
58h	Pin Filter Mode Configuration (FMC)	32	RW	0000_0000h

17.7.1.2 Version ID (VERID)


Offset

Register	Offset
VERID	0h

Function

Contains version numbers for the module design and feature set.

Diagram

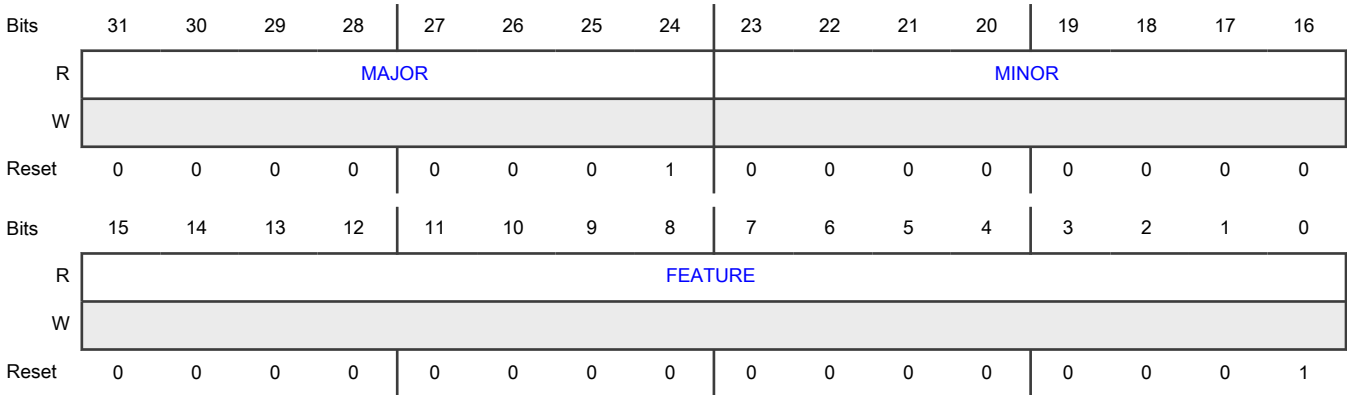

Fields

Field	Function
31-24 MAJOR	Major Version Number Specifies the major version number for the module specification.
23-16 MINOR	Minor Version Number Specifies the minor version number for the module specification.
15-0 FEATURE	Feature Specification Number Specifies the feature set number. 0000_0000_0000_0000b - Standard features implemented 0000_0000_0000_0001b - Support for DMA/Trigger generation from wake-up pins and filters enabled. Support for external pin/filter detection during all power modes enabled. All other values are reserved.

17.7.1.3 Parameter (PARAM)


Offset

Register	Offset
PARAM	4h

Function

Contains parameter values implemented in the module.

Diagram

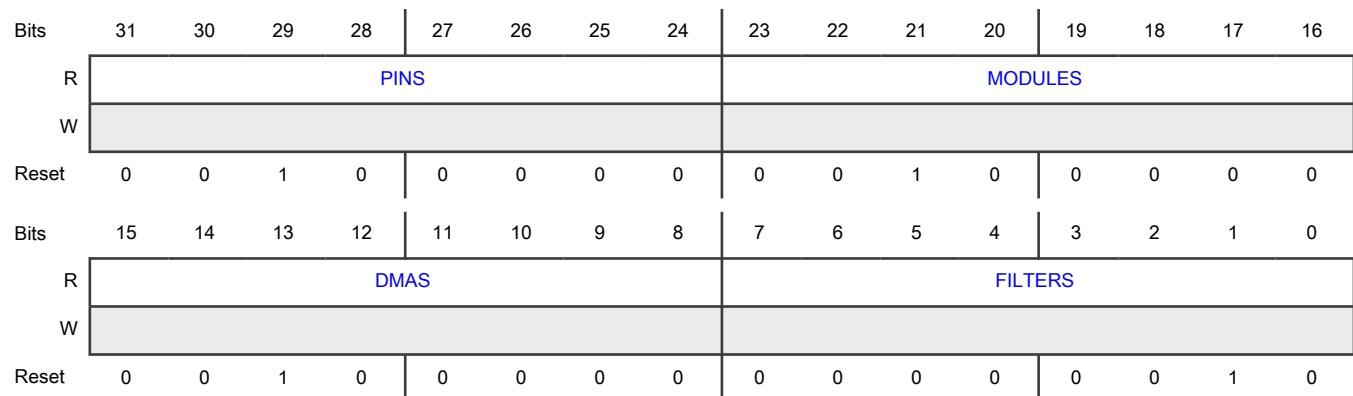

Fields

Field	Function
31-24 PINS	Pin Number Indicates the number of pin wake-up sources supported.
23-16 MODULES	Module Number Indicates the number of module wake-up sources.
15-8 DMAS	DMA Number Indicates the number of DMA wake-up sources.
7-0 FILTERS	Filter Number Indicates the number of pin filters.

17.7.1.4 Pin Enable 1 (PE1)

Offset

Register	Offset
PE1	8h

Function

Enables and selects the edge detect type for the available external wake-up input pins in the range from WUU_P0 to WUU_P15.

NOTE

- Do not modify the value of [PE1\[WUPE \$n\$ \]](#) when its corresponding [PMC\[WUPMC \$n\$ \]](#) = 1.
- VSYS warm reset resets this register.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	WUPE15				WUPE13				WUPE11				WUPE9			
W	WUPE14				WUPE12				WUPE10				WUPE8			
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	WUPE7				WUPE5				WUPE3				WUPE1			
W	WUPE6				WUPE4				WUPE2				WUPE0			
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-30 WUPE15	Wake-up Pin Enable for WUU_Pn Enables the external input pin for wake-up. This field configures the edge detection as follows: - For field value = 01b, when configured as an interrupt/DMA request: Detect on rising edge. When configured as a trigger event: Detect on high level. - For field value = 10b, when configured as an interrupt/DMA request: Detect on falling edge. When configured as a trigger event: Detect on low level. - For field value = 11b, when configured as an interrupt/DMA request: Detect on any edge. 00b - Disable 01b - Enable (detect on rising edge or high level) 10b - Enable (detect on falling edge or low level) 11b - Enable (detect on any edge)
29-28 WUPE14	Wake-up Pin Enable for WUU_Pn Enables the external input pin for wake-up. This field configures the edge detection as follows: - For field value = 01b, when configured as an interrupt/DMA request: Detect on rising edge. When configured as a trigger event: Detect on high level. - For field value = 10b, when configured as an interrupt/DMA request: Detect on falling edge. When configured as a trigger event: Detect on low level. - For field value = 11b, when configured as an interrupt/DMA request: Detect on any edge.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	00b - Disable 01b - Enable (detect on rising edge or high level) 10b - Enable (detect on falling edge or low level) 11b - Enable (detect on any edge)
27-26 WUPE13	Wake-up Pin Enable for WUU_Pn Enables the external input pin for wake-up. This field configures the edge detection as follows: - For field value = 01b, when configured as an interrupt/DMA request: Detect on rising edge. When configured as a trigger event: Detect on high level. - For field value = 10b, when configured as an interrupt/DMA request: Detect on falling edge. When configured as a trigger event: Detect on low level. - For field value = 11b, when configured as an interrupt/DMA request: Detect on any edge. 00b - Disable 01b - Enable (detect on rising edge or high level) 10b - Enable (detect on falling edge or low level) 11b - Enable (detect on any edge)
25-24 WUPE12	Wake-up Pin Enable for WUU_Pn Enables the external input pin for wake-up. This field configures the edge detection as follows: - For field value = 01b, when configured as an interrupt/DMA request: Detect on rising edge. When configured as a trigger event: Detect on high level. - For field value = 10b, when configured as an interrupt/DMA request: Detect on falling edge. When configured as a trigger event: Detect on low level. - For field value = 11b, when configured as an interrupt/DMA request: Detect on any edge. 00b - Disable 01b - Enable (detect on rising edge or high level) 10b - Enable (detect on falling edge or low level) 11b - Enable (detect on any edge)
23-22 WUPE11	Wake-up Pin Enable for WUU_Pn Enables the external input pin for wake-up. This field configures the edge detection as follows: - For field value = 01b, when configured as an interrupt/DMA request: Detect on rising edge. When configured as a trigger event: Detect on high level. - For field value = 10b, when configured as an interrupt/DMA request: Detect on falling edge. When configured as a trigger event: Detect on low level. - For field value = 11b, when configured as an interrupt/DMA request: Detect on any edge. 00b - Disable

Table continues on the next page...

Table continued from the previous page...

Field	Function
	01b - Enable (detect on rising edge or high level) 10b - Enable (detect on falling edge or low level) 11b - Enable (detect on any edge)
21-20 WUPE10	Wake-up Pin Enable for WUU_Pn Enables the external input pin for wake-up. This field configures the edge detection as follows: - For field value = 01b, when configured as an interrupt/DMA request: Detect on rising edge. When configured as a trigger event: Detect on high level. - For field value = 10b, when configured as an interrupt/DMA request: Detect on falling edge. When configured as a trigger event: Detect on low level. - For field value = 11b, when configured as an interrupt/DMA request: Detect on any edge. 00b - Disable 01b - Enable (detect on rising edge or high level) 10b - Enable (detect on falling edge or low level) 11b - Enable (detect on any edge)
19-18 WUPE9	Wake-up Pin Enable for WUU_Pn Enables the external input pin for wake-up. This field configures the edge detection as follows: - For field value = 01b, when configured as an interrupt/DMA request: Detect on rising edge. When configured as a trigger event: Detect on high level. - For field value = 10b, when configured as an interrupt/DMA request: Detect on falling edge. When configured as a trigger event: Detect on low level. - For field value = 11b, when configured as an interrupt/DMA request: Detect on any edge. 00b - Disable 01b - Enable (detect on rising edge or high level) 10b - Enable (detect on falling edge or low level) 11b - Enable (detect on any edge)
17-16 WUPE8	Wake-up Pin Enable for WUU_Pn Enables the external input pin for wake-up. This field configures the edge detection as follows: - For field value = 01b, when configured as an interrupt/DMA request: Detect on rising edge. When configured as a trigger event: Detect on high level. - For field value = 10b, when configured as an interrupt/DMA request: Detect on falling edge. When configured as a trigger event: Detect on low level. - For field value = 11b, when configured as an interrupt/DMA request: Detect on any edge. 00b - Disable 01b - Enable (detect on rising edge or high level)

Table continues on the next page...

Table continued from the previous page...

Field	Function
	10b - Enable (detect on falling edge or low level) 11b - Enable (detect on any edge)
15-14 WUPE7	Wake-up Pin Enable for WUU_Pn Enables the external input pin for wake-up. This field configures the edge detection as follows: - For field value = 01b, when configured as an interrupt/DMA request: Detect on rising edge. When configured as a trigger event: Detect on high level. - For field value = 10b, when configured as an interrupt/DMA request: Detect on falling edge. When configured as a trigger event: Detect on low level. - For field value = 11b, when configured as an interrupt/DMA request: Detect on any edge. 00b - Disable 01b - Enable (detect on rising edge or high level) 10b - Enable (detect on falling edge or low level) 11b - Enable (detect on any edge)
13-12 WUPE6	Wake-up Pin Enable for WUU_Pn Enables the external input pin for wake-up. This field configures the edge detection as follows: - For field value = 01b, when configured as an interrupt/DMA request: Detect on rising edge. When configured as a trigger event: Detect on high level. - For field value = 10b, when configured as an interrupt/DMA request: Detect on falling edge. When configured as a trigger event: Detect on low level. - For field value = 11b, when configured as an interrupt/DMA request: Detect on any edge. 00b - Disable 01b - Enable (detect on rising edge or high level) 10b - Enable (detect on falling edge or low level) 11b - Enable (detect on any edge)
11-10 WUPE5	Wake-up Pin Enable for WUU_Pn Enables the external input pin for wake-up. This field configures the edge detection as follows: - For field value = 01b, when configured as an interrupt/DMA request: Detect on rising edge. When configured as a trigger event: Detect on high level. - For field value = 10b, when configured as an interrupt/DMA request: Detect on falling edge. When configured as a trigger event: Detect on low level. - For field value = 11b, when configured as an interrupt/DMA request: Detect on any edge. 00b - Disable 01b - Enable (detect on rising edge or high level) 10b - Enable (detect on falling edge or low level)

Table continues on the next page...

Table continued from the previous page...

Field	Function
	11b - Enable (detect on any edge)
9-8 WUPE4	Wake-up Pin Enable for WUU_Pn Enables the external input pin for wake-up. This field configures the edge detection as follows: - For field value = 01b, when configured as an interrupt/DMA request: Detect on rising edge. When configured as a trigger event: Detect on high level. - For field value = 10b, when configured as an interrupt/DMA request: Detect on falling edge. When configured as a trigger event: Detect on low level. - For field value = 11b, when configured as an interrupt/DMA request: Detect on any edge. 00b - Disable 01b - Enable (detect on rising edge or high level) 10b - Enable (detect on falling edge or low level) 11b - Enable (detect on any edge)
7-6 WUPE3	Wake-up Pin Enable for WUU_Pn Enables the external input pin for wake-up. This field configures the edge detection as follows: - For field value = 01b, when configured as an interrupt/DMA request: Detect on rising edge. When configured as a trigger event: Detect on high level. - For field value = 10b, when configured as an interrupt/DMA request: Detect on falling edge. When configured as a trigger event: Detect on low level. - For field value = 11b, when configured as an interrupt/DMA request: Detect on any edge. 00b - Disable 01b - Enable (detect on rising edge or high level) 10b - Enable (detect on falling edge or low level) 11b - Enable (detect on any edge)
5-4 WUPE2	Wake-up Pin Enable for WUU_Pn Enables the external input pin for wake-up. This field configures the edge detection as follows: - For field value = 01b, when configured as an interrupt/DMA request: Detect on rising edge. When configured as a trigger event: Detect on high level. - For field value = 10b, when configured as an interrupt/DMA request: Detect on falling edge. When configured as a trigger event: Detect on low level. - For field value = 11b, when configured as an interrupt/DMA request: Detect on any edge. 00b - Disable 01b - Enable (detect on rising edge or high level) 10b - Enable (detect on falling edge or low level) 11b - Enable (detect on any edge)

Table continues on the next page...

Table continued from the previous page...

Field	Function
3-2 WUPE1	Wake-up Pin Enable for WUU_Pn Enables the external input pin for wake-up. This field configures the edge detection as follows: - For field value = 01b, when configured as an interrupt/DMA request: Detect on rising edge. When configured as a trigger event: Detect on high level. - For field value = 10b, when configured as an interrupt/DMA request: Detect on falling edge. When configured as a trigger event: Detect on low level. - For field value = 11b, when configured as an interrupt/DMA request: Detect on any edge. 00b - Disable 01b - Enable (detect on rising edge or high level) 10b - Enable (detect on falling edge or low level) 11b - Enable (detect on any edge)
1-0 WUPE0	Wake-up Pin Enable for WUU_Pn Enables the external input pin for wake-up. This field configures the edge detection as follows: - For field value = 01b, when configured as an interrupt/DMA request: Detect on rising edge. When configured as a trigger event: Detect on high level. - For field value = 10b, when configured as an interrupt/DMA request: Detect on falling edge. When configured as a trigger event: Detect on low level. - For field value = 11b, when configured as an interrupt/DMA request: Detect on any edge. 00b - Disable 01b - Enable (detect on rising edge or high level) 10b - Enable (detect on falling edge or low level) 11b - Enable (detect on any edge)

17.7.1.5 Pin Enable 2 (PE2)

Offset

Register	Offset
PE2	Ch


Function

Contains the field to enable and select the edge detect type for the available external wake-up input pins in the range from WUU_P16 to WUU_P31.

NOTE

- Do not modify the value of [PE2\[WUPE \$n\$ \]](#) when its corresponding [PMC\[WUPMC \$n\$ \]](#) = 1.
- VSYS warm reset resets this register.

Diagram

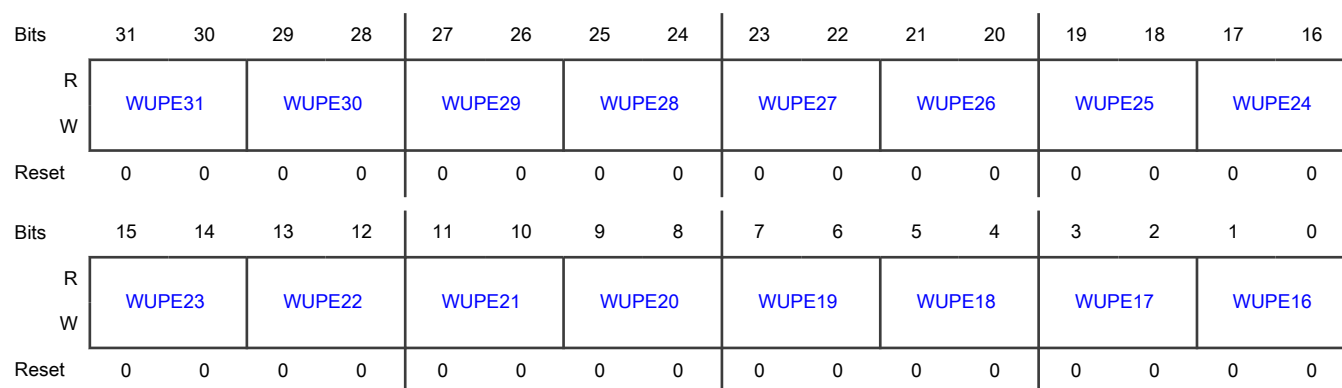

Fields

Field	Function
31-30 WUPE31	Wake-up Pin Enable for WUU_Pn Enables the external input pin for wake-up and configures the edge detection. - For field value = 01b, when configured as an interrupt/DMA request: Detect on rising edge. When configured as a trigger event: Detect on high level. - For field value = 10b, when configured as an interrupt/DMA request: Detect on falling edge. When configured as a trigger event: Detect on low level. - For field value = 11b, when configured as an interrupt/DMA request: Detect on any edge. 00b - Disable 01b - Enable (detect on rising edge or high level) 10b - Enable (detect on falling edge or low level) 11b - Enable (detect on any edge)
29-28 WUPE30	Wake-up Pin Enable for WUU_Pn Enables the external input pin for wake-up and configures the edge detection. - For field value = 01b, when configured as an interrupt/DMA request: Detect on rising edge. When configured as a trigger event: Detect on high level. - For field value = 10b, when configured as an interrupt/DMA request: Detect on falling edge. When configured as a trigger event: Detect on low level. - For field value = 11b, when configured as an interrupt/DMA request: Detect on any edge. 00b - Disable 01b - Enable (detect on rising edge or high level) 10b - Enable (detect on falling edge or low level) 11b - Enable (detect on any edge)
27-26 WUPE29	Wake-up Pin Enable for WUU_Pn Enables the external input pin for wake-up and configures the edge detection.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	- For field value = 01b, when configured as an interrupt/DMA request: Detect on rising edge. When configured as a trigger event: Detect on high level. - For field value = 10b, when configured as an interrupt/DMA request: Detect on falling edge. When configured as a trigger event: Detect on low level. - For field value = 11b, when configured as an interrupt/DMA request: Detect on any edge. 00b - Disable 01b - Enable (detect on rising edge or high level) 10b - Enable (detect on falling edge or low level) 11b - Enable (detect on any edge)
25-24 WUPE28	Wake-up Pin Enable for WUU_Pn Enables the external input pin for wake-up and configures the edge detection. - For field value = 01b, when configured as an interrupt/DMA request: Detect on rising edge. When configured as a trigger event: Detect on high level. - For field value = 10b, when configured as an interrupt/DMA request: Detect on falling edge. When configured as a trigger event: Detect on low level. - For field value = 11b, when configured as an interrupt/DMA request: Detect on any edge. 00b - Disable 01b - Enable (detect on rising edge or high level) 10b - Enable (detect on falling edge or low level) 11b - Enable (detect on any edge)
23-22 WUPE27	Wake-up Pin Enable for WUU_Pn Enables the external input pin for wake-up and configures the edge detection. - For field value = 01b, when configured as an interrupt/DMA request: Detect on rising edge. When configured as a trigger event: Detect on high level. - For field value = 10b, when configured as an interrupt/DMA request: Detect on falling edge. When configured as a trigger event: Detect on low level. - For field value = 11b, when configured as an interrupt/DMA request: Detect on any edge. 00b - Disable 01b - Enable (detect on rising edge or high level) 10b - Enable (detect on falling edge or low level) 11b - Enable (detect on any edge)
21-20 WUPE26	Wake-up Pin Enable for WUU_Pn Enables the external input pin for wake-up and configures the edge detection.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	- For field value = 01b, when configured as an interrupt/DMA request: Detect on rising edge. When configured as a trigger event: Detect on high level. - For field value = 10b, when configured as an interrupt/DMA request: Detect on falling edge. When configured as a trigger event: Detect on low level. - For field value = 11b, when configured as an interrupt/DMA request: Detect on any edge. 00b - Disable 01b - Enable (detect on rising edge or high level) 10b - Enable (detect on falling edge or low level) 11b - Enable (detect on any edge)
19-18 WUPE25	Wake-up Pin Enable for WUU_Pn Enables the external input pin for wake-up and configures the edge detection. - For field value = 01b, when configured as an interrupt/DMA request: Detect on rising edge. When configured as a trigger event: Detect on high level. - For field value = 10b, when configured as an interrupt/DMA request: Detect on falling edge. When configured as a trigger event: Detect on low level. - For field value = 11b, when configured as an interrupt/DMA request: Detect on any edge. 00b - Disable 01b - Enable (detect on rising edge or high level) 10b - Enable (detect on falling edge or low level) 11b - Enable (detect on any edge)
17-16 WUPE24	Wake-up Pin Enable for WUU_Pn Enables the external input pin for wake-up and configures the edge detection. - For field value = 01b, when configured as an interrupt/DMA request: Detect on rising edge. When configured as a trigger event: Detect on high level. - For field value = 10b, when configured as an interrupt/DMA request: Detect on falling edge. When configured as a trigger event: Detect on low level. - For field value = 11b, when configured as an interrupt/DMA request: Detect on any edge. 00b - Disable 01b - Enable (detect on rising edge or high level) 10b - Enable (detect on falling edge or low level) 11b - Enable (detect on any edge)
15-14 WUPE23	Wake-up Pin Enable for WUU_Pn Enables the external input pin for wake-up and configures the edge detection.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	- For field value = 01b, when configured as an interrupt/DMA request: Detect on rising edge. When configured as a trigger event: Detect on high level. - For field value = 10b, when configured as an interrupt/DMA request: Detect on falling edge. When configured as a trigger event: Detect on low level. - For field value = 11b, when configured as an interrupt/DMA request: Detect on any edge. 00b - Disable 01b - Enable (detect on rising edge or high level) 10b - Enable (detect on falling edge or low level) 11b - Enable (detect on any edge)
13-12 WUPE22	Wake-up Pin Enable for WUU_Pn Enables the external input pin for wake-up and configures the edge detection. - For field value = 01b, when configured as an interrupt/DMA request: Detect on rising edge. When configured as a trigger event: Detect on high level. - For field value = 10b, when configured as an interrupt/DMA request: Detect on falling edge. When configured as a trigger event: Detect on low level. - For field value = 11b, when configured as an interrupt/DMA request: Detect on any edge. 00b - Disable 01b - Enable (detect on rising edge or high level) 10b - Enable (detect on falling edge or low level) 11b - Enable (detect on any edge)
11-10 WUPE21	Wake-up Pin Enable for WUU_Pn Enables the external input pin for wake-up and configures the edge detection. - For field value = 01b, when configured as an interrupt/DMA request: Detect on rising edge. When configured as a trigger event: Detect on high level. - For field value = 10b, when configured as an interrupt/DMA request: Detect on falling edge. When configured as a trigger event: Detect on low level. - For field value = 11b, when configured as an interrupt/DMA request: Detect on any edge. 00b - Disable 01b - Enable (detect on rising edge or high level) 10b - Enable (detect on falling edge or low level) 11b - Enable (detect on any edge)
9-8 WUPE20	Wake-up Pin Enable for WUU_Pn Enables the external input pin for wake-up and configures the edge detection.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	- For field value = 01b, when configured as an interrupt/DMA request: Detect on rising edge. When configured as a trigger event: Detect on high level. - For field value = 10b, when configured as an interrupt/DMA request: Detect on falling edge. When configured as a trigger event: Detect on low level. - For field value = 11b, when configured as an interrupt/DMA request: Detect on any edge. 00b - Disable 01b - Enable (detect on rising edge or high level) 10b - Enable (detect on falling edge or low level) 11b - Enable (detect on any edge)
7-6 WUPE19	Wake-up Pin Enable for WUU_Pn Enables the external input pin for wake-up and configures the edge detection. - For field value = 01b, when configured as an interrupt/DMA request: Detect on rising edge. When configured as a trigger event: Detect on high level. - For field value = 10b, when configured as an interrupt/DMA request: Detect on falling edge. When configured as a trigger event: Detect on low level. - For field value = 11b, when configured as an interrupt/DMA request: Detect on any edge. 00b - Disable 01b - Enable (detect on rising edge or high level) 10b - Enable (detect on falling edge or low level) 11b - Enable (detect on any edge)
5-4 WUPE18	Wake-up Pin Enable for WUU_Pn Enables the external input pin for wake-up and configures the edge detection. - For field value = 01b, when configured as an interrupt/DMA request: Detect on rising edge. When configured as a trigger event: Detect on high level. - For field value = 10b, when configured as an interrupt/DMA request: Detect on falling edge. When configured as a trigger event: Detect on low level. - For field value = 11b, when configured as an interrupt/DMA request: Detect on any edge. 00b - Disable 01b - Enable (detect on rising edge or high level) 10b - Enable (detect on falling edge or low level) 11b - Enable (detect on any edge)
3-2 WUPE17	Wake-up Pin Enable for WUU_Pn Enables the external input pin for wake-up and configures the edge detection.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	- For field value = 01b, when configured as an interrupt/DMA request: Detect on rising edge. When configured as a trigger event: Detect on high level. - For field value = 10b, when configured as an interrupt/DMA request: Detect on falling edge. When configured as a trigger event: Detect on low level. - For field value = 11b, when configured as an interrupt/DMA request: Detect on any edge. 00b - Disable 01b - Enable (detect on rising edge or high level) 10b - Enable (detect on falling edge or low level) 11b - Enable (detect on any edge)
1-0 WUPE16	Wake-up Pin Enable for WUU_Pn Enables the external input pin for wake-up and configures the edge detection. - For field value = 01b, when configured as an interrupt/DMA request: Detect on rising edge. When configured as a trigger event: Detect on high level. - For field value = 10b, when configured as an interrupt/DMA request: Detect on falling edge. When configured as a trigger event: Detect on low level. - For field value = 11b, when configured as an interrupt/DMA request: Detect on any edge. 00b - Disable 01b - Enable (detect on rising edge or high level) 10b - Enable (detect on falling edge or low level) 11b - Enable (detect on any edge)

17.7.1.6 Module Interrupt Enable (ME)

Offset

Register	Offset
ME	18h

Function

Contains the bits to enable an on-chip module interrupt as a wake-up source.

NOTE

VSYS warm reset resets this register.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0	0	0	0	0	0	0	WUME	0	WUME	0	0	WUME	WUME	WUME	WUME
W								8		6			3	2	1	0
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31 —	Reserved
30 —	Reserved
29 —	Reserved
28 —	Reserved
27 —	Reserved
26 —	Reserved
25 —	Reserved
24 —	Reserved
23 —	Reserved
22 —	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
21 —	Reserved
20 —	Reserved
19 —	Reserved
18 —	Reserved
17 —	Reserved
16 —	Reserved
15 —	Reserved
14 —	Reserved
13 —	Reserved
12 —	Reserved
11 —	Reserved
10 —	Reserved
9 —	Reserved
8 WUME8	Module Interrupt Wake-up Enable for Module 8 Enables an on-chip module interrupt as a wake-up source input. 0b - Disable

Table continues on the next page...

Table continued from the previous page...

Field	Function
	1b - Enable
7 —	Reserved
6 WUME6	Module Interrupt Wake-up Enable for Module 6 Enables an on-chip module interrupt as a wake-up source input. 0b - Disable 1b - Enable
5 —	Reserved
4 —	Reserved
3 WUME3	Module Interrupt Wake-up Enable for Module 3 Enables an on-chip module interrupt as a wake-up source input. 0b - Disable 1b - Enable
2 WUME2	Module Interrupt Wake-up Enable for Module 2 Enables an on-chip module interrupt as a wake-up source input. 0b - Disable 1b - Enable
1 WUME1	Module Interrupt Wake-up Enable for Module 1 Enables an on-chip module interrupt as a wake-up source input. 0b - Disable 1b - Enable
0 WUME0	Module Interrupt Wake-up Enable for Module 0 Enables an on-chip module interrupt as a wake-up source input. 0b - Disable 1b - Enable

17.7.1.7 Module DMA/Trigger Enable (DE)

Offset

Register	Offset
DE	1Ch

Function

Contains the bits to enable an on-chip module DMA/trigger event as a wake-up source.

NOTE
VSYS warm reset resets this register.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0	0	0	0	0	0	0	WUDE 8	0	WUDE 6	0	WUDE 4	0	0	0	0
W								8		6		4				
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31 —	Reserved
30 —	Reserved
29 —	Reserved
28 —	Reserved
27 —	Reserved
26	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
—	
25 —	Reserved
24 —	Reserved
23 —	Reserved
22 —	Reserved
21 —	Reserved
20 —	Reserved
19 —	Reserved
18 —	Reserved
17 —	Reserved
16 —	Reserved
15 —	Reserved
14 —	Reserved
13 —	Reserved
12 —	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
11 —	Reserved
10 —	Reserved
9 —	Reserved
8 WUDE8	DMA/Trigger Wake-up Enable for Module 8 Enables an on-chip module DMA/trigger event as a wake-up source. 0b - Disable 1b - Enable
7 —	Reserved
6 WUDE6	DMA/Trigger Wake-up Enable for Module 6 Enables an on-chip module DMA/trigger event as a wake-up source. 0b - Disable 1b - Enable
5 —	Reserved
4 WUDE4	DMA/Trigger Wake-up Enable for Module 4 Enables an on-chip module DMA/trigger event as a wake-up source. 0b - Disable 1b - Enable
3 —	Reserved
2 —	Reserved
1 —	Reserved
0 —	Reserved

17.7.1.8 Pin Flag (PF)

Offset

Register	Offset
PF	20h

Function

Contains the wake-up flags indicating which wake-up source caused the chip to exit Power Down (if the corresponding [PMC\[WUPMC \$n\$ \] = 1](#)) or Deep Power Down mode. For Power Down mode, this is the source causing the CPU interrupt flow. For Deep Power Down mode, this is the source causing the chip reset flow.

To clear a flag, write a 1 to the corresponding [PF\[WUF \$n\$ \]](#). If set, the wake-up flag (WUF n) remains set even if the associated pin wake-up is disabled in its PE n [WUPE n] field.

NOTE

VSYS warm reset resets this register.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	WUF3 1	WUF3 0	WUF2 9	WUF2 8	WUF2 7	WUF2 6	WUF2 5	WUF2 4	WUF2 3	WUF2 2	WUF2 1	WUF2 0	WUF1 9	WUF1 8	WUF1 7	WUF1 6
W	W1C	W1C	W1C	W1C	W1C	W1C	W1C	W1C	W1C	W1C	W1C	W1C	W1C	W1C	W1C	W1C
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	WUF1 5	WUF1 4	WUF1 3	WUF1 2	WUF1 1	WUF1 0	WUF9	WUF8	WUF7	WUF6	WUF5	WUF4	WUF3	WUF2	WUF1	WUF0
W	W1C	W1C	W1C	W1C	W1C	W1C	W1C	W1C	W1C	W1C	W1C	W1C	W1C	W1C	W1C	W1C
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31 WUF31	Wake-up Flag for WUU_Pn Indicates that an enabled external wake-up pin was a source of exiting a low-leakage power mode. 0b - No 1b - Yes
30 WUF30	Wake-up Flag for WUU_Pn Indicates that an enabled external wake-up pin was a source of exiting a low-leakage power mode. 0b - No 1b - Yes

Table continues on the next page...

Table continued from the previous page...

Field	Function
29 WUF29	Wake-up Flag for WUU_Pn Indicates that an enabled external wake-up pin was a source of exiting a low-leakage power mode. 0b - No 1b - Yes
28 WUF28	Wake-up Flag for WUU_Pn Indicates that an enabled external wake-up pin was a source of exiting a low-leakage power mode. 0b - No 1b - Yes
27 WUF27	Wake-up Flag for WUU_Pn Indicates that an enabled external wake-up pin was a source of exiting a low-leakage power mode. 0b - No 1b - Yes
26 WUF26	Wake-up Flag for WUU_Pn Indicates that an enabled external wake-up pin was a source of exiting a low-leakage power mode. 0b - No 1b - Yes
25 WUF25	Wake-up Flag for WUU_Pn Indicates that an enabled external wake-up pin was a source of exiting a low-leakage power mode. 0b - No 1b - Yes
24 WUF24	Wake-up Flag for WUU_Pn Indicates that an enabled external wake-up pin was a source of exiting a low-leakage power mode. 0b - No 1b - Yes
23 WUF23	Wake-up Flag for WUU_Pn Indicates that an enabled external wake-up pin was a source of exiting a low-leakage power mode. 0b - No 1b - Yes
22 WUF22	Wake-up Flag for WUU_Pn Indicates that an enabled external wake-up pin was a source of exiting a low-leakage power mode. 0b - No

Table continues on the next page...

Table continued from the previous page...

Field	Function
	1b - Yes
21 WUF21	Wake-up Flag for WUU_Pn Indicates that an enabled external wake-up pin was a source of exiting a low-leakage power mode. 0b - No 1b - Yes
20 WUF20	Wake-up Flag for WUU_Pn Indicates that an enabled external wake-up pin was a source of exiting a low-leakage power mode. 0b - No 1b - Yes
19 WUF19	Wake-up Flag for WUU_Pn Indicates that an enabled external wake-up pin was a source of exiting a low-leakage power mode. 0b - No 1b - Yes
18 WUF18	Wake-up Flag for WUU_Pn Indicates that an enabled external wake-up pin was a source of exiting a low-leakage power mode. 0b - No 1b - Yes
17 WUF17	Wake-up Flag for WUU_Pn Indicates that an enabled external wake-up pin was a source of exiting a low-leakage power mode. 0b - No 1b - Yes
16 WUF16	Wake-up Flag for WUU_Pn Indicates that an enabled external wake-up pin was a source of exiting a low-leakage power mode. 0b - No 1b - Yes
15 WUF15	Wake-up Flag for WUU_Pn Indicates that an enabled external wake-up pin was a source of exiting a low-leakage power mode. 0b - No 1b - Yes
14 WUF14	Wake-up Flag for WUU_Pn Indicates that an enabled external wake-up pin was a source of exiting a low-leakage power mode.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - No 1b - Yes
13 WUF13	Wake-up Flag for WUU_Pn Indicates that an enabled external wake-up pin was a source of exiting a low-leakage power mode. 0b - No 1b - Yes
12 WUF12	Wake-up Flag for WUU_Pn Indicates that an enabled external wake-up pin was a source of exiting a low-leakage power mode. 0b - No 1b - Yes
11 WUF11	Wake-up Flag for WUU_Pn Indicates that an enabled external wake-up pin was a source of exiting a low-leakage power mode. 0b - No 1b - Yes
10 WUF10	Wake-up Flag for WUU_Pn Indicates that an enabled external wake-up pin was a source of exiting a low-leakage power mode. 0b - No 1b - Yes
9 WUF9	Wake-up Flag for WUU_Pn Indicates that an enabled external wake-up pin was a source of exiting a low-leakage power mode. 0b - No 1b - Yes
8 WUF8	Wake-up Flag for WUU_Pn Indicates that an enabled external wake-up pin was a source of exiting a low-leakage power mode. 0b - No 1b - Yes
7 WUF7	Wake-up Flag for WUU_Pn Indicates that an enabled external wake-up pin was a source of exiting a low-leakage power mode. 0b - No 1b - Yes
6	Wake-up Flag for WUU_Pn

Table continues on the next page...

Table continued from the previous page...

Field	Function
WUF6	Indicates that an enabled external wake-up pin was a source of exiting a low-leakage power mode. 0b - No 1b - Yes
5 WUF5	Wake-up Flag for WUU_Pn Indicates that an enabled external wake-up pin was a source of exiting a low-leakage power mode. 0b - No 1b - Yes
4 WUF4	Wake-up Flag for WUU_Pn Indicates that an enabled external wake-up pin was a source of exiting a low-leakage power mode. 0b - No 1b - Yes
3 WUF3	Wake-up Flag for WUU_Pn Indicates that an enabled external wake-up pin was a source of exiting a low-leakage power mode. 0b - No 1b - Yes
2 WUF2	Wake-up Flag for WUU_Pn Indicates that an enabled external wake-up pin was a source of exiting a low-leakage power mode. 0b - No 1b - Yes
1 WUF1	Wake-up Flag for WUU_Pn Indicates that an enabled external wake-up pin was a source of exiting a low-leakage power mode. 0b - No 1b - Yes
0 WUF0	Wake-up Flag for WUU_Pn Indicates that an enabled external wake-up pin was a source of exiting a low-leakage power mode. 0b - No 1b - Yes

17.7.1.9 Pin Filter (FILT)

Offset

Register	Offset
FILT	30h

Function

Contains control and status fields to enable and configure the digital filter features for an external wake-up pin.

NOTE

VSYS warm reset resets this register.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	FILTF2	FILTE2		FILTSEL2				FILTF1	FILTE1		FILTSEL1					
W	W1C															
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-16 —	Reserved
15 FILTF2	Filter 2 Flag Indicates that the filtered external pin was a source of exiting a low-leakage power mode. 0b - No 1b - Yes
14-13 FILTE2	Filter 2 Enable Enables the filter for wake-up. This field configures the edge detection as follows: - For field value = 01b, when configured as an interrupt/DMA request: Detect on rising edge. When configured as a trigger event: Detect on high level - For field value = 10b, when configured as an interrupt/DMA request: Detect on falling edge. When configured as a trigger event: Detect on low level

Table continues on the next page...

Table continued from the previous page...

Field	Function
	- For field value = 11b, when configured as an interrupt/DMA request: Detect on any edge 00b - Disable 01b - Enable (Detect on rising edge or high level) 10b - Enable (Detect on falling edge or low level) 11b - Enable (Detect on any edge)
12-8 FILTSEL2	Filter 2 Pin Select Selects and filters the external pin WUU_Pn, where <i>n</i> equals the value programmed into FILTSEL2.
7 FILTF1	Filter 1 Flag Indicates that the filtered external pin was a source of exiting a low-leakage power mode. 0b - No 1b - Yes
6-5 FILTE1	Filter 1 Enable Enables the filter for wake-up. This field configures the edge detection as follows: - For field value = 01b, when configured as an interrupt/DMA request: Detect on rising edge. When configured as a trigger event: Detect on high level - For field value = 10b, when configured as an interrupt/DMA request: Detect on falling edge. When configured as a trigger event: Detect on low level - For field value = 11b, when configured as an interrupt/DMA request: Detect on any edge 00b - Disable 01b - Enable (Detect on rising edge or high level) 10b - Enable (Detect on falling edge or low level) 11b - Enable (Detect on any edge)
4-0 FILTSEL1	Filter 1 Pin Select Selects and filters the external pin WUU_Pn, where <i>n</i> equals the value programmed into FILTSEL1.

17.7.1.10 Pin DMA/Trigger Configuration 1 (PDC1)

Offset

Register	Offset
PDC1	38h

Function

Configures the available external wake-up input pins in the range from WUU_P0 to WUU_P15 to generate an interrupt, DMA, or a trigger event when detected.

- When configured as an interrupt, the interrupt is asserted when the edge programmed in **Pin Enable 1 (PE1)** is detected and remains asserted until the corresponding flag is cleared in **Pin Flag (PF)**.
- When configured as a DMA request, the request is asserted when the edge programmed in **Pin Enable 1 (PE1)** is detected and remains asserted until either the corresponding flag is cleared in **Pin Flag (PF)** or until the requested DMA transfer is complete.
- When configured as a trigger event, the trigger is asserted when the level programmed in **Pin Enable 1 (PE1)** is detected and remains asserted when the input pin is asserted. The corresponding flag in **Pin Flag (PF)** will not be set.

NOTE

- Do not modify the value of $PDCm[WUPDCn]$ field when its corresponding $PMC[WUPMCn] = 1$.
- VSYS warm reset resets this register.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	WUPDC15				WUPDC14				WUPDC13				WUPDC12			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	WUPDC7				WUPDC6				WUPDC5				WUPDC4			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-30 WUPDC15	Wake-up Pin Configuration for WUU_Pn Configures an external pin as an interrupt, DMA, or Trigger event. 00b - Interrupt 01b - DMA request 10b - Trigger event 11b - Reserved
29-28 WUPDC14	Wake-up Pin Configuration for WUU_Pn Configures an external pin as an interrupt, DMA, or Trigger event. 00b - Interrupt 01b - DMA request 10b - Trigger event 11b - Reserved
27-26	Wake-up Pin Configuration for WUU_Pn

Table continues on the next page...

Table continued from the previous page...

Field	Function
WUPDC13	Configures an external pin as an interrupt, DMA, or Trigger event. 00b - Interrupt 01b - DMA request 10b - Trigger event 11b - Reserved
25-24 WUPDC12	Wake-up Pin Configuration for WUU_Pn Configures an external pin as an interrupt, DMA, or Trigger event. 00b - Interrupt 01b - DMA request 10b - Trigger event 11b - Reserved
23-22 WUPDC11	Wake-up Pin Configuration for WUU_Pn Configures an external pin as an interrupt, DMA, or Trigger event. 00b - Interrupt 01b - DMA request 10b - Trigger event 11b - Reserved
21-20 WUPDC10	Wake-up Pin Configuration for WUU_Pn Configures an external pin as an interrupt, DMA, or Trigger event. 00b - Interrupt 01b - DMA request 10b - Trigger event 11b - Reserved
19-18 WUPDC9	Wake-up Pin Configuration for WUU_Pn Configures an external pin as an interrupt, DMA, or Trigger event. 00b - Interrupt 01b - DMA request 10b - Trigger event 11b - Reserved
17-16 WUPDC8	Wake-up Pin Configuration for WUU_Pn Configures an external pin as an interrupt, DMA, or Trigger event.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	00b - Interrupt 01b - DMA request 10b - Trigger event 11b - Reserved
15-14 WUPDC7	Wake-up Pin Configuration for WUU_Pn Configures an external pin as an interrupt, DMA, or Trigger event. 00b - Interrupt 01b - DMA request 10b - Trigger event 11b - Reserved
13-12 WUPDC6	Wake-up Pin Configuration for WUU_Pn Configures an external pin as an interrupt, DMA, or Trigger event. 00b - Interrupt 01b - DMA request 10b - Trigger event 11b - Reserved
11-10 WUPDC5	Wake-up Pin Configuration for WUU_Pn Configures an external pin as an interrupt, DMA, or Trigger event. 00b - Interrupt 01b - DMA request 10b - Trigger event 11b - Reserved
9-8 WUPDC4	Wake-up Pin Configuration for WUU_Pn Configures an external pin as an interrupt, DMA, or Trigger event. 00b - Interrupt 01b - DMA request 10b - Trigger event 11b - Reserved
7-6 WUPDC3	Wake-up Pin Configuration for WUU_Pn Configures an external pin as an interrupt, DMA, or Trigger event. 00b - Interrupt

Table continues on the next page...

Table continued from the previous page...

Field	Function
	01b - DMA request 10b - Trigger event 11b - Reserved
5-4 WUPDC2	Wake-up Pin Configuration for WUU_Pn Configures an external pin as an interrupt, DMA, or Trigger event. 00b - Interrupt 01b - DMA request 10b - Trigger event 11b - Reserved
3-2 WUPDC1	Wake-up Pin Configuration for WUU_Pn Configures an external pin as an interrupt, DMA, or Trigger event. 00b - Interrupt 01b - DMA request 10b - Trigger event 11b - Reserved
1-0 WUPDC0	Wake-up Pin Configuration for WUU_Pn Configures an external pin as an interrupt, DMA, or Trigger event. 00b - Interrupt 01b - DMA request 10b - Trigger event 11b - Reserved

17.7.1.11 Pin DMA/Trigger Configuration 2 (PDC2)

Offset

Register	Offset
PDC2	3Ch

Function

Configures the available external wake-up input pins in the range from WUU_P16 to WUU_P31 to generate an interrupt, DMA, or a trigger event when detected.

- When configured as an interrupt, the interrupt is asserted when the edge programmed in [Pin Enable 2 \(PE2\)](#) is detected and remains asserted until the corresponding flag is cleared in [Pin Flag \(PF\)](#).

- When configured as a DMA request, the request is asserted when the edge programmed in [Pin Enable 2 \(PE2\)](#) is detected and remains asserted until either the corresponding flag is cleared in [Pin Flag \(PF\)](#) or until the requested DMA transfer is complete.
- When configured as a trigger event, the trigger is asserted when the level programmed in [Pin Enable 2 \(PE2\)](#) is detected and remains asserted when the input pin is asserted. The corresponding flag in [Pin Flag \(PF\)](#) will not be set.

NOTE

- Do not modify the value of $PDCm[WUPDCn]$ field when its corresponding $PMC[WUPMCn] = 1$.
- VSYS warm reset resets this register.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	WUPDC31				WUPDC30				WUPDC29				WUPDC28			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	WUPDC23				WUPDC22				WUPDC21				WUPDC20			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-30 WUPDC31	Wake-up Pin Configuration for WUU_Pn Configures an external pin as an interrupt, DMA, or Trigger event. 00b - Interrupt 01b - DMA request 10b - Trigger event 11b - Reserved
29-28 WUPDC30	Wake-up Pin Configuration for WUU_Pn Configures an external pin as an interrupt, DMA, or Trigger event. 00b - Interrupt 01b - DMA request 10b - Trigger event 11b - Reserved
27-26 WUPDC29	Wake-up Pin Configuration for WUU_Pn Configures an external pin as an interrupt, DMA, or Trigger event. 00b - Interrupt

Table continues on the next page...

Table continued from the previous page...

Field	Function
	01b - DMA request 10b - Trigger event 11b - Reserved
25-24 WUPDC28	Wake-up Pin Configuration for WUU_Pn Configures an external pin as an interrupt, DMA, or Trigger event. 00b - Interrupt 01b - DMA request 10b - Trigger event 11b - Reserved
23-22 WUPDC27	Wake-up Pin Configuration for WUU_Pn Configures an external pin as an interrupt, DMA, or Trigger event. 00b - Interrupt 01b - DMA request 10b - Trigger event 11b - Reserved
21-20 WUPDC26	Wake-up Pin Configuration for WUU_Pn Configures an external pin as an interrupt, DMA, or Trigger event. 00b - Interrupt 01b - DMA request 10b - Trigger event 11b - Reserved
19-18 WUPDC25	Wake-up Pin Configuration for WUU_Pn Configures an external pin as an interrupt, DMA, or Trigger event. 00b - Interrupt 01b - DMA request 10b - Trigger event 11b - Reserved
17-16 WUPDC24	Wake-up Pin Configuration for WUU_Pn Configures an external pin as an interrupt, DMA, or Trigger event. 00b - Interrupt 01b - DMA request

Table continues on the next page...

Table continued from the previous page...

Field	Function
	10b - Trigger event 11b - Reserved
15-14 WUPDC23	Wake-up Pin Configuration for WUU_Pn Configures an external pin as an interrupt, DMA, or Trigger event. 00b - Interrupt 01b - DMA request 10b - Trigger event 11b - Reserved
13-12 WUPDC22	Wake-up Pin Configuration for WUU_Pn Configures an external pin as an interrupt, DMA, or Trigger event. 00b - Interrupt 01b - DMA request 10b - Trigger event 11b - Reserved
11-10 WUPDC21	Wake-up Pin Configuration for WUU_Pn Configures an external pin as an interrupt, DMA, or Trigger event. 00b - Interrupt 01b - DMA request 10b - Trigger event 11b - Reserved
9-8 WUPDC20	Wake-up Pin Configuration for WUU_Pn Configures an external pin as an interrupt, DMA, or Trigger event. 00b - Interrupt 01b - DMA request 10b - Trigger event 11b - Reserved
7-6 WUPDC19	Wake-up Pin Configuration for WUU_Pn Configures an external pin as an interrupt, DMA, or Trigger event. 00b - Interrupt 01b - DMA request 10b - Trigger event 11b - Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
5-4 WUPDC18	Wake-up Pin Configuration for WUU_Pn Configures an external pin as an interrupt, DMA, or Trigger event. 00b - Interrupt 01b - DMA request 10b - Trigger event 11b - Reserved
3-2 WUPDC17	Wake-up Pin Configuration for WUU_Pn Configures an external pin as an interrupt, DMA, or Trigger event. 00b - Interrupt 01b - DMA request 10b - Trigger event 11b - Reserved
1-0 WUPDC16	Wake-up Pin Configuration for WUU_Pn Configures an external pin as an interrupt, DMA, or Trigger event. 00b - Interrupt 01b - DMA request 10b - Trigger event 11b - Reserved

17.7.1.12 Pin Filter DMA/Trigger Configuration (FDC)

Offset

Register	Offset
FDC	48h


Function

Configures the external pin filters to generate an interrupt, DMA, or a trigger event when detected.

- When configured as an interrupt, the interrupt is asserted when the edge programmed in `FILTF $n$ [FILTEn]` is detected and remains asserted until the corresponding `FILTF $n$` flag is cleared.
- When configured as a DMA request, the request is asserted when the edge programmed in `FILTF $n$ [FILTEn]` is detected and remains asserted until either the corresponding `FILTF $n$` flag is cleared or until the requested DMA transfer is complete.
- When configured as a trigger event, the trigger is asserted when the level programmed in [Pin Filter \(FILT\)](#) is detected and remains asserted when the input pin is asserted. The corresponding `FILTF $n$` flag will not be set.

NOTE
VSYS warm reset resets this register.

Diagram

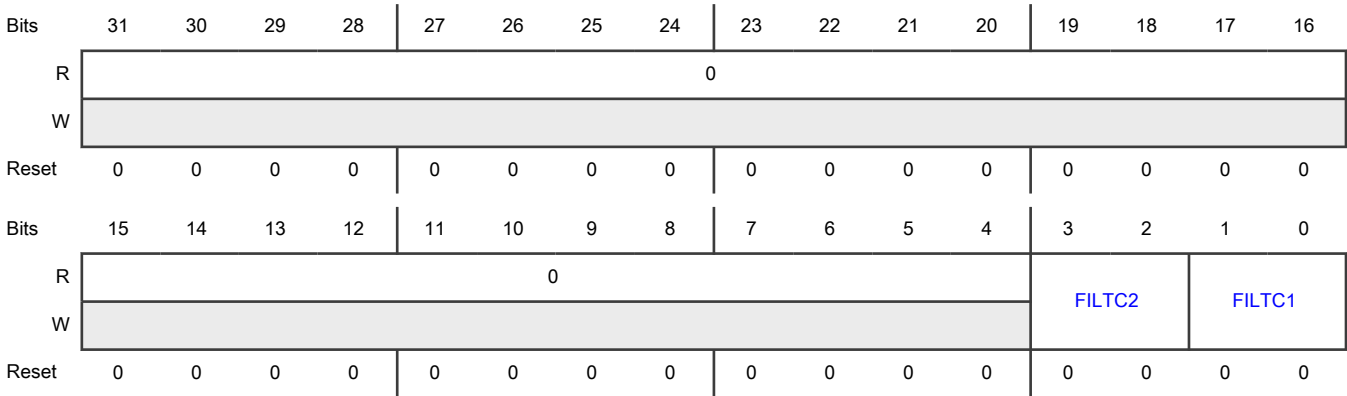

Fields

Field	Function
31-4 —	Reserved
3-2: FILTC2 1-0: FILTC1	Filter Configuration for FILTn Configures a filter as an interrupt, DMA, or Trigger event. 00b - Interrupt 01b - DMA request 10b - Trigger event 11b - Reserved

17.7.1.13 Pin Mode Configuration (PMC)

Offset

Register	Offset
PMC	50h

Function

Configures the detection logic for the available external wake-up input pins to remain enabled during all power modes, not just during Power Down/ mode.

NOTE
VSYS warm reset resets this register.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	WUPM	WUPM	WUPM	WUPM	WUPM	WUPM	WUPM	WUPM	WUPM	WUPM	WUPM	WUPM	WUPM	WUPM	WUPM	WUPM
W	C31	C30	C29	C28	C27	C26	C25	C24	C23	C22	C21	C20	C19	C18	C17	C16
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	WUPM	WUPM	WUPM	WUPM	WUPM	WUPM	WUPM	WUPM	WUPM	WUPM	WUPM	WUPM	WUPM	WUPM	WUPM	WUPM
W	C15	C14	C13	C12	C11	C10	C9	C8	C7	C6	C5	C4	C3	C2	C1	C0
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31 WUPMC31	Wake-up Pin Mode Configuration for WUU_Pn Configures an external wake-up pin to provide active detection during all power modes. 0b - Active only during a low-leakage mode. You can modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn). 1b - Active during all power modes. Do not modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn).
30 WUPMC30	Wake-up Pin Mode Configuration for WUU_Pn Configures an external wake-up pin to provide active detection during all power modes. 0b - Active only during a low-leakage mode. You can modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn). 1b - Active during all power modes. Do not modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn).
29 WUPMC29	Wake-up Pin Mode Configuration for WUU_Pn Configures an external wake-up pin to provide active detection during all power modes. 0b - Active only during a low-leakage mode. You can modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn). 1b - Active during all power modes. Do not modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn).
28 WUPMC28	Wake-up Pin Mode Configuration for WUU_Pn Configures an external wake-up pin to provide active detection during all power modes. 0b - Active only during a low-leakage mode. You can modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn). 1b - Active during all power modes. Do not modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn).
27	Wake-up Pin Mode Configuration for WUU_Pn

Table continues on the next page...

Table continued from the previous page...

Field	Function
WUPMC27	Configures an external wake-up pin to provide active detection during all power modes. 0b - Active only during a low-leakage mode. You can modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn). 1b - Active during all power modes. Do not modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn).
26 WUPMC26	Wake-up Pin Mode Configuration for WUU_Pn Configures an external wake-up pin to provide active detection during all power modes. 0b - Active only during a low-leakage mode. You can modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn). 1b - Active during all power modes. Do not modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn).
25 WUPMC25	Wake-up Pin Mode Configuration for WUU_Pn Configures an external wake-up pin to provide active detection during all power modes. 0b - Active only during a low-leakage mode. You can modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn). 1b - Active during all power modes. Do not modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn).
24 WUPMC24	Wake-up Pin Mode Configuration for WUU_Pn Configures an external wake-up pin to provide active detection during all power modes. 0b - Active only during a low-leakage mode. You can modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn). 1b - Active during all power modes. Do not modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn).
23 WUPMC23	Wake-up Pin Mode Configuration for WUU_Pn Configures an external wake-up pin to provide active detection during all power modes. 0b - Active only during a low-leakage mode. You can modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn). 1b - Active during all power modes. Do not modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn).
22 WUPMC22	Wake-up Pin Mode Configuration for WUU_Pn Configures an external wake-up pin to provide active detection during all power modes. 0b - Active only during a low-leakage mode. You can modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn). 1b - Active during all power modes. Do not modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn).

Table continues on the next page...

Table continued from the previous page...

Field	Function
21 WUPMC21	Wake-up Pin Mode Configuration for WUU_Pn Configures an external wake-up pin to provide active detection during all power modes. 0b - Active only during a low-leakage mode. You can modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn). 1b - Active during all power modes. Do not modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn).
20 WUPMC20	Wake-up Pin Mode Configuration for WUU_Pn Configures an external wake-up pin to provide active detection during all power modes. 0b - Active only during a low-leakage mode. You can modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn). 1b - Active during all power modes. Do not modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn).
19 WUPMC19	Wake-up Pin Mode Configuration for WUU_Pn Configures an external wake-up pin to provide active detection during all power modes. 0b - Active only during a low-leakage mode. You can modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn). 1b - Active during all power modes. Do not modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn).
18 WUPMC18	Wake-up Pin Mode Configuration for WUU_Pn Configures an external wake-up pin to provide active detection during all power modes. 0b - Active only during a low-leakage mode. You can modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn). 1b - Active during all power modes. Do not modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn).
17 WUPMC17	Wake-up Pin Mode Configuration for WUU_Pn Configures an external wake-up pin to provide active detection during all power modes. 0b - Active only during a low-leakage mode. You can modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn). 1b - Active during all power modes. Do not modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn).
16 WUPMC16	Wake-up Pin Mode Configuration for WUU_Pn Configures an external wake-up pin to provide active detection during all power modes. 0b - Active only during a low-leakage mode. You can modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn). 1b - Active during all power modes. Do not modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn).

Table continues on the next page...

Table continued from the previous page...

Field	Function
15 WUPMC15	Wake-up Pin Mode Configuration for WUU_Pn Configures an external wake-up pin to provide active detection during all power modes. 0b - Active only during a low-leakage mode. You can modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn). 1b - Active during all power modes. Do not modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn).
14 WUPMC14	Wake-up Pin Mode Configuration for WUU_Pn Configures an external wake-up pin to provide active detection during all power modes. 0b - Active only during a low-leakage mode. You can modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn). 1b - Active during all power modes. Do not modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn).
13 WUPMC13	Wake-up Pin Mode Configuration for WUU_Pn Configures an external wake-up pin to provide active detection during all power modes. 0b - Active only during a low-leakage mode. You can modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn). 1b - Active during all power modes. Do not modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn).
12 WUPMC12	Wake-up Pin Mode Configuration for WUU_Pn Configures an external wake-up pin to provide active detection during all power modes. 0b - Active only during a low-leakage mode. You can modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn). 1b - Active during all power modes. Do not modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn).
11 WUPMC11	Wake-up Pin Mode Configuration for WUU_Pn Configures an external wake-up pin to provide active detection during all power modes. 0b - Active only during a low-leakage mode. You can modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn). 1b - Active during all power modes. Do not modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn).
10 WUPMC10	Wake-up Pin Mode Configuration for WUU_Pn Configures an external wake-up pin to provide active detection during all power modes. 0b - Active only during a low-leakage mode. You can modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn). 1b - Active during all power modes. Do not modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn).

Table continues on the next page...

Table continued from the previous page...

Field	Function
9 WUPMC9	Wake-up Pin Mode Configuration for WUU_Pn Configures an external wake-up pin to provide active detection during all power modes. 0b - Active only during a low-leakage mode. You can modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn). 1b - Active during all power modes. Do not modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn).
8 WUPMC8	Wake-up Pin Mode Configuration for WUU_Pn Configures an external wake-up pin to provide active detection during all power modes. 0b - Active only during a low-leakage mode. You can modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn). 1b - Active during all power modes. Do not modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn).
7 WUPMC7	Wake-up Pin Mode Configuration for WUU_Pn Configures an external wake-up pin to provide active detection during all power modes. 0b - Active only during a low-leakage mode. You can modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn). 1b - Active during all power modes. Do not modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn).
6 WUPMC6	Wake-up Pin Mode Configuration for WUU_Pn Configures an external wake-up pin to provide active detection during all power modes. 0b - Active only during a low-leakage mode. You can modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn). 1b - Active during all power modes. Do not modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn).
5 WUPMC5	Wake-up Pin Mode Configuration for WUU_Pn Configures an external wake-up pin to provide active detection during all power modes. 0b - Active only during a low-leakage mode. You can modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn). 1b - Active during all power modes. Do not modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn).
4 WUPMC4	Wake-up Pin Mode Configuration for WUU_Pn Configures an external wake-up pin to provide active detection during all power modes. 0b - Active only during a low-leakage mode. You can modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn). 1b - Active during all power modes. Do not modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn).

Table continues on the next page...

Table continued from the previous page...

Field	Function
3 WUPMC3	Wake-up Pin Mode Configuration for WUU_Pn Configures an external wake-up pin to provide active detection during all power modes. 0b - Active only during a low-leakage mode. You can modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn). 1b - Active during all power modes. Do not modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn).
2 WUPMC2	Wake-up Pin Mode Configuration for WUU_Pn Configures an external wake-up pin to provide active detection during all power modes. 0b - Active only during a low-leakage mode. You can modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn). 1b - Active during all power modes. Do not modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn).
1 WUPMC1	Wake-up Pin Mode Configuration for WUU_Pn Configures an external wake-up pin to provide active detection during all power modes. 0b - Active only during a low-leakage mode. You can modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn). 1b - Active during all power modes. Do not modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn).
0 WUPMC0	Wake-up Pin Mode Configuration for WUU_Pn Configures an external wake-up pin to provide active detection during all power modes. 0b - Active only during a low-leakage mode. You can modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn). 1b - Active during all power modes. Do not modify the corresponding fields within Pin Enable (PEn) or Pin DMA/Trigger Configuration (PDCn).

17.7.1.14 Pin Filter Mode Configuration (FMC)

Offset

Register	Offset
FMC	58h


Function

Configures the detection logic for external pin filters to remain enabled during all power modes, not just during Power Down/Deep Power Down mode.

NOTE

VSYS warm reset resets this register.

Diagram

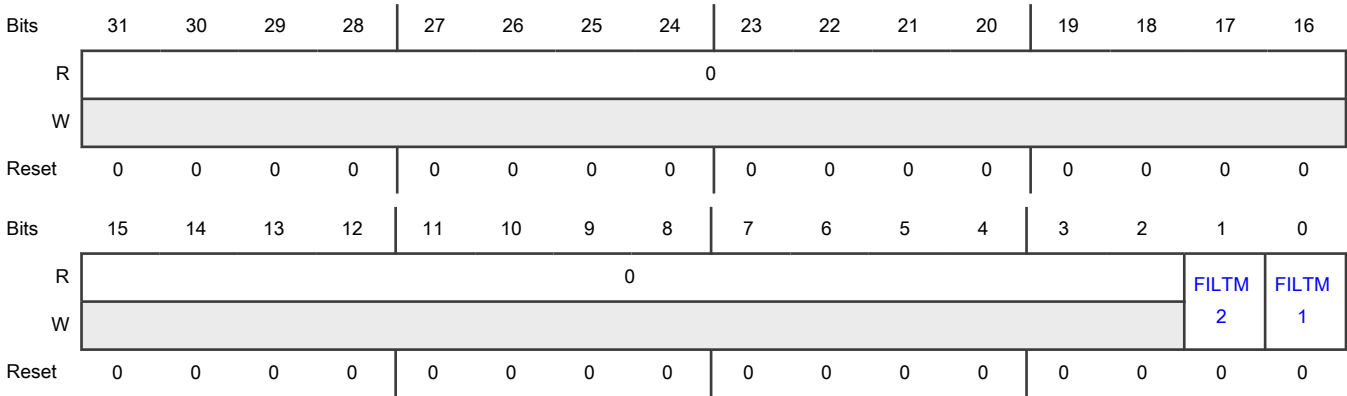

Fields

Field	Function
31-2 —	Reserved
1-0 FILTMn	Filter Mode for FILTn Configures an external wake-up pin filter to provide active detection during all power modes. 0b - Active only during Power Down/Deep Power Down mode 1b - Active during all power modes

Chapter 18

AND/OR INVERT (AOI)

18.1 Chip-specific AOI information

Table 104. Reference links to related information

Topic	Related module	Reference
Full description	AOI	AOI
System memory map		Memory map
Clocking		Clock distribution
Power Management		Power Management
Signal multiplexing	Port control	Signal multiplexing
Peripheral Input Mux	INPUTMUX	Peripheral Input multiplexing

18.1.1 Module instances

This device has two instance of AOI (AOI0, AOI1).

18.2 Overview

AOI supports the generation of a configurable number of EVENT signals. Each output EVENT n is a configurable AOI function of four associated AOI inputs: A n , B n , C n , and D n , where n represents the channel number.

The AOI controller is a target peripheral module that connects event input indicators from a variety of modules and generates event output signals routed to other peripherals. You can access its programming model through the standard IPS target interface.

You can configure AOI to implement different Boolean functions.

18.2.1 Block diagram

AOI supports 4 event outputs, each representing a programmable, combinational Boolean function.

NOTE

The connections from AOI outputs to other functions are chip-specific.

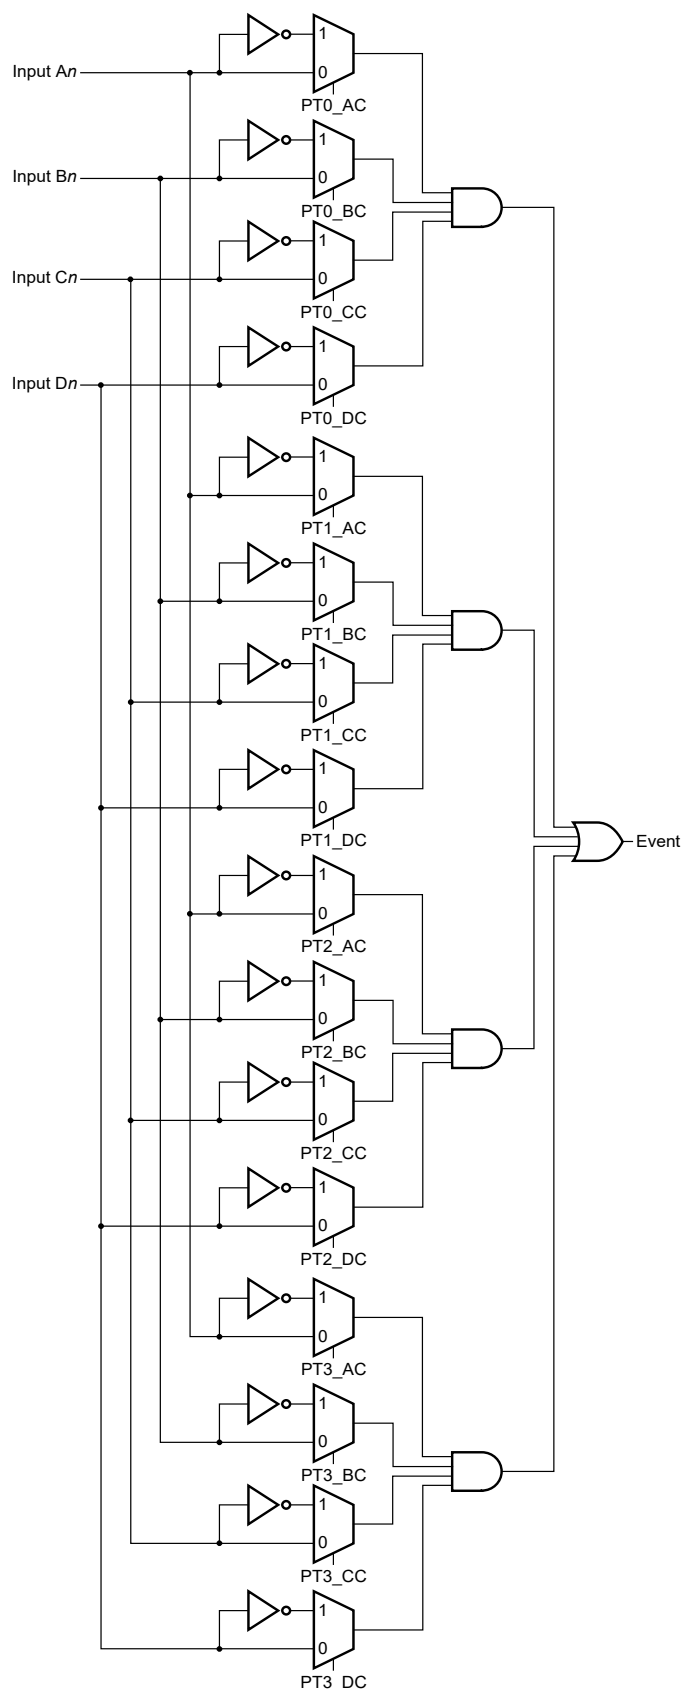


Figure 31. Block diagram

18.2.2 Features

- Enables you to create combinational Boolean events for use as hardware triggers:
 - Each channel includes four event inputs and one output
 - Evaluation of a combinational Boolean expression as the sum of four products, where each product term includes all four selected input sources available as true or complement values
 - Event output is formed as purely combinational logic and operates as a hardware trigger
- Includes a memory-mapped chip connected to the target peripheral (IPS) bus (programming model organized per channel for simplified software)

18.3 Functional description

AOI is highly programmable—you can use it for creating combinational Boolean outputs for use as hardware triggers. Each AOI output channel, as shown in [Figure 31](#), has one logic function: Evaluation of combinational Boolean expression as a sum of four products, where each product term includes all four selected input sources available as true or complement values.

18.3.1 Modes of operation

AOI does not support any special modes of operation.

18.3.2 Clocks

The system uses the bus clock for register accesses, but AOI functions are asynchronous and do not use a clock.

18.3.3 Interrupts

This module has no interrupts.

18.4 External signals

This module has no external signals.

18.5 Initialization

This module does not require initialization.

18.6 Application information

The following sections describe configuration examples and Boolean expressions that you could use when programming AOI for your use.

18.6.1 Configuration examples for Boolean function evaluation

This section presents examples of the programming model configuration for simple Boolean expressions.

AOI provides a universal Boolean function generator using a four-term sum of product expression. Each product term contains true or complement values of the four selected event inputs (A_n , B_n , C_n , and D_n). See [Code Listing 1](#) that presents a 4×4 Boolean expression defining the event output:

```
EVENTn
= (0,An,~An,1) & (0,Bn,~Bn,1) & (0,Cn,~Cn,1) & (0,Dn,~Dn,1) // product term 0
| (0,An,~An,1) & (0,Bn,~Bn,1) & (0,Cn,~Cn,1) & (0,Dn,~Dn,1) // product term 1
```

```
| (0,An,~An,1) & (0,Bn,~Bn,1) & (0,Cn,~Cn,1) & (0,Dn,~Dn,1) // product term 2
| (0,An,~An,1) & (0,Bn,~Bn,1) & (0,Cn,~Cn,1) & (0,Dn,~Dn,1) // product term 3
```

Code Listing 1. Boolean expression defining event inputs (A_n , B_n , C_n , and D_n)

You can configure each selected input term in each product term to produce a logical 0 or 1, or pass the true or complement value of the selected event input. Each product term uses 8 bits of configuration information, 2 bits for each of the four selected event inputs. See [Code Listing 2](#) that presents the actual Boolean expression implemented in each channel:

```
EVENTn
= (PT0_AC[0] & An | PT0_AC[1] & ~An) // product term 0
& (PT0_BC[0] & Bn | PT0_BC[1] & ~Bn)
& (PT0_CC[0] & Cn | PT0_CC[1] & ~Cn)
& (PT0_DC[0] & Dn | PT0_DC[1] & ~Dn)

| (PT1_AC[0] & An | PT1_AC[1] & ~An) // product term 1
& (PT1_BC[0] & Bn | PT1_BC[1] & ~Bn)
& (PT1_CC[0] & Cn | PT1_CC[1] & ~Cn)
& (PT1_DC[0] & Dn | PT1_DC[1] & ~Dn)

| (PT2_AC[0] & An | PT2_AC[1] & ~An) // product term 2
& (PT2_BC[0] & Bn | PT2_BC[1] & ~Bn)
& (PT2_CC[0] & Cn | PT2_CC[1] & ~Cn)
& (PT2_DC[0] & Dn | PT2_DC[1] & ~Dn)

| (PT3_AC[0] & An | PT3_AC[1] & ~An) // product term 3
& (PT3_BC[0] & Bn | PT3_BC[1] & ~Bn)
& (PT3_CC[0] & Cn | PT3_CC[1] & ~Cn)
& (PT3_DC[0] & Dn | PT3_DC[1] & ~Dn)
```

Code Listing 2. Boolean expressions for $EVENT_n$

The combined fields of {[Boolean Function Term 0 and 1 Configuration for \$EVENT_n\$ \(BFCRT010 - BFCRT013\)](#), [Boolean Function Term 2 and 3 Configuration for \$EVENT_n\$ \(BFCRT230 - BFCRT233\)](#)} correspond to the $PT\{0-3\}_{A,B,C,D}C[1:0]$ terms in the aforementioned example.

Consider the settings of the combined 32-bit registers {[Boolean Function Term 0 and 1 Configuration for \$EVENT_n\$ \(BFCRT010 - BFCRT013\)](#), [Boolean Function Term 2 and 3 Configuration for \$EVENT_n\$ \(BFCRT230 - BFCRT233\)](#)} for several simple Boolean expressions, as shown in [Table 105](#).

Table 105. BFCRT n values for simple boolean expressions

Event output expression	PT0	PT1	PT2	PT3	{ Boolean Function Term 0 and 1 Configuration for $EVENT_n$ (BFCRT010 - BFCRT013) , Boolean Function Term 2 and 3 Configuration for $EVENT_n$ (BFCRT230 - BFCRT233) }
A & B	A & B	0	0	0	01011111_00000000_00000000_00000000
A & B & C	A & B & C	0	0	0	01010111_00000000_00000000_00000000
(A & B & C) + D	A & B & C	D	0	0	01010111_11111101_00000000_00000000
A + B + C + D	A	B	C	D	01111111_11011111_11110111_11111101
(A & ~B) + (~A & B)	A & ~B	~A & B	0	0	01101111_10011111_00000000_00000000

As explained through the aforementioned examples, the resulting logic provides a simple yet powerful Boolean function evaluation for defining an event output.

18.7 AOI register descriptions

You can access the AOI programming model via a 16-bit peripheral bus connection. AOI is designed to support 16-bit accesses only. Other accesses are undefined.

AOI supports a specific number of event outputs. Each output $EVENTn$ outputs a four-term AOI function of four binary inputs: A_n , B_n , C_n , and D_n . A pair of 16-bit registers configures this four-term AOI function: [Boolean Function Term 0 and 1 Configuration for \$EVENTn\$ \(BFCRT010 - BFCRT013\)](#) and [Boolean Function Term 2 and 3 Configuration for \$EVENTn\$ \(BFCRT230 - BFCRT233\)](#) define the configuration for the evaluation of the Boolean function defining $EVENTn$, where n is the event output channel number. [Boolean Function Term 0 and 1 Configuration for \$EVENTn\$ \(BFCRT010 - BFCRT013\)](#) defines the configuration of product terms 0 and 1, and [Boolean Function Term 2 and 3 Configuration for \$EVENTn\$ \(BFCRT230 - BFCRT233\)](#) defines the configuration of product terms 2 and 3.

AOI provides a universal Boolean function generator using a four-term sum of product expression with each product term containing true or complement values of the four selected event inputs (A_n , B_n , C_n , and D_n). Specifically, the following "4 x 4" Boolean expression defines the $EVENTn$ output:

```
EVENTn
term 0      = (0, An, ~An, 1) & (0, Bn, ~Bn, 1) & (0, Cn, ~Cn, 1) & (0, Dn, ~Dn, 1) // product
term 1      | (0, An, ~An, 1) & (0, Bn, ~Bn, 1) & (0, Cn, ~Cn, 1) & (0, Dn, ~Dn, 1) // product
term 2      | (0, An, ~An, 1) & (0, Bn, ~Bn, 1) & (0, Cn, ~Cn, 1) & (0, Dn, ~Dn, 1) // product
term 3      | (0, An, ~An, 1) & (0, Bn, ~Bn, 1) & (0, Cn, ~Cn, 1) & (0, Dn, ~Dn, 1) // product
```

Code Listing 3. Boolean expression defining the $EVENTn$ output

Using the aforementioned expression, you can configure each selected input in each product term to produce a logical 0 or 1 or pass the true or complement value of the selected event input. Each product term uses 8 bits of configuration information, 2 bits for each of the four selected event inputs. The resulting logic provides a simple yet powerful Boolean function evaluation for defining an event output.

These AOI functions are combinational in nature. You must sample and use them synchronously.

18.7.1 AOI memory map

AOI0 base address: 4008_9000h

AOI1 base address: 4009_7000h

Offset	Register	Width (In bits)	Access	Reset value
0h	Boolean Function Term 0 and 1 Configuration for $EVENT0$ (BFCRT010)	16	RW	0000h
2h	Boolean Function Term 2 and 3 Configuration for $EVENT0$ (BFCRT230)	16	RW	0000h
4h	Boolean Function Term 0 and 1 Configuration for $EVENT1$ (BFCRT011)	16	RW	0000h
6h	Boolean Function Term 2 and 3 Configuration for $EVENT1$ (BFCRT231)	16	RW	0000h

Table continues on the next page...

Table continued from the previous page...

Offset	Register	Width (In bits)	Access	Reset value
8h	Boolean Function Term 0 and 1 Configuration for EVENT2 (BFCRT012)	16	RW	0000h
Ah	Boolean Function Term 2 and 3 Configuration for EVENT2 (BFCRT232)	16	RW	0000h
Ch	Boolean Function Term 0 and 1 Configuration for EVENT3 (BFCRT013)	16	RW	0000h
Eh	Boolean Function Term 2 and 3 Configuration for EVENT3 (BFCRT233)	16	RW	0000h

18.7.2 Boolean Function Term 0 and 1 Configuration for EVENT_n (BFCRT010 - BFCRT013)

Offset

Register	Offset
BFCRT010	0h
BFCRT011	4h
BFCRT012	8h
BFCRT013	Ch

Function

Configures the Boolean function for terms 0 and 1 of EVENT_n.

Diagram

Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R																
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
15-14 PT0_AC	Product Term 0, Input A Configuration Defines the Boolean evaluation associated with the selected input A in product term 0. 00b - Force input A to become 0 01b - Pass input A

Table continues on the next page...

Table continued from the previous page...

Field	Function
	10b - Complement input A 11b - Force input A to become 1
13-12 PT0_BC	Product Term 0, Input B Configuration Defines the Boolean evaluation associated with the selected input B in product term 0. 00b - Force input B to become 0 01b - Pass input B 10b - Complement input B 11b - Force input B to become 1
11-10 PT0_CC	Product Term 0, Input C Configuration Defines the Boolean evaluation associated with the selected input C in product term 0. 00b - Force input C to become 0 01b - Pass input C 10b - Complement input C 11b - Force input C to become 1
9-8 PT0_DC	Product Term 0, Input D Configuration Defines the Boolean evaluation associated with the selected input D in product term 0. 00b - Force input D to become 0 01b - Pass input D 10b - Complement input D 11b - Force input D to become 1
7-6 PT1_AC	Product Term 1, Input A Configuration Defines the Boolean evaluation associated with the selected input A in product term 1. 00b - Force input A to become 0 01b - Pass input A 10b - Complement input A 11b - Force input A to become 1
5-4 PT1_BC	Product Term 1, Input B Configuration Defines the Boolean evaluation associated with the selected input B in product term 1. 00b - Force input B to become 0 01b - Pass input B 10b - Complement input B 11b - Force input B to become 1

Table continues on the next page...

Table continued from the previous page...

Field	Function
3-2 PT1_CC	Product Term 1, Input C Configuration Defines the Boolean evaluation associated with the selected input C in product term 1. 00b - Force input C to become 0 01b - Pass input C 10b - Complement input C 11b - Force input C to become 1
1-0 PT1_DC	Product Term 1, Input D Configuration Defines the Boolean evaluation associated with the selected input D in product term 1. 00b - Force input D to become 0 01b - Pass input D 10b - Complement input D 11b - Force input D to become 1


18.7.3 Boolean Function Term 2 and 3 Configuration for EVENT_n (BFCRT230 - BFCRT233)

Offset

Register	Offset
BFCRT230	2h
BFCRT231	6h
BFCRT232	Ah
BFCRT233	Eh

Function

Configures the Boolean function for terms 2 and 3 of EVENT_n.

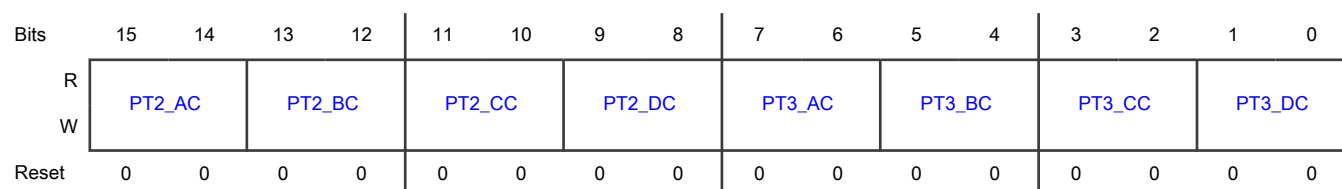Diagram**Fields**

Field	Function
15-14 PT2_AC	Product Term 2, Input A Configuration Defines the Boolean evaluation associated with the selected input A in product term 2. 00b - Force input A to become 0 01b - Pass input A 10b - Complement input A 11b - Force input A to become 1
13-12 PT2_BC	Product Term 2, Input B Configuration Defines the Boolean evaluation associated with the selected input B in product term 2. 00b - Force input B to become 0 01b - Pass input B 10b - Complement input B 11b - Force input B to become 1
11-10 PT2_CC	Product Term 2, Input C Configuration Defines the Boolean evaluation associated with the selected input C in product term 2. 00b - Force input C to become 0 01b - Pass input C 10b - Complement input C 11b - Force input C to become 1
9-8 PT2_DC	Product Term 2, Input D Configuration Defines the Boolean evaluation associated with the selected input D in product term 2. 00b - Force input D to become 0 01b - Pass input D 10b - Complement input D 11b - Force input D to become 1
7-6 PT3_AC	Product Term 3, Input A Configuration Defines the Boolean evaluation associated with the selected input A in product term 3.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	00b - Force input A to become 0 01b - Pass input A 10b - Complement input A 11b - Force input to become 1
5-4 PT3_BC	Product Term 3, Input B Configuration Defines the Boolean evaluation associated with the selected input B in product term 3. 00b - Force input B to become 0 01b - Pass input B 10b - Complement input B 11b - Force input B to become 1
3-2 PT3_CC	Product Term 3, Input C Configuration Defines the Boolean evaluation associated with the selected input C in product term 3. 00b - Force input C to become 0 01b - Pass input C 10b - Complement input C 11b - Force input C to become 1
1-0 PT3_DC	Product Term 3, Input D Configuration Defines the Boolean evaluation associated with the selected input D in product term 3. 00b - Force input D to become 0 01b - Pass input D 10b - Complement input D 11b - Force input D to become 1

Chapter 19

Core Mode Controller (CMC)

19.1 Chip-specific CMC information

Table 106. Reference links to related information

Topic	Related module	Reference
Full description	CMC	CMC
System memory map		Memory map
Clocking		Clock distribution
Power Management		Power Management
Reset		Reset
Signal multiplexing	Port control	Signal multiplexing

19.1.1 Module instances


This device has one instance of CMC module.

19.2 Overview

CMC provides the sequencing of the CPU and associated logic through the different operating modes.

This chapter describes the available CPU operating modes, including reset, active mode, and low-power modes.

19.2.1 Block diagram

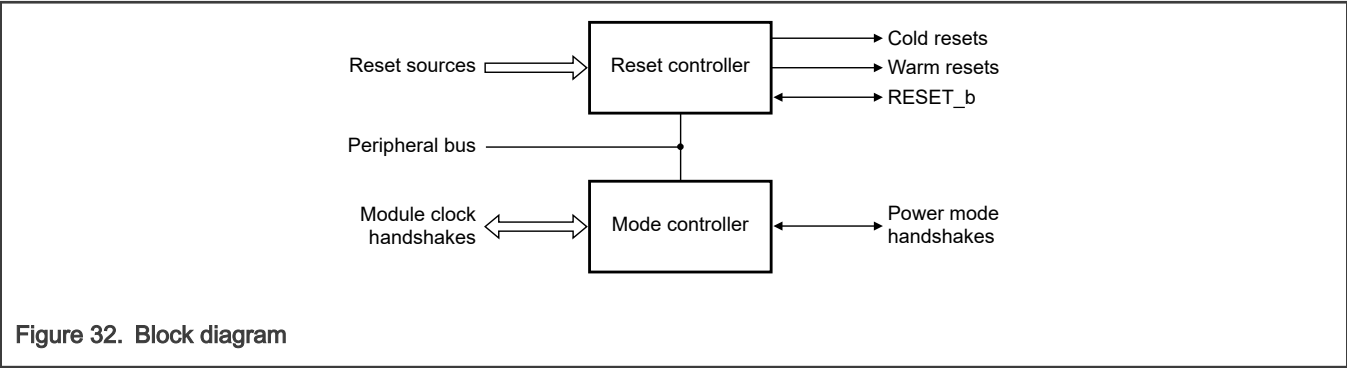

19.2.2 Features

- Configures the low-power mode options including SRAM retention
- Provides reset controller including reset status register and warm reset configuration
- Provides boot mode register and status bits

19.3 Functional description

This section provides the functional description of the block.

19.3.1 Modes of operation

The Arm Cortex-M CPU enters a low-power mode with the execution of a WFI or WFE instruction or via the SLEEPONEXIT mechanism. CMC configures the low-power mode that is entered.

The following table describes the low-power modes available to each core.

Table 107. Operating modes

Mode	Entry	Exit	Description
Reset	POR Warm reset WUU via power down	Active	- Core and peripherals are reset - SRAM optionally retained on power-down wake-up
Active	Reset NVIC WUU	WFI WFE SLEEPONEXIT	Core executing instructions, peripherals optionally active.
Sleep	WFI WFE SLEEPONEXIT	NVIC Reset	- Core waiting for interrupt or event, peripherals optionally active - Core and peripherals retain state. SRAM is active or retained.
Deep Sleep	WFI WFE SLEEPONEXIT	NVIC Reset	- Core waiting for interrupt or event, peripherals optionally active - Core and peripherals retain state, SRAM is retained
Power Down	WFI WFE SLEEPONEXIT	WUU via Active Reset	- Core and peripherals waiting for wakeup - Core and peripherals retain state - SRAM is optionally retained
Deep Power Down	WFI WFE SLEEPONEXIT	WUU via Reset Reset	Core, peripherals, and SRAM not retained.

19.3.2 Active mode

This section describes power options in Active mode.

19.3.2.1 Flash memory

This section describes the Flash Memory Low-Power mode.

You can place the internal flash memory in Low-Power mode under the following conditions:

- Under software control ([FLASHCR\[FLASHDIS\]](#))
- When CPU is sleeping ([FLASHCR\[FLASHDOZE\]](#))
- When the chip enters a low-power mode

When [FLASHCR\[FLASHDIS\]](#) or [FLASHCR\[FLASHDOZE\]](#) becomes 1, you can configure the internal flash memory to automatically exit Low-Power mode during the access on any attempted read access to flash memory space (but not flash peripheral space). [FLASHCR\[FLASHWAKE\]](#) controls this.

When the internal flash memory enters a low-power mode, the wake-up time of the flash memory automatically delays the first access upon exit from Low-Power mode. If there is no access between the internal flash memory exiting Low-Power and subsequent re-entry of Low-Power mode, the wake-up time of the flash memory delays the re-entry.

19.3.3 Low-power modes

This section describes the low-power modes.

19.3.3.1 Low-power entry

The following steps occur during the Low-Power mode entry sequence.

Table 108. Entry sequence

Step	CKMODE (min)	LPMODE (min)	Description
1	0h	0h	Core enters Low-Power mode by WFI/WFE instruction or via SLEEPONEXIT.
2	1h	0h	- Wake-up interrupt controller is enabled. - Core is clock gated.
3	3h	0h	- Request AHB initiators to enter Low-Power mode. - Wait for acknowledge. - AHB initiators are clock gated.
4	3h	0h	- Request AHB peripherals to enter Low-Power mode. - Wait for acknowledge. - AHB peripherals are clock gated.
5	7h	0h	- Request peripherals to enter Low-Power mode. - Wait for acknowledge. - Peripherals are clock gated.
6	Fh	0h	Request power management (regulators, bandgap) to enter Low-Power mode.
7	Fh	1h	- SRAMs enter Low-Power mode (Deep Sleep). - System clocks are gated.
8	Fh	3h	Power domain is placed in Low-Power retention state (Power Down).
9	Fh	7h	Power domain is switched off.
10	Fh	Fh	Regulators are powered off (Deep Power-Down).

19.3.3.2 DMA wakeup

You can configure the DMA to generate a wake-up when a DMA request for configured channel asserts. This is supported when you request the DMA to enter Low-Power mode and retain the DMA state (not in Deep Power-Down).

The DMA wakeup triggers an exit from Low-Power mode for everything except the core, which remains clock gated. Re-enter Low-Power mode after the DMA request negates, and the normal low-power mode entry sequence is followed.

Because a DMA wake-up results in everything except the core from exiting Low-Power mode, you must ensure that other modules not involved in the wakeup remain in a known state. To accomplish this, disable the modules before the initial entry in Low-Power mode or configure the Doze field in selected modules.

If the flash memory is not required during the DMA wakeup, NXP recommends that `FLASHCR[FLASHDOZE] = 1`.

NOTE

If the DMA request does not negate due to the DMA transfer, the chip remains in a higher power state until an interrupt or other wake-up sources can wakeup the core.

An interrupt that occurs during a DMA wakeup causes an immediate exit from Low-Power mode without affecting the DMA transfer.

19.3.3.3 Power domains

CMC configures Low-Power mode of 1 power domain when the core enters a low-power mode with `CKMODE = Fh`. You can configure the different power domains to enter different low-power modes .

NOTE

The MAIN domain `LPMODE` register setting must always be less than or equal to the `LPMODE` register setting for all other power domains.

The power domain controlled by the CMC is MAIN.

Configure all power domains to the same Low-Power mode using [Global Power Mode Control \(GPMCTRL\)](#). Alternatively, configure each `PMCTRL` register to assign an individual low-power mode to each domain.

19.3.3.4 Debug in low-power modes

When the debugger asserts `CDBGPWRUPREQ`, it requests the debug logic to power up and enable the functionality depending on `DBGCTL[SOD]`.

- When `DBGCTL[SOD] = 0`, the core clock remains enabled even when the core is sleeping (`CKMODE = 0h`). `CDBGPWRUPACK` remains asserted.
- When `DBGCTL[SOD] = 1`, ignore the debug request when the core sleeps. `CDBPWRUPQACK` negates when the core is sleeping.

NOTE

Do not attach a debugger when the JTAG/SWD logic is powered down.

19.3.4 Clocks

- The slow bus clock clocks CMC registers and logic.
- `clk_1M` clock clocks the timeout counters.

19.3.5 Reset

This section describes the sources of reset and the different resets that you can generate.

19.3.5.1 Reset sources

This section describes the different reset sources.

Power-on reset (POR)

When you initially apply power to the MCU or the supply voltage is below the POR falling threshold, the POR circuit triggers the POR condition.

The POR condition asserts a cold reset in all power domains. [SRS\[POR\]](#) and [SRS\[VD\]](#) become 1 on a POR condition.

Voltage detect (VD)

The voltage detect monitors enable by default and keeps the MCU in reset until the supply voltage rises above the LVD rising threshold. Whenever the voltage detect monitors are enabled, they trigger a reset condition if the supply voltage is outside the voltage detect trip point.

[SRS\[VD\]](#) becomes 1 on voltage detect condition. The voltage detect monitors assert a cold reset in all power domains.

Wakeup (WAKEUP)

On a wakeup from Deep-Power Down mode, the power management logic triggers a Wake-up reset in the power domains that had powered off.

The wake-up reset condition asserts a cold reset in all power domains that were powered down. The system power domain, including the RESET_b pin, is unaffected by a wake-up from Deep-Power Down mode (unless another reset source triggers the wake-up). [SRS\[WAKEUP\]](#) becomes 1 on a wake-up reset condition.

External pin reset (RESET_b)

The RESET_b pin is a bidirectional open-drain pin with an internal pull-up resistor. The RESET_b pin function depends on the mode:

- During reset, the RESET_b drives low until the MCU completes initialization, at which point the RESET_b pin is released. If the RESET_b pin asserts externally, then the MCU remains in reset until the RESET_b input is pulled high.
- During active and low-power modes, the RESET_b pin can assert externally to force the MCU into the PIN reset condition.

The RESET_b pin implements a digital filter that you can configure to filter out glitches on the RESET_b pin that are less than 1–32 CMC clock cycles. The filter bypasses in low-power modes when you disable the CMC clock.

The PIN reset condition asserts a warm reset in all power domains. [SRS\[PIN\]](#) and [SRS\[WARM\]](#) become 1 on a PIN reset condition.

Debug access port reset (DAP)

Any debug access port that can initiate a reset request from a connected debugger triggers the DAP reset condition.

The DAP reset condition asserts a warm reset in all power domains. [SRS\[DAP\]](#) and [SRS\[WARM\]](#) become 1 on a DAP reset condition.

Reset timeout (RSTACK)

The reset state machine includes a timeout counter that is triggered by the reset state machine not progressing within 65536 cycles of the clk_1M clock. This triggers the RSTACK reset condition.

The RSTACK reset condition asserts a warm reset in all power domains. [SRS\[RSTACK\]](#), [SRS\[FATAL\]](#), and [SRS\[WARM\]](#) become 1 on an RSTACK reset condition.

Low-power timeout (LPACK)

The low-power entry state machine includes a timeout counter that triggers if a module does not acknowledge entry into Low-Power mode after 65536 cycles of the clk_1M clock. This triggers the LPACK reset condition.

The LPACK reset condition asserts a warm reset in all power domains. [SRS\[LPACK\]](#) and [SRS\[WARM\]](#) become 1 on an LPACK reset condition.

System clock generation (SCG)

The system clock generation includes loss of clock and loss of lock monitors that you can configure to generate a reset, this triggers the SCG reset condition.

The SCG reset condition asserts a warm reset in all power domains. [SRS\[SCG\]](#), [SRS\[FATAL\]](#), and [SRS\[WARM\]](#) become 1 on an SCG reset condition.

Windowed watchdog timer 0 (WWDT0)

The windowed watchdog timer monitors the software by expecting periodic refreshing of the watchdog counter. When this does not occur, it triggers the WWDT0 reset condition.

The WWDT0 reset condition asserts a warm reset in all power domains. [SRS\[WWDT0\]](#) and [SRS\[WARM\]](#) become 1 on a WWDT0 reset condition.

Software (SW)

The software can request a system reset by configuring the system reset request in the Cortex-M33 core, this triggers the software reset condition.

The software reset condition asserts a warm reset in all power domains. [SRS\[SW\]](#) and [SRS\[WARM\]](#) become 1 on a software reset condition.

Lockup (LOCKUP)

The Cortex-M33 core enters Lockup state as a result of certain illegal operations, this triggers the LOCKUP reset condition.

The LOCKUP reset condition asserts an MCU reset in all power domains. [SRS\[LOCKUP\]](#) and [SRS\[WARM\]](#) become 1 on a LOCKUP reset condition.

Code watchdog (CDOG)

CDOG module helps protect the integrity of software by detecting unexpected changes (faults) in the code execution flow. CDOG module configures to reset or interrupt the processor core when the module detects a fault.

The CDOG0 reset condition asserts a warm reset in all power domains. [SRS\[CDOG0\]](#) and [SRS\[WARM\]](#) become 1 on a CDOG0 reset condition.

The CDOG1 reset condition asserts a warm reset in all power domains. [SRS\[CDOG1\]](#) and [SRS\[WARM\]](#) become 1 on a CDOG1 reset condition.

JTAG reset (JTAG)

When a JTAG instruction places the chip in reset, it triggers the JTAG reset condition.

The JTAG reset condition asserts a warm reset in all power domains. [SRS\[JTAG\]](#)[SRS\[JTAG\]](#), [SRS\[FATAL\]](#)[SRS\[FATAL\]](#), and [SRS\[WARM\]](#) become 1 on a JTAG reset condition.

Tamper detect (TAMPER)

When a tamper detection module detects a tamper event, it triggers the TAMPER reset condition.

The TAMPER reset condition asserts a warm reset in all power domains. The [SRS\[TAMPER\]](#), [SRS\[FATAL\]](#), and [SRS\[WARM\]](#) become 1 on a TAMPER reset condition.

19.3.5.2 Reset types

This section describes the different resets that you can generate.

Cold reset

Each power domain generates a cold reset to reset the debug logic and mode control logic. The cold reset for each power domain can assert as a result of the following events.

- Initial POR of the chip
- Voltage detect monitor (LVD, for example)
- Power domain wake-up from Deep-Power Down (varies per domain)

A cold reset does not guarantee the contents of on-chip SRAM.

Warm reset

- Cold Reset or any of the remaining warm reset sources generates a warm reset.
- A warm reset resets most of the logic in each power domain.
- Warm resets are divided into fatal reset sources and non-fatal reset sources.

You can configure the non-fatal reset sources to generate an interrupt instead of the warm reset. The warm reset asserts if you can clear the non-fatal reset source (including status flag) within 65536 cycles of the `clk_1M` clock. Non-fatal resets retain the contents of on-chip SRAM.

You cannot configure the fatal reset sources to generate an interrupt and do not guarantee the contents of on-chip SRAM.

19.3.5.3 Reset sequence

Power-on reset

Perform the following steps as part of the POR (or voltage detect monitor) sequence:

1. RESET_b pin drives low and internal reset signals asserted.
2. POR or LVD signals negate and clocks are enabled in their default configuration.
3. Internal reset remains asserted for 8 CMC clock cycles.
4. Internal reset to flash memory and fuse controllers negates and their initialization sequences commence.
5. Initialization sequences for flash memory and fuse complete.
6. Internal trim registers are loaded and RESET_b pin is tri-stated.
7. Reset state machine waits for RESET_b pin input to pull high or drive high externally.
8. Internal reset signals negate.
9. Core exits reset and fetches the initial program counter and stack pointer from ROM.

Deep-power down wake-up

Perform the following steps as part of the deep-power down wake-up sequence:

1. Internal reset signals asserted.
2. Wake-up signal negates and clocks are enabled in their default configuration.

3. Internal reset remains asserted for 8 CMC clock cycles.
4. Internal reset to flash memory and fuse controllers negates and commence their initialization sequences.
5. Initialization sequences for flash memory and fuse complete.
6. Internal trim registers are loaded.
7. Internal reset signals negate.
8. Core exits reset and fetches the initial program counter and stack pointer from ROM.

A wake-up from deep-power down via the RESET_b pin follows the warm reset sequence.

Warm reset

Perform the following steps as part of the warm reset sequence:

1. RESET_b pin drives low and internal reset signals asserted.
2. Clocks are enabled in their default configuration.
3. Internal reset remains asserted for 8 CMC clock cycles.
4. Internal reset to flash memory and fuse controllers negates and commence their initialization sequences.
5. Initialization sequences for flash memory and fuse complete.
6. Internal trim registers are loaded and RESET_b pin is tri-stated.
7. Reset state machine waits for RESET_b pin input to pull high or drive high externally.
8. Internal reset signals negate.
9. Core exits reset and fetches the initial program counter and stack pointer from ROM.

19.3.6 Interrupts

CMC generates a single interrupt, which [System Reset Interrupt Enable \(SRIE\)](#) configures.

19.4 External signals

Table 109. External signals

Signal	Description	Direction
RESET_B	Bidirectional open-drain reset pin with pullup that asserts low during warm reset except when waking up from a low-power mode.	Input or output
ISPMODE_n	The input pin is sampled at the end of the RESET_B assertion and stored in Mode (MR0) .	Input

19.5 Initialization

By default, the digital glitch filter is disabled on RESET_b pin. To enable the filter, configure:

- [RPC\[LPFEN\]](#), [RPC\[FILTEN\]](#), or both.
- [RPC\[FILTCFG\]](#).

19.6 Application information

To configure for Deep-Power Down Low-Power mode entry:

1. Write Fh to [Clock Control \(CKCTRL\)](#)
2. Write 8h to [Power Mode Protection \(PMPROT\)](#)
3. Write Fh to [Global Power Mode Control \(GPMCTRL\)](#)
4. Execute WFI instruction

To configure for Power-Down Low-Power mode entry:

1. Write Fh to [Clock Control \(CKCTRL\)](#)
2. Write 2h to [Power Mode Protection \(PMPROT\)](#)
3. Write 3h to [Global Power Mode Control \(GPMCTRL\)](#)
4. Execute WFI instruction

To configure for Sleep mode entry:

1. Write 0h or 1h to [Clock Control \(CKCTRL\)](#)
2. Execute WFI instruction

To configure for Deep Sleep Low-Power mode entry:

1. Write Fh to [Clock Control \(CKCTRL\)](#)
2. Write 1h to [Power Mode Protection \(PMPROT\)](#)
3. Write 1h to [Global Power Mode Control \(GPMCTRL\)](#)
4. Execute WFI instruction

19.7 Memory map and register descriptions

This section describes the registers in the CMC module.

19.7.1 CMC register descriptions

NOTE

Different CMC registers reset on different reset types.

NOTE

You must read back the last register written to before executing the WFI instruction. This ensures that before the MCU enters the low power mode, all register writes associated with setting up the low power mode are complete, failure to do this may result in the low power mode not being entered correctly.

19.7.1.1 CMC memory map

CMC base address: 4008_B000h

Offset	Register	Width (In bits)	Access	Reset value
0h	Version ID (VERID)	32	R	0300_0000h
10h	Clock Control (CKCTRL)	32	RW	0000_0000h

Table continues on the next page...

Table continued from the previous page...

Offset	Register	Width (In bits)	Access	Reset value
14h	Clock Status (CKSTAT)	32	RW	0000_0000h
18h	Power Mode Protection (PMPROT)	32	RW	0000_0000h
1Ch	Global Power Mode Control (GPMCTRL)	32	RW	0000_0000h
20h	Power Mode Control (PMCTRLMAIN)	32	RW	0000_0000h
80h	System Reset Status (SRS)	32	R	See section
84h	Reset Pin Control (RPC)	32	RW	0000_0000h
88h	Sticky System Reset Status (SSRS)	32	RW	0000_0006h
8Ch	System Reset Interrupt Enable (SRIE)	32	RW	0000_8800h
90h	System Reset Interrupt Flag (SRIF)	32	RW	0000_0000h
A0h	Mode (MR0)	32	RW	0000_0000h
B0h	Force Mode (FM0)	32	RW	0000_0000h
E0h	Flash Control (FLASHCR)	32	RW	0000_0000h
110h	Core Control (CORECTL)	32	RW	0000_0000h
120h	Debug Control (DBGCTL)	32	RW	0000_0000h

19.7.1.2 Version ID (VERID)


Offset

Register	Offset
VERID	0h

Function

Contains version numbers for module design and feature set.

Diagram

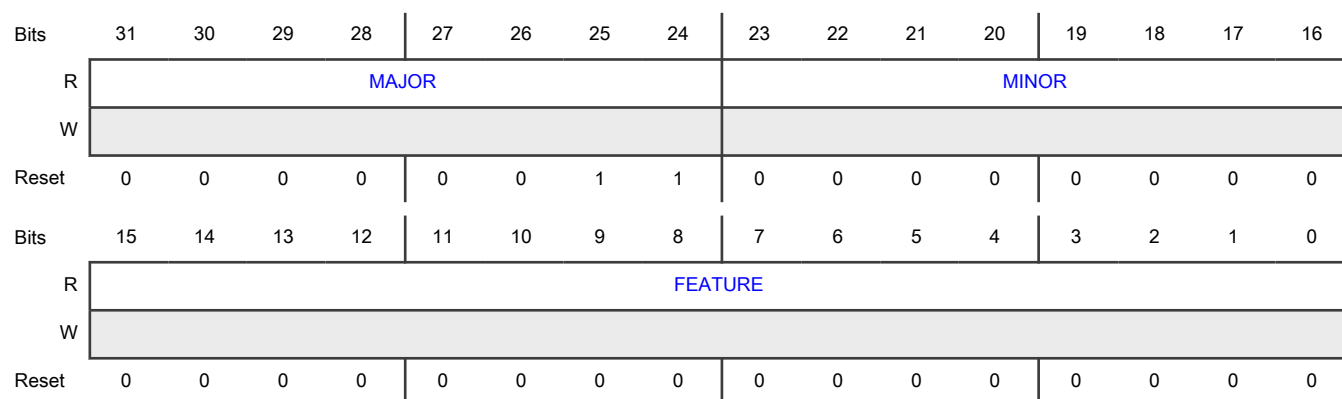

Fields

Field	Function
31-24 MAJOR	Major Version Number Returns the major version number for the module specification.
23-16 MINOR	Minor Version Number Returns the minor version number for the module specification.
15-0 FEATURE	Feature Specification Number Returns the feature set number.

19.7.1.3 Clock Control (CKCTRL)

Offset

Register	Offset
CKCTRL	10h

Function

Configures the amount of clock gating when the core asserts sleeping due to WFI, WFE, or SLEEPONEXIT.

NOTE

This register resets on MAIN warm reset.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0															
W													CKMODE			
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31 LOCK	Lock Locks the register and blocks writes until the next reset.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - Allowed 1b - Blocked
30-4 —	Reserved
3-0 CKMODE	Clocking Mode Configures the amount of clock gating when the core enters a low-power mode because of WFI, WFE or SLEEPONEXIT. Configuring CKMODE > 0 requires the SLEEPDEEP field in the Arm core to become 1. Configuring PMCTRLx[LPMODE] > 0 requires writing Fh to CKMODE. 0000b - Core clock is on 0001b - Core clock is off 1111b - Core, platform, and peripheral clocks are off, and core enters Low-Power mode

19.7.1.4 Clock Status (CKSTAT)

Offset

Register	Offset
CKSTAT	14h

Function

Returns the clock gating status and wake-up source from the previous Low-Power mode entry, provided the core was clock gated. This requires configuring [CKCTRL\[CKMODE\]](#) > 0 and the wake-up event must occur after the core is clock gated. The register contents are only valid when [CKSTAT\[VALID\]](#) = 1.

NOTE

This register resets on MAIN warm reset.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	VALID	0														
W	W1C															
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	WAKEUP								0				CKMODE			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31 VALID	Clock Status Valid Indicates that the core clock was gated since you last wrote 0 to this field. 0b - Core clock not gated 1b - Core clock was gated due to Low-Power mode entry
30-16 —	Reserved
15-8 WAKEUP	Wake-up Source Returns any wake-up sources from the previous Low-Power mode entry. [0] - Wake-up source is reset interrupt or wakeup from Deep Power-Down [1] - Wake-up source is debug request [2] - Wake-up source is interrupt [3] - Wake-up source is DMA wakeup [4] - Wake-up source is WUU request [5] - Wake-up source is reserved [6] - Wake-up source is reserved [7] - Wake-up source is reserved A wakeup from Deep Power-Down writes 1 to WAKEUP[0]. Depending on Low-Power mode, other wake-up bits may not become 1.
7-4 —	Reserved
3-0 CKMODE	Low Power Status Returns the result of the previous Low-Power mode entry. 0000b - Core clock is on 0001b - Core clock is off 1111b - Core, platform, and peripheral clocks are off, and core enters Low-Power mode All other values are reserved.

19.7.1.5 Power Mode Protection (PMPROT)**Offset**

Register	Offset
PMPROT	18h


Function

Provides protection for entry in low-power modes, you must allow a low-power mode before configuring any Power Mode Control register (PMCTRLx) to that mode.

NOTE

This register resets on MAIN warm reset.

Diagram

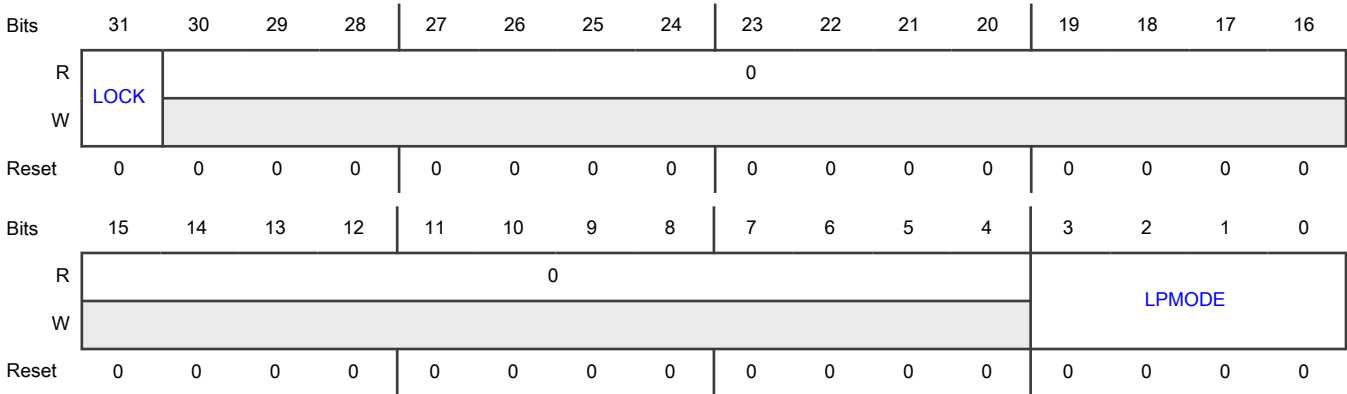

Fields

Field	Function
31 LOCK	Lock Register Locks the register and blocks writes until the next reset. 0b - Allowed 1b - Blocked
30-4 —	Reserved
3-0 LPMODE	Low-Power Mode Bit 0: When set, allows the PMCTRLx[LPM] field to be configured for Deep Sleep. Bit 1: When set, allows the PMCTRLx[LPM] field to be configured for Power Down. Bit 3: When set, allows the PMCTRLx[LPM] field to be configured for Deep Power Down. 0000b - Not allowed 0001b - Allowed 0010b - Allowed 0011b - Allowed 0100b - Allowed 0101b - Allowed 0110b - Allowed

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0111b - Allowed
	1000b - Allowed
	1001b - Allowed
	1010b - Allowed
	1011b - Allowed
	1100b - Allowed
	1101b - Allowed
	1110b - Allowed
	1111b - Allowed

19.7.1.6 Global Power Mode Control (GPMCTRL)

Offset

Register	Offset
GPMCTRL	1Ch

Function

Updates all PMCTRLx registers with the value written.

NOTE
This register resets on MAIN cold reset.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0	0														
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0												0			
W													LPMODE			
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31 —	Reserved
30-4 —	Reserved
3-0 LPMODE	Low-Power Mode Specifies that all PMCTRLx[LPMODE] fields update with the value written.

19.7.1.7 Power Mode Control (PMCTRLMAIN)

Offset

Register	Offset
PMCTRLMAIN	20h

Function

Configures entry into low-power modes for each power domain, provided that the selected power mode is allowed via an appropriate setting of [Power Mode Protection \(PMPROT\)](#), and CKMODE = Fh.

NOTE

This register resets by MAIN cold reset.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0								0							
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R					0											
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-30	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
—	
29-4 —	Reserved
3-0 LPMODE	Low-Power Mode Selects the desired Low-Power mode when a core executes WFI or WFE instruction. Writes to this field are blocked if you have not enabled the protection level using Power Mode Protection (PMPROT). You must not configure this field for the MAIN domain to a lower power mode than any other power domain. NOTE See Power domains section for details on allowed combinations. 0000b - Active/Sleep 0001b - Deep Sleep 0011b - Power Down 0111b - Reserved 1111b - Deep-Power Down

19.7.1.8 System Reset Status (SRS)

Offset

Register	Offset
SRS	80h

Function

Updates on every MAIN warm reset to indicate the type/source of the most recent reset.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	TAMPER	0	0	JTAG	CDOG1	CDOG0	0	0	0	0				0	0	
W																
Reset	u	u	u	u	u	u	u	u	u	u	u	u	u	u	u	u
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	LOCKUP	SW	WWDT0	SCG	LPACK	RSTACK	DAP	PIN	0		FATAL	WARM	0	VD	POR	WAKEUP
W																
Reset	u	u	u	u	u	u	u	u	u	u	u	u	u	u	u	u

Fields

Field	Function
31 TAMPER	Tamper Reset Indicates a tamper detection logic that causes a reset. This is a fatal reset source and SRAM contents are not guaranteed. 0b - Reset not generated 1b - Reset generated
30 —	Reserved
29 —	Reserved
28 JTAG	JTAG System Reset Indicates a JTAG system reset request that causes a reset. This is a fatal reset source and SRAM contents are not guaranteed. 0b - Reset not generated 1b - Reset generated
27 CDOG1	Code Watchdog 1 Reset Indicates the CDOG1 fault that causes a reset. 0b - Reset is not generated 1b - Reset is generated
26 CDOG0	Code Watchdog 0 Reset Indicates the CDOG0 fault that causes a reset. 0b - Reset is not generated 1b - Reset is generated
25 —	Reserved
24 —	Reserved
23 —	Reserved
22-18 —	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
17 —	Reserved
16 —	Reserved
15 LOCKUP	Lockup Reset Indicates the Arm core indication of a LOCKUP event that causes a reset. 0b - Reset not generated 1b - Reset generated
14 SW	Software Reset Indicates a software reset request from the Arm core (SYSRESETREQ) that causes a reset. 0b - Reset not generated 1b - Reset generated
13 WWDT0	Windowed Watchdog 0 Reset Indicates the WWDT 0 timeout that causes a reset. 0b - Reset is not generated 1b - Reset is generated
12 SCG	System Clock Generation Reset Indicates a loss-of-clock or loss-of-lock event in the SCG that causes a reset. This is a fatal reset source and SRAM contents are not guaranteed. 0b - Reset is not generated 1b - Reset is generated
11 LPACK	Low Power Acknowledge Timeout Reset Indicates a timeout in the Low Power Mode entry logic that causes a reset. This timeout is generated if a peripheral does not acknowledge entry into Low-Power mode within 65536 cycles of clk_1M clock. 0b - Reset not generated 1b - Reset generated
10 RSTACK	Reset Timeout Indicates a timeout or other error condition in the system reset generation logic that causes a reset. This is a fatal reset source, and SRAM contents are not guaranteed. 0b - Reset not generated 1b - Reset generated

Table continues on the next page...

Table continued from the previous page...

Field	Function
9 DAP	Debug Access Port Reset Indicates a reset request from a DAP that causes a reset. 0b - Reset was not generated 1b - Reset was generated
8 PIN	Pin Reset Indicates an external assertion of the RESET_b pin that causes a reset. 0b - Reset was not generated 1b - Reset was generated
7-6 —	Reserved
5 FATAL	Fatal Reset Asserts if the last reset source was a fatal reset source. You cannot guarantee SRAM contents following a fatal reset source. 0b - Reset was not generated 1b - Reset was generated
4 WARM	Warm Reset Asserts if the last reset source was a warm reset source. 0b - Reset not generated 1b - Reset generated
3 —	Reserved
2 VD	Voltage Detect Reset Indicates that an enabled voltage detect monitor causes a reset. 0b - Reset not generated 1b - Reset generated
1 POR	Power-on Reset Indicates the POR detection logic that causes a reset. You cannot guarantee SRAM contents following a POR source. 0b - Reset not generated 1b - Reset generated
0	Wake-up Reset

Table continues on the next page...

Table continued from the previous page...

Field	Function
WAKEUP	Indicates a wake-up from Deep-Power Down mode that causes a reset. 0b - Reset not generated 1b - Reset generated

19.7.1.9 Reset Pin Control (RPC)

Offset


Register	Offset
RPC	84h

Function

NOTE

MAIN cold reset resets this register.

Diagram

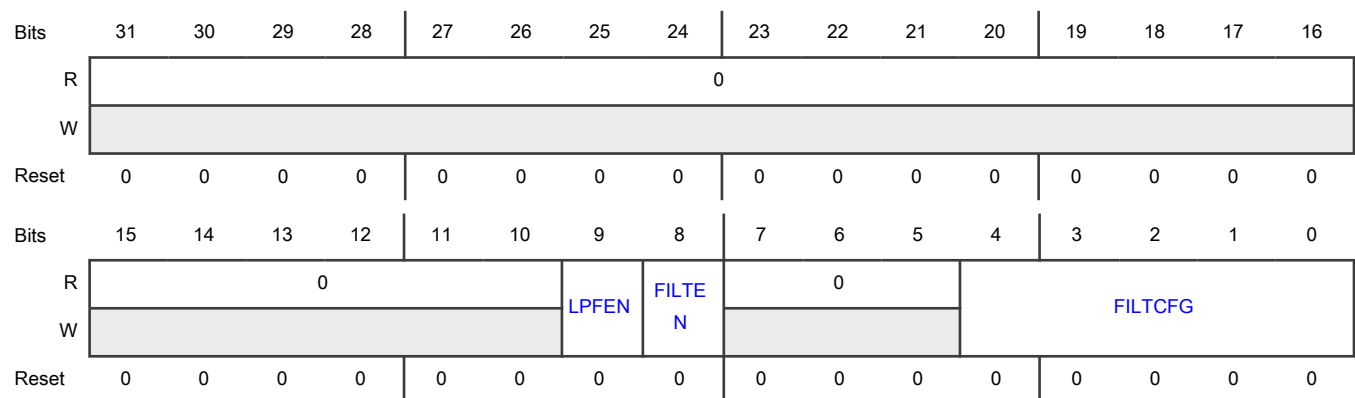

Fields

Field	Function
31-10 —	Reserved
9 LPFEN	Low-Power Filter Enable Enables the low-power reset pin filter in both Active and Low-Power modes when this field = 1. The RESET_b pin must assert for more than three clk_1M clock cycles to always propagate through the filter. A glitch less than two clk_1M clock cycles never propagates through the filter.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - Disables 1b - Enables
8 FILTEN	Filter Enable Enables the slow clock reset pin filter in Active modes. The RESET_b pin must assert for more than FILTCFG + 1 slow system clock cycles to always propagate through the filter. A glitch less than FILTCFG slow system clock cycles never propagates through the filter. If RPC[LPFEN] also becomes 1, then the filters operate in series. 0b - Disables 1b - Enables
7-5 —	Reserved
4-0 FILTCFG	Reset Filter Configuration Configures the reset pin filter's width from 1 to 32 slow system clock cycles.

19.7.1.10 Sticky System Reset Status (SSRS)

Offset

Register	Offset
SSRS	88h

Function

Stores all sources of system reset that has generated a system reset since the last MAIN cold reset and that you have not cleared. SSRS does not update following a core software reset.

NOTE

This register resets on MAIN cold reset.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	TAMP ER	0	0	JTAG	CDOG 1	CDOG 0	0	0	0	0				0	0	
W	W1C			W1C	W1C	W1C										
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	LOCK UP	SW	WWD T0	SCG	LPAC K	RSTA CK	DAP	PIN	0		FATAL	WARM	0	VD	POR	WAKE UP
W	W1C	W1C	W1C	W1C	W1C	W1C	W1C	W1C			W1C	W1C			W1C	W1C
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1	0

Fields

Field	Function
31 TAMPER	Tamper Reset Indicates a tamper detection that causes a reset. This is a fatal reset source and SRAM contents are not guaranteed. 0b - Reset not generated 1b - Reset generated
30 —	Reserved
29 —	Reserved
28 JTAG	JTAG System Reset Indicates a JTAG system reset that causes a reset. This is a fatal reset source and SRAM contents are not guaranteed. 0b - Reset not generated 1b - Reset generated
27 CDOG1	Code Watchdog 1 Reset Indicates a CDOG1 fault that causes a reset. 0b - Reset is not generated 1b - Reset is generated
26 CDOG0	Code Watchdog 0 Reset Indicates a CDOG0 fault that causes a reset.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - Reset is not generated 1b - Reset is generated
25 —	Reserved
24 —	Reserved
23 —	Reserved
22-18 —	Reserved
17 —	Reserved
16 —	Reserved
15 LOCKUP	Lockup Reset Indicates the core lockup that causes a reset. 0b - Reset not generated 1b - Reset generated
14 SW	Software Reset Indicates the software request from the Arm core (SYSRESETREQ) that causes a reset. 0b - Reset not generated 1b - Reset generated
13 WWDT0	Windowed Watchdog 0 Reset Indicates a windowed watchDog timeout that causes a reset. 0b - Reset is not generated 1b - Reset is generated
12 SCG	System Clock Generation Reset Indicates an SCG loss of lock or loss of clock that causes a reset. This is a fatal reset source and SRAM contents are not guaranteed. 0b - Reset is not generated

Table continues on the next page...

Table continued from the previous page...

Field	Function
	1b - Reset is generated
11 LPACK	Low Power Acknowledge Timeout Reset Indicates a low power acknowledge timeout that causes a reset. 0b - Reset not generated 1b - Reset generated
10 RSTACK	Reset Timeout Indicates a reset controller timeout that causes a reset. This is a fatal reset source and SRAM contents are not guaranteed. 0b - Reset not generated 1b - Reset generated
9 DAP	DAP Reset Indicates a DAP reset request that causes a reset. 0b - Reset not generated 1b - Reset generated
8 PIN	Pin Reset Indicates a RESET_B pin that causes a reset. 0b - Reset not generated 1b - Reset generated
7-6 —	Reserved
5 FATAL	Fatal Reset Indicates a fatal reset source that causes a reset. 0b - Reset was not generated 1b - Reset was generated
4 WARM	Warm Reset Indicates a warm reset source that causes a reset. 0b - Reset not generated 1b - Reset generated
3 —	Reserved
2	Voltage Detect Reset

Table continues on the next page...

Table continued from the previous page...

Field	Function
VD	Indicates that an enabled voltage detect monitor causes a reset. 0b - Reset not generated 1b - Reset generated
1 POR	Power-on Reset Indicates the POR that causes a reset. 0b - Reset not generated 1b - Reset generated
0 WAKEUP	Wake-up Reset Indicates the wake-up from Deep-Power Down mode that causes a reset. 0b - Reset not generated 1b - Reset generated

19.7.1.11 System Reset Interrupt Enable (SRIE)

Offset

Register	Offset
SRIE	8Ch

Function

Delays the assertion of a system reset for 65538 cycles of the clk_1M clock when an interrupt is generated. This allows you to perform a graceful shutdown or to abort the warm reset provided you can clear the pending reset source by resetting the source and then clearing the pending flag. This feature cannot delay a cold or fatal warm reset source. [System Reset Status \(SRS\)](#) updates after the warm reset occurs.

The reset interrupt is not supported in Deep-Power Down mode.

NOTE

This register is reset on MAIN Cold Reset.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0				CDOG	CDOG	0	0	0	0				0	0	
W					1	0										
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	LOCK	SW	WWDT	SCG	LPAC	0	DAP	PIN	0							
W	UP		0		K											
Reset	1	0	0	0	1	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-28 —	Reserved
27 CDOG1	Code Watchdog 1 Reset 0b - Interrupt disabled 1b - Interrupt enabled
26 CDOG0	Code Watchdog 0 Reset 0b - Interrupt disabled 1b - Interrupt enabled
25 —	Reserved
24 —	Reserved
23 —	Reserved
22-18 —	Reserved
17 —	Reserved
16 —	Reserved
15	Lockup Reset

Table continues on the next page...

Table continued from the previous page...

Field	Function
LOCKUP	NOTE A core in the lockup state cannot service interrupts. 0b - Interrupt disabled 1b - Interrupt enabled
14 SW	Software Reset 0b - Interrupt disabled 1b - Interrupt enabled
13 WWDTO	Windowed Watchdog 0 Reset 0b - Interrupt disabled 1b - Interrupt enabled
12 SCG	System Clock Generation Reset 0b - Interrupt disabled 1b - Interrupt enabled
11 LPACK	Low Power Acknowledge Timeout Reset 0b - Interrupt disabled 1b - Interrupt enabled
10 —	Reserved
9 DAP	DAP Reset 0b - Interrupt disabled 1b - Interrupt enabled
8 PIN	Pin Reset 0b - Interrupt disabled 1b - Interrupt enabled
7-0 —	Reserved

19.7.1.12 System Reset Interrupt Flag (SRIF)

Offset

Register	Offset
SRIF	90h

Function

Returns the source of the reset interrupt. You can clear the pending reset source by resetting the source and then clearing the pending flag.

NOTE

This register resets on MAIN warm reset.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0				CDOG 1	CDOG 0	0	0	0	0				0	0	
W					W1C	W1C										
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	LOCK UP	SW	WWDT 0	0	LPAC K	0	DAP	PIN	0							
W	W1C	W1C	W1C		W1C		W1C	W1C								
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-28 —	Reserved
27 CDOG1	Code Watchdog 1 Reset 0b - Reset source not pending 1b - Reset source pending
26 CDOG0	Code Watchdog 0 Reset 0b - Reset source not pending 1b - Reset source pending
25 —	Reserved
24 —	Reserved
23 —	Reserved
22-18	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
—	
17 —	Reserved
16 —	Reserved
15 LOCKUP	Lockup Reset 0b - Reset source not pending 1b - Reset source pending
14 SW	Software Reset 0b - Reset source not pending 1b - Reset source pending
13 WWDT0	Windowed Watchdog 0 Reset 0b - Reset source not pending 1b - Reset source pending
12 —	Reserved
11 LPACK	Low Power Acknowledge Timeout Reset 0b - Reset source not pending 1b - Reset source pending
10 —	Reserved
9 DAP	DAP Reset 0b - Reset source not pending 1b - Reset source pending
8 PIN	Pin Reset 0b - Reset source not pending 1b - Reset source pending
7-0 —	Reserved

19.7.1.13 Mode (MR0)

Offset

Register	Offset
MR0	A0h

Function

Contains the state of the boot mode pins sampled at the end of the reset.

NOTE

This register resets on MAIN warm reset, and the reset value may vary depending on the pin state.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0															ISPMO DE...
W																W1C
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-1 —	Reserved
0 ISPMODE_n	In System Programming Mode Returns the logic state of the ISPMODE_n pin on the last negation of the RESET_b pin.

19.7.1.14 Force Mode (FM0)

Offset


Register	Offset
FM0	B0h

Function

Contains registers that override the state of the boot mode pins.

NOTE
This register resets on MAIN cold reset.

Diagram

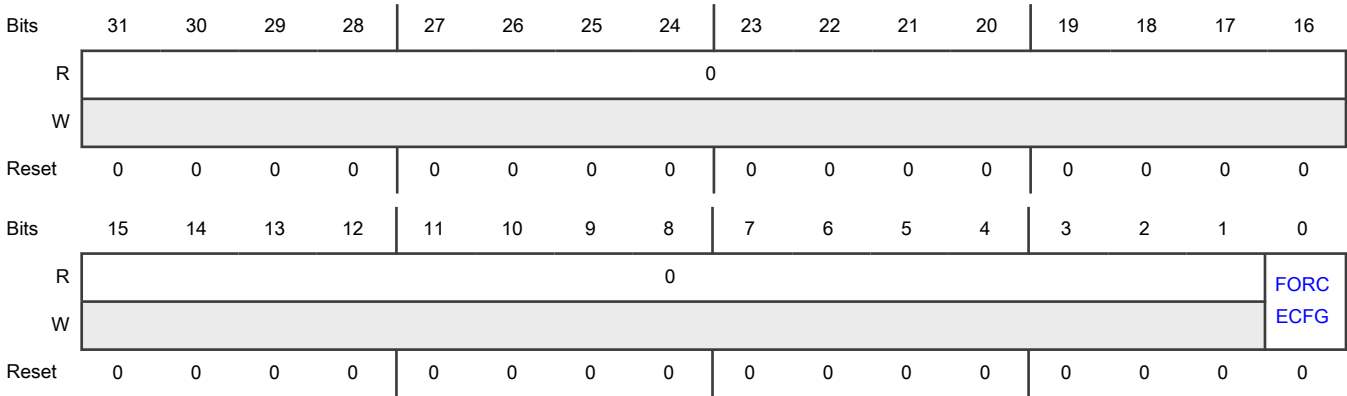

Fields

Field	Function
31-1 —	Reserved
0 FORCECFG	Boot Configuration Forces the corresponding field in Mode (MR0) to assert on next system reset. 0b - No effect 1b - Asserts

19.7.1.15 Flash Control (FLASHCR)

Offset


Register	Offset
FLASHCR	E0h

Function

Controls Low-Power mode of the on-chip flash memory.

NOTE
This register resets on MAIN warm reset.

Diagram

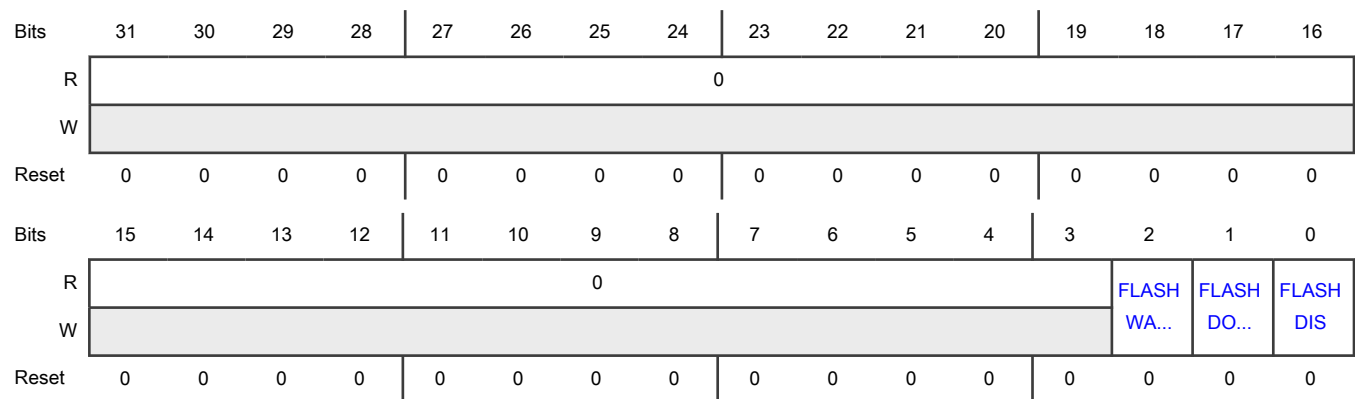

Fields

Field	Function
31-3 —	Reserved
2 FLASHWAKE	Flash Wake Specifies that when this field becomes 1, an attempt to access the flash memory when it is in Low-Power state because of FLASHCR[FLASHDIS] or FLASHCR[FLASHDOZE] , causes the flash memory to exit Low-Power state for the duration of the flash memory access. 0b - No effect 1b - Flash memory is not disabled during flash memory accesses
1 FLASHDOZE	Flash Doze Disables flash memory accesses and places flash memory in Low-Power state whenever the core clock is gated (CKMODE > 0) because of execution of WFI, WFE, or SLEEPONEXIT. Other bus masters that attempt to access the flash memory stalls until the core is no longer sleeping. 0b - No effect 1b - Flash memory is disabled when core is sleeping (CKMODE > 0)
0 FLASHDIS	Flash Disable Places flash memory in Low-Power state when this field becomes 1. Relocate the interrupts out of flash memory before disabling it. 0b - No effect 1b - Flash memory is disabled

19.7.1.16 Core Control (CORECTL)

Offset

Register	Offset
CORECTL	110h


Function

Configures options for the core.

NOTE

This register resets on MAIN warm reset.

Diagram

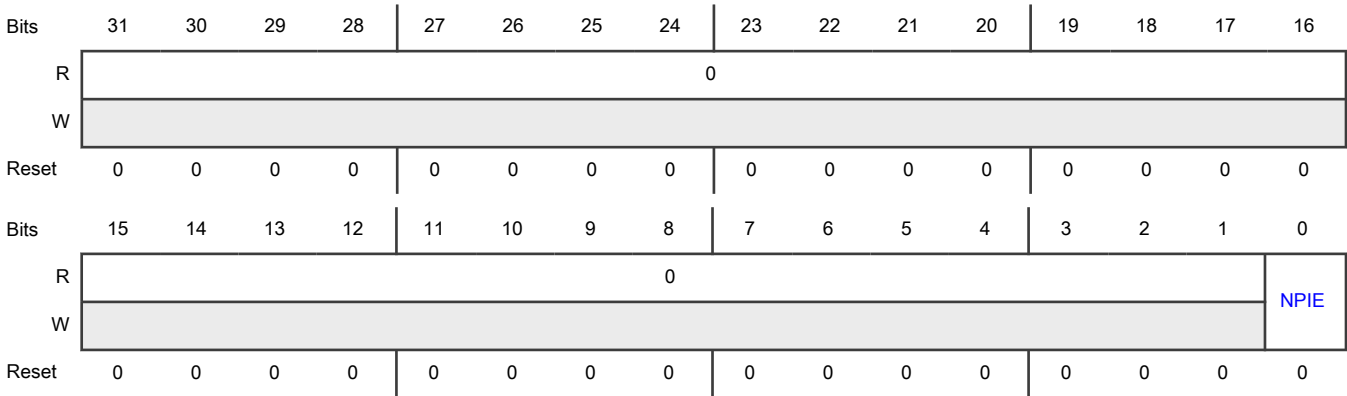

Fields

Field	Function
31-1 —	Reserved
0 NP IE	Non-maskable Pin Interrupt Enable Enables or disables the pin interrupt. You can write to this field only when NP IE = 0. 0b - Disables 1b - Enables

19.7.1.17 Debug Control (DBGCTL)

Offset

Register	Offset
DBGCTL	120h


Function

Configures options for debug.

NOTE

This register resets on MAIN cold reset.

Diagram

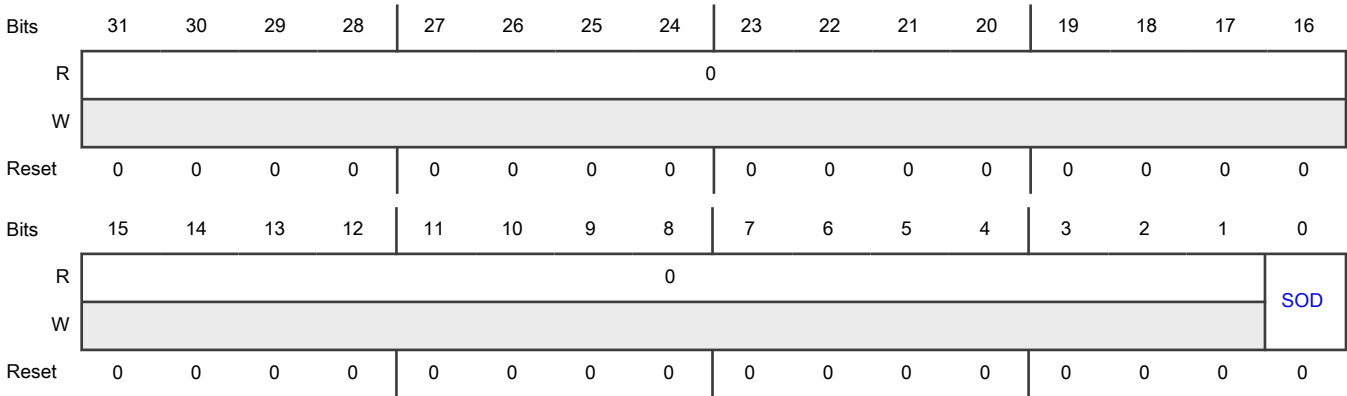

Fields

Field	Function
31-1 —	Reserved
0 SOD	Sleep Or Debug Configures whether the debug remains enabled when core sleeps. 0b - Remains enabled 1b - Disabled

Chapter 20

Reset

20.1 Reset sources

The following reset sources exist in this chip:

Table 110. Reset sources

Reset source	Description
Power	System Power-On Reset (POR)
	System Low-Voltage Detect (LVD)
	System High-Voltage Detect (HVD)
External	Wake Up Unit (WUU)
	External pin reset (RESET_b)
Internal	• Code Watchdog reset • Watchdog (WDOG) reset • Software (SW) reset • System Clock Generator (SCG-lite) Loss of Clock • Reset Acknowledge timeout (RSTACK) • Low Power Acknowledge (LPACK) • Core Lockup (LOCKUP) • Debug Mailbox • Joint Test Action Group (JTAG)

Each system reset source has a corresponding bit that is maintained in the System Reset Status register through reset. This information can be used to take appropriate action when coming out of a reset.

20.2 Power reset sources

To ensure predictable operation of the chip, the supply voltages must remain in their specified ranges during execution. Because this is not possible during power-up and power-down, the chip implements multiple voltage monitors to detect when the supply is outside an acceptable range. When this occurs, the voltage monitor asserts a reset to halt execution and prevent unexpected behavior. The voltage monitors detect power-on events as well as low and high voltage events.

20.2.1 POR Reset

The system domain implements a “POR Only Reset (POR)” which only asserts on VDD_SYS analog POR. This reset source is only used for resetting the registers used by the LVD/HVD detectors. The POR voltage monitor is used to ensure that the voltage applied to the system is high enough for other analog modules such as the bias circuits and low voltage monitors to operate correctly. When voltage is initially applied to the chip or when the supply voltage drops below the POR falling threshold, the POR monitor triggers the POR reset condition to the chip.

The POR reset condition asserts POR reset to all power domains. A POR reset sets the appropriate bits in the CMC registers so that software can determine that a POR reset has occurred. See [Block diagram](#).

20.2.2 Low-Voltage Detect (LVD)

The LVD monitors are used to ensure that the voltage supplies to the device are high enough for the logic and memories using those power supplies to operate correctly. When voltage is initially applied to the device, the POR voltage monitor holds the LVD monitors in reset until the voltages are high enough. The LVD monitors continue to hold the device in reset until all monitoring voltages have risen above the respective default LVD Low thresholds (VLVDL). The LVD monitor is enabled by default.

When enabled, the LVD monitor generates a reset when the voltage drops below the V_{LVD} threshold. The voltage threshold at which the LVD reset asserts is programmable. This ensures that the chip halts operation and remains in reset while the monitored voltage is not within the desired range.

The LVD monitors are available in the Active, Sleep, and Deep Sleep modes and are disabled in Deep Power Down modes. See [Module operation in low power modes](#) for the available modes.

The individual LVD monitor resets are combined into a single LVD reset trigger to the Core Mode Controller (CMC). The LVD reset condition asserts a reset to all power domains with only the POR/LVD/HVD detection logic remaining operational. A LVD reset will set the appropriate bits in the CMC registers so that software can determine that a LVD reset has occurred.

20.2.3 High-Voltage Detect (HVD)

The HVD monitors are used to ensure that the voltage supplies to the device are within operation range for the logic and memories using those power supplies. The HVD monitor is disabled by default, but when the HVD circuit is enabled, the HVD monitor will generate a reset when the voltage rises above the VHVDL threshold. The voltage threshold at which the HVD reset asserts is programmable. This ensures that the device halts operation and remains in reset while the monitored voltage is not within the desired range.

The HVD monitors are available in the Active, Sleep, and Deep Sleep modes. The HVD monitors are disabled in Deep Power Down modes.

The individual HVD monitor resets are combined into a single HVD reset trigger to the Core Mode Controller (CMC). The HVD reset condition asserts a reset to all power domains with only the POR/LVD/HVD detection logic remaining operational. A HVD reset is combined with LVD reset, and will set the appropriate bits in the CMC registers so that software can determine that a HVD reset has occurred.

20.3 External reset sources

External resets are provided so that the chip can be reset or wake up from very low power states. This allows the chip to start at the correct time from a known state.

20.3.1 External pin reset (RESET_b)

The RESET_b pin is a bi-directional open-drain pin with internal pull-up resistor. The RESET_b pin is functional in two modes:

- During active and low power modes, the RESET_b pin can be asserted externally to force the chip into Pin reset condition.
- During reset, the RESET_b drives low until the chip has completed hardware initialization, at which point the RESET_b pin is released. If the RESET_b pin is asserted externally, then the chip will remain in reset until the RESET_b input is pulled high.

The RESET_b pin implements a digital filter that software can configure to filter out glitches on the RESET_b pin that are less than 1-32 CMC clock cycles. The filter is bypassed in low power modes when the CMC clock is disabled.

The RESET_b is multiplexed on P1_29 pin on this device. RESET_b is the default function of this GPIO pin. Asserting RESET_b wakes the device from any mode.

The PIN reset condition triggers the CMC to assert a Warm reset to all power domains. A Pin reset sets the appropriate fields in the CMC registers so that software can determine that a Pin reset has occurred.

20.3.2 Wake-up (WAKEUP)

The Wake-Up Unit (WUU) provides for a number of external pins and on-chip peripherals to wake the chip from Deep Power Down mode. See the [WUU](#) chapter for a list of external and internal reset sources connected to the WUU.

On a wakeup from Deep Power Down mode, the power management logic triggers a WAKEUP reset in the power domains that had been powered off.

The WAKEUP reset condition triggers the CMC to assert a POR reset to the power domains that were powered down. The system voltage domain is not affected by a WAKEUP reset. A WAKEUP reset sets the appropriate fields in the CMC registers so that software can determine that a WAKEUP reset has occurred.

20.4 Internal reset sources

Internal resets are provided so that the device can be reset when certain erroneous conditions are detected. This allows the device to recover from the erroneous conditions and restart from a known state.

20.4.1 Code Watchdog reset

The Code Watchdog Timer (CDOG) module helps protect the integrity of software by detecting unexpected changes (faults) in code execution flow. The CDOG module can be configured to reset or interrupt the processor core when the module detects a fault.

The CDOG reset condition triggers the Core Mode Controller (CMC) to assert a WARM reset to all power domains. A CDOG reset sets the appropriate bits in the CMC registers so that software can determine that a WDOG reset has occurred.

20.4.2 Windowed Watchdog timer (WDOG) reset

The WDOG reset is generated by the WWDT module on the chip.

The WWDT monitors the operation of the system by receiving periodic communication from the software. This communication is generally known as servicing or refreshing the WDOG. If this periodic servicing does not occur, then the Watchdog triggers a WDOG reset condition.

The WDOG reset condition triggers the CMC to assert a WARM reset to all power domains. A WDOG reset sets the appropriate fields in the CMC registers so that software can determine that a WDOG reset has occurred.

20.4.3 Software (SW) reset

During execution, if the software detects erroneous operation, the software can initiate a reset to restart the chip from a known state.

The SW reset condition, which is generated by SYSRESETREQ, triggers the CMC to assert a WARM reset to all power domains. A SW reset sets the appropriate fields in the CMC registers so that software can determine that a SW reset has occurred. For details, refer System Reset Status Register (SRS) in the [CMC](#) chapter.

20.4.4 System Clock Generation (SCG)

The SCG module contains a clock monitor, which, if enabled, detects a loss of the external clock. A loss of external clock triggers the SCG reset condition.

The SCG reset condition asserts a WARM reset in all power domains. The CMC_SRS[SCG] and CMC_SRS[WARM] status bits are set on a SCG reset condition.

For details on enabling the clock monitor, see the [SCG](#) chapter. To prevent unexpected reset events, clock monitors must be disabled before entering any low-power modes that the external clocks are not present.

20.4.5 Reset Acknowledge timeout (RSTACK)

The reset state machine includes a timeout counter that is triggered by the reset state machine not progressing within 65536 cycles of the clk_1m clock, which triggers the RSTACK reset condition.

The RSTACK reset condition triggers the CMC to assert a WARM reset to all power domains. An RSTACK reset sets the appropriate fields in the CMC registers so that software can determine that an RSTACK reset has occurred.

20.4.6 Low Power Acknowledge timeout (LPACK)

The low power entry state machine includes a timeout counter that is triggered if a module does not acknowledge entry into a low power mode after 65536 cycles of the clk_1m clock; this triggers the LPACK reset condition.

The LPACK reset condition triggers the CMC to assert a WARM reset to all power domains. An LPACK reset sets the appropriate fields in the CMC registers so that software can determine that an LPACK reset has occurred.

20.4.7 Lock up (LOCKUP)

The Cortex-M33 core enters the lockup state as a result of certain illegal operations, which triggers the LOCKUP reset condition.

The LOCKUP reset condition triggers the CMC to assert a WARM reset to all power domains. A LOCKUP reset sets the appropriate fields in the CMC registers so that software can determine that a LOCKUP reset has occurred.

20.4.8 Debug Mailbox (DM)

Debug Mailbox (ISP-AP) can initiate a reset request from a connected debugger. This triggers the debug mailbox reset condition.

The DM reset condition triggers the CMC to assert a WARM reset to all power domains. A DM reset sets the appropriate fields in the CMC registers so that software can determine that a DM reset has occurred.

20.4.9 JTAG

Whenever a JTAG instruction places the chip in reset, it triggers the JTAG reset condition.

The JTAG reset condition triggers the CMC to assert a WARM reset to all power domains. A JTAG reset sets the appropriate bits in the CMC registers so that software can determine that a JTAG reset has occurred.

20.5 Reset type

This section describes the different resets that can be generated on this chip and their respective reset sequences. Reset conditions on this chip are categorized into two types, Cold and Warm resets.

20.5.1 Cold reset

A cold reset is a reset that only asserts when a power domain is powered up (Power On Reset, Power Down wakeup, etc) or one of the supply voltages is not valid (LVD, HVD, supply glitch detect). For simplicity, all LVD/HVD assert the Cold Reset for all power domains. Each power domain has its own "Cold Reset" which is used by any logic in that domain that needs a reset that does not assert on a warm reset source. The system domain also implements a "POR Only Reset" which only asserts on VDD_SYS analog POR. This reset source is only used for resetting the registers used by the LVD/HVD detectors. A POR does not guarantee the contents of on-chip SRAM, except for a Deep Power Down wakeup and then only for the SRAM that is configured to retain state.

20.5.1.1 POR reset sequence

The following steps are performed as part of the POR (or LVD/HVD) sequence:

1. RESET_b pin is driven low and internal reset signals assert.
2. POR and LVD signals negate and clocks are enabled in their default configuration.
3. Internal reset remains asserted for 32 clock cycles.
4. Internal reset to Flash and Fuse controller negate and their initialization sequences commence.
5. Initialization sequences for Flash and Fuse complete.
6. Internal trim registers are loaded and RESET_b pin is tri-stated.
7. Reset state machine waits for RESET_b pin input to pull high or drive high externally.
8. Internal reset signals negate.
9. Core exits reset and fetches the initial program counter and stack pointer from Boot ROM.

When the chip wakes up from Deep Power Down, the reset sequence is slightly different from the POR reset sequence. They are described in the subsequent sections.

20.5.1.2 Deep Power Down (DPD) reset sequence

The following steps are performed as part of the Deep Power Down wakeup sequence:

1. Internal reset signals assert.
2. Wakeup signal negates and clocks are enabled in their default configuration.
3. Internal reset remains asserted for 32 clock cycles.
4. Internal reset to Flash and Fuse controller negate and their initialization sequences commence.
5. Initialization sequences for Flash and Fuse complete.
6. Internal trim registers are loaded.
7. Internal reset signals negate.
8. Core exits reset and fetches the initial program counter and stack pointer from Boot ROM.

The RESET_b pin is not driven low by a Deep Power Down reset sequence unless the RESET_b pin was used as the wake up source.

A wakeup from Deep Power Down via the RESET_b pin will follow the warm reset sequence.

20.5.2 Warm reset

A warm reset is a reset that asserts on either:

- Cold Reset for that power down
- Any of the warm reset sources

Any of the warm reset sources will trigger a warm reset for every power domain. An “early” warm reset is generated for some of the power domain, this reset asserts at the same time as the normal reset but negates early to allow processes that need to operate during reset to complete. This includes the MSF loading of IFR trim data.

A WARM reset re-initializes the chip to a known state once it has already been running for a period of time.

A WARM reset resets most of the logic in each power domain. Warm resets are divided into fatal reset sources and non-fatal reset sources. See the following table to know which CMC reset sources are fatal/non-fatal. Also see [CMC chapter](#) for details..

CMC reset source	Fatal Reset
Reset pin	N
Debug AP (debug mailbox)	N
Reset Monitor	Y
Low Power Monitor	N
Loss of Clock / Lock	N
WDOG0 reset	N
CM33 reset request	N
CM33 lockup	N
Code WDG0 reset	N
JTAG boundary scan reset	Y

Non-fatal reset sources can be configured to generate an interrupt instead of the WARM reset. If software can clear the non-fatal reset source (including status flag) within 64 ms then the WARM reset is averted. Non-fatal resets retain the contents of on-chip SRAM.

Fatal reset sources cannot be configured to generate an interrupt, and do not guarantee the contents of on-chip SRAM.

The following steps are performed as part of the warm reset sequence:

1. RESET_b pin drives low and internal reset signals assert.
2. Clocks are enabled in their default configuration.
3. Internal reset remains asserted for 32 clock cycles.
4. Internal reset to Flash and Fuse controller negate and their initialization sequences commence.
5. Initialization sequences for Flash and Fuse complete.
6. Internal trim registers are loaded and RESET_b pin is tri-stated.
7. Reset state machine waits for RESET_b pin input to pull high or drive high externally.
8. Internal reset signals negate.

Core exits reset and fetches the initial program counter and stack pointer from Boot ROM.

20.5.3 Peripheral SW reset

Peripherals can be reset by SW. The chip implements Peripheral reset control registers in the System Controller (SYSCON) chapter.

Chapter 21 System Boot

21.1 System Boot ROM

21.2 Boot ROM

This architecture specification defines the structure and flow of the system boot ROM and its interaction with the extended bootloader on IFR0.

21.2.1 Overview

ROM on this chip only supports on-chip FLASH image boot, no external memory boot.

On this device, there are two software, one software is boot ROM, located on ROM memory, second software is called extended bootloader, which located on IFR0. List on [Table 111](#).

Table 111. On chip software

Term	Definition
Boot ROM (software)	In the context of this document, “Boot ROM” is the piece of software present in ROM memory implementing features explained throughout this document.
Extended Bootloader (Software)	In the context of this document, “Extended Bootloader” is the piece of software present in IFR0 memory implementing features explained throughout this document. IFR0 (32 KB)

ROM working with extended bootloader takes responsibility for boot flow.

Boot related parameters are in Customer Manufacturing/Factory Programming Area (CMPA), and ROM will use some settings on this field to update the booting options.

NOTE

MCX A345 and A346 series does not support USB ISP feature. Please ignore the USB information in this chapter.


21.2.2 Features

The main features of the Boot ROM and extended bootloader (32 KB) include:

- Check lifecycle, set Read Out Protection (ROP).
- Enable/disable debug port per lifecycle.
- Set ROM hidden per lifecycle.
- Handling debug mailbox commands, but available commands sets are per lifecycle.
- Handling ISP (In-System Programming) commands, but available commands sets are per lifecycle.
- Provide Flash API
- Support Flash swap
- Only support ISP boot, not support master boot

21.2.3 Functional description

21.2.3.1 Software block diagram

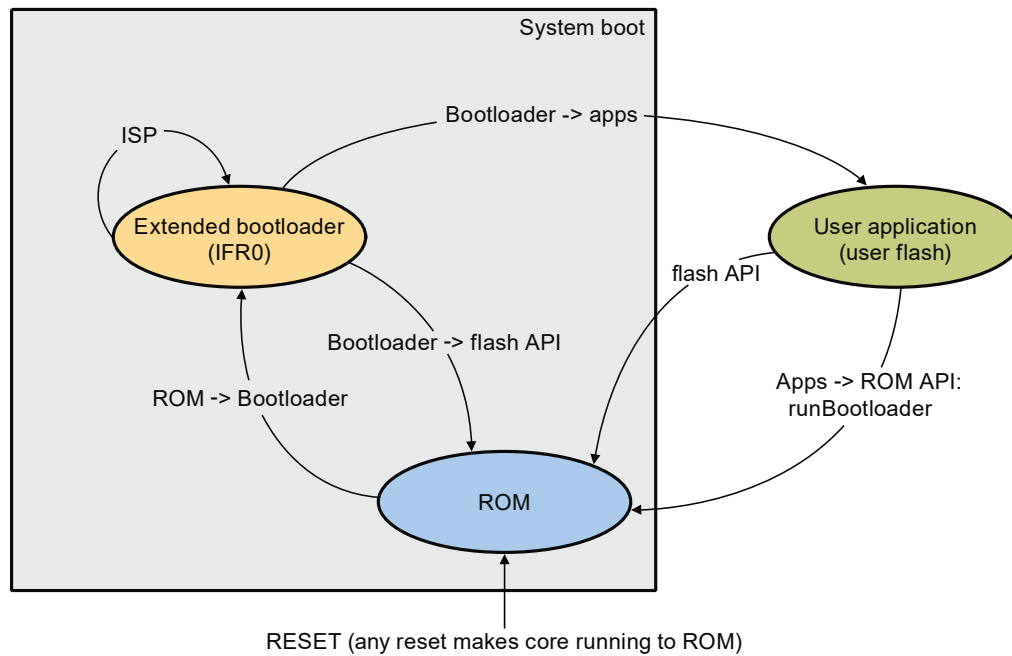

21.2.3.2 Boot ROM

After any reset, including POR reset and warm reset sequence, CPU always runs to boot ROM. The main functions of boot ROM are:

- Check lifecycle,
- Process mailbox request through debug access port
- Configure the GLIKEY and MBC
- Run image integrity check based on wakeup source
- Before exit to extended bootloader (on IFR0), hidden critical sections
- ROM provide flash driver API to user

ROM memory starts at 0x0300_0000.


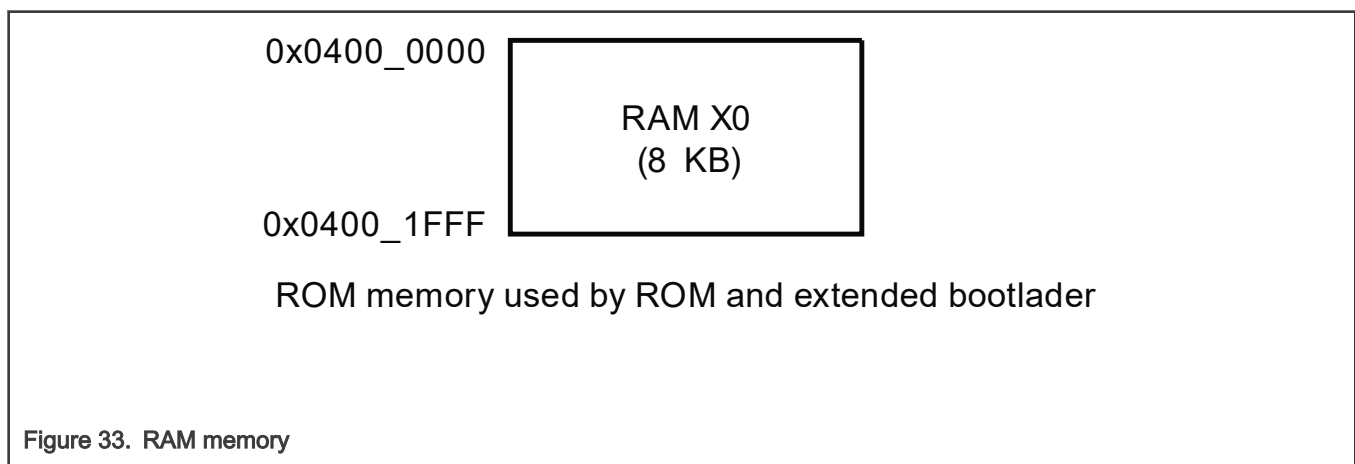


Figure 33. RAM memory

21.2.3.3 Extended bootloader


The extended bootloader is the secondary bootloader, located in IFRO, with a size of 32KB. It checks configuration, enables booting interfaces, and performs ISP commands, among other tasks. Please see “Extended Bootloader Specifications for more details.

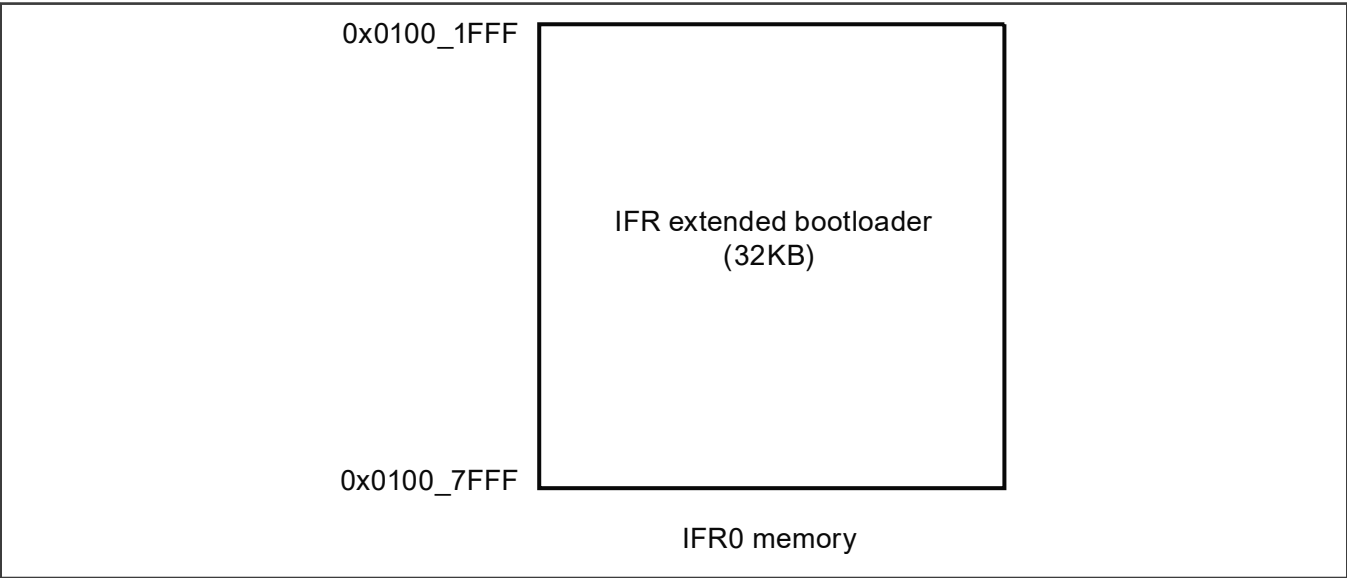

21.2.3.4 User Application

The user application is located in the main flash region. It can call the flash driver API provided by ROM. Secure boot is not supported by this device, so only a plain image or a CRC32 image is supported by the bootloader. Verification of the CRC32 checksum is performed only if the image indicates a valid image type at offset 0x24 (reserved words of the vector table).

User image structure:

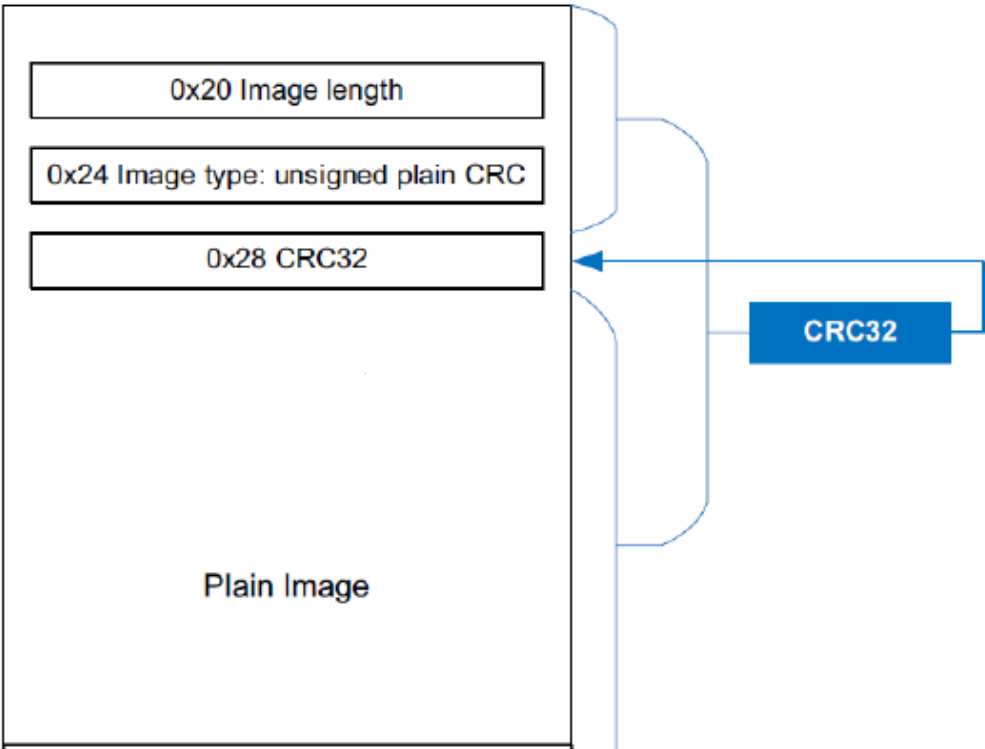

21.2.3.5 User Image Header

Table 112.

Offset	Size in bytes	Symbol	Description
0x00	4	Initial SP	Stack pointer
0x04	4	Initial PC	The application first execution instruction
0x08	24	Vector table	Cortex-M33 Vector table entries
0x20	4	Image length	The length of the current image
0x24	4	Image type	Image Type: Bit [7:0]: - 0x0, plain image - 0x2, plain image with CRC - 0x4, signed image - 0x5, plain image with CRC Load_to_ram image: image has the non-zero image_load_address and image_length in the image header Other values are reserved Bit[10] – Image version included in Image Type [31:16]: 0 – Image version is not in the Image Type 1 – Image version is included in the Image Type Bit[31:16] – Image version (for on chip flash) when bit[10] is set
0x28	4	offsetToExtendedHeader	Offset to extended header For a signed image (Image Type = 0x04), this is offset to the certificate header block For a CRC image (Image Type = 0x2 or 0x5), this is the CRC checksum value
0x2C	8	Vector table	Cortex-M33 Vector table entries
0x34	4	ImageExecutionAddress	The execution address of the image Set 0 if image type is XIP Set to actual image execution address if the image type is load to RAM
0x38		Vector table	Cortex-M33 Vector table entries

21.2.4 Boot pins

Table below shows the ISP pin assignments and is the default assignment used by extend-bootloader. However they can be changed in the CMPA settings, more details, please refer to IFR map.

Table 113. Boot ROM pin assignments

ISP pin	Port pin assignment
ISPMODE_N	P3_29
	P0_6
LPUART ISP pin	
LPUART, RX	P2_3
LPUART, TX	P2_2
LPI2C ISP pin	
LPI2C_SDA	P1_8
LPI2C_SCL	P1_9
LPSPI ISP pin	
LPSPI_SDO	P1_0
LPSPI_SCK	P1_1
LPSPI_SDI	P1_2
LPSPI_PCS	P1_3
USB FS ISP mode	
USB0_DM	
USB0_DP	
USB0_VBUS_DET	P2_12

NOTE

This is new for this device.

ISP_mode pin selection depends on CMPA configuration field `ispmode_pin_sel`

- 0: P3_29 is used as ISPMODE_N
- 1: P0_6 is used as ISPMODE_N

For 169WFBGA, 144LQFP, 100LQFP, 64LQFP, 48LQFP and 48QFN, it should be 1, use P0_6 as ISP_ENTRY pin.

For and 32QFN, it should be 0, use P3_29 as ISP_ENTRY pin.

21.2.5 Top-level Boot Flow

The below chart shows the top-level boot flow. The device always starts boot ROM after reset.

- By default, ROM runs at 45 MHz
- Boot ROM checks if there is a valid extended bootloader image using CRC32. For power reset, boot ROM does a full image CRC32 check, and for Deep Power Down wake up, boot ROM only does a partial CRC32 check. If the extended bootloader image is valid, boot ROM jumps to the extended bootloader.
- The extended bootloader will determine whether to execute a normal boot or ISP boot based on the ISP_Mode pin or CMPA settings.

- The extended bootloader will run a user image validity check. It will run a CRC32 check if the value is present in the image header.



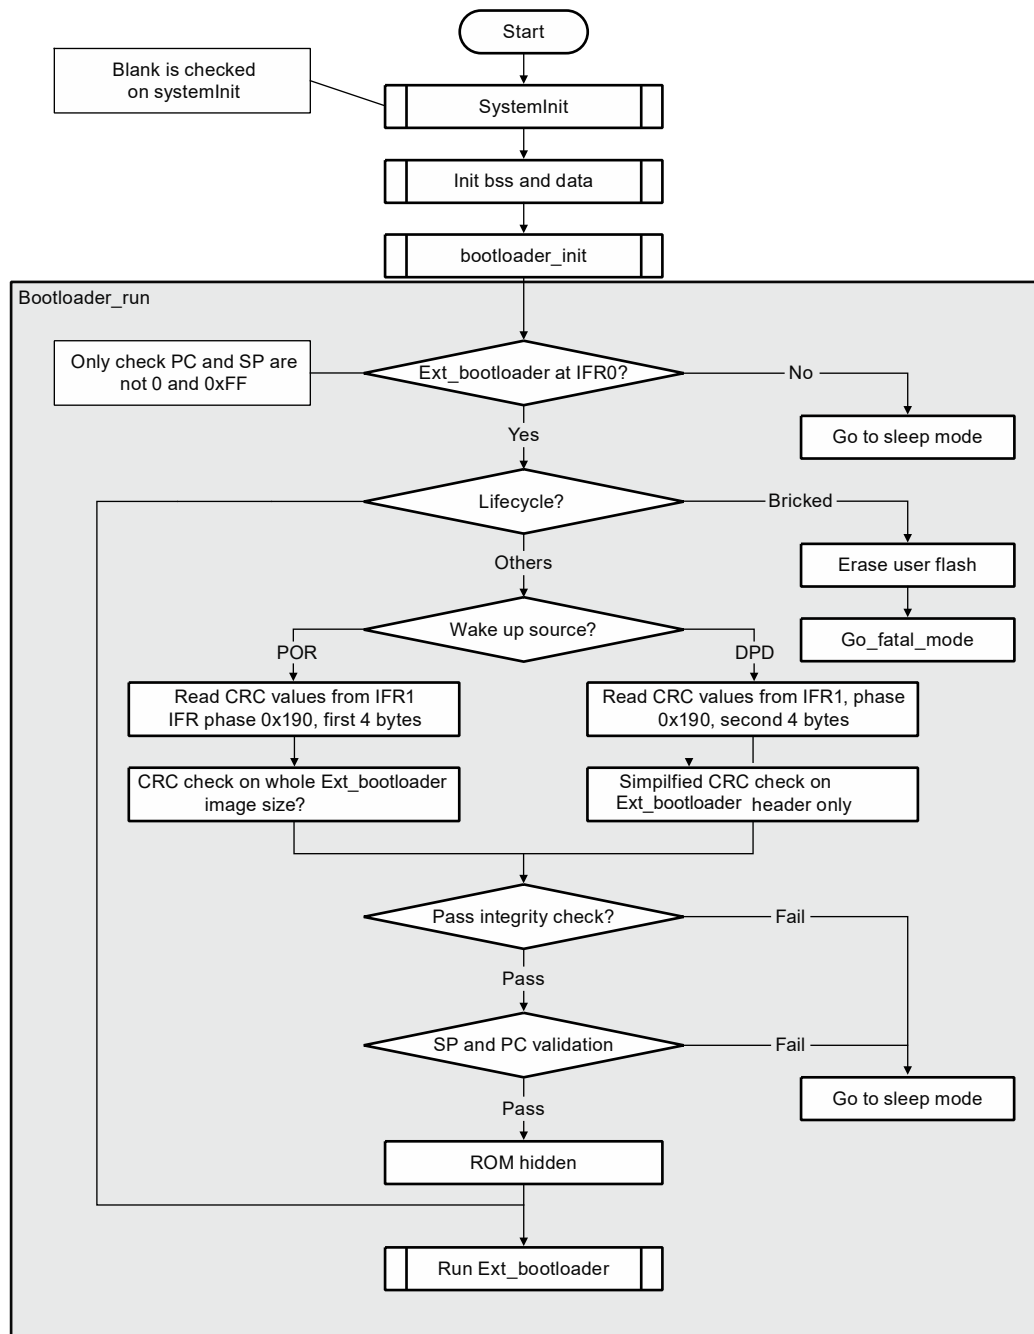


Figure 34. Top level boot flow

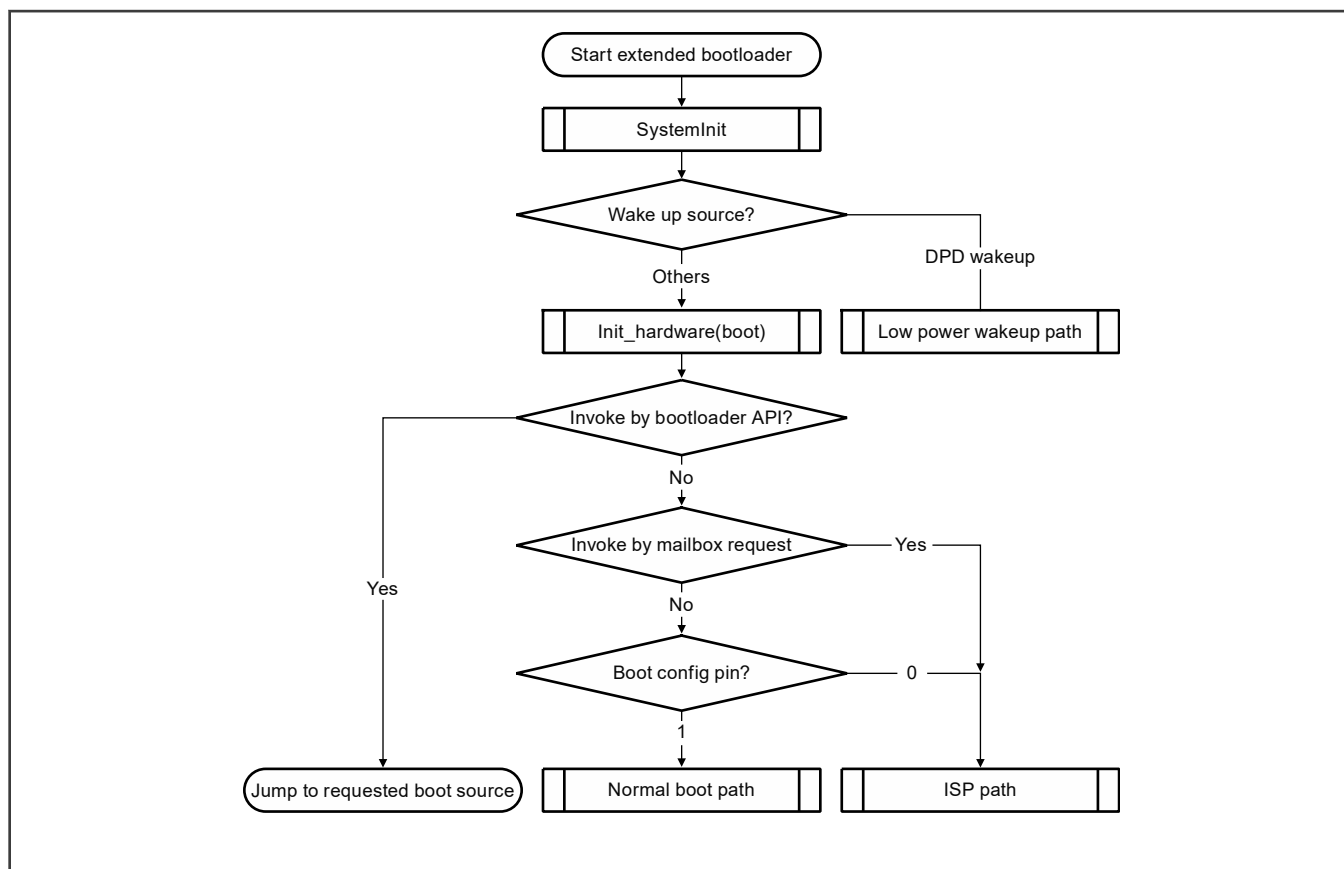

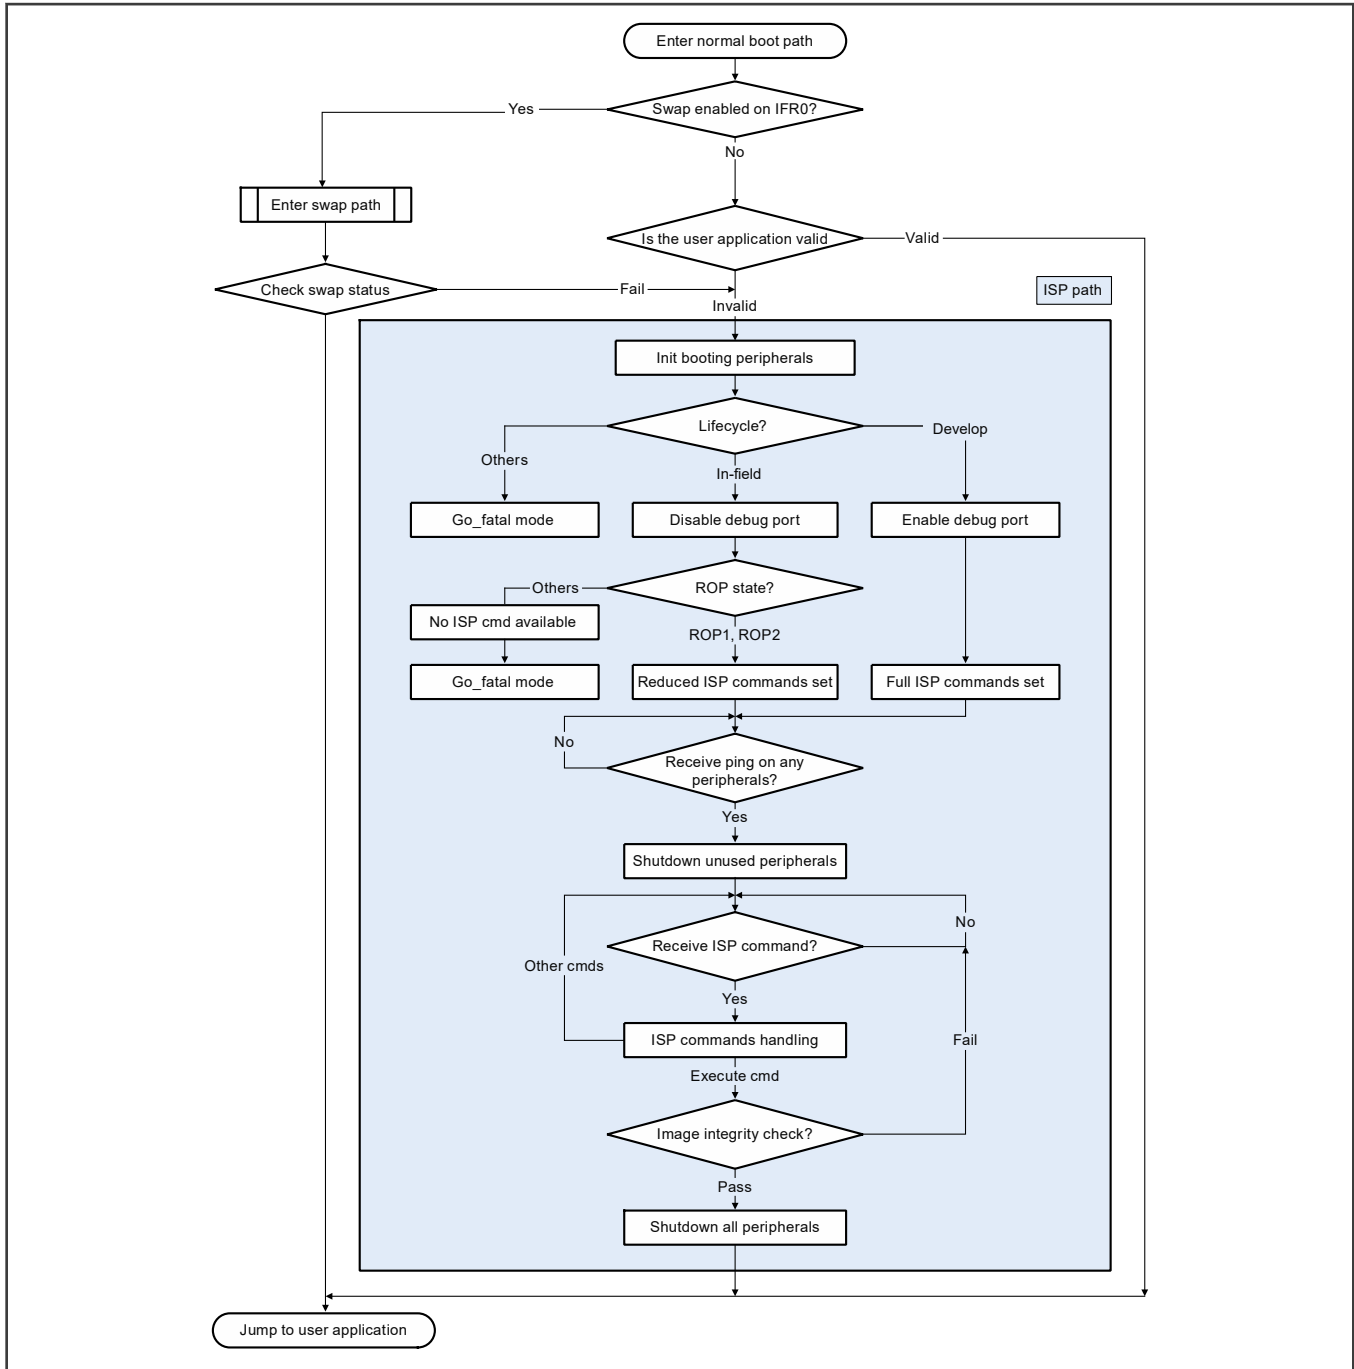

21.2.6 CMPA configuration options

The Customer Manufacturing Area (CMPA) is a region in main flash used to configure the features for boot ROM and the extended bootloader. The CMPA is located in the last 8KB of main flash. The address will change depending on the size of main flash on the device.

```
#define FLASH_SIZE_32KB 0x8000U
```

```
#define FLASH_SIZE_8KB 0x2000U
```

```
uint32_t cmpa_address = SYSCON->FLASHSIZECFG * FLASH_SIZE_32KBFLASH_SIZE_8K
```

Table 114. CMPA configuration supported by ROM and Ext_bootloader

CMPA Field	Offset	Bit	Description
Header	0	[31:15]	CMPA header marker, 16'h5963 If the CMPA header marker is cleared and the device is in the Develop lifecycle state, MBC Global Access Control 4 will be changed from R/X to R/W/X. Global Access Control 4 is the default permission of the main flash. When the CMPA header marker is written, the permissions of the sectors of the main flash assigned to Global Access Control 4 will be returned to R/W after reset.
BOOT_SPEED	0	[13:12]	Core clock, default 45MHz 00 - 45MHz FRO @1v0 10 - 180MHz FRO @1v2
ISP_BOOT_IF	0	[6:4]	ISP boot interface. See Table 115 .
ISP_DM_ENTRY	4	[13:12]	Disable ISP mode entry through debug mailbox command. 01 - ISP entry disabled. 00,10, 11 - ISP entry allowed.
ISP_PIN_ENTRY	4	[11:10]	Disable ISP mode entry through pin assertion. 01 - ISP entry disabled. 00,10, 11 - ISP entry allowed.
FLASH_REMAP_SIZE	4	[4:0]	Flash remap size. This field should be written to remap field in flash.
BOOT_FAIL_LED	8	[23:16]	Assert on fatal errors during boot. ROM toggles the GPIO pin identified by this field whenever primary boot fails due to fatal errors before locking-up/reset. Note, use QUICK_SET_/CLR_GPIOx field to set the default level of pin. [4:0] GPIO Pin number [7:5] GPIO port number
POWERDOWN_TIMEOUT_SECS	0x0c	[15:0]	Power down timeout: Timeout value in seconds. When a non-zero value is programmed in this field ROM uses it as idle timeout value to enter power-down state to conserve power
ISP_UART_CFG: UART_BAUD_RATE	0x10	[31:28]	Baud rate configured during UART ISP mode. 0000 - Auto baud detection.

Table continues on the next page...

Table 114. CMPA configuration supported by ROM and Ext_bootloader (continued)

			default: Auto baud detection.
ISP_UART_CFG: UART_TX_FUNC_SLOT	0x10	[27:24]	Identifies the pin mux function slot.
ISP_UART_CFG: UART_TX_PIN	0x10	[23:16]	Override default UART TX ISP pin. Identifies the pin to be used as UART_TX pin. [4:0] GPIO Pin number [7:5] GPIO port number
ISP_UART_CFG: UART_ISP_INSTANCE	0x10	[15:12]	Identifies the LPUART instance used for UART ISP mode.
ISP_UART_CFG: UART_RX_FUNC_SLOT	0x10	[11:8]	Identifies the pin mux function slot.
ISP_UART_CFG: UART_RX_PIN	0x10	[7:0]	Override default UART RX ISP pin. Identifies the pin to be used as UART_RX pin. [4:0] GPIO Pin number [7:5] GPIO port number
ISP_I2C_CFG: I2C_SDA_FUNC_SLOT	0x14	[27:24]	Identifies the pin mux function slot.
ISP_I2C_CFG: I2C_SDA_PIN	0x14	[23:16]	Override default UART TX ISP pin. Identifies the pin to be used as UART_TX pin. [4:0] GPIO Pin number [7:5] GPIO port number
ISP_I2C_CFG: I2C_ISP_INSTANCE	0x14	[15:12]	Identifies the LPI2C instance used for LPI2C ISP mode.
ISP_I2C_CFG: I2C_SCL_FUNC_SLOT	0x14	[11:8]	Identifies the pin mux function slot.
ISP_I2C_CFG: I2C_SCL_PIN	0x14	[7:0]	Override default UART RX ISP pin. Identifies the pin to be used as UART_RX pin. [4:0] GPIO Pin number [7:5] GPIO port number
ISP_SPI_CFG0: SPI_MOSI_FUNC_SLOT	0x1C	[27:24]	Identifies the pin mux function slot.

Table continues on the next page...

Table 114. CMPA configuration supported by ROM and Ext_bootloader (continued)

ISP_SPI_CFG0: SPI_MOSI_PIN	0x1C	[23:16]	Override default SPI_MOSI ISP pin. Identifies the pin to be used as SPI_MOSI pin. [4:0] GPIO Pin number [7:5] GPIO port number
ISP_SPI_CFG0: SPI_ISP_INSTANCE	0x1C	15:12]	Identifies the LPSPI instance used for LPSPI ISP mode.
ISP_SPI_CFG0: SPI_SCK_FUNC_SLOT	0x1C	[11:8]	Identifies the pin mux function slot.
ISP_SPI_CFG0: SPI_SCK_PIN	0x1C	[7:0]	Override default SPI_SCK ISP pin. Identifies the pin to be used as SPI_SCK pin. [4:0] GPIO Pin number [7:5] GPIO port number
ISP_SPI_CFG1: ISP_SPI_SSEL_X	0x20	[29:28]	SPI chip select number. LPSPI interfaces supports up to four chip selects.
ISP_SPI_CFG1: SPI_SSEL_FUNC_SLOT	0x20	[27:24]	Identifies the pin mux function slot.
ISP_SPI_CFG1: SPI_SSEL_PIN	0x20	[23:16]	Override default SPI_SSEL ISP pin. Identifies the pin to be used as SPI_SSEL pin. [4:0] GPIO Pin number [7:5] GPIO port number
ISP_SPI_CFG1: SPI_MISO_FUNC_SLOT	0x20	[11:8]	Identifies the pin mux function slot.
ISP_SPI_CFG1: SPI_MISO_PIN	0x20	[7:0]	Override default SPI_MISO ISP pin. Identifies the pin to be used as SPI_MISO pin. [4:0] GPIO Pin number [7:5] GPIO port number
USB Product ID	0x24	[31:16]	USB Product ID
USB Vendor ID	0x24	[15:0]	USB Vendor ID
USBx_VBUS_FUNC_SLOT	0x28	[11:8]	Identifies the pin mux function slot.
USBx_VBUS_PIN	0x28	[7:0]	Override default USB0_VBUS_DETECT ISP pin. Identifies the pin to be used as USB0_VBUS detect pin.

Table continues on the next page...

Table 114. CMPA configuration supported by ROM and Ext_bootloader (continued)

			[4:0] GPIO Pin number [7:5] GPIO port number
ISP_MISC_CFG: ISP_UART_CUST	0x2C	[31:30]	Use customer defined UART ISP pins. 01: Customer defined. 00, 10, 11: Default ROM defined pins.
ISP_MISC_CFG: ISP_USB_CUST	0c2C	[23:22]	Use customer defined GPIO for USB VBUS detect function during ISP mode. 00: Use dedicated VBUS pins. 01: Customer defined GPIO for USB0_VBUS detect. 10: Reserved 11: Use VDD_USB for VBUS presence. On board regulator should generate VDD_USB voltage using 5V input for VBUS pin on connector.
ACL_SEC_7	0x40 ~	[30:28]	ACL_SEC_7, 15, 23, 31, 39, 47, 55, 63, 71, 79, 87, 95, 103, 111, 119, 127
ACL_SEC_6	0x7C	[26:24]	ACL_SEC_6, 14, 22, 30, 38, 46, 54, 62, 70, 78, 86, 94, 102, 110, 118, 126
ACL_SEC_5		[22:20]	ACL_SEC_5, 13, 21, 29, 37, 45, 53, 61, 69, 77, 85, 93, 101, 109, 117, 125
ACL_SEC_4		[18:16]	ACL_SEC_4, 12, 20, 28, 36, 44, 52, 60, 68, 76, 84, 92, 100, 108, 116, 124
ACL_SEC_3		[14:12]	ACL_SEC_3, 11, 19, 27, 35, 43, 51, 59, 67, 75, 83, 91, 99, 107, 115, 123
ACL_SEC_2		[10:8]	ACL_SEC_2, 10, 18, 26, 34, 42, 50, 58, 66, 74, 82, 90, 98, 106, 114, 122
ACL_SEC_1		[6:4]	ACL_SEC_1, 9, 17, 25, 33, 41, 49, 57, 65, 73, 81, 89, 97, 105, 113, 121
ACL_SEC_0		[2:0]	ACL_SEC_0, 8, 16, 24, 32, 40, 48, 56, 64, 72, 80, 88, 96, 104, 112, 120
QUICK_SET_GPIO_0	0x80	[31:0]	Drive GPIO 0 port pins high after reset. Each bit corresponds to the pin in GPIO port 0. When set ROM drives the corresponding pin high as soon as possible. By default most pins come-up as tri-stated inputs. This feature allows customer to specify active drive pins soon after reset instead of waiting till complete boot.

Table continues on the next page...

Table 114. CMPA configuration supported by ROM and Ext_bootloader (continued)

QUICK_CLR_GPIO_0	0x84	[31:0]	Drive GPIO 0 port pins low. See description of QUICK_SET_GPIO_0 field.
QUICK_SET_GPIO_1	0x88	[31:0]	
QUICK_CLR_GPIO_1	0x8C	[31:0]	
QUICK_SET_GPIO_2	0x90	[31:0]	
QUICK_CLR_GPIO_2	0x94	[31:0]	
QUICK_SET_GPIO_3	0x98	[31:0]	
QUICK_CLR_GPIO_3	0x9C	[31:0]	
QUICK_SET_GPIO_4	0xA0	[31:0]	
QUICK_CLR_GPIO_4	0xA4	[31:0]	
ROP_STATE	0xB0	[31:0]	
SBL_PROT	0xB4	[31:0]	
SBL_START_ADDR	0xB8	[31:0]	
ROP_STATE_DP (Duplicate)	0xC0	[31:0]	
SBL_PROT_DP (Duplicate)	0xC4	[31:0]	
SBL_START_ADDR_DP (Duplicate)	0xC8	[31:0]	

21.2.6.1 ISP Boot mode

Depending on the values of ISP mode in the CMPA and ISP pin, bootloader decides whether to enter normal boot flow or entering ISP mode.

Table 115. ISP mode based on ISP_BOOT_IF CMPA bit field (word0[6:4])

ISP boot interface	CMPA field value	Description
Auto ISP	3'b000	Bootloader probes the active peripheral from the below serial interfaces to download image: LPUART and USB0. (however it depends on extended bootloader choice)
UART ISP	3'b001	LPUART is used to download the image
SPI ISP	3'b010	LPSPi is used to download the image
I2C ISP	3'b011	LPI2C is used to download the image
USB0 HID	3'100	USB0 is used to download the image

Table continues on the next page...

Table 115. ISP mode based on ISP_BOOT_IF CMPA bit field (word0[6:4]) (continued)

Default	3'111	Bootloader probes the active peripheral from the below serial interfaces to download image: LPUART and USB0. (however it depends on extended bootloader choice)

21.2.6.2 OEM Secondary Bootloader

OEMs have the option to flash their own secondary bootloader. Enabling this feature is done by writing the address of the secondary bootloader to both the SBL_START_ADDR and SBL_START_ADDR_DP fields within the CMPA. The address of the secondary bootloader must be 8KB aligned. The extended bootloader will boot the secondary bootloader by default after this feature is enabled.

Secondary bootloader protection can be enabled by setting both the SBL_PROT and SBL_PROT_DP fields to an equivalent non-zero and non-cleared (0xFFFFFFFF) value. Enabling protection will disable the Debug Mailbox and ISP within Boot ROM and the extended bootloader while in In-field lifecycle states. This protects from both writing to the secondary bootloader, and from a mass erase, which would erase the secondary bootloader from flash.

21.2.7 ROM API

ROM bootloader provides APIs for users. Disable the interrupts before making any ROM API calls is suggested, since API does not handle any interrupts.

The struct of bootloader_tree:

```

//! @brief Root of the bootloader API tree.
//!
//! An instance of this struct resides in read-only memory in the bootloader. It
//! provides a user application access to APIs exported by the bootloader.
//!
//! @note The order of existing fields must not be changed.
//!
//! @ingroup context
typedef struct BootloaderTree
{
    void (*runBootloader)(void *arg) ;    //!< Function to start the bootloader executing.
    const flash_driver_interface_t *flashDriver;    //!< Internal Flash driver API.
    void (*jump)(uint32_t imageBase);
} bootloader_tree_t;

```

The ROM API table is located at address (0x03005fe0u)

```

#define BOOTLOADER_TREE_LOCATION (0x3005fe0u)
#define g_bootloaderTree ((bootloader_tree_t*)BOOTLOADER_TREE_LOCATION)

```

21.2.7.1 runBootloader API

ROM provides an API for the user application to enter ISP mode based on the designated ISP interface mode.

Prototype

```
Void (*runBootloader) (void *arg)
```

Table 116. API Prototype Fields

Field	Offset	Description
TAG	[31:24]	Fixed value: 0xEB (Enter boot mode)
Boot mode	[23:20]	0: Enter passive mode 1: Enter ISP mode
ISP interface	[19:16]	0: Auto detection 1: UART 2: SPI 3: I2C 4: USB HID 5: Reserved
Reserved	[15:4]	
Image index	[03:00]	Used for Boot mode 0

21.2.7.2 Flash Driver API

Flash driver API provide the flash operation supported by CM33 based on flash technology.

///*! @brief Interface for the flash driver.*

```
typedef struct FlashDriverInterface
```

```
{
```

///*Flash driver*

```
status_t (*flash_init)(flash_config_t *config);
```

```
status_t (*flash_erase_sector)(flash_config_t *config, uint32_t start, uint32_t lengthInBytes, uint32_t key);
```

```
status_t (*flash_program_phrase)(flash_config_t *config, uint32_t start, uint8_t *src, uint32_t lengthInBytes);
```

```
status_t (*flash_program_page)(flash_config_t *config, uint32_t start, uint8_t *src, uint32_t lengthInBytes);
```

```
status_t (*flash_verify_program)(flash_config_t *config,
```

```
uint32_t start,
```

```
uint32_t lengthInBytes,
```

```
const uint8_t *expectedData,
```

```
uint32_t *failedAddress,
```

```
uint32_t *failedData);
```

```
status_t (*flash_verify_erase_phrase)(flash_config_t *config, uint32_t start, uint32_t lengthInBytes);
```

```
status_t (*flash_verify_erase_page)(flash_config_t *config, uint32_t start, uint32_t lengthInBytes);
```

```
status_t (*flash_verify_erase_sector)(flash_config_t *config, uint32_t start, uint32_t lengthInBytes);
```

```
status_t (*flash_get_property)(flash_config_t *config, flash_property_tag_t whichProperty, uint32_t *value);
```

```
status_t (*flash_read)(flash_config_t *config, uint32_t start, uint8_t *dest, uint32_t lengthInBytes);
```

```
// version
```

```
standard_version_t version; ///< flash driver API version number.
```

```
} flash_driver_interface_t;
```

And struct of flash_config_t is defined as:

/! @brief Flash driver state information.*

**An instance of this structure is allocated by the user of the flash driver and
passed into each of the drivers APIs.

typedef struct

```
{
uint32_t PFlashBlockBase; /*!< A base address of the first PFlash block */
uint32_t PFlashTotalSize; /*!< The size of the combined PFlash block. */
uint32_t PFlashBlockCount; /*!< A number of PFlash blocks. */
uint32_t PFlashPageSize; /*!< The size in bytes of a page of PFlash. */
uint32_t PFlashSectorSize; /*!< The size in bytes of a sector of PFlash. */
flash_ffr_config_t ffrConfig;
} flash_config_t;
```

Table 117. Flash driver API function details

Function name	Description
Flash_init	Initializes the global flash properties structure members
Flash_erase_sector	Erases the flash sectors encompassed by parameters passed into function
Flash_program_phrase	Programs flash phrases with data at locations passed in through parameters
Flash_program_page	Programs flash with data at locations passed in through parameters
Flash_verify_program	Verifies programming of the desired flash area at a specified margin level.
Flash_verify_erase_phrase	Verify that the flash phrases are erased
Flash_verify_erase_page	Verify that the flash pages are erased
Flash_verify_erase_sector	Verify that the flash sectors are erased
Flash_get_property	Returns the desired flash property
ifr_verify_erase_phrase	Verify that the IFR0 phrases are erased
ifr_verify_erase_page	Verify that the IFR0 pages are erased
ifr_verify_erase_sector	Verify that the IFR0 sectors are erased
flash_read	Reads flash at locations passed in through parameters

Table 118. Flash API return status code

Status	Code	Description
kStatus_FLASH_Success	0	The flash operation is successful

Table continues on the next page...

Table 118. Flash API return status code (continued)

kStatus_FLASH_InvalidArgument	4	Invalid argument during executing API
kStatus_FLASH_SizeError	100	Invalid size during executing API
kStatus_FLASH_AlignmentError	101	Alignment error during executing API
kStatus_FLASH_AddressError	102	Address error during executing API
kStatus_FLASH_AccessError	103	Invalid instruction codes during executing API
kStatus_FLASH_ProtectionViolation	104	Protection violation flag, indicate that program/erase operation is requested to execute on protected areas
kStatus_FLASH_CommandFailure	106	Command execution failure during executing API
kStatus_FLASH_UnknownProperty	106	Unknown property when to call flash_get_property
kStatus_FLASH_EraseKeyError	107	Invalid EraseKey during executing flash_erase API


21.3 Lifecycle

21.3.1 overview

This device supports a lifecycle state model to protect code from reading from the device internal flash, which is called code read protection feature. There are different levels of protections in the system, so that access to the on-chip flash and use of ISP can be restricted. Also the lifecycle state of the device determines the debug access and ISP command availability. Please see other sections details. The lifecycle state is controlled by ROP_STATE in the CMPA region.

The boot ROM will check the lifecycle state, then determine what boot flow is to run, debug port to be enabled/locked and available debug mail access command sets. After ROM exits to extended bootloader, lifecycle will be checked again to determine available ISP command sets.

21.3.2 Lifecycle State transition

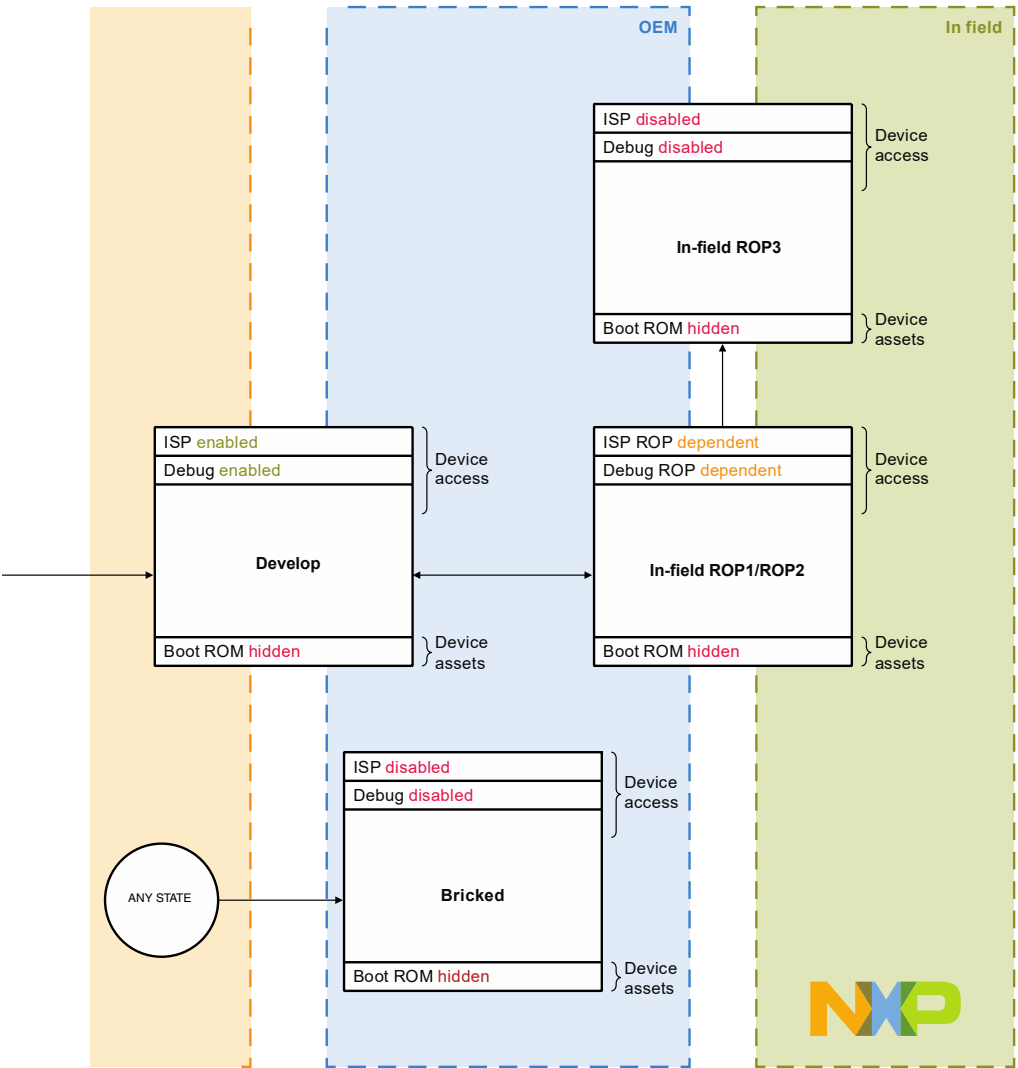

21.3.3 Lifecycle states

This device supports below lifecycle states,

Table 119. Lifecycle

Lifecycle	Lifecycle Type	Description
Develop	Customer	Initial customer development state after leaving NXP manufacturing
In-field ROP1/ROP2	Customer	In-field application state, with ROP protection
In-field ROP3	Customer	In-field application state, with ROP protection, prevent use of field return
Bricked	End-of-life	Bricked state to prevent device use

21.3.4 Read Out Protection (ROP)

This device does not support secure boot, but it does support four levels of Read Out Protection (ROP), also refer to ROP_STATE. This read out protection is a mechanism that allows user to enable different levels of protection in the system. It is a 32-bit field stored in IFR0. It can be programmed by customer.

- ROP_LEVEL0, ROP_STATE = 0xFFFF_FFFF (erased FLASH value), no ROP. Default for blank state.
- ROP_LEVEL1, ROP_STATE = 0xEEBA_04C3
Debug is disabled and unlocked, however it can be modified by customer, only limited debug mailbox commands are available.

- ROP_LEVEL2, ROP_STATE = 0x4939_8D8B
Debug is disabled and locked, it cannot be modified by customer, only limited debug mailbox commands are available.

- ROP_LEVEL3, ROP_STATE = 0xB0AB_B703
Debug is disabled and locked, it cannot be modified by customer, no debug mailbox commands are available

- Anything else = ROP3-like behavior (Debug disabled/Locked, ISP disabled)

- ROP_STATE

Value can be read out from SYSCON-> ROP_STATE (read/write register)

ROM reads ROP_STATE from ROP_STATE and ROP_STATE_DP on IFR0, does the compare, and if it does not match, resets the device; if match, then programs it to SYSCON->ROP_STATE.

Table 120. ROP_STATE IFR0 locations

IFR0	CMPA Offset
ROP_STATE	0xB0
ROP_STATE_DP	0xC0

See [Debugger Mailbox Access Port & Debug session protocol](#) for details.

21.4 Debugger Mailbox Access Port & Debug session protocol

The Debugger Mailbox Access Port(DM-AP) offers a register-based mailbox accessible by CPU0 (on MCXA16x and MCXA27x, there is only core CM33) and the device debug port (DP) of the MCU. Debug Mailbox allows the debugger communicate with ROM. It is protected by lifecycle State. ROM will control the debug port based on LC State. For this device, no security hardware, so the Debug session protocol will be followed to interact with tools over SWD interface.

The protocol has following features:

- Request/response based
- Support for relatively large command and response data
- All commands and responses are 32-bit word aligned
- Support data above 32-bits by using ACK_TOKEN that moderates the transfer in 32-bit value chunks
- Requests and responses use the same basic structure

21.4.1 Debug session protocol

21.4.1.1 Request packet layout

The first word transmitted in a request is a header word containing the command ID and number of following data words. The command packet is set to the device by writing 32-bits at a time to the REQUEST register. When sending command packets greater than 32-bits, the debugger should read an ACK_TOKEN in the RETURN register before writing the next 32-bits.

Following the header are the number of 32-bit words specified in the header

Table 121. Request Register Byte Description

Word	Byte 0	Byte 1	Byte 2	Byte 3
0	commandID[7:0]	commandID[15:8]	dataWordCount[7:0]	dataWordCount[15:8]
1	data...			

The C structure definition for a request is as follows:

```
struct dm_request {
    uint16_t commandID;
    uint16_t dataWordCount;
    uint32_t data[];
};
```

21.4.1.2 Response packet layout

Response register byte description structure is the same as Request register byte description.

Table 122. Response Packet Byte Description

Word	Byte 0	Byte 1	Byte 2	Byte 3
0	commandStatus[7:0]	commandStatus[15:8]	dataWordCount[7:0]	dataWordCount[14:8] new_protocol[15]
1	data...			

The C structure definition for a response is as follows:

```
struct dm_reponse {
    uint16_t commandID;
    uint16_t dataWordCount;
    uint32_t data[];
};
```

21.4.1.3 ACK_TOKEN

- When command has parameters the debugger should wait for ACK_TOKEN (sent through DBG_MB_RETURN register) before sending next 32-bit value.
- Similarly when response packet has data to send back to debugger, ROM will wait for debugger to send ACK_TOKEN (sent through DBG_MB_REQUEST register) before sending next 32-bit value.
- Upper 16-bits are set by receiving end with number of remaining words expected.

- Lower 16-bits are always set to 0xA5A5.

Table 123. ACK_TOKEN Register Byte Description

Word	Byte 0	Byte 1	Byte 2	Byte 3
0	0xA5	0xA5	remainCount[7:0]	remainCount[15:8]

The C structure definition for a ACK_TOKEN is as follows:

```
struct dm_ack_token {
    uint16_t token; /* always set to 0xA5A5 */
    uint16_t remainCount; /* count of remaining word */
};
```

21.4.1.4 Error handling

When an overrun occurs from either side of the communication, the appropriate error flag is set in the CSW register. The state machine hardware prevents further communication in either direction. The debugger must start with a new resynchronization request to clear the error flag.

21.4.2 DM-AP command

21.4.2.1 All DM-AP command

This table lists all DM-AP commands supported by this device.

Table 124. DM-AP commands

Command	ID	Parameter/Response	Description
Start DM-AP (Legacy command)	0x01	Parameters: None <i>Response</i> : 32-bit status	Cause the device to enter DM-AP command mode. This must be done prior to sending other commands.
Get ROP Level	0x02	Parameters: None <i>Response</i> : 32-bit status	Return the ROP level value
Bulk Erase (Legacy command)	0x03	Parameters: None <i>Response</i> : 32-bit status	Erase the entire on-chip flash memory and IFR0, sector 0.
Exit DM-AP (Legacy command)	0x04	Parameters: None <i>Response</i> : 32-bit status	Cause the device to exit DM-AP command mode. The Device returns to normal mode.
Enter ISP Mode ((For Extended bootloader)	0x05	Parameters: dataWordCount: 0x1 data[0]: ISP mode enum. Same as IAP API.	Enter specified ISP mode.

Table continues on the next page...

Table 124. DM-AP commands (continued)

		<i>Response:</i> 32-bit status	
Set FA Mode	0x06	<i>Parameters:</i> dataWordCount: 0xFE data[]: FA Request <i>Response:</i> 32-bit status	Set the part permanently in "Fault Analysis" mode to return to NXP factory.
Start Debug Session	0x07	<i>Parameters:</i> None <i>Response:</i> 32-bit status	This command is used to indicate ROM the intention of connecting debugger. ROM enables debug access and enters while(1) loop.
Write words to flash (New)	0x09	<i>Parameters:</i> dataWordCount: 0x5 data[0]: FlashAddress data[4]: data to be written <i>Response:</i> 32-bit status	Write four words (128 bits) to flash Flash address must be 16-bit aligned
Read words from flash (New)	0x0A	<i>Parameters:</i> dataWordCount: 0x5 data[0]: FlashAddress <i>Response:</i> 32-bit status data[4]: Data out	Read four words from flash Flash address must be 16-bit aligned
Erase one Sector (New)	0x0B	<i>Parameters:</i> dataWordCount: 0x1 data[0]: flash page index <i>Response:</i> 32-bit status	Erase one flash sector

21.4.2.2 Available debug mailbox commands per lifecycle

Available debug mailbox commands sets depends on lifecycle state and read out protection level. If the part is in Bricked state or in-field ROP3, then ROM will lock the part, no debug mail commands are available.

Below table summarizes available debug mail box commands corresponding to read out protection level and lifecycle state

Table 3 – 5. Debug Mailbox Command Sets Per Lifecycle State

Table 125.

LC MANAGEMENT	Available commands
Develop	Start DM-AP Get_ROM_Level, Bulk Erase, (user flash and IFR0 sector 0)

Table continues on the next page...

Table 125. (continued)

	Exit DM-AP, Enter_ISP_Mode, Set_FA_Mode, Start Debug Session, Write_Flash_Word, Read_Flash_Word, Erase_One_Sector
In-field ROP1	Start DM-AP, Get_ROP_Level, Bulk_Erase, (user flash and IFR0 sector 0) Enter_ISP_Mode, Set_FA_Mode, Exit DM-AP
In-field ROP2	Start DM-AP, Get_ROP_Level, Bulk_Erase, (user flash and IFR0 sector 0) Set_FA_Mode, Exit DM-AP
In-field ROP3	Debug mail box is not available
Bricked	Debug mail box is not available

21.5 Extended Bootloader & In-System programming (ISP)

21.5.1 Overview

After a POR or WARM reset sequence, CPU will always start ROM code execution in boot ROM memory. After the operations in boot ROM, the control of CPU is transferred to the extended bootloader in flash IFR0 memory. This extended bootloader only supports load non-secure image (image format specified in Boot ROM section) to on-ship memory, including RAM and flash. Also bootloader will integrity check if CRC check is present in the image header before jump to user image.

Please note the booting available peripherals

Bootloader features:

- Extended bootloader size is 32KB (IFR0)
- Booting on USB FS HID interface and LPUART interface with auto-baud detection
- Booting on LPI2C and LPSPI interface
- Supports ISP calls path
- Low power wakeup path
- Phantom part configuration

- Image update and swap
- No need to implement Debug Mailbox commands since it is done by ROM

21.5.2 Boot peripherals and default pins

Table 126. Bootloader Peripheral Pinmux

Peripheral	Instance	Alt Mode	Port	GPIO
LPUART	2	3	LPUART2_TXD	P2_2
			LPUART2_RXD	P2_3
USB	0		USB0_DM	USB0_DM
			USB0_DP	USB0_DP
LPI2C	2	3	GPIO	
			LPI2C2_SCL	P1_9
			LPI2C2_SDA	P1_8
LPSPi	0	2	GPIO	
			LPSPi0_SDO	P1_0
			LPSPi0_SCK	P1_1
			LPSPi0_SDI	P1_2
			LPSPi0_PCS	P1_3

21.5.3 Functional description

21.5.3.1 Jump to user application path

With successfully integrity CRC check on user application, before jump to user application, extended bootloader needs:

- Shutdown all boot peripherals
- Restore the registers to default values, these registers are used by all modules used by ROM or extended bootloader, except MBC and GLIKEY settings
- Set GLIKEY and MBC settings based on lifecycle

21.5.3.2 Low power wakeup Path

On Deep-Sleep wake-up or Sleep wake-up, the core would continue executing application without any ROM- or HW-enforced checks. It would be up to the application to implement its own checks if a customer deems necessary.

The difference between ROM and extended bootloader on low power wakeup path is that extended bootloader run CRC check on user image if image indicates valid image type at offset 0x24 (reserved word of vector table)

The low power wake-up path is focused on reducing the time to start executing customer code when waking from Deep Power-Down mode. This reduction in boot time is primarily achieved by doing simplified integrity CRC check. With successfully pass the integrity CRC check, then jump to wakeup entry specified in IFR0; otherwise enter into ISP path in extended bootloader.

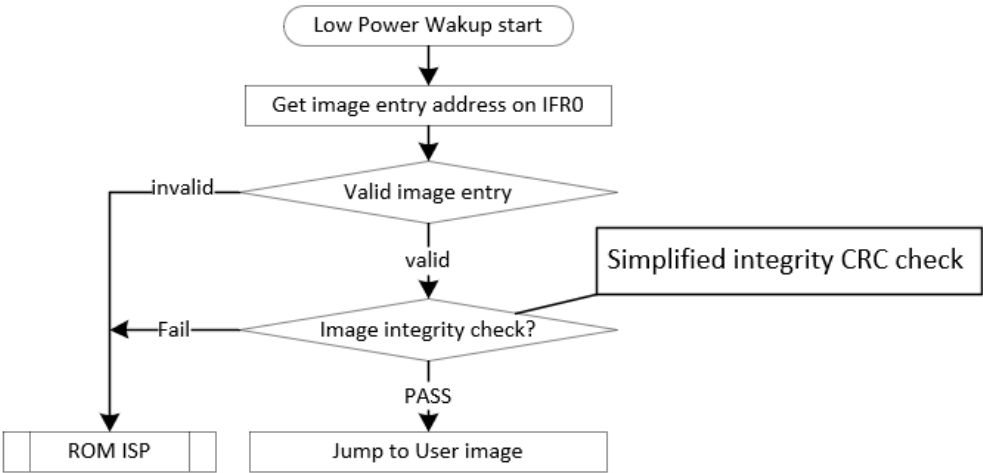


Figure 4-5 Extended Bootloader DPD Wakeup Flow

21.5.3.3 Supports ISP calls path

Due to limited IFR0 memory space, extended bootloader support these commands

Full ISP command set:

- ReadMemory
- FlashEraseAll, (user flash & IFR0 Sector 0)
- FlashEraseRegion,
- Reset,
- WriteMemory,
- GetProperty,
- Execute

Reduced ISP command set:

- FlashEraseAll, (user flash & IFR0 Sector 0)
- Reset,
- GetProperty,

However available commands set highly depends on the device lifecycle. Lifecycle management is the same as in ROM section

Table 127. Available ISP commands set per Lifecycle State

LC State	Available commands set
Develop	Full ISP command set
In-field ROP1	Reduced command set if entry through: ISP_PIN, INVALID_IMAGE, DEBUG_MAILBOX Full command set if entry through: bootloader_API

Table continues on the next page...

Table 127. Available ISP commands set per Lifecycle State (continued)

In-field ROP2	Reduced command set if entry through: INVALID_IMAGE, bootloader_API
In-field ROP3	No ISP commands are available
Bricked	No ISP commands are available


21.5.4 Flash Swap path

Extended bootloader supports flash swap, which is the function of FMC. On this device, there is only one bank of flash, this one bank flash is divided to four regions, two swappable regions and two static regions.


- Lower swappable region (swappable region 0): flash physical start address ~ limit
- Lower static region (static region 0): limit + 1 ~ half size of flash – 1
- Upper swappable region (swappable region 1): half size of flash ~ half size of flash + limit
- Upper static region (static region 1): half size of flash + limit + 1 ~ size of flash – 1

To able to run flash swap, the basic requirements are:

1. Size of swappable region 0 equals to size of swappable region 1
2. Size of swappable region 0 plus size of static region 0 equals to half size of flash

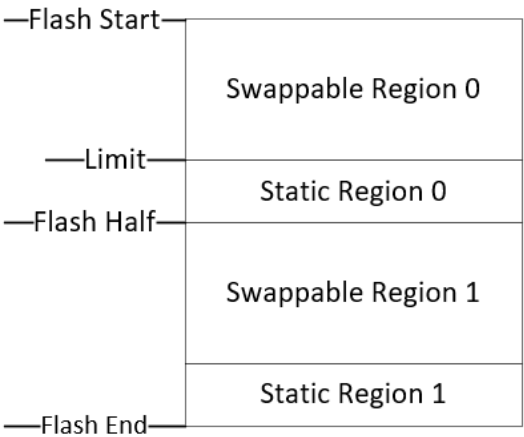

21.5.4.1 Flash swap flow chart

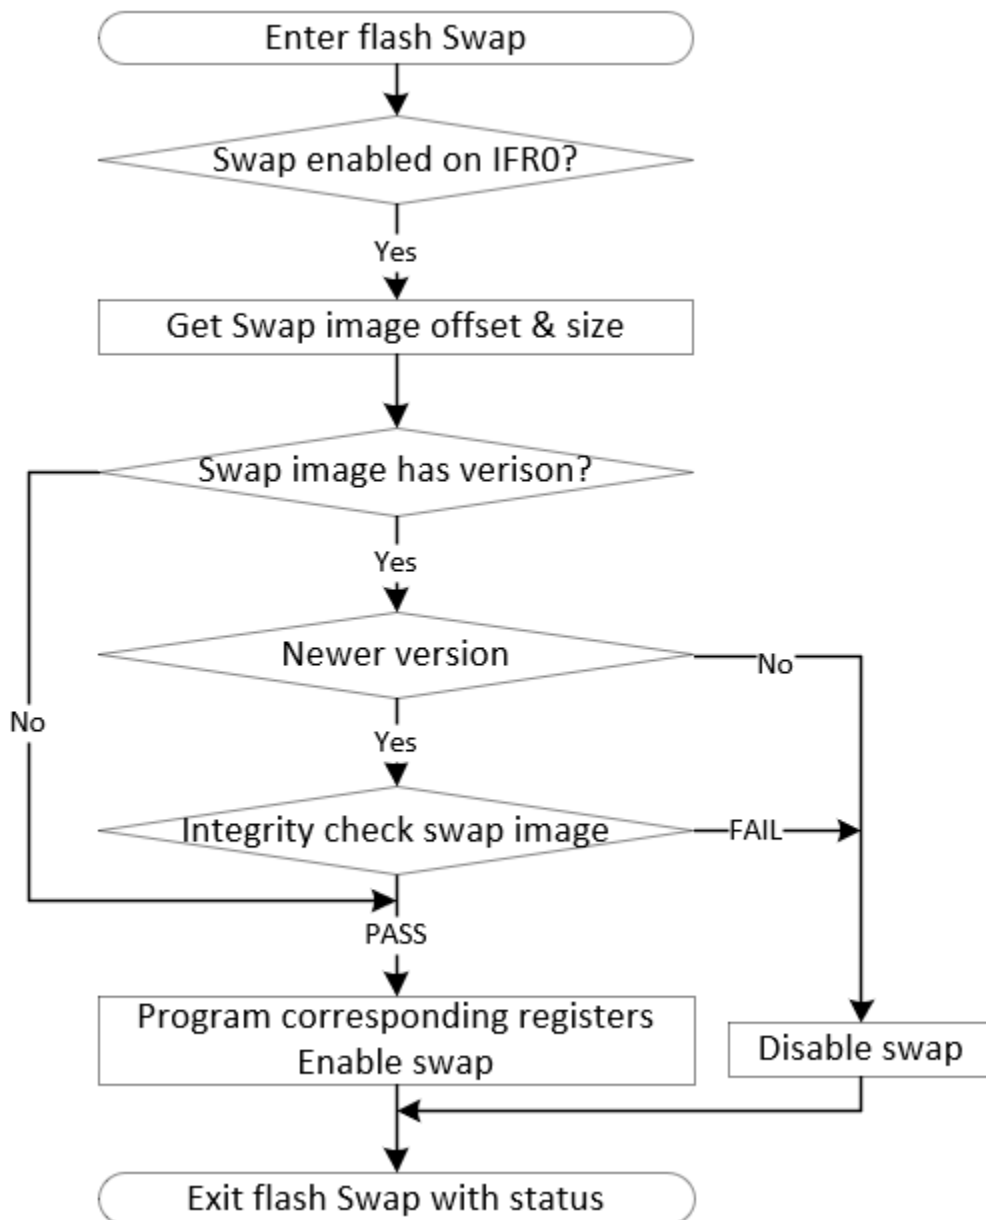

21.5.5 ISP (In-System Programming) Protocol

This section explains the general protocol for the packet transfers between the host and the bootloader. The description includes the transfer of packets for different transactions, such as commands with no data phase and commands with incoming or outgoing data phase. The next section describes various packet types used in a transaction.

Each command sent from the host is replied to with a response command.

Commands may include an optional data phase.

- If the data phase is incoming (from the host to the bootloader), it is part of the original command.
- If the data phase is outgoing (from the bootloader to host), it is part of the response command.

21.5.5.1 Command with no data phase

The protocol for a command with no data phase contains:

- Command packet (from the host)
- Generic response command packet (to host)

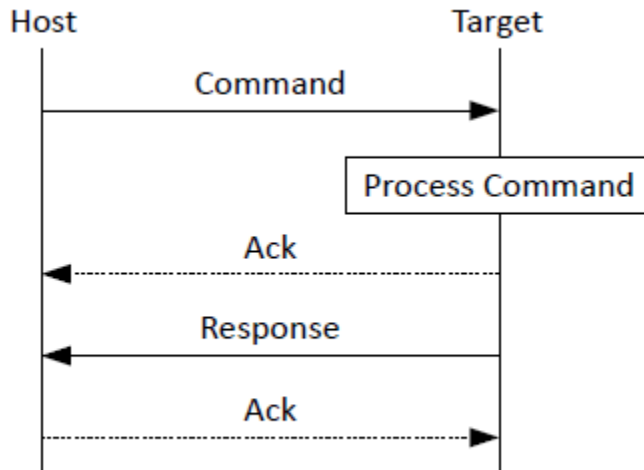


Figure 4-9 Command with No Data Phase

Remark: In these diagrams, the ACK sent in response to a command or a data packet can arrive at any time before, during, or after the command or data packet has processed.

21.5.5.2 Command with the incoming data phase

The protocol for a command with incoming data phase contains:

- Command packet (from host) (kCommandFlag_HasDataPhase set).
- Generic response command packet (to host).
- Incoming data packets (from the host).
- Generic response command packet.

NOTE

- The host may not send any further packets while it is waiting for the response to a command.
- The data phase is aborted if the Generic Response packet prior to the start of the Data phase does not have a status of kStatus_Success.
- Data phases may be aborted by the receiving side by sending the final
- GenericResponse early with a status of kStatus_AbortDataPhase. The host may abort the data phase early by sending a zero-length data packet.
- The final Generic Response packet sent after the data phase includes the status of the entire operation.

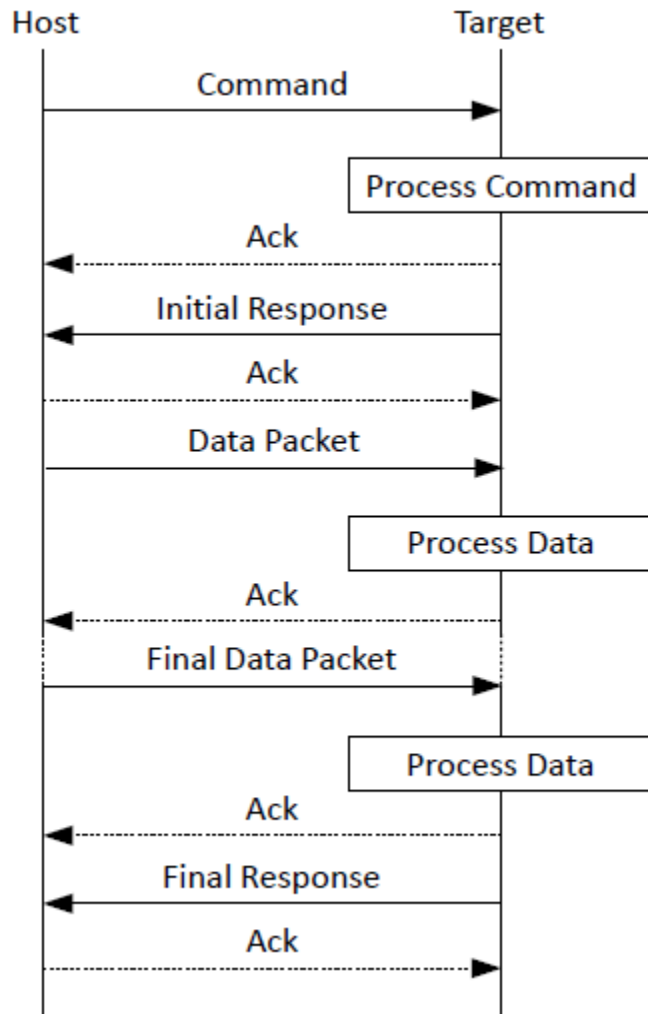


Figure 4-10 Command with Incoming Data Phase

21.5.5.3 Command with the outgoing data phase

The protocol for a command with an outgoing data phase contains:

- Command packet (from the host).
- ReadMemory Response command packet (to host) (kCommandFlag_HasDataPhase set).
- Outgoing data packets (to host).
- Generic response command packet (to host).

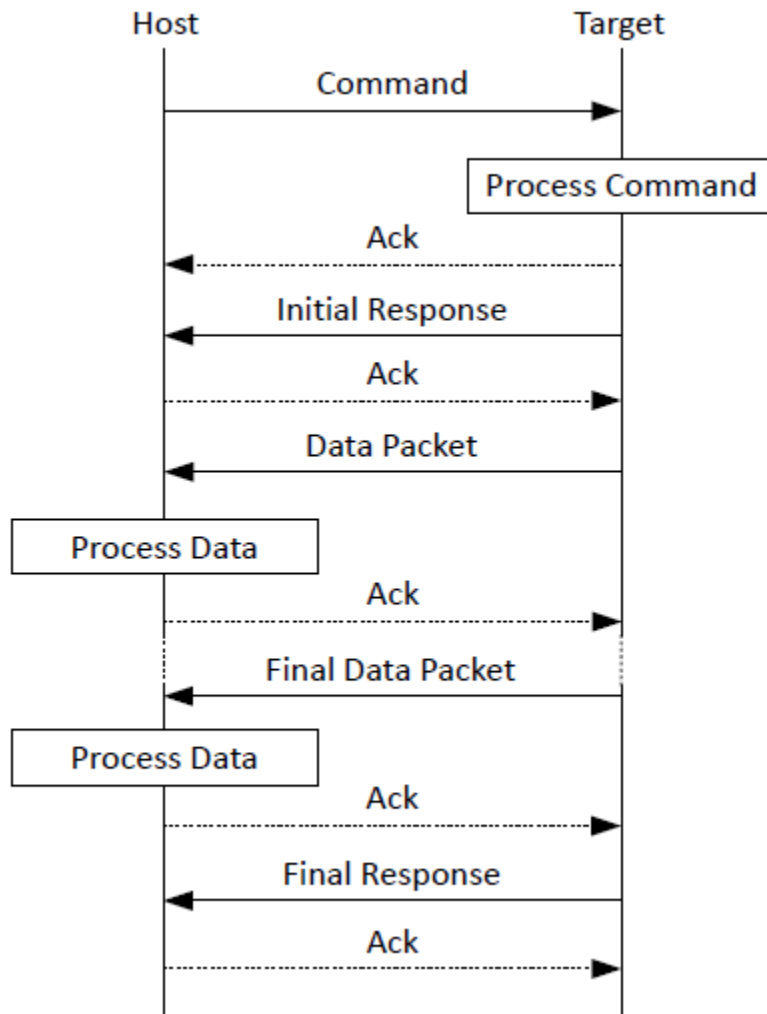


Figure 4-11 Command with Outgoing Data Phase

21.5.6 Bootloader packet types

21.5.6.1 Introduction

The bootloader device works in slave mode. All data communications are initiated by a host, which is either a PC or an embedded host. The bootloader device is the target, which receives a command or data packet. All data communications between host and target are packetized.

There are six types of packets used:

- Ping packet.
- Ping Response packet.
- Framing packet.
- Command packet.
- Data packet.
- Response packet.

All fields in the packets are in little-endian byte order.

21.5.7 Ping packet

The Ping packet is the first packet sent from a host to the target to establish a connection on the selected peripheral in order to run autobaud detection. The Ping packet can be sent from host to target at any time that the target is expecting a command packet. If the selected peripheral is UART, a Ping packet must be sent before any other communications. For other serial peripherals, it is optional.

In response to a Ping packet, the target sends a Ping response packet, discussed in the later sections.

Table 128. Ping Packet Format

Byte #	Value	Name
0	0x5A	Start byte
1	0xA6	Ping

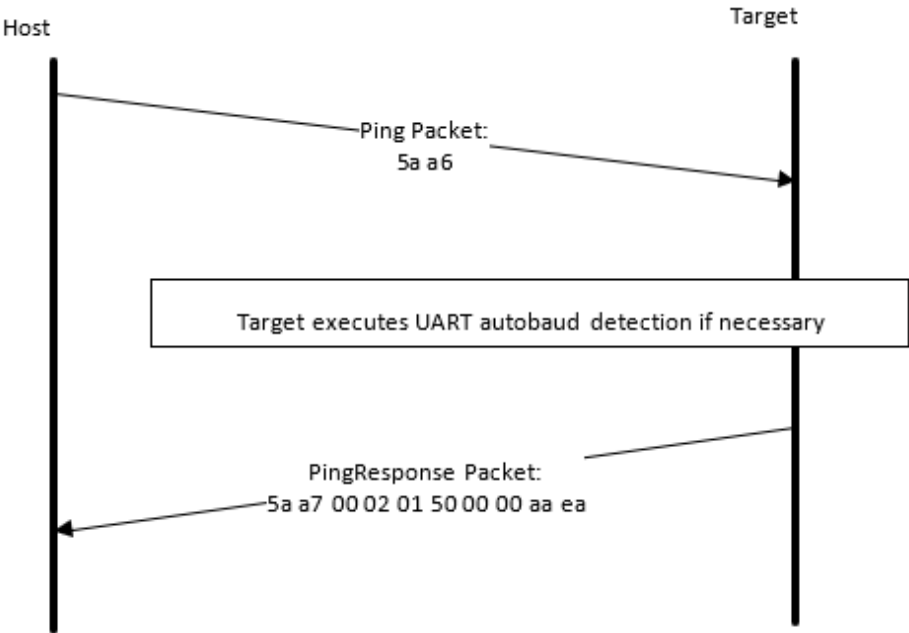


Figure 4-12 Ping Packet Protocol Sequence

21.5.7.1 Ping response packet

The target sends a Ping response packet back to the host after receiving a Ping packet. If communication is over a UART peripheral, the target uses the incoming Ping packet to determine the baud rate before replying with the Ping response packet. Once the Ping response packet is received by the host, the connection is established, and the host starts sending commands to the target.

Table 129. Ping Response Packet Format

Byte	Value	Parameter
0	0x5A	Start byte
1	0xA7	Ping response code
2	0x00	Protocol bugfix

Table continues on the next page...

Table 129. Ping Response Packet Format (continued)

3	0x03	Protocol minor
4	0x01	Protocol major
5	0x50	Protocol name = 'P' (0x50)
6	0x00	Options low
7	0x00	Options high
8	0xfb	CRC16 low
9	0x40	CRC16 high

For the UART peripheral, it must be sent by the host when a connection is first established, in order to run outbound. For other serial peripherals, it is optional but recommended to determine the serial protocol version. The version number is in the same format as the bootloader version number returned by the GetProperty command.

21.5.7.2 Framing packet

The framing packet is used for flow control and error detection for the communications links that do not have such features built in. The framing packet structure sits between the link layer and the command layer. It wraps command and data packets as well.

Every framing packet containing data sent in one direction results in a synchronizing response framing packet in the opposite direction.

The framing packet described in this section is used for serial peripherals including the UART, I²C, and SPI. The USB HID peripheral does not use framing packets. Instead, the packetization inherent in the USB protocol itself is used.

Table 130. Framing Packet Format

Byte	Value	Parameter	Description
0	0x5A	Start byte	
1		PacketType	
2		Length_low	Length is a 16-bit field that specifies the entire command or data packet size in bytes.
3		Length_high	
4		Crc16_low	This is a 16-bit field. The CRC16 value covers entire framing packet, including the start byte and command or data packets, but does not include the CRC bytes. See Section 13.5 “CRC16 algorithm” .
5		Crc16_high	
6....n		Command or Data packet payload	

A special framing packet that contains only a start byte and a packet type is used for synchronization between the host and target.

Table 131. Special Framing Packet Format

Byte	Value	Parameter
0	0x5A	Start byte
1	0xA n	packetType

The Packet Type field specifies the type of the packet from one of the defined types (below):

Table 132. Packet Type Field

Packet type	Name	Description
0xA1	kFramingPacketType_Ack	The previous packet was received successfully; the sending of more packets is allowed.
0xA2	kFramingPacketType_Nak	The previous packet was corrupted and must be re-sent.
0xA3	kFramingPacketType_AckAbort	Data phase is being aborted.
0xA4	kFramingPacketType_Command	The framing packet contains a command packet payload.
0xA5	kFramingPacketType_Data	The framing packet contains a data packet payload.
0xA6	kFramingPacketType_Ping	Sent to verify the other side is alive. Also used for UART autobaud.
0xA7	kFramingPacketType_PingResponse	A response to Ping. It contains the framing protocol version number and options.

21.5.7.3 CRC16 algorithm

The CRC is computed over each byte in the framing packet header, excluding the CRC16 field itself, and all of the payload bytes. The CRC algorithm is the XMODEM variant of

CRC16.

The characteristics of the XMODEM variants are:

Table 133. CRC16 Algorithm

Width	16
Polynomial	0x1021
Init value	0x0000
Reflect in	False
Reflect out	False
Xor out	0x0000
Check result	0x31c3

The check result is computed by running the ASCII character sequence "123456789" through the algorithm.

```
uint16_t crc16_update(const uint8_t * src, uint32_t lengthInBytes)
{
    uint32_t crc = 0;
    uint32_t j;
    for (j=0; j < lengthInBytes; ++j)
    {
        uint32_t i;
        uint32_t byte = src[j];
        crc ^= byte << 8;
        for (i = 0; i < 8; ++i)
        {
            uint32_t temp = crc << 1;
            if (crc & 0x8000)
            {
                temp ^= 0x1021;
            }
            crc = temp;
        }
    }
    return crc;
}
```

21.5.7.4 Command packet

The command packet carries a 32-bit command header and a list of 32-bit parameters.

Table 134. Command Packet Format

Command Packet Format (32 bytes)										
Command Header (4 bytes)				28 bytes for Parameters (Max 7 parameters)						
Tag	Flags	Rsvd	Param Count	Param 1 (32-bit)	Param 2 (32-bit)	Param 3 (32-bit)	Param 4 (32-bit)	Param 5 (32-bit)	Param 6 (32-bit)	Param 7 (32-bit)

Table 135. Command Header Format

Byte #	Command header field	Reset value
0	Command or Response tag	The command header is 4 bytes long with these fields.
1	Flags	

Table continues on the next page...

Table 135. Command Header Format (continued)

2	Reserved. Should be 0x00.
3	ParameterCount

The header is followed by 32-bit parameters up to the value of the ParameterCount field specified in the header. Because a command packet is 32 bytes long, only seven parameters can fit into the command packet.

Command packets are also used by the target to send responses back to the host. As mentioned earlier, command packets and data packets are embedded into framing packets for all of the transfers.

Table 136. Command Tags

Command tag	Name	Description
0x01	FlashEraseAll	The command tag specifies one of the commands supported by the bootloader. The valid command tags for the bootloader are listed here.
0x02	FlashEraseRegion	
0x03	ReadMemory	
0x04	WriteMemory	
0x07	GetProperty	
0x09	Execute	
0x0B	Reset	

Table 137. Response Tags

Response tag	Name	Description
0xA0	GenericResponse	The response tag specifies one of the responses the bootloader (target) returns to the host. The valid response tags are listed here.
0xA7	GetPropertyResponse (used for sending responses to GetProperty command only)	
0xA3	ReadMemoryResponse (used for sending responses to ReadMemory command only)	

Flags: Each command packet contains a flag byte. Only bit 0 of the flag byte is used. If bit 0 of the flag byte is set to 1, then data packets follow the command sequence. The number of bytes that are transferred in the data phase is determined by a command specific parameter in the parameters array.

ParameterCount: The number of parameters included in the command packet.

Parameters: The parameters are word-length (32 bits). With the default maximum packet size of 32 bytes, a command packet can contain up to seven parameters.

21.5.7.5 Response packet

The responses are carried using the same command packet format wrapped with framing packet data. Types of responses include:

- GenericResponse.

- GetPropertyResponse.
- ReadMemoryResponse.

GenericResponse: After the bootloader has processed a command, the bootloader sends a generic response with status and command tag information to the host. The generic response is the last packet in the command protocol sequence. The generic response packet contains the framing packet data and the command packet data (with generic response tag = 0xA0) and a list of parameters (defined in the next section). The parameter count field in the header is always set to 2, for status code and command tag parameters.

Table 138. Generic Response Parameters

Byte #	Parameter	Description
0 - 3	Status code	The Status codes are errors encountered during the execution of a command by the target. If a command succeeds, then a kStatus_Success code is returned.
4 - 7	Command tag	The Command tag parameter identifies the response to the command sent by the host.

GetPropertyResponse: The GetPropertyResponse packet is sent by the target in response to the host query that uses the GetProperty command. The

GetPropertyResponse packet contains the framing packet data and the command packet data, with the command/response tag set to a GetPropertyResponse tag value (0xA7).

The parameter count field in the header is set to greater than 1, to always include the status code and one or many property values.

Table 139. GetPropertyResponse Parameters

Byte #	Value	Parameter
0 - 3		Status code
4 - 7		Property value
...		...
		Can be up to maximum 6 property values, limited to the size of the 32-bit command packet and property type.

ReadMemoryResponse: The ReadMemoryResponse packet is sent by the target in response to the host sending a ReadMemory command. The ReadMemoryResponse packet contains the framing packet data and the command packet data, with the command/response tag set to a ReadMemoryResponse tag value (0xA3), the flags field set to kCommandFlag_HasDataPhase (1).

The parameter count set to two for the status code and the data byte count parameters shown below.

Table 140. ReadMemoryResponse Parameters

Byte #	Parameter	Description
0 - 3	Status code	The status of the associated Read Memory command.
4 - 7	Data byte count	The number of bytes sent in the data phase.

FlashReadOnceResponse: The FlashReadOnceResponse packet is sent by the target in response to the host sending a FlashReadOnce command. The FlashReadOnceResponse packet contains the framing packet data and the command packet data, with the command/response tag set to a FlashReadOnceResponse tag value (0xAF), and the flags field set to 0. The parameter count is set to 2 plus *the number of words* requested to be read in the FlashReadOnceCommand.

21.5.8 ISP commands set

Available ISP commands set is limited per lifecycle state.

Table 141. ISP Commands Set

Lifecycle	Command sets
Develop	Full commands set: • ReadMemory • FlashEraseAll, • FlashEraseRegion, • Reset, • WriteMemory, • GetProperty, • Execute
In-field ROP1/ROP2	Partial commands set • FlashEraseAll, • Reset, • GetProperty,
In-field ROP3	NA

21.5.8.1 GetProperty command

The GetProperty command is used to query the bootloader about various properties and settings. Each supported property has a unique 32-bit tag associated with it. The tag occupies the first parameter of the command packet. The target returns a GetPropertyResponse packet with the property values for the property identified with the tag in the GetProperty command.

Properties are the defined units of data that can be accessed with the GetProperty or SetProperty commands. Properties may be read-only or read-write. All read-write properties are 32-bit integers, so they can easily be carried in a command parameter.

The 32-bit property tag is the only parameter required for GetProperty command.

Table 142. Parameters for GetProperty Command

Byte #	Parameter
0 - 3	Property tag See section 6.6.17 for more details.
4 - 7	External Memory Identifier (only applies to get property for external memory, or status identifier if the property tag is equal to 8).

Table 143. GetProperty Command Packet Format (Framing example)

GetProperty	Parameter	Value
Framing packet	Start byte	0x5A
	PacketType	0xA4, kFramingPacketType_Command
	Length	0x0C 0x00
	Crc16	0x4B 0x33

Table 144. GetProperty Command Packet Format (example)

GetProperty	Parameter	Value
Command packet	CommandTag	0x07 – GetProperty
	Flags	0x00
	Reserved	0x00
	ParameterCount	0x02
	PropertyTag	0x00000001 - CurrentVersion
	Memory ID	0x00000000 - Internal Flash

The GetProperty command has no data phase.

Response: In response to a GetProperty command, the target sends a

GetPropertyResponse packet with the response tag set to 0xA7. The parameter count indicates the number of parameters sent for the property values, with the first parameter showing status code 0, followed by the property value(s). [Table 4-20](#) shows an example of a GetPropertyResponse packet.

Table 145. GetProperty Response Packet Format (example)

GetPropertyResponse	Parameter	Value
Framing packet	Start byte	0x5A
	PacketType	0xA4, kFramingPacketType_Command
	Length	0x0c 0x00 (12 bytes)
	Crc16	0x07 0x7a
Command packet	ResponseTag	0xA7
	Flags	0x00
	Reserved	0x00
	ParameterCount	0x02

Table continues on the next page...

Table 145. GetProperty Response Packet Format (example) (continued)

	Status	0x00000000
	PropertyValue	0x0000014b - CurrentVersion

21.5.8.2 FlashEraseAll command

The FlashEraseAll command performs an erase of the entire flash memory. If any flash regions are protected, then the FlashEraseAll command fails and returns an error status code. The Command tag for FlashEraseAll command is 0x01 set in the commandTag field of the command packet.

The FlashEraseAll command requires memory ID. If memory ID is not specified, the internal flash (memory ID =0) will be selected as default.

Table 146. Parameter for FlashEraseAll Command

Byte #	Parameter	
0-3	Memory ID	
	0x000	Internal Flash

Table 147. FlashEraseAll Command Packet Format (example)

FlashEraseAll	Parameter	Value
Framing packet	Start byte	0x5A
	PacketType	0xA4, kFramingPacketType_Command
	Length	0x08 0x00
	Crc16	0x0C 0x22
Command packet	CommandTag	0x01 - FlashEraseAll
	Flags	0x00
	Reserved	0x00
	ParameterCount	0x01
	Memory ID	Refer the above table

The FlashEraseAll command has no data phase.

Response: The target returns a GenericResponse packet with status code either set to kStatus_Success for successful execution of the command or set to an appropriate error status code.

21.5.8.3 FlashEraseRegion command

The FlashEraseRegion command performs an erase of one or more sectors of the flash memory.

The start address, and number of bytes are the two parameters required for the FlashEraseRegion command. The start address and byte count parameters are aligned down and aligned up respectively to be sector aligned before erase operation. If the region specified does not fit in the flash memory space, the FlashEraseRegion command fails and returns

kStatus_FlashAddressError (102). If any part of the region specified is protected, the FlashEraseRegion command fails and returns kStatus_MemoryRangeInvalid (10200).

Table 148. Parameters for FlashEraseRegion Command

Byte #	Parameter
0-3	Start address
4 - 7	Byte count
8 - 11	Memory ID

The FlashEraseRegion command has no data phase.

Response: The target returns a GenericResponse packet with one of the following error status codes.

Table 149. FlashEraseRegion Response Status Codes

Status code
kStatus_Success (0).
kStatus_MemoryRangeInvalid (10200).
kStatus_FlashAlignmentError (101).
kStatus_IFlashAddressError (102).
kStatus_FlashAccessError (103).
kStatus_FlashProtectionViolation (104).
kStatus_FlashCommandFailure (105).

21.5.8.4 ReadMemory command

The ReadMemory command returns the contents of memory at the given address, for a specified number of bytes. This command can read any region of memory accessible by the CPU and not protected by security.

The start address, and number of bytes are the two parameters required for ReadMemory command. The memory ID is optional. Internal memory will be selected as default if memory ID is not specified.

Table 150. Parameter for Read Memory Command

Byte #	Parameter	Description
0-3	Start address	Start address of memory to read from.
4-7	Byte count	Number of bytes to read and return to caller.
8-11	Memory ID	Internal or external memory Identifier.

Table 151. ReadMemory Command Packet Format (example)

ReadMemory	Parameter	Value
Framing packet	Start byte	0x5A
	PpacketType	0xA4, kFramingPacketType_Command
	Length	0x10 0x00
	Crc16	0xF4 0x1B
Command packet	CommandTag	0x03 - ReadMemory
	Flags	0x00
	Reserved	0x00
	ParameterCount	0x03
	StartAddress	0x20000400
	ByteCount	0x00000064
	Memory ID	0x0

Data Phase: The ReadMemory command has a data phase. Because the target works in slave mode, the host needs to pull data packets until the number of bytes of data specified in the byteCount parameter of ReadMemory command are received by host.

Response: The target returns a GenericResponse packet with a status code either set to kStatus_Success upon successful execution of the command or set to an appropriate error status code

21.5.8.5 WriteMemory command

The WriteMemory command writes data provided in the data phase to a specified range of bytes in memory (flash or RAM). However, if flash protection is enabled, then writes to protected sectors fail.

Special care must be taken when writing to flash.

- First, any flash sector written to must have been previously erased with a FlashEraseAll or FlashEraseRegion command.
- Writing to flash requires the start address to be page aligned.
- The byte count is rounded up to a page size, and trailing bytes are filled with the flash erase pattern (0xff).
- If the VerifyWrites property is set to true, then writes to flash also performs a flash verify program operation.

When writing to RAM, the start address does not need to be aligned, and the data is not padded.

The start address and number of bytes are the two parameters required for WriteMemory command. The memory ID is optional. Internal memory will be selected as default if memory ID is not specified.

Table 152. Parameters for WriteMemory Command

Byte #	Command
0-3	Start address

Table continues on the next page...

Table 152. Parameters for WriteMemory Command (continued)

4-7	Byte count
8-11	Memory ID

Table 153. WriteMemory Command Packet Format (example)

WriteMemory	Parameter	Value
Framing packet	Start byte	0x5A
	PacketType	0xA4, kFramingPacketType_Command
	Length	0x10 0x00
	Crc16	0x97 0xDD
Command packet	CommandTag	0x04 - WriteMemory
	Flags	0x01
	Reserved	0x00
	ParameterCount	0x03
	StartAddress	0x20000400
	ByteCount	0x00000064
	Memory ID	0x0

Data Phase: The WriteMemory command has a data phase; the host sends data packets until the number of bytes of data specified in the byteCount parameter of the WriteMemory command are received by the target.

Response: The target returns a GenericResponse packet with a status code set to kStatus_Success upon successful execution of the command, or to an appropriate error status code.

21.5.8.6 Execute command

The Execute command results in the bootloader setting the program counter to the code at the provided jump address, R0 to the provided argument, and a Stack pointer to the provided stack pointer address. Prior to the jump, the system is returned to the reset state.

The Jump address, function argument pointer, and stack pointer are the parameters required for the Execute command. If the stack pointer is set to zero, the called code is responsible for setting the processor stack pointer before using the stack.

Table 154. Parameters for Execute Command

Byte #	Command
0-3	Jump address.
4-7	Argument word.
8-11	Stack pointer address.

The Execute command has no data phase.

Response: Before executing the Execute command, the target validates the parameters and return a GenericResponse packet with a status code either set to kStatus_Success or an appropriate error status code.

21.5.8.7 Reset command

The Reset command results in the bootloader resetting the chip.

The Reset command requires no parameters.

Table 155. Reset Command Packet Format (example)

Reset	Parameter	Value
Framing packet	Start byte	0x5A
	PacketType	0xA4, kFramingPacketType_Command
	Length	0x04 0x00
	Crc16	0x6F 0x46
Command packet	CommandTag	0x0B - reset
	Flags	0x00
	Reserved	0x00
	ParameterCount	0x03

The Reset command has no data phase.

Response: The target returns a GenericResponse packet with status code set to kStatus_Success, before resetting the chip.

The reset command can also be used to switch boot from flash after successful flash image provisioning via ROM bootloader. After issuing the reset command, allow five seconds for the user application to start running from Flash.

21.5.9 Get Properties Command Properties

This section lists the properties of the GetProperty and SetProperty commands.

Get/Set property definitions are provided in this section.

Table 156. Properties Used by Get/SetProperty Commands, Sorted by Values

Property	Writable	Tag Value	Size	Description
Current Version	No	01h	4	Current bootloader version.
Available Peripherals	No	02h	4	The set of peripherals supported on this chip.
Available Commands	No	07h	4	The set of commands supported by the bootloader
Check Status	No	08h	4	Return the status based on specified status identifier 0 – CRC status 32-bit return value for

Table continues on the next page...

Table 156. Properties Used by Get/SetProperty Commands, Sorted by Values (continued)

				CRC Check 1. – Application CRC check failed 2. – Application CRC check is inactive 3. – Application CRC check is invalid a. – Last Error See the details of last error in later section
Max Packet Size	No	0Bh	4	Maximum supported packet size for the currently active peripheral interface.
Lifecycle State	No	11h	4	The lifecycle of the device. 0x5aa55aa5 – Device is in development lifecycle. 0xc33cc33c – Device is in deployment lifecycle.
Unique Device Identification	No	12h	16	Unique device identification
Target Version	No	18h	4	Extended bootloader version

21.5.9.1 Current Version property

The value of this property is a 4-byte structure containing the current version of the bootloader.

Table 157. Current Version Property Fields

Bit	[31:24]	[23:16]	[15:8]	[7:0]
Field	Name = 'K' (0x4B)	Major version	Minor version	Bugfix version

Get/Set property definitions are provided in this section.

21.5.9.2 Available Peripherals property

The value of this property is a bitfield that lists the peripherals supported by the bootloader and the hardware on which it is running.

Table 158. Peripheral Bits

Bit	[31:7]	[6]	[5]	[4]	[3]	[2]	[1]	[0]
Field	Reserved	Reserved	Reserved	USB HID	Reserved	SPI Slave	I2C Slave	LPUART

If the peripheral is available, then the corresponding bit will be set in the property value. All reserved bits must be set to 0.

21.5.9.3 Available Commands property

This property value is a bitfield with set bits indicating the commands enabled in the bootloader. Only commands that can be sent from the host to the target are listed in the bitfield. Response commands such as GenericResponse are excluded.

The bit number that identifies whether a command is present is the command's tag value minus 1. 1 is subtracted from the command tag because the lowest command tag value is 0x01. To get the bit mask for a given command, use this expression: $\text{mask} = 1 \ll (\text{tag} - 1)$.

Table 159. Command Bits

Bit	[Others]	[20]	[16]	[15]	[14]	[13]	[12]	[11]	[10]	[9]	[8]	[7]	[6]	[5]	[4]	[3]	[2]	[1]	[0]
Command																			

21.5.9.4 Target Version property

The value of this property is a 4-byte structure containing the current version of the extended bootloader.

Table 160. Target Version Property Fields

Bit	[31:24]	[23:16]	[15:8]	[7:0]
Field	Name = 'T' (0x4B)	Major version	Minor version	Bugfix version

Get/Set property definitions are provided in this section.

21.5.10 Serial Boot on USB path

The bootloader supports In-System Programming using the USB peripheral. The target is implemented as USB-HID device classes.

When transfer data through USB-HID device class, USB-HID does not use framing packets. Instead, the packetization, inherent in the USB protocol itself is used. The ability for the device to NAK Out transfers (until they can be received) provides the required flow control. The built-in CRC of each USB packet provides the required error detection

21.5.10.1 Device descriptor

The bootloader configures the default USB VID/PID/Strings as below:

Default VID/PID:

- VID = 0x1FC9.
- PID = 0x0155.

Default Strings:

- Manufacturer [1] = "NXP SEMICONDUCTOR INC".
- Product [2] = "USB COMPOSITE DEVICE".

The USB VID, PID, and Strings can be customized using the CMPA of the flash. For example, the USB VID and PID can be customized by writing the new VID to the usbVid field and the new PID to the usbPid field of the CMPA in flash.

21.5.10.2 Endpoints

The HID peripheral uses three endpoints:

- Control (0)
- Interrupt IN (1)
- Interrupt OUT (2)

The Interrupt OUT endpoint is optional for HID class devices, but the MCU bootloader uses it as a pipe, where the firmware can NAK send requests from the USB host.

21.5.10.3 HID Reports

There are four HID reports defined and used by the bootloader USB HID peripheral. The report ID determines the direction and type of packet sent in the report; otherwise, the contents of all reports are the same.

Table 161. HID reports assigned for the bootloader

Report ID	Packet Type	Direction
1	Command	OUT
2	Data	OUT
3	Command	IN
4	Data	IN

Each report has a maximum size of 60 bytes. The maximum payload size is 56 bytes. In addition, there is a 4-byte report header that indicates the length (in bytes) of the payload and report id sent the packet.

Note: In the future, the maximum report size may be increased, to support transfers of larger packets. Alternatively, additional reports may be added with larger maximum sizes.

The actual data sent in all of the reports looks like:

Table 162. Data format sent in USB HID packet

0	Report ID
1	Padding
2	Packet Length LSB
3	Packet Length MSB
4	Packet[0]
5	Packet[1]
6	Packet[2]
	...
N+4-1	Packet[N-1]

This data includes the Report ID, which is required if more than one report is defined in the HID report descriptor. The actual data sent and received has a maximum length of 35 bytes. The Packet Length header is written in little-endian format, and it is set to the size

(in bytes) of the packet sent in the report. This size does not include the Report ID or the Packet Length header itself. During a data phase, a packet size of 0 indicates a data phase abort request from the receiver.

21.5.11 Serial Boot on LPUART path

The bootloader integrates an autobaud detection algorithm for the UART peripheral, thereby providing flexible baud rate choices.

Autobaud feature: If UART n is used to connect to the bootloader, then the UART n _RX pin must be kept high and not left floating during the detection phase in order to comply with the autobaud detection algorithm. After the bootloader detects the Ping packet (0x5A 0xA6) on UART n _RX, the bootloader firmware executes the autobaud sequence.

If the baudrate is successfully detected, then the bootloader sends a Ping packet response [(0x5A 0xA7), protocol version (4 bytes), protocol version options (2 bytes) and crc16 (2 bytes)] at the detected baudrate. The bootloader then enters a loop, waiting for bootloader commands via the UART peripheral.

NOTE

The data bytes of the ping packet must be sent continuously (with no more than 80 ms between bytes) in a fixed UART transmission mode (8-bit data, no parity bit and 1 stop bit). If the bytes of the ping packet are sent one-by-one with more than 80 ms delay between them, then the autobaud detection algorithm may calculate an incorrect baud rate. In this instance, the autobaud detection state machine should be reset.

Supported baud rates: The baud rate is closely related to the MCU core and system clock frequencies. Typical baud rates supported are 9600, 19200, 38400, 57600, 115200, 230400 and 460800.

Packet transfer: After autobaud detection succeeds, bootloader communications can take place over the UART peripheral. The following flow charts show:

- How the host detects an ACK from the target.
- How the host detects a ping response from the target.
- How the host detects a command response from the target.

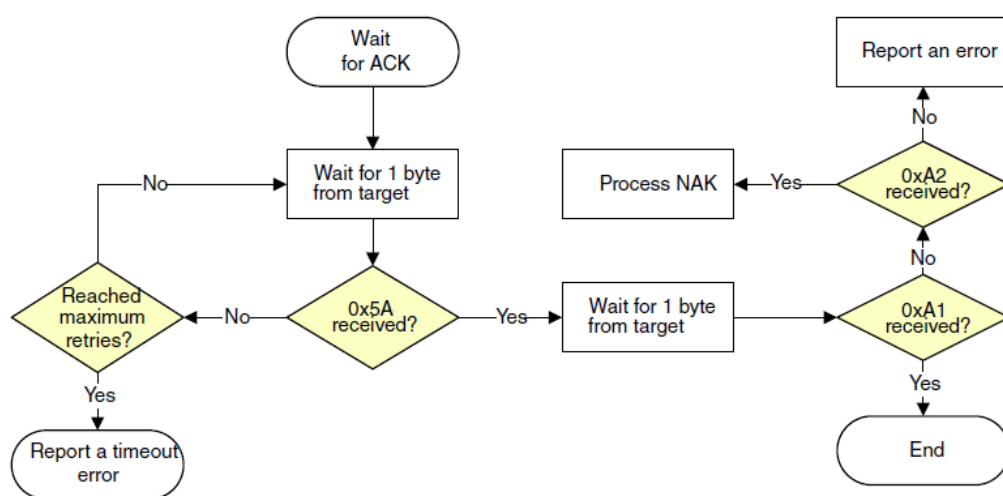


Figure 4-21 Host Reads an ACK from Target via LPUART

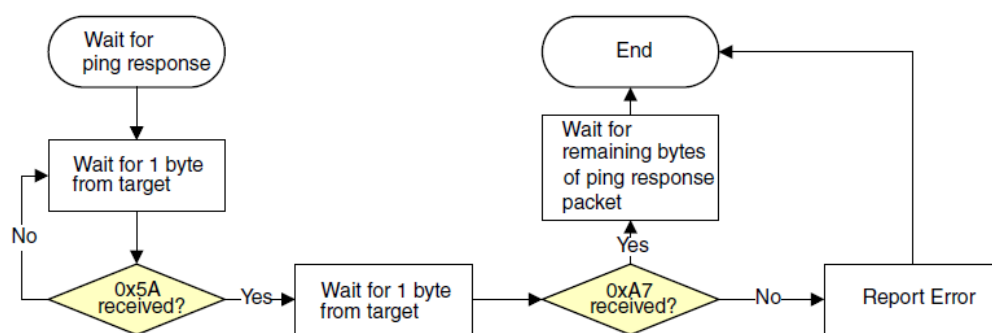


Figure 4-22 Host Reads a Ping Response from Target via LPUART

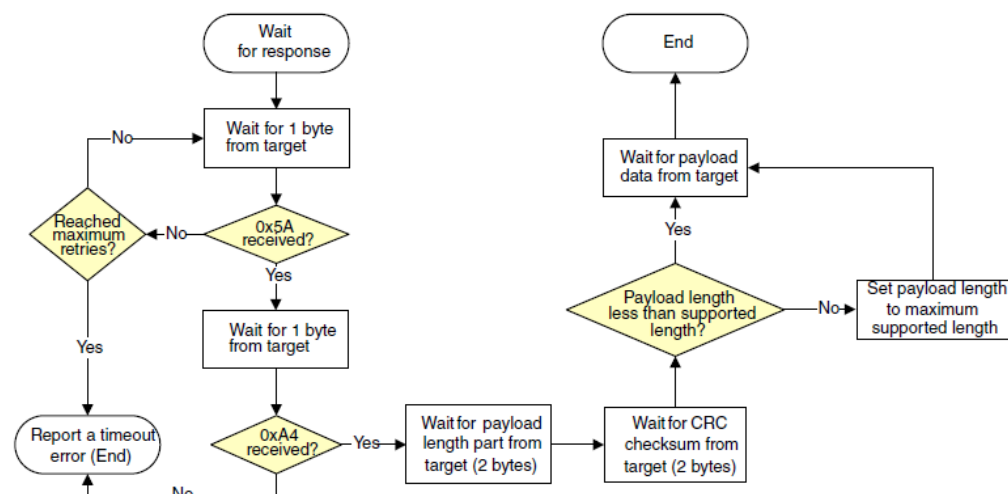


Figure 4-23 Host Reads a Command Response from Target vis LPUART

21.5.12 Extended Bootloader API

21.5.13 Bootloader Status Error Codes

This section describes the status error codes that the Bootloader returns to the host.

Table 163. Bootloader Status Error Codes, Sorted by Value

Error Code	Value	Description
kStatus_Success	0	Operation succeeded without error.
kStatus_Success	0	Operation succeeded without error.
kStatus_Fail	1	The operation failed with a generic error.
kStatus_ReadOnly	2	Requested value cannot be changed because it is read-only.
kStatus_OutOfRange	3	Requested value is out of range.
kStatus_InvalidArgument	4	The requested command's argument is undefined.
kStatus_Timeout	5	A timeout occurred.
kStatus_NoTransferInProgress	6	No send in progress
kStatus_FLASH_Success	0	API is executed successfully
kStatus_FLASH_InvalidArgument	4	An invalid argument is provided
kStatus_FlashSizeError	100	Not used.

Table continues on the next page...

Table 163. Bootloader Status Error Codes, Sorted by Value (continued)

kStatus_FlashAlignmentError	101	Address or length does not meet the required alignment.
kStatus_FlashAddressError	102	Address or length is outside addressable memory.
kStatus_FlashAccessError	103	The FTFA_FSTAT[ACCERR] bit is set.
kStatus_FlashProtectionViolation	104	The FTFA_FSTAT[FPVIOL] bit is set.
kStatus_FlashCommandFailure	105	The FTFA_FSTAT[MGSTAT0] bit is set.
kStatus_FlashUnknownProperty	106	Unknown Flash property.
kStatus_FlashEraseKeyError	107	The key provided does not match the programmed flash key.
kStatus_FlashRegionExecuteOnly	108	The area of flash is protected as execute-only.
kStatus_FLASH_ExecuteInRamFunctionNotReady	109	Execute-in-RAM function is not available
kStatus_FLASH_CommandNotSupported	111	Flash API is not supported
kStatus_FLASH_ReadOnlyProperty	112	The flash property is read-only
kStatus_FLASH_InvalidPropertyValue	113	The flash property value is out of range
kStatus_FLASH_InvalidSpeculationOption	114	The option of flash prefetch speculation is invalid
kStatus_FLASH_EccError	116	A correctable or uncorrectable error during command execution
kStatus_FLASH_CompareError	117	Destination and source memory contents do not match
kStatus_FLASH_RegulationLoss	118	A loss of regulation during read
kStatus_FLASH_InvalidWaitStateCycles	119	The wait state cycle set to r/w mode is invalid
kStatus_FLASH_OutOfDateCfpaPage	132	CFPA page version is out of date
kStatus_FLASH_BlankIfrPageData	133	Blank page cannot be read
kStatus_FLASH_EncryptedRegionsEraseNotDoneAtOnce	134	Encrypted flash subregions are not erased at once
kStatus_FLASH_ProgramVerificationNotAllowed	135	Program verification is not allowed when the encryption is enabled
kStatus_FLASH_HashCheckError	136	Hash check of page data is failed

Table continues on the next page...

Table 163. Bootloader Status Error Codes, Sorted by Value (continued)

kStatus_FLASH_SealedFfrRegion	137	The FFR region is sealed
kStatus_FLASH_FfrRegionWriteBroken	138	The FFR Spec region is not allowed to be written discontinuously
kStatus_FLASH_NmpaAccessNotAllowed	139	The NMPA region is not allowed to be read/written/erased
kStatus_FLASH_CmpaCfgDirectEraseNotAllowed	140	The CMPA Cfg region is not allowed to be erased directly
kStatus_FLASH_FfrBankIsLocked	141	The FFR bank region is locked
kStatus_FLASH_CfpaScratchPageInvalid	148	CFPA Scratch Page is invalid
kStatus_FLASH_CfpaVersionRollbackDisallowed	149	CFPA version rollback is not allowed
kStatus_FLASH_ReadHidingAreaDisallowed	150	Flash hiding read is not allowed
kStatus_FLASH_ModifyProtectedAreaDisallowed	151	Flash firewall page locked erase and program are not allowed
kStatus_FLASH_CommandOperationInProgress	152	The flash state is busy, indicate that a flash command in progress.
kStatus_UnknownCommand	10000	this command is not recognized
kStatus_SecurityViolation	10001	Security Violation happened when receiving disallowed commands
kStatus_AbortDataPhase	10002	Sender requested data phase abort
kStatus_Ping	10003	Ping Command Received from the host
kStatus_NoResponse	10004	No Response from the host
kStatus_NoResponseExpected	10005	Expected No Response from the host
kStatus_CommandUnsupported	10006	Unsupported command was received
kStatusRomLdrSectionOverrun	10100	means reached the end of the sb file processing
kStatusRomLdrSignature	10101	the signature or version are incorrect
kStatusRomLdrSectionLength	10102	the bootOffset/ new section count is out of range
kStatusRomLdrUnencryptedOnly	10103	the unencrypted image is disabled
kStatusRomLdrEOFReached	10104	the end of the image file is reached

Table continues on the next page...

Table 163. Bootloader Status Error Codes, Sorted by Value (continued)

kStatusRomLdrChecksum	10105	The checksum of a command tag block is invalid.
kStatusRomLdrCrc32Error	10106	The CRC-32 of the data for a load command is incorrect.
kStatusRomLdrUnknownCommand	10107	An unknown command was found in the SB file.
kStatusRomLdrIdNotFound	10108	There was no bootable section found in the SB file.
kStatusRomLdrDataUnderrun	10109	The SB state machine is waiting for more data.
kStatusRomLdrJumpReturned	10110	The function that was jumped to by the SB file has returned.
kStatusRomLdrCallFailed	10111	The call command in the SB file failed.
kStatusRomLdrKeyNotFound	10112	A matching key was not found in the SB file's key dictionary to unencrypt the section.
kStatusRomLdrSecureOnly	10113	The SB file sent is unencrypted, and security on the target is enabled.
kStatusRomLdrResetReturned	10114	The SB file reset operation has unexpectedly returned.
kStatusRomLdrRollbackBlocked	10115	An Image version rollback event detected
kStatusRomLdrInvalidSectionMacCount	10116	Invalid Section MAC count detected in the SB file
kStatusRomLdrUnexpectedCommand	10117	The command tag in the sb-file is unexpected
kStatusRomLdrBadSBKEK	10118	Bad SBKEK detected
kStatusRomLdrPendingJumpCommand	10119	Represent the jump command is pending and the actual jump is implemented in sbloader_finalize()
kStatusMemoryRangeInvalid	10200	The requested address range does not match an entry, or the length extends past the matching entry's end address.
kStatusMemoryReadFailed	10201	Memory Read Failed
kStatusMemoryWriteFailed	10202	Memory Write failed

Table continues on the next page...

Table 163. Bootloader Status Error Codes, Sorted by Value (continued)

kStatusMemoryCumulativeWrite	10203	Cumulative Write happened due to write to un-erased FLASH region
kStatusMemoryNotConfigured	10205	Memory is not configured yet before access
kStatusMemoryAlignmentError	10206	Alignment Error happened during access to memory
kStatusMemoryVerifyFailed	10207	Verifying operation failed after erasing/programming FLASH
kStatusMemoryWriteProtected	10208	The memory to be written is protected
kStatusMemoryAddressError	10209	The Memory address is invalid/wrong
kStatusMemoryBlankCheckFailed	10210	Check the blank memory failed
kStatusMemoryBlankPageReadDisallowed	10211	The memory is blank, and read command is disallowed
kStatusMemoryProtectedPageReadDisallowed	10212	The memory is protected, and read command is disallowed
kStatusMemoryFfrSpecRegionWriteBroken	10213	The write operation to the FFR Region was broken
kStatusMemoryUnsupportedCommand	10214	The memory command is not supported
kStatus_UnknownProperty	10300	The requested property value is undefined.
kStatus_ReadOnlyProperty	10301	The requested property value cannot be written.
kStatus_InvalidPropertyValue	10302	The specified property value is invalid.
kStatus_AppCrcCheckPassed	10400	CRC check is valid and passed.
kStatus_AppCrcCheckFailed	10401	CRC check is valid but failed.
kStatus_AppCrcCheckInactive	10402	CRC check is inactive.
kStatus_AppCrcCheckInvalid	10403	CRC check is invalid because the BCA is invalid, or the CRC parameters are unset (all 0xFF bytes).
kStatus_AppCrcCheckOutOfRange	10404	CRC check is valid, but addresses are out of range.
kStatus_RomApiExecuteCompleted	0	ROM successfully process the whole sb file/ boot image

Table continues on the next page...

Table 163. Bootloader Status Error Codes, Sorted by Value (continued)

kStatus_RomApiNeedMoreData	10801	ROM needs more data to continue processing the boot image
kStatus_RomApiBufferSizeNotEnough	10802	The user buffer is not enough for use by Kboot during execution of the operation
kStatus_RomApiInvalidBuffer	10803	The user buffer is not ok for sbloader or authentication
kStatus_FLEXSPI_SequenceExecutionTimeout	6000	The FLEXSPI Sequence Execution timeout
kStatus_FLEXSPI_InvalidSequence	6001	The FLEXSPI LUT sequence invalid
kStatus_FLEXSPI_DeviceTimeout	6002	The FLEXSPI device timeout
kStatus_FLEXSPINOR_ProgramFail	20100	Page programming failure
kStatus_FLEXSPINOR_EraseSectorFail	20101	Sector Erase failure
kStatus_FLEXSPINOR_EraseAllFail	20102	Chip Erase failure
kStatus_FLEXSPINOR_WaitTimeout	20103	The execution time out
kStatus_FlexSPINOR_NotSupported	20104	Page size overflow
kStatus_FlexSPINOR_WriteAlignmentError	20105	Address alignment error
kStatus_FlexSPINOR_CommandFailure	20106	Erase/Program Verify Error
kStatus_FlexSPINOR_SFDP_NotFound	20107	Timeout occurs during the API call
kStatus_FLEXSPINOR_Unsupported_SFDP_Version	20108	Unrecognized SFDP version
kStatus_FLEXSPINOR_FLASH_NotFound	20109	Flash detection failure
kStatus_FLEXSPINOR_DTRRead_DummyProbeFailed	20110	DDR Read dummy probe failure
kStatus_IAP_Success	0	IAP API execution succeeded
kStatus_IAP_Fail	1	IAP API exeution failed
kStatus_IAP_InvalidArgument	100001	Invalid argument detected during API execution
kStatus_IAP_OutOfMemory	100002	The Heap size is not enough during API execution

Table continues on the next page...

Table 163. Bootloader Status Error Codes, Sorted by Value (continued)

kStatus_IAP_ReadDisallowed	100003	The read memory operation is disallowed during API execution
kStatus_IAP_CumulativeWrite	100004	The FLASH region to be programmed is not empty
kStatus_IAP_EraseFailure	100005	Erase operation failed
kStatus_IAP_CommandNotSupported	100006	The specific command is not supported
kStatus_IAP_MemoryAccessDisabled	100007	Memory access is disabled, typically occurred on the FLEXSPI NOR if it is not configured properly

Chapter 22

Clocking

22.1 Introduction

The main component of the clocking architecture is the System Clock Generator (SCG) module. The SCG controls multiple clock sources that are distributed to the main CPU platform, the memory modules and the peripheral modules. The peripheral modules have an *interface* clock that is used by the CPU/DMA to interface with each module's registers. When applicable, modules may also have *functional* clocks to provide the main timing function of the module's application. For example, functional clocks can be used to source the baud rate for a serial communications peripheral or to clock the counter of a timer peripheral.

The SCG controls the on chip clock sources, including 8~50MHz SOSC(System Oscillator), FRO180M and FRO12M. It also generates the clock sources for peripherals functional clock. A clock mux is implemented in SCG-Lite to select the clock source for main_clk.

The MAIN_CLK can be sourced directly from the following:

- FRO180M
- FRO12M
- FRO16K
- 50 MHz SOSC
- SCG SPLL as one source

Clock monitor is implemented for SOSC. When enabled, SOSC clock is monitored by FRO12M. 1 MHz clock is derived from FRO12M, and is always on in active and sleep mode.

22.2 Configure main clock and system clock

The clock source for the registers and memories is derived from main clock. The main clock can be selected from the sources listed in step 1 below.

The CPU_CLK derived from MAIN_CLK, also called the system clock, clocks the core, the memories, and the peripherals (register interfaces and peripheral clocks).

1. Select the main clock in the SCG_RCCR register. The following options are available:
 - FRO 12 MHz output (FRO12M) from internal oscillator.
 - FRO 16 kHz output (FRO16K).
 - FRO high speed output (fro_hf) from FRO180M. By default, it is 45 MHz. fro_hf is the default main clock.
 - SCG SPLL 180 MHz output.
 - 8~50MHz SOSC(System Oscillator).
2. Select the divider value for the system clock AHBCLKDIV register in the System Controller module.
3. Enable the clock for the memories and peripherals used in the application.
4. Peripheral clock must be disabled registers in SYSCON module when performing software reset on the peripherals. Once reset assertion and de-assertion are completed, the respective peripheral clock can be enabled.

22.3 Clock generation

The system control block facilitates the clock generation. Many clocking variations are possible. [Module clocking](#) gives an overview of potential clock options. [Table 164](#) describes signals on the clocking diagram. The maximum clock frequency is 180 MHz.

NOTE

The indicated clock multiplexers shown in [Module clocking](#) are synchronized. In order to operate, the currently selected clock must be running, and the clock to be switched to must also be running so the multiplexer can gracefully switch between the two clocks without glitches. Other clock multiplexers are not synchronized. The output divider can be stopped and restarted gracefully during switching if a glitch-free output is needed.

The FRO12M provides a 1 MHz clock (clk_1m). It is used as Watchdog 0 independent clock source. The accuracy of this clock is limited to a couple percent over temperature (see Data sheet for specification), voltage, and silicon processing variations after trimming made during assembly. To determine the actual Watchdog oscillator output, use the frequency measure block. See [Chip-specific Frequency Measurement information](#).

NOTE

The maximum allowed frequency for the main clock and system clock (to CPU0, AHB bus, Sync, etc.,) is 180 MHz.

Table 164. Clocking diagram signal name descriptions

Name ¹	Description
clk_16k[0]	It is the 16.384 KHz clock output from FRO16K. It is the clock of peripherals in system domain.
clk_16k[1]	It is the 16.384 KHz clock output from FRO16K. It is the clock of peripheral in core domain.
clk_in	It is the internal clock that comes from the external oscillator.
fro_hf	It is the clock output from FRO180/144M. The frequency is controlled by SCG-Lite SCG_FIRCCFG[FREQ_SEL] register.
fro_hf_div	It is the clock divided by fro_hf
clk_48M	It is the clock derived from from FRO180/144. If SCG_FIRCCFG.FREQ_SEL[0] is 1, it is 45MHz. If SCG_FIRCCFG.FREQ_SEL[1] is 0, and FRO180 is trimmed to 144MHz by SW, it is 48MHz.
pll1_clk	It is clock output from SCG SPLL.
pll1_clk_div	It is the clock derived from pll1_clk
fro_12M	It is the 12MHz clock output from FRO12M
fro_12m_div	It is clock derived from fro_12m
clk_1M	It is the 1 MHz clock output from FRO12M
main_clk	It is main clock used by the CPU, AHB bus, APB bus, IPS bus, and some peripherals. The main clock and its source selection are shown in Figure 37 .
CPU_CLK	It is the clock of CPU.
SYSTEM_CLK	It is the clock of AHB bus, APB bus, IPS bus. The frequency is same with CPU_CLK
BUS_CLK	It is the SYSTEM_CLK divided by 2. Most peripherals' APB and IPS bus is clocked by BUS_CLK
SLOW_CLK	It is the SYSTEM_CLK divided by 6

1. See the clock frequency table for max frequencies of each of these clocks.

Table 165. Clock frequency table

Clock Name	Max. Clock Frequency	
	MD Mode	OD Mode
clk_16k[0]/ clk_16k[1]	16.384 KHz	16.384 KHz
clk_in	SOSC OFF 50 MHz bypass mode	50 MHz max
fro_hf	90 MHz	180 MHz
fro_hf_div	45 MHz	180 MHz
clk_48M	48 MHz	48 MHz
fro_12M	24 MHz	24 MHz
fro_12m_div	24 MHz	24 MHz
pll1_clk	48 MHz	240 MHz
pll1_clk_div	48 MHz	240 MHz
clk_1M	1 MHz	1 MHz
main_clk	90 MHz	180 MHz
CPU_CLK	45 MHz	180 MHz
SYSTEM_CLK	45 MHz	180 MHz
BUS_CLK	22.5 MHz	90 MHz
SLOW_CLK	7.5 MHz	36 MHz

22.3.1 Peripheral bus clock

SYSTEM_CLK, BUS_CLK and SLOW_CLK can be used as APB/IPS bus clock. The peripherals that use SYSTEM_CLK and SLOW_CLK are listed as below. All other peripherals APB/IPS bus are used by BUS_CLK. The AHB interface peripherals should be SYSTEM_CLK.

The following peripherals use SLOW_CLK as APB/IPS clock:

- LPTMR0
- CMP0
- PORT0~4
- Wake Timer
- ATX0
- CMC
- SCG-Lite
- SPC
- WUU
- FMU
- PORT4
- RTC
- TRNG
- UDF

The following peripherals use SYSTEM_CLK as APB/IPS clock:

- FlexPWM0/1
- FlexCAN 0/1
- DMA
- EIM
- ERM
- CRC (Support faster CRC check time, to reduce boot time)
- SGI (Support better AES/SHA performance)
- CTimer 0~4
- uTick
- FREQME
- Peripheral Input Mux
- PKC
- ADC0~3

22.3.2 Peripheral clock summary

Modules	Max Functional Clock in MD mode	Max Functional Clock in OD mode
CPU and system modules		
Systick Clock	22.5MHz	22.5MHz
WWDT0 Clock	1MHz	1MHz
Trace Clock	45MHz	90MHz
Communication Modules		
LPUART0~2 Clock	45MHz	180MHz
LPSPi0~1 Clock	50MHz	100MHz
LPI2C0~3 Clock	25MHz	60MHz
CAN	45MHz	90MHz
Timer Modules		
LPTMR0 Clock	22.5MHz	22.5MHz
PWM0~1	90MHz	180MHz
Quad Decoder	22.5MHz	90MHz
Ctimer 0~2	90MHz	180MHz
Ostimer Clock	1MHz	1MHz
uTimer Clock	1MHz	1MHz
Frequency Measurement Unit	45MHz	180MHz
Analog Modules		

Table continues on the next page...

Table continued from the previous page...

ADC0~3	24MHz	64MHz
CMP0~2	22.5MHz	22.5MHz
DAC0	24MHz	60MHz
MISC Modules		
CLKOUT	45MHz	90MHz
Wake Timer	16.384KHz	16.384KHz
RTC	16.384KHz	16.384KHz
VBAT Clock	16.384KHz	16.384KHz

NOTE

It is the max. clock frequency of the modules in clock diagrams under different run mode

22.3.3 Module clocking

The following figures show the clock generation diagrams of the device's modules.

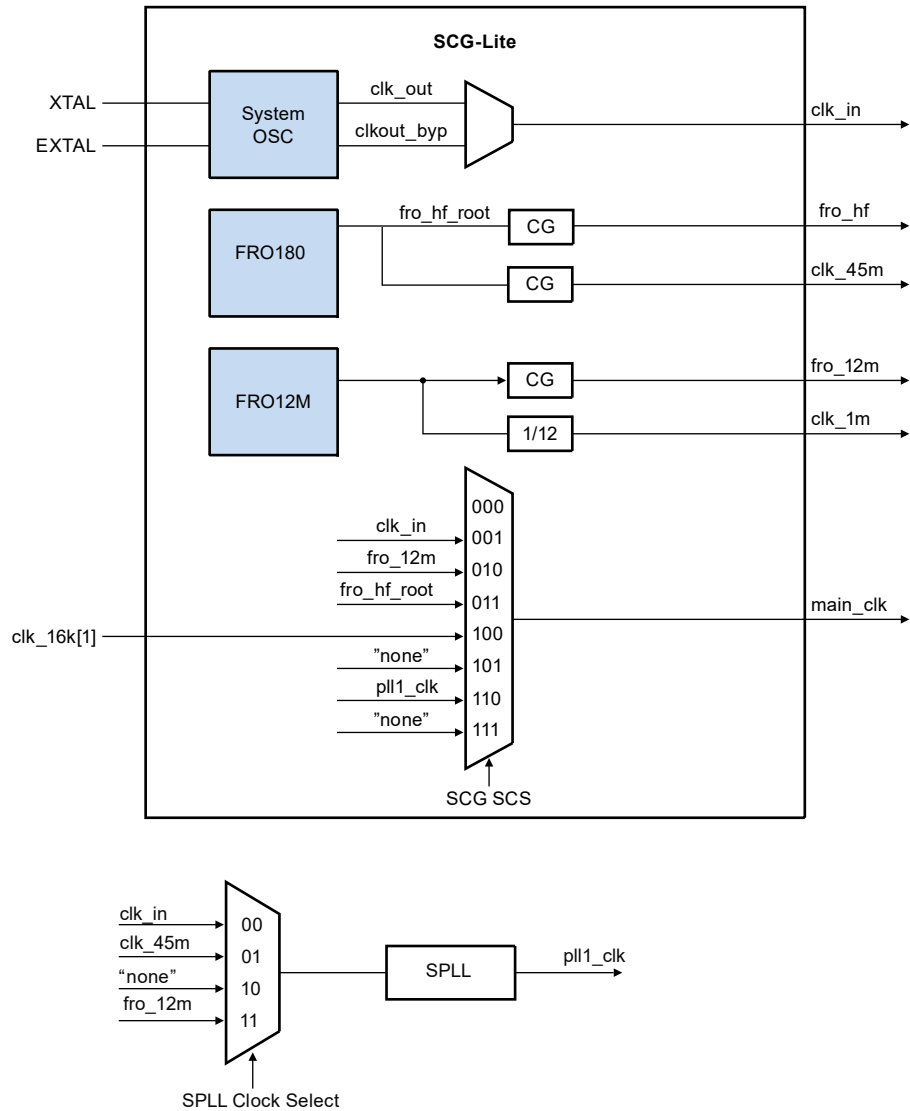


Figure 35. SCG clock

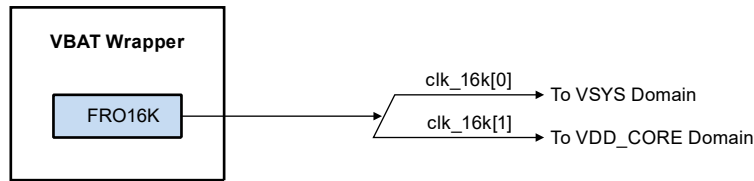


Figure 36. VBAT clock

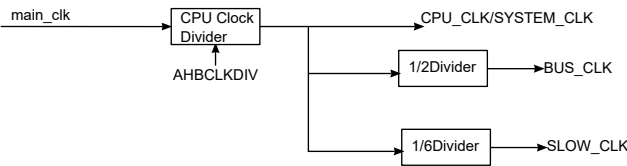


Figure 37. Main CPU clock

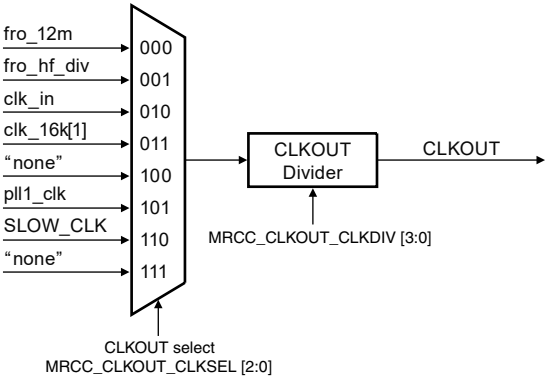


Figure 38. Clock Divider clock

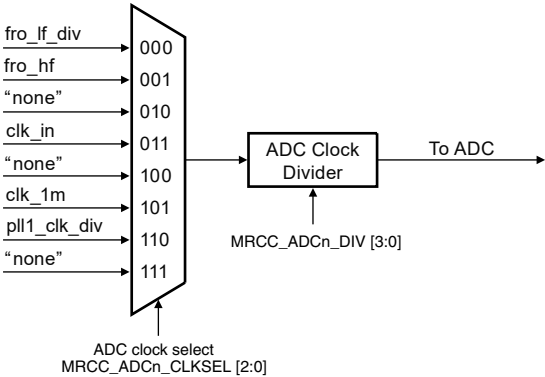


Figure 39. ADC clock

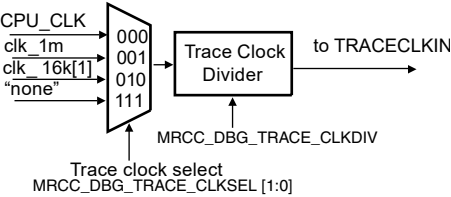


Figure 40. Trace clock

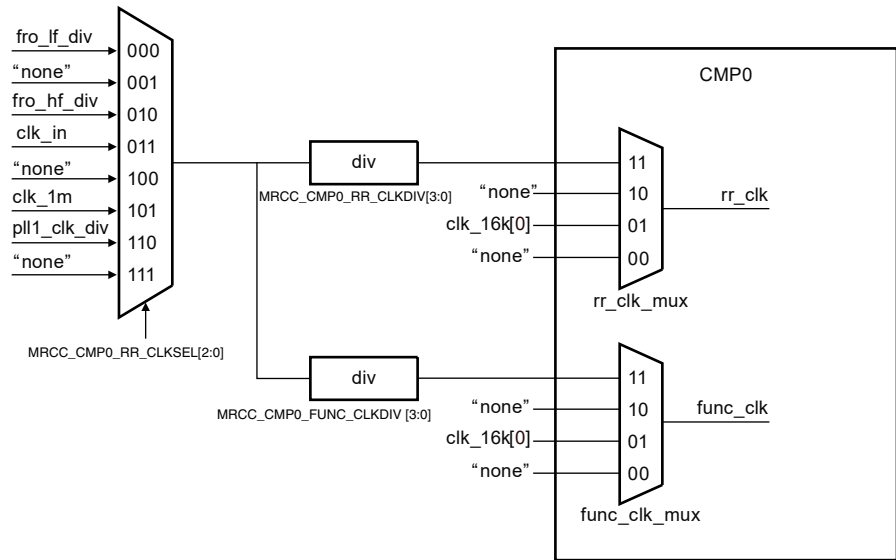


Figure 41. CMP0 clock

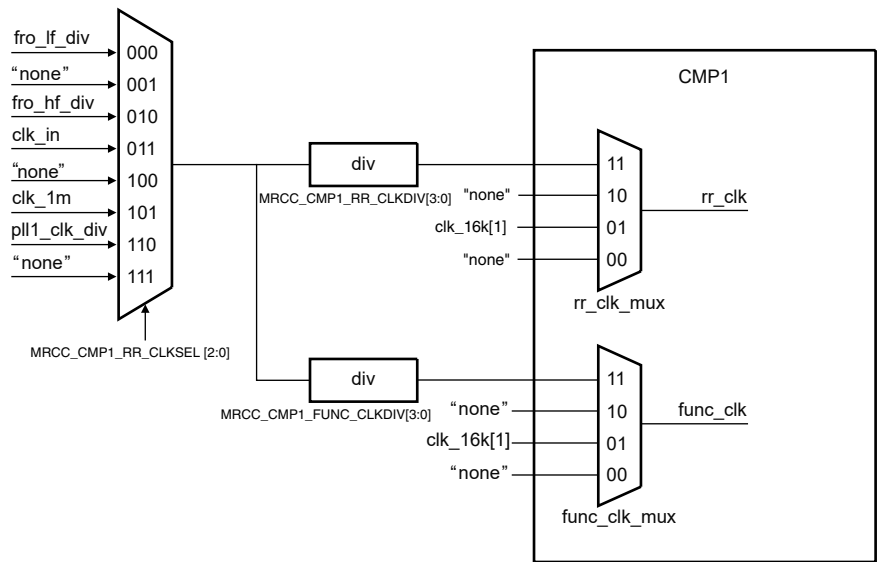


Figure 42. CMP1 clock

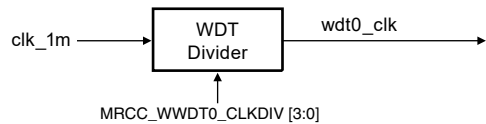


Figure 43. WWDT clock

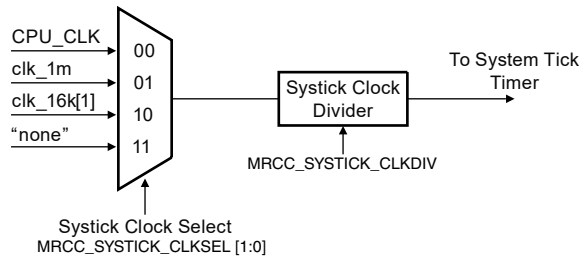


Figure 44. Systick clock

 


Figure 45. FRO HF clock

 


Figure 46. FRO LF clock

 


Figure 47. PLL divider clock

 


Figure 48. Flash clock



Figure 49. FlexPWM clock



Figure 50. CMC clock



Figure 51. RMC clock

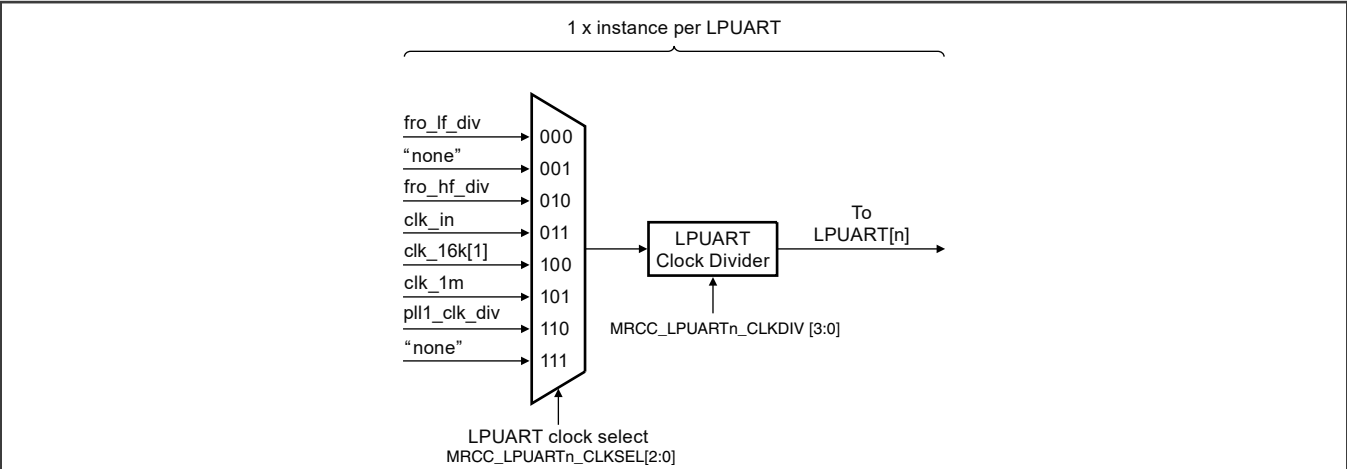


Figure 52. LPUART clock

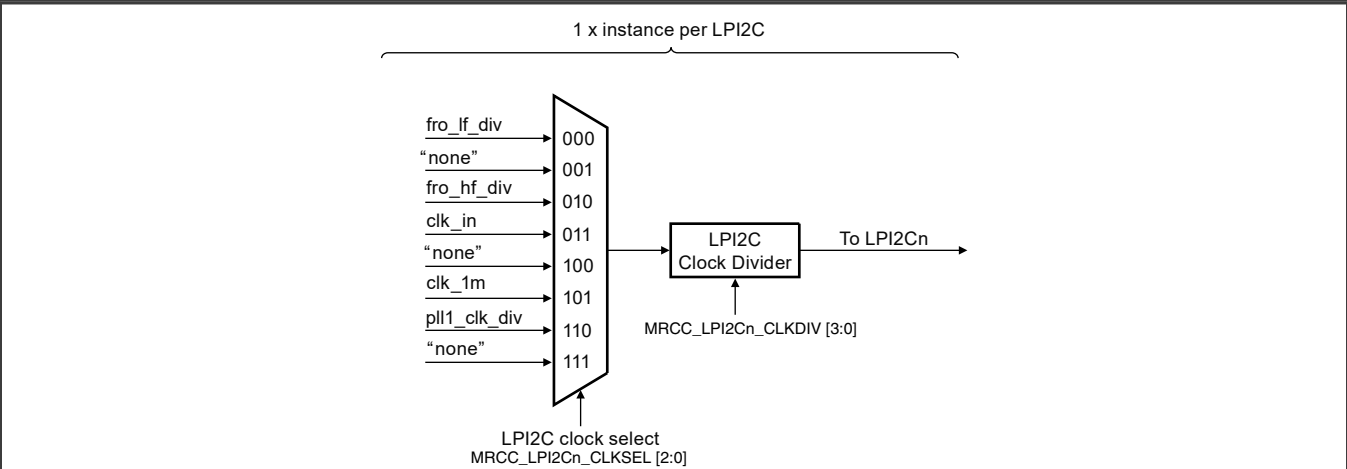


Figure 53. LPI2C clock

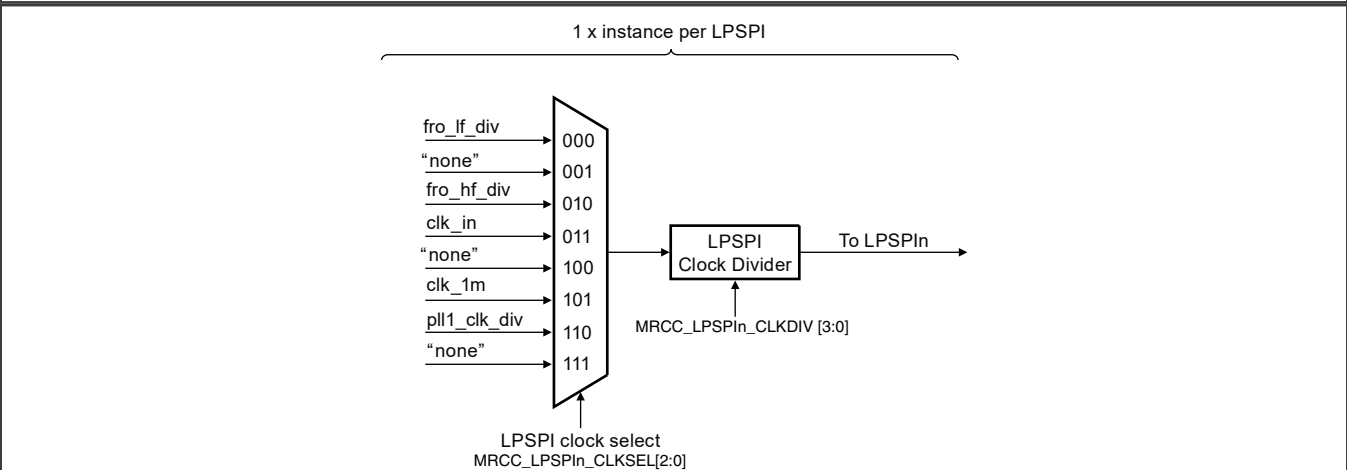


Figure 54. LPSPI clock

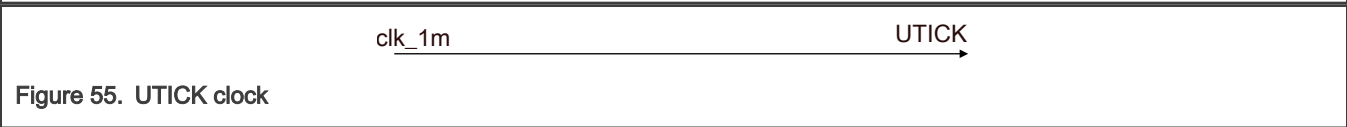


Figure 55. UTICK clock

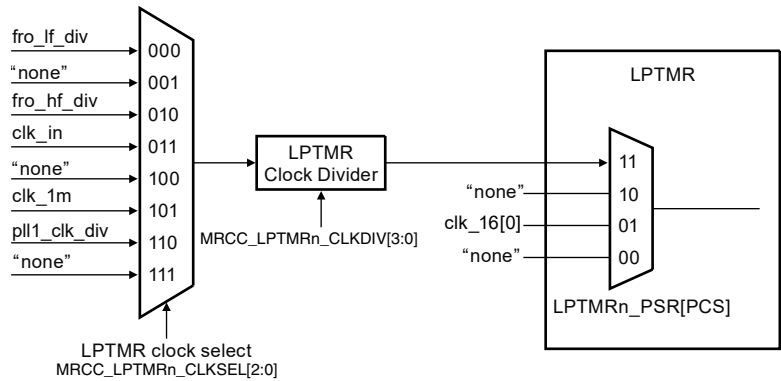


Figure 56. LPTMR clock

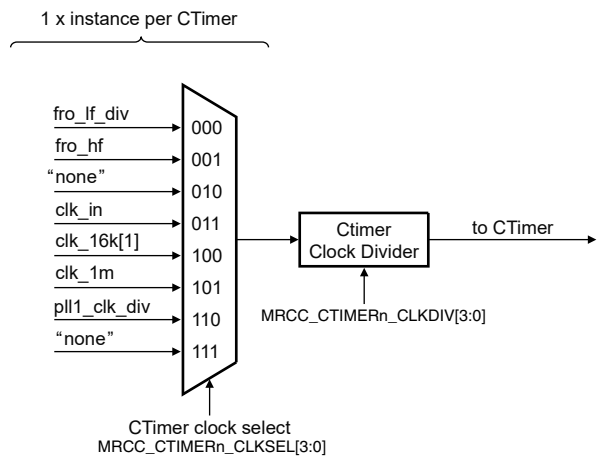


Figure 57. CTimer clock

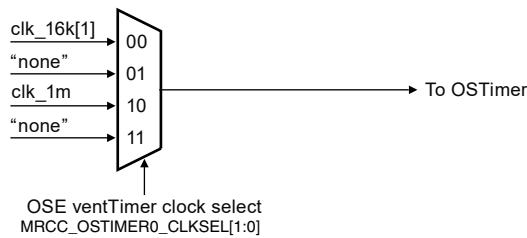


Figure 58. OSTimer clock



Figure 59. WUU clock

 


Figure 60. Wake timer clock

 


Figure 61. RTC clock

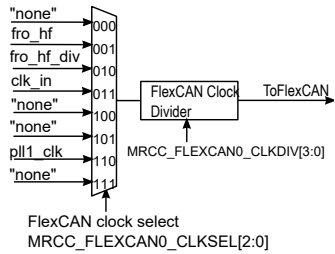


Figure 62. FlexCAN clock

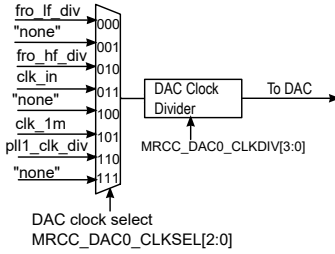


Figure 63. DAC clock

 


Figure 64. OPAMP clock

Chapter 23

System Clock Generator (SCG)

23.1 Chip-specific SCG information

Table 166. Reference links to related information

Topic	Related module	Reference
Full description	SCG	SCG
System memory map		Memory map
Clocking		Clock distribution
Power Management		Power Management
Signal multiplexing	Port control	Signal multiplexing

23.1.1 Module instances

This device contains one instance of the SCG module, SCG0.

23.2 Overview

The System Clock Generator (SCG) module provides the main clock and other peripheral clocks for the MCU. The SCG takes clock inputs from a variety of sources and generates the clocks that the MCU requires.

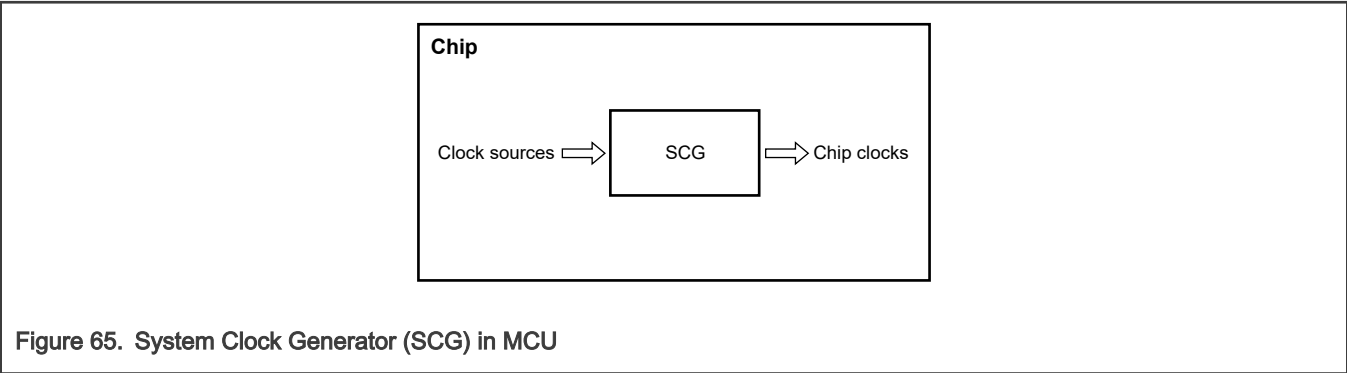


Figure 65. System Clock Generator (SCG) in MCU

The clock source inputs available for the SCG are as follows:

- System oscillator clock (SOSC)
- Slow internal reference clock (SIRC)
- Fast internal reference clock (FIRC)
- Real-Time oscillator clock (ROSC)
- System PLL clock (SPLL)

23.2.1 Block diagram

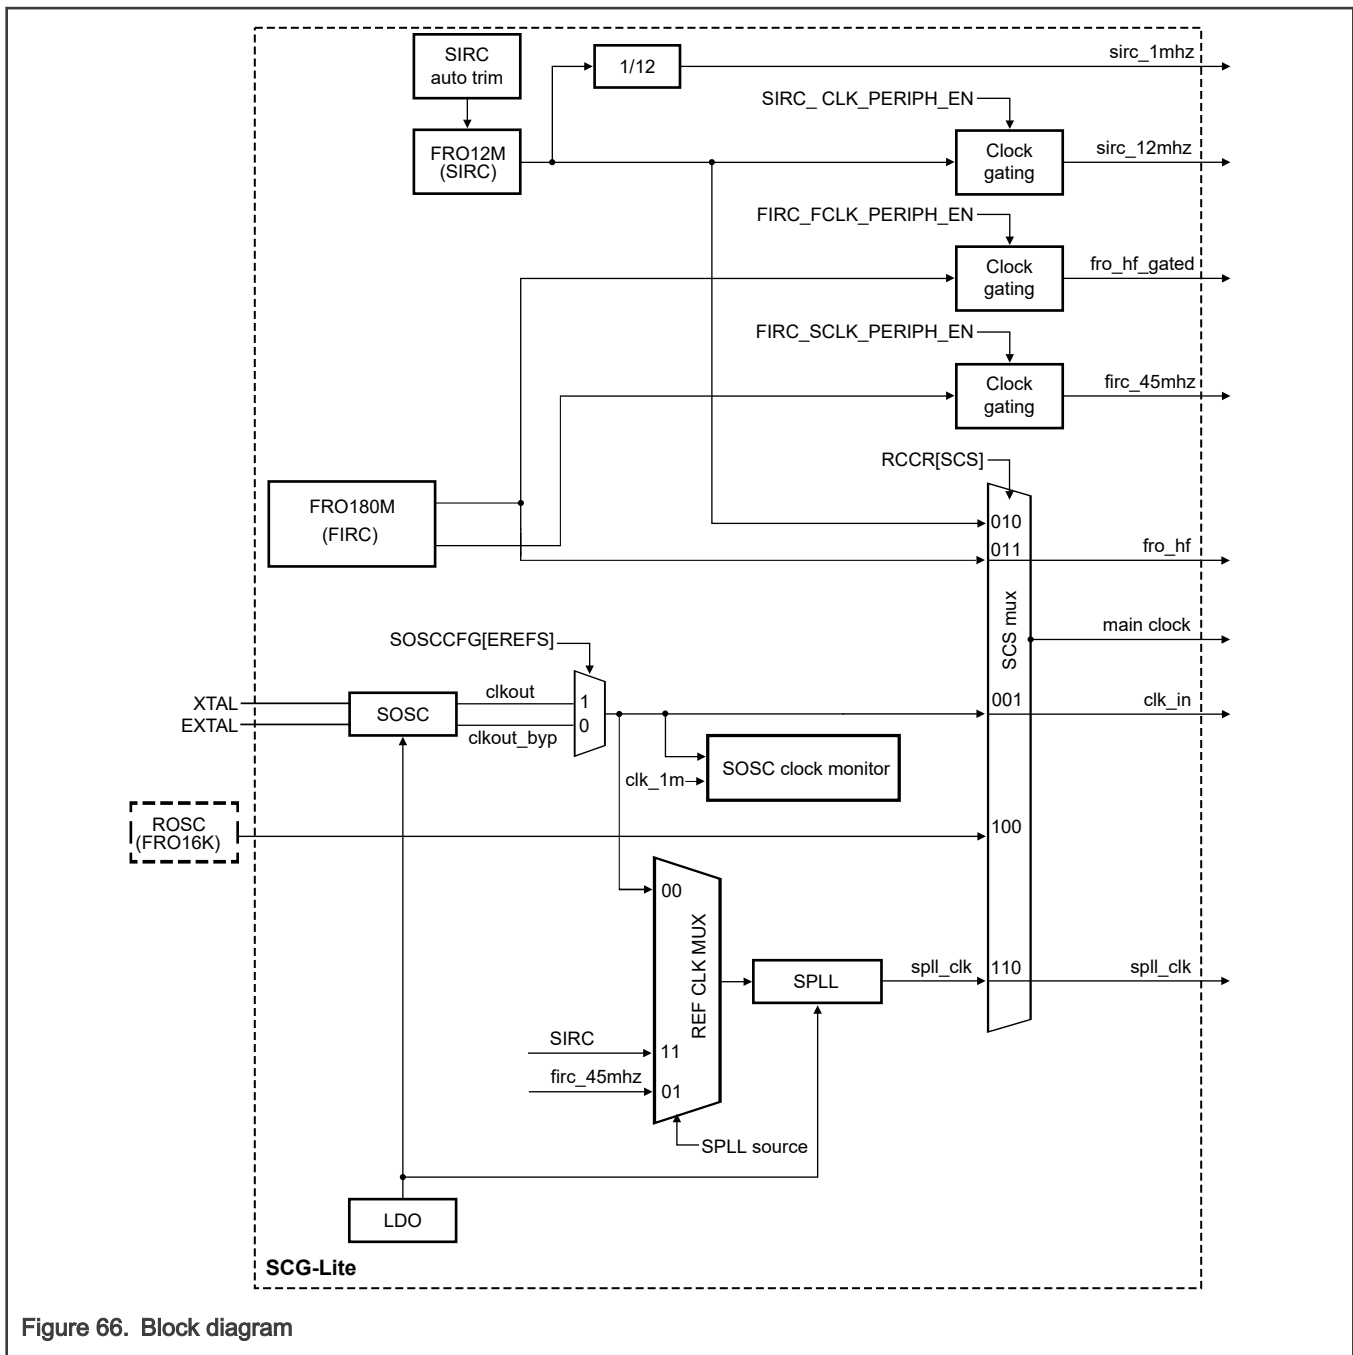


Figure 66. Block diagram

23.2.2 Features

Key features of the SCG module are:

- System Phase-locked Loop (SPLL) clock, see [PLL features and benefits](#) and [Functional features](#) for details
 - Can be selected as the clock source for system clocks
- 2 Internal Reference Clock (IRC) generators
 - FIRC with trim capability
 - FIRC can output 180/90/60/45 MHz clock by register configuration

- FIRC can limit output frequency by frequency phantom
- FIRC can output 45 MHz clock continuously
- SIRC with trim capability
- SIRC can output 12 MHz clock and 1 MHz clock divided from it
- Can be used as a source for the SPLL
- Either of the IRC generators can be selected as the clock source for the system clocks
- System Crystal Oscillator Clock (SOSC)
 - Can be used as a source for the SPLL
 - Can be selected as the clock source for system clocks
- Real Time Oscillator Clock (ROSC)
 - Can be selected as the clock source for the device. See the Clocking chapter to ascertain which signal the ROSC input maps to.
- Clock monitor with reset and interrupt request capability for SOSC, SPLL clocks
- Low Dropout Regulator (LDO) as the supply for the PLL and SOSC
 - Configurable output voltage (1 V to 1.25 V)
 - Wide supply range (1.71 V up to 3.63 V)
 - Wide load current range (up to 8 mA)
 - Low noise, high Power Supply Rejection Ratio (PSRR)
 - Bypass mode

23.3 Functional description

23.3.1 SCG clock mode transitions

The system boots up from the FIRC source. The system clock can be switched among the following clock sources: FIRC, SIRC, SOSC, ROSC, SPLL,.

The SCG restricts programming into invalid clock modes, and ignores writes to the System Clock Source (SCS) bits. When a transition between run modes or a transition from run mode into wait mode occurs, the SCG completes the switch to the corresponding clock mode as defined in the Run Clock Control Register (RCCR). After that, the system switches to the selected run/wait mode.

The following table describes the modes of operation of the SCG.

Table 167. SCG modes of operation

Mode	Description
SOSC	The SOSC mode is entered when the following occur: • the device is in run mode and 001 is written to RCCR[SCS] • SOSCCSR[SOSCEN] = 1b • SOSCCSR[SOSCVLD] = 1b In SOSC mode, the system clocks are derived from the external SOSC.
SIRC	The SIRC mode is entered when the following occur:

Table continues on the next page...

Table 167. SCG modes of operation (continued)

Mode	Description
	- the device is in run mode and 010 is written to RCCR[SCS] - SIRCCSR[SIRCVLD] = 1b In SIRC mode, the system clocks are derived from SIRC.
FIRC	The FIRC mode is the default clock mode of operation or it is entered when the following occur: - the device is in run mode and 011 is written to RCCR[SCS] - FIRCCSR[FIRCEN] = 1b - FIRCCSR[FIRCVLD] = 1b In FIRC mode, the system clocks are derived from FIRC. Eight frequency settings are available for FIRC clock as described in FIRCCFG[FREQ_SEL]. The changes to FIRC frequency settings are ignored when the FIRC clock is enabled.
ROSC	The ROSC mode is entered when the following occur: - the device is in run mode and 100 is written to RCCR[SCS] - ROSCSR[ROSCVLD] = 1b - LDOCSR[LDOEN] = 1b and LDOCSR[VOUT_OK] = 1b In ROSC mode, the systems clocks are derived from the external ROSC.
SPLL	The SPLL mode is entered when the following occur: - the device is in run mode and 110 is written to RCCR[SCS] - SPLLCsr[SPLLCLKEN] = 1b - SPLLCsr[SPLLPWREN] = 1b - SPLLCsr[SPLL_LOCK] = 1b - LDOCSR[LDOEN] = 1b and LDOCSR[VOUT_OK] = 1b In SPLL mode, the system clocks are derived from the output of PLL which is controlled by either the ROSC, FIRC, or SOSC. The selected PLL clock frequency locks to a multiplication factor, as specified by its corresponding MDIV, times the selected PLL reference frequency. The programmable reference divider of the PLL must be configured to produce a valid PLL reference clock. This divide value is defined by the NDIV bits.
Stop	The Stop mode is entered whenever the MCU enters a Stop state. Power modes are chip-specific. For power mode assignments, see Power Management chapter that describes module operation in low-power modes. Entering Stop mode, all SCG clock signals are static, including SCG system clocks. There are some exceptions. The following clocks can continue to run and stay enabled when all the specific conditions are true. SIRC is available in Deep Sleep mode when all the following conditions are true: - SIRCCSR[SIRCSTEN] = 1b FIRC is available in Deep Sleep mode when all the following conditions are true: - FIRCCSR[FIRCEN] = 1b

Table continues on the next page...

Table 167. SCG modes of operation (continued)

Mode	Description
	• FIRCCSR[FIRCSTEN] = 1b SOSC is available in Deep Sleep mode when all the following conditions are true: • SOSCCSR[SOSCEN] = 1b • SOSCCSR[SOSCSTEN] = 1b • LDOCSR[LDOEN] = 1b and LDOCSR[VOUT_OK] = 1b SPLL is available in Deep Sleep mode when all the following conditions are true: NOTE If SPLL is not required in Deep Sleep mode then set SPLLCSR[SPLLPWREN] = 0b before entering to Deep Sleep mode and once chip is waked up and LDOCSR[VOUT_OK] = 1b then set SPLLCSR[SPLLPWREN] = 1b to enable SPLL. • SPLLCSR[SPLLCLKEN] = 1b • SPLLCSR[SPLLPWREN] = 1b • SPLLCSR[SPLLSTEN] = 1b • LDOCSR[LDOEN] = 1b and LDOCSR[VOUT_OK] = 1b

23.3.2 SCG SOSC operation

The following table lists the SOSC configurations and SOSC output clock.

Table 168. SOSC mode operation

SOSCEN	EREFS	SOSC clock
0	0	Off
1	0	EXTAL Pad Clock
1	1	Crystal Oscillator Clock

23.3.3 SCG LOC operation

The SCG supports the loss of clock (LOC) monitoring for the external reference clocks including SOSC reference clock. To enable the LOC monitor, the CME bit for the clock must be programmed to 1. To monitor the external reference clock, the SCG uses an internal 31.25 KHz reference clock derived by dividing the SIRC internal clock. So prior to enabling the LOC for the external reference clock, it is required that the SIRC is programmed to be enabled.

The LOC monitors, when enabled, generate a system reset or system interrupt request depending on the settings of the CMRE (see the CMRE description for each of the clocks for further information). The frequency conditions for the external reference clocks that trigger a LOC event are listed below:

NOTE

$F_{int} = \text{SIRC divided down to 31.25 kHz}$

- SOSC loss of external clock minimum frequency
 - When SOSC clock frequency is above $(16/5) F_{int}$, the chip is never reset or generate an interrupt.

- When SOSC clock frequency is between $(15/5) F_{int}$ and $(16/5) F_{int}$, the chip might reset or generate an interrupt (depending on the phase dependency between SOSC clock and reference clock)
- When SOSC clock frequency is below $(15/5) F_{int}$, the chip always resets or generates an interrupt.

23.3.4 SPLL operation

PLL is typically used to create a frequency that is higher than other on-chip clock sources and to operate both the CPU and other on-chip functions. You can also use it to obtain a specific clock that is otherwise not available. For example, a source clock with a frequency of any integer MHz (such as the 12 MHz FIRC) can be divided down to 1 MHz, then multiplied up to any other integer MHz (such as 13, 14, and 15).

PLL can be set up by calling an API supplied by NXP Semiconductors. See SPLL registers in [SCG register descriptions](#) for more information.

NOTE

Any reference to PLL is referring to SPLL. For example, PLL_LOCK refers to SPLLCSSR[SPLL_LOCK].

23.3.4.1 General description

PLL is a multipurpose phase-locked loop (PLL). It generates a CMOS-compatible clock and can be used in many applications, including as a frequency synthesizer and clock for digital circuits, and analog-to-digital and digital-to-analog converters.

PLL includes several normal modes, spread spectrum mode, fractional mode, and a power-down mode. These are summarized in [Table 169](#) and detailed in the following sections.

Table 169. PLL operating mode summary

Mode	PLLCSSR[PLLP WREN]	PLLSSCG1[SS_PD]	PLLCTRL[LIM UPOFF]	PLLSSCG1[SEL_SS_MDIV]	PLLSSCG1[M R[2:0]]	M comes from
Normal	1	1	0	0	0	MDIV[15:0]
Fractional	1	0	1	1	0	SS_MDIV[32:0]
Spread spectrum	1	0	1	x	>0	MDIV[15:0] or SS_MDIV[32:0]
Power-down	0	1	x	x	x	x

23.3.4.2 Abbreviations

Table 170. Abbreviations and notations

Acronym	Description
PLL	Phase-locked loop
PFD	Phase frequency detector
CCO	Current control oscillator
PSR	Power supply rejection
EMI	Electromagnetic interferences
SSCG	Spread spectrum clock generation
clkin	Input clock to the PLL

Table continues on the next page...

Table 170. Abbreviations and notations (continued)

Acronym	Description
F_{in}	Frequency of clk_{in}
clk_{out}	Output clock of the PLL
F_{out}	Frequency of clk_{out} , $F_{out} = F_{cco} / (2 * P)$ • $F_{out} = F_{cco} / (2 * P)$ (The divide-by-2 divider in the postdivider is not bypassed.) • $F_{out} = F_{cco} / P$ (Bypass divide-by-2 divider in the postdivider.)
clk_{ref}	PLL reference clock. The input clock to the PFD.
F_{ref}	Frequency of clk_{ref} , $F_{ref} = F_{in} / N$
F_{cco}	Frequency of output clock of the CCO, $F_{cco} = M * F_{ref}$
N	Predivider value
M	Feedback divider value
P	Postdivider value
t_{pon}	PLL start-up time

23.3.4.3 PLL block diagram

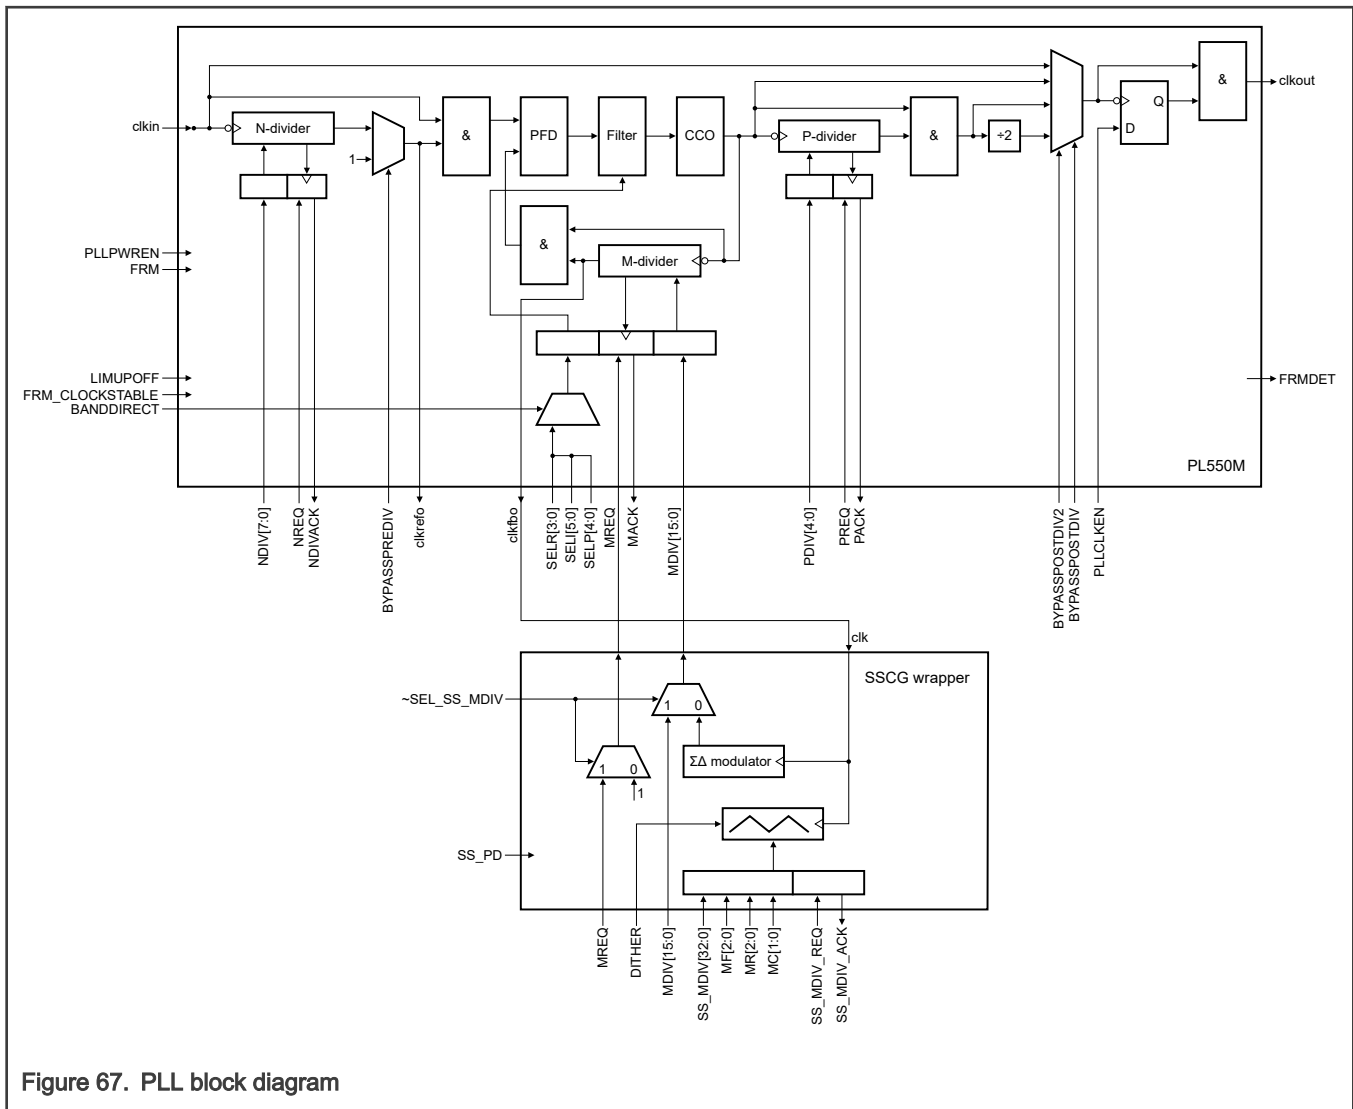


Figure 67. PLL block diagram

23.3.4.4 PLL normal mode

23.3.4.4.1 PLL features and benefits

- Integrated PLL with no external components for clock generation
- Large input range at the phase detector (F_{ref})
- Programmable:
 - Predivider N ($N, 1$ to 2^8-1)
 - Feedback-divisor M ($M, 1$ to $2^{16}-1$)
 - Postdivider $P * 2$ ($P, 1$ to 2^5-1)
- Programmable bandwidth (integrating action, proportional action, high frequency pole)
- On-the-fly adjustment of the clock dividers with handshake control
- Positive edge clocking

- Frequency limiter to avoid PLL hang up
- Power down mode
- Support for bypassing the predivider and the postdivider
- Support for bypassing the divide-by-2 in the postdivider
- Support for disabling the output clock
- Free running mode

23.3.4.4.2 PLL functional description

23.3.4.4.2.1 Basic functions

PLL is designed to generate a CMOS compatible clock. PLL can also be used to filter clocks or to make spread spectrum and fractional clocks. The following sections detail these features.

23.3.4.4.2.2 Main blocks

The PLL block diagram is shown in [Figure 67](#). The clock input must be fed to `clkin`; `clkout` is the PLL clock output. The analog part of the PLL consists of a phase frequency detector (PFD), a filter, and a current controlled oscillator (CCO). The PFD has two inputs: a reference input from the (divided) external clock and one input from the divided CCO output clock. The PFD compares the phase and frequency of these input signals and generates a control signal if they do not match. This control signal is fed to a filter which drives the CCO.

PLL contains three programmable dividers: predivider (N), feedback-divider (M), and postdivider (P). Every divider contains a bus (`XDIV[n:0]` in which X is N, M, or P) to load a divider ratio. The dividers also possess the handshake signals, `XREQ`, and `XACK`, to select a new divider ratio. See [Selecting divider ratios](#) for more information on selecting the divider ratios.

PLL is stable after startup time t_{pon} . There is a hardware timer in the reference clock domain in SCG to count this time. You must configure the `LOCK_TIME` register to $(500 \mu s/T_{ref} + 300)$. When the number of reference clocks reaches `LOCK_TIME` after power on or reconfiguration, the flag `PLL_LOCK` is set. If the interrupt enable bit `PLL_LOCK_IE` is set, a `PLL_LOCK` interrupt is generated.

NOTE

The PLL clock is gated off when `PLL_LOCK` is low, regardless of the state of the `PLLCLKEN` field. At start, set `PLLPWREN` and `PLLCLKEN` to 1 to enable the PLL. After t_{pon} , the `PLL_LOCK` is valid and the PLL clock is automatically ungated.

To avoid frequency hang-up, the PLL contains a frequency limiter. This feature is built in to prevent the CCO from running too fast. This can occur if, for example, a wrong feedback-divider (M) ratio is applied to the PLL.

There are additional dividers in the clocking system to bring the PLL output frequency down to what is needed for the CPU and peripherals.

23.3.4.4.3 PLL application information

For more information on the selectable bandwidth, input clocks, and divider ratios of the PLL, see the following sections:

- [Selecting bandwidth](#)
- [Input clock](#)
- [Selecting divider ratios](#)

PLL has eight modes:

- Mode 1: Normal operating mode
- Mode 2: Reserved
- Mode 3: Power down mode (`PLLPWREN`)

- Mode 4: Reserved
- Mode 5: Free running mode (FRM)
- Mode 6: Reserved
- Mode 7: Reserved
- Mode 8: Enable mode (PLLCLKEN).

23.3.4.4.3.1 Selecting bandwidth

For some applications, such as filtering of the input signal, it can be advantageous to change the bandwidth of the PLL.

In normal applications, you must calculate the bandwidth manually by using the feedback divider M (ranging from 1 to $2^{16}-1$), [Equation 1](#), and [Equation 2](#). The PLL is automatically stable in such case. In normal applications, `SPLLCTRL[BANDDIRECT]` must be 0; in this case, the bandwidth changes as a function of M.

$$A = \text{floor}(M \div 4) + 1$$

$$SELP = \begin{cases} A & \text{if } A < 31 \\ 31 & \text{if } A \geq 31 \end{cases}$$

Equation 1. SELP

$$A = \begin{cases} 1 & \text{if } M \geq 8000 \\ \text{floor}(8000 \div M) & \text{if } 8000 > M \geq 122 \\ 2 \times \text{floor}(M \div 4) + 3 & \text{if } 122 > M \geq 1 \end{cases}$$

$$SELI = \begin{cases} A & \text{if } A < 63 \\ 63 & \text{if } A \geq 63 \end{cases}$$

Equation 2. SELI

SELR must be 0.

NOTE

In some applications, you may prefer to change the bandwidth directly on the PLL. In such an application, you must write 1 to `SPLLCTRL[BANDDIRECT]`.

23.3.4.4.3.2 Input clock

A good-quality input clock is necessary for good PLL performance. The input clock on `clkin`, optionally divided by the predivider ratio N, gives the reference frequency F_{ref} for the PLL loop ($F_{\text{ref}} = F_{\text{in}} / N$).

Use `SOURCE[1:0]` to select one of three inputs to the PLL: `SOSC`, `SIRC`, and `FIRC`. The input clock must have an accurate frequency before powering up the PLL. You can confirm a valid clock for `SOSC`, `SIRC`, and `FIRC` by using `SOSCCSR[SOSCVLD]`, `SIRCCSR[SIRCVLD]`, and `FIRCCSR[FIRCAACC]`, respectively.


For an optimal performance, use a reference frequency within the frequency range 5 MHz - 50 MHz. The total possible reference frequency range is specified in the data sheet.

23.3.4.4.3.3 Selecting divider ratios

The PLL contains three dividers: predivider (N), feedback-divider (M), and postdivider (P). The divider ratios can be selected in different ways.

Start up

For a correct start up, a low to high transition of `PLLWREN` is required after the supplies are stable. The divider ratio data `XDIV[n:0]` (in which X is N, M, or P) must also be stable (see [Figure 68](#)) before `PLLWREN` is made high.

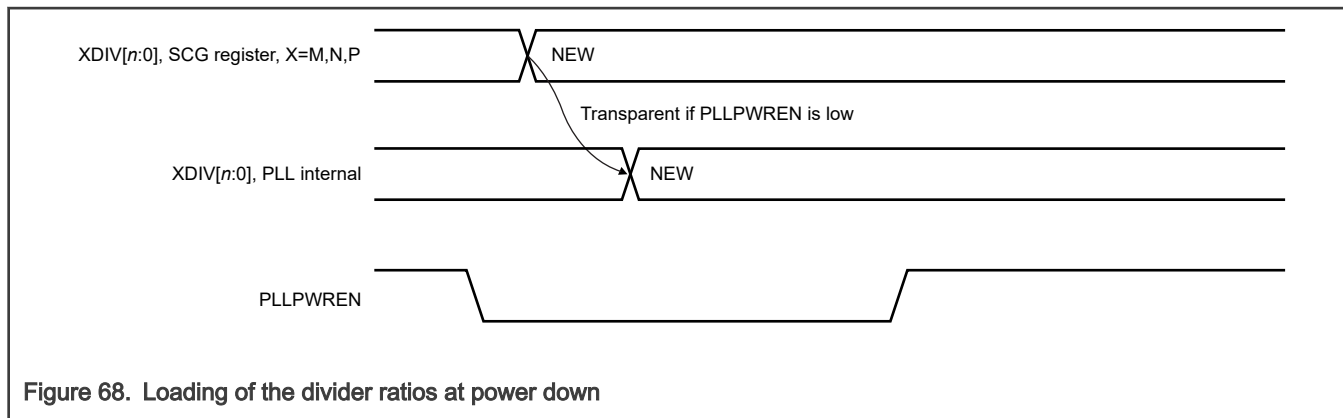

Changing divider ratio after starting up

There are two ways to change the divider ratio after the PLL start up: you can reset the PLL or you can read the divider ratio asynchronously.

When changing divider ratios, you must avoid forbidden divider ratio combinations at all times in order to keep the CCO frequency F_{cco} within the specified range. See the product data sheet for the range information. If you need to change more than one divider ratio, it is preferable to use the reset method.

Resetting the PLL

You can select the new divider ratios by making PLLPWREN low. After power down, the new divider ratios at the input buses XDIV[n:0] (in which X is N, M, or P) are loaded into the dividers (Figure 68). You must ensure that the divider ratio data XDIV[n:0] is stable before the PLLPWREN is made high (PLLPWREN=1). This can be done by resetting the PLL (PLLPWREN=0) until the divider ratio data XDIV[n:0] is stable.

Reading the divider ratio asynchronously

You can select the divider ratio of the different dividers (M, N, P) on-the-fly with the help of a handshake protocol (Figure 69). First, a new divider ratio has to be put at the divider input bus (XDIV), and after that a request (XREQ=1) must be given. As soon as the divider gives acknowledgment (XACK=1), the new divider ratio is loaded and the request can be made low (XREQ=0).

For a fractional application, write 1 to SEL_SS_MDIV. Use SS_MDIV_REQ and SS_MDIV[32:0].

NOTE

If the N divider is changed, you should also update the LOCK_TIME according to the new N.

NOTE

Updating divider ratio will clear PLL_LOCK until t_{pon} (defined in LOCK_TIME) is passed. Since PLL_LOCK=0 will gate off the PLL clock before on-the-fly update, you should switch the system to another clock source.

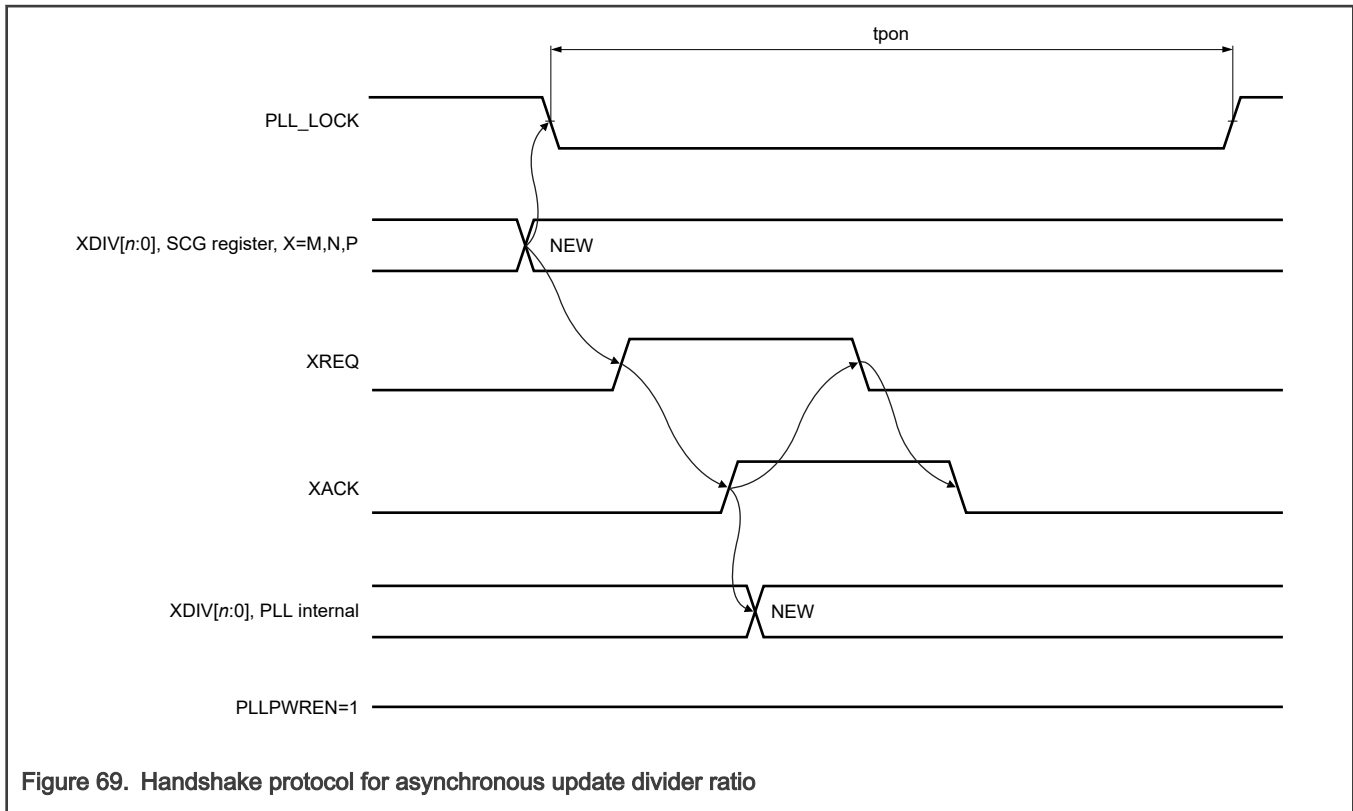


Figure 69. Handshake protocol for asynchronous update divider ratio

23.3.4.4.3.4 Mode 1: Normal operating mode

Typical operation of the PLL includes the following sequence to produce the PLL output:

1. An optional predivider of the PLL input.
2. A frequency multiplication.
3. An optional postdivider.

You can select the predivider and postdivider (see [Table 171](#)) to produce:

- Mode 1a: Normal operating mode without postdivider and without predivider
- Mode 1b: Normal operating mode with postdivider and without predivider
- Mode 1c: Normal operating mode without postdivider and with predivider
- Mode 1d: Normal operating mode with postdivider and with predivider

To produce the best phase-noise and jitter performance at the output of the PLL, you must use the highest possible reference clock (clkref) at the PFD. Therefore, NXP recommends modes 1a and 1b, if you can make the right output frequency without a predivider.

By using the postdivider and the divide-by-2 divider, the divider ratio of the PLL clock output (clkout) is even when [SPLLCTRL\[BYPASSPOSTDIV2\]](#) is 0. For uneven divider ratios, the divide-by-2 divider can be bypassed when the [BYPASSPOSTDIV2](#) field is 1.

NOTE

If [BYPASSPOSTDIV2](#) is 1, the duty cycle of clkout cannot be 50%.

Table 171. Modes within the normal operating mode

Mode 1	BYPASSPREDIV	BYPASSPOSTDIV
Mode 1a	1	1
Mode 1b	1	0
Mode 1c	0	1
Mode 1d	0	0

Table 172 shows the terms that the equations in this section use.

Table 172. Mode 1*n* equation terms

Term	Description	Allowed values
M	Feedback divider	1 to 2 ¹⁶ -1
N	Predivider	1 to 2 ⁸ -1
P	Postdivider	1 to 2 ⁵ -1

Mode 1a: Normal operating mode without postdivider and without predivider

Mode 1a bypasses the postdivider and predivider. Equation 3 shows the operating frequency:

$$F_{out} = F_{CCO} = M \times F_{in}$$

Equation 3. Operating frequency in mode 1a

Mode 1b: Normal operating mode with postdivider and without predivider

Mode 1b bypasses the predivider. Equation 4 shows the operating frequency:

$$F_{out} = \frac{F_{cco}}{2 \times P} = \frac{M}{2 \times P} \times F_{in}$$

Equation 4. Operating frequency in mode 1b

Mode 1c: Normal operating mode without postdivider and with predivider

Mode 1c bypasses the postdivider with divide-by-2. Equation 5 shows the operating frequency:

$$F_{out} = F_{cco} = \frac{M}{N} \times F_{in}$$

Equation 5. Operating frequency in mode 1c

Mode 1d: Normal operating mode with postdivider and with predivider

Mode 1d does not bypass either divider. Equation 6 shows the operating frequency:

$$F_{out} = \frac{F_{cco}}{2 \times P} = \frac{M}{N \times 2 \times P} \times F_{in}$$

Equation 6. Operating frequency in mode 1d

23.3.4.4.3.5 Mode 3: Power down mode (PLLWREN)

If the PLL is not used, or if it is turned off in a running application, power can be saved by putting the PLL in power down mode (PLLWREN=0). Before this is done, the CPU and any peripherals that are not meant to be stopped must be running from a different clock source.

In power down mode, the oscillator stops and the output clkout will be low.

While in PLL power down mode, the PLL_LOCK will be low to indicate that the PLL is not in lock. When the PLL power down mode is terminated by setting the PLLWREN field to one, the PLL will resume its normal operation and will make the PLL_LOCK high after the start up time.

23.3.4.4.3.6 Mode 5: Free running mode (FRM)

In normal applications, the output clock of the PLL quickly disappears if the input clock disappears. To avoid the fast disappearance of the clock, you can use free running mode.

In FRM mode, the PLL monitors the input clock clkin. If the input clock disappears for more than six periods, the CCO of the PLL starts running free. The output frequency will be within +1% and -20% for at least 200 μ s. After 200 μ s of self-clocking, the frequency keeps going down.

NOTE

If the PLL is in free running mode, the FRMDDET flag is high.

NOTE

Free running mode only operates for reference frequencies above 100 kHz ($F_{in} / N = F_{ref} > 100$ kHz). To use the free running mode for $32 \text{ kHz} \leq F_{in} / N = F_{ref} < 100$ kHz, write 1 to FRM_CLOCKSTABLE after the PLL output frequency is stable (after startup time t_{pon}).

Free running mode is designed so that if the input clock occurs again, the PLL goes out of free running and locks. Because the output clock has drifted away, overshoot and lock time have to be taken into account. In free running mode (FRM=1), you can choose the same divider settings as set by modes 1, 2, and 3 with logically FRM=1.

NOTE

When FRMDDET=1 and the PLL clock monitor is enabled (PLLCM=1), the PLLERR flag is set. When PLL_ERROR=1, switch to another clock and clear the field. PLL_LOCK is not reliable in this case. After t_{pon} , if PLL_ERROR is 0, this means the PLL can be used again.

23.3.4.4.3.7 Mode 8: Enable mode (PLLCLKEN)

In Enable mode, the output clock (clkout) of the PLL is enabled. If PLLCLKEN=0, the output of the PLL is low (clkout=0). Ensure that no spikes occur at the output of the PLL (clkout) by switching into and out of the Enable mode.

Going out of Enable mode can be used for safely switching to other modes, such as power down mode and direct output (BYPASSPOSTDIV). This method ensures that no spikes can occur at the output.

23.3.4.5 PLL spread spectrum and fractional modes

The SSCG wrapper is a $\Sigma\Delta$ modulator for the multi-purpose PLL and makes it a fractional-N PLL.

By controlling the feedback divider of the PLL, the wrapper can also generate a spread spectrum clock. SSCG decreases electromagnetic interferences (EMI).

23.3.4.5.1 Functional features

- Handshake circuit to read the asynchronous SS_MDIV[32:0] at the wrapper
- Twenty-five fractional bits
- Preferred reference frequency $F_{ref} > 3$ MHz

- Center-spread modulation (default)
- Modulation waveform control
- Modulation waveform dithering
- Power-down mode (SS_PD)
- Triangular-wave modulation frequency:

$$f_m = \frac{F_{ref}}{N_{ss}}$$

with N_{ss} ranging from 16 to 512

Equation 7. Triangular-wave modulation frequency

- Frequency-modulation depth:

$$\delta f_{mod_{pk-pk}} = \frac{F_{ref} \times k_{ss}}{F_{cco}}$$

with k_{ss} ranging from 0 to 4

Equation 8. Frequency-modulation depth

23.3.4.5.2 Functional description

23.3.4.5.2.1 Basic functions

The SSCG WRAPPER is a second order $\Sigma\Delta$ modulator for the multipurpose PLL and makes it a fractional-N PLL. By controlling the feedback divider of the PLL, the wrapper can also generate a spread spectrum clock (Spread Spectrum Clock Generator).

The main block is the $\Sigma\Delta$ modulator which generates the appropriate MDIV[15:0] values from the input word SS_MDIV[32:0] to have at the output (clkout) of the PLL the correct frequency.

23.3.4.5.2.2 Main blocks

The SSCG WRAPPER consist of:


- A handshake circuit to read a new input word on the buses: SS_MDIV[32:0], MR[2:0], MF[2:0], MC[2:0]
- A waveform generator
- A second order $\Sigma\Delta$ modulator
- A multiplexer to bypass the wrapper

The SSCG WRAPPER will generate by default a center spread triangular waveform. It is also possible to generate a down spread triangular waveform which is explained [Center spread versus down spread](#).

23.3.4.5.2.3 Handshake circuit

A new (asynchronous) input word (SS_MDIV[32:0], MF[2:0], MR[2:0], and MC[1:0]) can be read with the help of a handshake protocol ([Figure 70](#)).

First the new word must be put on the bus. Then a request (SS_MDIV_REQ=1) must be given. As soon as the acknowledge pin goes high (SS_MDIV_ACK=1), the new input word is loaded and the request can be made low (SS_MDIV_REQ=0).

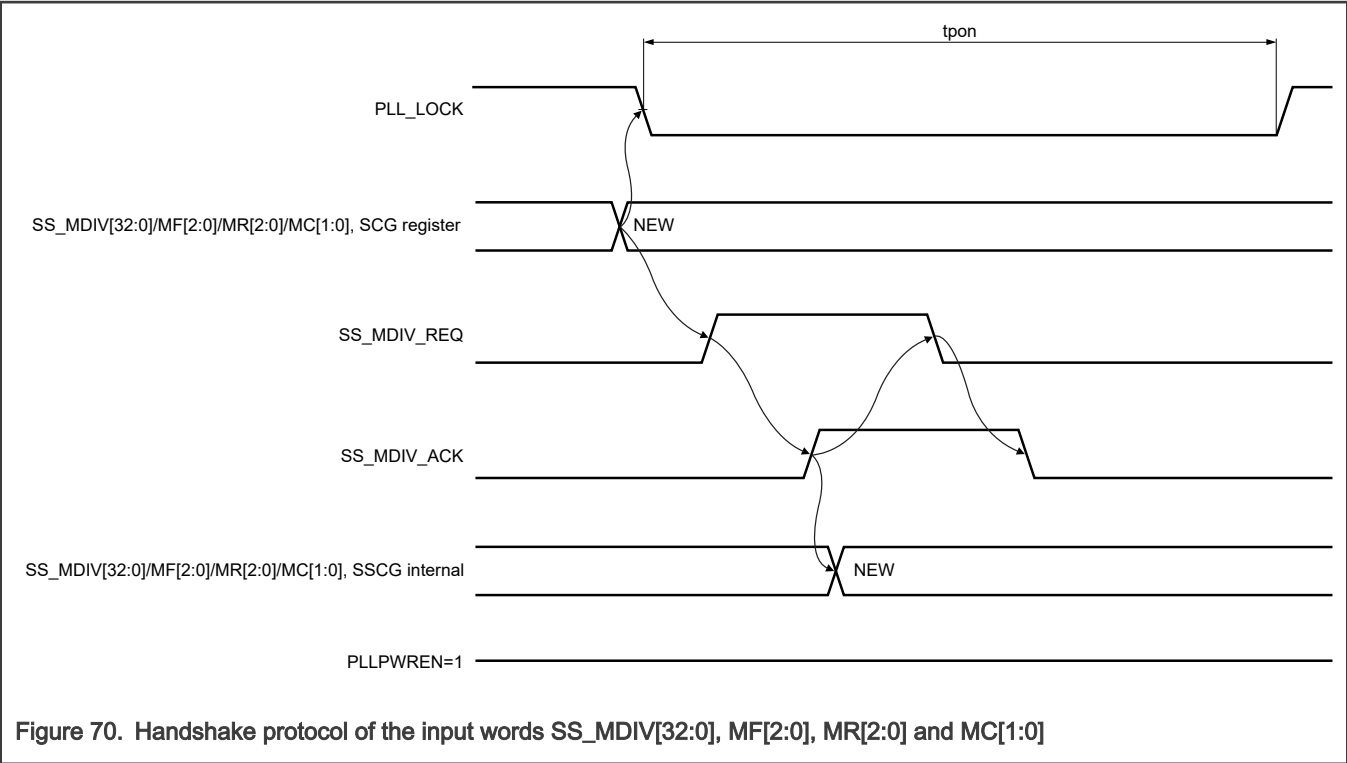

NOTE

Updating the divider ratio will clear the PLL_LOCK until t_{pon} (defined in LOCK_TIME) is passed. Because PLL_LOCK=0 will gate off the PLL clock, system should be switched to another clock source before on-the-fly updates.

23.3.4.5.2.4 Center spread versus down spread

By default, the wrapper generates a triangular waveform with center spread. This means that the average CCO frequency between MR[2:0] = 0 (no spread spectrum) and MR[2:0] > 0 is the same. see Equation 9.

$$M_{average, center\ spread} = M_{average}$$

Equation 9. Divider equivalence

Some applications require a triangular waveform with down spread. For down spread, instead of the average CCO frequency being the same, the maximum frequency must be the same in spread spectrum mode (MR[2:0]>0). For down spread, the average feedback divider ratio must be decreased depending on the modulation depth. See Equation 10 and Equation 11.

$$M_{average, down\ spread} = M_{average} - 0.25 \times k_{ss}$$

Equation 10. Average divider, down spread

$$M_{average} = 64.5, k_{ss} = 4$$
$$M_{average, center\ spread} = M_{average} = 64.5 \text{ (SS\_MDIV[32:0] = 0\_1000\_0001\_0000\_0000\_0000\_0000\_0000b = 0\_8100\_0000h)}$$
$$M_{average, down\ spread} = M_{average} - 1 = 63.5 \text{ (SS\_MDIV[32:0] = 0\_0111\_1111\_1000\_0000\_0000\_0000\_0000b = 0\_7F80\_0000h)}$$

Equation 11. Average divider example

23.3.4.5.2.5 Triangular wave modulation

You can calculate the clock cycle displacement and spectral tone reduction ΔP for the center spread triangular waveform modulation with a modulation frequency depth $\delta f_{\text{modpk-pk}}$ and a modulation frequency f_m .

Equation 12 shows the theoretical maximum clock-cycle displacement (peak-to-peak).

$$\Delta n_{\text{max;theoretical}} = \begin{cases} \frac{N_{\text{SS}} \times k_{\text{SS}}}{16} & \text{if } \text{PLLCTRL}[\text{BYPASSPOSTDIV}] = 1 \\ \frac{N_{\text{SS}} \times k_{\text{SS}}}{32 \times P_{\text{PLL}}} & \text{if } \text{PLLCTRL}[\text{BYPASSPOSTDIV}] = 0 \text{ and } \text{PLLCTRL}[\text{PDIV}] = 1 \end{cases}$$

Equation 12. Theoretical maximum clock-cycle displacement

In practice the clock cycle displacement could be larger. So, for safety reasons (buffer overflow) use Equation 13:

$$\Delta n_{\text{max;practical}} = \begin{cases} \frac{N_{\text{SS}} \times k_{\text{SS}}}{8} & \text{if } \text{PLLCTRL}[\text{BYPASSPOSTDIV}] = 1 \\ \frac{N_{\text{SS}} \times k_{\text{SS}}}{16 \times P_{\text{PLL}}} & \text{if } \text{PLLCTRL}[\text{BYPASSPOSTDIV}] = 0 \text{ and } \text{PLLCTRL}[\text{PDIV}] = 1 \end{cases}$$

Equation 13. Practical maximum clock-cycle displacement

Equation 14 shows the spectral tone reduction / EMI reduction ΔP at F_{out} .

$$\Delta P \approx \begin{cases} 10 \times \log \left(\frac{N_{\text{SS}} \times k_{\text{SS}}}{2} \right) & \text{if } \text{PLLCTRL}[\text{BYPASSPOSTDIV}] = 1 \\ 10 \times \log \left(\frac{N_{\text{SS}} \times k_{\text{SS}}}{4} \right) & \text{if } \text{PLLCTRL}[\text{BYPASSPOSTDIV}] = 0 \text{ and } \text{PLLCTRL}[\text{PDIV}] = 1 \end{cases}$$

Equation 14. ΔP at F_{out}

Table 173 shows the spectral tone reduction and clock cycle displacement for $\text{BYPASSPOSTDIV}=0$ and $P_{\text{PLL}}=1$.

Table 173. Values for different settings, $\text{BYPASSPOSTDIV} = 0$, $P_{\text{PLL}} = 1$

Table values are: $\Delta P \Delta n_{\text{max}}$	MF[2:0]=000 $N_{\text{SS}} = 512$	MF[2:0]=001 $N_{\text{SS}} \approx 384$	MF[2:0]=010 $N_{\text{SS}} = 256$	MF[2:0]=011 $N_{\text{SS}} = 128$	MF[2:0]=100 $N_{\text{SS}} = 64$	MF[2:0]=101 $N_{\text{SS}} = 32$	MF[2:0]=110 $N_{\text{SS}} \approx 24$	MF[2:0]=111 $N_{\text{SS}} = 16$
MR[2:0]=000, $K_{\text{SS}} \approx 0$	0 dB 0	0 dB 0	0 dB 0	0 dB 0	0 dB 0	0 dB 0	0 dB 0	0 dB 0
MR[2:0]=001, $K_{\text{SS}} \approx 0.5$	21 dB 32	20 dB 24	18 dB 16	15 dB 8	12 dB 4	9 dB 2	8 dB 1.5	6 dB 1
MR[2:0]=010, $K_{\text{SS}} \approx 0.75$	23 dB 48	22 dB 32	20 dB 24	17 dB 12	14 dB 6	11 dB 3	10 dB 2.2	8 dB 1.5
MR[2:0]=011, $K_{\text{SS}} \approx 1$	24 dB 64	23 dB 48	21 dB 32	18 dB 16	15 dB 8	12 dB 4	11 dB 3	9 dB 2
MR[2:0]=100, $K_{\text{SS}} \approx 1.5$	26 dB 96	25 dB 64	25 dB 48	20 dB 24	17 dB 12	14 dB 6	13 dB 4.5	12 dB 4

Table continues on the next page...

Table 173. Values for different settings, BYPASSPOSTDIV = 0, P_{PLL} = 1 (continued)

Table values are: $\Delta P \Delta n_{\max}$	MF[2:0]=000 N _{SS} = 512	MF[2:0]=001 N _{SS} ≈ 384	MF[2:0]=010 N _{SS} = 256	MF[2:0]=011 N _{SS} = 128	MF[2:0]=100 N _{SS} = 64	MF[2:0]=101 N _{SS} = 32	MF[2:0]=110 N _{SS} ≈ 24	MF[2:0]=111 N _{SS} = 16
MR[2:0]=101, K _{SS} ≈2	27 dB 128	26 dB 96	24 dB 64	21 dB 32	18 dB 16	15 dB 8	14 dB 6	12 dB 4
MR[2:0]=110, K _{SS} ≈3	28 dB 192	28 dB 128	26 dB 96	23 dB 48	20 dB 24	17 dB 12	16 dB 9	14 dB 6
MR[2:0]=111, K _{SS} ≈4	30 dB 256	29 dB 192	27 dB 128	24 dB 64	21 dB 32	18 dB 16	17 dB 12	15 dB 8

23.3.4.5.2.6 M_{divider} value, stepsize, and output frequency

Table 174 shows examples of the average feedback-divider ratio M_{average} (which defines) and stepsize.

$$M_{\text{average}} = \text{SS\_MDIV}[32:25]_{\text{dec}} + 2^{-25} \times \text{SS\_MDIV}[24:0]_{\text{dec}} + \text{DITHER} \times 2^{-26} = 2^{-25} \times \text{SS\_MDIV}_{\text{dec}} + \text{DITHER} \times 2^{-26}$$

Equation 15. Average feedback-divider ratio

If the SSCG WRAPPER is in power down (SS_PD = 1), then the input word SS_MDIV[32:0] is not modulated. Examples of the feedback-divider ratio M and stepsize for SS_PD = 1 can be found in Table 175.

Table 174. Examples of M_{average} and stepsize if SS_PD = 0

SS_MDIV[32:0]	M _{average} (DITHER=1)	M _{average} (DITHER=0)	Stepsize
0 1000 0000 0000 0000 0000 0000 0000 0000bin = 080000000hex = 64 * 2 ²⁵	64 + 2 ⁻²⁶	64	1 ÷ (2 ²⁵ *M _{average}) ≈ 0.48ppb
0 1000 0010 0000 0000 0000 0000 0000 0000bin = 082000000hex = 65 * 2 ²⁵	65 + 2 ⁻²⁶	65	1 ÷ (2 ²⁵ *M _{average}) ≈ 0.46ppb
0 1000 0010 0000 0000 0000 0000 0000 0001bin = 082000001hex = 65 * 2 ²⁵ +1	65 + 2 ⁻²⁵ + 2 ⁻²⁶	65 + 2 ⁻²⁵	1 ÷ (2 ²⁵ *M _{average}) ≈ 0.46ppb
0 1000 0011 0000 0000 0000 0000 0000 0000bin = 083000000hex = 65 * 2 ²⁵ +2 ²⁴	65 + 2 ⁻¹ + 2 ⁻²⁶	65 + 2 ⁻¹	1 ÷ (2 ²⁵ *M _{average}) ≈ 0.46ppb
0 1011 1000 0000 0000 0000 0000 0000 0000bin = 0B8000000hex = 92 * 2 ²⁵	92 + 2 ⁻²⁶	92	1 ÷ (2 ²⁵ *M _{average}) ≈ 0.33ppb ¹
0 0011 0110 0000 0000 0000 0000 0000 0000bin = 036000000hex = 27 * 2 ²⁵	27 + 2 ⁻²⁶	27	1 ÷ (2 ²⁵ *M _{average}) ≈ 1.11ppb ²

1. maximum M_{average}, minimum stepsize
2. minimum M_{average}, maximum stepsize

Table 175. Examples M and stepsize if SS_PD = 1

SS_MDIV[32:0]	M ¹ (SS_PD = 1)	stepsize ² (SS_PD = 1)
0 1000 0000 0000 0000 0000 0000 0000 0000bin = 080000000hex = $64 * 2^{25}$	64	$1 \div M \approx 1.56\%$
0 1000 0010 0000 0000 0000 0000 0000 0000bin = 082000000hex = $65 * 2^{25}$	65	$1 \div M \approx 1.54\%$
0 1000 0010 0000 0000 0000 0000 0000 0001bin = 082000001hex = $65 * 2^{25} + 1$	65	$1 \div M \approx 1.54\%$
0 1000 0011 0000 0000 0000 0000 0000 0000bin = 083000000hex = $65 * 2^{25} + 2^{24}$	65	$1 \div M \approx 1.54\%$
0 1011 1000 0000 0000 0000 0000 0000 0000bin = 0B8000000hex = $92 * 2^{25}$	92	$1 \div M \approx 1.09\%$
0 0011 0110 0000 0000 0000 0000 0000 0000bin = 036000000hex = $27 * 2^{25}$	27	$1 \div M \approx 3.70\%$

1. $M = \text{SS\_MDIV}[32:25]_{\text{dec}}$

2. $\text{stepsize} = 1 \div M$

23.3.4.5.3 Application information

In [Figure 67](#) of the SSCG, WRAPPER and PLL are shown.

The spread spectrum clock can be disabled by setting MR[2:0] to zero. If the fractional part of SS_MDIV[32:0] is set to zero (SS_MDIV[24:0]=0) then the feedback divider ratio will have a constant value (no fractional behavior).

NOTE

If the spread spectrum mode is enabled, choose N to ensure $F_{\text{in}}/N > 3 \text{ MHz}$. The spread spectrum mode cannot be used when $F_{\text{in}} = 32 \text{ kHz}$.

23.3.4.5.3.1 PLL bandwidth settings

For spread spectrum and fractional application, it is important to set the PLL bandwidth in a preferred setting. The preferred settings for the PLL bandwidth at $3 \text{ MHz} < F_{\text{ref}} < 5 \text{ MHz}$ are:

- SELR[3:0]=b0100
- SELI[5:0]=b000100
- SELP[4:0]=b00011

23.3.4.5.3.2 Input clock

For Spread spectrum and fractional application, the preferred reference frequency is $F_{\text{ref}} > 3 \text{ MHz}$.

23.3.4.6 Procedure for determining PLL settings

In general, the PLL configuration values are as follows:

1. Identify a desired PLL output frequency. This may depend on a specific interface frequency needed or on expected CPU performance requirements, and may be limited by system power availability.
2. Determine which clock source to use as the PLL input. This is based on the required power or accuracy, or by the potential to obtain the desired PLL output frequency.
3. Identify PLL settings to obtain the desired output from the selected input. The F_{cco} frequency must be either the actual desired output frequency, or the desired output frequency times $2 \times P$, where P is from 1 to 31. The F_{cco} frequency must

also be a multiple of the PLL reference frequency, which is either the PLL input or the PLL input divided by N (where N is from 1 to 255).

4. There are several ways to obtain the same PLL output frequency. PLL power depends on F_{cco} (a lower frequency uses less power) and the divider used. Bypassing the input or output divider, or bypassing both, saves power.
5. Ensure that the selected settings meet all the PLL requirements:
 - F_{in} is in the range of 32 kHz to 150 MHz.
 - F_{cco} is in the range of 275 MHz to 550 MHz.
 - F_{out} is in the range of 4.3 MHz to 2x Max CPU frequency.
 - The predivider is either bypassed, or N is in the range of 1 to 255.
 - The postdivider is either bypassed, or P is in the range of 1 to 31.
 - M is in the range of 1 to 65,535.

NOTE

Also note that the PLL startup time becomes longer as F_{ref} drops. PLL accuracy and jitter is better with higher values of F_{ref} .

23.3.4.7 PLL setup sequence

The sequence of initializing and connecting the PLL is as follows:

1. Enable PLL LDO.
2. Ensure that the PLL output is disconnected from any downstream functions.
3. Select a PLL input clock source. See SOURCE field in [SPLL Control \(SPLLCTRL\)](#).
4. Set up the PLL dividers and mode settings. See SPLL registers in [Memory map and register definition](#).
5. Wait for the input clock source to be valid. It is indicated by [SOSCCSR\[SOSCVLD\]](#) for SOSC, [SIRCCSR\[SIRCVLD\]](#) for SIRC, and [FIRCCSR\[FIRCAVC\]](#) for FIRC.
6. Power up PLL and write 1 to PLLPWREN and PLLCLKEN. The PLL clock is gated until PLL_LOCK=1.
7. Wait for the PLL output to stabilize, when PLL_LOCK=1. The start-up time is t_{pll_lock} .
8. If the PLL is used to clock the CPU, you can change the CPU Clock Divider setting for the operation with the PLL, if needed. This must be complete before connecting the PLL.
9. Connect the PLL to whichever downstream function you are using it with. See the chip's Clocking chapter for more information on the clock divider structure.

23.3.5 Clocking

The SCG module has the following input clocks:

- Bus clock for register access.
- ROSC, clocks as one of the system clock sources

The SCG module has the following output clocks:

- Main clock
- SPLL clock
- FIRC clock (180/90/60/45 MHz)
- SIRC clock (12 MHz and 1 MHz divided from it)
- SOSC clock

23.3.6 Resets

These are the SCG resets:

1. The global reset is fed into this module. The entire module is reset by the global reset.
2. The clock monitor generates a reset in case of the following:
 - S0SCCSR[S0SCCM] = 1 & S0SCCSR[S0SCCMRE] = 1 & S0SCCSR[S0SCERR] = 1
 - SPLLCSR[SPLLCM] = 1 & SPLLCSR[SPLLCMRE] = 1 & SPLLCSR[SPLLERR] = 1

On the assertion of any reset source, the FIRC 45 MHz clock is enabled or starts up if not running.

23.3.7 Interrupts

These are the SCG interrupts:

- Clock monitor generates interrupt when any of below happens:
 - S0SCCSR[S0SCCM] = 1 & S0SCCSR[S0SCCMRE] = 0 & S0SCCSR[S0SCERR] = 1
 - SPLLCSR[SPLLCM] = 1 & SPLLCSR[SPLLCMRE] = 0 & SPLLCSR[SPLLERR] = 1
- Interrupt can also be generated when any of below happens:
 - SOSC clock source is not valid. S0SCCSR[S0SCVLD_IE] = 1 & S0SCCSR[S0SCVLD] = 1
 - FIRC clock source is not accurate. FIRCCSR[FIRCACC_IE] = 1 & FIRCCSR[FIRCACC] = 1
 - FIRC trimming error detected. FIRCCSR[FIRCERR_IE] = 1 & FIRCCSR[FIRCERR] = 1
 - SIRC trimming error detected. SIRCCSR[SIRCERR_IE] = 1 & SIRCCSR[SIRCERR] = 1
 - SPLL is not powered or locked. SPLLCSR[SPLL_LOCK_IE] = 1 & SPLLCSR[SPLL_LOCK] = 1

23.4 External signals

Table 176. External signal descriptions

Signal	Description	Mode	I/O
XTAL	SOSC Crystal output pin	SOSC	O
EXTAL	SOSC Crystal input pin	SOSC	I
CLKOUT	SCG clock output pin	SCG	O

23.5 Initialization

Out of reset, the FIRC is default enabled. FIRCCFG[FREQ_SEL] is set to 001b, and RCCR[SCS] is set to 011b, so the FRO_HF clock which is set to 45 MHz would be as the system clock source.

Out of reset, the SIRC is default enabled.

Out of reset, all the other clock sources are disabled.

23.6 Application information

23.6.1 SOSC configuration example

1. Write 1 LDOCSR[LDOEN] to enable LDO
2. Write 1 to S0SCCFG[EREFS] to select SOSC source (internal crystal oscillator)
3. Write 0 to S0SCCFG[RANGE] to configure SOSC range

4. Write 0 to SOSCCSR[LK] to unlock SOSCCSR
5. Write 1 to SOSCCSR[SOSCCM] to enable SOSC clock monitor
6. Write 1 to SOSCCSR[SOSCSTEN] to enable SOSC in Deep Sleep mode if needed
7. Write 1 to SOSCCSR[SOSCEN] to enable SOSC
8. Read SOSCCSR[SOSCVLD] until it returns 1, indicating SOSC is valid
9. Read SOSCCSR[SOSCERR] to ensure it returns 0
10. Write 1 to RCCR[SCS] to switch main clock to SOSC
11. Read CSR[SCS] until it returns 1, indicating the switch is complete

23.6.2 SIRC configuration example

23.6.2.1 SIRC normal configuration example

1. Write 0 to SIRCCSR[LK] to unlock SIRCCSR
2. Write 1 to SIRCCSR[SIRCSTEN] to enable SIRC in Deep Sleep mode, if needed
3. Write 1 to SIRCCSR[SIRC_CLK_PERIPH_EN] to enable SIRC clock for peripheral use
4. Read SIRCCSR[SIRCVLD] until it returns 1, indicating SIRC is valid
5. Read SIRCCSR[SIRCERR] to ensure it returns 0
6. Write 2 to RCCR[SCS] to switch main clock to SIRC
7. Read CSR[SCS] until it returns 2, indicating the switch is complete
8. Write 1 to SIRCCSR[LK] to lock SIRCCSR

23.6.2.2 SIRC auto trim example

1. Follow steps 1 through 8 in [SOSC configuration example](#)
2. Write 2 to SIRCTCFG[TRIMSRC] to select SOSC as auto trim clock source
3. Write 39 to SIRCTCFG[TRIMDIV] to divide SOSC to 1 MHz
4. Write 0 to SIRCCSR[LK] to unlock SIRCCSR
5. Write 1 to SIRCCSR[SIRCTREN] to enable auto trim
6. Write 1 to SIRCCSR[SIRCTRUP] to enable update
7. Read SIRCCSR[SIRCVLD] until it returns 1, indicating SIRC is valid
8. Read SIRCCSR[SIRCERR] to ensure it returns 0
9. Read SIRCCSR[TRIM_LOCK] until it returns 1.
10. Write 1 to SIRCCSR[LK] to lock SIRCCSR

The auto trim process continues until it is disabled. The SIRCSTAT register shows the locked trim values. If there is an unlock after lock, SIRCCSR[SIRCERR] is set.

23.6.3 FIRC configuration example

23.6.3.1 FIRC normal configuration example

1. Write 111 to FIRCCFG[FREQ_SEL] to select 180 MHz
2. Write 0 to FIRCCSR[LK] to unlock FIRCCSR

3. Write 0 to FIRCCSR[FIRC_FCLK_PERIPH_EN] to disable FIRC_HF clock for peripheral use, by default FIRC_HF is enabled
4. Write 1 to FIRCCSR[FIRC_SCLK_PERIPH_EN] to enable FIRC 45 MHz clock for peripheral use if needed
5. Write 1 to FIRCCSR[FIRCCSTEN] to enable FIRC clock source in Deep Sleep mode if needed
6. Read FIRCCSR[FIRCVLD] until it returns 1, indicating FIRC is valid
7. Read FIRCCSR[FIRCERR] to ensure it returns 0
8. Write 3 to RCCR[SCS] to switch main clock to FIRC
9. Read CSR[SCS] until it returns 3, indicating the switch is complete
10. Write 0 to FIRCCSR[FIRCEN] to disable FIRC, by default FIRC is enabled
11. Write 1 to FIRCCSR[LK] to lock FIRCCSR

23.6.4 ROSC configuration example

1. Write 0 to ROSCCSR[LK] to unlock ROSCCSR
2. Read ROSCCSR[ROSCVLD] until it returns 1, indicating ROSC is valid
3. Read ROSCCSR[ROSCERR] to ensure it returns 0
4. Write 4 to RCCR[SCS] to switch main clock to ROSC
5. Read CSR[SCS] until it returns 4, indicating the switch is complete
6. Write 1 to ROSCCSR[LK] to lock ROSCCSR

23.6.5 SPLL configuration example

23.6.5.1 SPLL outputs 200 MHz clock with normal function

1. Write 1 to LDOCSR[LDOEN] to enable LDO
2. Read LDOCSR[VOUT_OK] returns 1, to ensure LDO output VOUT is OK
3. Configure SPLL reference clock source: SOSC
 - a. Write 1 to SOSCCFG[EREFS] to select SOSC source
 - b. Write 2 to SOSCCFG[RANGE] to configure SOSC range
 - c. Write 0 to SOSCCSR[LK] to unlock SOSCCSR
 - d. Write 1 to SOSCCSR[SOSCCM] to enable SOSC clock monitor
 - e. Write 1 to SOSCCSR[SOSCEN] to enable SOSC
 - f. Read SOSCCSR[SOSCVLD] returns 1, indicating SOSC is valid
 - g. Read SOSCCSR[SOSCERR] to ensure it returns 0, indicating there is no error
 - h. Write 1 to SOSCCSR[LK] to lock SOSCCSR
4. Configure SPLL:

NOTE

$\text{clk\_out} = \text{clk\_in} / N * M / P$ (bypass post divider)

- a. Write 0 to SPLLCTRL[SOURCE] to select SOSC as clock source
- b. Write 6 to SPLLCTRL[SELP]. The value should refer to register SELP
- c. Write 13 to SPLLCTRL[SELI]. The value should refer to register SELI

- d. Write 0 to SPLLCTRL[SELR]. The value should refer to register SELR
 - e. Write 2 to SPLLNDIV[NDIV] to configure N divider
 - f. Write 2 to SPLLPDIV[PDIV] to configure P divider
 - g. Write 20 to SPLLMDIV[MDIV] to configure M divider
 - h. Write 0 to SPLLCTRL[BYPASSPREDIV] to use the N divider
 - i. Write 0 to SPLLCTRL[BYPASSPOSTDIV] to use the P divider
 - j. Write 1 to SPLLCTRL[BYPASSPOSTDIV2] to bypass P divider_2
 - k. Write 1 to SPLLCTRL[FRM] to enable free run mode, if needed
 - l. Write 0 to SPLLCSR[LK] to unlock SPLLCSR
 - m. Write 1 to SPLLCSR[SPLLCM] to enable clock monitor
 - n. Write 5A5A0001h to the TRIM_LOCK register to unlock the SPLLOCK_CNFG register
 - o. Write 10300 to SPLLLOCK_CNFG[LOCK_TIME] to configure lock time of SPLL stable. 10300 equals 500 μ s/50 ns + 300, where 50 ns is the period of clk_ref (clk_in/N).
 - p. Write 3 to SPLLCSR[SPLLCLKEN] and SPLLCSR[SPLLPWREN] to enable and power on the SPLL clock
 - q. Either read SPLLCSR[SPLL_LOCK] until it returns 1, indicating SPLL is locked, or enable SPLLCSR[SPLL_LOCK_IE] to use the interrupt
 - r. Read SPLLCSR[SPLLERR] to ensure it returns 0
 - s. Write 1 to SPLLCSR[LK] to lock SPLLCSR
5. Write 5 to RCCR[SCS] to switch main clock to SPLL
 6. Read CSR[SCS] until it returns 5, indicating the switch is complete

23.6.5.2 SPLL outputs 150 MHz clock with spread-spectrum function from FIRC 45 MHz reference clock

1. Write 1 to LDOCSR[LDOEN] to enable LDO
2. Configure SPLL reference clock source: FIRC 45 MHz
 - a. Write 1 to FIRCCSR_FIRC_SCLK_PERIPH_EN] to select 45 MHz
 - b. Write 0 to FIRCCSR[LK] to unlock FIRCCSR
 - c. Write 1 to FIRCCSR[FIRCEN] to enable FIRC
 - d. Read FIRCCSR[FIRCVLD] until it returns 1, indicating FIRC is valid
 - e. Read FIRCCSR[FIRCERR] to ensure it returns 0
 - f. Write 1 to FIRCCSR[LK] to lock FIRCCSR
3. Configure SPLL:

NOTE

$\text{clk\_out} = \text{clk\_in}/N*M/P$ (bypass post divider)

- a. Write 1 to SPLLCTRL[LIMUPOFF] to set to spectrum and fractional applications
- b. Write 1 to SPLLCTRL[SOURCE] to select FIRC as clock source
- c. Write 2 to SPLLCTRL[SELP]. The value should refer to register SELP.
- d. Write 5 to SPLLCTRL[SELI]. The value should refer to register SELI.
- e. Write 0 to SPLLCTRL[SELR]. The value should refer to register SELR.

- f. Write 1 to SPLLNNDIV[NDIV] to configure N divider
- g. Write 2 to SPLLPDIV[PDIV] to configure P divider
- h. Write 0C800000h to SPLSSCG0[SS_MDIV_LSB] to configure M divider (M = 6.25)
- i. Write 0 to SPLSSCG1[SS_MDIV_MSB] to configure M divider (M = 6.25)
- j. Write 1 to SPLSSCG1[SEL_SS_MDIV]
- k. Write 0 to SPLSSCG1[DITHER]
- l. Write 2 to SPLSSCG1[MC]
- m. Write 0 to SPLSSCG1[MR]
- n. Write 0 to SPLSSCG1[MF]
- o. Write 0 to SPLLCTRL[BYPASSPREDIV] to use the N divider
- p. Write 0 to SPLLCTRL[BYPASSPOSTDIV] to use the P divider
- q. Write 1 to SPLLCTRL[BYPASSPOSTDIV2] to bypass P divider_2
- r. Write 1 to SPLLCTRL[FRM] to enable free run mode, if needed
- s. Write 0 to SPLLCR[LR] to unlock SPLLCR
- t. Write 1 to SPLLCR[SPLLCM] to enable clock monitor
- u. Write 5A5A0001h to the TRIM_LOCK register to unlock the SPLLOCK_CNFG register
- v. Write 24300 to SPLLOCK_CNFG[LOCK_TIME] to configure lock time of SPLL stable. 24300 equals 500 μ s/20.8 ns+300, where 20.8 ns is the period of clk_ref (clk_in/N).
- w. Write 0 to SPLSSCG1[SS_PD] to power up SSCG
- x. Write 3 to SPLLCR[SPLLCLEN] and SPLLCR[SPLLPWREN] to enable and power on PLL clock
- y. Either read SPLLCR[SPLL_LOCK] until it returns 1, indicating SPLL is locked, or enable SPLLCR_SPLL_LOCK_IE to use the interrupt
- z. Read SPLLCR[SPLLEERR] to ensure it returns 0
- aa. Write 1 to SPLLCR[LR] to lock SPLLCR
4. Write 5 to RCCR[SCS] to switch main clock to SPLL
5. Read CSR[SCS] until it returns 5, indicating the switch is complete

23.7 Memory map and register definition

This section includes information about the memory map and register definitions:

- Accesses on non-implemented registers that are outside the SCG maximum illegal address range generate a transfer error.
- Read accesses on non-implemented registers that are inside the SCG maximum illegal address range do not generate a transfer error.
- Write accesses on non-implemented registers that are inside the SCG maximum illegal address range generate a transfer error.
- Write accesses on read-only registers generate a transfer error.
- Only 32-bit writes are allowed for any writable SCG registers. Writes of 8 or 16 bits result in transfer errors.

23.7.1 SCG register descriptions

23.7.1.1 SCG memory map

SCG0 base address: 4008_F000h

Offset	Register	Width (In bits)	Access	Reset value
0h	Version ID (VERID)	32	R	0000_0000h
4h	Parameter (PARAM)	32	R	0000_005Eh
8h	Trim Lock (TRIM_LOCK)	32	RW	0000_0000h
10h	Clock Status (CSR)	32	R	0300_0000h
14h	Run Clock Control (RCCR)	32	RW	0300_0000h
100h	SOSC Control Status (SOSCCSR)	32	RW	0000_0000h
108h	SOSC Configuration (SOSCCFG)	32	RW	0000_0000h
200h	SIRC Control Status (SIRCCSR)	32	RW	0100_0020h
20Ch	SIRC Trim Configuration (SIRCTCFG)	32	RW	0000_0000h
210h	SIRC Trim (SIRCTRIM)	32	RW	See section
218h	SIRC Auto-trimming Status (SIRCSTAT)	32	RW	See section
300h	FIRC Control Status (FIRCCSR)	32	RW	See section
308h	FIRC Configuration (FIRCCFG)	32	RW	0000_0003h
310h	FIRC Trim (FIRCTRIM)	32	RW	See section
400h	ROSC Control Status (ROSCCSR)	32	RW	0000_0000h
600h	SPLL Control Status (SPLLCSR)	32	RW	0000_0000h
604h	SPLL Control (SPLLCTRL)	32	RW	0000_0000h
608h	SPLL Status (SPLLSTAT)	32	R	0000_0000h
60Ch	SPLL N Divider (SPLLNDIV)	32	RW	0000_0001h
610h	SPLL M Divider (SPLLMDIV)	32	RW	0000_0001h
614h	SPLL P Divider (SPLLPDIV)	32	RW	0000_0001h
618h	SPLL LOCK Configuration (SPLLLOCK_CNFG)	32	RW	0000_4F4Ch
620h	SPLL SSCG Status (SPLLSSCGSTAT)	32	R	0000_0000h
624h	SPLL Spread Spectrum Control 0 (SPLLSSCG0)	32	RW	0000_0000h
628h	SPLL Spread Spectrum Control 1 (SPLLSSCG1)	32	RW	8000_0000h
800h	LDO Control and Status (LDOCSR)	32	RW	0000_0008h

23.7.1.2 Version ID (VERID)

Offset

Register	Offset
VERID	0h


Function

The Version ID register indicates the version integrated for this instance on the device.

NOTE

Writing to this register results in a transfer error.

Diagram

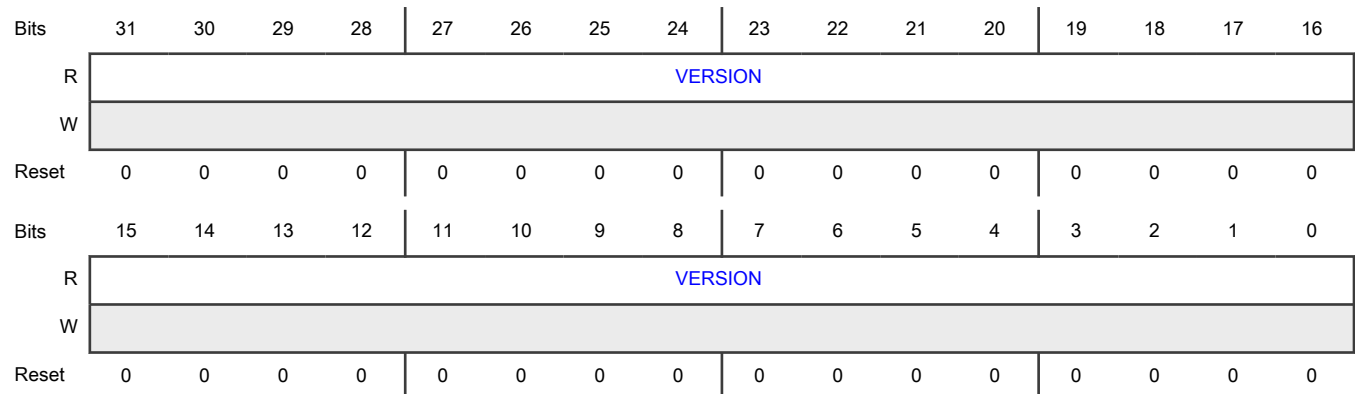

Fields

Field	Function
31-0	SCG Version Number
VERSION	This read-only field returns the SCG module version number.

23.7.1.3 Parameter (PARAM)

Offset

Register	Offset
PARAM	4h


Function

The Parameter register indicates the feature parameters for this instance on the device.

NOTE

Writing to this register results in a transfer error.

Diagram

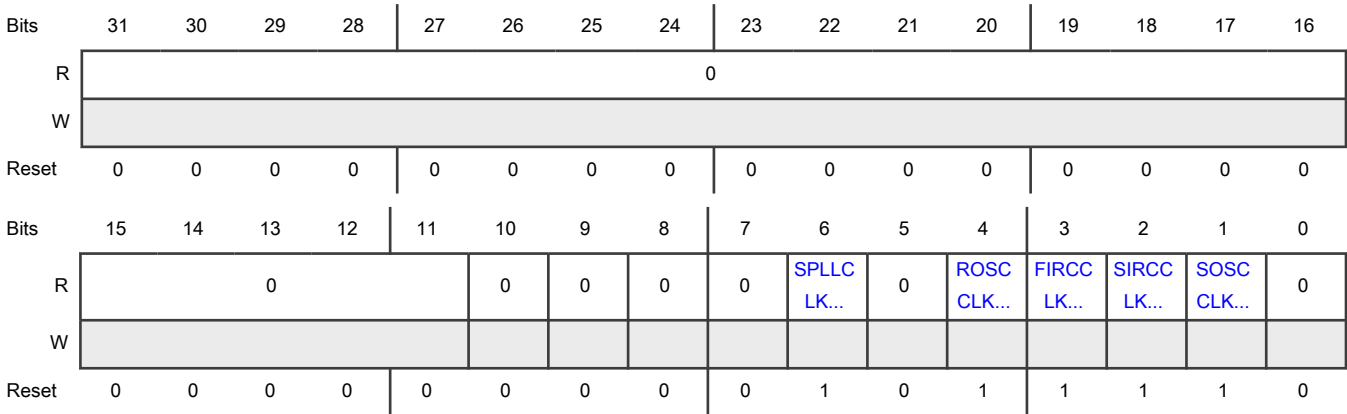

Fields

Field	Function
31-11 —	Reserved
10 —	Reserved
9 —	Reserved
8 —	Reserved
7 —	Reserved
6 SPLLCLKPRES	SPLL Clock Present Indicates that the SPLL clock source is present. 0b - SPLL clock source is not present 1b - SPLL clock source is present
5 —	Reserved
4 ROSCCLKPRES	ROSC Clock Present Indicates that the ROSC (FRO16K) clock source is present. 0b - ROSC clock source is not present 1b - ROSC clock source is present

Table continues on the next page...

Table continued from the previous page...

Field	Function
3 FIRCCLKPRES	FIRC Clock Present Indicates that the FIRC clock source is present. 0b - FIRC clock source is not present 1b - FIRC clock source is present
2 SIRCCLKPRES	SIRC Clock Present Indicates that the SIRC clock source is present. 0b - SIRC clock source is not present 1b - SIRC clock source is present
1 SOSCCLKPRES	SOSC Clock Present Indicates that the SOSC clock source is present. 0b - SOSC clock source is not present 1b - SOSC clock source is present
0 —	Reserved

23.7.1.4 Trim Lock (TRIM_LOCK)

Offset

Register	Offset
TRIM_LOCK	8h


Function

The Trim Lock Register contains the TRIM_UNLOCK and IFR_DISABLE bits.

NOTE

The bits reset solely on a POR/LVD event.

Diagram

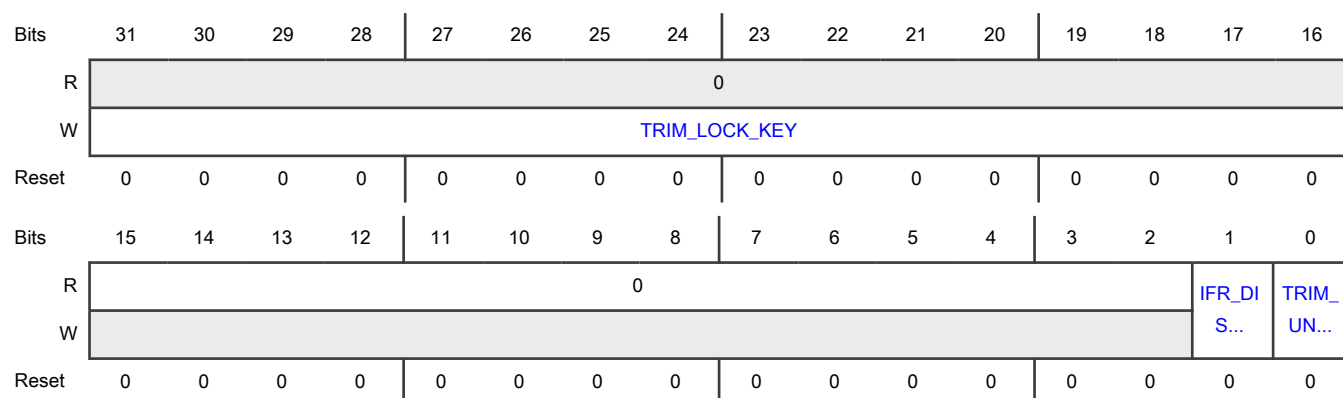

Fields

Field	Function
31-16 TRIM_LOCK_KEY	TRIM_LOCK_KEY Write value that is used to unlock writes to the IFR_DISABLE and TRIM_UNLOCK registers. NOTE A write value of 0x5a5a allows writes to the IFR_DISABLE and TRIM_UNLOCK to take affect. NOTE Writable but reads always return a 0 value.
15-2 —	Reserved
1 IFR_DISABLE	IFR_DISABLE Locks IFR write access to SCG trim registers. When set, prevents SCG trim registers from getting IFR loaded during warm reset. NOTE IFR_DISABLE is writable during write access to TRIM_LOCK and only when the TRIM_LOCK[31:16] write value is equal to 16'h5a5a. 0b - IFR write access to SCG trim registers not disabled. The SCG Trim registers are reprogrammed with the IFR values after any system reset. 1b - IFR write access to SCG trim registers during system reset is blocked.
0 TRIM_UNLOCK	TRIM_UNLOCK Locks user writes access to SCG Trim Configuration registers. NOTE TRIM_UNLOCK is writable during write access to TRIM_LOCK and only when the TRIM_LOCK[31:16] write value is equal to 16'h5a5a.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - SCG Trim Registers locked and not writable. 1b - SCG Trim registers unlocked and writable.

23.7.1.5 Clock Status (CSR)

Offset

Register	Offset
CSR	10h

Function

The Clock Status Register shows the currently configured clock source that is generating the system clock.

NOTE

Writing to the Clock Status Register (CSR) results in a transfer error.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	
R	0					SCS				0							
W																	
Reset	0	0	0	0	0	0	1	1	0	0	0	0	0	0	0	0	
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	
R	0																
W																	
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	

Fields

Field	Function
31-27 —	Reserved
26-24 SCS	System Clock Source Returns the currently configured clock source generating the system clock. Reports the configuration set by the RCCR. 001b - SOSC

Table continues on the next page...

Table continued from the previous page...

Field	Function
	010b - SIRC 011b - FIRC 100b - ROOSC 110b - SPLL All other values are reserved.
23-0	Reserved
—	

23.7.1.6 Run Clock Control (RCCR)

Offset

Register	Offset
RCCR	14h

Function

The Run Clock Control Register selects the clock source generating the system clock.

NOTE

Switching to new system clock source must be done after previous RCCR changes have been completed and the Clock Status Register has been updated to match the present RCCR setting.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0				SCS				0							
W																
Reset	0	0	0	0	0	0	1	1	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-27	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
—	
26-24 SCS	System Clock Source Selects the clock source generating the system clock in Run mode. Attempting to select a clock that is not valid is ignored. Selecting a different clock source when in Run mode requires that clock source to be enabled first and be valid before system clocks are allowed to switch to that clock source. NOTE Programming SCS to a different value must only be done after the previous SCS clock switch has completed. 001b - SOSC 010b - SIRC 011b - FIRC 100b - ROSC 110b - SPLL All other values are reserved.
23-0 —	Reserved

23.7.1.7 SOSC Control Status (SOSCCSR)

Offset

Register	Offset
SOSCCSR	100h

Function

The SOSC Control Status Register contains control and status bits for the SOSC clock source.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0	SOSC VLD...	0			SOSC ERR	SOSC SEL	SOSC VLD	LK	0			SOSC CMRE		SOSC CM	
W						W1C										
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0												0	SOSC STEN	SOSC EN	
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31 —	Reserved
30 SOSCVLD_IE	SOSC Valid Interrupt Enable Generates an interrupt when SOSCVLD is asserted. 0b - SOSCVLD interrupt is not enabled 1b - SOSCVLD interrupt is enabled
29-27 —	Reserved
26 SOSCERR	SOSC Clock Error This flag is reset on Chip POR only, software can also clear this flag by writing a logic one. 0b - SOSC Clock Monitor is disabled or has not detected an error 1b - SOSC Clock Monitor is enabled and detected an error
25 SOSCSEL	SOSC Selected This flag shows the SOSC clock source is selected as the system clock source. 0b - SOSC is not the system clock source 1b - SOSC is the system clock source
24 SOSCVLD	SOSC Valid This flag shows the SOSC clock source is valid. 0b - SOSC is not enabled or clock is not valid 1b - SOSC is enabled and output clock is valid
23	Lock

Table continues on the next page...

Table continued from the previous page...

Field	Function
LK	Locks this register so that it cannot be written to. NOTE This field can be cleared/set at any time. 0b - This Control Status Register can be written 1b - This Control Status Register cannot be written
22-18 —	Reserved
17 SOSCCMRE	SOSC Clock Monitor Reset Enable Enables the SOSCERR generate reset. 0b - Clock monitor generates an interrupt when an error is detected 1b - Clock monitor generates a reset when an error is detected
16 SOSCCM	SOSC Clock Monitor Enable Enables the clock monitor when SOSCVLD is set. NOTE SOSC clock monitor remains enabled in Deep Sleep mode only if SOSCCM and SOSCSTEN are enabled. If the clock is disabled in Deep Sleep mode, then SOSCCM must be cleared to prevent unexpected SOSC loss of clock. The clock monitor is always disabled in Power Down and Deep Power Down modes. When the clock monitor is disabled in a low power mode, it remains disabled until the clock valid flag is set, following exit from the low power mode. NOTE The reference clock used to monitor the SOSC is the SIRC. This clock must be programmed to be enabled in order to monitor the SOSC. SIRC is automatically disabled in Power Down and Deep Power Down modes and the clock monitor of SOSC is disabled. 0b - SOSC Clock Monitor is disabled 1b - SOSC Clock Monitor is enabled
15-3 —	Reserved
2 —	Reserved
1 SOSCSTEN	SOSC Stop Enable Enables the SOSC clock source in Deep Sleep mode if SOSCEN is set. 0b - SOSC is disabled in Deep Sleep mode

Table continues on the next page...

Table continued from the previous page...

Field	Function
	1b - SOSC is enabled in Deep Sleep mode only if SOSSEN is set
0 SOSSEN	SOSC Enable Enables the SOSC clock source. 0b - SOSC is disabled 1b - SOSC is enabled

23.7.1.8 SOSC Configuration (SOSCCFG)

Offset

Register	Offset
SOSCCFG	108h

Function

The SOSC Configuration Register contains the clock frequency range select and external reference select for the SOSC clock source.

NOTE

The SOSCCFG register cannot be changed when the SOSC is enabled. When the SOSC is enabled, writes to this register are ignored, and there is no transfer error.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0				0				0		RANGE		0	EREF S	0	
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-12	Reserved
—	

Table continues on the next page...

Table continued from the previous page...

Field	Function
11-8 —	Reserved
7-6 —	Reserved
5-4 RANGE	SOSC Range Select Selects the frequency range for the system crystal oscillator (OSC). 00b - Frequency range select of 8-16 MHz. 01b - Frequency range select of 16-25 MHz. 10b - Frequency range select of 25-40 MHz. 11b - Frequency range select of 40-50 MHz.
3 —	Reserved
2 EREFS	External Reference Select Selects the source for the external reference clock. This bit selects which clock is output from the SOSC into the SCG, whether from the crystal oscillator or from an external clock input. 0b - External reference clock selected. 1b - Internal crystal oscillator of OSC selected.
1-0 —	Reserved

23.7.1.9 SIRC Control Status (SIRCCSR)

Offset

Register	Offset
SIRCCSR	200h

Function

The SIRC Control Status Register contains control and status bits for the SIRC clock source.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0				SIRCE RR...	SIRCE RR	SIRCS EL	SIRCV LD	LK	0						
W						W1C										
Reset	0	0	0	0	0	0	0	1	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0				COAR SE_...	TRIM_ LO...	SIRCT RUP	SIRCT REN	0		SIRC_ CL...	0			SIRCS TEN	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	1	0	0	0	0	0

Fields

Field	Function
31-28 —	Reserved
27 SIRCERR_IE	SIRC Clock Error Interrupt Enable Generates an interrupt when SIRCERR is asserted. 0b - SIRCERR interrupt is not enabled 1b - SIRCERR interrupt is enabled
26 SIRCERR	SIRC Clock Error This flag is reset on Chip POR only, software can also clear this flag by writing a logic one 0b - Error not detected with the SIRC trimming 1b - Error detected with the SIRC trimming
25 SIRCSEL	SIRC Selected This flag shows the SIRC clock source is selected as the system clock source. 0b - SIRC is not the system clock source 1b - SIRC is the system clock source
24 SIRCVLD	SIRC Valid This flag shows the SIRC clock source is valid. 0b - SIRC is not enabled or clock is not valid 1b - SIRC is enabled and output clock is valid
23 LK	Lock This field can be cleared/set at any time. The purpose for this bitfield is to prevent runaway code from changing SIRC clock configurations.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - Control Status Register can be written 1b - Control Status Register cannot be written
22-12 —	Reserved
11 COARSE_TRIM _BYPASS	Coarse Auto Trim Bypass This bit is to bypass the coarse trim step when auto-trimming. 0b - SIRC Coarse Auto Trim NOT Bypassed 1b - SIRC Coarse Auto Trim Bypassed
10 TRIM_LOCK	SIRC TRIM LOCK When SIRCTREN and SIRCTRUP are enabled, TRIM_LOCK indicates when auto trimming is complete and output SIRC frequency has locked to target SIRC range. NOTE • This field is automatically cleared if SIRCTREN and SIRCTRUP are not set. • TRIM_LOCK is not set when SIRCTCFG[TRIMSRC] = 2'b00, i.e., using full speed USB as the trim source. 0b - SIRC auto trim not locked to target frequency range 1b - SIRC auto trim locked to target frequency range
9 SIRCTRUP	SIRC Trim Update This bit allows the SIRCSTAT to be updated by the auto-trimming hardware. 0b - Disables SIRC trimming updates 1b - Enables SIRC trimming updates
8 SIRCTREN	SIRC 12 MHz Trim Enable (SIRCCFG[RANGE]=1) This bit enables the auto trim of SIRC 12 MHz by an external clock source. 0b - Disables trimming SIRC to an external clock source 1b - Enables trimming SIRC to an external clock source
7-6 —	Reserved
5 SIRC_CLK_PE RIPH_EN	SIRC Clock to Peripherals Enable This bit enables the SIRC clock for peripheral use. 0b - SIRC clock to peripherals is disabled 1b - SIRC clock to peripherals is enabled

Table continues on the next page...

Table continued from the previous page...

Field	Function
4-2 —	Reserved
1 SIRCASTEN	SIRC Stop Enable Enables the SIRC clock source in Deep Sleep mode. 0b - SIRC is disabled in Deep Sleep mode 1b - SIRC is enabled in Deep Sleep mode
0 —	Reserved

23.7.1.10 SIRC Trim Configuration (SIRCTCFG)

Offset

Register	Offset
SIRCTCFG	20Ch


Function

The SIRC Trim Configuration Register contains the auto trim clock source select and trim clock divider control for the SIRC clock source.

NOTE

The SIRCTCFG register cannot be changed when SIRC is enabled. When the SIRC tuning is enabled, writes to this register are ignored, and there is no transfer error.

Diagram

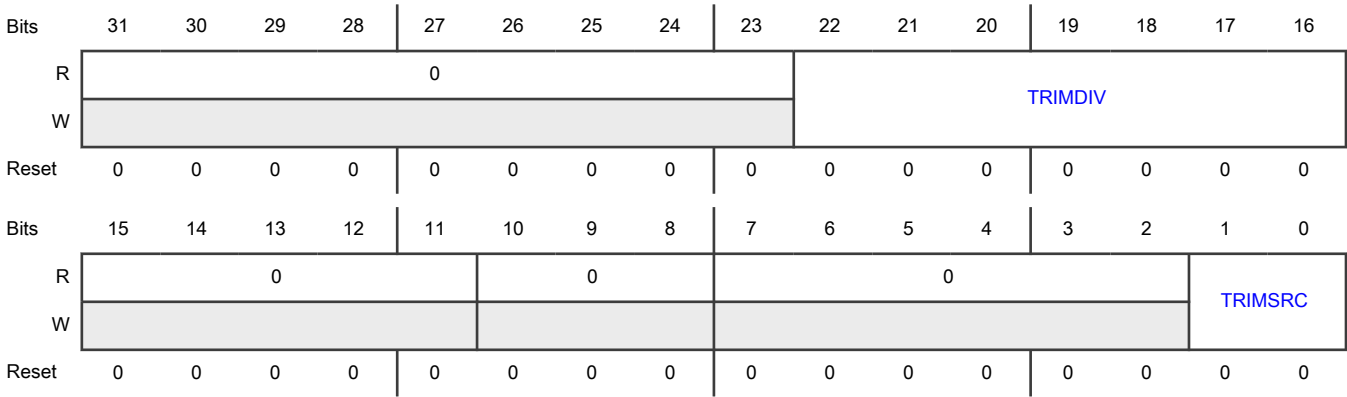

Fields

Field	Function
31-23 —	Reserved
22-16 TRIMDIV	SIRC Trim Pre-divider Divider of SOSC for SIRC trimming. NOTE When selecting SOSC as SIRC trimming source the TRIMDIV register must be set to correct div ratio to generate 1 MHz output reference trimming clock. NOTE TRIMDIV is an N-Divider supporting a div ratio of 1 (TRIMDIV=0x00) to a div ratio of 128 (TRIMDIV=0x7f).
15-11 —	Reserved
10-8 —	Reserved
7-2 —	Reserved
1-0 TRIMSRC	Trim Source Configures the external clock source to tune the SIRC. TRIMSRC must be configured before programming SIRCSTAT register for trim update 00b - Reserved 01b - Reserved 10b - SOSC. This option requires that SOSC be divided using the TRIMDIV field to get a frequency of 1 MHz. 11b - Reserved

23.7.1.11 SIRC Trim (SIRCTRIM)**Offset**


Register	Offset
SIRCTRIM	210h

Function

The SIRC Trim Register holds the trim values for the SIRC clock source. This register is loaded from IFR during reset.

NOTE

This register writes are protected by TRIM LOCK register.

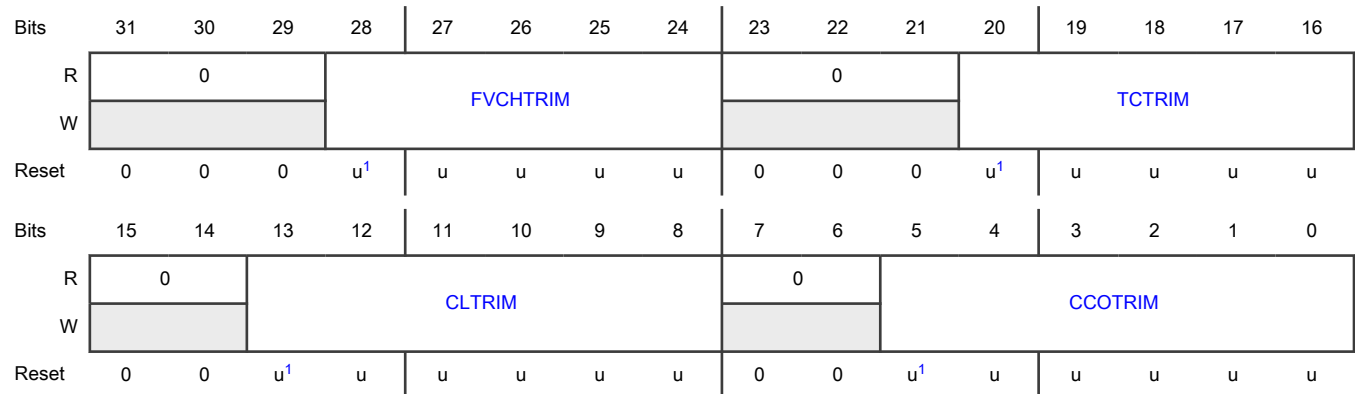Diagram

1. Reset values are loaded out of IFR.

Fields

Field	Function
31-29 —	Reserved
28-24 FVCHTRIM	Calibrates the replica voltage in FSU for CCO to get well frequency at initial period
23-21 —	Reserved
20-16 TCTRIM	Trim Temp Trim bus to calibrate the relationship between freq and temperature.
15-14 —	Reserved
13-8 CLTRIM	CL Trim Trims bus to calibrate the freq of CCO in close loop mode to within approximately $\pm 0.6\%$ of the target 12 MHz frequency.
7-6 —	Reserved
5-0 CCOTRIM	CCO Trim Trims bus to calibrate the freq of CCO in open loop mode to within approximately $\pm 2.5\%$ of the target 12 MHz frequency.

23.7.1.12 SIRC Auto-trimming Status (SIRCSTAT)

Offset

Register	Offset
SIRCSTAT	218h

Function

This register is loaded from IFR during warm reset.


When SIRCTREN=1 and SIRCTRP=1, this register is uploaded with the trim values generated by SIRC auto-trimming which is enabled.

When SIRCTREN=1 and SIRCTRP=0, writing to this register is not allowed and values read from this register are used to trim SIRC clock.

NOTE

TRIMSRC needs to be programmed to TRIMSRC=10, writes to this register are allowed and values written to this register are used to trim the SIRC clock.

Diagram

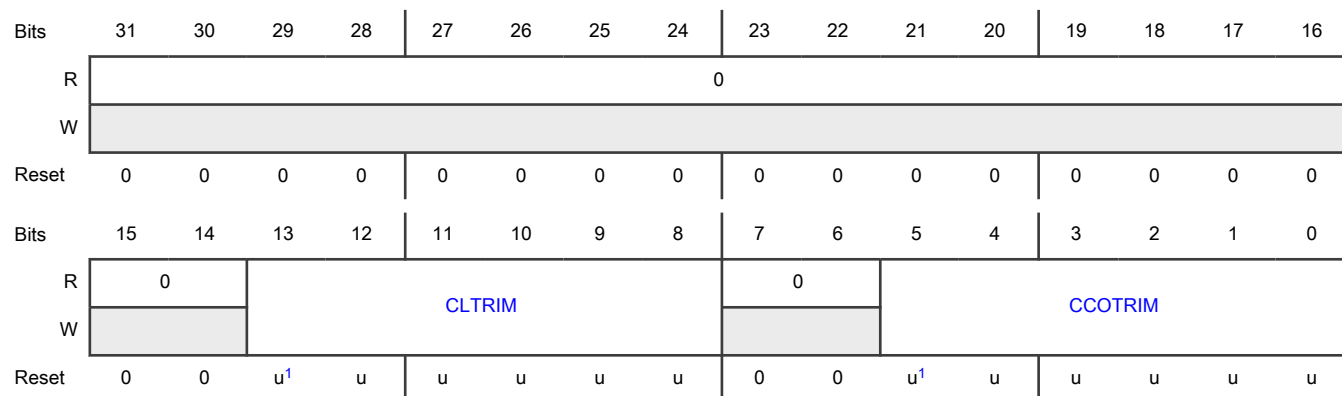

1. Reset values are loaded out of IFR.

Fields

Field	Function
31-14 —	Reserved
13-8 CLTRIM	CL Trim CLTRIM bits are to calibrate the freq of CCO in close loop mode, are used to trim the SIRC Clock to within approximately $\pm 0.6\%$ of the target 12 MHz frequency.
7-6 —	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
5-0 CCOTRIM	CCO Trim CCOTRIM bits are to calibrate the freq of CCO in open loop mode, are used to coarsely trim the SIRC Clock to within approximately $\pm 2.5\%$ of the target 12 MHz frequency.

23.7.1.13 FIRC Control Status (FIRCCSR)

Offset

Register	Offset
FIRCCSR	300h

Function

The FIRC Control Status Register contains control and status bits for the FIRC clock source.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	FIRCA CC	FIRCA CC...	0		FIRCE RR...	FIRCE RR	FIRCS EL	FIRCV LD	LK	0			0			
W						W1C										
Reset	u	0	0	0	0	0	1	1	0	0	0	0	0	0	0	0

Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0				0				0		FIRC_ FC...	FIRC_ SC...	0		FIRCS TEN	FIRCE N
W																
Reset	0	0	0	0	0	0	0	0	0	0	1	1	0	0	0	1

Fields

Field	Function
31 FIRCACC	FIRC Frequency Accurate This flag shows the FIRC clock source is accurate. 0b - FIRC is not enabled or clock is not accurate. 1b - FIRC is enabled and output clock is accurate after some preparation time which is obtained by counting FRO_HF clock.
30 FIRCACC_IE	FIRC Accurate Interrupt Enable Generate an interrupt when FIRCACC is asserted.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - FIRCACC interrupt is not enabled 1b - FIRCACC interrupt is enabled
29-28 —	Reserved
27 FIRCERR_IE	FIRC Clock Error Interrupt Enable Generate an interrupt when FIRCERR is asserted. 0b - FIRCERR interrupt is not enabled 1b - FIRCERR interrupt is enabled
26 FIRCERR	FIRC Clock Error This flag is reset on Chip POR only, software can also clear this flag by writing a logic one 0b - Error not detected with the FIRC trimming 1b - Error detected with the FIRC trimming
25 FIRCSEL	FIRC Selected This flag shows the FIRC clock source is selected as the system clock source. 0b - FIRC is not the system clock source 1b - FIRC is the system clock source
24 FIRCVLD	FIRC Valid status This flag shows the FIRC clock source is valid. 0b - FIRC is not enabled or clock is not valid. 1b - FIRC is enabled and output clock is valid. The clock is valid after there is an output clock from the FIRC analog.
23 LK	Lock This bit field can be cleared/set at any time. The purpose for this bitfield is to prevent runaway code from changing FIRC clock configurations. 0b - Control Status Register can be written 1b - Control Status Register cannot be written
22-20 —	Reserved
19-16 —	Reserved
15-12	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
—	
11-8 —	Reserved
7-6 —	Reserved
5 FIRC_FCLK_PE RIPH_EN	FRO_HF Clock to peripherals Enable This bit enables the FRO_HF clock for peripheral use. 0b - FRO_HF to peripherals is disabled 1b - FRO_HF to peripherals is enabled
4 FIRC_SCLK_P ERIPH_EN	FIRC 45 MHz Clock to peripherals Enable This bit enables the FIRC 45 MHz clock for peripheral use. 0b - FIRC 45 MHz to peripherals is disabled 1b - FIRC 45 MHz to peripherals is enabled
3-2 —	Reserved
1 FIRCSTEN	FIRC Stop Enable Enables the FIRC clock source in Deep Sleep mode if FIRCEN is set. 0b - FIRC is disabled in Deep Sleep mode 1b - FIRC is enabled in Deep Sleep mode
0 FIRCEN	FIRC Enable Enables the FIRC clock source. 0b - FIRC is disabled 1b - FIRC is enabled


23.7.1.14 FIRC Configuration (FIRCCFG)

Offset

Register	Offset
FIRCCFG	308h

Function

The FIRC Configuration Register controls the clock frequency range select for the FIRC clock source.

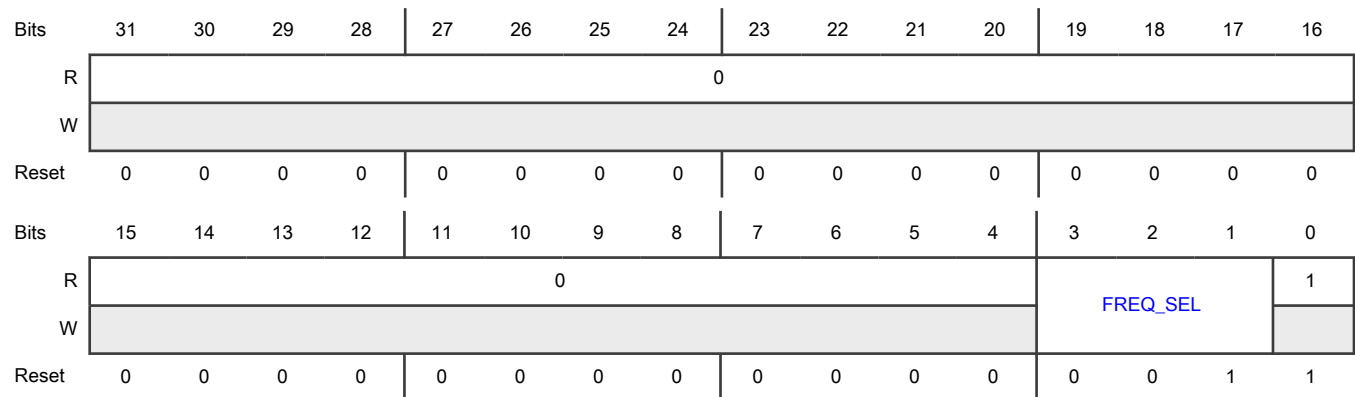Diagram**Fields**

Field	Function
31-4 —	Reserved
3-1 FREQ_SEL	Frequency select These bits are used to select the frequency for FRO_HF clock when used as system clock. 001b - 45 MHz FIRC clock selected, divided from 180 MHz 011b - 60 MHz FIRC clock selected 101b - 90 MHz FIRC clock selected 111b - 180 MHz FIRC clock selected
0 —	Reserved

23.7.1.15 FIRC Trim (FIRCTRIM)**Offset**


Register	Offset
FIRCTRIM	310h

Function

The FIRC Trim Register holds the trim values for the FIRC clock source. This register is loaded from IFR during reset. These values are used for trimming the different selected frequencies (from 45 to 180 MHz by FIRCCFG[FREQ_SEL]) of FIRC.

NOTE

This register writes are protected by TRIM LOCK register.

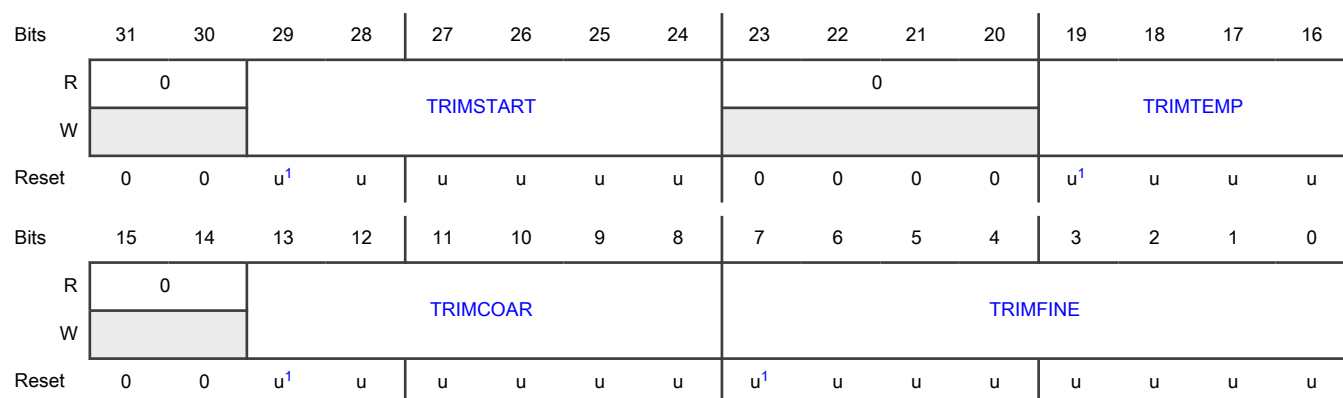Diagram

1. Reset values are loaded out of IFR.

Fields

Field	Function
31-30 —	Reserved
29-24 TRIMSTART	Trim Start Current dac adjustment of the replica cco current of start-up circuit.
23-20 —	Reserved
19-16 TRIMTEMP	Trim Temperature Temperature coefficient compensation for FIRC .
15-14 —	Reserved
13-8 TRIMCOAR	Trim Coarse TRIMCOAR bits are used to coarsely trim the FIRC Clock to within approximately $\pm 3.2\%$ of the target frequency.
7-0 TRIMFINE	Trim Fine Current DAC adjustment of the CCO current. TRIMFINE bits are used to fine trim the FIRC Clock to within approximately $\pm 0.25\%$ of the target frequency.

23.7.1.16 ROSC Control Status (ROSCCSR)**Offset**

Register	Offset
ROSCCSR	400h

Function

The ROSC Control Status Register contains control and status bits for the ROSC (FRO16K) clock source.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0					ROSC ERR	ROSC SEL	ROSC VLD	LK	0				0		
W						W1C										
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-27 —	Reserved
26 ROSCERR	ROSC Clock Error This flag is reset on Chip POR only, software can also clear this flag by writing a logic one 0b - ROSC Clock has not detected an error 1b - ROSC Clock has detected an error
25 ROSCSEL	ROSC Selected This flag shows the ROSC clock source is selected as the system clock source. 0b - ROSC is not the system clock source 1b - ROSC is the system clock source
24 ROSCVLD	ROSC Valid This flag shows the ROSC clock source is valid. 0b - ROSC is not enabled or clock is not valid 1b - ROSC is enabled and output clock is valid
23 LK	Lock Locks this register so that it cannot be written to.
NOTE This field can be cleared/set at any time. 0b - Control Status Register can be written	

Table continues on the next page...

Table continued from the previous page...

Field	Function
	1b - Control Status Register cannot be written
22-18 —	Reserved
17-16 —	Reserved
15-0 —	Reserved

23.7.1.17 SPLL Control Status (SPLLCSR)

Offset

Register	Offset
SPLLCSR	600h

Function

The SPLL Control Status Register contains control and status bits for SPLL clock source.

NOTE

After PLL is powered on, the configuration registers must not be changed except the fields that can be modified on-the-fly.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0	SPLL_ LO...	0			SPLLE RR	SPLLS EL	SPLL_ LO...	LK	0				SPLLC MRE	SPLLC M	
W						W1C										
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0												FRM_ CLO...	SPLLS TEN	SPLLC LK...	SPLLP WR...
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31 —	Reserved
30 SPLL_LOCK_IE	SPLL LOCK Interrupt Enable Generates an interrupt when SPLL_LOCK is asserted. 0b - SPLL_LOCK interrupt is not enabled 1b - SPLL_LOCK interrupt is enabled
29-27 —	Reserved
26 SPLLERR	SPLL Clock Error This flag is reset on Chip POR only, software can also clear this flag by writing a logic one. NOTE This error is ONLY set when FRMDDET flag is generated in the free running mode. 0b - SPLL Clock Monitor is disabled or has not detected an error 1b - SPLL Clock Monitor is enabled and detected an error
25 SPLLSEL	SPLL Selected This flag shows the SPLL clock source is selected as the system clock source. 0b - SPLL is not the system clock source 1b - SPLL is the system clock source
24 SPLL_LOCK	SPLL LOCK Indicates when the SPLL clock is locked. This flag is set when the number of reference clocks reaches LOCK_TIME after power on. Power down the SPLL or SOSC/ROSC error when selected as the reference clock to the SPLL or write to SPLLCTRL/SPLLNDIV/SPLLMDIV/SPLLPDIV/SPLLSSCG0/SPLLSSCG1 causes the SPLL_LOCK to clear . NOTE The SPLL_LOCK bit is used to verify that the SPLL is locked after power on. When modifying the configuration SPLLCTRL/SPLLNDIV/SPLLMDIV/SPLLPDIV/SPLLSSCG0/SPLLSSCG1 on-the-fly, this bit is cleared. In this case, before using the PLL clock, user must wait SPLL_LOCK set again to make sure the PLL is locked. NOTE To monitor the SPLL clock, ensure that the SPLL Clock Monitor is enabled, using the bit SPLLCM. 0b - SPLL is not powered on or not locked 1b - SPLL is locked

Table continues on the next page...

Table continued from the previous page...

Field	Function
23 LK	Lock Locks this register so that it cannot be written to. NOTE This field can be cleared/set at any time. 0b - Control Status Register can be written 1b - Control Status Register cannot be written
22-18 —	Reserved
17 SPLLCMRE	SPLL Clock Monitor Reset Enable Enables the SPLLERR generate reset. NOTE This is ONLY used to monitor whether the FRMDDET flag is generated in the free running mode. 0b - Clock monitor generates an interrupt when an error is detected 1b - Clock monitor generates a reset when an error is detected
16 SPLLCM	SPLL Clock Monitor Enables the clock monitor, if the clock source is disabled in a low power mode then the clock monitor is also disabled in the low power mode. The clock monitor is always disabled in Power Down and Deep Power Down modes. When the clock monitor is disabled in a low power mode, it remains disabled until the PLL_LOCK is set following exit from the low power mode. NOTE This is ONLY used to monitor whether the FRMDDET flag is generated in the free running mode. 0b - SPLL Clock Monitor is disabled 1b - SPLL Clock Monitor is enabled
15-4 —	Reserved
3 FRM_CLOCKS TABLE	Free running mode clock stable NOTE To be used for free running mode when $F_{in} / N = F_{ref} < 100 \text{ KHz}$, only make FRM_CLOCKSTABLE = 1 after the PLL output frequency is stable. 0b - Free running mode clock stable is disabled 1b - Free running mode clock stable is enabled

Table continues on the next page...

Table continued from the previous page...

Field	Function
2 SPLLSTEN	SPLL Stop Enable Enables the SPLL clock source in Deep Sleep mode if SPLLCLKEN and SPLLWREN are set. 0b - SPLL is disabled in Deep Sleep mode 1b - SPLL is enabled in Deep Sleep mode
1 SPLLCLKEN	SPLL Clock Enable Enables the SPLL clock source. NOTE This bit is to enable the analog PLL to send out the clock. The user can configure SPLLCLKEN and SPLLWREN at the same time, because the hardware only enables the clock when PLL_LOCK=1. NOTE Before using PLL clock, make sure SPLLCLKEN is enabled. 0b - SPLL clock is disabled 1b - SPLL clock is enabled
0 SPLLWREN	SPLL Power Enable Powers up the SPLL clock source. NOTE To use the spread spectrum and fractional function, SS_PD must also be set to 0. 0b - SPLL clock is powered off 1b - SPLL clock is powered on

23.7.1.18 SPLL Control (SPLLCTRL)


Offset

Register	Offset
SPLLCTRL	604h

Function

The SPLL Control Register contains control bits for the analog PLL.

Diagram

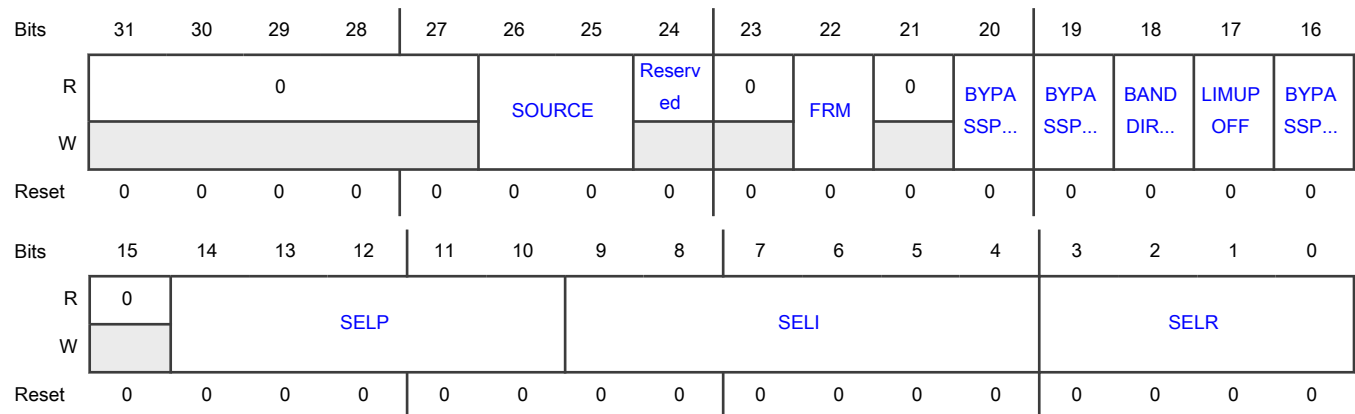

Fields

Field	Function
31-27 —	Reserved
26-25 SOURCE	Clock Source Configures the input clock source(clkin) for the SPLL. NOTE For good PLL performance, a good quality input clock is necessary. The input clock on clkin, optionally divided by the pre-divider ratio N, gives the reference frequency F_{ref} for the PLL-loop ($F_{ref} = F_{in} / N$). For optimal performance, a reference frequency within the frequency range 5 MHz - 50 MHz is preferred. The total possible reference frequency range is 32 KHz to 150 MHz. 00b - SOSC 01b - FIRC 45 MHz clock. FIRC_SCLK_PERIPH_EN needs to be set to use FIRC 45 MHz clock. 10b - ROSC 11b - SIRC 12 MHz clock
24 —	Reserved
23 —	Reserved
22 FRM	Free Running Mode Enable In the FRM mode the PLL monitors the input clock clkin. If the input clock disappears for more than 6 periods, the CCO of the PLL starts running free. The output frequency is within +1 % and -20 % for at least 200 μs. After 200 μs of self clocking, the frequency keeps going down. If the PLL is in free running mode, FRMDDET is high.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	NOTE The free running mode only operates for reference frequencies above 100 KHz ($F_{in} / N = F_{ref} > 100 \text{ KHz}$). To use the free running mode for $F_{in} / N = F_{ref} < 100 \text{ KHz}$, only make FRM_CLOCKSTABLE = 1 after the PLL output frequency is stable. The free running mode is designed in such a way, that if the input clock occurs again, the PLL goes out of free running and get locked again. Because the output clock has drifted away, overshoot and lock time have to be taken into account. NOTE When FRM=1, and PLL has detected a loss of input clock for more than 6 periods, SPLERR flag is set. 0b - Free running mode disabled 1b - Free running mode enabled
21 —	Reserved
20 BYPASSPOST DIV	Bypass of the post-divider. Enables the bypass of the post-divider. 0b - Use the post-divider 1b - Bypass of the post-divider
19 BYPASSPREDI V	Bypass of the pre-divider. Enables the bypass of the pre-divider. 0b - Use the pre-divider 1b - Bypass of the pre-divider
18 BANDDIRECT	Control of the bandwidth of the PLL. Enables the direct control of the bandwidth. 0b - The bandwidth is changed synchronously with the feedback-divider 1b - Modifies the bandwidth of the PLL directly
17 LIMUPOFF	Up Limiter. In spread spectrum and fractional applications, LIMUPOFF must be set to 1. In other applications, LIMUPOFF = 0. 0b - Application set to non Spectrum and Fractional applications. 1b - Application set to Spectrum and Fractional applications.
16	Bypass of the divide-by-2 divider Bypass of the divide-by-2 divider in the post-divider.

Table continues on the next page...

Table continued from the previous page...

Field	Function
BYPASSPOST DIV2	0b - Use the divide-by-2 divider in the post-divider. 1b - Bypass of the divide-by-2 divider in the post-divider.
15 —	Reserved
14-10 SELP	Bandwidth select P (proportional) value. See related content in Selecting bandwidth and PLL bandwidth settings .
9-4 SELI	Bandwidth select I (iteration) value. See related content in Selecting bandwidth and PLL bandwidth settings .
3-0 SELR	Bandwidth select R (resistor) value. See related content in Selecting bandwidth and PLL bandwidth settings .

23.7.1.19 SPLL Status (SPLLSTAT)

Offset

Register	Offset
SPLLSTAT	608h

Function

Contains status bits for the analog PLL.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0												FRMD ET	PDIVA CK	MDIVA CK	NDIVA CK
W																Reserv ed
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-5 —	Reserved
4 FRMDET	Free running detector (active high) In the FRM mode, the PLL monitors the input clock clkin. If the input clock disappears for more than 6 periods, the CCO of the PLL starts running free. The output frequency is within +1 % and -20 % for at least 200 μs. After 200 μs of self clocking, the frequency keeps going down. If the PLL is in free running mode, FRMDET is high. 0b - Free running is not detected 1b - Free running is detected
3 PDIVACK	Post-divider (P) ratio change acknowledge PDIVACK is response to the PREQ that the Post-divider(P) ratio change is accepted by the analog PLL. 0b - The Post-divider (P) ratio change is not accepted by the analog PLL 1b - The Post-divider (P) ratio change is accepted by the analog PLL
2 MDIVACK	Feedback (M) divider ratio change acknowledge MDIVACK responses to the MREQ that the Feedback (M) ratio change is accepted by the analog PLL. 0b - The Feedback (M) ratio change is not accepted by the analog PLL. 1b - The Feedback (M) ratio change is accepted by the analog PLL.
1 NDIVACK	Pre-divider (N) ratio change acknowledge NDIVACK is response to the NREQ that the Pre-divider (N) ratio change is accepted by the analog PLL. 0b - The Pre-divider (N) ratio change is not accepted by the analog PLL. 1b - The Pre-divider (N) ratio change is accepted by the analog PLL.
0 —	Reserved


23.7.1.20 SPLL N Divider (SPLLNDIV)**Offset**

Register	Offset
SPLLNDIV	60Ch

Function

The SPLL N Divider Register contains pre-divider ratio and change request bit for on-the-fly update.

Diagram

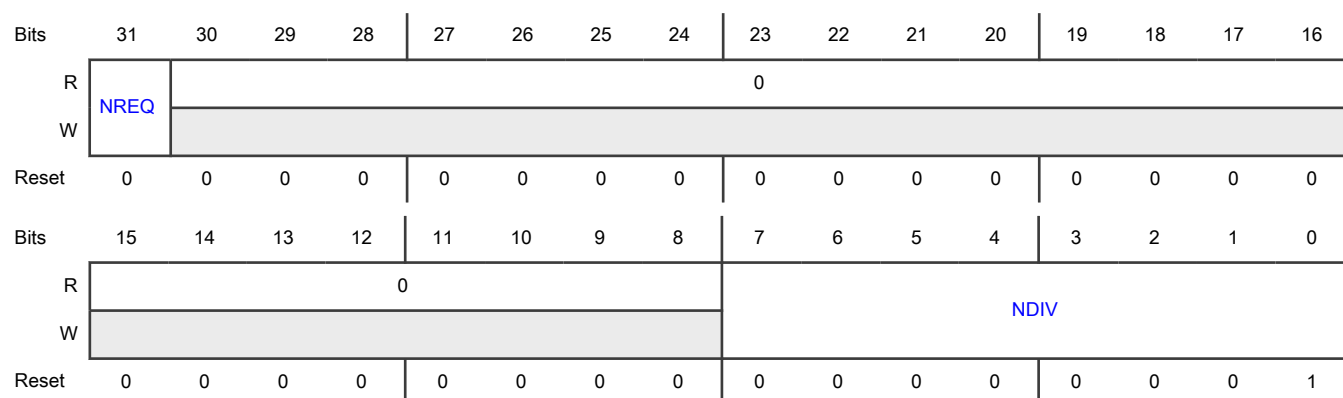

Fields

Field	Function
31 NREQ	Pre-divider ratio change request. Normally, the divider ratio of the different dividers (MDIV, NDIV, PDIV) must be programmed when PLL is in reset state (SPLLWREN = 0). But the divider ratio can also be selected on-the-fly with the help of a handshake protocol. First a new divider ratio has to be put at the divider register (XDIV), after that a request (XREQ = 1) must be given. As soon as the divider gives his acknowledge (XDIVACK = 1) the new divider ratio is loaded and the request can be made low (XREQ = 0). NOTE If more than one divider ratio must be changed, it is recommended to use the reset method. NOTE During the on-the-fly divider ratio update process, the PLL clock must be switched off from the system clock. SPLL_LOCK bit is cleared in this case. Every time F_{ref} changes, a new value LOCK_TIME needs to be programmed. Before using the PLL clock, user must wait SPLL_LOCK set again to make sure the PLL is locked. 0b - Pre-divider ratio change is not requested 1b - Pre-divider ratio change is requested
30-8 —	Reserved
7-0 NDIV	Pre-divider divider ratio (N-divider). N-divider supports a divider ratio of 1 (NDIV=0x01) to a divider ratio of 255 (NDIV=0xff). NOTE Value 0 must not be programmed to this field.

23.7.1.21 SPLL M Divider (SPLLMDIV)


Offset

Register	Offset
SPLLMDIV	610h

Function

The SPLL M Divider Register contains feedback divider ratio and change request bit for on-the-fly update.

Diagram

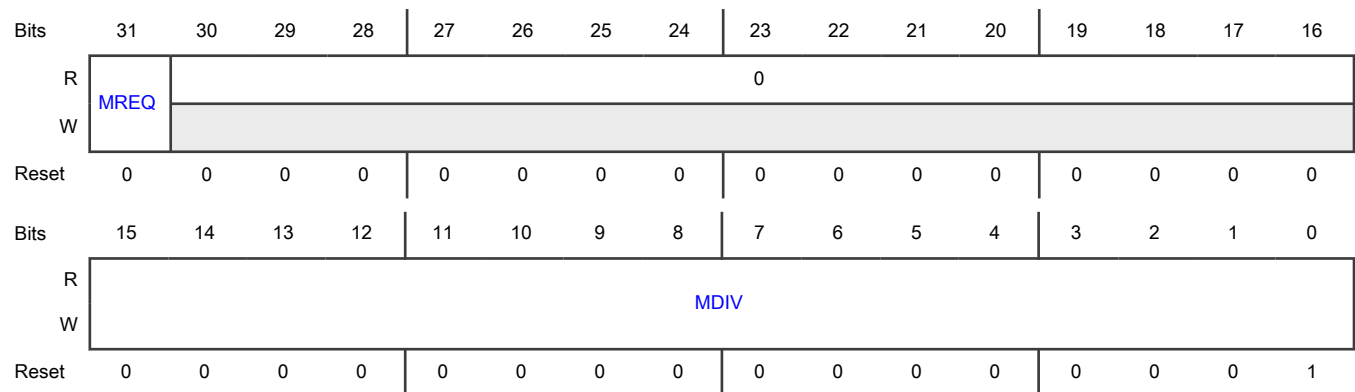

Fields

Field	Function
31 MREQ	Feedback ratio change request. Normally, the divider ratio of the different dividers (MDIV, NDIV, PDIV) must be programmed when PLL is in reset state (SPLLWREN=0). But the divider ratio can also be selected on-the-fly with the help of a handshake protocol. First a new divider ratio has to be put at the divider register (XDIV), after that a request (XREQ = 1) must be given. As soon as the divider gives his acknowledge (XDIVACK = 1) the new divider ratio is loaded and the request can be made low (XREQ = 0). NOTE If more than one divider ratio must be changed, it is recommended to use the reset method. NOTE During the on-the-fly divider ratio update process, the PLL clock must be switched off from the system clock. SPLL_LOCK bit is cleared in this case. Every time F_{ref} changes, a new value LOCK_TIME needs to be programmed. Before using the PLL clock, user must wait SPLL_LOCK set again to make sure the PLL is locked. 0b - Feedback ratio change is not requested 1b - Feedback ratio change is requested
30-16	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
—	
15-0 MDIV	Feedback divider ratio (M-divider). M-divider supports a divider ratio of 1 (MDIV=0x0001) to a divider ratio of 65535 (MDIV=0xffff). NOTE Value 0 must not be programmed to this field.

23.7.1.22 SPLL P Divider (SPLLPDIV)

Offset

Register	Offset
SPLLPDIV	614h

Function

The SPLL P Divider Register contains post divider ratio and change request bit for an on-the-fly update.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0												PDIV			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1

Fields

Field	Function
31 PREQ	Post-divider ratio change request Normally, the divider ratio of the different dividers (MDIV, NDIV, PDIV) must be programmed when PLL is in reset state (SPLLPWREN=0). But the divider ratio can also be selected on-the-fly with the help of a handshake protocol. First a new divider ratio has to be put at the divider register (XDIV), after that a request (XREQ = 1) must be given. As soon as the divider gives his acknowledge (XDIVACK = 1) the new divider ratio is loaded and the request can be made low (XREQ = 0).

Table continues on the next page...

Table continued from the previous page...

Field	Function
	NOTE If more than one divider ratio must be changed, it is recommended to use the reset method. NOTE During the on-the-fly divider ratio update process, the PLL clock must be switched off from the system clock. SPLLOCK bit is cleared in this case. Every time F_{ref} changes, a new value LOCK_TIME needs to be programmed. Before using the PLL clock, user must wait for SPLLOCK to set again to make sure the PLL is locked. 0b - Post-divider ratio change is not requested 1b - Post-divider ratio change is requested
30-5 —	Reserved
4-0 PDIV	Post-divider divider ratio (P-divider) P-divider supports a divider ratio of PDIV*2, where PDIV is from 1(PDIV=0x1) to 31(PDIV=0x1f). BYPASSPOSTDIV2 can be set to bypass the divide by 2 in the post-divider. NOTE Value 0 must not be programmed to this field.

23.7.1.23 SPLLOCK Configuration (SPLLOCK_CNFG)

Offset

Register	Offset
SPLLOCK_CNFG	618h


Function

The SPLLOCK Configuration Register contains the number of reference clocks to count before SPLLOCK is considered locked and valid.

NOTE

This register writes are protected by TRIM LOCK register.

Diagram

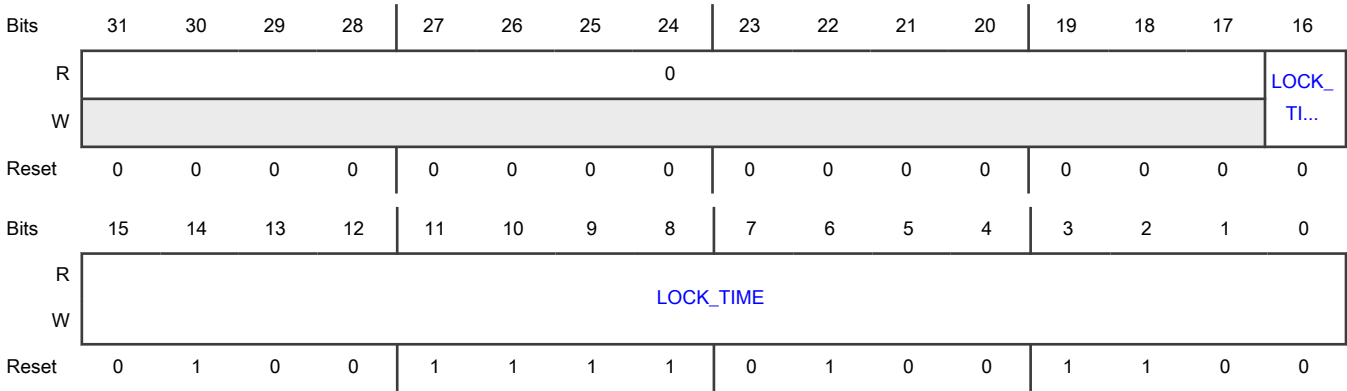

Fields

Field	Function
31-17 —	Reserved
16-0 LOCK_TIME	Configures the number of reference clocks to count before SPLL is considered locked. NOTE The lock time programmed in this register must be equal to meet the PLL 500µs lock time plus the 300 refclk count startup, LOCK_TIME = 500µs/T_{ref} + 300, F_{ref} = F_{in} /N (input frequency divided by pre-divider ratio). NOTE Every time F_{ref} changes, a new value LOCK_TIME needs to be programmed.

23.7.1.24 SPLL SSCG Status (SPLLSSCGSTAT)


Offset

Register	Offset
SPLLSSCGSTAT	620h

Function

The SPLL SSCG Status Register contains status bit for the SSCG block.

Diagram

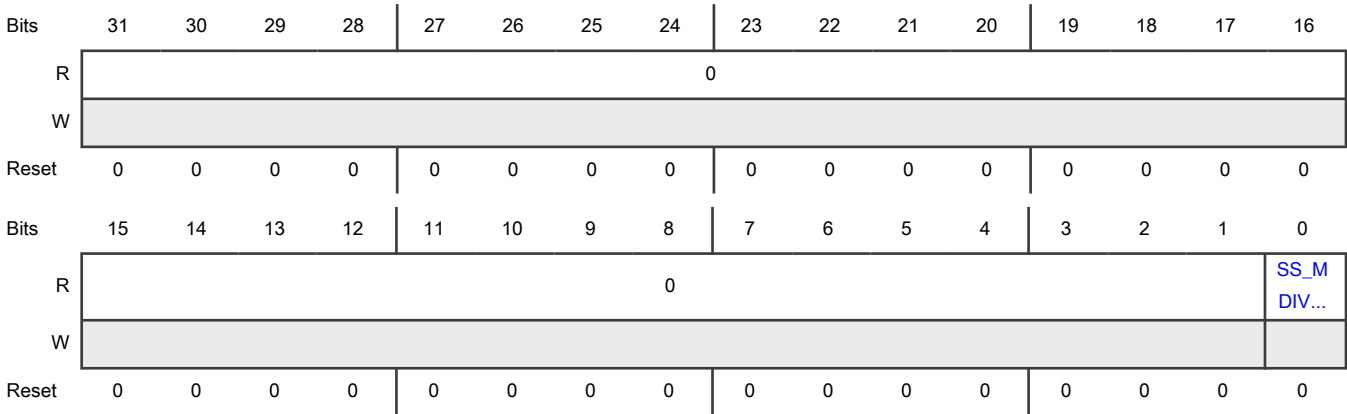

Fields

Field	Function
31-1 —	Reserved
0 SS_MDIV_ACK	SS_MDIV change acknowledge SS_MDIV_ACK responses to the SS_MDIV_REQ that the SS_MDIV, MF, MR, MC change is accepted by the analog PLL. 0b - The SS_MDIV, MF, MR, MC ratio change is not accepted by the analog PLL 1b - The SS_MDIV, MF, MR, MC ratio change is accepted by the analog PLL

23.7.1.25 SPLL Spread Spectrum Control 0 (SPLLSSCG0)


Offset

Register	Offset
SPLLSSCG0	624h

Function

The SPLL Spread Spectrum Control 0 Register contains SS_MDIV[31:0].

Diagram

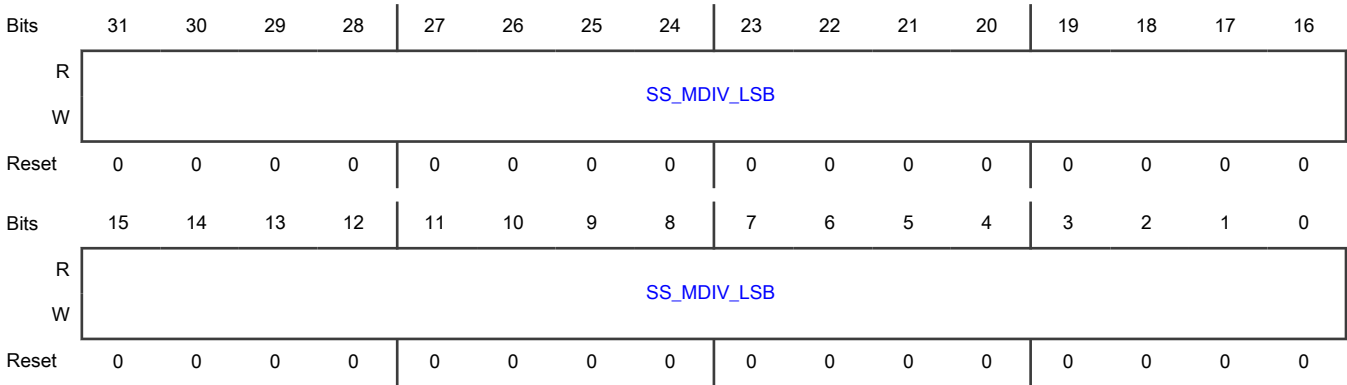

Fields

Field	Function
31-0 SS_MDIV_LSB	SS_MDIV[31:0] Represents the average feedback divider ratio $M_{average}$. SS_MDIV[32:25] is the integer part of the feedback divider ratio. SS_MDIV[24:0] is the fractional part of the feedback divider ratio. NOTE SS_MDIV[32:0] must not be programmed to value 0 for spread spectrum and fractional function. Average feedback-divider ratio $M_{average}$: $M_{average} = SS\_MDIV[32:25] + 2^{-25} * SS\_MDIV[24:0] + dither * 2^{-26}$ $M_{average} = 2^{-25} * SS\_MDIV[32:0] + dither * 2^{-26}$ $stepsize = 1 / (2^{25} * M_{average})$

23.7.1.26 SPLL Spread Spectrum Control 1 (SPLLSSCG1)

Offset

Register	Offset
SPLLSSCG1	628h

Function

The SPLL Spread Spectrum Control 1 Register contains SS_MDIV[32] and other control bits for SSCG.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0															
W																
Reset	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0				SEL_S	DITHE	MC		MR				MF		SS_M	SS_M
W					S_...	R									DIV...	DIV...
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31 SS_PD	SSCG Power Down Puts SSCG into power down. NOTE The configuration of DITHER/MC/MF/MR/SS_MDIV[32:0] must be written before SS_PD is cleared. 0b - SSCG is powered on 1b - SSCG is powered off
30-12 —	Reserved
11 SEL_SS_MDIV	SS_MDIV select. Selects the SS_MDIV value. 0b - Feedback divider ratio is MDIV[15:0] 1b - Feedback divider ratio is SS_MDIV[32:0]
10 DITHER	Dither Enable Enables dithering between two modulation frequencies in a random way, to decrease the probability of the modulated waveform occurring with the same phase on a particular point on the screen. 0b - Dither is not enabled 1b - Dither is enabled
9-8 MC	Modulation Waveform Control Compensation for the low pass filtering of the PLL to get a triangular modulation at the output of the PLL, giving a flat frequency spectrum. MC[1:0] = 00 - no compensation

Table continues on the next page...

Table continued from the previous page...

Field	Function
	MC[1:0] = 11 - maximum compensation NOTE The recommended setting for the modulation waveform control is MC[1:0] = 10
7-5 MR	Modulation Depth Control Controls the programmable frequency modulation depth. $f_{\text{mod pk-pk}} = F_{\text{ref}} * k_{\text{SS}} / F_{\text{SSO}} = k_{\text{SS}} / (2 * \text{md}[32:25]_{\text{dec}})$ • MR[2:0] = 000 - $k_{\text{SS}} = 0$ (no spread spectrum) • MR[2:0] = 001 - $k_{\text{SS}} \approx 1$ • MR[2:0] = 010 - $k_{\text{SS}} \approx 1.5$ • MR[2:0] = 011 - $k_{\text{SS}} \approx 2$ • MR[2:0] = 100 - $k_{\text{SS}} \approx 3$ • MR[2:0] = 101 - $k_{\text{SS}} \approx 4$ • MR[2:0] = 110 - $k_{\text{SS}} \approx 6$ • MR[2:0] = 111 - $k_{\text{SS}} \approx 8$
4-2 MF	Modulation Frequency Control Controls the programmable modulation frequency. $f_m = F_{\text{ref}} / N_{\text{SS}}$ • MF[2:0] = 000 - $N_{\text{SS}} = 512$ ($f_m \approx 3.9 - 7.8$ KHz) • MF[2:0] = 001 - $N_{\text{SS}} \approx 384$ ($f_m \approx 5.2 - 10.4$ KHz) • MF[2:0] = 010 - $N_{\text{SS}} = 256$ ($f_m \approx 7.8 - 15.6$ KHz) • MF[2:0] = 011 - $N_{\text{SS}} = 128$ ($f_m \approx 15.6 - 31.3$ KHz) • MF[2:0] = 100 - $N_{\text{SS}} = 64$ ($f_m \approx 32.3 - 65.5$ KHz) • MF[2:0] = 101 - $N_{\text{SS}} = 32$ ($f_m \approx 62.5 - 125$ KHz) • MF[2:0] = 110 - $N_{\text{SS}} \approx 24$ ($f_m \approx 83.3 - 166.6$ KHz) • MF[2:0] = 111 - $N_{\text{SS}} = 16$ ($f_m \approx 125 - 250$ KHz)
1 SS_MDIV_REQ	SS_MDIV[32:0] change request. Change request for SS_MDIV, MF, MR, MC. Normally, SS_MDIV, MF, MR, MC must be programmed when PLL is in reset state (SPLLWREN = 0). But the values can also be selected on-the-fly with the help of a handshake protocol. First a new value (SS_MDIV, MF, MR, MC) has to be put at the register, after that a request (SS_MDIV_REQ = 1) must be given. As soon as the acknowledge (SS_MDIV_ACK = 1) the new value is loaded and the request can be made low (SS_MDIV_REQ = 0). NOTE If more than one value must be changed, the preferred way to do this is by using the reset method.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	NOTE During the on-the-fly divider ratio update process, the PLL clock must be switched off from the system clock. SPLLOCK bit is cleared in this case. Before using the PLL clock, user must wait for SPLLOCK to set again to make sure the PLL is locked. 0b - SS_MDIV change is not requested 1b - SS_MDIV change is requested
0 SS_MDIV_MSB	SS_MDIV[32] See SS_MDIV_LSB.

23.7.1.27 LDO Control and Status (LDOCSR)

Offset

Register	Offset
LDOCSR	800h

Function

The LDO Control and Status Register contains control bits and status bit for the LDO.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	VOUT_OK	0														
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0												LDOB_YPA...	VOUT_SEL		LDOEN
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	1	0	0	0

Fields

Field	Function
31 VOUT_OK	LDO VOUT OK Inform. This flag shows the status of LDO output VOUT.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - LDO output VOUT is not OK 1b - LDO output VOUT is OK
30-5 —	Reserved
4 LDOBYPASS	LDO Bypass LDO is bypassed. NOTE Writes to this register are protected by TRIM LOCK register. 0b - LDO is not bypassed 1b - LDO is bypassed
3-1 VOUT_SEL	LDO output voltage select Sets the LDO output voltage level. NOTE This register writes are protected by TRIM LOCK register. 000b - VOUT = 1V 001b - VOUT = 1V 010b - VOUT = 1V 011b - VOUT = 1.05V 100b - VOUT = 1.1V 101b - VOUT = 1.15V 110b - VOUT = 1.2V 111b - VOUT = 1.25V
0 LDOEN	LDO Enable LDO is Enabled. NOTE Disable LDO before entering the Power Down mode. 0b - LDO is disabled 1b - LDO is enabled

Chapter 24

Power Management

24.1 Introduction

This chapter describes the power modes supported with this device. It also describes the power domains and the voltage supply options connected to these power domains. For details about changing power modes and configuring those modes, see the [CMC](#) chapter.

24.2 Power domains

A power domain is a collection of circuits that can be powered off even when a voltage source is still supplied. This section shows the power domains within the device and the placement of the modules within these domains.

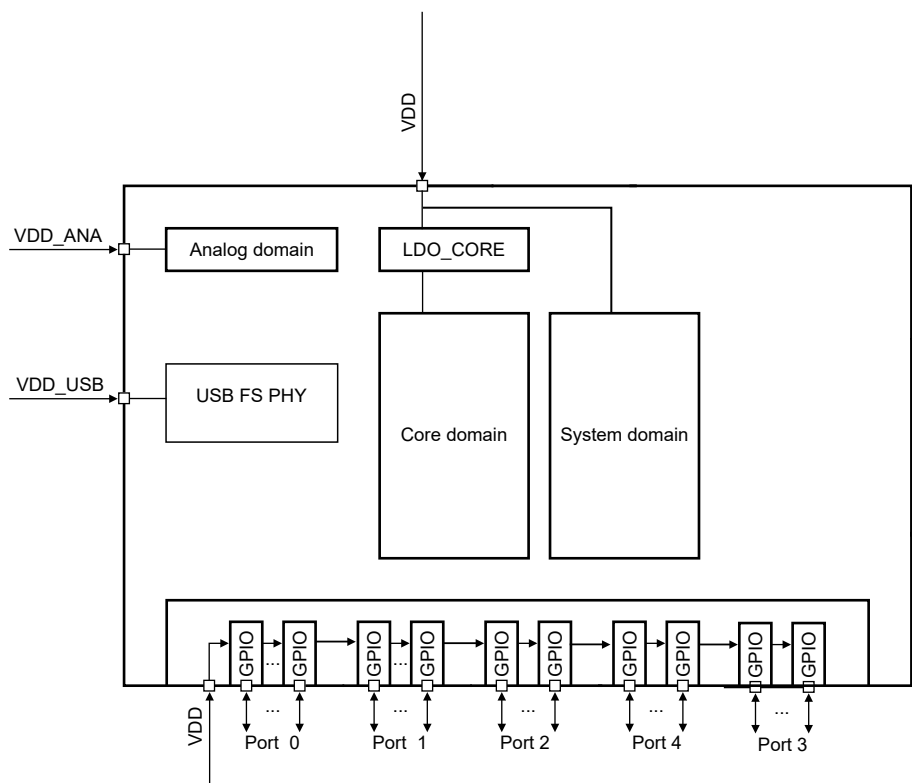


Figure 71. Power domains and voltage supplies

Domain	Voltage supply	Module
CORE	LDO_CORE	CM33
		NVIC
		Systick Timer
		Mutilayer AHB Matrix
		PBridge0/1

Table continues on the next page...

Table continued from the previous page...

	DWT
	ITM
	TPIU
	DAP
	Debug Mailbox
	SWJ
	AOI0/1
	CMC
	CDOG0/1
	CRC0
	DMA0
	SYSCON
	MBC
	FMC0
	FMU0
	Flash
	LPCAC
	ROM-BOOT
	FRO12M (Analog Circuitry)
	FRO180M (Analog Circuitry)
	SCG
	SOSC (Analog Circuitry)
	FlexCAN0/1
	LPI2C0-3
	LPSPi0/1
	LPUART0-5
	ADC0~3 (Digital Circuitry)
	CTIMER0-4
	Frequency Measurement Unit
	OSTIMER0
	PWM0/1
	QDC0/1
	UTICK0

Table continues on the next page...

Table continued from the previous page...

		WWDT0
		ADC0-GP (Digital Circuitry)
		CMP1/2 (Digital Circuitry)
		DAC0 (Digital Circuitry)
		OPAMP0/1/2/3 (Digital Circuitry)
		GPIO0-4
		PORT0-4
SRAM	LDO_CORE / RAM_RET_LDO	Code TCM
		System TCM
SYSTEM	VDD	SPC0
		HVD/LVD/POR (Analog Circuitry)
		LDO_CORE (Analog Circuitry)
		RAM_RET_LDO (Analog Circuitry)
		VBAT
		FRO16K (Analog Circuitry)
		WUU
		LPTMR0
		Wake Timer
		CMP0/1/2 (Analog Circuitry)
		CMP0 (Digital Circuitry)
		PORT0/1/2/3/4 (Pins)
ANALOG	VDD_ANA	ADC0/1/2/3 (Analog Circuitry)
		DAC0 (Analog Circuitry)
		OPAMP0/1/2/3 (Analog Circuitry)

24.3 Power modes

The device supports Active, Sleep, Deep Sleep, and Deep Power Down. Any reset brings the chip back to the Active mode.

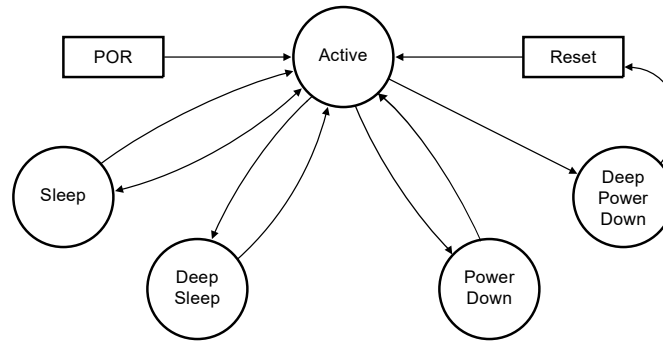


Figure 72. Power modes

24.3.1 Active mode

In Active mode, CPU execution is possible.

To achieve the performance requirements of a given system application while minimizing power consumption, Active mode permits the following power-saving options when possible:

- Configure the VDD_CORE subdomains voltage level to balance power and performance.
- Gate the clocks to unused modules.

24.3.2 Sleep mode

In the Sleep mode, the CPU0 clock is off, and the system clock and bus clock remain ON. Most modules can remain operational. To achieve the performance requirements of a given system application while minimizing power consumption, the Sleep mode permits the following power-saving options when possible:

- Configure the VDD_CORE sub-domains voltage level to balance power and performance.
- Individually configure SRAM arrays as Active/Deep Sleep by software.
- Gate the clocks to unused modules.

24.3.3 Deep Sleep mode

In Deep Sleep mode, CPU execution is halted. The core clock is gated off.

The Deep Sleep mode supports the following behaviors based on different clock configurations:

- CPU clock, system clock and bus clock are all OFF.
- Some modules can remain operational with low power asynchronous clock sources and serve as wake-up sources.
- System RAM is configured to state retention mode.
- SRAM is in deep sleep mode.

Wake from Deep Sleep mode is triggered by an interrupt or a wakeup event.

The Deep Sleep mode also supports a partial wake-up where a bus master other than the CPU (eg. DMA) is recovered by a wakeup event. The device automatically re-enters the Deep Sleep mode after this module finishes its task.

To achieve the performance requirements of a given system application while minimizing power consumption, the Deep Sleep mode permits the following power-saving options when possible:

- Configure the VDD_CORE subdomains voltage level to balance power and performance.
- Gate the clocks to unused modules.

24.3.4 Power Down mode

The Power Down mode places most of the device into a static state. It is the lowest power mode that can retain all registers.

The device wakes from Power Down mode through the interrupt routine or wake-up event.

The core clock, system clock and the bus clock are gated off.

In Power Down mode, the VDD_CORE_MAIN and VDD_CORE_WAKE subdomains are put into state retention mode.

External signals via GPIO or VDD_SYS domain peripherals can wake the device.

The VDD_CORE subdomains voltage level can be independently selected from either the VDD_CORE voltage or the reduced voltage scaling (IVS) voltage to balance different module clock frequencies and the power leakage.

Flash is powered off. SRAM arrays can also be individually configured as deep sleep or shutdown by software.

24.4 Deep Power Down mode

The device wakes from Deep Power Down mode through the Reset routine.

In Deep Power Down mode, the whole CORE domain (including all subdomains) is power gated.

In Deep Power Down mode, the on-chip regulator for VDD_CORE is powered off. The peripherals in SYSTEM domain can be still alive.

External reset or the SYSTEM domain peripherals can wake the device.

SRAMA can be retained optionally in Deep Power Down mode.

24.5 Module operation in low power modes

The following table shows the functionality of each module in low power modes.

Module	Sleep	Deep Sleep mode	Power Down mode	Deep Power Down
Core Modules				
Bus fabric	On ¹	Static ²	Static	Off ³
CM33	Static	Static	Static	Off
EVTG0	On	On	Static	Off
System Modules				
AOI0/1	On	On	Static	Off
CRC	On	Static	Static	Off
CMC	On	On	Static	Off
eDMA3	On	LP ⁴ /Static	Static	Off
EIM	On	Static	Static	Off
ERM	On	Static	Static	Off
MAU	On	Static	Static	Off
MBC	On	Static	Static	Off
Peripheral Input Mux	On	On/Static	Static	Off
RMC	On	On	On	On

Table continues on the next page...

Table continued from the previous page...

Module	Sleep	Deep Sleep mode	Power Down mode	Deep Power Down
SCG-Lite	On	On/Static	Static	Off
SPC	On	On	On	On
SYSCON	On	On/Static	Static	Off
WUU	On	On	On	On
VBAT Wrapper	On	On	On	On
Clock Source				
40M OSC	On/Off	On/Off	Off	Off
FRO180/144M	On/Off	On/Off	Off	Off
FRO12M/24M	On	On/Off	Off	Off
FRO16K	On/Off	On/Off	On/Off	On/Off
PMC Sub Module				
BG	On	On/Off	Off	Off
LDO_CORE	On	LP/Off	LP	Off
PoR	On	On	On	On
RAM_Retention_LDO	On/Off	On/Off	On/Off	On/Off
VDD_LVD/HVD	On/Off	On/Off	Off	Off
VDD_LV_LVD	On/Off	On/Off	Off	Off
VDD_USB LVD	On/Off	On/Off	Off	Off
Memory				
LPCAC	Static	Static	Static	Off
Flash Array	On	Static	Off (flash array VDD is power down)	Off
FMC	On	Static	Static	Off
FMU	On	Static	Static	Off
SRAM	On	Retention	Retention/OFF	Retention/OFF
ROM	On	Static	Static	Off
Timers				
CDOG0/1	Static	Static	Static	Off
CTimer0~5	On	Static/LP	Static	Off
FlexPWM0/1	Static	Static	Static	Off
FME	On	Static	Static	Off
LPTMR	On	Static/LP	Static/LP	Static/LP

Table continues on the next page...

Table continued from the previous page...

Module	Sleep	Deep Sleep mode	Power Down mode	Deep Power Down
OS Event Timer	On	Static/LP	Static	Off
QDC0/1	On	Static	Static	Off
uTICK	On	Static/LP	Static	Off
Wake Timer	On	Static/LP	Static	Static/LP
RTC	On	Static/LP	Static/LP	Static/LP
WWDT	On	Static/LP	Static	Off
Communication				
FlexCAN0/1	On	Static	Static	Off
SGL	On	Static	Static	Off
PKC	On	Static	Static	Off
UDF	On	Static	Static	Off
TRNG	On	Static	Static	Off
LPI2C0~3	On	Static/LP	Static	Off
LPSPi0~1	On	Static/LP	Static	Off
LPUART0~5	On	Static/LP	Static	Off
Smart DMA	On	Static	Static	Off
Analog				
16bit HS ADC0/1/2/3 Digital	On	Static/LP	Static	Off
16bit HS ADC0/1/2/3 Analog	On/Off	On/Off	Static	Off
12bit DAC0 Digital	On	Static/LP	Static	Off
12bit DAC0 Analog	On/Off	On/Off	Off	Off
OpAMP 0/1/2/3 Digital	On	Static	Static	Off
OpAMP 0/1/2/3 Analog	On/Off	On/Off	Off	Off
CMP0 Digital	On	Static/LP	Static/LP	Static/LP
CMP0 Analog	On/Off	On/Off	On/Off	On/Off
CMP1/2 Digital	On	Static/LP	Static	Off
CMP1/2 Analog	On	On/Off ⁵	On/Off ⁵	On/Off ⁵
HMI				
GPIO0~4	On	Static/LP	Static	Off
PORT0~4	On	Static	Static	Static
Debug and Test				

Table continues on the next page...

Table continued from the previous page...

Module	Sleep	Deep Sleep mode	Power Down mode	Deep Power Down
ATX	On	Static	Static	Off
JTAG and SWD	On	Static	Static	Off
SWO	On	Static	Static	Off
TCU	On	Static	Static	Off
Glikey	On	Static	Static	Off

1. On means module is functional and accessible via memory map. For analog module, means it is enabled.
2. Static means the module is not active
3. Off means the module can be powered off.
4. LP module in low power state (clock gated, asynchronous operation, etc). For digital module, it can be active with async functional clock.
5. Nano-Power mode

NOTE

User cannot disable the regulator which powers the chip in Power Down mode and higher power mode.

24.6 Power optimization

24.6.1 VDD_CORE voltage scaling

This device supports VDD_CORE voltage scaling for different performance and power consumption.

This device supports the following VDD_CORE voltage scaling methods:

In Active and Sleep mode, VDD_CORE can be configured to either 1.0V or 1.2 V in SPC. When VDD_CORE is 1.0 V, it is Mid Drive (MD) mode. When VDD_CORE is 1.2 V, it is Over Drive (OD) Mode. Lower VDD_CORE in PD mode, can further reduce VDD_CORE level below 1.0 V in SPC. The leakage can be reduced. VDD_CORE domain can be retained, but all logics in VDD_CORE are static. CMC Power Mode Control Register must be configured to 4'b0011.

24.6.2 SRAM Configuration

The SRAM is partitioned, allowing the mode of each SRAM partition to be independently configured:

SRAM power mode	Description
Active	SRAM can be accessed normally.
Deep Sleep	SRAM cannot be accessed, but the data is retained.
Shutdown	SRAM cannot be accessed, and the data is not retained.

Depending on the requirements of the system application, software can optionally configure an individual SRAM partition to be in a lower, power-saving mode relative to the overall device power mode:

When the overall device power mode is...	An SRAM partition may be configured into this mode...
Active/Sleep	Active or Deep Sleep
Deep Sleep	Deep Sleep

NOTE

SPC implements RAM_RET_LDO which can retain SRAM in Deep Power Down (DPD) mode. There are registers in SPC to control which SRAM can be retained in DPD mode.

24.6.3 Flash low power options

The internal flash memory can enter low power mode:

- in Active mode under software control (FLASHCR[FLASHDIS])
- optionally in Sleep mode (FLASHCR[FLASHDOZE])
- in Deep Sleep mode

NOTE

To avoid unexpected access latencies, take care when configuring the flash module to a low power mode when the overall device is in Active mode. The flash module needs time to recover full-speed functionality after entering a low power mode.

24.6.4 Peripheral clock gating

To conserve power, the clocks to modules can be turned off or divided by configuring the SYSCON module registers.

24.6.5 Voltage monitor optimization

Depending on the requirements of the system application, software can disable individual voltage monitors (LVD and/or HVD) within the different power domains to save power.

24.6.6 Wake-up time consideration

This device supports different low power modes for power consumption level and wake-up time balance.

The wake-up time from Sleep/Deep Sleep mode is the accumulation of following time:

- VDD_CORE power source recovery time
- The longer of the following:
 - Clock recovery time
 - Flash recovery time
- Interrupt Latency

The wake-up time from Power Down mode is the accumulation of following time:

- VDD_CORE power source recovery time
- The longer of the following:
 - Clock recovery time
 - Flash recovery time
- Interrupt Latency

The wake-up time from Deep Power Down mode is:

- The boot-up time required after device released by POR. This includes everything included in a cold power-up, including the Boot ROM latency.

The clock recovery time can be affected by following factors:

- The system clock source status in low power modes. There will be no recovery time needed if the clock remains ON in low power mode.

- The system clock source before entering low power mode.

The flash recovery time depends on the flash status in low power mode.

The VDD_CORE power source recovery time can be affected by following factors:

- The regulator type used. On-chip linear regulator starts up faster than on-chip DCDC.
- The regulator status in low power modes. There will be no recovery time needed if the regulator remains in full-power regulation in low power mode.
- Whether VDD_CORE voltage scaling is enabled before and after entering low power modes
- The VDD_CORE domain voltage scaling method used. Voltage scaling by internal IVS recovers faster.
- The external capacitor on VDD_CORE pin will affect recovery time if scaling is achieved by adjusting VDD_CORE voltage directly.

Chapter 25

VBAT

25.1 Chip-specific VBAT information

Table 177. Reference links to related information

Topic	Related module	Reference
Full description	VBAT	VBAT
System memory map		Memory map
Clocking		Clock distribution
Power Management		Power Management
Signal multiplexing	Port control	Signal multiplexing

25.1.1 Module instances

This device contains one instance of the VBAT module, VBAT0.

25.1.2 Unsupported features

This device only supports FRO16 feature of VBAT. All other features are not supported and references to RAM LDO, bandgap timer, and switch, should be ignored.

25.1.3 Connection for OSCCLKE[CLKEn] and FROCLKE[CLKn]


Table 178. Connection for OSCCLKE[CLKEn] and FROCLKE[CLKn]

VBAT clock enable	Connect to this power
CLKE1	CORE_MAIN
CLKE0	VDD_BAT

25.2 Overview

VBAT implements the 16 kHz internal clock source via FRO16K.

25.2.1 Block diagram

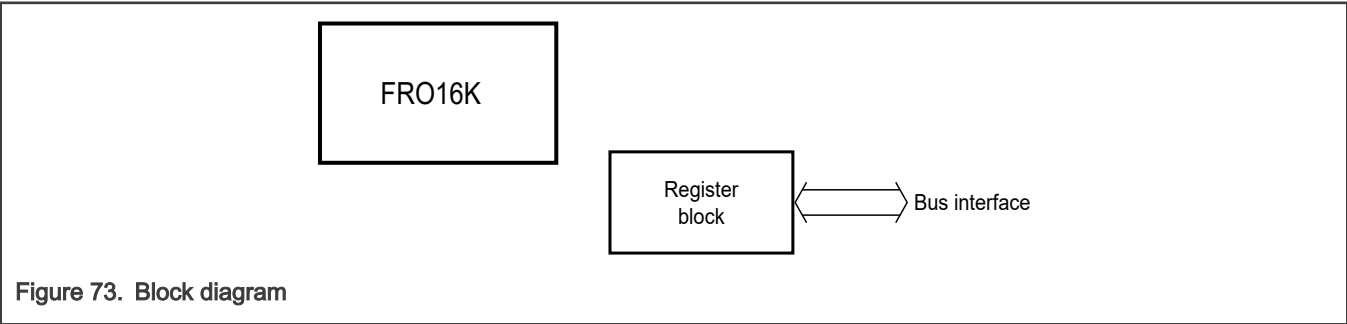

25.2.2 Features

- Supports internal 16 kHz free-running oscillator (FRO16K)

25.3 Functional description

The following sections describe the functional details of VBAT.

25.3.1 Operations

This section describes the operations of VBAT.

25.3.1.1 FRO 16.384 kHz clock

FRO16K is enabled by default on POR. You can disable it or lock it to prevent any change to the enable field.

25.3.2 Low-power modes

VBAT remains functional in all low-power modes.

25.3.3 Debug mode

Debug modes do not affect VBAT.

25.3.4 Clocks

VBAT implements the following clock domains:

- Bus interface clock - access the registers
- FRO16K internal clock

25.3.5 Reset

Only the POR resets VBAT.

25.4 Initialization

To enable and lock the FRO16K:

1. Write 1h to [FROCTLA\[FRO_EN\]](#).
2. Write 1h to [FROLCKA\[LOCK\]](#).
3. Alter [FROCLKE\[CLKE\]](#) to clock gate different FRO16K outputs to different peripherals to reduce power consumption.

25.5 Memory map and register definition

This section includes VBAT memory map and detailed descriptions of all registers.

NOTE

The VBAT registers are reset on VBAT Cold Reset only (VBAT POR).

25.5.1 VBAT register descriptions

25.5.1.1 VBAT memory map

VBAT0 base address: 4009_3000h

Offset	Register	Width (In bits)	Access	Reset value
0h	Version ID (VERID)	32	R	0101_0001h
200h	FRO16K Control A (FROCTLA)	32	RW	0000_0001h
218h	FRO16K Lock A (FROLCKA)	32	RW	0000_0000h
220h	FRO16K Clock Enable (FROCLKE)	32	RW	0000_0000h
700h	Wakeup 0 Register A (WAKEUP0A)	32	RW	0000_0000h
708h	Wakeup 0 Register A (WAKEUP1A)	32	RW	0000_0000h
7F8h	Wakeup Lock A (WAKLCKA)	32	RW	0000_0000h

25.5.1.2 Version ID (VERID)


Offset

Register	Offset
VERID	0h

Function

Records the specific version of VBAT in the chip.

Diagram

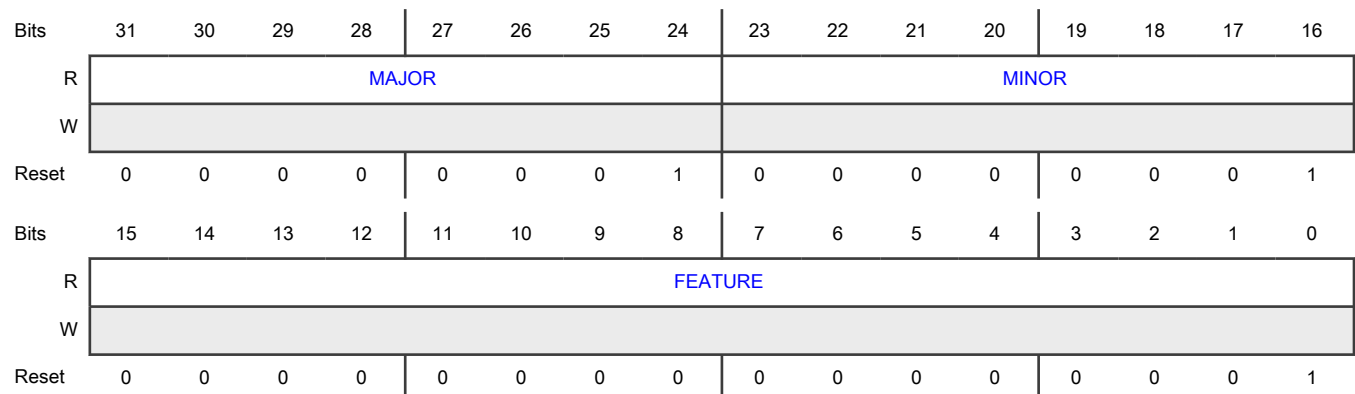

Fields

Field	Function
31-24 MAJOR	Major Version Number Returns the major version number for the specification.
23-16	Minor Version Number

Table continues on the next page...

Table continued from the previous page...

Field	Function
MINOR	Returns the minor version number for the specification.
15-0 FEATURE	Feature Specification Number Returns the feature set number, indicating the feature set present in this instance of VBAT.

25.5.1.3 FRO16K Control A (FROCTLA)

Offset

Register	Offset
FROCTLA	200h

Function

Controls FRO16K. Writes to this register are blocked when [FROLCKA\[LOCK\]](#) is 1.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0															FRO_EN
W																FRO_EN
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1

Fields

Field	Function
31-1 —	Reserved
0 FRO_EN	FRO16K Enable 0b - Disable 1b - Enable

25.5.1.4 FRO16K Lock A (FROLCKA)

Offset

Register	Offset
FROLCKA	218h

Function

Contains the lock field. Writes to this register are blocked when [FROLCKA\[LOCK\]](#) is 1.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0															LOCK
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-1 —	Reserved
0 LOCK	Lock Blocks any write to the FRO16K registers when you write 1 to this field. VBAT POR writes 0 to this field. 0b - Do not block 1b - Block

25.5.1.5 FRO16K Clock Enable (FROCLK_E)

Offset


Register	Offset
FROCLK_E	220h

Function

Contains clock gating register field to gate the FRO16K clock to other modules.

NOTE
FROCLKE cannot be locked (not affected by [FRO16K Lock A \(FROLCKA\)](#)).

Diagram

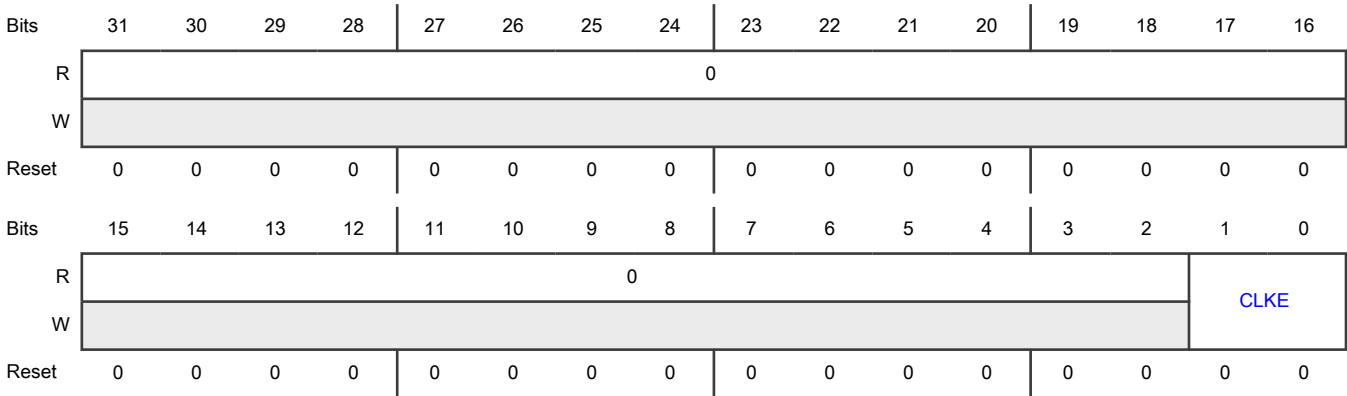

Fields

Field	Function
31-2 —	Reserved
1-0 CLKE	Clock Enable Enables the corresponding FRO16 kHz output clock to other modules when you write 1 to the corresponding bit in this field. See the chip-specific VBAT information section for more information.

25.5.1.6 Wakeup 0 Register A (WAKEUP0A - WAKEUP1A)


Offset

Register	Offset
WAKEUP0A	700h
WAKEUP1A	708h

Function

Contains software writable bits. Writes to this register are blocked when WAKEUP lock register is set.

Diagram

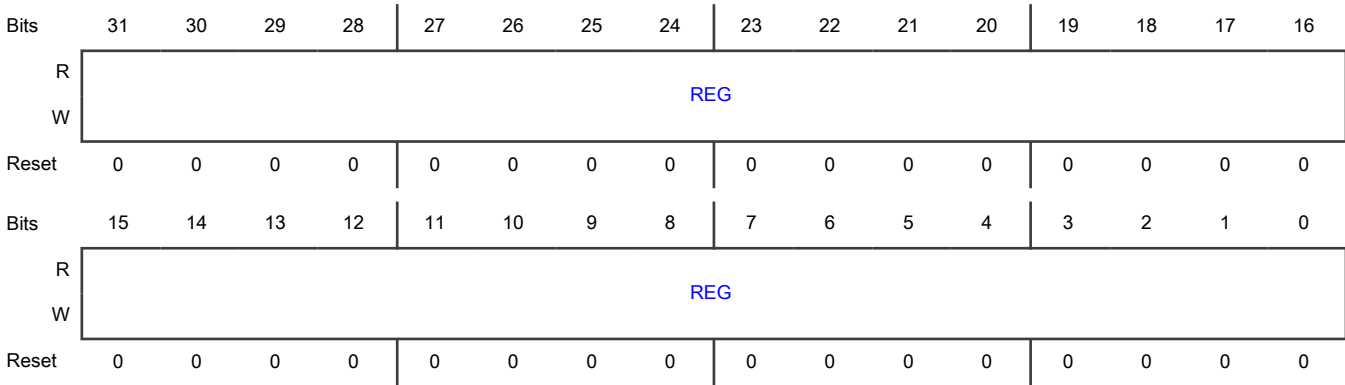

Fields

Field	Function
31-0	Register
REG	Software writable value.

25.5.1.7 Wakeup Lock A (WAKLCKA)


Offset

Register	Offset
WAKLCKA	7F8h

Function

Contains the lock bits. Writes to this register are blocked when Wakeup lock registers are set.

Diagram

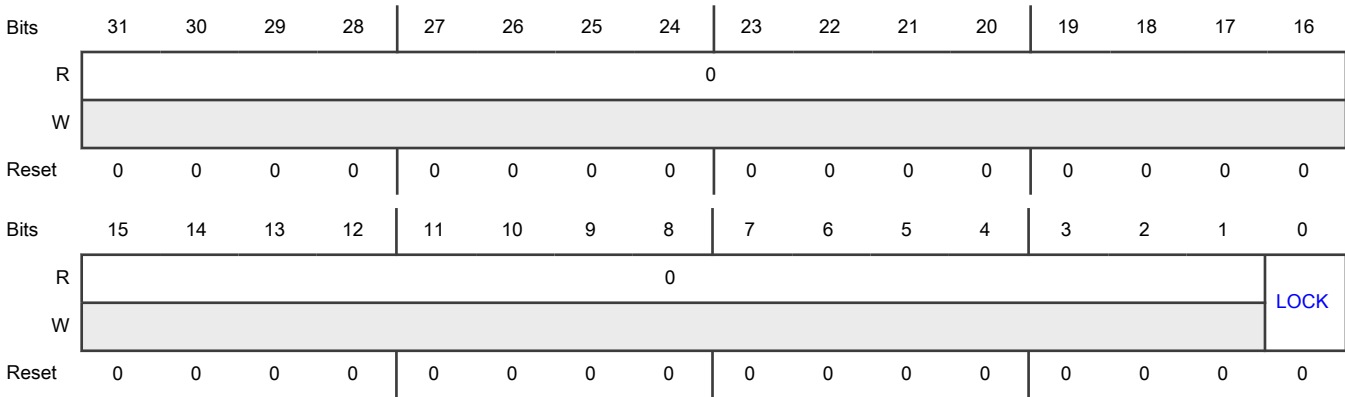

Fields

Field	Function
31-1 —	Reserved
0 LOCK	Lock When set, blocks writes to the Wakeup registers. 0b - Lock is disabled 1b - Lock is enabled

Chapter 26

System Power Control (SPC)

26.1 Chip-specific SPC information

Table 179. Reference links to related information

Topic	Related module	Reference
Full description	SPC	SPC
System memory map		Memory map
Clocking		Clock distribution
Power Management		Power Management
Signal multiplexing	Port control	Signal multiplexing

26.1.1 Module instances

This device has one instance of the SPC module, SPC0.

26.1.2 Voltage regulators

This section describes the various on-chip regulators.

Table 180. On-chip regulators

Regulator name	Description
LDO_CORE	The LDO_CORE can be used to power VDD_CORE domain.
RAM_RET_LDO	Supports four SRAM retention switches. Each switch supports up to 16KB SRAM. - Switch0 (SRAM_RET_EN[0]): RAM X0/X1 , RAMB0/B1 - Switch1 (SRAM_RET_EN[1]): RAM A0 - Switch2 (SRAM_RET_EN[2]): RAM A1~A4, FlexCAN, DMA - Switch3 (SRAM_RET_EN[3]): RAMC0~RAMC3)

NOTE

10b - configuration of CORELDO_VDD_LVL are reserved in this chip

26.1.3 SOC_CNTRL fields

ACTIVE_CFG1[SOC_CNTRL] field controls which analog modules are enabled and disabled in Active or Sleep modes.

LP_CFG1[SOC_CNTRL] field controls which analog modules are enabled and disabled in other low-power modes (like Deep Sleep, PowerDown, or Deep PowerDown). The following table lists the analog modules that these fields control.

Bit	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16

Table continues on the next page...

Table continued from the previous page...

R/W											CMP2_DAC_EN	CMP1_DAC_EN	CMP0_DAC_EN		CMP2_EN	CMP1_EN	CMP0_EN
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R/W					OPAMP3_EN	OPAMP2_EN	OPAMP1_EN	OPAMP0_EN				DAC0_EN			USB3v_DET_EN	
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	0

26.1.4 Low power current reference enable bit LP_CFG[LP_IREFEN]

The low power current reference is used by analog modules CMP0~2, and FRO12M. The bit LP_IREFEN should be set if these analog modules are used in the Deep Power Down mode. For CMP0-2, this bit should be set if using nano mode in the Deep Power Down mode.

26.1.5 Power modes

This device doesn't support Power Down (PD) mode. All references to PD mode should be ignored throughout the chapter. See the Power management chapter of the device, for details.

26.1.6 Low Power Wake-Up Delay

Table 181. LPWKUP Delay

Regulator	LP_CFG Voltage	ACTIVE_CFG Voltage	Minimum Delay	Minimum LPWKUP_DELAY
LDO_CORE	0.60V	1.0V	10µs	0x5B
LDO_CORE	0.6V	1.1V	12µs	0x6E
LDO_CORE	1.0V	1.0V	0µs	0
LDO_CORE	1.0V	1.1V	10µs	0x5B
LDO_CORE	1.15V	1.20V	10µs	0x5B

26.2 Overview

SPC contains and controls the following components:

- One low-drop-out (LDO) voltage regulator (1.0 V LDO_CORE)
- Circuits that monitor and assure correct voltage levels:

- Power-on reset (POR)
- Low-voltage detect (LVD)
- High-voltage detect (HVD)

SPC turns these components on and off, and switches them to different power mode levels based on power-mode change requests from each chip power domain.

26.2.1 Block diagram

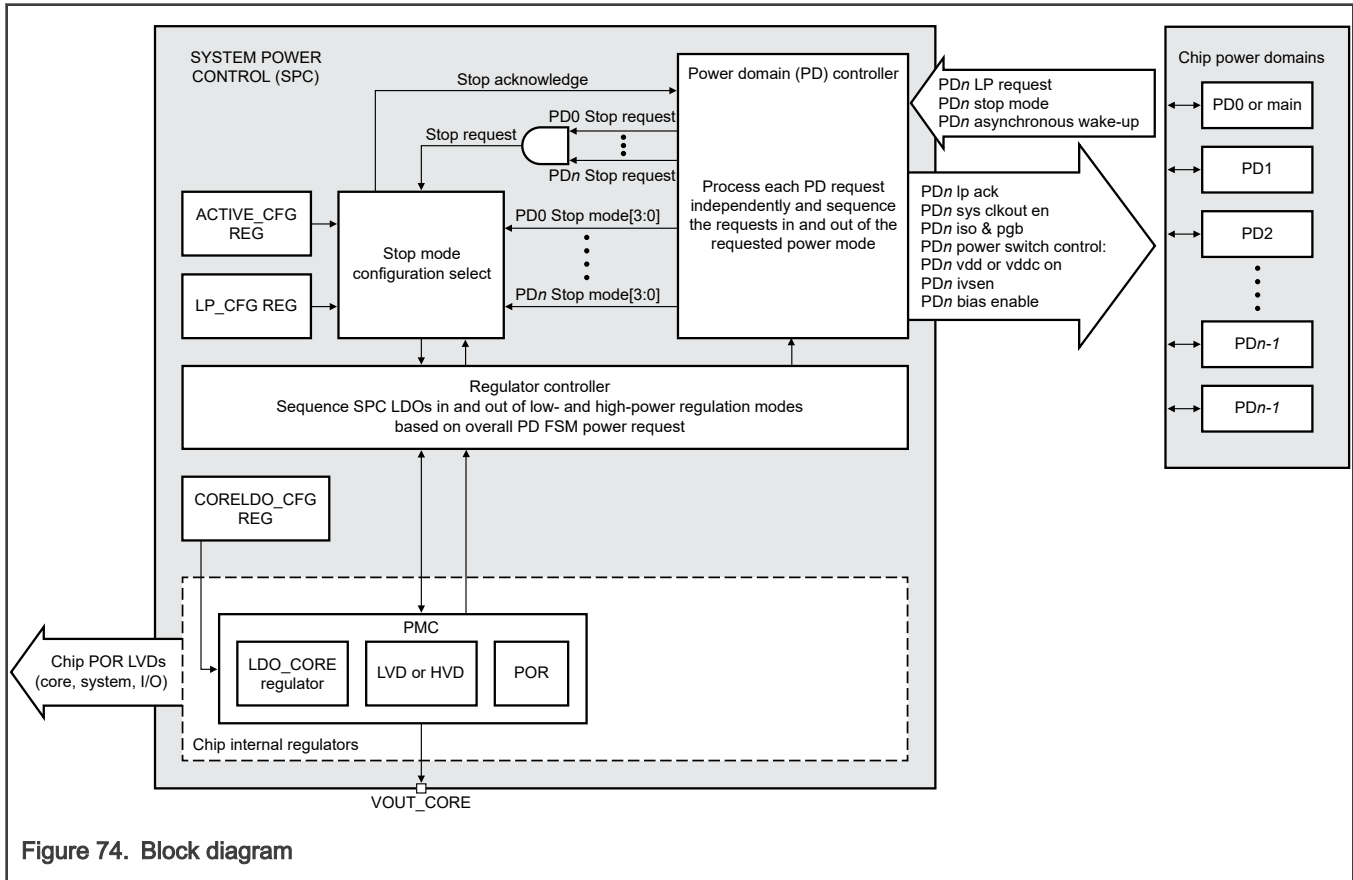


Figure 74. Block diagram

26.2.2 Features

- Selectable core internal voltage regulator (LDO_CORE)
- Active POR providing brown-out detect
- Low-voltage detect
- High-voltage detect
- Core power gate control

26.3 Functional description

26.3.1 Power mode transitions

Figure 75 shows the power mode state transitions available for each power-down domain. A POR or LVD reset initially returns the power-down domains to ACTIVE state.

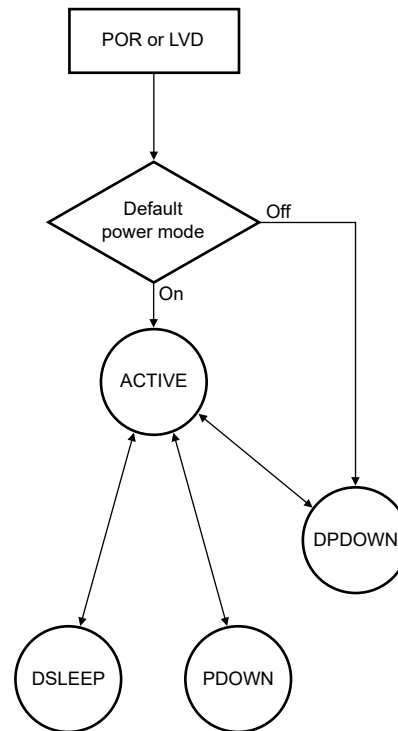


Figure 75. Power mode state diagram

SPC allows each power domain to enter or exit low-power modes independently of the other. You must ensure that any common system resources (for example, clock sources) are always available whenever required for a power-domain current power mode. For example, if a clock source in power domain 0 drives power domain 1, you must ensure that power domain 0 does not enter a low-power mode, because that would disable the clock source.

[Figure 76](#) defines the low-power entry and exit flow for each of the SPC power-down domains.

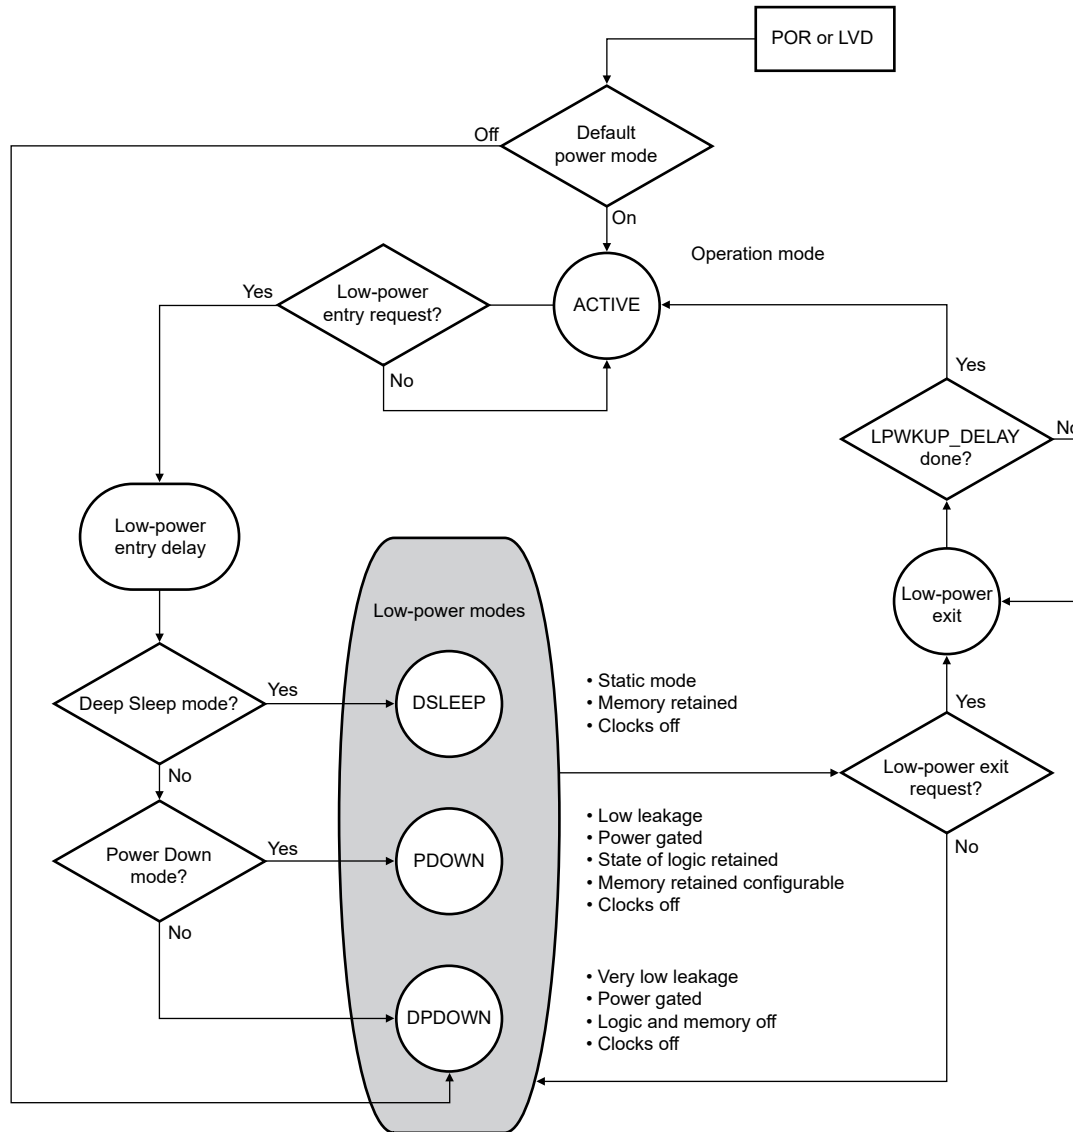


Figure 76. SPC regulator power mode state diagram

NOTE

This section mentions the power modes supported by the module. For the power modes supported on your device, see the chip-specific Power management chapter.

26.3.2 Active mode voltage updates

This section describes voltage and frequency changes in Active mode.

You can alter the operating voltage and frequency during Active mode to optimize power consumption depending on the application's performance requirements.

When increasing voltage and frequency in Active mode, you must perform the following steps:

1. Increase voltage to a new level ([ACTIVE_CFG\[CORELDO_VDD_LVL\]](#)).
2. Wait for voltage change to complete ([SC\[BUSY\]](#) = 0).
3. Configure flash memory to support higher voltage level and frequency ([FMU_FCTRL\[RWSC\]](#)).

4. Configure SRAM to support higher voltage levels ([SRAMCTL\[VSM\]](#)).
5. Request SRAM voltage update (write 1 to [SRAMCTL\[REQ\]](#)).
6. Wait for SRAM voltage change to complete ([SRAMCTL\[ACK\]](#) = 1).
7. Clear request for SRAM voltage change (write 0 to [SRAMCTL\[REQ\]](#)).
8. Increase frequency to a new level (for example, [SCG_RCCR](#)).
9. You can continue execution.

When decreasing voltage and frequency in Active mode perform the following steps:

1. Decrease frequency to a new level (for example, [SCG_RCCR](#)).
2. Configure flash memory to support lower voltage level and frequency ([FMU_FCTRL\[RWSC\]](#)).
3. Configure SRAM to support lower voltage levels ([SRAMCTL\[VSM\]](#)).
4. Request SRAM voltage update (write 1 to [SRAMCTL\[REQ\]](#)).
5. Wait for SRAM voltage change to complete ([SRAMCTL\[ACK\]](#) = 1).
6. Clear request for SRAM voltage change (write 0 to [SRAMCTL\[REQ\]](#)).
7. Decrease voltage to a new level ([ACTIVE_CFG\[CORELDO_VDD_LVL\]](#)).
8. Wait for voltage change to complete ([SC\[BUSY\]](#) = 0).
9. You can continue execution.

26.3.3 Low-Power Request (LPREQ) pin

The LPREQ pin asserts after low-power entry and negates after low-power wakeup.

The pin is intended to communicate with an external PMIC (for example, to enter low-power mode) or to control external switches (for example, if certain power supply rails are switched off in the low-power mode). The pin can eliminate the latency when communicating with PMIC—for example, through I²C—for quick power-state transitions. The PMIC can be configured to use the LPREQ pin to switch between two preconfigured power states.

SPC controls the state of the LPREQ pin based on how you configure [Low-Power Request Configuration \(LPREQ_CFG\)](#). You control the LPREQ pin in Active mode. SPC controls the pin when the chip transitions from Active to a low-power mode, and after wake-up from these power modes.

NOTE

If the power supply rails are switched off externally, software must configure the internal isolation of these power domains using [External Voltage Domain Configuration \(EVD_CFG\)](#).

To use the LPREQ pin:

1. Specify the pin polarity ([LPREQ_CFG\[LPREQPOL\]](#)).
2. Enable the pin output ([LPREQ_CFG\[LPREQOE\]](#)).
3. Configure the pin mux for the desired pin using the PORT PCR registers.
4. If the external PMIC or switch needs additional time after wake-up, use [Low Power Wake-Up Delay \(LPWKUP_DELAY\)](#) to extend the wake-up time.

26.3.4 Clocking

Table 182. Clocks

SPC component:	Clock source
Registers and logic	Slow bus clock
Delay counters	10 MHz internal clock

SPC uses the internal clock that PMC analog block generates to sequence the system regulator and chip power domains in and out of different power modes. This clock has a frequency of 10 MHz. SPC automatically enables the clock when it detects a power mode change, including entry into low-power modes and exit from low-power modes of any of the system power domains, or configuration changes to either [Active Power Mode Configuration \(ACTIVE_CFG\)](#) or [Low-Power Mode Configuration \(LP_CFG\)](#). This clock cannot run unless the PMC bandgap is up and enabled. Once SPC completes all transactions and is not busy, that is, [SC\[BUSY\]](#) = 0, this clock will turn off synchronously.

26.3.5 Reset

26.3.5.1 Reset sources

26.3.5.1.1 Power-on reset (POR)

When you initially apply power to the chip, or the supply voltage is below the POR falling threshold, the POR circuit triggers the POR condition. The POR condition asserts a cold reset in all power domains.

26.3.5.1.2 Low-voltage detect (LVD)

SPC supports the following LVD circuits:

- Core VDD
- System VDD

Each of these circuits is enabled by default and keeps the chip in reset until each of these supply voltages rises above the LVD rising threshold. Enabling any of the LVD circuits triggers an LVD reset condition if the corresponding supply voltage is below the LVD falling threshold.

The LVD reset condition asserts a cold reset in all power domains. The LVD- and HVD-detection logic is the only logic that HVD and LVD resets do not affect. The corresponding status fields in [Voltage Detect Status \(VD_STAT\)](#) become 1 after the corresponding LVD reset condition occurs.

26.3.5.1.3 High-voltage detect (HVD)

SPC supports the following HVD circuit:

- System VDD

Each of these circuits is enabled by default and triggers an HVD reset condition if the corresponding supply voltage is above the HVD threshold.

Any of these reset condition asserts a cold reset in all power domains. The LVD- and HVD-detection logic is the only logic that HVD and LVD resets do not affect. The corresponding status fields in [Voltage Detect Status \(VD_STAT\)](#) become 1 after the corresponding HVD reset condition occurs.

26.3.5.2 Reset sequence

The following steps occur as part of the POR, LVD, or HVD sequence:

1. The RESET_b pin deasserts.

2. The internal reset signals assert.
3. The POR or LVD signals negate.
4. System clocks are enabled.

26.3.6 Interrupts

SPC generates a single interrupt. The trigger for this interrupt comes from:

- Any of the LVD or HVD circuits when they are not configured for reset and their corresponding HVDIE or LVDIE register.

26.4 External signals

Signal	Description	Direction
LPREQ	Low-power request pin used to signal external power-management circuits for a change in supply voltage	Output
VOUT_CORE	Output of the LDO_CORE regulator	Output

26.5 Initialization

SPC does not require any special initialization.

26.6 Application information

To disable Bandgap in Active mode:

1. Disable all LVD's and HVD's in ACTIVE_CFG[29:24]= 0x00
2. Configure LDO's to Low Drive Strength in ACTIVE_CFG register
3. Configure ACTIVE_CFG[BGMODE] = 0x0

To disable Bandgap in Low-Power mode:

1. Disable all LVD's and HVD's in LP_CFG[29:24]= 0x00
2. Configure LDO's to Low Drive Strength in LP_CFG register
3. Configure LP_CFG[BGMODE] = 0x0

26.7 SPC register descriptions

Different chip reset types affect the reset of different SPC registers. Each register description provides details. See the Reset chapter for more information about the types of reset on this chip.

You may use only 32-bit writes for any writable SPC registers. 8-bit or 16-bit writes cause a transfer error.

26.7.1 SPC memory map

SPC0 base address: 4009_0000h

Offset	Register	Width (In bits)	Access	Reset value
0h	Version ID (VERID)	32	R	0000_0000h

Table continues on the next page...

Table continued from the previous page...

Offset	Register	Width (In bits)	Access	Reset value
10h	Status Control (SC)	32	RW	0000_0000h
14h	SPC Regulator Control (CNTRL)	32	RW	0000_0001h
1Ch	Low-Power Request Configuration (LPREQ_CFG)	32	RW	0000_0000h
30h	SPC Power Domain Mode Status (PD_STATUS0)	32	RW	0000_0000h
40h	SRAM Control (SRAMCTL)	32	RW	0000_0001h
54h	SRAM Retention Reference Trim (SRAMRETLDO_REFTRIM)	32	RW	0000_0017h
58h	SRAM Retention LDO Control (SRAMRETLDO_CNTRL)	32	RW	0000_0F01h
100h	Active Power Mode Configuration (ACTIVE_CFG)	32	RW	1310_0005h
104h	Active Power Mode Configuration 1 (ACTIVE_CFG1)	32	RW	0000_0002h
108h	Low-Power Mode Configuration (LP_CFG)	32	RW	0008_0004h
10Ch	Low Power Mode Configuration 1 (LP_CFG1)	32	RW	0000_0002h
120h	Low Power Wake-Up Delay (LPWKUP_DELAY)	32	RW	0000_0000h
124h	Active Voltage Trim Delay (ACTIVE_VDELAY)	32	RW	0000_00C8h
130h	Voltage Detect Status (VD_STAT)	32	RW	0000_0000h
134h	Core Voltage Detect Configuration (VD_CORE_CFG)	32	RW	0000_0001h
138h	System Voltage Detect Configuration (VD_SYS_CFG)	32	RW	0000_0101h
140h	External Voltage Domain Configuration (EVD_CFG)	32	RW	0000_0000h
300h	LDO_CORE Configuration (CORELDO_CFG)	32	R	0000_0000h

26.7.2 Version ID (VERID)

Offset


Register	Offset
VERID	0h

Function

Indicates:

- The version integrated for this instance on the chip.
- Inclusion or exclusion of several optional features.

Diagram

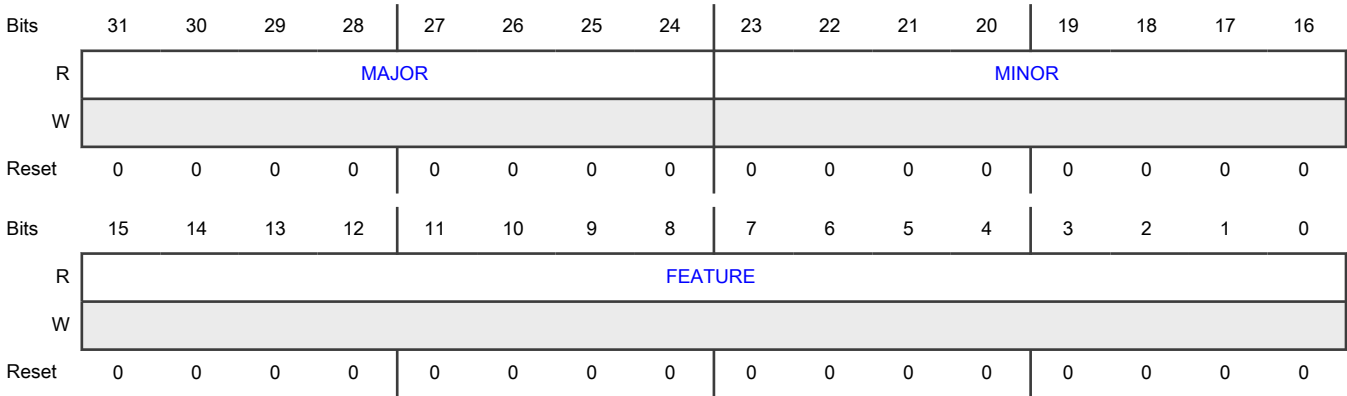

Fields

Field	Function
31-24 MAJOR	Major Version Number
23-16 MINOR	Minor Version Number
15-0 FEATURE	Feature Specification Number Indicates the feature set number. 0000_0000_0000_0000b - Standard features All other values are reserved.

26.7.3 Status Control (SC)


Offset

Register	Offset
SC	10h

Function

Indicates the current SPC status.

Diagram

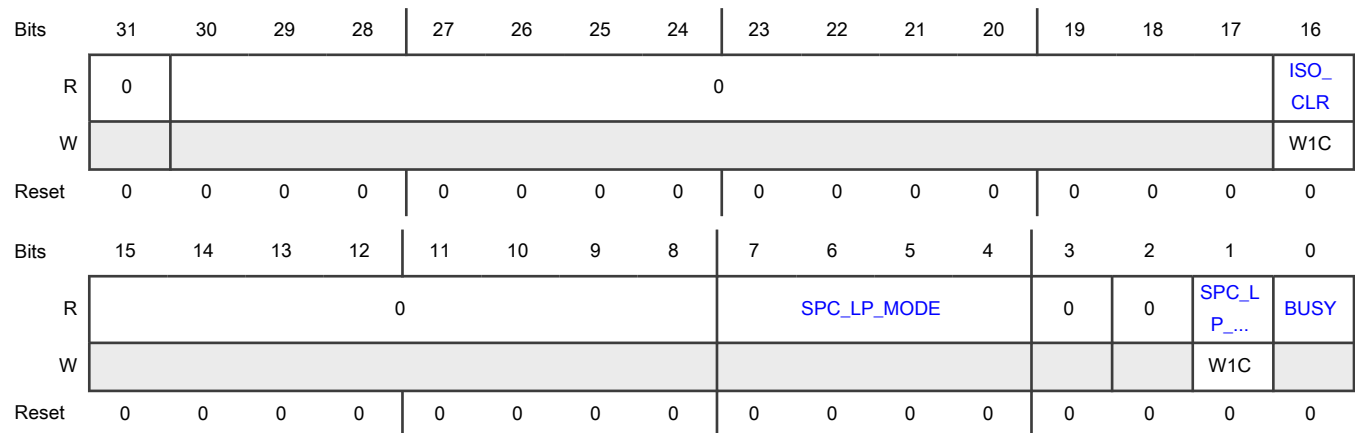

Fields

Field	Function
31 —	Reserved
30-17 —	Reserved
16 ISO_CLR	Isolation Clear Flags Indicates whether certain peripherals and I/O pads are in a latched state as a result of having been in PDOWN mode. Each bit of this field is a flag associated with a module on this chip. See the chip-specific SPC information for the module-bit association. For each flag: • A value of 0 means that peripherals and I/O pads are in the normal run state. • A value of 1 means that peripherals and I/O pads can retain their state in their power domain. If a flag in this field is 1, writing 1 to that flag clears the flag and releases the I/O pads and peripherals to their normal run-mode state. After recovering from a power-down mode, you must restore the chip configuration before clearing a flag in this field. In particular, you must restore the pin configuration for enabled WUU wake-up to avoid any WUU flag from being falsely set when the associated ISO_CLR flag is cleared. This field resets after a system reset.
15-8 —	Reserved
7-4 SPC_LP_MODE	Power Domain Low-Power Mode Request Indicates the last low-power mode that the power domain requested. 0000b - Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0001b - DSLEEP with system clock off 0010b - PDOWN with system clock off 0100b - Reserved 1000b - DPDOWN with system clock off
3 —	Reserved
2 —	Reserved
1 SPC_LP_REQ	SPC Power Mode Configuration Status Flag Indicates when all power-down domains requested low-power mode and SPC entered a low-power state. NOTE This field behaves differently for register reads and writes. When reading 0b - SPC is in Active mode; the ACTIVE_CFG register has control 1b - All power domains requested low-power mode; SPC entered a low-power state; power-mode configuration based on the LP_CFG register When writing 0b - No effect 1b - Clear the flag
0 BUSY	SPC Busy Status Flag Indicates whether SPC is busy. SPC sets this flag: - When SPC executes any type of power mode transition in Active mode or any of the chip low-power modes. - Due to LP_CFG[CORELDO_VDD_LVL] changes while in Active mode. NOTE Wait until this flag is clear before changing power-mode configuration registers. 0b - Not busy 1b - Busy

26.7.4 SPC Regulator Control (CNTRL)

Offset

Register	Offset
CNTRL	14h


Function

Enables the SPC regulators.

You can write to the fields in this register only one time.

The register resets only after a POR, LVD, or HVD event.

Diagram

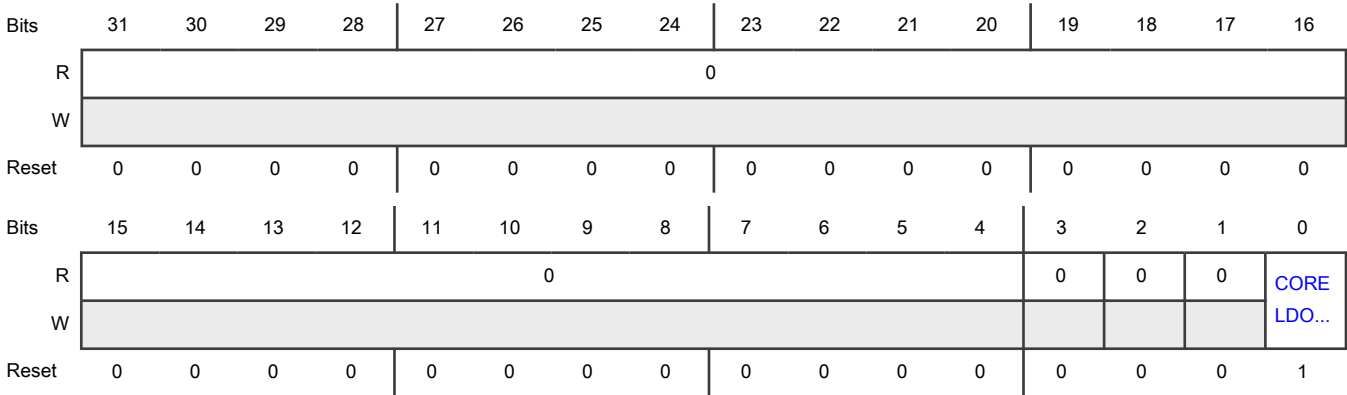

Fields

Field	Function
31-4 —	Reserved
3 —	Reserved
2 —	Reserved
1 —	Reserved
0 CORELDO_EN	LDO_CORE Regulator Enable 0b - Disable 1b - Enable

26.7.5 Low-Power Request Configuration (LPREQ_CFG)


Offset

Register	Offset
LPREQ_CFG	1Ch

Function

Configures the low-power output request pin.
The register resets only after a POR, LVD, or HVD event.

Diagram

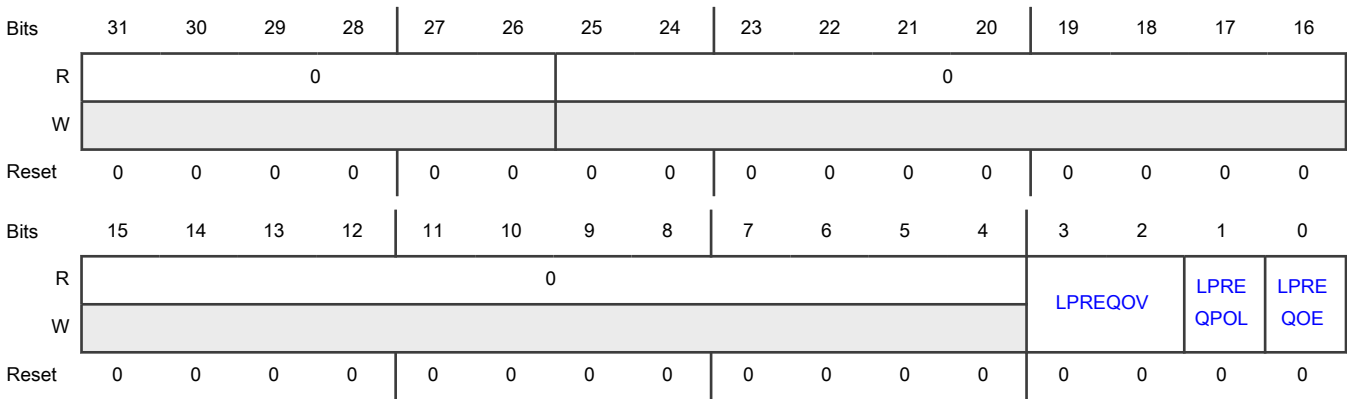

Fields

Field	Function
31-26 —	Reserved
25-4 —	Reserved
3-2 LPREQOV	Low-Power Request Output Override Forces the low-power request pin high. 00b - Not forced 01b - Reserved 10b - Forced low (ignore LPREQPOL settings) 11b - Forced high (ignore LPREQPOL settings)
1 LPREQPOL	Low-Power Request Output Pin Polarity Control Controls the true polarity of the low-power request output pin.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - High 1b - Low
0 LPREQOE	Low-Power Request Output Enable Enables the low-power request output pin. 0b - Disable 1b - Enable

26.7.6 SPC Power Domain Mode Status (PD_STATUS0)

Offset

Register	Offset
PD_STATUS0	30h

Function

Indicates power mode status for each of the SPC power domains. See the chip-specific SPC information to determine which power domains are associated with this register.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0				LP_MODE				0				PD_LP_R...		0	
W													W1C			
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-12 —	Reserved
11-8	Power Domain Low Power Mode Request

Table continues on the next page...

Table continued from the previous page...

Field	Function
LP_MODE	Indicates the last low-power mode that the power domain requested. 0000b - Reserved 0001b - DSLEEP with system clock off 0010b - PDOWN with system clock off 0100b - Reserved 1000b - DPDOWN with system clock off
7-5 —	Reserved
4 PD_LP_REQ	Power Domain Low Power Request Flag Set when low power mode was requested by Power Domain since last cleared by software. 0b - Did not request 1b - Requested
3-1 —	Reserved
0 —	Reserved

26.7.7 SRAM Control (SRAMCTL)


Offset

Register	Offset
SRAMCTL	40h

Function

Configures the SRAM timing for different voltage levels.

When transitioning between two voltage levels, you must keep the SRAM timing at the lowest voltage level until the voltage change is complete.

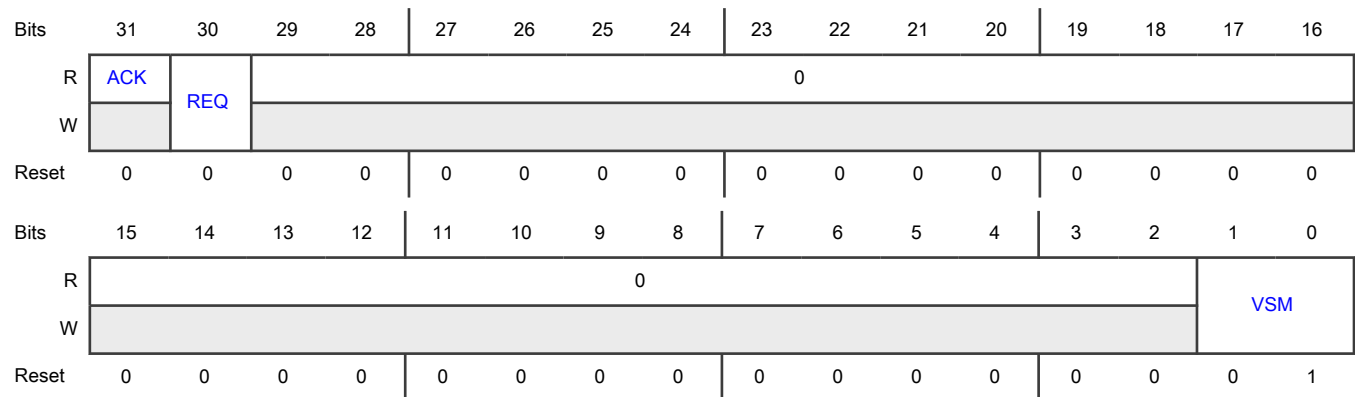Diagram**Fields**

Field	Function
31 ACK	SRAM Voltage Update Request Acknowledge Indicates whether SPC acknowledged the request for an SRAM trim-value change. 0b - Not acknowledged 1b - Acknowledged
30 REQ	SRAM Voltage Update Request Allows you to request an SRAM trim value change. After requesting the change, you must wait for the ACK field to become 1, then write 0 to REQ. 0b - Do not request 1b - Request
29-2 —	Reserved
1-0 VSM	Voltage Select Margin Specifies the operating voltage for the SRAM's read/write timing margin. 00b - Reserved 01b - 1.0 V 10b - 1.1 V 11b - Reserved

26.7.8 SRAM Retention Reference Trim (SRAMRETLDO_REFTRIM)


Offset

Register	Offset
SRAMRETLDO_REFTRIM	54h

Function

Specifies the trim for the SRAM retention regulator reference.

Diagram

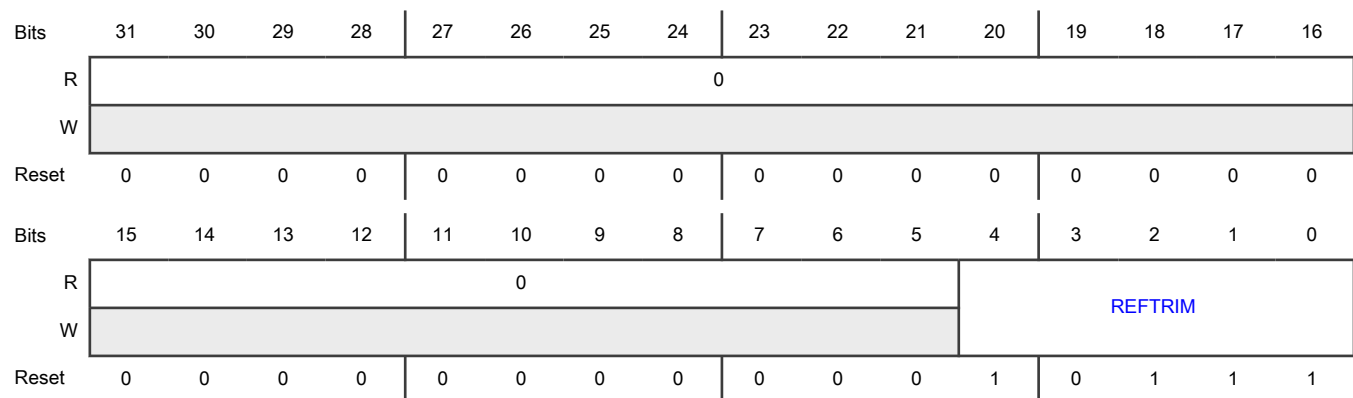

Fields

Field	Function
31-5 —	Reserved
4-0 REFTRIM	Reference Trim. Voltage range is around 0.48V - 0.85V. Trim step is 12 mV.


26.7.9 SRAM Retention LDO Control (SRAMRETLDO_CNTRL)

Offset

Register	Offset
SRAMRETLDO_CNTRL	58h

Function

Controls the SRAM retention LDO operation.

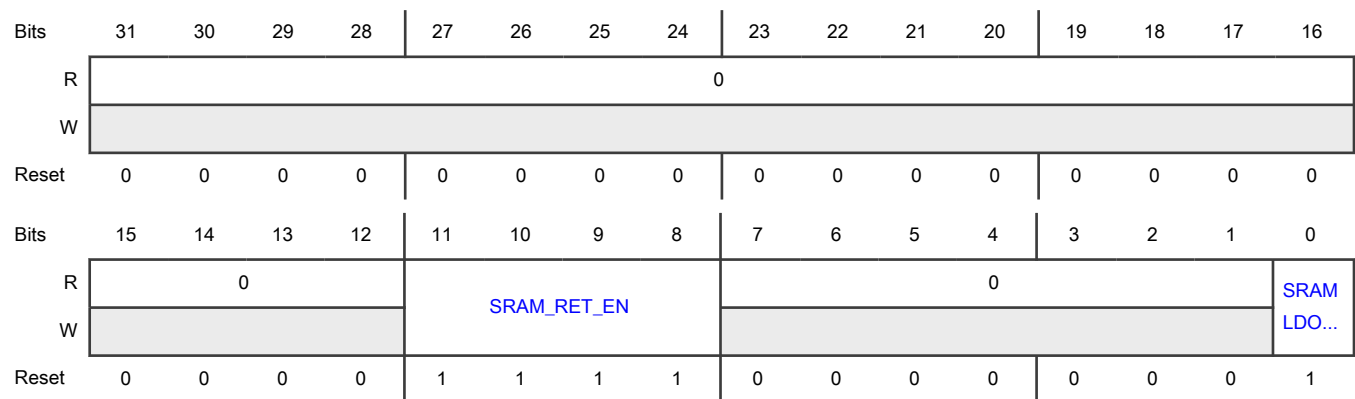Diagram**Fields**

Field	Function
31-12 —	Reserved
11-8 SRAM_RET_EN	SRAM Retention Configures the retention of each SRAM array in low-power modes. When SRAMLDO_ON is 1, you must retain at least one SRAM array. When SRAMLDO_ON is 0, SRAM_RET_EN specifies whether the SRAM array remains powered from VDD_CORE. See the chip-specific SPC information for SRAM retention.
7-1 —	Reserved
0 SRAMLDO_ON	SRAM LDO Regulator Enable 0b - Disable 1b - Enable

26.7.10 Active Power Mode Configuration (ACTIVE_CFG)**Offset**

Register	Offset
ACTIVE_CFG	100h

Function

Controls the SPC regulators settings in the Active power mode.

Changes to the drive strength or voltage level for any of the LDOs sets the [SC\[BUSY\]](#) flag until SPC changes its state to the new value.

NOTE

The LVDE and HVDE fields reset only with a POR. All other fields reset only with a system reset.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0	0	0	SYS_ HVDE	0	0	SYS_ LVDE	CORE _LV...	0	0	BGMODE		0	0	0	
W																
Reset	0	0	0	1	0	0	1	1	0	0	0	1	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0	0	0	0	0	0	0	0	0	0	0	0	CORELDO_VD D_LVL		0	CORE LDO...
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	1	0	1

Fields

Field	Function
31-30 —	Reserved
29 —	Reserved
28 SYS_HVDE	System High-Voltage Detection Enable Enables the system high-voltage detection. When SYS_HVDE = 1, you must write a value to BGMODE that enables the bandgap. Only a POR resets this field. 0b - Disable 1b - Enable
27 —	Reserved
26 —	Reserved
25 SYS_LVDE	System Low-Voltage Detection Enable Enables the system low-voltage detection. When SYS_LVDE = 1, you must write a value to BGMODE that enables the bandgap. Only a POR resets this field. 0b - Disable

Table continues on the next page...

Table continued from the previous page...

Field	Function
	1b - Enable
24 CORE_LVDE	Core Low-Voltage Detection Enable Enables the core low-voltage detection. When CORE_LVDE = 1, you must write a value to BGMODE that enables the bandgap. Only a POR resets this field. 0b - Disable 1b - Enable
23 —	Reserved
22 —	Reserved
21-20 BGMODE	Bandgap Mode Specifies the bandgap mode configuration. SPC forces BGMODE to 01b to enable the bandgap, if: • A write to disable the bandgap is detected while any regulator is in normal drive strength. • Any of the LVD or HVDs are enabled. 00b - Bandgap disabled 01b - Bandgap enabled, buffer disabled 10b - Bandgap enabled, buffer enabled 11b - Reserved
19 —	Reserved
18 —	Reserved
17-16 —	Reserved
15 —	Reserved
14-13 —	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
12 —	Reserved
11-10 —	Reserved
9-8 —	Reserved
7 —	Reserved
6 —	Reserved
5 —	Reserved
4 —	Reserved
3-2 CORELDO_VDD_LVL	LDO_CORE VDD Regulator Voltage Level NOTE LDO_CORE overdrive voltage level (1.15 V) is not supported when LDO_CORE is configured for low drive. Selects the LDO_CORE VDD regulator level. If the CORELDO_VDD_DS fields are set to the same value in both the ACTIVE_CFG and LP_CFG registers, the CORELDO_VDD_LVL's in the ACTIVE_CFG and LP_CFG register must be set to the same voltage level settings. You can change the core VDD levels for the LDO_CORE low power regulator only when CORELDO_VDD_DS=1. When switching CORELDO_VDD_DS from low to normal drive strength, ensure the LDO_CORE high VDD LVL setting is set to the same level that was set prior to switching to the LDO_CORE drive strength (CORELDO_VDD_DS). Otherwise, if the LVDs are enabled, an unexpected LVD can occur. 00b - Reserved 01b - Regulate to mid voltage (1.0 V) 10b - Reserved 11b - Regulate to overdrive voltage (1.2 V)
1	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
—	
0 CORELDO_VD D_DS	LDO_CORE VDD Drive Strength Selects the LDO_CORE VDD regulator drive strength NOTE When setting CORELDO_VDD_DS to Normal, BGMODE must be programmed to a value that enables the Bandgap. Writes to set drive strength to Low will be ignored if LVD/HVDs are kept enabled. 0b - Low 1b - Normal

26.7.11 Active Power Mode Configuration 1 (ACTIVE_CFG1)


Offset

Register	Offset
ACTIVE_CFG1	104h

Function

Enables different analog modules in Active mode. To see what analog modules each of these bits are controlling, see the chip-specific SPC information.

Diagram

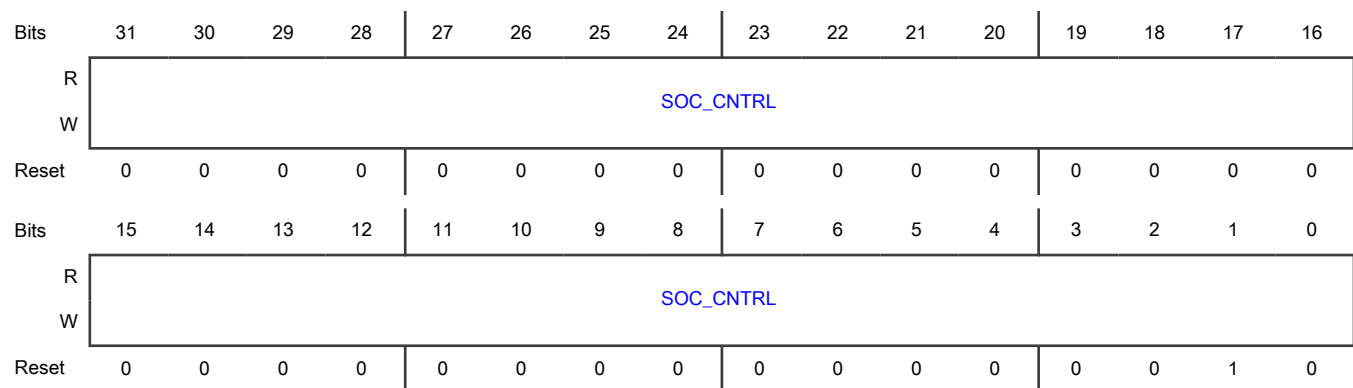

Fields

Field	Function
31-0	Active Config Chip Control

Table continues on the next page...

Field	Function
SOC_CNTRL	Enables analog modules in Active mode. Bit combinations with 0: The associated analog modules are disabled. Bit combinations with 1: The associated analog modules are enabled.

26.7.12 Low-Power Mode Configuration (LP_CFG)

Offset

Register	Offset
LP_CFG	108h

Function

Controls the SPC regulator settings in low-power stop modes.

This register resets only after a POR or LVD event.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0		0	SYS_ HVDE	0	0	SYS_ LVDE	CORE _LV...	LP_IR EF...	0	BGMODE		SRAM LDO...	0	0	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	1	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0	0		0	0		0		0	0		0	CORELDO_VD D_LVL		0	CORE LDO...
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	1	0	0

Fields

Field	Function
31-30 —	Reserved
29 —	Reserved
28 SYS_HVDE	System High Voltage Detect Enable This field resets only after a POR, LVD, or HVD event.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	When SYS_HVDE = 1, you must use LP_CFG[BGMODE] to enable the bandgap. If you enable the bandgap to support voltage detection, the low-power mode Idd increases. 0b - Disable 1b - Enable
27 —	Reserved
26 —	Reserved
25 SYS_LVDE	System Low Voltage Detect Enable This field resets only after a POR, LVD, or HVD event. When SYS_LVDE = 1, you must use LP_CFG[BGMODE] to enable the bandgap. If you enable the bandgap to support voltage detection, the low-power mode Idd increases. 0b - Disable 1b - Enable
24 CORE_LVDE	Core Low Voltage Detect Enable This field resets only after a POR, LVD, or HVD event. When CORE_LVDE = 1, you must use LP_CFG[BGMODE] to enable the bandgap. If you enable the bandgap to support voltage detection, the low-power mode Idd increases. 0b - Disable 1b - Enable
23 LP_IREFEN	Low-Power IREF Enable You can disable the low-power IREF only in DPDOWN mode. In all other low-power modes, writing 1 to this field has no effect and the low-power IREF is always enabled. See the chip-specific SPC information for the modules that require the low-power IREF to be enabled in DPDOWN mode when you use the module in DPDOWN mode. 0b - Disable for power saving in Deep Power Down mode 1b - Enable
22 —	Reserved
21-20 BGMODE	Bandgap Mode Specifies the bandgap mode configuration. BGMODE will be set to 01b to keep the Bandgap enabled if a write to disable Bandgap is detected while keeping any of the regulators in normal drive strength or if any of the LVD/HVDs are kept enabled.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	00b - Bandgap disabled 01b - Bandgap enabled, buffer disabled 10b - Bandgap enabled, buffer enabled 11b - Reserved
19 SRAMLDO_DP D_ON	SRAM_LDO Deep Power Low Power IREF Enable When set keeps the retention SRAM NOTE See the chip specific section for the modules that require the low power IREF to be enabled in DPDOWN mode, if the module is being used in DPDOWN mode. 0b - Low Power IREF is disabled for power saving in Deep Power Down mode 1b - Low Power IREF is enabled
18 —	Reserved
17 —	Reserved
16 —	Reserved
15 —	Reserved
14-13 —	Reserved
12 —	Reserved
11-10 —	Reserved
9-8 —	Reserved
7 —	Reserved
6-5	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
—	
4 —	Reserved
3-2 CORELDO_VD D_LVL	LDO_CORE VDD Regulator Voltage Level Specifies the LDO_CORE VDD regulator level for low-power sleep modes. NOTE LDO_CORE overdrive voltage level (1.15 V) is not supported when LDO_CORE is configured for low drive. If the CORELDO_VDD_DS fields are set to the same value in both the ACTIVE_CFG and LP_CFG registers, the CORELDO_VDD_LVL's in the ACTIVE_CFG and LP_CFG register must be set to the same voltage level settings. You can change the core VDD levels for the LDO_CORE low power regulator only when ACTIVE_CFG[CORELDO_VDD_DS] = 1. So, before entering any of the low-power states (DSLEEP, PDOWN, DPDOWN) with LDO_CORE low power regulator selected (LP_CFG[CORELDO_VDD_DS] = 0), you must use CORELDO_VDD_LVL to select the correct regulation level during ACTIVE run mode. Updating CORELDO_VDD_LVL sets the SC[BUSY] flag. That flag remains set for at least the total time delay that Active Voltage Trim Delay (ACTIVE_VDELAY) specifies. Before changing CORELDO_VDD_LVL, you must wait until the SC[BUSY] flag clears before entering the selected low-power sleep mode. This ensures the correct core VDD voltage levels are set after the chip is in the chosen mode. 00b - Reserved 01b - Mid voltage (1.0 V) 10b - Reserved 11b - Overdrive voltage (1.2 V)
1 —	Reserved
0 CORELDO_VD D_DS	LDO_CORE VDD Drive Strength Specifies the drive strength of the LDO_CORE VDD regulator. The LDO_CORE regulator is forced to disabled in DPDOWN Sleep mode. If you specify normal drive strength, you must write a value to LP[BGMODE] that enables the bandgap. If you have enabled LVDs or HVDs, and attempt to specify low drive strength, SPC ignores the attempt. 0b - Low 1b - Normal

26.7.13 Low Power Mode Configuration 1 (LP_CFG1)

Offset


Register	Offset
LP_CFG1	10Ch

Function

Enables different analog modules in Low-Power mode.

See the chip-specific SPC information for a list of analog modules that this register controls.

Diagram

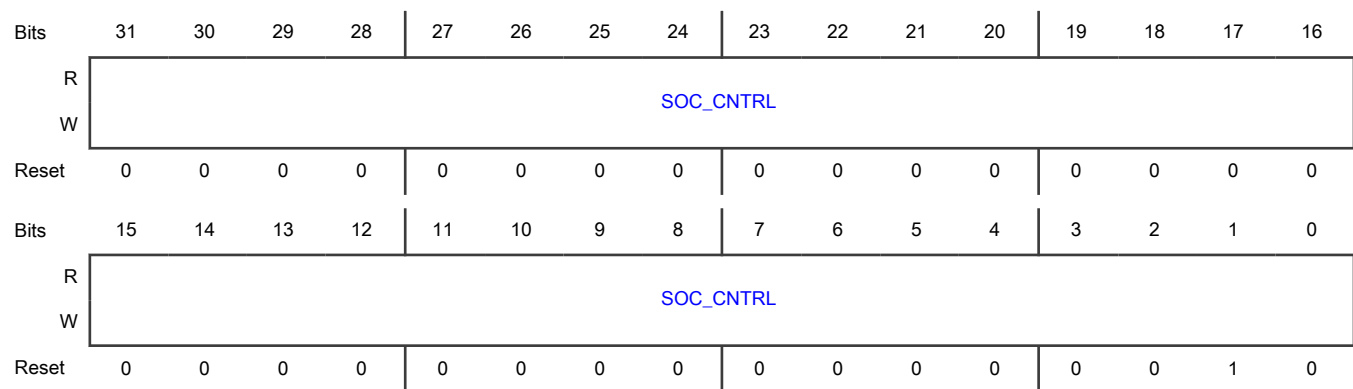

Fields

Field	Function
31-0	Low-Power Configuration Chip Control
SOC_CNTRL	Provides control bits to the chip to enable analog modules in Low Power mode. Bit combinations with 0: The associated analog modules are disabled. Bit combinations with 1: The associated analog modules are enabled.

26.7.14 Low Power Wake-Up Delay (LPWKUP_DELAY)


Offset

Register	Offset
LPWKUP_DELAY	120h

Function

Works with the LPREQ pin to extend the wake-up time if the external PMIC or switch needs additional time after wake-up.

Diagram

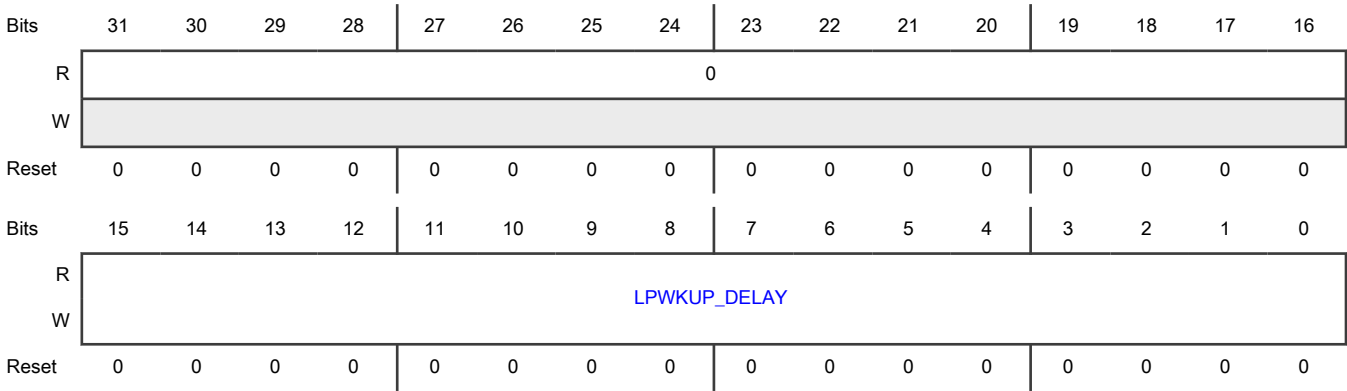

Fields

Field	Function
31-16 —	Reserved
15-0 LPWKUP_DELAY	Low-Power Wake-Up Delay Specifies the number of SPC timer clock cycles that SPC waits after exiting low-power modes. This field resets only after a POR, LVD, or HVD event. When voltage levels are not the same between ACTIVE mode and Low Power mode, you must write a nonzero value to this field.

26.7.15 Active Voltage Trim Delay (ACTIVE_VDELAY)

Offset

Register	Offset
ACTIVE_VDELAY	124h


Function

Specifies the delay due to voltage level changes to the regulators in Active mode.

This register resets only after a POR event.

SPC loads the ACTIVE_VDELAY values are loaded from IFR or FUSE after any reset. NXP trims this reset value for the recommended wait time.

Diagram

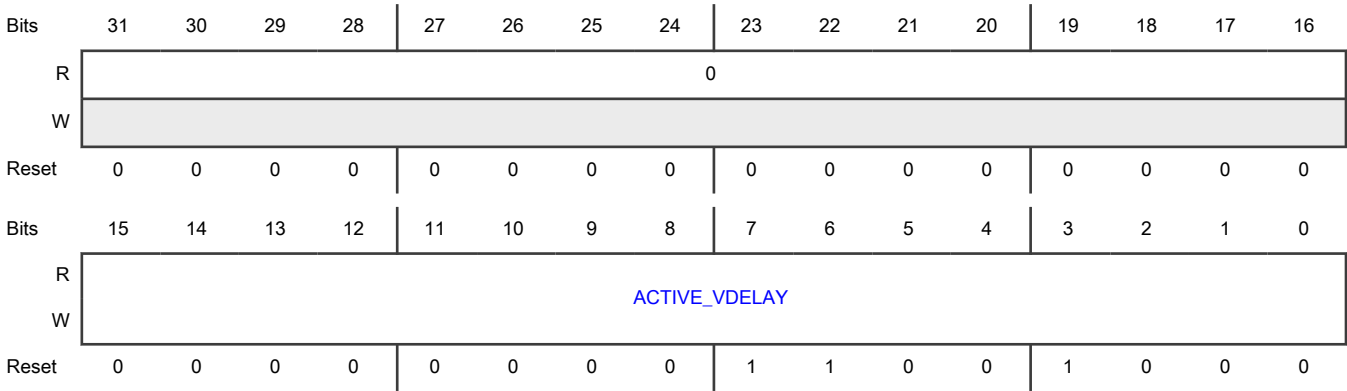

Fields

Field	Function
31-16 —	Reserved
15-0 ACTIVE_VDELAY	Active Voltage Delay Specifies the number of SPC timer clock cycles that SPC waits when changing the core-regulator voltage level in Active mode.

26.7.16 Voltage Detect Status (VD_STAT)

Offset

Register	Offset
VD_STAT	130h


Function

Displays the LVD or HVD captured for:

- Core VDD.
- System VDD.
- IO VDD.

This register resets only after a POR event.

Diagram

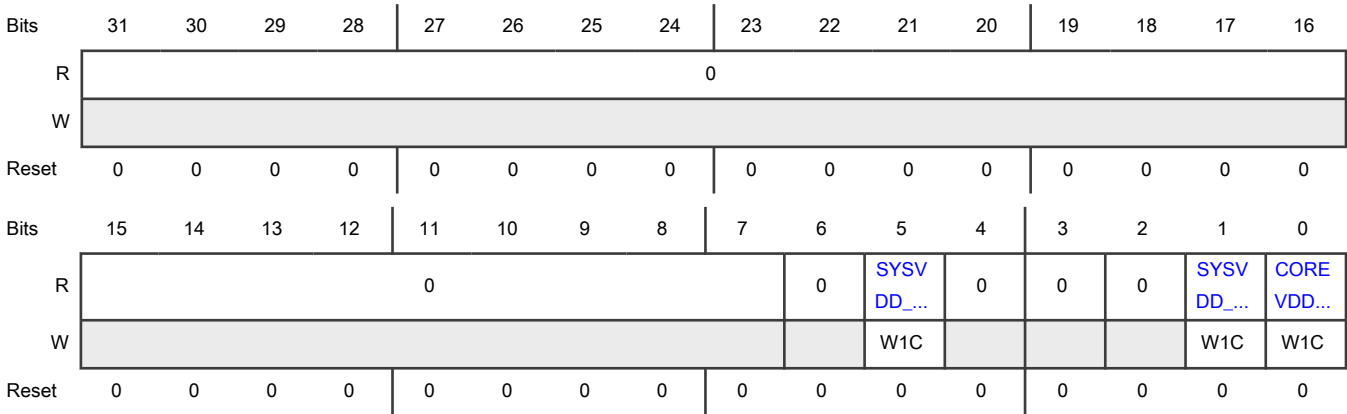

Fields

Field	Function
31-16 —	Reserved
15-7 —	Reserved
6 —	Reserved
5 SYSVDD_HVD F	System HVD Flag Indicates a system HVD event. NOTE This field behaves differently for register reads and writes. When reading 0b - Event not detected 1b - Event detected When writing 0b - No effect 1b - Clear the flag
4 —	Reserved
3 —	Reserved
2	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
—	
1 SYSVDD_LVDF	System Low-Voltage Detect Flag Indicates a system LVD event. NOTE This field behaves differently for register reads and writes. When reading 0b - Event not detected 1b - Event detected When writing 0b - No effect 1b - Clear the flag
0 COREVDD_LVDF	Core Low-Voltage Detect Flag Indicates a core LVD event. NOTE This field behaves differently for register reads and writes. When reading 0b - Event not detected 1b - Event detected When writing 0b - No effect 1b - Clear the flag

26.7.17 Core Voltage Detect Configuration (VD_CORE_CFG)

Offset

Register	Offset
VD_CORE_CFG	134h

Function

Provides these functions:

- Configures the low-voltage trip point.
- Enables the core LVD reset and interrupts.

This register resets only after a POR event.

NOTE

If you write 1 to both LVDRE and LVDIE, SPC generates an interrupt after exiting from LVDRE reset. If you don't want this to occur, configure the LVD or HVD so only one is enabled.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0															LOCK
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0												0		LVDIE	LVDR E
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1

Fields

Field	Function
31-17 —	Reserved
16 LOCK	Core Voltage Detect Reset Enable Lock Allows writing to the LVDRE and HVDRE fields. 0b - Allow 1b - Deny
15-4 —	Reserved
3-2 —	Reserved
1 LVDIE	Core LVD Interrupt Enable Enables the Core LVD (COREVDD_LVDF) event to generate a hardware interrupt. If you write 1 to LVDIE with LVDF set, SPC automatically generates an LVD interrupt. 0b - Disable 1b - Enable
0 LVDRE	Core LVD Reset Enable Enables the core LVD (COREVDD_LVDF) event to generate a hardware reset. Before writing to this field, you must write 0 to LOCK .

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - Disable 1b - Enable

26.7.18 System Voltage Detect Configuration (VD_SYS_CFG)

Offset

Register	Offset
VD_SYS_CFG	138h

Function

Provides these functions:

- Configures the low-voltage trip point.
- Enables the system LVD reset and interrupts.

This register resets only after a POR event.

NOTE

If you write 1 to both LVDRE and LVDIE, SPC generates an interrupt after exiting from LVDRE reset. If you don't want this to occur, configure the LVD or HVD so only one is enabled.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0															LOCK
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0							0	0				HVDIE	HVDR E	LVDIE	LVDR E
W																
Reset	0	0	0	0	0	0	0	1	0	0	0	0	0	0	0	1

Fields

Field	Function
31-17	Reserved
—	

Table continues on the next page...

Table continued from the previous page...

Field	Function
16 LOCK	System Voltage Detect Reset Enable Lock Allows writing to the LVDRE, HVDRE, and LVSEL fields. 0b - Allow 1b - Deny
15-10 —	Reserved
9 —	Reserved
8 LVSEL	System Low-Voltage Level Select Specifies the LVD trip-point level for the system monitor. See the chip data sheet for the normal- and safe-level values. Before writing to this field, you must write 0 to LOCK. If you want to change LVSEL, you must do this after disabling the LVD reset and interrupt. Otherwise, SPC could generate an LVD due to the LVSEL change. 0b - Normal 1b - Safe
7-4 —	Reserved
3 HVDIE	System HVD Interrupt Enable Enables the system HVD (SYSVDD_HVDF) event to generate a hardware interrupt. If you write 1 to HVDIE with HVDF set, SPC automatically generates an HVD interrupt. 0b - Disable 1b - Enable
2 HVDRE	System HVD Reset Enable Enables the system HVD (SYSVDD_HVDF) event to generate a hardware reset. Before writing to this field, you must write 0 to LOCK. 0b - Disable 1b - Enable
1 LVDIE	System LVD Interrupt Enable Enables the system LVD (SYSVDD_LVDF) event to generate a hardware interrupt. If you write 1 to LVDIE with LVDF set, SPC automatically generates an LVD interrupt.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - Disable 1b - Enable
0 LVDRE	System LVD Reset Enable Enables the system LVD (SYSVDD_LVDF) event to generate a hardware reset. Before writing to this field, you must write 0 to LOCK . 0b - Disable 1b - Enable

26.7.19 External Voltage Domain Configuration (EVD_CFG)

Offset

Register	Offset
EVD_CFG	140h

Function

Isolates signals from external voltage domains under certain conditions.

Chip pins supply the external voltage domains. These domains are controlled at the board level. This register allows you to control internal isolations for signals from these domains if either of the following conditions is true:

- They are not powered on the board.
- They are powered off externally in low-power modes (using the SPC_LPREQ pin).

Any logic in the isolated voltage domain also resets, because the voltage domain is assumed to be powered off. This reset does not impact any VDD_CORE internal power domains or registers—only I/O pads, analog components, or both.

This register resets only after a POR event.

Each bit of the EVDISO, EVDLPISO, and EVDSTAT fields corresponds to one of the I/O or analog supplies according to [Table 183](#).

Table 183. Mapping of bits to supplies

Bit position in field	Description
0	VDD
1	VDD_USB
2	Reserved

NOTE

Bit 0 VDD should not be set in EVD_CFG[EVDISO] and it should only be set in EVD_CFG[EVDLPISO] when moving to Deep Power Down mode.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	
R	0													EVDSTAT			
W																	
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0 ¹	0	0	
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	
R	0					EVDLPISO				0					EVDISO		
W																	
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	

1. The reset value of this field can change based on external voltage conditions.

Fields

Field	Function
31-19 —	Reserved
18-16 EVDSTAT	External Voltage Domain Status Indicates the status of the external voltage domains. See Table 183 for the mapping of each bit of this field. Each bit's value has the following meaning: 0b - Isolated or not powered 1b - Not isolated
15-11 —	Reserved
10-8 EVDLPISO	External Voltage Domain Low-Power Isolation Isolates the external voltage domain in low-power modes. Use this field if you use the SPC_LPREQ pin to power off any voltage domain in low-power modes. See Table 183 for the mapping of each bit of this field. Each bit's value has the following meaning: 0b - Not isolated 1b - Isolated
7-3 —	Reserved
2-0 EVDISO	External Voltage Domain Isolation Isolates the external voltage domain. Use this field if any voltage domain is always powered off on the board, or whenever a voltage domain is powered off under software control.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	See Table 183 for the mapping of each bit of this field. Each bit's value has the following meaning: 0b - Not isolated 1b - Isolated

26.7.20 LDO_CORE Configuration (CORELDO_CFG)

Offset

Register	Offset
CORELDO_CFG	300h

Function

Configures LDO_CORE.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0				0				0	0		0				0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0								0	0				0	0	0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-29 —	Reserved
28-24 —	Reserved
23 —	Reserved
22-21	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
—	
20-17 —	Reserved
16 —	Reserved
15-9 —	Reserved
8 —	Reserved
7-4 —	Reserved
3 —	Reserved
2 —	Reserved
1 —	Reserved
0 —	Reserved

Chapter 27

Standard counter/timers (CTIMER)

27.1 Chip-specific CTIMER information

Table 184. Reference links to related information

Topic	Related module	Reference
Full description	CTIMER	CTIMER
System memory map		Memory map
Clocking		Clock distribution
Power Management		Power Management
Signal multiplexing	Port control	Signal multiplexing
Peripheral Input Mux	INPUTMUX	Peripheral Input multiplexing

27.1.1 Module instances

This device has five instances of the CTIMER module, CTIMER0, CTIMER1, CTIMER2, CTIMER3 and CTIMER4. Each timer has up to 4x capture and 4x match registers with corresponding inputs and outputs.

CTimer supports async function clock. The async function clock speed can be higher than APB bus clock.

27.1.2 Signals

The tables below give a summary of each of the Timer/Counter related pins and the recommended PORT settings. Also note that different part number and package variations may provide different CTIMER related pin functions.

Table 185. Timer/Counter pin description

Pin	Type	Description
CTIMER0_CAP3:0 CTIMER1_CAP3:0 CTIMER2_CAP3:0 CTIMER3_CAP3:0 CTIMER4_CAP3:0	Input	Capture Signals- A transition on a capture pin can be configured to load one of the Capture Registers with the value in the Timer Counter and optionally generate an interrupt. Capture functionality can be selected from a number of pins. Timer/Counter block can select a capture signal as a clock source instead of the APB bus clock. For more details, see CTCR register.
CT0_MAT3:0 CT1_MAT3:0 CT2_MAT3:0 CT3_MAT3:0 CT4_MAT3:0	Output	External Match Output - When a match register (MR3:0) equals the timer counter (TC) this output can either toggle, go low, go high, or do nothing. The External Match Register (EMR) controls the functionality of this output. Match Output functionality can be selected on a number of pins in parallel.

27.1.3 External global enable

When the timer is enabled by the CTIMER global start register in SYSCON, (register CTIMERGLOBALSTARTEN in System Controller (SYSCON)), it is equivalent to writing 1 to the TCR[CEN] bit in CTIMER. The external global start register is used to enable multiple timers at the same time. This operation is allowed by writing a 1 to each Timer's TCR[AGCEN] bit. If the Timer control register's CEN bit is already 1, the external global start enable register has no effect (See register CTIMERGLOBALSTARTEN in System Controller (SYSCON)).

27.1.4 Peripheral Input Multiplexers

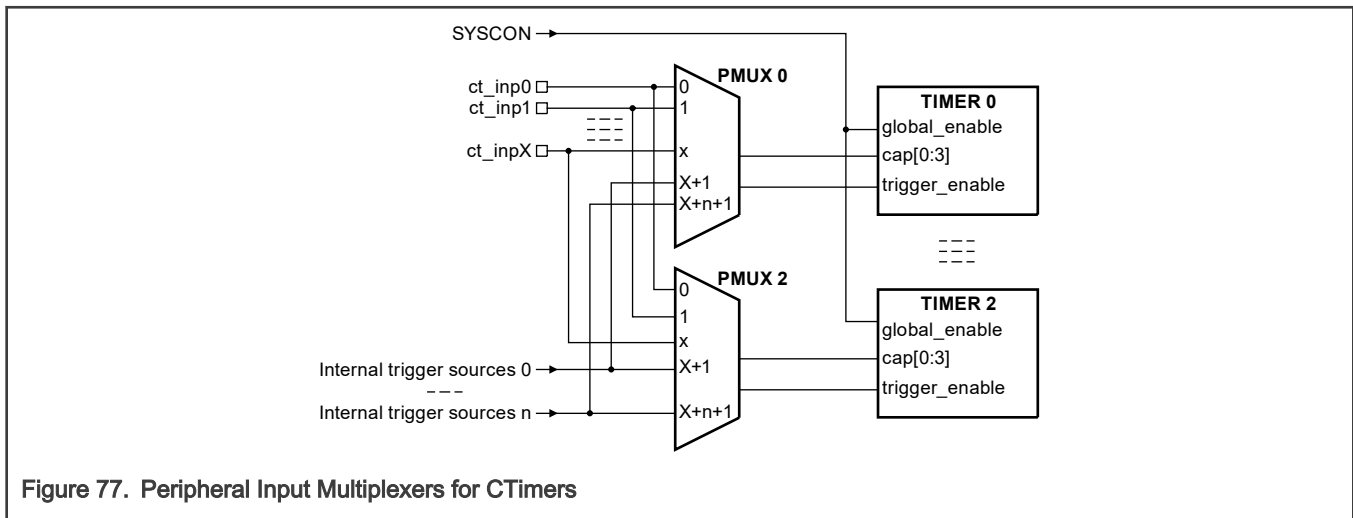


Figure 77. Peripheral Input Multiplexers for CTimers

27.1.5 Initialization


- Select a clock source for the CTIMER using [CTIMER0 clock selection control \(MRCC_CTIMER0_CLKSEL\)](#), [CTIMER1 clock selection control \(MRCC_CTIMER1_CLKSEL\)](#), [CTIMER2 clock selection control \(MRCC_CTIMER2_CLKSEL\)](#), [CTIMER3 clock selection control \(MRCC_CTIMER3_CLKSEL\)](#) and [CTIMER4 clock selection control \(MRCC_CTIMER4_CLKSEL\)](#) registers.
- Enable the clock to the CTIMER via the [CTIMER0_CLK_EN](#), [CTIMER1_CLK_EN](#), [CTIMER2_CLK_EN](#), [CTIMER3_CLK_EN](#) and [CTIMER4_CLK_EN](#) fields. This enables the register interface and the peripheral function clock.
- Clear the CTIMER peripheral reset using the ([Peripheral Reset Control 0 \(MRCC_GLB_RST0\)](#) registers).
- Each CTIMER provides interrupts to the NVIC. See MCR and CCR registers in the CTIMER register section for match and capture events. For interrupt connections, see the attached NVIC spreadsheet.
- Select timer pins and pin modes as needed through the relevant PORT registers.
- The CTIMER DMA request lines are connected to the DMA trigger inputs via the DMAC0_ITRIG_INMUX registers (See [Memory map and register definition](#)). Note that timer DMA request outputs are connected to DMA trigger inputs.

27.2 Overview

Each CTIMER is designed to count cycles of the CTIMER function clock or an externally supplied clock. A CTIMER can optionally generate an interrupt or perform other actions at specified timer values based on the settings of [Match \(MR0 - MR3\)](#). Each CTIMER also includes capture input pins (see [Capture mode](#)) to capture the timer value when an input signal transitions, optionally generating an interrupt.

In PWM mode, three match registers can be used to provide a single-edge controlled PWM output on the match output pins. One match register is used to control the PWM cycle length. All match registers can optionally be auto-reloaded from a companion shadow register (see [Match Shadow \(MSR0 - MSR3\)](#)) whenever the counter is reset to zero. This feature permits modifying the match values for the next counter cycle without disrupting PWM waveforms during the current cycle. When enabled, match reload occurs whenever the counter is reset, either because of a match event or by writing 1 to [TCR\[CRST\]](#).

27.2.1 Block diagram

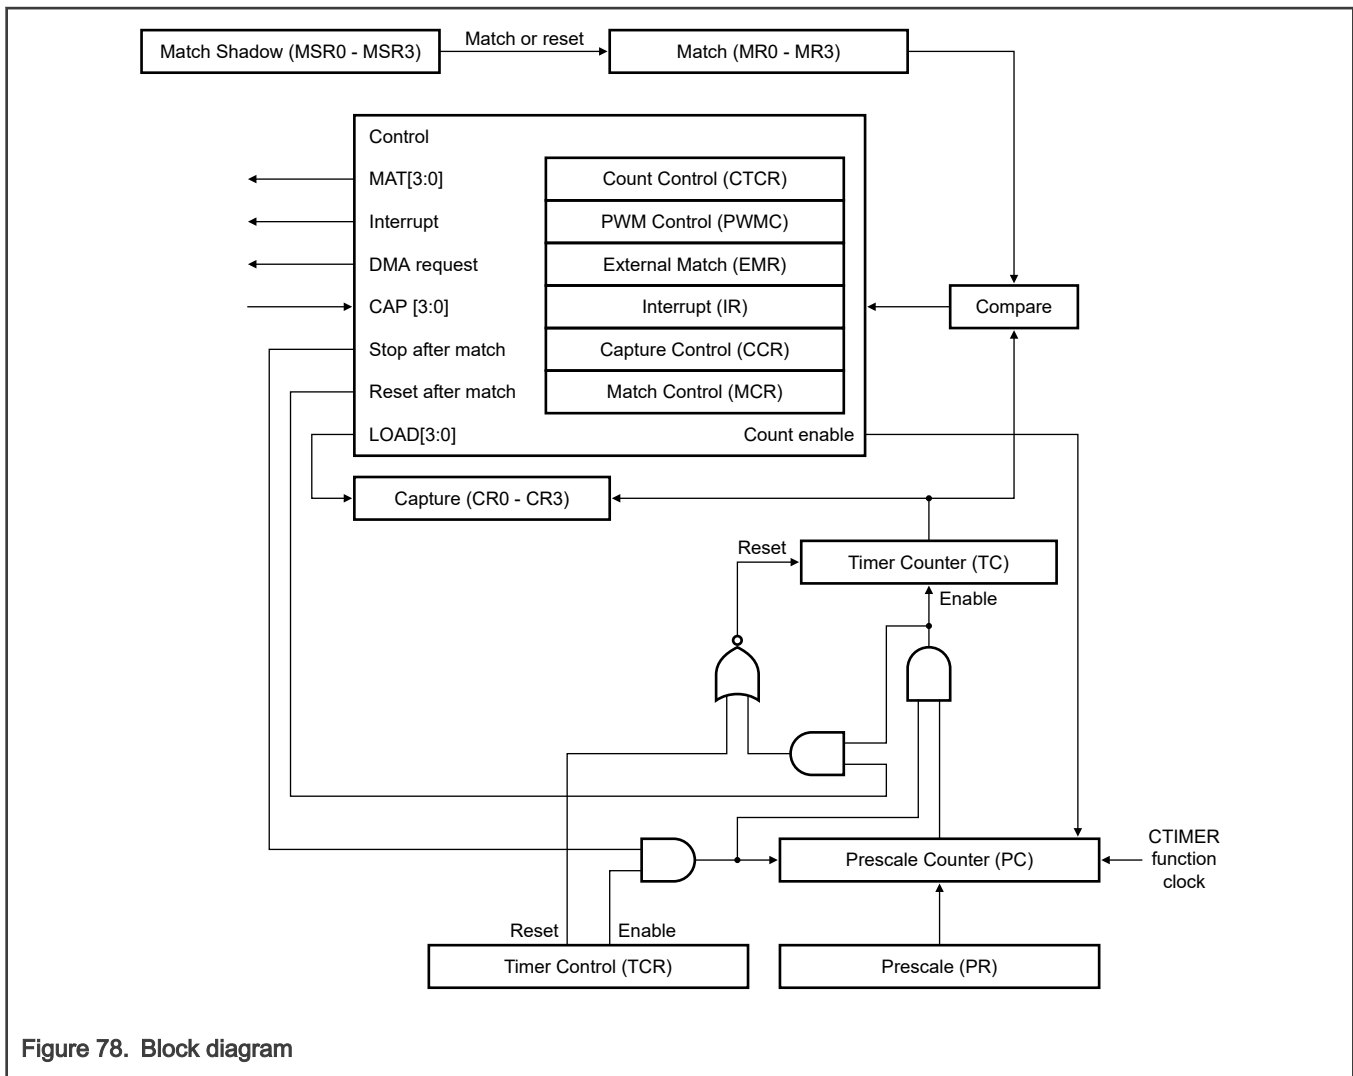

27.2.2 Features

- Contains a 32-bit CTIMER with a programmable 32-bit prescaler (the timers include external capture and match pin connections)
- Contains [Timer Control \(TCR\)](#) and [External trigger enable](#), either of which you can use to enable each timer (you can also use an external global start enable register to globally enable one or more timers)
- Performs counter or timer operations
- Selects the function clocks that may be asynchronous to other system clocks
- Includes up to four 32-bit captures (see [Capture mode](#)) to take a snapshot of the timer value when an input signal transitions (a capture event may also optionally generate an interrupt, and the number of capture inputs available for each timer on a chip may vary)
- Enables you to configure the timer and prescaler to be cleared on a designated capture event (this feature permits easy pulse-width measurement by clearing the timer on the leading edge of an input pulse, capturing the timer value on the trailing edge)
- Includes [Match \(MR0 - MR3\)](#) to allow:
 - Continuous operation with optional interrupt generation after a match occurs

- Optional auto-reload from **Match Shadow (MSR0 - MSR3)** when the counter is reset
- Stop timer after a match with optional interrupt generation
- Reset timer after a match with optional interrupt generation
- Generates up to four external outputs corresponding to **Match (MR0 - MR3)**, for each timer, with the following capabilities (the number of match outputs available for each timer on a chip may vary):
 - Go low when matched
 - Go high when matched
 - Toggle when matched
 - Do nothing
- Enables you to configure up to four match registers for PWM operation, allowing up to three single-edged controlled PWM outputs (the number of match outputs available for each timer on a chip may vary)
- Uses up to two match registers to generate DMA requests

27.3 Functional description

Figure 79 shows a timer configured to reset the count and generate an interrupt after a match. The value of **Prescale (PR)** is 2 and the value of **Match (MR0 - MR3)** is 6. At the end of the timer cycle where the match occurs, the timer count is reset and gives a full-length cycle to the match value. The interrupt indicating that a match has occurred is generated in the next clock after the timer reaches the match value. Timer mode is selected in this case.

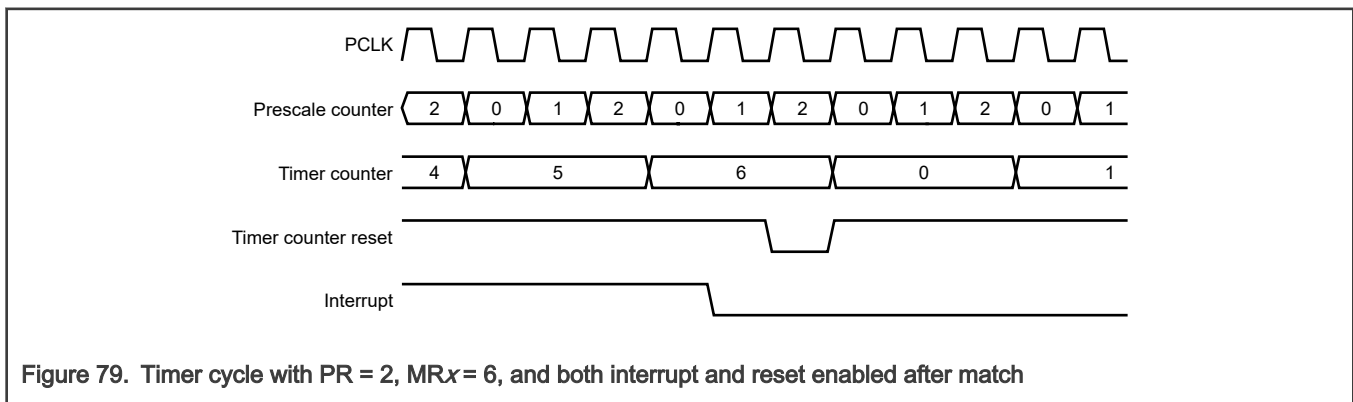


Figure 79. Timer cycle with PR = 2, MRx = 6, and both interrupt and reset enabled after match

Figure 80 shows a timer configured to stop and generate an interrupt after a match. The value of **Prescale (PR)** is 2 and the value of **Match (MR0 - MR3)** is 6. In the next clock after the timer reaches the match value, **TCR[CEN]** becomes 0 and the interrupt indicating that a match has occurred is generated.

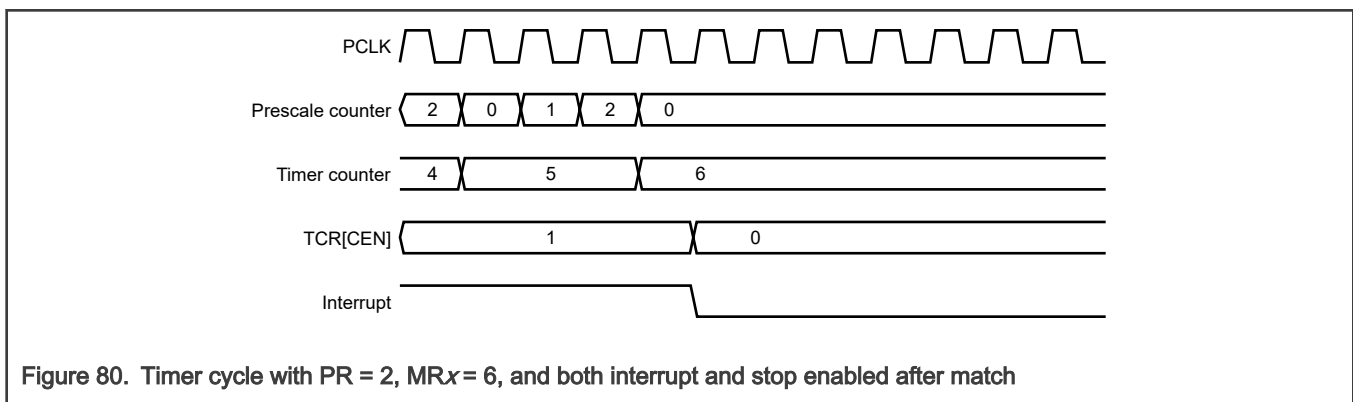


Figure 80. Timer cycle with PR = 2, MRx = 6, and both interrupt and stop enabled after match

27.3.1 Operation sections

All single-edge controlled PWM outputs go low at the beginning of each PWM cycle (timer is set to zero) unless their match value is zero.

Each PWM output goes high when its match value is reached. If no match occurs (that is, the match value is greater than the PWM cycle length), the PWM output remains continuously low.

If a match value larger than the PWM cycle length is written to [Match \(MR0 - MR3\)](#), and the PWM signal is already high, the PWM signal is cleared at the start of the next PWM cycle.

If a match register contains the same value as the timer reset value (the PWM cycle length), the PWM output is reset to low on the next clock tick after the timer reaches the match value. Therefore, the PWM output always consists of one clock tick wide positive pulse with a period that the PWM cycle length determines (that is, the timer reload value).

If [Match \(MR0 - MR3\)](#) = 0, the PWM output goes to high the first time the timer goes back to zero, and remains high continuously.

The following figure shows sample PWM waveforms with a PWM cycle length of 100 that MR3 specifies and PWM outputs that [PWM Control \(PWMC\)](#) enables. Counter mode is selected in this case.

NOTE

When you select match outputs to perform as PWM outputs, you must write 0 to [MCR\[MRnR\]](#) and [MCR\[MRnS\]](#), except to the match register setting the PWM cycle length. For this register, write 1 to [MCR\[MRnR\]](#) to enable the timer reset when the timer value matches the value of the corresponding match register.

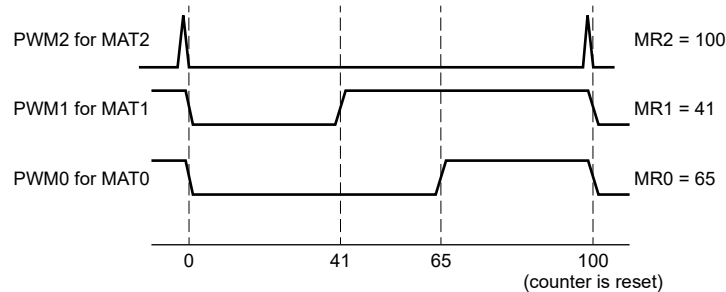


Figure 81. Sample PWM waveforms with a PWM cycle length of 100 (selected by MR3) and MAT3:0 enabled as PWM outputs by the PWM Control register.

27.3.2 Mode sections

27.3.2.1 Capture mode

You can configure a CAP to load [Capture \(CR0 - CR3\)](#) with the value in the counter or timer and optionally generate an interrupt. One of the pins generates the capture signal with a capture function. Each CAP is connected to one capture channel of the timer.

CTIMER can select a CAP as a clock source instead of selecting the APB CTIMER function clock. See [Count Control \(CTCR\)](#) for more information.

27.3.2.2 Match mode

When the value of a match register ([Match \(MR0 - MR3\)](#)) equals that of [Timer Counter \(TC\)](#), the corresponding match output can either toggle, go low, go high, or do nothing. [External Match \(EMR\)](#) and [PWM Control \(PWMC\)](#) control the functionality of this output.

27.3.3 External trigger enable

When trigger_enable is asserted (rising edge), it is equivalent to writing 1 to [TCR\[CEN\]](#). If [TCR\[CEN\]](#) is already 1, trigger_enable rising edge events have no effect.

27.3.4 Clocking

Table 186. CTIMER clocks

Type of clock	Description
Functional Clock(ctclk)	Asynchronous to the bus clock, provide clock to perform counter or timer operations.
Bus Clock(pclk)	The bus clock is only used for bus accesses to the control and configuration registers.

27.3.5 Reset

TCR[CRST] resets [Timer Counter \(TC\)](#) and [Prescale Counter \(PC\)](#).

27.3.6 Interrupts

This module has capture and match interrupts. See the [Interrupt \(IR\)](#)

27.3.7 DMA

DMA requests are generated when the value of [Timer Counter \(TC\)](#) either matches the value of MR0 or MR1 (see [Match \(MR0 - MR3\)](#) for more information). This DMA request is not connected to the operation of the match outputs (see [Match mode](#)) controlled by [External Match \(EMR\)](#). Each match sets a DMA request flag, which is connected to the DMA controller. You must configure the DMA controller correctly.

When a timer is initially set up to generate a DMA request, the request may already be asserted before a match condition occurs. An initial DMA request may be avoided by writing 1 to the interrupt flag location twice, as if clearing a timer interrupt. See [Interrupt \(IR\)](#) for more information. A DMA request is cleared automatically when the DMA controller manages it.

NOTE

Timer DMA requests are generated whenever the timer value is equal to the related match register value. DMA requests are always generated when the timer is running, unless the match register value is higher than the upper count limit of the timer. It is important not to select and enable timer DMA requests in the DMA block unless you configure the timer correctly to generate valid DMA requests.

27.4 External signals

Table 187. CTIMER pin descriptions

Pin	Type	Description
CTIMER m _CAP n	Input	Capture signals—You can configure a transition on a capture pin to load one of the capture registers (Capture (CR0 - CR3)) with the value of Timer Counter (TC) and optionally generate an interrupt. You can select the capture functionality for a number of pins. CTIMER can select a capture signal as a clock source instead of the APB bus clock. See Count Control (CTCR) for more information.
CTIMER m _MAT n	Output	External match output—When the value of a match register (Match (MR0 - MR3)) equals the value of Timer Counter (TC) , this output can either toggle, go low, go high, or do nothing. External Match (EMR) controls the functionality of this output. You can select the match output functionality for a number of pins in parallel.

27.4.1 Multiple capture (CAP) and match (MAT) pins

You can configure the pins of the chip to be used for this module. These pins are generally reused, and you can connect several internal module pins selectively. However, you can connect only one internal pin at a time.

NOTE

Match conditions may be used internally without the use of a chip's pin.

27.5 Initialization

See the Chip-specific CTIMER information for the initialization section for more details or steps.

27.6 Application information

[CTIMER register descriptions](#) discusses the following:

- Interval timer for counting internal events
- PWM outputs
- Pulse width demodulator via capture inputs
- Free running timer

27.7 CTIMER register descriptions

27.7.1 CTIMER memory map

CTIMER0 base address: 4000_4000h

CTIMER1 base address: 4000_5000h

CTIMER2 base address: 4000_6000h

CTIMER3 base address: 4000_7000h

CTIMER4 base address: 4000_8000h

Offset	Register	Width (In bits)	Access	Reset value
0h	Interrupt (IR)	32	RW	See section
4h	Timer Control (TCR)	32	RW	See section
8h	Timer Counter (TC)	32	RW	0000_0000h
Ch	Prescale (PR)	32	RW	0000_0000h
10h	Prescale Counter (PC)	32	RW	0000_0000h
14h	Match Control (MCR)	32	RW	See section
18h - 24h	Match (MR0 - MR3)	32	RW	0000_0000h
28h	Capture Control (CCR)	32	RW	See section
2Ch - 38h	Capture (CR0 - CR3)	32	R	0000_0000h
3Ch	External Match (EMR)	32	RW	See section

Table continues on the next page...

Table continued from the previous page...

Offset	Register	Width (In bits)	Access	Reset value
70h	Count Control (CTCR)	32	RW	See section
74h	PWM Control (PWMC)	32	RW	See section
78h - 84h	Match Shadow (MSR0 - MSR3)	32	RW	0000_0000h

27.7.2 Interrupt (IR)


Offset

Register	Offset
IR	0h

Function

Provides flags for match interrupts and capture interrupts. If an interrupt is generated, it sets the corresponding flag in this register. Otherwise, the flag remains cleared. Writing 1 to the corresponding IR field resets the interrupt. Writing 0 has no effect. Clearing an interrupt for a timer match also clears any corresponding DMA request. You can write to this register to clear interrupts, and can read this register to identify which interrupt sources are pending.

Diagram

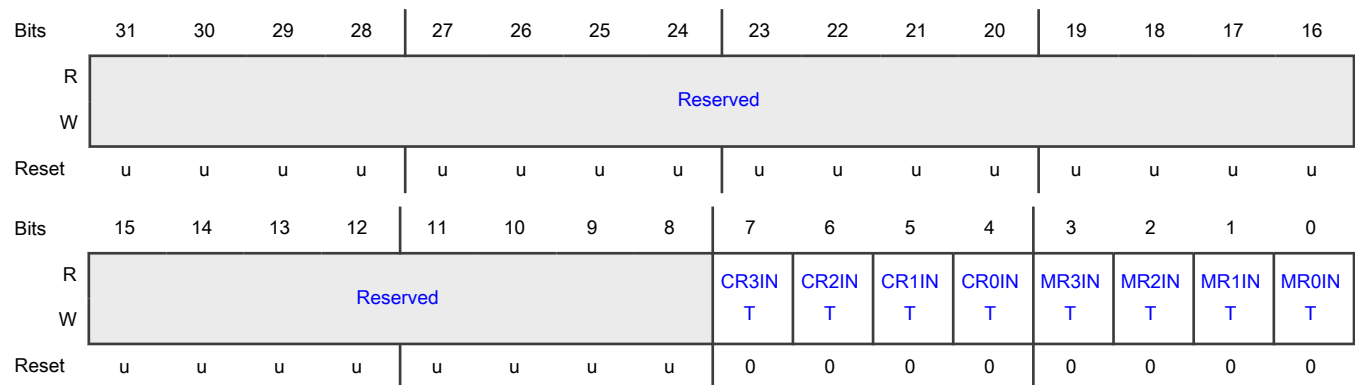

Fields

Field	Function
31-8 —	Reserved
7-4 CRnINT	Interrupt Flag for Capture Channel n Event Controls an interrupt flag for capture channel <i>n</i> events.

Table continues on the next page...

Table continued from the previous page...

Field	Function
3-0 MRnINT	Interrupt Flag for Match Channel n Event Controls an interrupt flag for match channel <i>n</i> events.

27.7.3 Timer Control (TCR)


Offset

Register	Offset
TCR	4h

Function

Controls timer counter functions. You can disable or reset [Timer Counter \(TC\)](#) by using this register.

Diagram

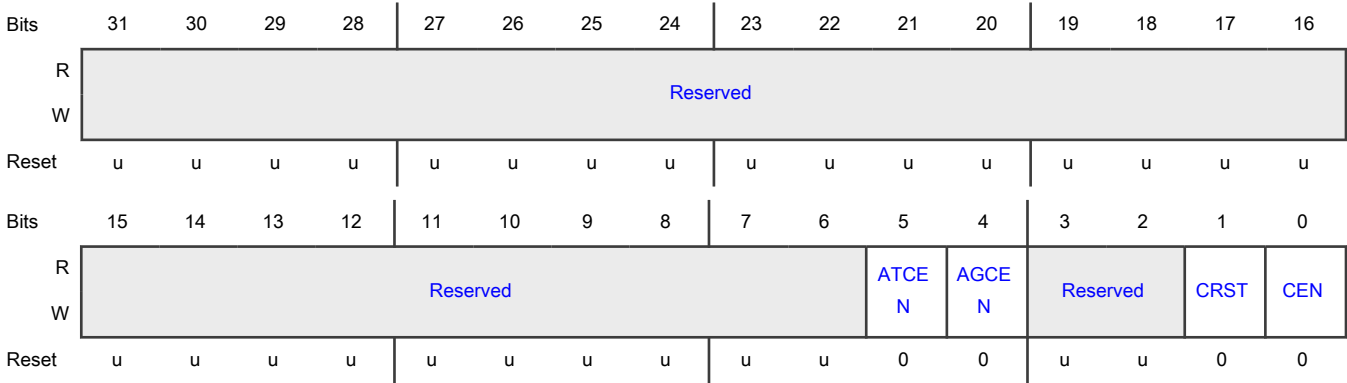

Fields

Field	Function
31-6 —	Reserved
5 ATCEN	Allow Trigger Count Enable Enables the input trigger. If this field is 1, it allows the input trigger_enable = 1 action to take effect (see External trigger enable). If this field is 0, the action is not allowed. 0b - Disable 1b - Enable
4 AGCEN	Allow Global Count Enable

Table continues on the next page...

Table continued from the previous page...

Field	Function
	Enables the global count. If this field is 1, it allows the input global_enable = 1 action to take effect. If this field = 0, the action is not allowed. 0b - Disable 1b - Enable
3-2 —	Reserved
1 CRST	Counter Reset Enable Enables the counter reset. If this field is 1, Timer Counter (TC) and Prescale Counter (PC) are synchronously reset after the next positive edge of the CTIMER function clock. The counters remain reset until this field becomes 0. If this field is 0, no effect takes place. 0b - Disable 1b - Enable
0 CEN	Counter Enable Enables the counters. If this field is 1, Timer Counter (TC) and Prescale Counter (PC) are enabled. When an external trigger enables the timer or the external global start enable register enables it, this field becomes 1 automatically. 0b - Disable 1b - Enable

27.7.4 Timer Counter (TC)

Offset

Register	Offset
TC	8h


Function

Specifies the timer counter.

This register is incremented when [Prescale Counter \(PC\)](#) reaches its terminal count. Unless it is reset before reaching its upper limit, [Timer Counter \(TC\)](#) counts up through the value FFFF_FFFFh, and then wraps back to the value 0000_0000h. This event does not cause an interrupt, but you can use [Match \(MR0 - MR3\)](#) to detect an overflow if needed.

[Timer Counter \(TC\)](#) is incremented after every [Prescale \(PR\)](#) + 1 cycle of the CTIMER function clock. [Timer Control \(TCR\)](#) controls the functioning of this register.

Diagram

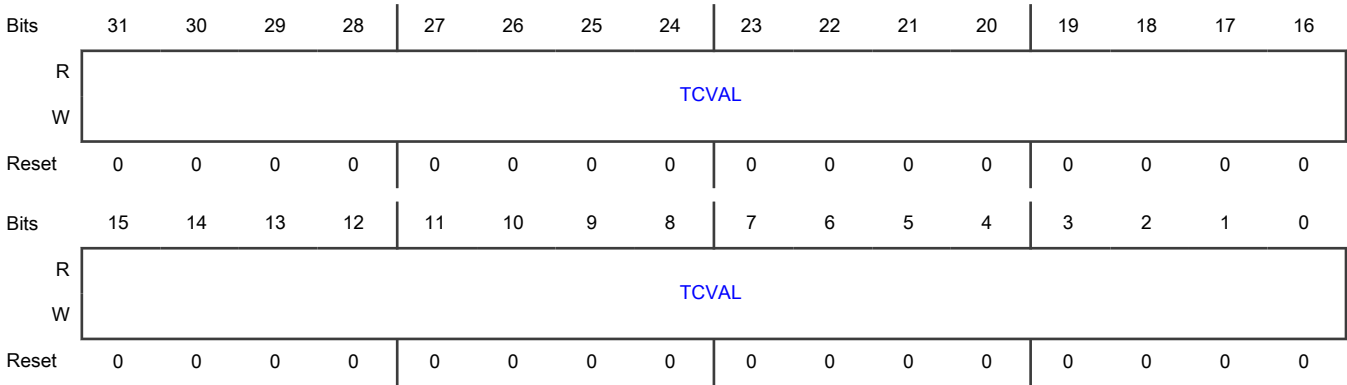

Fields

Field	Function
31-0	Timer Counter Value
TCVAL	Specifies the value of the timer counter.

27.7.5 Prescale (PR)

Offset


Register	Offset
PR	Ch

Function

Specifies the prescale value.

If [Prescale Counter \(PC\)](#) is equal to the prescale value, the next clock timer increments [Timer Counter \(TC\)](#) and turns the value of [Prescale Counter \(PC\)](#) to 0.

Diagram

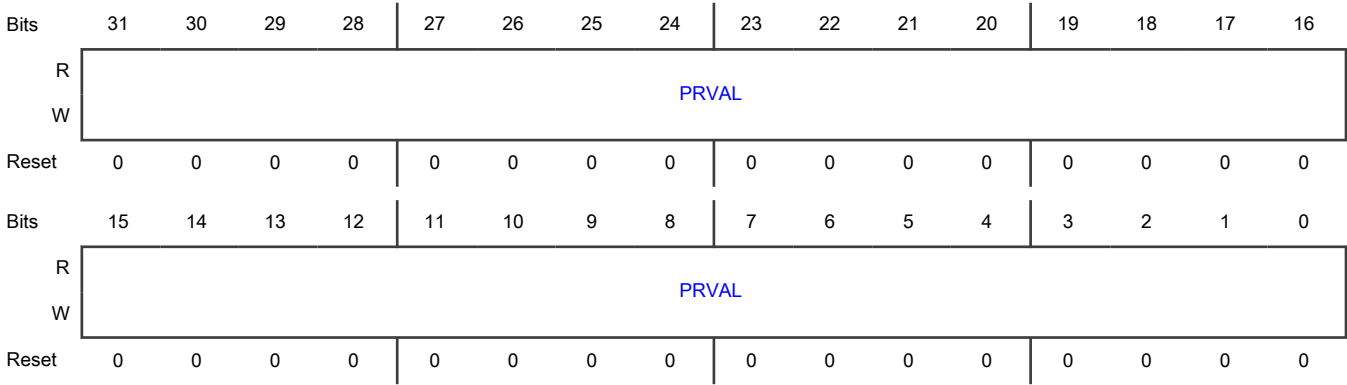

Fields

Field	Function
31-0 PRVAL	Prescale Reload Value Specifies the value of the prescale reload.

27.7.6 Prescale Counter (PC)

Offset

Register	Offset
PC	10h


Function

Controls the division of the CTIMER function clock by some constant value before it is applied to [Timer Counter \(TC\)](#). This allows control of the relationship between the resolution of the timer and the maximum time before the timer overflows.

[Prescale Counter \(PC\)](#) is incremented on every CTIMER function clock. When it reaches the value stored in [Prescale \(PR\)](#), [Timer Counter \(TC\)](#) is incremented and [Prescale Counter \(PC\)](#) is reset on the next CTIMER function clock. This causes [Timer Counter \(TC\)](#) to increment on every CTIMER function clock when [Prescale \(PR\)](#) = 0, every two CTIMER function clocks when [Prescale \(PR\)](#) = 1, and so on.

You can use the bus interface to observe and control [Prescale Counter \(PC\)](#).

Diagram

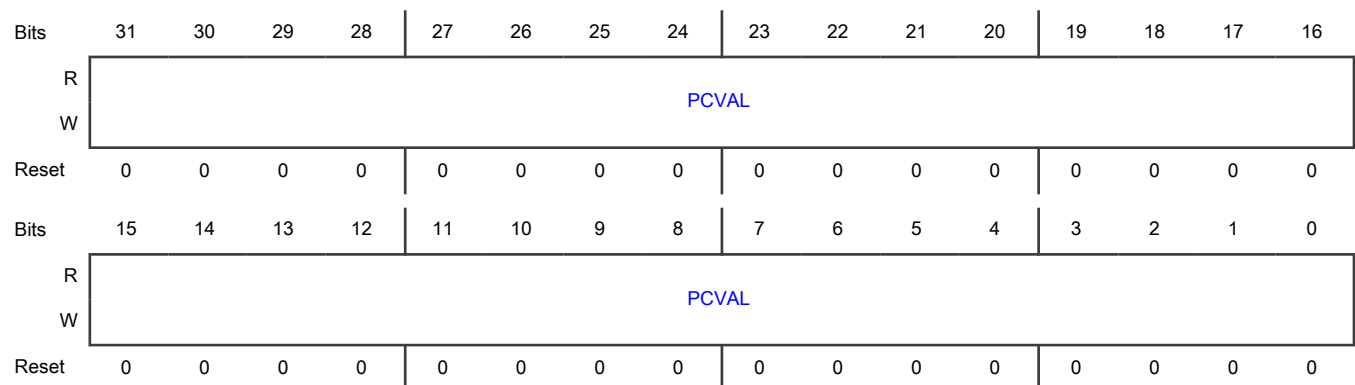

Fields

Field	Function
31-0 PCVAL	Prescale Counter Value Specifies the value of the prescale counter.

27.7.7 Match Control (MCR)

Offset

Register	Offset
MCR	14h

Function

Controls the operations that are performed when one of the match registers ([Match \(MR0 - MR3\)](#)) matches [Timer Counter \(TC\)](#).

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R					MR3R	MR2R	MR1R	MR0R								
W	Reserved				L	L	L	L	Reserved							
Reset	u	u	u	u	0	0	0	0	u	u	u	u	u	u	u	u
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R					MR3S	MR3R	MR3I	MR2S	MR2R	MR2I	MR1S	MR1R	MR1I	MR0S	MR0R	MR0I
W	Reserved															
Reset	u	u	u	u	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-28 —	Reserved
27-24 MRnRL	Reload MR Reloads with the contents of the match n shadow register (see Match Shadow (MSR0 - MSR3)) when Timer Counter (TC) is reset to zero (either via a match event or by writing 1 to TCR[CRST]). 0b - Does not reload 1b - Reloads
23-12 —	Reserved
11 MR3S	Stop on MR3 Stops Timer Counter (TC) and Prescale Counter (PC) , and turns TCR[CEN] to 0 if MR3 matches Timer Counter (TC) . 0b - Does not stop 1b - Stops

Table continues on the next page...

Table continued from the previous page...

Field	Function
10 MR3R	Reset on MR3 Resets Timer Counter (TC) if MR3 matches its value. 0b - Does not reset 1b - Resets
9 MR3I	Interrupt on MR3 Generates an interrupt when MR3 matches the value in Timer Counter (TC) . 0b - Does not generate 1b - Generates
8 MR2S	Stop on MR2 Stops Timer Counter (TC) and Prescale Counter (PC) , and turns TCR[CEN] to 0 if MR2 matches Timer Counter (TC) . 0b - Does not stop 1b - Stops
7 MR2R	Reset on MR2 Resets Timer Counter (TC) if MR2 matches its value. 0b - Does not reset 1b - Resets
6 MR2I	Interrupt on MR2 Generates an interrupt when MR2 matches the value in Timer Counter (TC) . 0b - Does not generate 1b - Generates
5 MR1S	Stop on MR1 Stops Timer Counter (TC) and Prescale Counter (PC) , and turns TCR[CEN] to 0 if MR1 matches Timer Counter (TC) . 0b - Does not stop 1b - Stops
4 MR1R	Reset on MR1 Resets Timer Counter (TC) if MR1 matches its value. 0b - Does not reset 1b - Resets
3 MR1I	Interrupt on MR1 Generates an interrupt when MR1 matches the value in Timer Counter (TC) .

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - Does not generate 1b - Generates
2 MR0S	Stop on MR0 Stops Timer Counter (TC) and Prescale Counter (PC) , and turns TCR[CEN] to 0 if MR0 matches Timer Counter (TC) . 0b - Does not stop 1b - Stops
1 MR0R	Reset on MR0 Resets Timer Counter (TC) if MR0 matches its value. 0b - Does not reset 1b - Resets
0 MR0I	Interrupt on MR0 Generates an interrupt when MR0 matches the value in Timer Counter (TC) . 0b - Does not generate 1b - Generates

27.7.8 Match (MR0 - MR3)

Offset

Register	Offset
MR0	18h
MR1	1Ch
MR2	20h
MR3	24h

Function

Continuously compares the value of [Match \(MR0 - MR3\)](#) with the value of [TC\[TCVAL\]](#). When both the values are equal, actions such as the following can be triggered automatically:

- Generation of an interrupt
- Resetting of [Timer Counter \(TC\)](#)
- Stopping of the timer


The settings defined in [Match Control \(MCR\)](#) control these actions.

If [MCR\[MRnRL\]](#) = 1, [Match \(MR0 - MR3\)](#) is automatically reloaded with the current contents of its corresponding [Match Shadow \(MSR0 - MSR3\)](#) whenever [Timer Counter \(TC\)](#) becomes 0. This transfer takes place on the same clock edge that advances [Timer Counter \(TC\)](#) to 0.

NOTE

Timer Counter (TC) resets in response to an occurrence of a match on MATCH being used to set the cycle counter rate. A reset can also occur if you write 1 to TCR[CRST].

Diagram

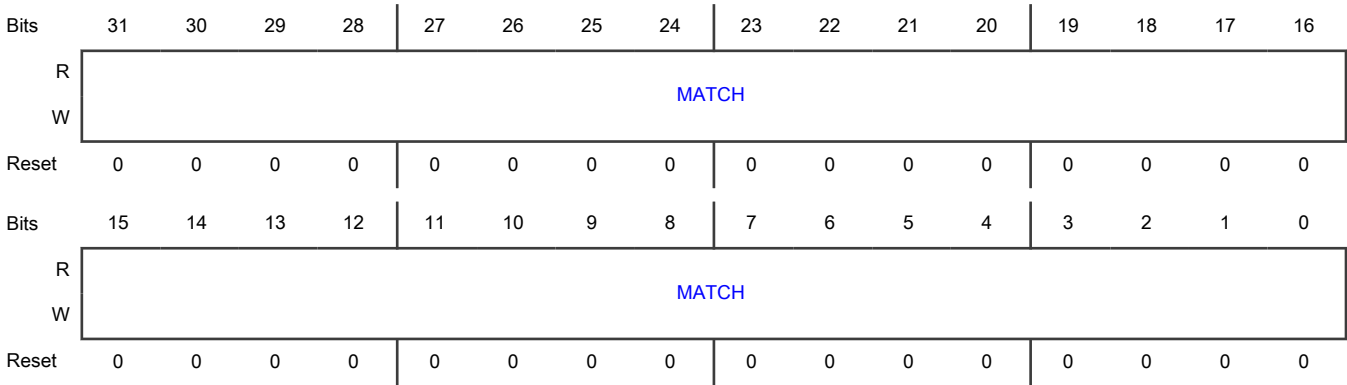

Fields

Field	Function
31-0	Timer Counter Match Value
MATCH	Triggers an action automatically when the value of this field is the same as that of TC[TCVAL].

27.7.9 Capture Control (CCR)

Offset

Register	Offset
CCR	28h


Function

Controls whether one of the capture registers (Capture (CR0 - CR3)) is loaded with the value in Timer Counter (TC) when the capture event occurs. The register also controls whether the capture event generates an interrupt. When you configure both the rising and falling bits at the same time, which is a valid configuration, it results into a capture event for both edges. In the description below, "n" represents the timer number, 0 or 1.

NOTE

If you select Counter mode for a particular CAPn input in Count Control (CTCR), you must program the fields in this register as 0. You can select both capture and interrupt for the other CAPn inputs.

Diagram

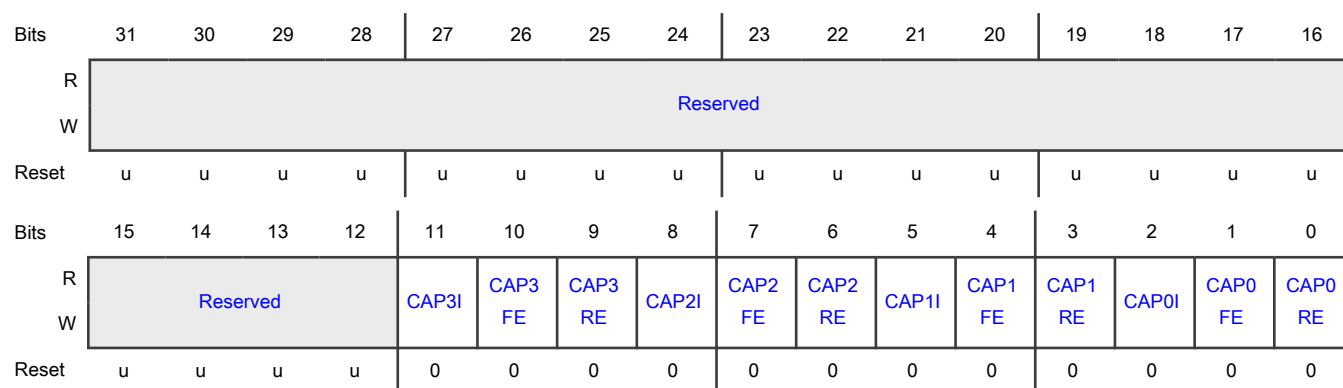

Fields

Field	Function
31-12 —	Reserved
11 CAP3I	Generate Interrupt on Channel 3 Capture Event Generates an interrupt on channel 3 capture event using a CR3 load. 0b - Does not generate 1b - Generates
10 CAP3FE	Falling Edge of Capture Channel 3 Loads CR3 with the contents of Timer Counter (TC) when you write 1 and then 0 to this field. 0b - Does not load 1b - Loads
9 CAP3RE	Rising Edge of Capture Channel 3 Loads CR3 with the contents of Timer Counter (TC) when you write 0 and then 1 to this field. 0b - Does not load 1b - Loads
8 CAP2I	Generate Interrupt on Channel 2 Capture Event Generates an interrupt on channel 2 capture event using a CR2 load. 0b - Does not generate 1b - Generates
7 CAP2FE	Falling Edge of Capture Channel 2 Loads CR2 with the contents of Timer Counter (TC) when you write 1 and then 0 to this field. 0b - Does not load 1b - Loads

Table continues on the next page...

Table continued from the previous page...

Field	Function
6 CAP2RE	Rising Edge of Capture Channel 2 Loads CR2 with the contents of Timer Counter (TC) when you write 0 and then 1 to this field. 0b - Does not load 1b - Loads
5 CAP1I	Generate Interrupt on Channel 1 Capture Event Generates an interrupt on channel 1 capture event using a CR1 load. 0b - Does not generates 1b - Generates
4 CAP1FE	Falling Edge of Capture Channel 1 Loads CR1 with the contents of Timer Counter (TC) when you write 1 and then 0 to this field. 0b - Does not load 1b - Loads
3 CAP1RE	Rising Edge of Capture Channel 1 Loads CR1 with the contents of Timer Counter (TC) when you write 0 and then 1 to this field. 0b - Does not load 1b - Loads
2 CAP0I	Generate Interrupt on Channel 0 Capture Event Generates an interrupt on channel 0 capture event using a CR0 load. 0b - Does not generate 1b - Generates
1 CAP0FE	Falling Edge of Capture Channel 0 Loads CR0 with the contents of Timer Counter (TC) when you write 1 and then 0 to this field. 0b - Does not load 1b - Loads
0 CAP0RE	Rising Edge of Capture Channel 0 Loads CR0 with the contents of Timer Counter (TC) when you write 0 and then 1 to this field. 0b - Does not load 1b - Loads

27.7.10 Capture (CR0 - CR3)

Offset


Register	Offset
CR0	2Ch
CR1	30h
CR2	34h
CR3	38h

Function

Works with a capture channel and may load with the value of [Timer Counter \(TC\)](#) when a specified event occurs on the signal defined for that capture channel. The signal could originate from an external pin or an internal source.

This register determines whether the capture function is enabled, and whether a capture event happens on the rising edge, falling edge, or on both edges of the associated signal. The register is loaded with the value of [Timer Counter \(TC\)](#) when there is an event on the CAP n input.

Diagram

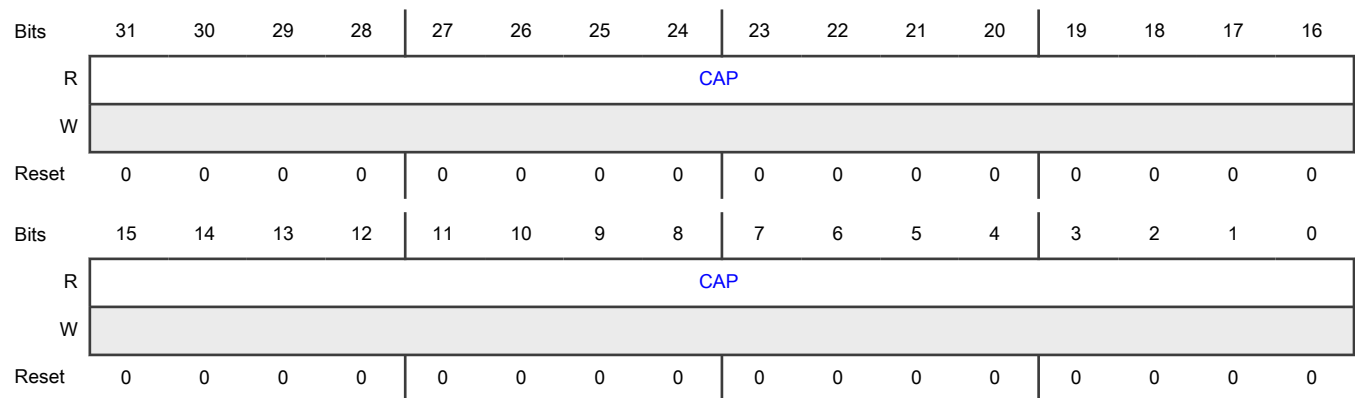

Fields

Field	Function
31-0	Timer Counter Capture Value
CAP	Determines whether the capture function is enabled and defines the edge on which the capture function occurs.

27.7.11 External Match (EMR)

Offset

Register	Offset
EMR	3Ch

Function

Provides both control and status of the external match pins. If the match outputs (see [Match mode](#)) are configured as PWM outputs, PWM rules determine the function of this register.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	Reserved															
W																
Reset	u	u	u	u	u	u	u	u	u	u	u	u	u	u	u	u
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserved				EMC3		EMC2		EMC1		EMC0		EM3	EM2	EM1	EM0
W																
Reset	u	u	u	u	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-12 —	Reserved
11-10 EMC3	External Match Control 3 Determines the functionality of EM3 : - If this field is 1, the corresponding external match field or output becomes 0 (if pinned out MAT3 pin is low). - If this field is 10, the corresponding external match field or output becomes 1 (if pinned out MAT3 pin is high). - If this field is 11, it toggles the corresponding external match field or output. 00b - Does nothing 01b - Goes low 10b - Goes high 11b - Toggles
9-8 EMC2	External Match Control 2 Determines the functionality of EM2 : - If this field is 1, the corresponding external match field or output becomes 0 (if pinned out MAT2 pin is low). - If this field is 10, the corresponding external match field or output becomes 1 (if pinned out MAT2 pin is high). - If this field is 11, it toggles the corresponding external match field or output. 00b - Does nothing

Table continues on the next page...

Table continued from the previous page...

Field	Function
	01b - Goes low 10b - Goes high 11b - Toggles
7-6 EMC1	External Match Control 1 Determines the functionality of EM1 : • If this field is 1, the corresponding external match field or output becomes 0 (if pinned out MAT1 pin is low). • If this field is 10, the corresponding external match field or output becomes 1 (if pinned out MAT1 pin is high). • If this field is 11, it toggles the corresponding external match field or output. 00b - Does nothing 01b - Goes low 10b - Goes high 11b - Toggles
5-4 EMC0	External Match Control 0 Determines the functionality of EM0 : • If this field is 1, the corresponding external match field or output becomes 0 (if pinned out MAT0 pin is low). • If this field is 10, the corresponding external match field or output becomes 1 (if pinned out MAT0 pin is high). • If this field is 11, it toggles the corresponding external match field or output. 00b - Does nothing 01b - Goes low 10b - Goes high 11b - Toggles
3 EM3	External Match 3 Reflects the state of output MAT3—whether this output is connected to a pin. If a match occurs between Timer Counter (TC) and MR3 (see Match (MR0 - MR3)), this field can either toggle, go low, go high, or do nothing, as selected by EMC3 . This field is driven to the MAT pins if the match function is selected via IOPCTL. 0b - Low 1b - High
2 EM2	External Match 2 Reflects the state of output MAT2—whether this output is connected to a pin. If a match occurs between Timer Counter (TC) and MR2 (see Match (MR0 - MR3)), this field can either toggle, go low, go high, or

Table continues on the next page...

Table continued from the previous page...

Field	Function
	do nothing, as selected by EMC2 . This field is driven to the MAT pins if the match function is selected via IOPCTL. 0b - Low 1b - High
1 EM1	External Match 1 Reflects the state of output MAT1—whether this output is connected to a pin. If a match occurs between Timer Counter (TC) and MR1 (see Match (MR0 - MR3)), this field can either toggle, go low, go high, or do nothing, as selected by EMC1 . This field is driven to the MAT pins if the match function is selected via IOPCTL. 0b - Low 1b - High
0 EM0	External Match 0 Reflects the state of output MAT0—whether this output is connected to a pin. If a match occurs between Timer Counter (TC) and MR0 (see Match (MR0 - MR3)), this field can either toggle, go low, go high, or do nothing, as selected by EMC0 . This field is driven to the MAT pins if the match function is selected via IOPCTL. 0b - Low 1b - High

27.7.12 Count Control (CTCR)

Offset

Register	Offset
CTCR	70h

Function

Selects between Timer and Counter mode, and in Counter mode, selects the signal and edges for counting.

When Counter mode is selected as the mode of operation, the CAP input (selected by [CINSEL](#)) is sampled on every rising edge of the CTIMER function clock. After comparing two consecutive samples of this CAP input, one of the following four events is recognized:

- Rising edge
- Falling edge
- Either of the edges
- No change in the selected CAP input level


Only if the identified event occurs and the event corresponds to the one selected by [CTMODE](#), [Timer Counter \(TC\)](#) is incremented.

Effective processing of the externally supplied clock to the counter has some limitations:

- Because two successive rising edges of the CTIMER function clock are used to identify only one edge on the CAP selected input, the frequency of the CAP input cannot exceed one half of the CTIMER function clock.
- Consequently, the duration of the high or low levels on the same CAP input in this case cannot be shorter than the CTIMER function clock duration.

You can also use [ENCC](#) and [SELCC](#) to enable and configure the capture-clears-timer feature. This feature allows for a designated edge on a particular CAP input to reset the timer to all zeros. Using this mechanism to clear the timer on the leading edge of an input pulse and perform a capture on the trailing edge permits direct pulse-width measurement using a single capture input without the need to perform a subtraction operation in software.

Diagram

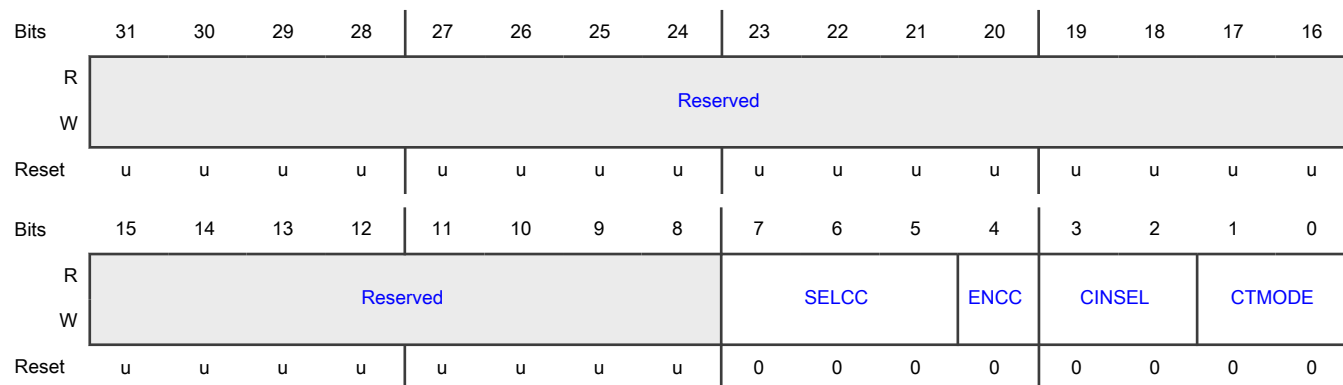

Fields

Field	Function
31-8 —	Reserved
7-5 SELCC	Edge Select Selects which input edge (rising or falling) causes the timer and prescaler to be cleared, when ENCC is 1. These fields have no effect when ENCC is 0. 000b - Capture channel 0 rising edge 001b - Capture channel 0 falling edge 010b - Capture channel 1 rising edge 011b - Capture channel 1 falling edge 100b - Capture channel 2 rising edge 101b - Capture channel 2 falling edge 110b - Capture channel 3 rising edge 111b - Capture channel 3 falling edge
4 ENCC	Capture Channel Enable Enables capture channel. Writing 1 to this field enables clearing of the timer and the prescaler when the capture-edge event specified in SELCC occurs.

Table continues on the next page...

Table continued from the previous page...

Field	Function
3-2 CINSEL	Count Input Select Selects which CAP pin is sampled for clocking when CTMODE is not 0. NOTE If Counter mode is selected for a particular CAPn input in Count Control (CTCR), you must program the corresponding fields for that input in Capture Control (CCR) as 0. However, you can select both capture and interrupt for the other three CAPn inputs in the same timer. 00b - Channel 0, CAPn[0] for CTIMERn 01b - Channel 1, CAPn[1] for CTIMERn 10b - Channel 2, CAPn[2] for CTIMERn 11b - Channel 3, CAPn[3] for CTIMERn
1-0 CTMODE	Counter Timer Mode Selects between Timer and Counter mode, and in Counter mode, selects the signal and edges for counting: • If this field is 0, every rising CTIMER function clock edge is incremented. • If this field is 1, Timer Counter (TC) is incremented on the rising edges of the CAP input selected by CINSEL. • If this field is 10, Timer Counter (TC) is incremented on the falling edges of the CAP input selected by CINSEL. • If this field is 11, Timer Counter (TC) is incremented on both edges of the CAP input selected by CINSEL. 00b - Timer mode 01b - Counter mode rising edge 10b - Counter mode falling edge 11b - Counter mode dual edge

27.7.13 PWM Control (PWMC)

Offset

Register	Offset
PWMC	74h

Function

Configures match outputs (see [Match mode](#)) as PWM outputs. You can independently set each match output to perform either as a PWM output or match output controlled by [External Match \(EMR\)](#).


NOTE

Different part numbers and package variations may provide different match output pin functions.

For each timer, you can select a maximum of three single-edge controlled PWM outputs on the MAT_n[2:0] outputs. One additional match register (see [Match \(MR0 - MR3\)](#)) determines the PWM cycle length. When a match occurs in any of the other match registers, the PWM output is set to high. The match register resets the timer that you can configure to set the PWM cycle length. When the timer is reset to zero, all currently high match outputs configured as PWM outputs are cleared.

This register enables PWM mode for the external match pins.

Diagram

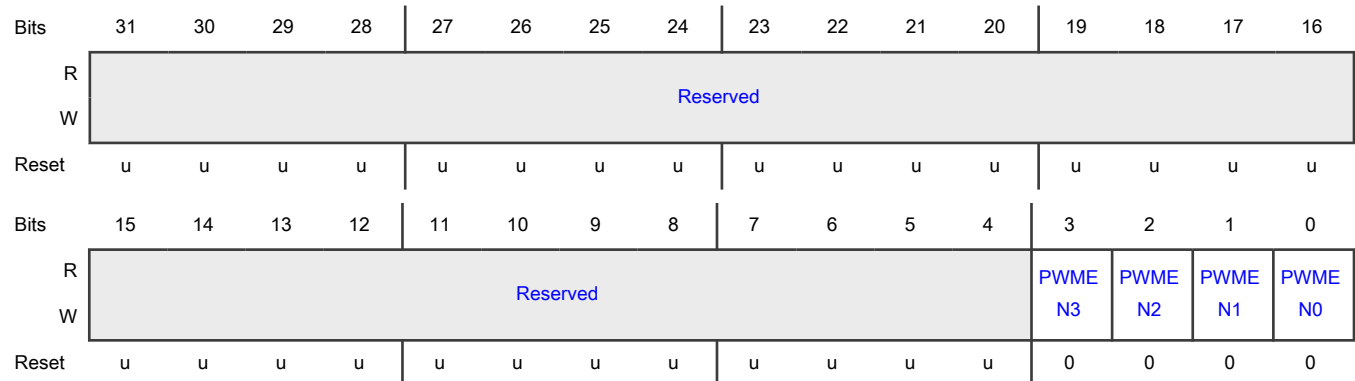

Fields

Field	Function
31-4 —	Reserved
3 PWMEN3	PWM Mode Enable for Channel 3 Enables PWM mode for channel 3. Use match channel 3 to set the PWM cycle length. If this field is 0, EM3 controls CTIMER _n _MAT3. If this field is 1, PWM mode is enabled for CTIMER _n _MAT3. 0b - Disable 1b - Enable
2 PWMEN2	PWM Mode Enable for Channel 2 Enables PWM mode for channel 2. If this field is 0, EM2 controls CTIMER _n _MAT2. If this field is 1, PWM mode is enabled for CTIMER _n _MAT2. 0b - Disable 1b - Enable
1 PWMEN1	PWM Mode Enable for Channel 1 Enables PWM mode for channel 1. If this field is 0, EM1 controls CTIMER _n _MAT1. If this field is 1, PWM mode is enabled for CTIMER _n _MAT1. 0b - Disable 1b - Enable
0	PWM Mode Enable for Channel 0

Table continues on the next page...

Table continued from the previous page...

Field	Function
PWMEN0	Enables PWM mode for channel 0. If this field is 0, EMO controls CTIMER n _MAT0. If this field is 1, PWM mode is enabled for CTIMER n _MAT0. 0b - Disable 1b - Enable

27.7.14 Match Shadow (MSR0 - MSR3)


Offset

Register	Offset
MSR0	78h
MSR1	7Ch
MSR2	80h
MSR3	84h

Function

Contains the value that the corresponding **Match (MR0 - MR3)** are (optionally) reloaded with at the start of each new counter cycle. Typically, the match that causes the counter to be reset (and instigates the match reload) is also programmed to generate an interrupt or DMA request. Software or the DMA engine then has one full counter cycle to modify the contents of this register before the next reload occurs.

Diagram

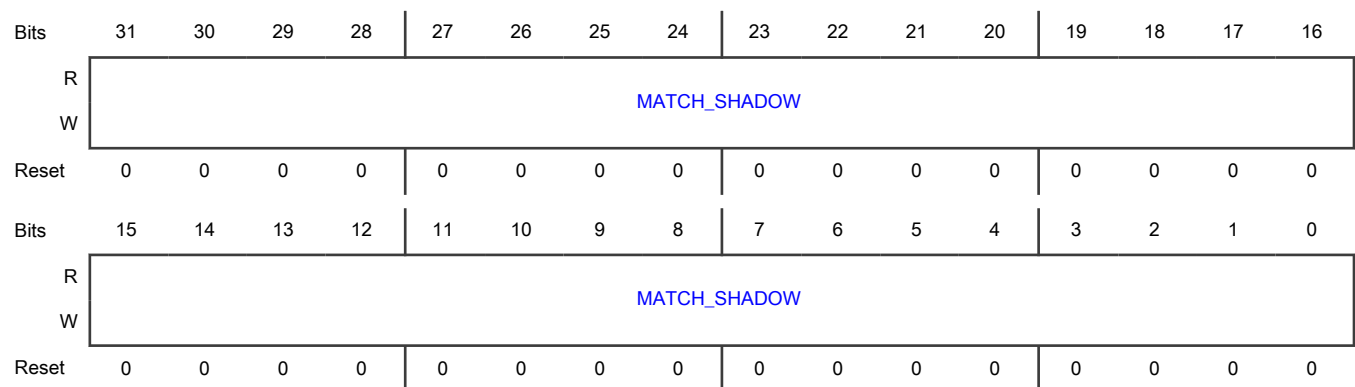

Fields

Field	Function
31-0	Timer Counter Match Shadow Value
MATCH_SHADOW	Reloads automatically with the contents of this register whenever Timer Counter (TC) is reset to zero.

Chapter 28

Windowed Watchdog Timer (WWDT)

28.1 Chip-specific WWDT information

Table 188. Reference links to related information

Topic	Related module	Reference
Full description	WWDT	WWDT
System memory map		Memory map
Clocking		Clock distribution
Power Management		Power Management
Signal multiplexing	Port control	Signal multiplexing

28.1.1 Module instances

This device has one instance of the WWDT module, WWDT0.

28.1.2 LOCK function

WWDT supports lock function. Once WWDT is locked, WWDT configuration, including clock, can't be changed.

28.2 Overview

WWDT helps you reset or interrupt a microcontroller within a programmable time, if the microcontroller (or core) is stuck in an infinite loop or is executing an unintended code. If an application fails to reload or feed a watchdog timer within the predefined duration of time, it generates a watchdog reset (if enabled).

28.2.1 Block diagram

In the following WWDT block diagram, the synchronization logic (APB bus clock to WDCLK) is not shown. See the chip-specific WWDT information section or clocking chapter for more details.

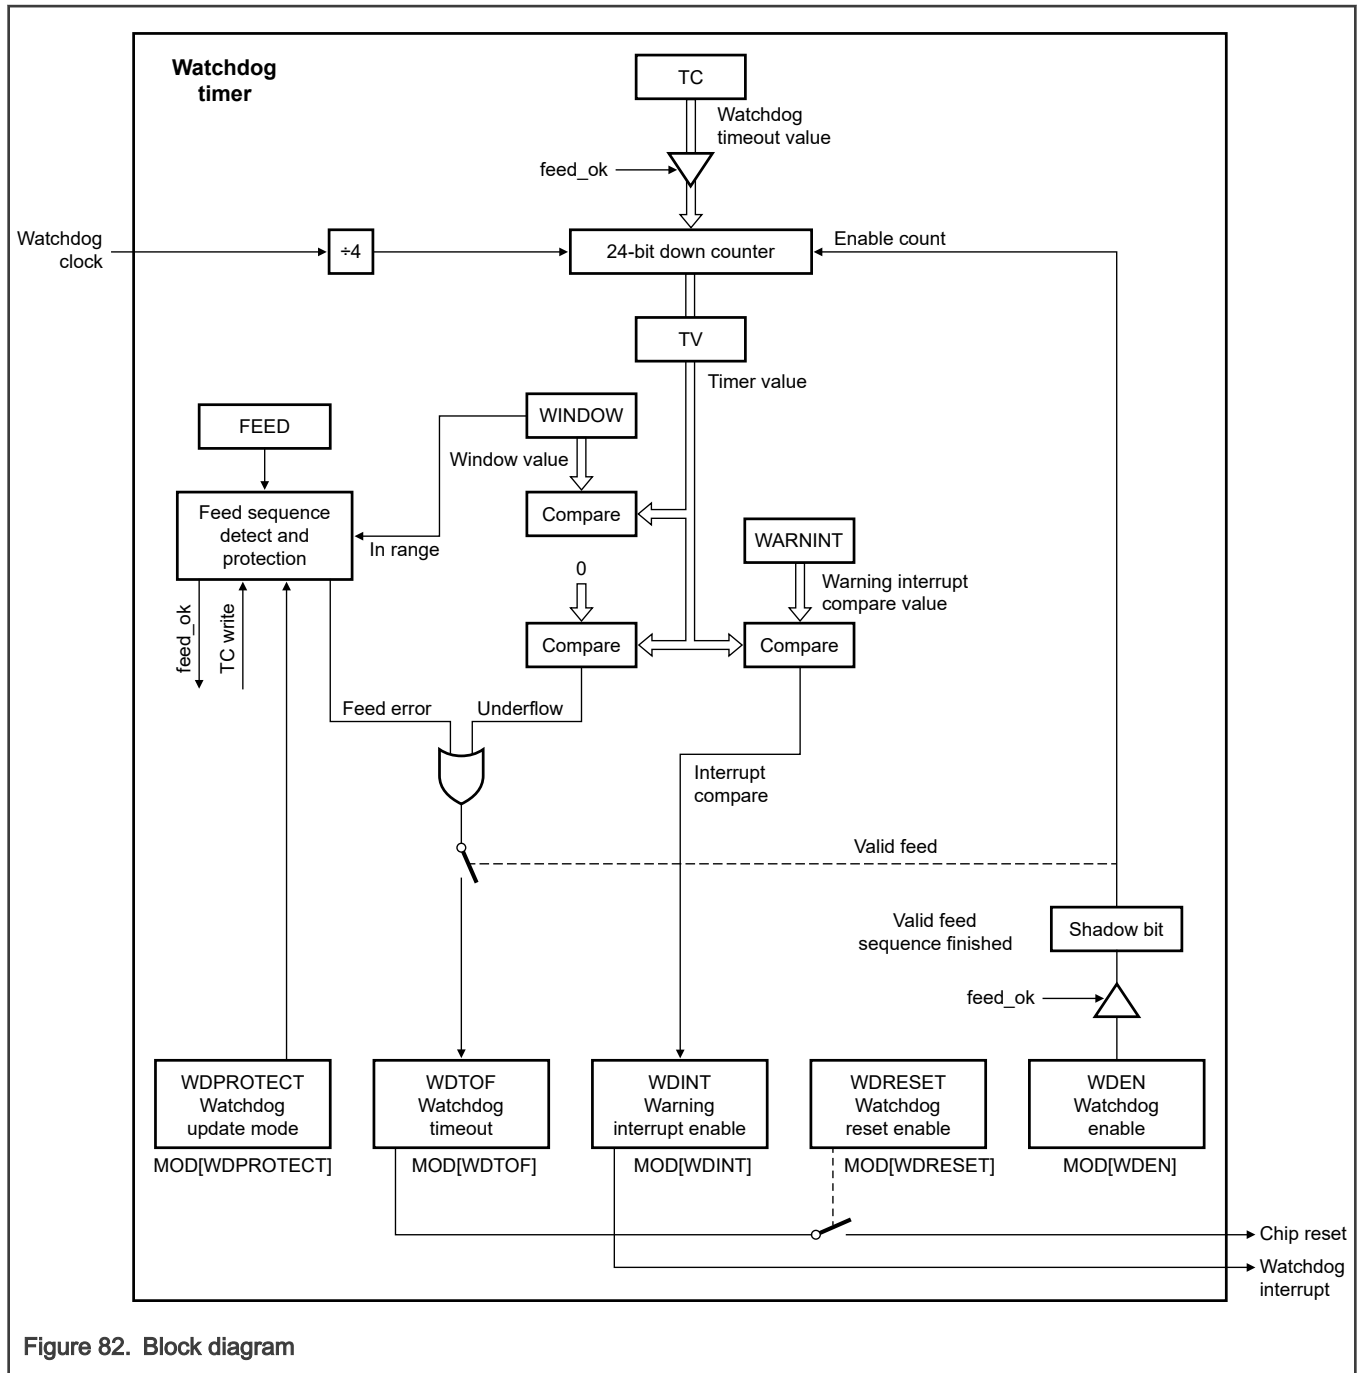


Figure 82. Block diagram

28.2.2 Features

- Can reset or interrupt the microcontroller within a programmable time
- Watchdog reset indication flag
- Clocking features:
 - Programmable 24-bit timer with an internal fixed (divided by 4) prescaler
 - Selectable time period in increments of four watchdog clocks: From 1024 watchdog clocks ($T_{WDCLK} \times 256 \times 4$) to over 67 million watchdog clocks ($T_{WDCLK} \times 2^{24} \times 4$)

- Watchdog clock (WDCLK) source having a selectable frequency in the range of 6 kHz to 1.5 MHz (see the chip-specific information section and the Clocking chapter for detailed setting in this device)
- Can be configured to run in Low-Power mode (see the chip-specific information section and the Power Management chapter for detailed setting in this device)
- Other configurable features:
 - Windowed operation requiring a watchdog reload to occur between a programmable minimum and maximum timeout period
 - Generation of a warning interrupt at a programmable time before watchdog timeout
 - Protection of the watchdog reload value so that you can change it only after the warning interrupt time is reached

28.3 Functional description

When you program a watchdog window (a timing window), an early watchdog reload is also treated as a watchdog event, which prevents situations where a system failure may still reload the watchdog timer. For example, the application code could be stuck in an interrupt service that contains a watchdog reload (feed). You must set the timing window in a way that this situation causes an early watchdog timer reload, which generates a watchdog event, and then enables the system to recover from this situation.

WWDT consists of a fixed (divided by 4) prescaler and a 24-bit counter. The minimum value of the counter is FFh; if you write a value lower than FFh, the counter automatically loads with the value FFh.

- Minimum watchdog interval is $(T_{WDCLK} \times 256 \times 4)$.
- Maximum watchdog interval is $(T_{WDCLK} \times 2^{24} \times 4)$ in multiples of $(T_{WDCLK} \times 4)$.

28.3.1 Operating modes

This section describes all functional operating modes of the WWDT module: Disabled, Watchdog Interrupt, and Watchdog Reset.

Table 189. Watchdog operating modes selection

MOD[WDEN]	MOD[WDRESET]	Mode	Mode description
0	X (0 or 1)	Disabled	Debugs or operates without the watchdog running.
1	0	Watchdog Interrupt	Generates a watchdog warning interrupt but does not enable the watchdog reset. A watchdog counter equal to the value of WARNINT[WARNINT] sets MOD[WDINT] and generates a watchdog interrupt request.
1	1	Watchdog Reset	Enables both the watchdog interrupt and watchdog reset: • A watchdog counter equal to the value of WARNINT[WARNINT] sets MOD[WDINT] and generates a watchdog interrupt request. • A watchdog counter equal to 0 resets the microcontroller. • A watchdog feed before reaching the value of WINDOW[WINDOW] also causes a watchdog reset.

28.3.2 Example timing diagrams to show WWDT in operation


A feed is correct when both of the following conditions are true:

- A valid feed sequence completes, writing AAh followed by 55h to [FEED\[FEED\]](#).
- The value of [TV\[COUNT\]](#) is not greater than the value of [WINDOW\[WINDOW\]](#).

If either of these conditions is not true, a feed error occurs.

In the correct watchdog feed with Windowed mode enabled, the sequence of writing AAh followed by 55h occurs when the counter value (11FC_h) is not greater than the value of WINDOW[WINDOW] (1200_h). It is a correct feed (reload) event. After the correct feed event occurs, the watchdog counter reloads with the TC[COUNT] value (2000_h).


In addition to the above two conditions, when MOD[WDPROTECT] = 1, the watchdog counter must not be greater than the value of WARNINT[WARNINT] for a correct feed to occur. See the following figure for a pictorial representation.

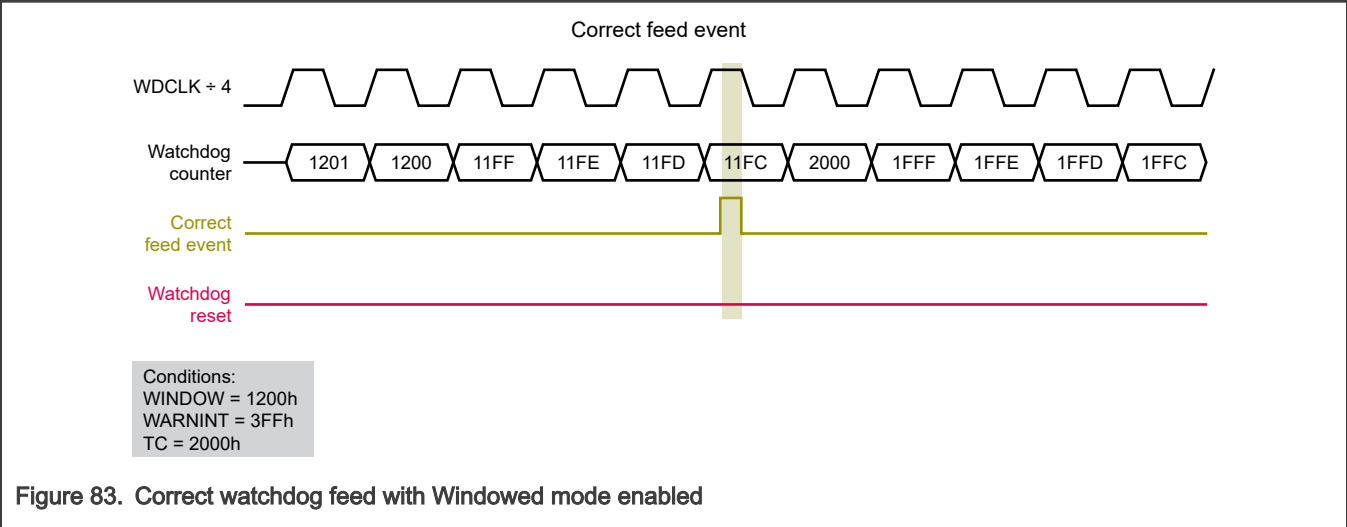


A correct feed sequence can only occur when the value of TV[COUNT] is not greater than the value of WINDOW[WINDOW] (1200_h). Otherwise, a feed error occurs.

The following figure shows a reset trigger when you feed the watchdog too early.

An early feed event occurs if the feed sequence occurs when the watchdog counter value (1257_h) is greater than the value of WINDOW[WINDOW] (1200_h). This feed error can generate a reset if MOD[WDTRESET] = 1.

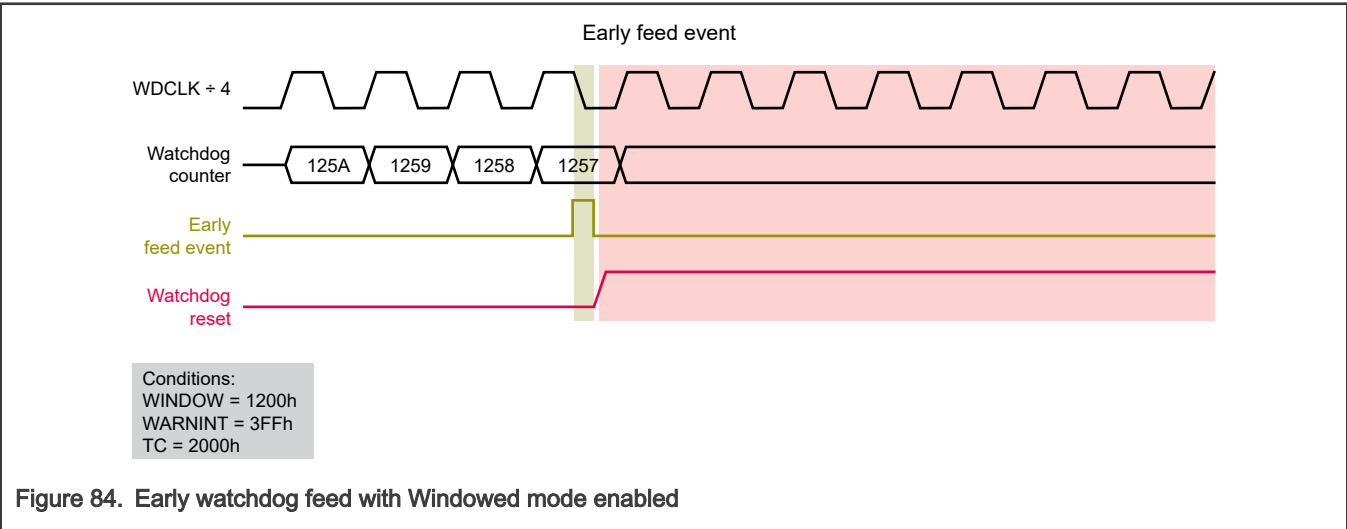

The following figure shows WWDT generating a warning.

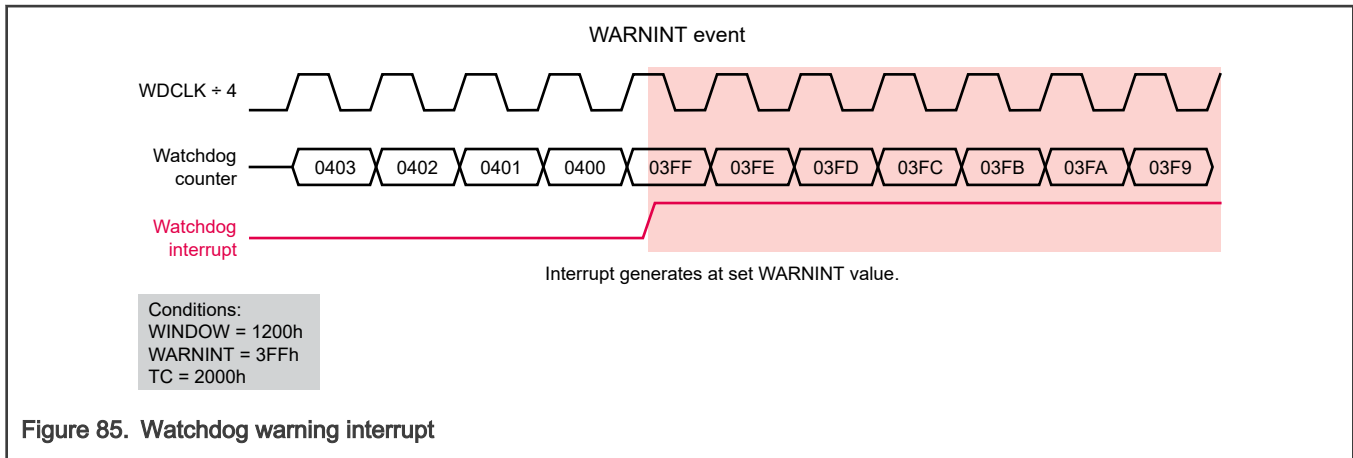

28.3.3 Clocking

WWDT uses two clocks: APB bus clock and WDCLK.

- The system clock derives the APB bus clock that is used for APB accesses to the watchdog registers.
- The watchdog oscillator derives WDCLK that is used for watchdog timer counting.

The synchronization logic between the two clock domains works as follows:

- When updating [Mode \(MOD\)](#) and [Timer Constant \(TC\)](#), the new value takes effect in three WDCLK cycles on the logic in the WDCLK clock domain.
- When the watchdog timer is counting on WDCLK, the synchronization logic first locks the value of the counter on WDCLK and then synchronizes it with the APB bus clock, so that the CPU can read [Timer Value \(TV\)](#).

NOTE

Because of the synchronization step, you must add a delay of three WDCLK clock cycles between the feed sequence and the time that you take to enable the functionality of [MOD\[WDPROTECT\]](#). The length of the delay depends on the selected watchdog clock, WDCLK.

28.3.4 Using the WWDT lock

WWDT supports lock features to ensure continuous operation. These features prevent:

- The disabling of the WWDT clock source.
- The changing of the WWDT reload value.

28.3.4.1 Preventing the disabling of the WWDT clock source

If [MOD\[LOCK\]](#) = 1, the WWDT clock source is locked. You cannot disable the clock source when entering Sleep or Deep-Sleep modes. Therefore, enable the watchdog oscillator for each Power mode before writing 1 to [MOD\[LOCK\]](#).

28.3.4.2 Preventing the changing of the WWDT reload value

If [MOD\[WDPROTECT\]](#) = 1, then any attempt to change the value of [TC\[COUNT\]](#) with a feed sequence, before the watchdog counter value becomes less than the values of [WARNINT\[WARNINT\]](#) and [WINDOW\[WINDOW\]](#), sets [MOD\[WDTOF\]](#) and causes a watchdog reset.

Any type of reset disables the reload overwrite lock mechanism.

28.4 External signals

This module has no external signals.

28.5 Initialization

Perform the following steps to initialize WWDT:

1. Enable and configure the watchdog oscillator.
2. Set the watchdog timer constant reload value using [TC\[COUNT\]](#).
3. Set the watchdog timer operating mode using [MOD\[WDPROTECT\]](#).
4. Set a value for the watchdog window time using [WINDOW\[WINDOW\]](#), if the windowed operation is desired.
5. Set a value for the watchdog warning interrupt using [WARNINT\[WARNINT\]](#) and configure the system interrupt controller, if a warning interrupt is desired.
6. Enable the watchdog by writing AAh followed by 55h to [FEED\[FEED\]](#).

To prevent a watchdog event, you must feed or reload WWDT again before the watchdog counter reaches 0. If you set a value for the watchdog window time, then the feed or reload must also occur after the watchdog counter passes the value of [WINDOW\[WINDOW\]](#).

After you configure WWDT in a way that a watchdog event causes a reset ([MOD\[WDRESET\]](#) = 1), or when the counter reaches 0 (it causes a reset), then the microcontroller (or core) is also reset (loading the stack pointer and program counter from the vector table, just like the way it happens for an external reset).

28.6 Memory map and register definition

This section includes the WWDT module memory map and detailed descriptions of all registers.

28.6.1 WWDT register descriptions

28.6.1.1 WWDT memory map

WWDT0 base address: 4000_C000h

Offset	Register	Width (In bits)	Access	Reset value
0h	Mode (MOD)	32	RW	0000_0000h
4h	Timer Constant (TC)	32	RW	0000_00FFh
8h	Feed Sequence (FEED)	32	W	See section
Ch	Timer Value (TV)	32	R	0000_00FFh
14h	Warning Interrupt Compare Value (WARNINT)	32	RW	0000_0000h
18h	Window Compare Value (WINDOW)	32	RW	00FF_FFFFh

28.6.1.2 Mode (MOD)

Offset

Register	Offset
MOD	0h


Function

Controls the operation of WWDT. You must perform a watchdog feed before any changes to this register take effect.

NOTE

After you write 1 to [MOD\[WDEN\]](#), [MOD\[WDPROTECT\]](#), or [MOD\[WDRESET\]](#), you can return those fields to 0 only with an external reset or a WWDT reset. Until those resets occur, writing 0 to the aforementioned fields has no effect.

Diagram

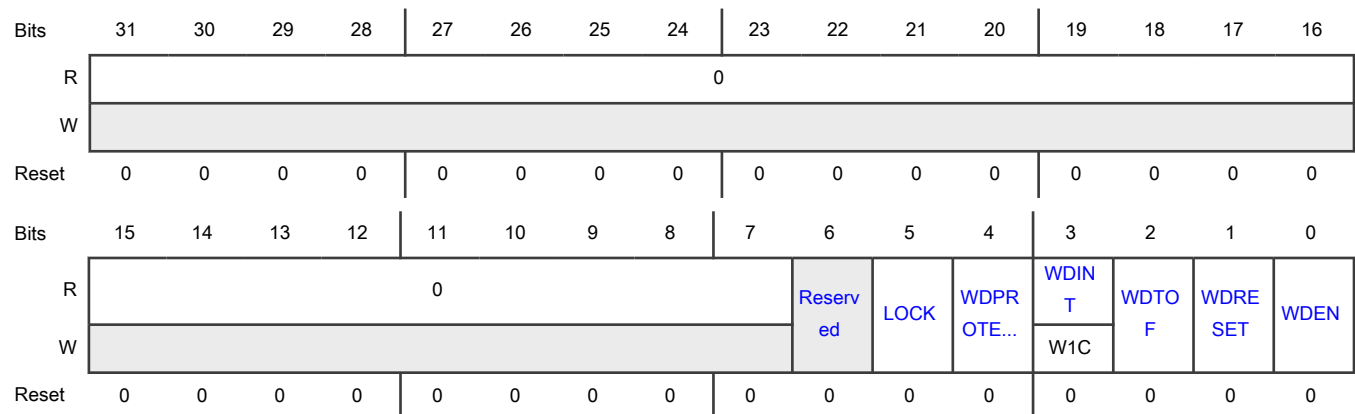

Fields

Field	Function
31-7 —	Reserved
6 —	Reserved
5 LOCK	Lock Prevents disabling or powering down of the watchdog oscillator after you write 1 to this field and perform a watchdog feed. You can write 1 to this field, which can become 0 only with a reset. 0b - No Lock 1b - Lock
4 WDPROTECT	Watchdog Update Mode Protects the value of TC[COUNT] from changing at any time. In Flexible mode (when this field is 0), you can change the value of TC[COUNT] at any time. In Threshold mode (when this field is 1), you can change the value of TC[COUNT] only after the counter is less than the individual values of WARNINT[WARNINT] and WINDOW[WINDOW] . Any attempt to change the value of TC[COUNT] with a feed sequence, before the watchdog counter value becomes less than the values of WARNINT[WARNINT] and WINDOW[WINDOW] , sets MOD[WDTOF] and causes a watchdog reset. You can write 1 to this field, which can become 0 only with a reset (see the note in MOD register).

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - Flexible 1b - Threshold
3 WDINT	Warning Interrupt Flag Sets the flag when the timer is at or below the value defined in WARNINT[WARNINT]. Note that you cannot clear this flag while the value of WARNINT[WARNINT] is equal to the value of TV[COUNT]. This can occur if the value of both WARNINT[WARNINT] and MOD[WDRESET] is 0 when TV[COUNT] decrements to 0. When you configure WWDT to generate a warning interrupt, the interrupt occurs when the counter is no longer greater than the value defined by WARNINT[WARNINT]. If a feed sequence occurs when the watchdog counter value is greater than the value of WINDOW[WINDOW], this flag is set. Any reset clears this flag. 0b - No flag 1b - Flag
2 WDTOF	Watchdog Timeout Flag The bit could be set if: • Watchdog timer timeout has occurred • Feed error has occurred You must clear this flag by writing 0 to it. An external reset or POR clears this flag too. 0b - Watchdog event has not occurred. 1b - Watchdog event has occurred (causes a chip reset if WDRESET = 1).
1 WDRESET	Watchdog Reset Enable Allows a watchdog timeout to cause a chip reset, if this field = 1. After you write 1 to this field, you cannot write 0 to it (see the note in MOD register). NOTE If you write 0 to this field, and after an interrupt occurs, do not write 1 to this field immediately unless you refresh the watchdog. 0b - Interrupt 1b - Reset
0 WDEN	Watchdog Enable Enables or disables the watchdog timer. After writing 1 to this field, perform a watchdog feed (reload) to enable the watchdog timer. After you write 1 to this field, you cannot write 0 to it (see the note in MOD register). 0b - Timer stopped

Table continues on the next page...

Table continued from the previous page...

Field	Function
	1b - Timer running

28.6.1.3 Timer Constant (TC)

Offset


Register	Offset
TC	4h

Function

Specifies the desired timeout value. Transferring the value of this register into the watchdog counter requires a feed sequence. The register resets to 00_00FFh. Writing a value below FFh causes 00_00FFh to load into the register. Therefore, the minimum timeout interval is $T_{WDCLK} \times 256 \times 4$.

If [MOD\[WDPROTECT\]](#) = 1, then any attempt to change the value of this register with a feed sequence, before the watchdog counter value becomes less than the individual values of [WARNINT\[WARNINT\]](#) and [WINDOW\[WINDOW\]](#), sets [MOD\[WDTOF\]](#) and causes a watchdog reset.

Diagram

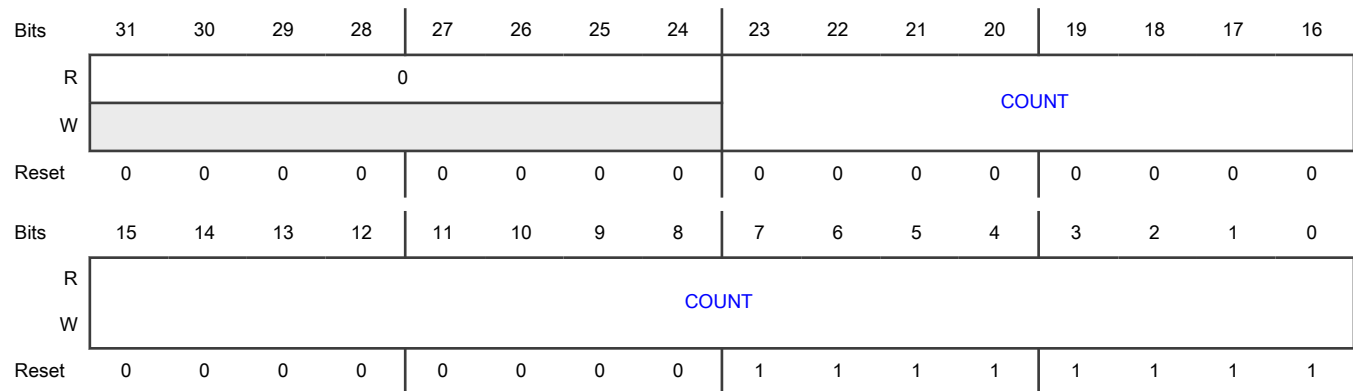

Fields

Field	Function
31-24 —	Reserved
23-0 COUNT	Watchdog Timeout Value Specifies the desired timeout value for WWDT.

28.6.1.4 Feed Sequence (FEED)

Offset

Register	Offset
FEED	8h

Function

Reloads the watchdog timer with the [TC\[COUNT\]](#) value, if you write AAh followed by 55h to [FEED\[FEED\]](#). This operation also starts WWDT, if the watchdog timer is enabled by writing 1 to [MOD\[WDEN\]](#).


However, writing 1 to MOD[WDEN] is not sufficient to enable WWDT. Before the watchdog can generate a reset, MOD[WDEN] must be 1, followed by a valid feed sequence that completes itself. Until then, the watchdog ignores feed errors.

After writing AAh to FEED[FEED], access to any watchdog register other than writing 55h to FEED[FEED] causes an immediate reset or interrupt when WWDT is enabled and sets [MOD\[WDTOF\]](#). An incorrect access to a watchdog register during a feed sequence generates the reset during the second APB bus clock.

To avoid an unintended interrupt, it is a good practice to disable interrupts around a feed sequence. Disable interrupts if they may result in rescheduling processor control away from the current task in the middle of the feed, and then lead to some other access to WWDT before control returns to the interrupted task.

If the value of [WINDOW\[WINDOW\]](#) is less than the default value, it may limit the time for which a watchdog feed is allowed.

Diagram

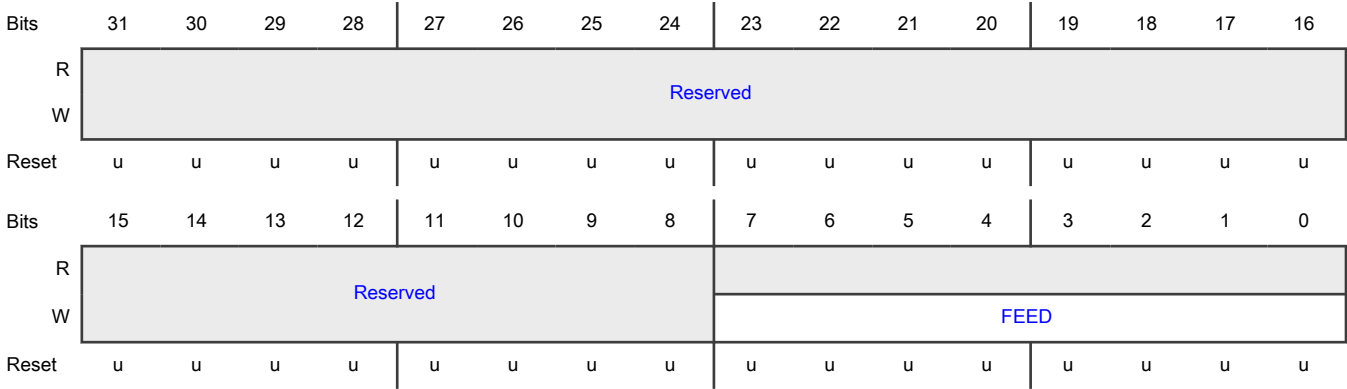

Fields

Field	Function
31-8 —	Reserved
7-0 FEED	Feed Value Specifies feed value. The value must be AAh followed by 55h.

28.6.1.5 Timer Value (TV)


Offset

Register	Offset
TV	Ch

Function

Contains the current value of the WWDT counter. When the core (or CPU) reads this register, the value of this register is older than the actual value of the timer. Reading the timer using the lock and synchronization procedure takes up to six WDCLK cycles plus six APB bus clock cycles.

Diagram

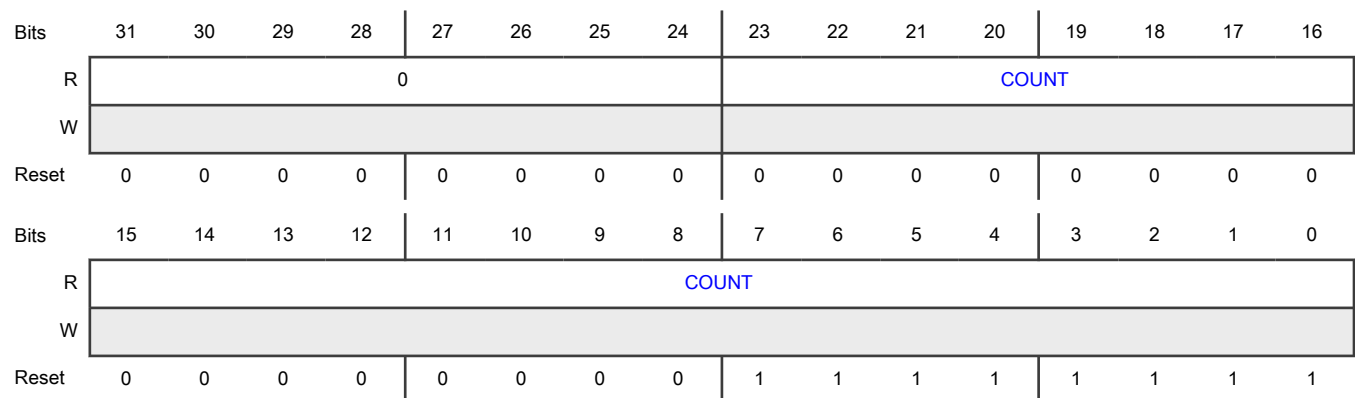

Fields

Field	Function
31-24 —	Reserved
23-0 COUNT	Counter Timer Value Specifies the current value of the watchdog timer.

28.6.1.6 Warning Interrupt Compare Value (WARNINT)

Offset


Register	Offset
WARNINT	14h

Function

Determines the value of [TV\[COUNT\]](#) that generates a watchdog interrupt. When this value is less than or equal to the value defined by WARNINT, an interrupt generates after the subsequent WDCLK.

A match of the WWDT counter to WARNINT occurs when the lower 10 bits of the timer counter have the same value as the lower 10 bits of WARNINT, and the remaining upper bits of the counter are all 0. This gives a maximum time of 1023 watchdog timer counts (4096 watchdog clocks) for the interrupt to occur before a watchdog event. If WARNINT is 0, then the interrupt occurs at the same time as the watchdog event.

Diagram

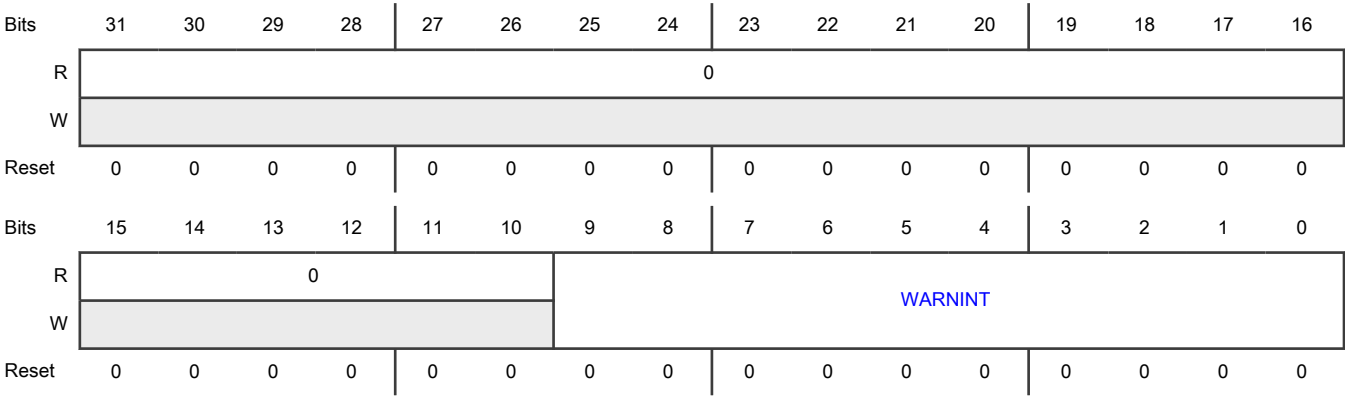

Fields

Field	Function
31-10 —	Reserved
9-0 WARNINT	Watchdog Warning Interrupt Compare Value Specifies a timer value that generates a warning interrupt.

28.6.1.7 Window Compare Value (WINDOW)

Offset


Register	Offset
WINDOW	18h

Function

Determines the highest timer value ([TV\[COUNT\]](#)) allowed during a watchdog feed. If a feed sequence occurs when the value of [TV\[COUNT\]](#) is greater than the value in [WINDOW\[WINDOW\]](#), a watchdog event occurs.

[WINDOW\[WINDOW\]](#) resets to the maximum value of [TV\[COUNT\]](#), where windowing is not in effect.

Diagram

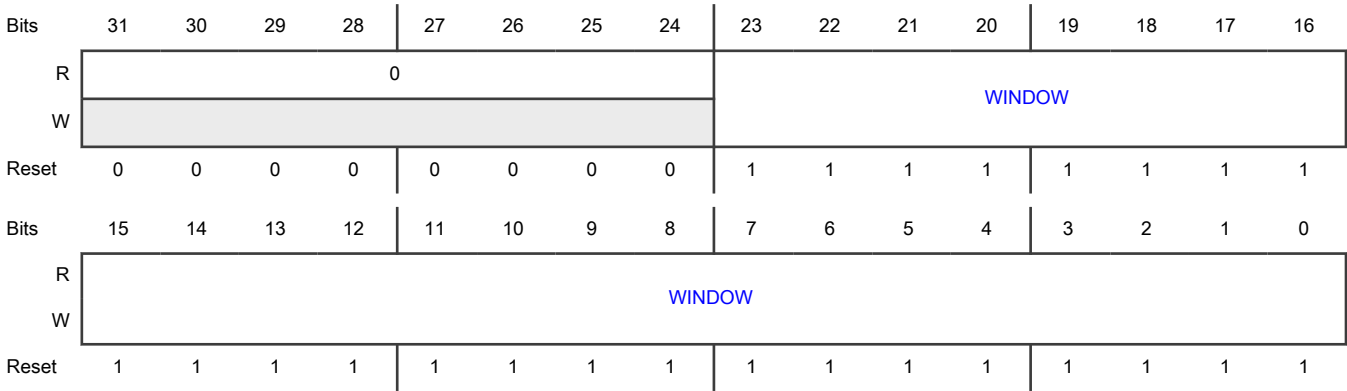

Fields

Field	Function
31-24 —	Reserved
23-0 WINDOW	Watchdog Window Value Specifies the highest timer value in which a watchdog feed can occur.

Chapter 29

Micro-Tick Timer (UTICK)

29.1 Chip-specific UTICK information

Table 190. Reference links to related information

Topic	Related module	Reference
Full description	UTICK	UTICK
System memory map		Memory map
Clocking		Clock distribution
Power Management		Power Management
Signal multiplexing	Port control	Signal multiplexing

29.1.1 Module instances

This device has one instance of the UTICK module, UTICK0.

29.2 Overview

UTICK is a 31-bit timer that counts down to 0 and then generates an interrupt. Thus, it provides a fixed time interval between interrupts. This is a simple, ultra-low-power timer that can run and wake up the chip from Low-power mode. See chip specific information for low power modes UTICK can wakeup.

29.2.1 Block diagram

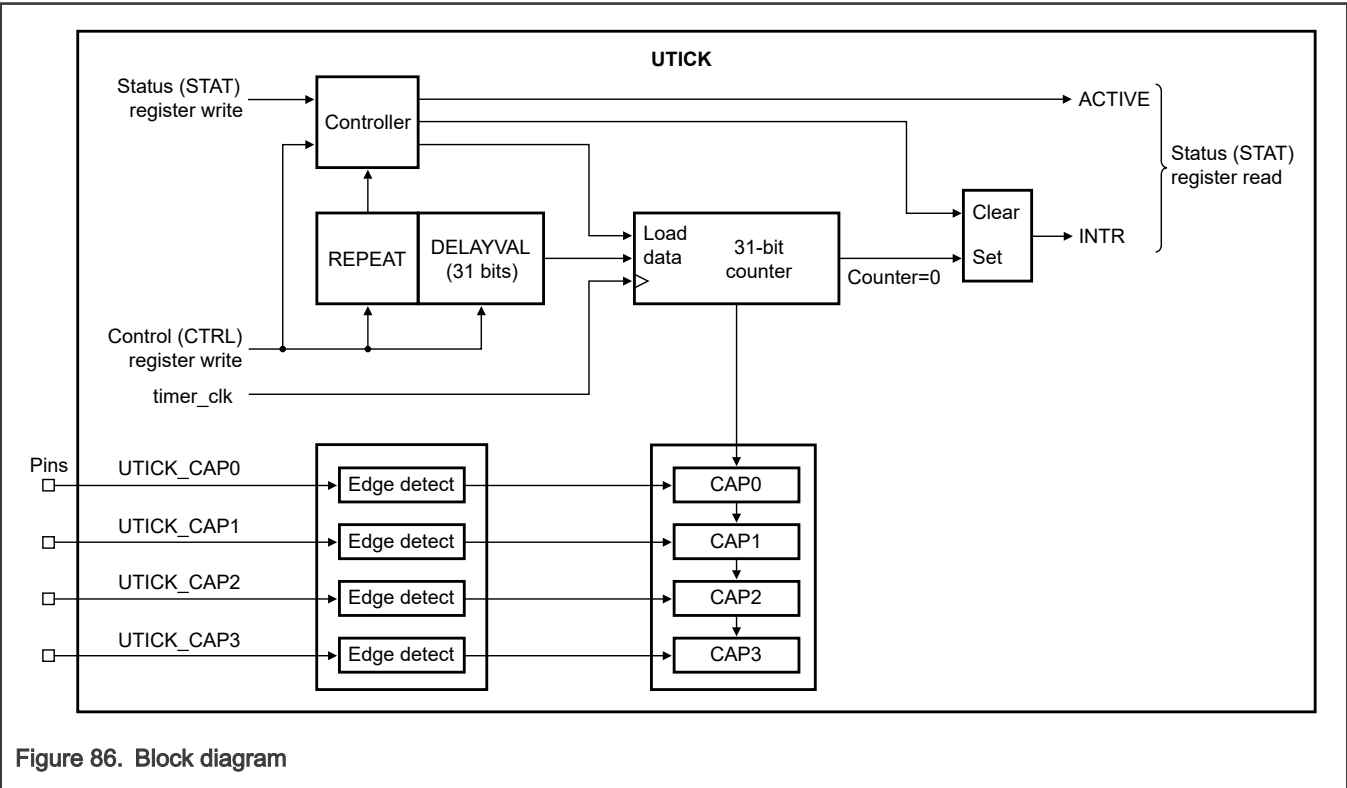


Figure 86. Block diagram

29.2.2 Features

- Wakes up the chip from Low-power mode.
- Starts with a nonzero value written to [CTRL\[DELAYVAL\]](#).
- Operates using interrupt or software polling mode.
- Includes [Capture \(CAP0 - CAP3\)](#) registers that use external pin transitions as a trigger.

29.3 Functional description

29.3.1 Operations

Perform the following procedure before using UTICK:

1. Configure [CTRL\[REPEAT\]](#) to either perform a one-time delay or continuous delay.
2. Configure [CTRL\[DELAYVAL\]](#) to specify the delay time value in terms of the timer clock.
3. Configure [CFG\[CAPEN_n\]](#) to decide the number of events to capture (the maximum is four).
4. Configure [CFG\[CAPPOL_n\]](#) to capture the polarity (whether to capture on a positive or negative edge of a signal).

29.3.2 Clocking

The UTICK clock is selectable from the following clock inputs:

Table 191. Clocking

Clock	Description
Global functional clock (timer_clk)	This clock is supposed to be on during normal operation. This clock is treated as asynchronous to pclk. NOTE See the Chip specific section for more details on UTICK clock.
System bus clock (pclk)	This clock is used only for register reads and writes.

29.3.3 Interrupts

The interrupt is generated when the tick_count reaches 1h so that on the next rising edge of timer_clk, it doesn't trigger again automatically. Its associated status field is [STAT\[INTR\]](#).

29.4 External signals

Signal	I/O	Description
UTICK_CAP0, UTICK_CAP1, UTICK_CAP2, UTICK_CAP3	I	Capture inputs. Configure the selected transition on a capture pin to load Capture (CAP0 - CAP3) with the counter value.

29.5 Initialization

To initialize UTICK:

1. Enable the clock to the UTICK register interface.
2. Enable UTICK interrupts for waking up from Low-power mode, configure [Control \(CTRL\)](#) register.

3. Configure [Capture Configuration \(CFG\)](#) register to enable UTICK capture functions and selects the polarity of capture triggers.
4. Enable the oscillator that provides the UTICK clock, after writing values corresponding registers UTICK timer works normally.

29.6 UTICK register descriptions

29.6.1 UTICK memory map

UTICK0 base address: 4000_B000h

Offset	Register	Width (In bits)	Access	Reset value
0h	Control (CTRL)	32	RW	0000_0000h
4h	Status (STAT)	32	RW	See section
8h	Capture Configuration (CFG)	32	RW	See section
Ch	Capture Clear (CAPCLR)	32	W	See section
10h - 1Ch	Capture (CAP0 - CAP3)	32	R	0000_0000h

29.6.2 Control (CTRL)


Offset

Register	Offset
CTRL	0h

Function

Resets the counter, which means a new interval is measured if one is in progress.

Diagram

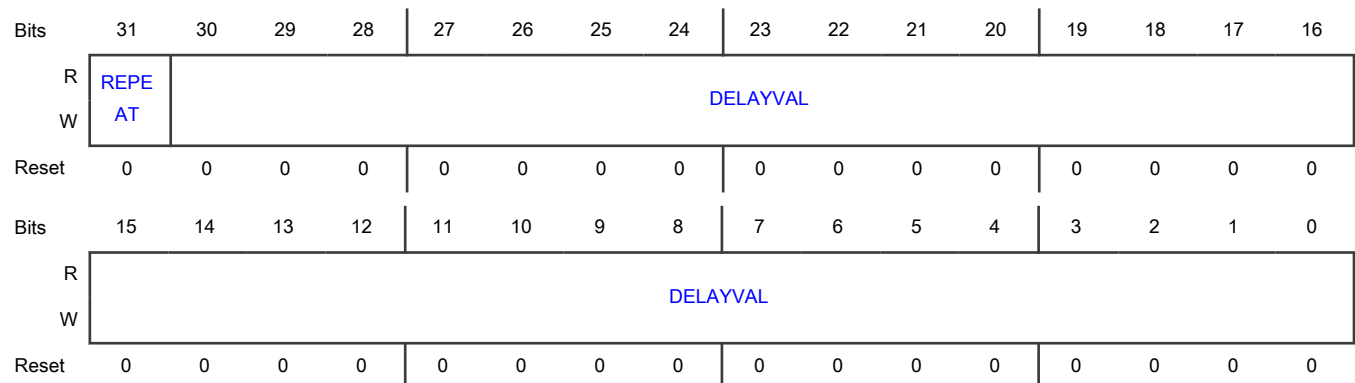

Fields

Field	Function
31 REPEAT	Repeat Delay Specifies the frequency of repeat delay. 0b - One-time delay 1b - Delay repeats continuously
30-0 DELAYVAL	Tick Interval Specifies the tick interval. The resulting delay is (DELAYVAL + 1) periods of the timer clock. The minimum usable tick interval is one clock cycle, for a delay of two timer clocks. The timer will be stopped when the tick interval is equal to zero. 000_0000_0000_0000_0000_0000_0000b - Reserved All other values - Clock cycles as defined in the description

29.6.3 Status (STAT)


Offset

Register	Offset
STAT	4h

Function

Indicate the micro timer is working or stopping and any event on output compare channels. The bits are write one to clear.

Diagram

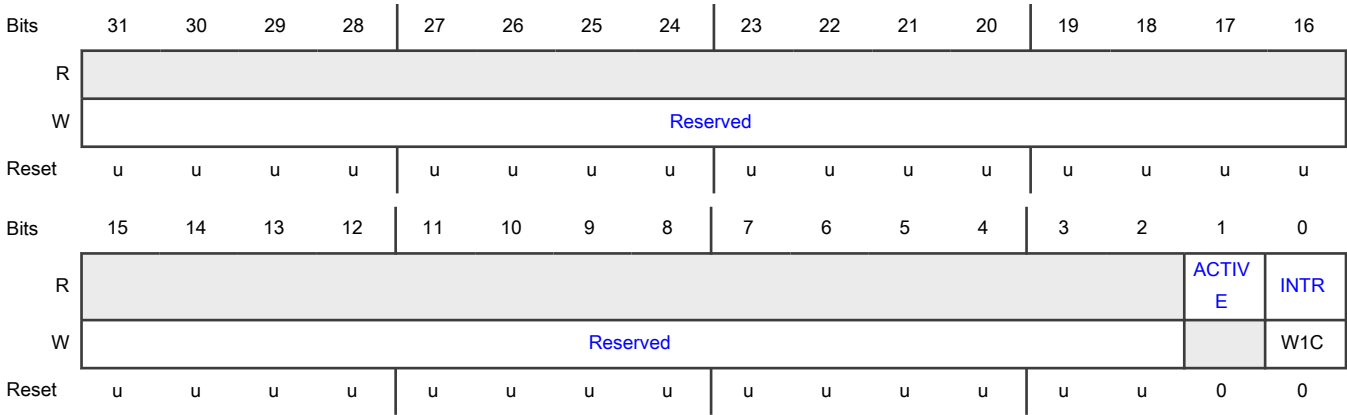

Fields

Field	Function
31-2 —	Reserved
1 ACTIVE	Timer Active Flag Indicates whether UTICK is currently active. 0b - Inactive (stopped) 1b - Active
0 INTR	Interrupt Flag Indicates whether an interrupt is pending. 0b - Not pending 1b - Pending

29.6.4 Capture Configuration (CFG)


Offset

Register	Offset
CFG	8h

Function

Enables micro-tick capture functions and selects the polarity of capture triggers.

Diagram

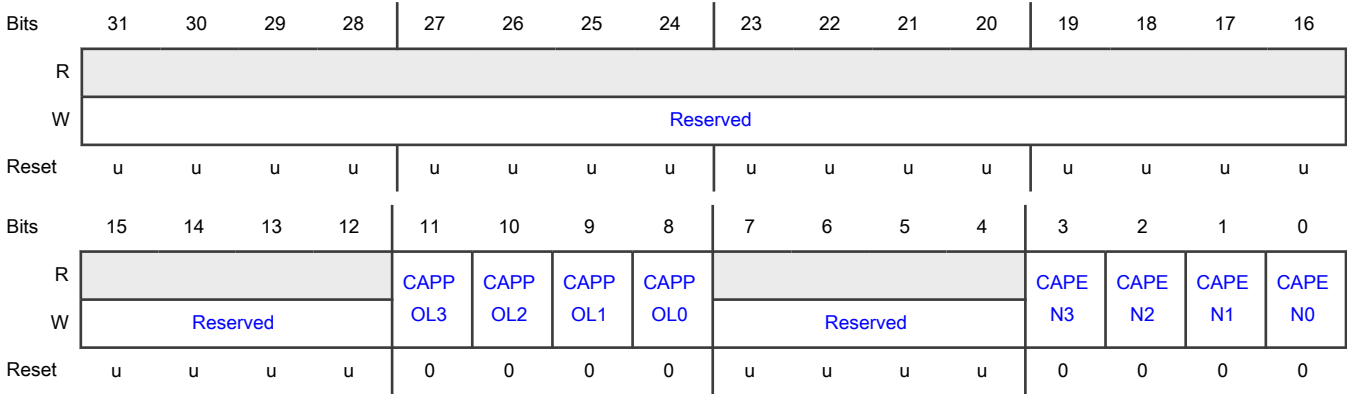

Fields

Field	Function
31-12 —	Reserved
11 CAPPOL3	Capture Polarity 3 Specifies the capture edge. 0b - Positive 1b - Negative
10 CAPPOL2	Capture Polarity 2 Specifies the capture edge. 0b - Positive 1b - Negative
9 CAPPOL1	Capture-Polarity 1 Specifies the capture edge. 0b - Positive 1b - Negative
8 CAPPOL0	Capture Polarity 0 Specifies the capture edge. 0b - Positive 1b - Negative
7-4 —	Reserved
3 CAPEN3	Enable Capture 3 0b - Disable 1b - Enable
2 CAPEN2	Enable Capture 2 0b - Disable 1b - Enable
1 CAPEN1	Enable Capture 1 0b - Disable 1b - Enable
0 CAPEN0	Enable Capture 0

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - Disable 1b - Enable

29.6.5 Capture Clear (CAPCLR)


Offset

Register	Offset
CAPCLR	Ch

Function

Allows you to clear previous capture values, enabling new captures to take place.

Diagram

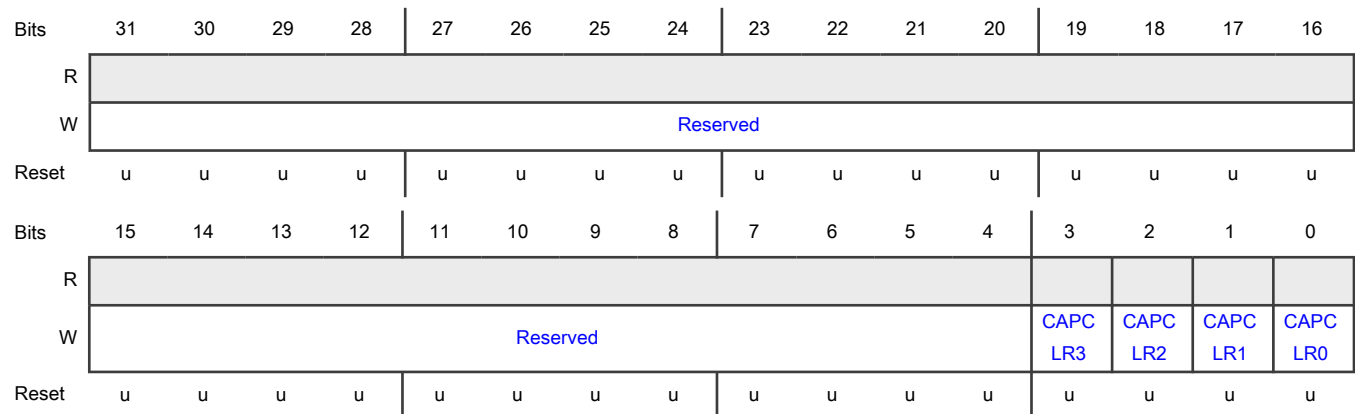

Fields

Field	Function
31-4 —	Reserved
3 CAPCLR3	Clear Capture 3 0b - Does nothing 1b - Clears the CAP3 register value
2 CAPCLR2	Clear Capture 2 0b - Does nothing 1b - Clears the CAP2 register value

Table continues on the next page...

Table continued from the previous page...

Field	Function
1 CAPCLR1	Clear Capture 1 0b - Does nothing 1b - Clears the CAP1 register value
0 CAPCLR0	Clear Capture 0 0b - Does nothing 1b - Clears the CAP0 register value

29.6.6 Capture (CAP0 - CAP3)


Offset

Register	Offset
CAP0	10h
CAP1	14h
CAP2	18h
CAP3	1Ch

Function

Contains the micro-tick time value based on any previously captured events. Each capture register is associated with one of the capture trigger inputs.

Diagram

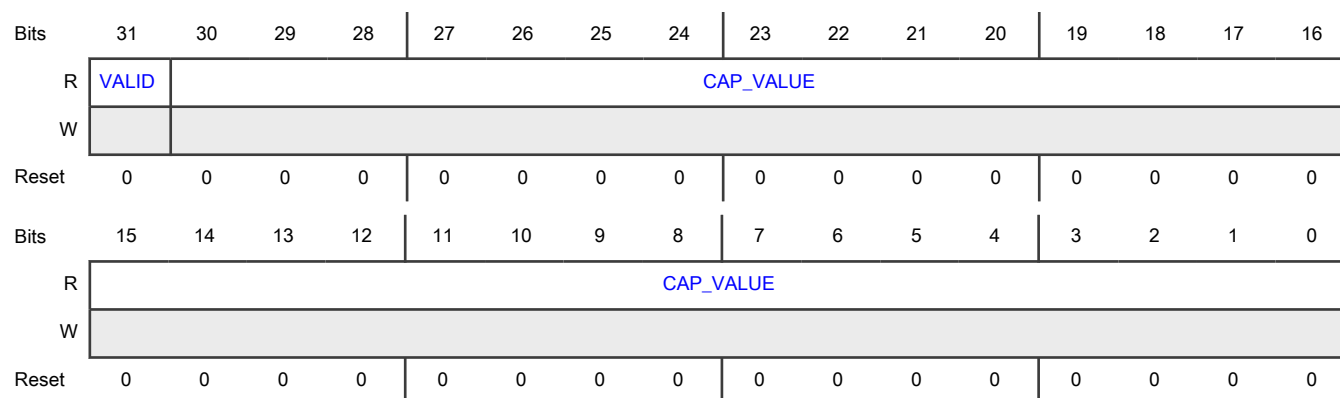

Fields

Field	Function
31	Captured Value Valid Flag

Table continues on the next page...

Table continued from the previous page...

Field	Function
VALID	Specifies whether a valid value is captured, based on a transition of the related UTICK_CAPn pin. Write 1 to the related field in Capture Clear (CAPCLR) to clear this flag. 0b - Valid value not captured 1b - Valid value captured
30-0 CAP_VALUE	Captured Value for the Related Capture Event Specifies the captured value for the related capture event. The captured value is 1 lower than the actual value of UTICK at the moment of the capture event.

Chapter 30

OS Event Timer (OSTIMER)

30.1 Chip-specific OSTIMER information

Table 192. Reference links to related information

Topic	Related module	Reference
Full description	OSTIMER	OSTIMER
System memory map		Memory map
Clocking		Clock distribution
Power Management		Power Management
Signal multiplexing	Port control	Signal multiplexing


30.1.1 Module instances

This device has one instance of the OSTIMER module, OSTIMER0.

30.2 Overview

OSTIMER includes a shared 42-bit timer and separate 42-bit match and capture functions for the Cortex-M33 core.

30.2.1 Block diagram

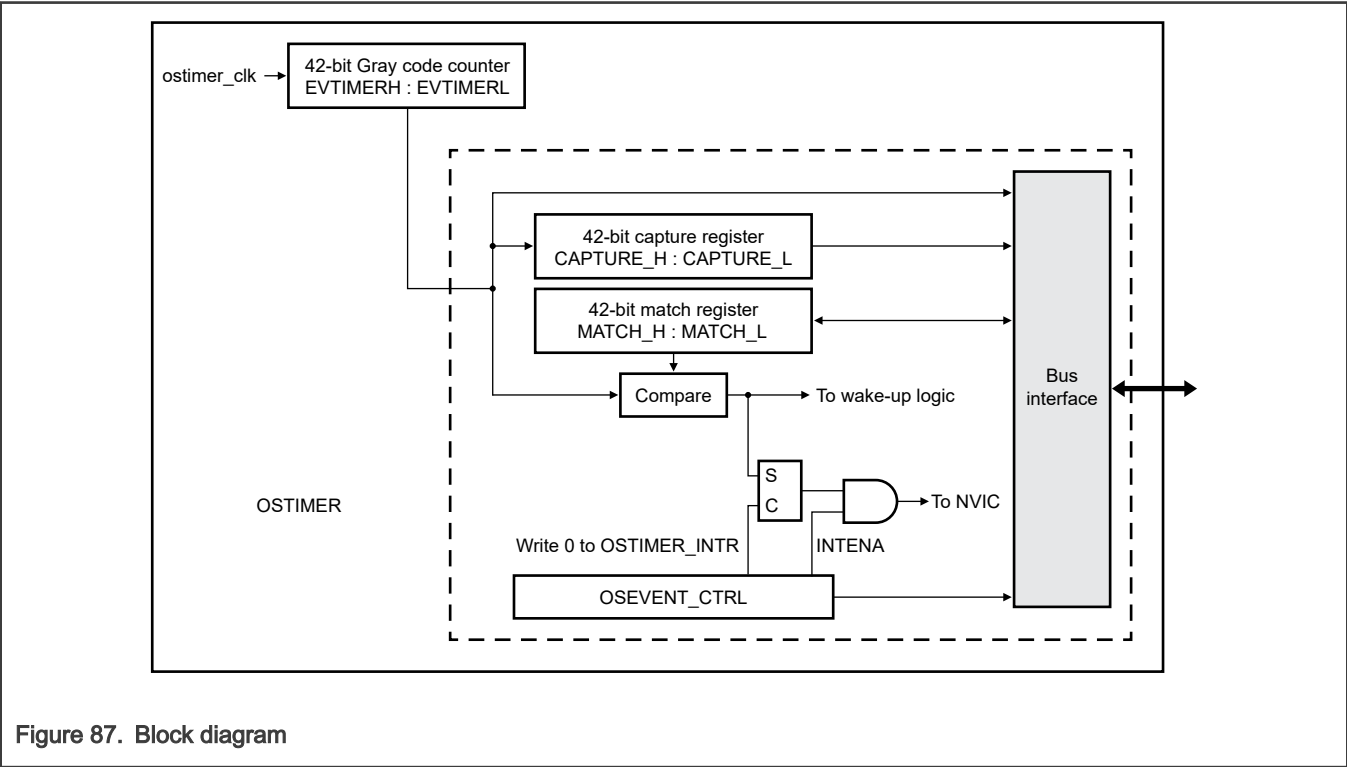

30.2.2 Features

- Provides a 42-bit Gray code counter (known as central EVTimer). Using Gray code means that the timer can run at a frequency unrelated to the CPU clock and can still be read by the CPU without a synchronization delay. Gray code is a reflected binary code that changes in a single-bit position for each increment.
- Supports separate functions for CPU:
 - A capture register can copy the main counter value when triggered by a CPU request.
 - A match register can be compared to the main counter and can optionally generate an interrupt or wake-up event.

30.3 Functional description

The following sections describe the functional details of this module.

30.3.1 Shared event or timestamp timer

The 42-bit shared EVTimer initializes after chip power-up and then counts up continuously. The typical clock for this timer is the 1 MHz low-power oscillator.

This timer is implemented as a Gray code counter that enables the counter to be read asynchronously by any of the processing domains or captured by a capture register running on an asynchronous clock. The output of this shared EVTimer is connected to the processor-specific submodules.

30.3.2 CPU-specific match, capture, and interrupt generation

The submodules associated with CPU include:

- A separate bus interface.
- 42 bits of capture values, available in [CAPTURE_L](#) and [CAPTURE_H](#).
- 42 bits of match values, available in [MATCH_H](#) and [MATCH_L](#).
- A control register, which includes an interrupt request flag and an interrupt enable field.

Capture registers	42 bits of capture values are available in CAPTURE_L and CAPTURE_H for the CPU. When the CPU issues a capture command, capture registers store the current value of the central EVTimer.
Match registers and interrupt request	42 bits of match values are available in MATCH_H and MATCH_L for each bus interface. The EVTimer output is compared against this combined value for interrupt or wake-up generation. A match to this register pair sets OSEVENT_CTRL[OSTIMER_INTRFLAG] , which you can enable to generate an interrupt or wake-up request. You must write values to the match registers in Gray code. OSEVENT_CTRL[MATCH_WR_RDY] must be 0 before you write to the match registers. When you write a new value to the match registers, you must write to MATCH_L before the write to MATCH_H .

30.3.3 Clocking

The OSTIMER uses three clock signals: hclk, capture_clk, and ostimer_clk.

1. Hclk is the IPS interface clock for both the Arm and DSP sub-module, being used in all the registers and write/read operations.
2. Ostimer_clk is the counter clock, being used in the timer itself and in the intr_wakeup signals. It is expected to be running in a low frequency (~1MHz).
3. capture_clk is the Arm and DSP clock, it is used to register the capture signal "capture_load".

30.3.4 Reset

For OSTIMER, the reset function is more complicated as compared to most other functions.

- Only the POR and software reset can reset the shared EVTimer. "Software reset" refers to a complete reset of the module.
- The capture and match registers are reset by a system reset. "System reset" refers to a reset from the RESET $\overline{n}$ pin, SYSRESETREQ from the CPU, a POR, or any other internal low-voltage resets.
- The control register (OSEVENT_CTRL) is reset by the system reset or by software reset. However, the MATCH_WR_RDY bit can only be reset by system reset.

The following table shows a list of resets for OSTIMER registers.

Table 193. OSTIMER registers and their corresponding resets

Registers	POR	Software reset
EVTIMERL and EVTIMERH	Yes	Yes
CAPTURE_L and CAPTURE_H	Yes	No
OSEVENT_CTRL	Yes	Yes

30.3.5 Interrupts

If the interrupt request is enabled (i.e., OSEVENT_CTRL[OSTIMER_INTENA]= 1), the OSTIMER will generate interrupt when the central 42-bit EVTimer and the value programmed in MATCH_L and MATCH_H matches.

No interrupt generates if the interrupt request is disabled (i.e., OSEVENT_CTRL[OSTIMER_INTENA]= 0).

30.4 External signals

This module has no external signals.

30.5 Initialization

Perform this procedure to initialize OSTIMER:

1. Enable the OSTIMER clock. This enables the register interface and the peripheral function clock.
2. Select a clock source for OSTIMER.
3. Clear the OSTIMER peripheral reset.
4. Enable the interrupt that OSTIMER provides to the interrupt controller (set OSEVENT_CTRL[OSTIMER_INTRFLAG]= 1). This allows the chip to wake up from Deep Sleep mode.

30.6 Memory map and register definition

This section includes the module's memory map and detailed descriptions of all registers.

30.6.1 OSTIMER register descriptions

30.6.1.1 OSTIMER memory map

OSTIMER0 base address: 400A_D000h

Offset	Register	Width (In bits)	Access	Reset value
0h	EVTIMER Low (EVTIMERL)	32	R	0000_0000h
4h	EVTIMER High (EVTIMERH)	32	R	0000_0000h
8h	Local Capture Low for CPU (CAPTURE_L)	32	R	0000_0000h
Ch	Local Capture High for CPU (CAPTURE_H)	32	R	0000_0000h
10h	Local Match Low for CPU (MATCH_L)	32	RW	FFFF_FFFFh
14h	Local Match High for CPU (MATCH_H)	32	RW	FFFF_FFFFh
1Ch	OSTIMER Control for CPU (OSEVENT_CTRL)	32	RW	0000_0008h

30.6.1.2 EVTIMER Low (EVTIMERL)

Offset


Register	Offset
EVTIMERL	0h

Function

Contains the immediate value of the central EVTimer. This is a Gray encoded counter register that is not synchronized with the bus clock.

Because two 32-bit reads are required to retrieve the entire counter value, it is possible for the counter to roll over between the reads of [EVTIMERL](#) and [EVTIMERH](#). Gray encoding ensures that even if this roll over occurs, the value read represents either the counter value immediately preceding or immediately following the rollover, if the bus clock rate is at least twice the module's clock rate (nominally 1 MHz), or if the bus is clocked by the same 1 MHz LP oscillator that provides the clock to the module.

Diagram

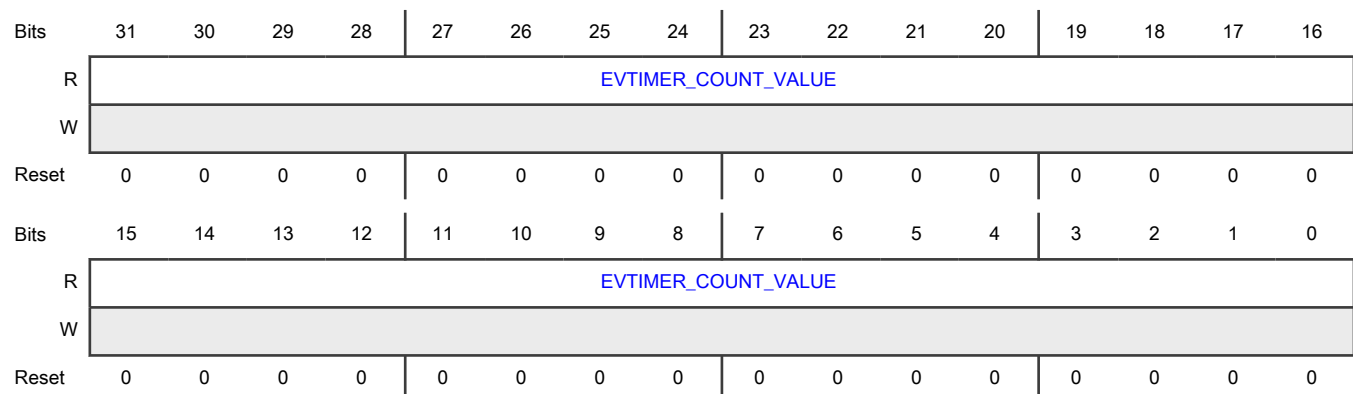

Fields

Field	Function
31-0 EVTIMER_COUNT_VALUE	EVTimer Count Value Specifies the current value of the lower 32 bits of the central 42-bit EVTimer when you read this register.
NOTE Only one physical EVTimer exists and is readable from all domains.	

30.6.1.3 EVTIMER High (EVTIMERH)


Offset

Register	Offset
EVTIMERH	4h

Function

Contains the higher value of the central EVTimer.

Diagram

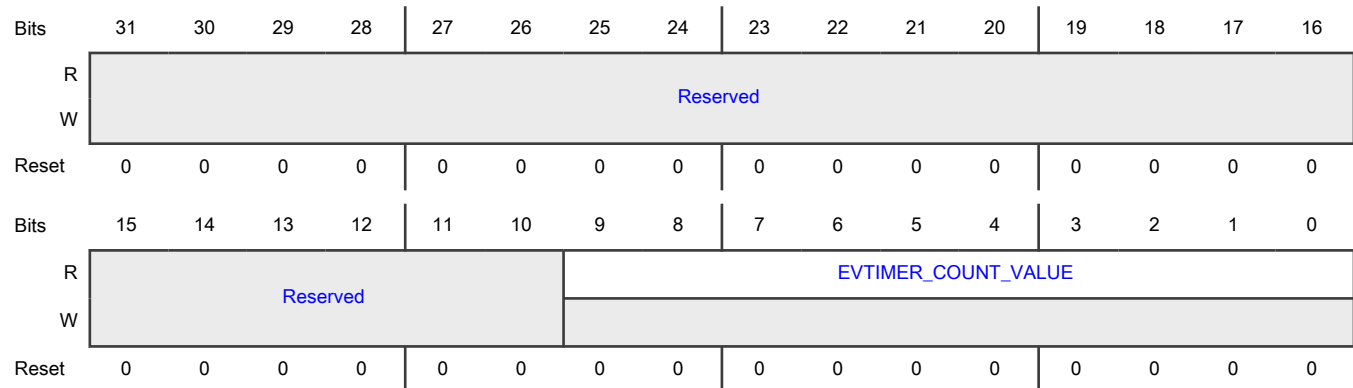

Fields

Field	Function
31-10 —	Reserved
9-0 EVTIMER_COUNT_VALUE	EVTimer Count Value Specifies the current value of the upper 10 bits of the central 42-bit EVTimer when you read this register.
NOTE Only one physical EVTimer exists and is readable from all domains.	

30.6.1.4 Local Capture Low for CPU (CAPTURE_L)


Offset

Register	Offset
CAPTURE_L	8h

Function

Contains the value of the central EVTimer when captured by the CPU. This register is Gray encoded to match EVTimer. You must not execute a new capture command between reading [CAPTURE_L](#) and [CAPTURE_H](#), to avoid retrieving incoherent results.

Diagram

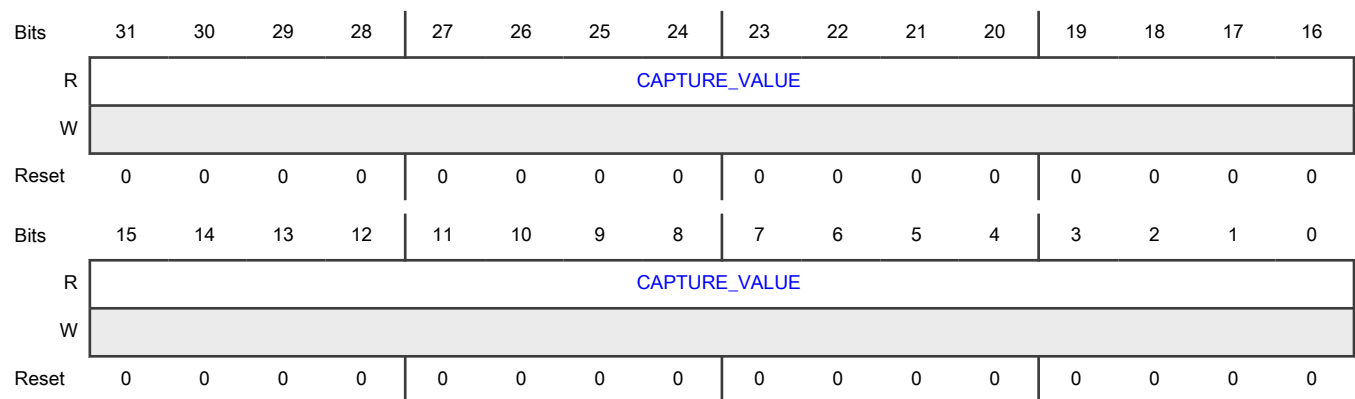

Fields

Field	Function
31-0	EVTimer Capture Value
CAPTURE_VALUE	Specifies the value of the lower 32 bits of the central 42-bit EVTimer when you read this register, at the time that the CPU generated the last capture signal. A separate pair of CAPTURE_L and CAPTURE_H is implemented for the CPU. CPU reads its own capture value at the same pair of addresses.

30.6.1.5 Local Capture High for CPU (CAPTURE_H)


Offset

Register	Offset
CAPTURE_H	Ch

Function

Contains the value of the central EVTimer when captured by the CPU. This register is Gray encoded to match EVTimer. You must not execute a new capture command between reading [CAPTURE_L](#) and [CAPTURE_H](#), to avoid retrieving incoherent results.

Diagram

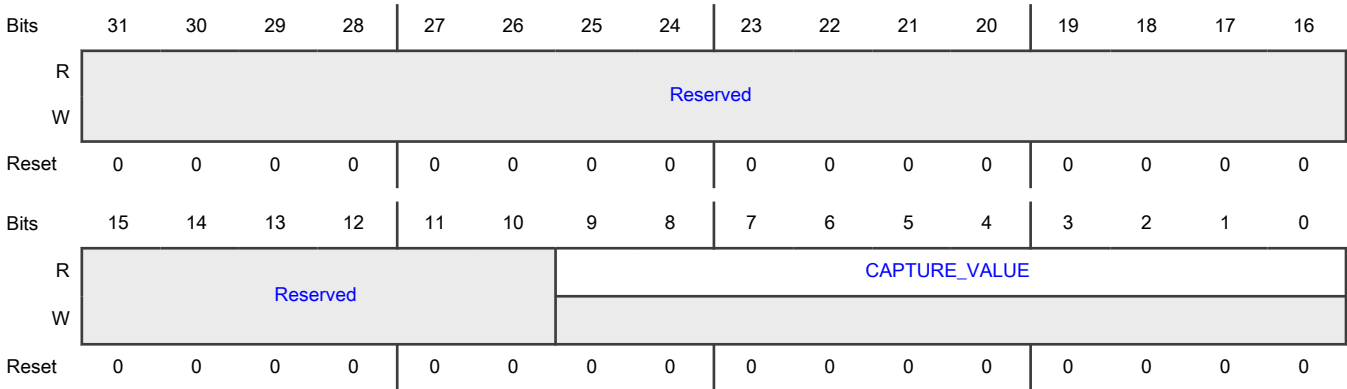

Fields

Field	Function
31-10 —	Reserved
9-0 CAPTURE_VAL UE	EVTimer Capture Value Specifies the value of the upper 10 bits of the central 42-bit EVTimer when you read this register, at the time the CPU generated the last capture signal (using CMSIS C function " __SEV() ").

30.6.1.6 Local Match Low for CPU (MATCH_L)

Offset


Register	Offset
MATCH_L	10h

Function

Compares the match value with the central EVTimer value. This register is Gray encoded to match EVTimer. The value in this pair of registers is stable, so there is no need for multiple reads. When writing to the match register pair, you must write to [MATCH_L](#) first, followed by the write to [MATCH_H](#).

You must not initiate a second write to the match register pair until the first write is complete (which is a minimum of three bus clocks followed by a write to [MATCH_H](#)). [OSEVENT_CTRL\[MATCH_WR_RDY\]](#) indicates when it is safe to reload the match registers. You do not need to read [OSEVENT_CTRL\[MATCH_WR_RDY\]](#) if an interrupt has already occurred because of the previous match value, or the required time period has elapsed.

Diagram

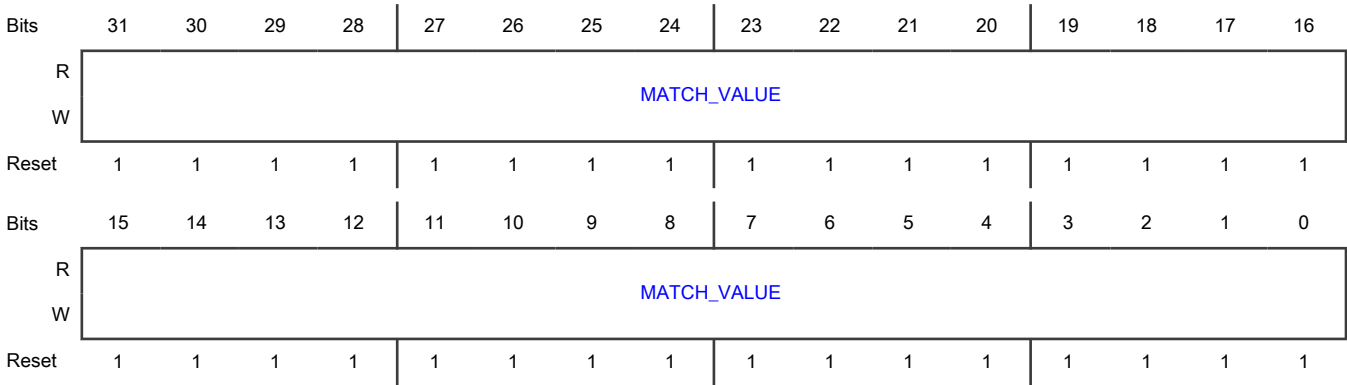

Fields

Field	Function
31-0 MATCH_VALU E	EVTimer Match Value Compares the value (lower 32 bits) of the MATCH_L and MATCH_H register pair with the central EVTimer value. If both the values match, the CPU generates an interrupt request if the interrupt is enabled. A separate pair of MATCH_L and MATCH_H is implemented for the CPU reading its own local value at the same pair of addresses.

30.6.1.7 Local Match High for CPU (MATCH_H)

Offset


Register	Offset
MATCH_H	14h

Function

Compares the match value with the central EVTimer value. This register is Gray encoded to match EVTimer. The value in this pair of registers is stable, so there is no need for multiple reads. When writing to the match register pair, you must write to [MATCH_L](#) first, followed by the write to [MATCH_H](#).

You must not initiate a second write to the match register pair until the first write is complete (which is a minimum of three bus clocks followed by a write to [MATCH_H](#)). [OSEVENT_CTRL\[MATCH_WR_RDY\]](#) indicates when it is safe to reload the match registers. You do not need to read [OSEVENT_CTRL\[MATCH_WR_RDY\]](#) if an interrupt has already occurred because of the previous match value, or the required time period has elapsed.

Diagram

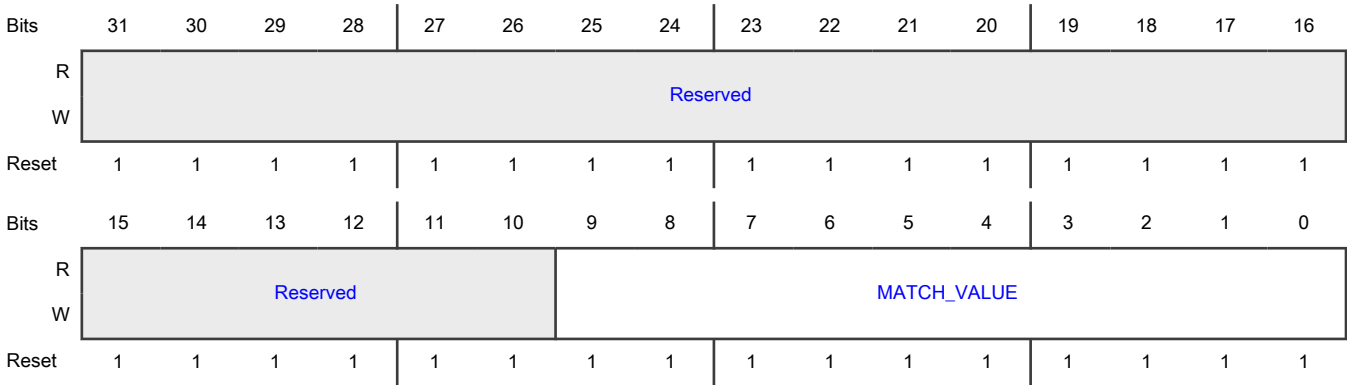

Fields

Field	Function
31-10 —	Reserved
9-0 MATCH_VALU E	EVTimer Match Value Compares the value (upper 10 bits) of the MATCH_L and MATCH_H register pair with the central EVTimer value. If both the values match, the CPU generates an interrupt request if the interrupt is enabled.

30.6.1.8 OSTIMER Control for CPU (OSEVENT_CTRL)


Offset

Register	Offset
OSEVENT_CTRL	1Ch

Function

Provides the interrupt flag and interrupt enable signals for the CPU. A separate OSEVENT_CTRL register is implemented for the CPU. CPU reads its own local value at the same address.

Diagram

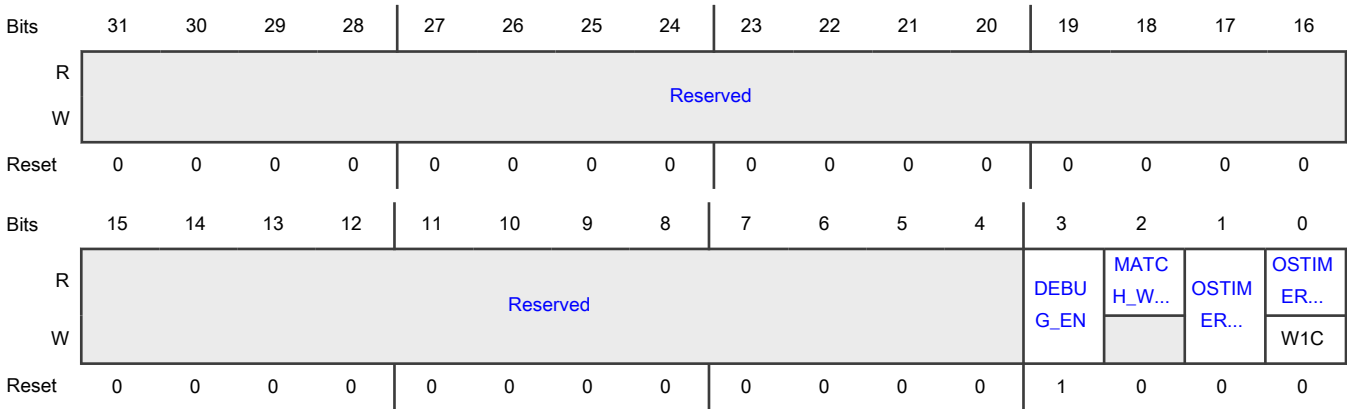

Fields

Field	Function
31-4 —	Reserved
3 DEBUG_EN	Debug Enable Enables OSTIMER to operate when the chip is in Debug mode. 0b - Disables 1b - Enables
2 MATCH_WR_RDY	EVTimer Match Write Ready Specifies that when this field is low, it is safe to reload (write) to the match registers. In typical applications, it is not necessary to read this field. The 42-bit match register value is transferred from a pair of shadow registers to the active match registers after you write to MATCH_H. You must not initiate a second write to MATCH_L and MATCH_H until after this transfer completes. This field becomes 0 after the transfer completes. It is not necessary to read this status field, if an interrupt has already occurred because of the first match value, or if it is certain (via some other means) that the required period of time (3 bus clocks) has elapsed.
1 OSTIMER_INT_ENA	Interrupt or Wake-Up Request This bit is to enable/disable interrupt request. If the value is 1, then this field asserts an interrupt or wake-up request to the domain processor. Otherwise, the interrupt or wake-up requests are blocked. 0b - Interrupts blocked 1b - Interrupts enabled
0 OSTIMER_INT_RFLAG	Interrupt Flag Sets an interrupt flag when a match occurs between the central 42-bit EVTimer and the value programmed in the MATCH_L and MATCH_H register pair for the CPU. Writes to clear this field are asynchronous. You must write 1 to this field before writing a new match value into MATCH_L and MATCH_H.

Chapter 31

Wake Timer

31.1 Chip-specific Wake Timer information

Table 194. Reference links to related information

Topic	Related module	Reference
Full description	WAKETIMER	Wake Timer
System memory map		Memory map
Clocking		Clock distribution
Power Management		Power Management
Signal multiplexing	Port control	Signal multiplexing

31.1.1 Module instances

This device has one instance of the Wake Timer module, WAKETIMER0.

31.2 Overview

The wake timer is clocked by the 1 kHz clock which is the output of the WAKE_TIMER_CTRL[OSC_DIV_ENA], the clock divider of the clock source.

31.2.1 Block diagram

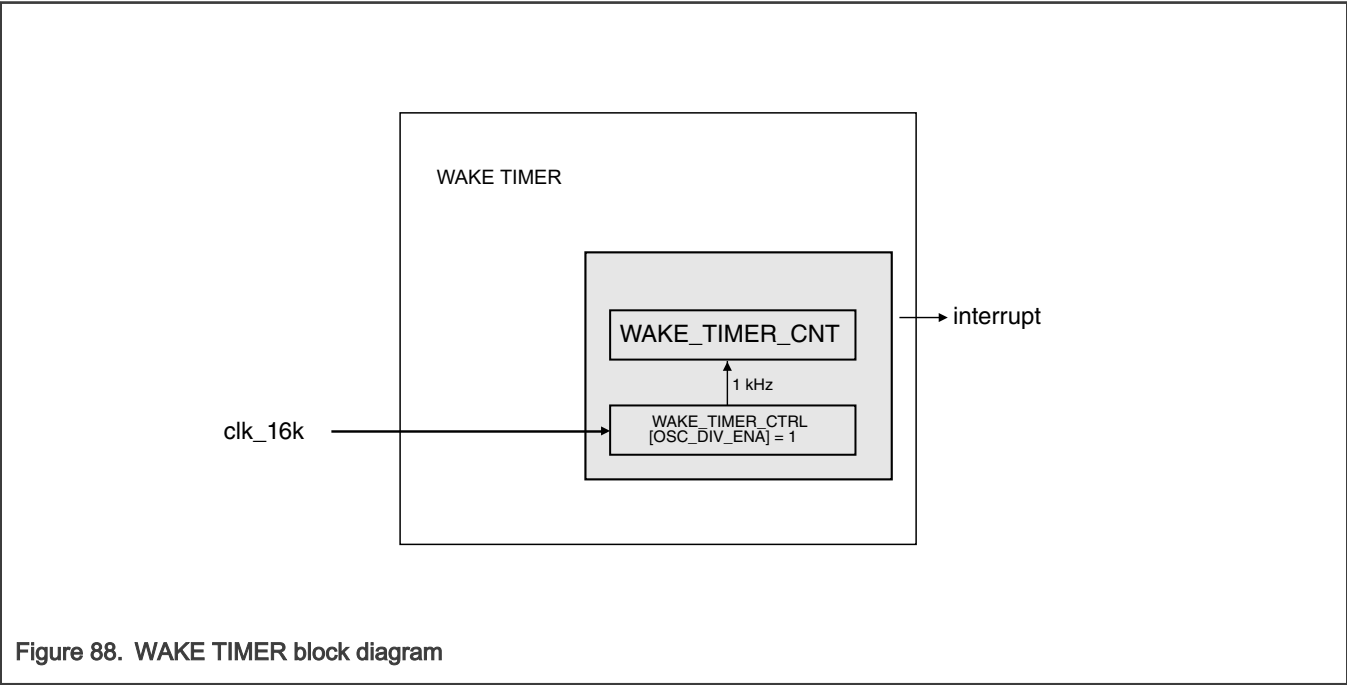


Figure 88. WAKE TIMER block diagram

31.2.2 Features

- 32-bit wake timer counter to wake the chip.

31.3 Functional description

The wake timer is a 32-bit down counter, which is clocked at a 1 kHz rate when enabled. Writing any non-zero value to this timer automatically enables the counter and launches a countdown sequence. When the counter is being used as a wake timer, this write can occur prior to entering a low-power mode.

When a starting count value loads, the wake timer turns on, counts from the pre-loaded value down to zero, generates an interrupt and/or a wake command, and then turns itself off until relaunched by a subsequent software write.

31.4 External signals

This module has no external signals.

31.5 Memory map and register description

This section includes the WAKE_TIMER memory map and detailed descriptions of all registers.

31.5.1 WAKE_TIMER register descriptions

31.5.1.1 WAKE_TIMER memory map

WAKETIMER0 base address: 400A_E000h

Offset	Register	Width (In bits)	Access	Reset value
0h	Wake Timer Control (WAKE_TIMER_CTRL)	32	RW	0000_0000h
Ch	Wake Timer Counter (WAKE_TIMER_CNT)	32	RW	0000_0000h

31.5.1.2 Wake Timer Control (WAKE_TIMER_CTRL)


Offset

Register	Offset
WAKE_TIMER_CTRL	0h

Function

The wake timer is clocked by the 1 kHz clock which is the output of the 4-bit ripple counter with the 16 kHz clock as the clock source. This register controls the wake timer counter register.

Diagram

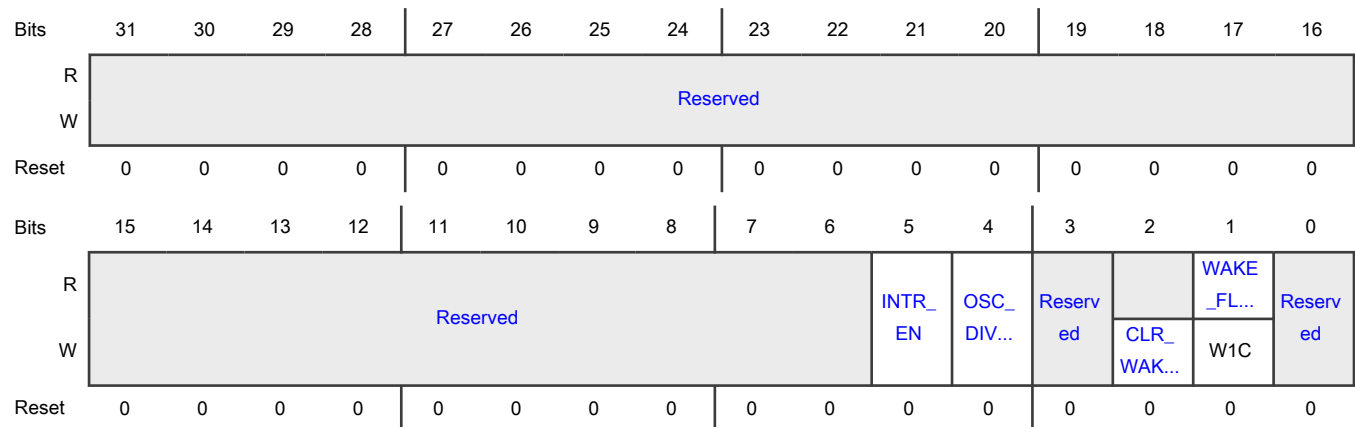

Fields

Field	Function
31-6 —	Reserved
5 INTR_EN	Enable Interrupt Enable interrupt when WAKE_FLAG is set. 0b - Disabled 1b - Enabled
4 OSC_DIV_ENA	OSC Divide Enable Enables the 4-bit clock divider to divide down the 16 kHz input clock to generate the 1 kHz clock source for the wake timer. OSC_DIV_ENA must be set to 1 for the wake timer to run. 0b - Disabled 1b - Enabled
3 —	Reserved
2 CLR_WAKE_TIMER	Clear Wake Timer NOTE Reading this bit always returns 0. 0b - No effect. 1b - Clears the wake timer counter and halts operation until a new count value is loaded.
1 WAKE_FLAG	Wake Timer Status Flag Writing 1 clears this status bit. Writing 0 has no effect.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - Wake timer has not timed out. 1b - Wake timer has timed out.
0 —	Reserved

31.5.1.3 Wake Timer Counter (WAKE_TIMER_CNT)


Offset

Register	Offset
WAKE_TIMER_CNT	Ch

Function

Do not write to WAKE_TIMER_CNT while counting is in progress.

Diagram

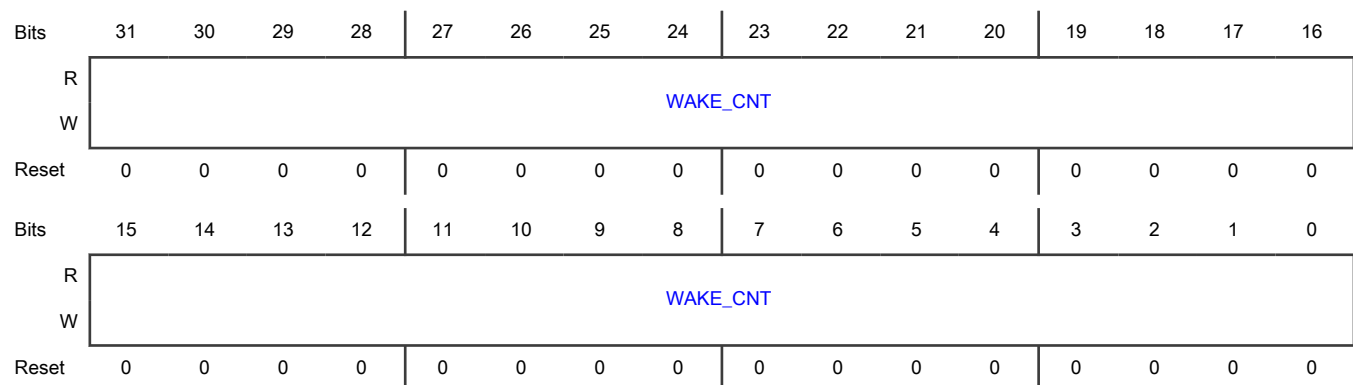

Fields

Field	Function
31-0 WAKE_CNT	Wake Counter A read reflects the current value of the wake timer. Due to clock domain crossing, read the register twice in succession and confirm that the two values are the same. If the values are not the same, repeat the procedure until the two values are the same. A write to this field pre-loads a start-count value into the timer and starts a countdown sequence.

Chapter 32

Real Time Clock (RTC)

32.1 Chip-specific RTC information

Table 195. Reference links to related information

Topic	Related module	Reference
Full description	RTC	RTC
System memory map		Memory map
Clocking		Clock distribution
Power Management		Power Management
Signal multiplexing	Port control	Signal multiplexing

32.1.1 RTC clock

FRO is FRO16K from VBAT, and OSC32k isn't available in this device.

32.2 Overview

32.2.1 Block diagram

The following figure is the block diagram of this module.

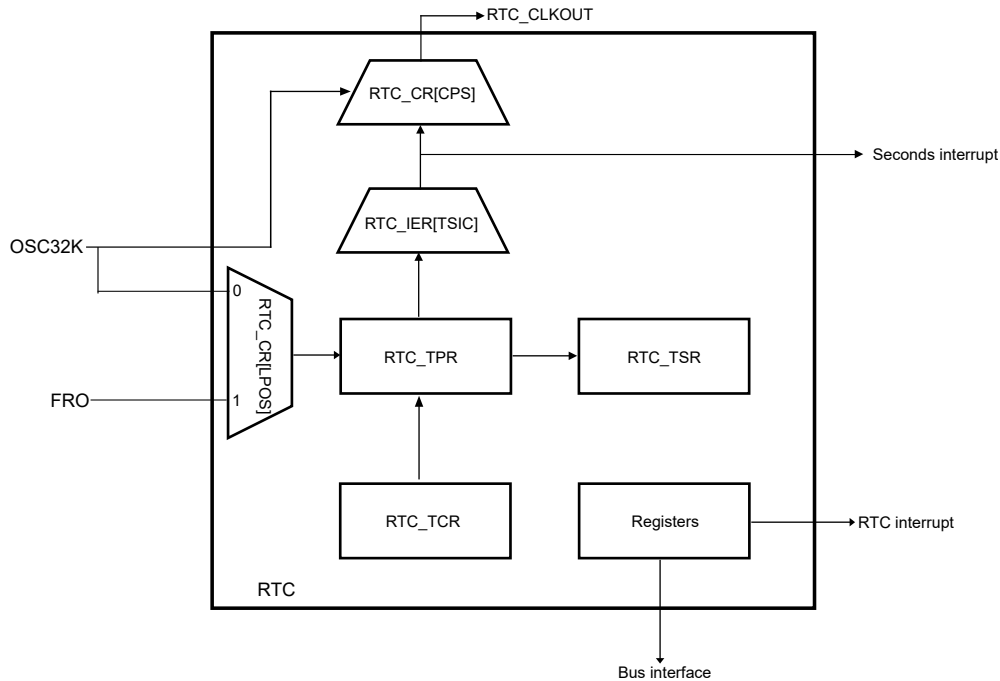


Figure 89. RTC module block diagram

32.2.2 Features

The RTC module features include:

- 32-bit seconds counter with roll-over protection and 32-bit alarm
- 16-bit prescaler with compensation that can correct errors between 0.12 ppm and 3906 ppm
- Option to increment prescaler using a 1 kHz LPO (prescaler increments by 32 every clock edge)
- Register write protection
 - Lock register requires POR or software reset to enable write access
- Configurable 1, 2, 4, 8, 16, 32, 64 or 128 Hz square wave output with optional interrupt

32.3 Functional description

32.3.1 Power

The RTC is an always powered block that remains active in all low power modes.

32.3.2 Time counter

The time counter consists of a 32-bit seconds counter that increments once every second and a 16-bit prescaler register that increments once every 32.768 kHz clock cycle. There is also the option to clock the prescaler using a 1 kHz LPO that increments the prescaler by 32 on every clock cycle.

Reading the time counter (either seconds or prescaler) while it is incrementing may return invalid data due to synchronization of the read data bus. If it is necessary for software to read the prescaler or seconds counter when they could be incrementing, it is recommended that two read accesses are performed and that software verifies that the same data was returned for both reads.

The time seconds register and time prescaler register can be written only when SR[TCE] is clear. Always write to the prescaler register before writing to the seconds register, because the seconds register increments on the falling edge of bit 14 of the prescaler register.

The time prescaler register increments provided SR[TCE] is set, SR[TIF] is clear, SR[TOF] is clear, and the 32.768 kHz (or 1 kHz) clock source is present. After enabling the oscillator, wait the oscillator startup time before setting SR[TCE] to allow time for the oscillator clock output to stabilize.

If the time seconds register overflows, SR[TOF] is set and the time prescaler register stops incrementing. Clear SR[TOF] by initializing the time seconds register. The time seconds register and time prescaler register read as zero whenever SR[TOF] is set.

SR[TIF] is set on POR and software reset and is cleared by initializing the time seconds register. The time seconds register and time prescaler register read as zero whenever SR[TIF] is set.

32.3.3 Compensation

The compensation logic provides an accurate and wide compensation range and can correct errors as high as 3906 ppm and as low as 0.12 ppm. The compensation factor must be calculated externally to the RTC and supplied by software to the compensation register. The RTC itself does not calculate the amount of compensation that is required, although the 1 Hz clock is output to an external pin in support of external calibration logic.

Crystal compensation can be supported by using firmware and crystal characteristics to determine the compensation amount. Temperature compensation can be supported by firmware that periodically measures the external temperature via ADC and updates the compensation register based on a look-up table that specifies the change in crystal frequency over temperature.

The compensation logic alters the number of 32.768 kHz clock cycles it takes for the prescaler register to overflow and increment the time seconds counter. The time compensation value is used to adjust the number of clock cycles between -127 and +128. Cycles are added or subtracted from the prescaler register when the prescaler register equals 0x3FFF and then increments. The compensation interval is used to adjust the frequency at which the time compensation value is used, that is, from once a second to once every 256 seconds.

Updates to the time compensation register do not take effect until the next time the time seconds register increments and provided the previous compensation interval has expired. When the compensation interval is set to other than once a second then the compensation is applied in the first second interval and the remaining second intervals receive no compensation.

Compensation is disabled by configuring the time compensation register to zero.

When the prescaler is configured to increment using the 1 kHz LPO, the effective compensation value is divided by 32 and can only adjust the number of clock cycles between -4 and +3.

32.3.4 Time alarm

The Time Alarm register (TAR), SR[TAF], and IER[TAIE] allow the RTC to generate an interrupt at a predefined time. The 32-bit TAR is compared with the 32-bit Time Seconds register (TSR) each time it increments. SR[TAF] is set when TAR equals TSR and TSR increments.

SR[TAF] is cleared by writing TAR. This is usually the next alarm value, although writing a value that is less than TSR (such as 0) prevents SR[TAF] from setting again. SR[TAF] cannot otherwise be disabled, although the interrupt it generates is enabled or disabled by IER[TAIE].

32.3.5 Update mode

The Update Mode field in the Control register (CR[UM]) configures software write access to the Time Counter Enable (SR[TCE]) field. When CR[UM] is clear, SR[TCE] can be written only when LR[SRL] is set. When CR[UM] is set, SR[TCE] can also be written when SR[TCE] is clear or when SR[TIF] or SR[TOF] are set. This allows the time seconds and prescaler registers to be initialized whenever time is invalidated, while preventing the time seconds and prescaler registers from being changed on the fly. When LR[SRL] is set, CR[UM] has no effect on SR[TCE].

32.3.6 Register lock

The Lock register (LR) can be used to block write accesses to certain registers until the next POR or software reset. Locking the Control register (CR) disables the software reset. Locking LR blocks future updates to LR.

Write accesses to a locked register are ignored and do not generate a bus error.

32.3.7 Modes of operation

The RTC remains functional in all low power modes and can generate an interrupt to exit any low power mode.

32.3.8 Clocking

The time counter within the RTC is clocked by default from a 32.768 kHz clock. Alternatively, the time counter can be clocked by a LPO 1 kHz clock and the prescaler increments by 32 for each LPO clock.

The 32.768 kHz crystal oscillator is disabled at POR and must be enabled by software. After enabling the crystal oscillator, wait the oscillator startup time before setting SR[TCE] or using the oscillator clock external to the RTC.

The crystal oscillator includes tunable capacitors that can be configured by software. Do not change the capacitance unless the oscillator is disabled.

32.3.9 Reset

The power-on-reset signal initializes all RTC registers to their default state. A software reset bit can also initialize all RTC registers.

Writing 1 to CR[SWR] forces the equivalent of a POR to the rest of the RTC module. CR[SWR] is not affected by the software reset and must be cleared by software.

32.3.10 Interrupts

The RTC interrupt is asserted whenever a status flag and the corresponding interrupt enable bit are both set. It is always asserted on POR, and software reset. The RTC interrupt is enabled at the chip level by enabling the chip-specific RTC clock gate control bit. The RTC interrupt can be used to wakeup the chip from any low-power mode.

The RTC seconds interrupt is an edge-sensitive interrupt with a dedicated interrupt vector that is generated once a second and requires no software overhead (there is no corresponding status flag to clear). It is enabled in the RTC by the time seconds interrupt enable bit and enabled at the chip level by setting the chip-specific RTC clock gate control bit. The frequency of the seconds interrupt defaults to 1 Hz, but can instead be configured to trigger every 2, 4, 8, 16, 32, 64 or 128 Hz.

32.4 Initialization

To initialize the RTC time counter:

1. Enable the desired clock source for the RTC and configure RTC_CR[LPOS] to select that clock.
2. Initialize the time prescaler register by writing RTC_TPR[TPR] with the appropriate time value between 0x0 and 0x7FFF.
3. Initialize the time second register by writing RTC_TSR[TSR] with the appropriate time value that is greater than 0x0.
4. Enable the time counter by writing RTC_SR[SR]=0x10.

32.5 Register descriptions

All registers must be accessed using 32-bit writes and all register accesses incur three wait states.

When the supervisor access control bit is clear, only supervisor mode software can write to the RTC registers. Writes to the RTC registers by non-supervisor mode software generate a bus error. Both supervisor and non-supervisor mode software can always read the RTC registers.

Writing to a register protected by the lock register does not generate a bus error, but the writes can not be completed.

32.5.1 RTC register descriptions

32.5.1.1 RTC memory map

RTC0 base address: 400E_E000h


Offset	Register	Width (In bits)	Access	Reset value
0h	RTC Time Seconds (TSR)	32	RW	0000_0000h
4h	RTC Time Prescaler (TPR)	32	RW	0000_0000h
8h	RTC Time Alarm (TAR)	32	RW	0000_0000h
Ch	RTC Time Compensation (TCR)	32	RW	0000_0000h
10h	RTC Control (CR)	32	RW	0000_0080h
14h	RTC Status (SR)	32	RW	0000_0001h
18h	RTC Lock (LR)	32	RW	0000_00FFh
1Ch	RTC Interrupt Enable (IER)	32	RW	0000_0007h

32.5.1.2 RTC Time Seconds (TSR)

Offset

Register	Offset
TSR	0h

Diagram

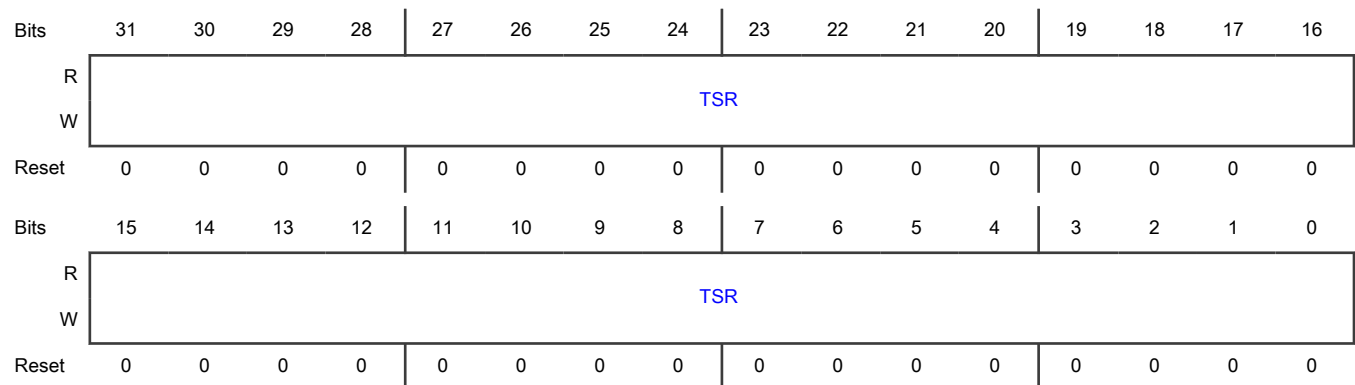

Fields

Field	Function
31-0	Time Seconds Register

Table continues on the next page...


Field	Function
TSR	When the time counter is enabled, the TSR is read only and increments once a second provided SR[TOF] or SR[TIF] is not set. The time counter reads as zero when SR[TOF] or SR[TIF] is set. When the time counter is disabled, the TSR can be read or written. Writing to the TSR when the time counter is disabled clears SR[TOF] or SR[TIF]. Writing to TSR with zero is supported, but not recommended because TSR reads as zero when SR[TIF] or SR[TOF] is set (indicating the time is invalid).

32.5.1.3 RTC Time Prescaler (TPR)

Offset

Register	Offset
TPR	4h

Diagram

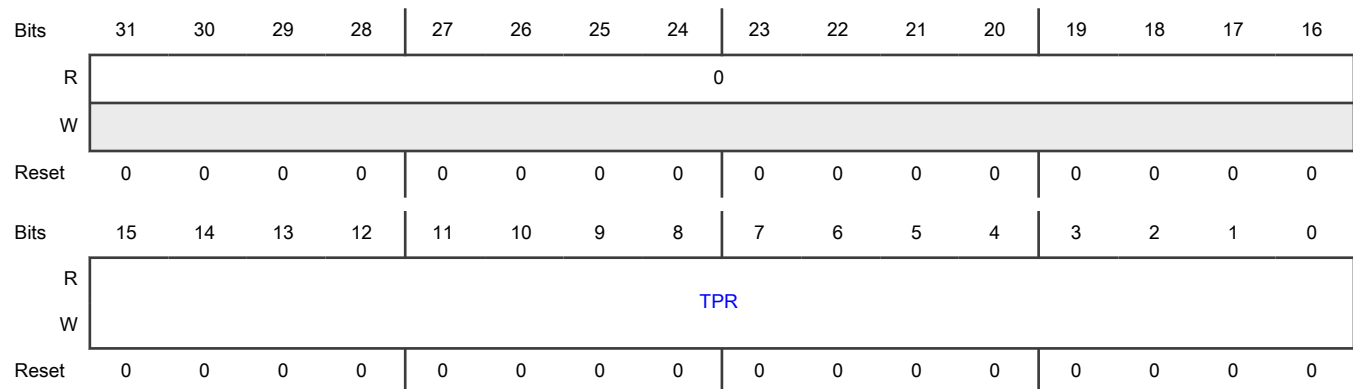

Fields


Field	Function
31-16 —	Reserved
15-0 TPR	Time Prescaler Register When the time counter is enabled, the TPR is read only and increments every 32.768 kHz clock cycle. The time counter reads as zero when SR[TOF] or SR[TIF] are set. When the time counter is disabled, the TPR can be read or written. The TSR[TSR] increments when bit 14 of the TPR transitions from a logic one to a logic zero.

32.5.1.4 RTC Time Alarm (TAR)

Offset

Register	Offset
TAR	8h

Diagram

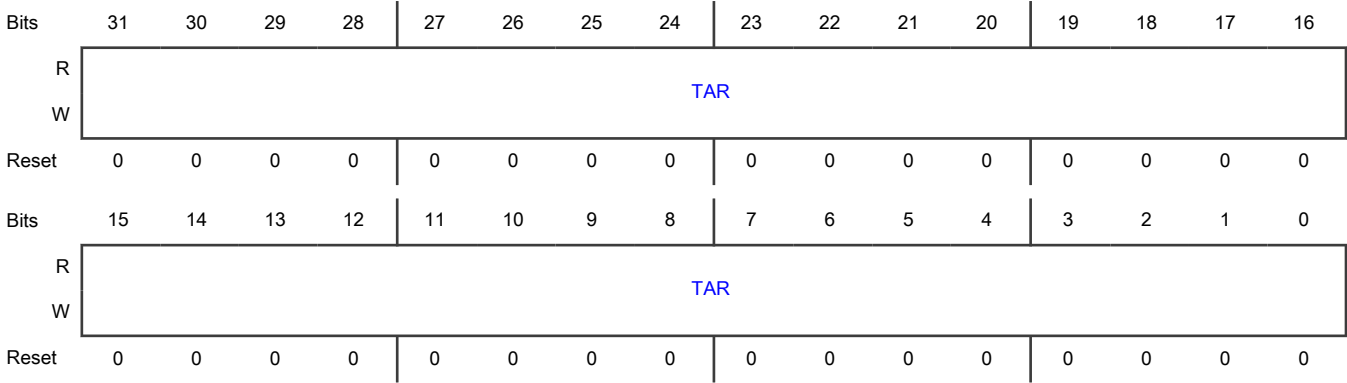

Fields


Field	Function
31-0	Time Alarm Register
TAR	When the time counter is enabled, the SR[TAF] is set whenever the TAR[TAR] equals the TSR[TSR] and the TSR[TSR] increments. Writing to the TAR clears the SR[TAF].

32.5.1.5 RTC Time Compensation (TCR)

Offset

Register	Offset
TCR	Ch

Diagram

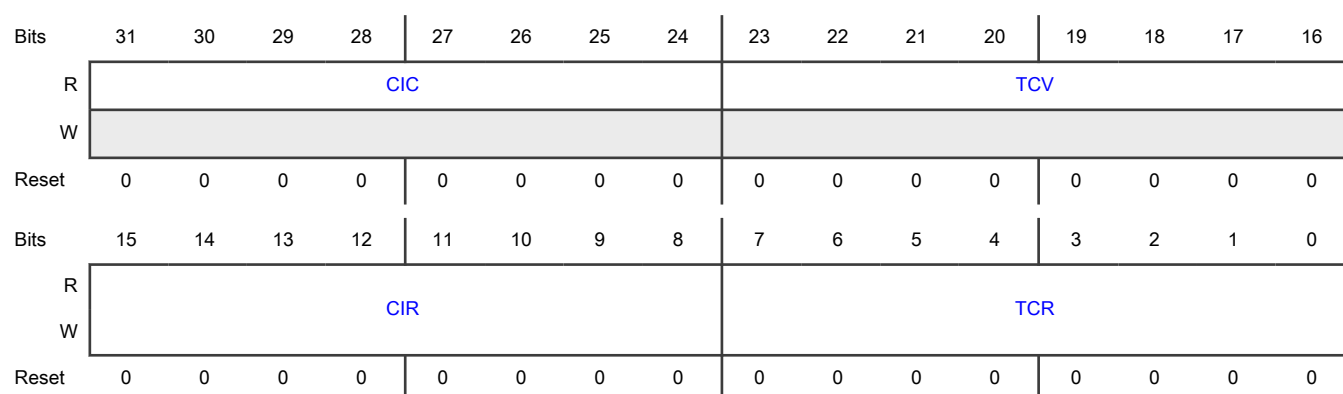

Fields

Field	Function
31-24 CIC	Compensation Interval Counter Current value of the compensation interval counter. If the compensation interval counter equals zero then it is loaded with the contents of the CIR. If the CIC does not equal zero then it is decremented once a second. Reading this register at the same time as the seconds counter is incrementing can result in an incorrect value being read.
23-16 TCV	Time Compensation Value Current value used by the compensation logic for the present second interval. Updated once a second if the CIC equals 0 with the contents of the TCR field. If the CIC does not equal zero then it is loaded with zero (compensation is not enabled for that second increment). Reading this register at the same time as the seconds counter is incrementing can result in an incorrect value being read.
15-8 CIR	Compensation Interval Register Configures the compensation interval in seconds from 1 to 256 to control how frequently the TCR should adjust the number of 32.768 kHz cycles in each second. The value written should be one less than the number of seconds. For example, write zero to configure for a compensation interval of one second. This register is double buffered and writes do not take effect until the end of the current compensation interval.
7-0 TCR	Time Compensation Register Configures the number of 32.768 kHz clock cycles in each second, equal to 32,768 - TCR (where TCR is a two's complement sign extended value). This register is double buffered and writes do not take effect until the end of the current compensation interval. Some example values are shown below. 0000_0000b - Time Prescaler Register overflows every 32768 clock cycles. 0000_0001b - Time Prescaler Register overflows every 32767 clock cycles. 0111_1110b - Time Prescaler Register overflows every 32642 clock cycles. 0111_1111b - Time Prescaler Register overflows every 32641 clock cycles. 1000_0000b - Time Prescaler Register overflows every 32896 clock cycles. 1000_0001b - Time Prescaler Register overflows every 32895 clock cycles. 1111_1111b - Time Prescaler Register overflows every 32769 clock cycles.

32.5.1.6 RTC Control (CR)

Offset

Register	Offset
CR	10h

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	Reserved								0						Reserved	
W	0														0	
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserv ed	Reserv ed	Reserv ed	Reserv ed	Reserv ed	Reserv ed	Reserv ed	Reserv ed	LPOS	0	Reserv ed	Reserv ed	UM	Reserv ed	Reserv ed	SWR
W	0	0	0	0	0	0	0	0			0	0		0		
Reset	0	0	0	0	0	0	0	0	1	0	0	0	0	0	0	0

Fields

Field	Function
31-24 —	Reserved
23-18 —	Reserved
17-16 —	Reserved
15 —	Reserved
14 —	Reserved
13 —	Reserved
12 —	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
11 —	Reserved
10 —	Reserved
9 —	Reserved
8 —	Reserved
7 LPOS	LPO Select When set, the RTC prescaler increments using an internal clock. The LPO increments the prescaler from bit TPR[5] (TPR[4:0] are ignored), supporting close to 1 second increment of the seconds register. Although compensation is supported when clocked from the LPO, TCR[4:0] of the compensation register are also ignored and only TCR[7:5] set the compensation value (can overflow after 1020 to 1027 cycles). 0b - RTC prescaler increments using 32.768 kHz clock. 1b - RTC prescaler increments using 16.384 kHz LPO. Bit [0] of the prescaler is ignored.
6 —	Reserved
5 —	Reserved
4 —	Reserved
3 UM	Update Mode Allows SR[TCE] to be written even when the Status Register is locked. When set, the SR[TCE] can be written if the SR[TIF] or SR[TOF] are set or if the SR[TCE] is clear. Whenever both SR[TCE] and CR[UM] are set, then SR[TCE] should only be written once either SR[TIF] or SR[TOF] are set. 0b - Registers cannot be written when locked. 1b - Registers can be written when locked under limited conditions.
2 —	Reserved
1 —	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
0 SWR	Software Reset 0b - No effect. 1b - Resets all RTC registers except for the SWR bit . The SWR bit is cleared by POR and by software explicitly clearing it.

32.5.1.7 RTC Status (SR)

Offset

Register	Offset
SR	14h

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0								0	0			0	TAF	TOF	TIF
W										TCE						
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1

Fields

Field	Function
31-8 —	Reserved
7 —	Reserved
6-5 —	Reserved
4 TCE	Time Counter Enable Specifies whether to enable or disable time counter:

Table continues on the next page...


Table continued from the previous page...

Field	Function
	0b - Disables. When time counter is disabled the TSR register and TPR register are writeable, but do not increment. 1b - Enables. When time counter is enabled the TSR register and TPR register are not writeable, but increment.
3 —	Reserved
2 TAF	Time Alarm Flag - Is set when the TAR[TAR] equals the TSR[TSR] and the TSR[TSR] increments. - Is cleared by writing the TAR register. - Indicates whether time alarm has occurred: 0b - Time alarm has not occurred. 1b - Time alarm has occurred.
1 TOF	Time Overflow Flag - Is set when the time counter is enabled and overflows. The TSR and TPR do not increment and read as zero when this bit is set. - Is cleared by writing the TSR register when the time counter is disabled. - Indicates whether time overflow has occurred: 0b - Time overflow has not occurred. 1b - Time overflow has occurred and time counter reads as zero.
0 TIF	Time Invalid Flag - The time invalid flag is set on POR or software reset. - The TSR and TPR do not increment and read as zero when this bit is set. - This bit is cleared by writing the TSR register when the time counter is disabled. - Indicates whether the time is valid or invalid: 0b - Time is valid. 1b - Time is invalid and time counter is read as zero.

32.5.1.8 RTC Lock (LR)

Offset

Register	Offset
LR	18h

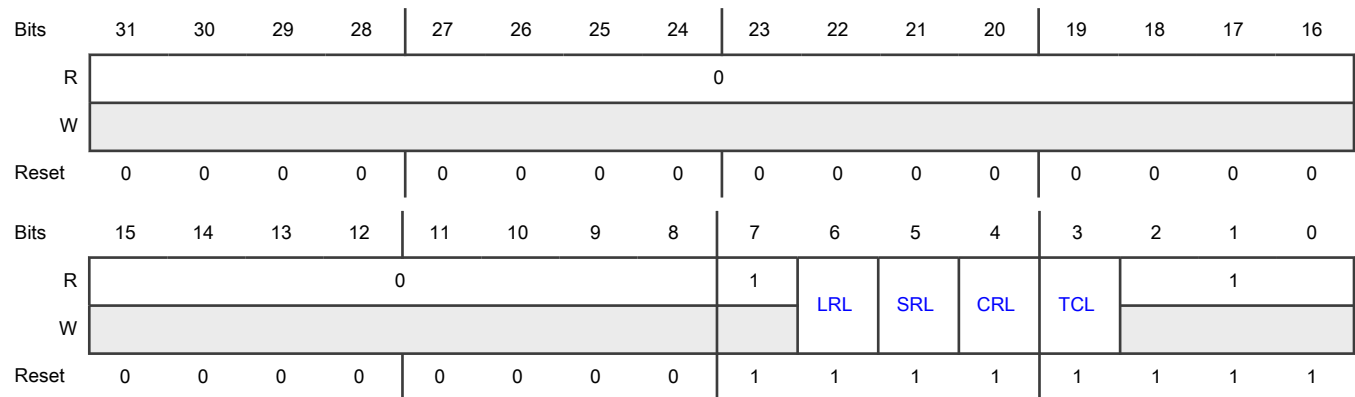Diagram**Fields**


Field	Function
31-8 —	Reserved
7 —	Reserved
6 LRL	Lock Register Lock After being cleared, this bit can be set only by POR or software reset. 0b - Lock Register is locked and writes are ignored. 1b - Lock Register is not locked and writes complete as normal.
5 SRL	Status Register Lock After being cleared, this bit can be set only by POR or software reset. 0b - Status Register is locked and writes are ignored. 1b - Status Register is not locked and writes complete as normal.
4 CRL	Control Register Lock After being cleared, this bit can only be set by POR. 0b - Control Register is locked and writes are ignored. 1b - Control Register is not locked and writes complete as normal.
3 TCL	Time Compensation Lock After being cleared, this bit can be set only by POR or software reset. 0b - Time Compensation Register is locked and writes are ignored. 1b - Time Compensation Register is not locked and writes complete as normal.
2-0 —	Reserved

32.5.1.9 RTC Interrupt Enable (IER)

Offset

Register	Offset
IER	1Ch

Diagram

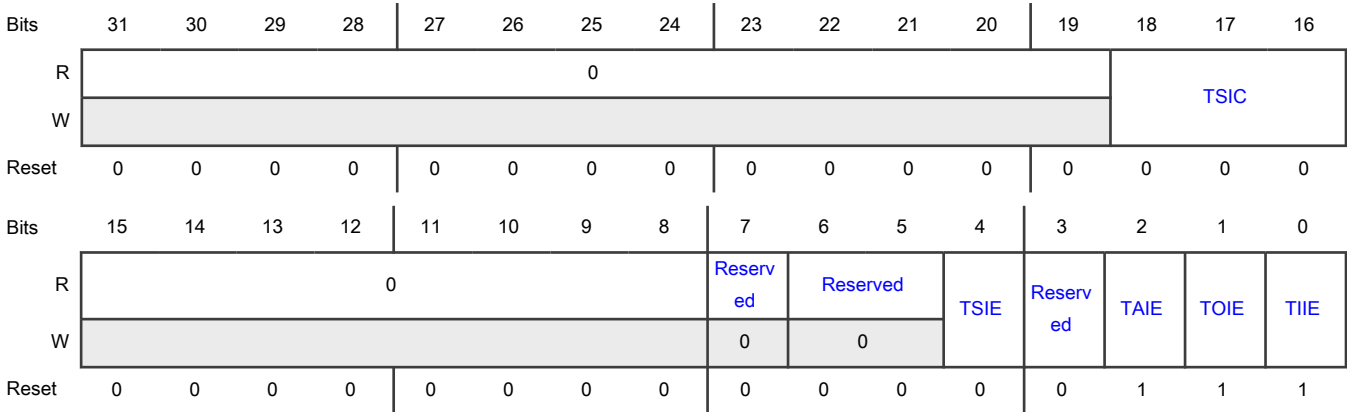

Fields

Field	Function
31-19 —	Reserved
18-16 TSIC	Timer Seconds Interrupt Configuration Configures the frequency of the RTC Seconds interrupt and the RTC_CLKOUT prescaler output. This field should only be altered when TSIE is clear. 000b - 1 Hz. 001b - 2 Hz. 010b - 4 Hz. 011b - 8 Hz. 100b - 16 Hz. 101b - 32 Hz. 110b - 64 Hz. 111b - 128 Hz.
15-8 —	Reserved
7	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
—	
6-5 —	Reserved
4 TSIE	Time Seconds Interrupt Enable • Is an edge-sensitive interrupt with a dedicated interrupt vector. It is generated at least once a second and requires no software overhead (there is no corresponding status flag to clear). • The frequency of the seconds interrupt is configured by TSIC. • Specifies whether to enable or disable the time seconds interrupt: 0b - Disables 1b - Enables
3 —	Reserved
2 TAIE	Time Alarm Interrupt Enable Specifies whether an interrupt is generated by the time alarm flag: 0b - No interrupt is generated. 1b - An interrupt is generated.
1 TOIE	Time Overflow Interrupt Enable Specifies whether an interrupt is generated by the time overflow flag: 0b - No interrupt is generated. 1b - An interrupt is generated.
0 TIIE	Time Invalid Interrupt Enable Specifies whether an interrupt is generated by the time invalid flag: 0b - No interrupt is generated. 1b - An interrupt is generated.

Chapter 33

Enhanced Flex Pulse Width Modulator (eFlexPWM)

33.1 Chip-specific PWM information

Table 196. Reference links to related information

Topic	Related module	Reference
Full description	PWM	PWM
System memory map		Memory map
Clocking		Clock distribution
Power Management		Power Management
Bus and Memories		Memory architecture
Signal multiplexing	Port control	Signal multiplexing

33.1.1 Module instances

This device supports two instances of the FlexPWM module: FlexPWM0 and FlexPWM1. It has 4 sub-modules.


33.2 Overview

The Enhanced Flex Pulse Width Modulator (eFlexPWM) module contains PWM submodules, each of which can be used to control a single half-bridge power stage. Fault channel support is provided.

eFlexPWM generates various switching patterns, including highly sophisticated waveforms. It is ideal for controlling different Switched Mode Power Supplies (SMPS) topologies.

33.2.1 Block diagram

The following figure shows the eFlexPWM block diagram.

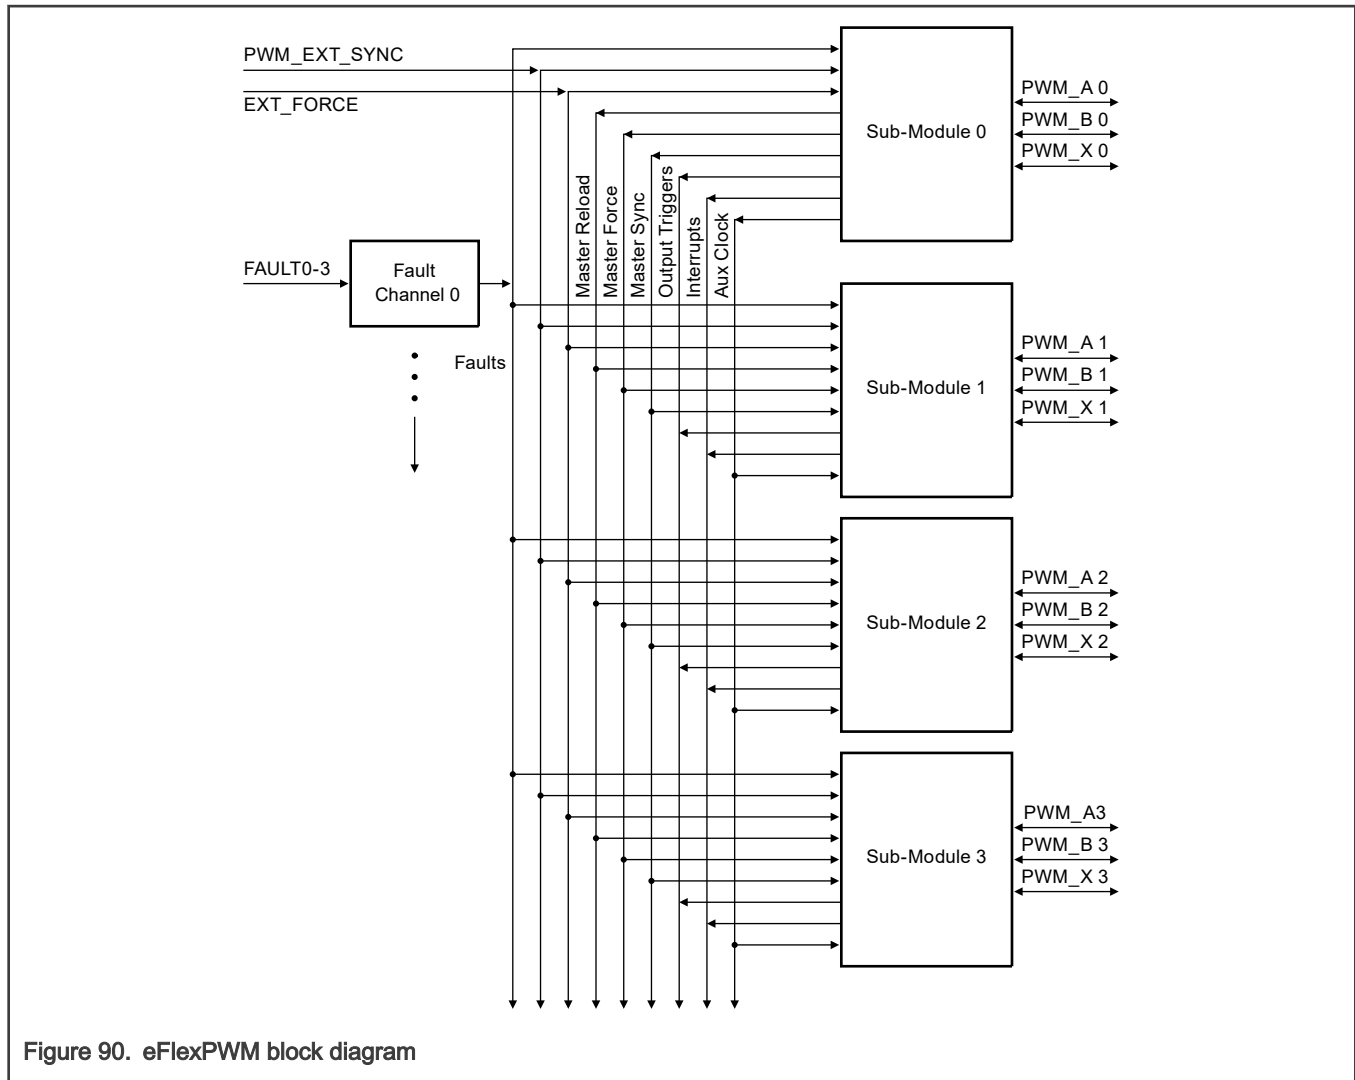

33.2.2 Features

Following are the features of eFlexPWM:

- 16-bit resolution for center, edge-aligned, and asymmetrical PWMs
- PWM outputs that can operate as complementary pairs or independent channels
- Ability to accept signed numbers for PWM generation
- Independent control of both edges of each PWM output
- Support for synchronization to external hardware or other PWM
- Double buffered PWM registers
 - Integral reload rates from 1 to 16
 - Half cycle reload capability
- Multiple output trigger events can be generated per PWM cycle via hardware
- Support for double switching PWM outputs
- Fault inputs can be assigned to control multiple PWM outputs
- Programmable filters for fault inputs

- Independently programmable PWM output polarity
- Independent top and bottom deadtime insertion
- Each complementary pair can operate with its own PWM frequency and deadtime values
- Individual software control for each PWM output
- All outputs can be programmed to change simultaneously via a FORCE_OUT event
- PWM_X pin can optionally output a third PWM signal from each submodule
- Channels not used for PWM generation can be used for buffered output compare functions and for input capture functions
- Enhanced dual edge capture functionality

33.3 Functional description

33.3.1 eFlexPWM submodule

The following figure shows the Submodule Block Diagram of eFlexPWM.

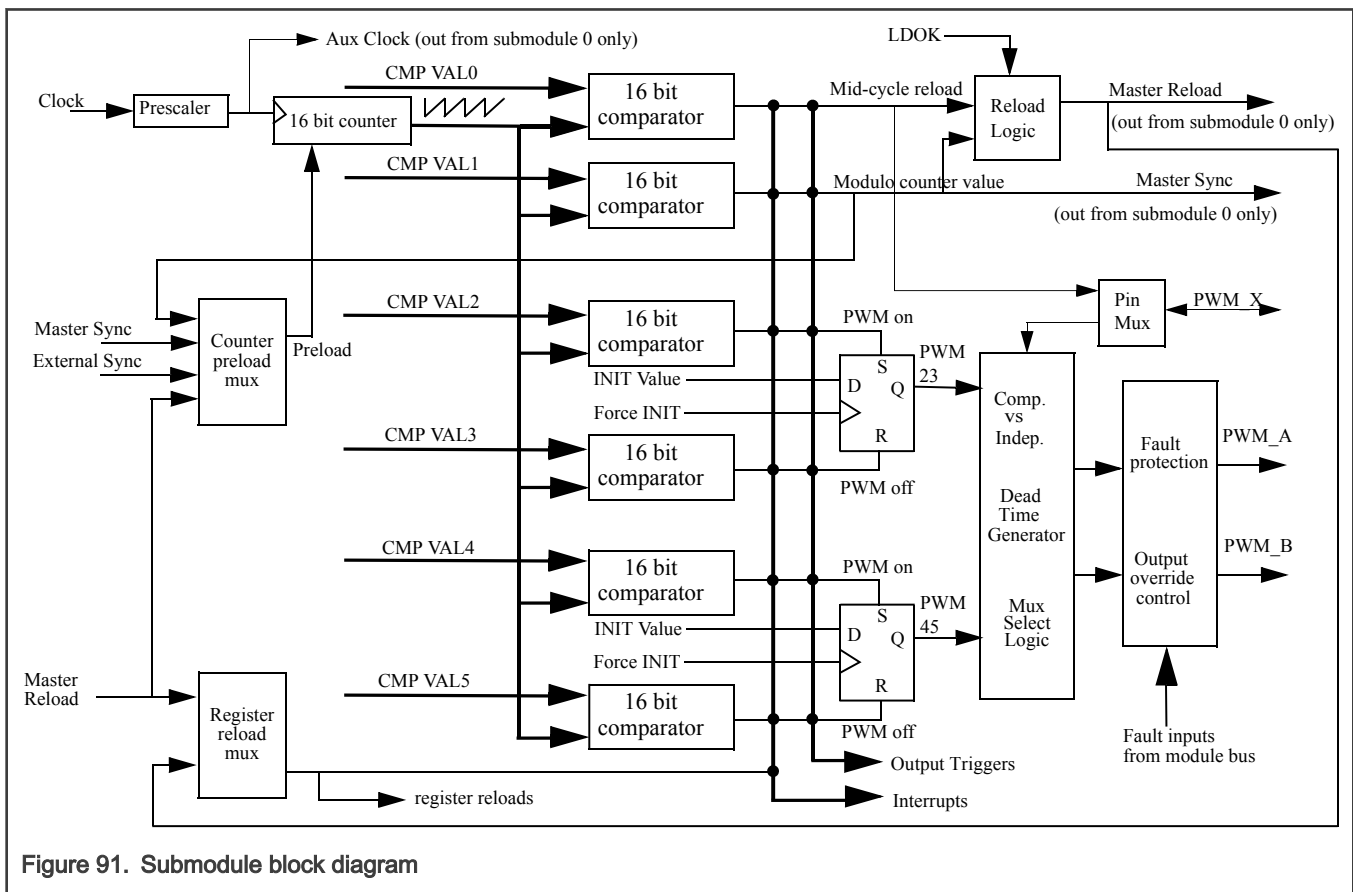


Figure 91. Submodule block diagram

33.3.2 eFlexPWM capabilities

This section describes some capabilities of the eFlexPWM module.

33.3.2.1 Center aligned PWMs

Each submodule has its own timer that is capable of generating PWM signals on two output pins. The edges of each of these signals are controlled independently as shown in [Figure 92](#).

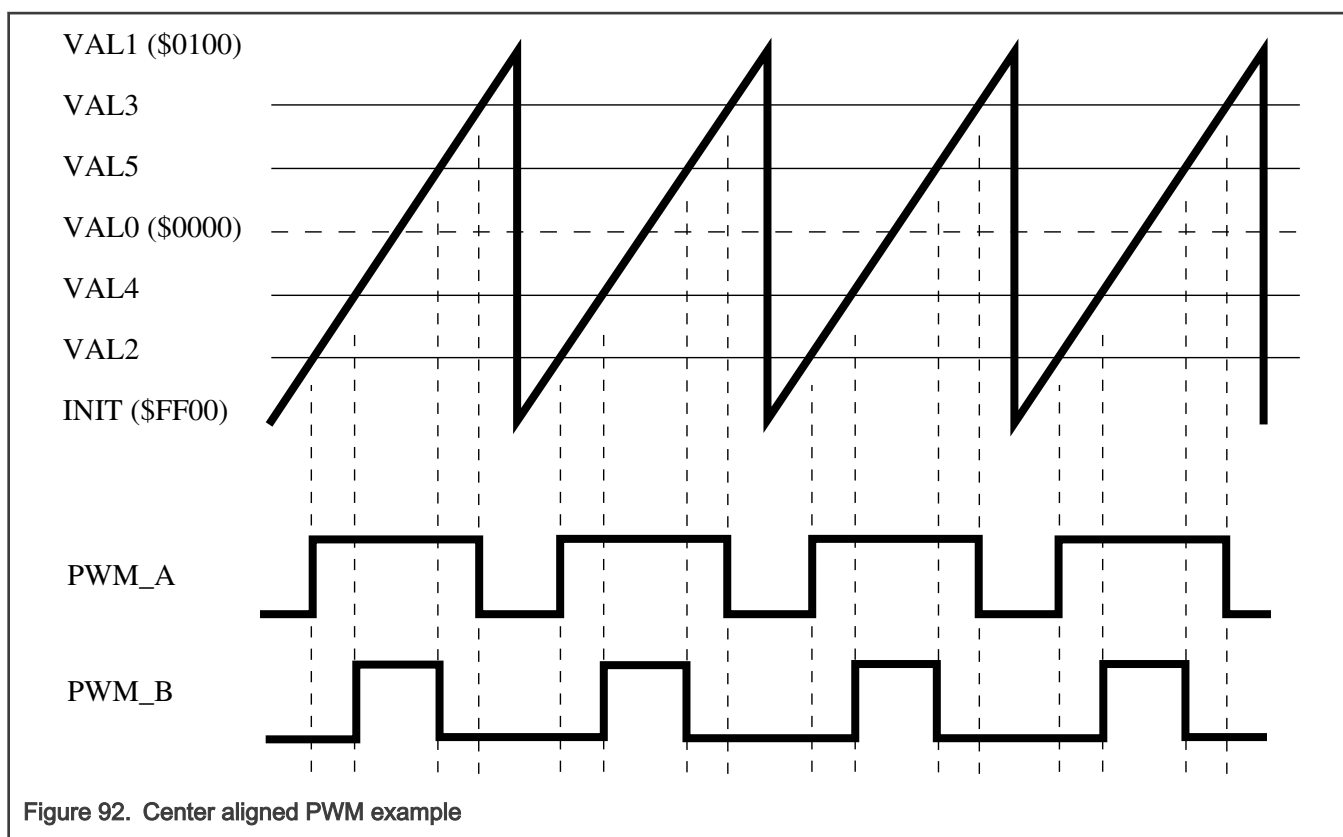



Figure 92. Center aligned PWM example

The submodule timers only count in the up direction and then reset to the INIT value. Instead of having a single value that determines pulse width, there are two values that must be specified: the turn-on edge and the turn-off edge. This double-action edge generation provides the user control over the pulse width and also the relative alignment of the signal. As a result, there is no need to support separate PWM alignment modes since the PWM alignment mode is inherently a function of the turn-on and turn-off edge values.

Figure 92 also illustrates an additional enhancement to the PWM generation process. When the counter resets, it is reloaded with a user-specified value, which may or may not be zero. If the value chosen happens to be the 2's complement of the modulus value, then the PWM generator operates in "signed" mode. This means if each PWM's turn-on and turn-off edge values are same in numbers but different in their sign, the "on" portion of the output signal is centered around a count value of zero. Therefore, only one PWM value is calculated in software and then this value and its negative are provided to the submodule as the turn-off and turn-on edges respectively. This technique results in a pulse width consists of an odd number of timer counts. If all PWM signal edge calculations follow this convention, then the signals will be center aligned with each other, which is the goal. The center alignment between the signals is not restricted to symmetry around the zero count value, as any other number would also work. However, centering on zero provides the greatest range in signed mode and also simplifies the calculations.

33.3.2.2 Edge aligned PWMs

Figure 93 shows the results of edge aligned operation when the turn-on edge for each pulse is specified to be the INIT value. Therefore, only the turn-off edge value needs to be periodically updated to change the pulse width.

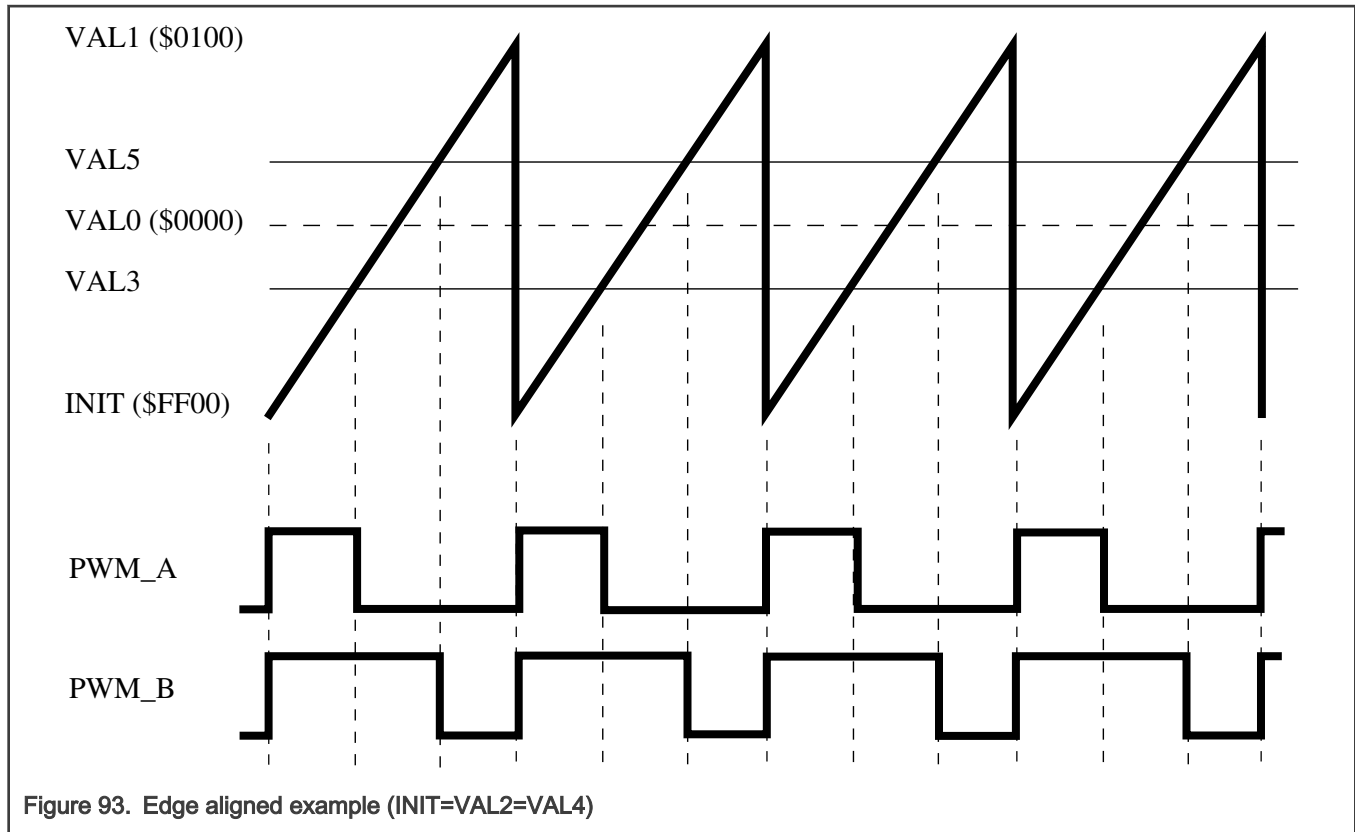


With edge aligned PWMs, another example of the benefits of signed mode can be seen. Use "bipolar" PWMs to drive an H-bridge, where a 50% duty cycle results in zero volts on the load. Duty cycles less than 50% generate negative load voltages and duty cycles greater than 50% generate positive load voltages. If the module is set to signed mode operation (the INIT and VAL1 values are the same number with opposite signs), then there is a direct proportionality between the PWM turn-off edge value and the motor inverter voltage, including the sign. Therefore, signed mode of operation simplifies the software interface to the eFlexPWM module since no offset calculations are required to translate the output variable control algorithm to the voltage on an H-Bridge load.

33.3.2.3 Phase shifted PWMs

In the previous sections, the benefits of the signed mode of operation were discussed in the context of simplifying the required software calculations by eliminating the requirement to bias up signed variables before applying them to the module. However, if numerical biases are applied to the turn-on and turn-off edges of different PWM signals, the signals will be phase shifted to each other, as shown in [Figure 94](#). This results in certain advantages when applied to a power stage. For example, when operating a multi-phase inverter at a low modulation index, all of the PWM switching edges from the different phases occur at the same time. This can be troublesome from a noise standpoint, especially if ADC readings of the inverter must be scheduled near those times. Phase shifting the PWM signals can open up timing windows between the switching edges to allow a signal to be sampled by the ADC. However, phase shifting does not affect the duty cycle so average load voltage is not affected.


If the outputs of submodules 1 - 3 need to be delayed from the output of submodule 0 (and from each other), instead of just creating a phase delay by adding an offset to the turn on and turn off times of the different submodules, another method is to use the PHASEDLY registers for submodules 1 - 3 to indicate their delay from the submodule 0 timing. This method can be used when the master sync signal from submodule 0 is selected as the initialization source (CTRL2[INIT_SEL]==b10). This method allows all of the submodules to be programmed with the same turn on and turn off time but submodules 1 - 3 can still be delayed the time from submodule 0.

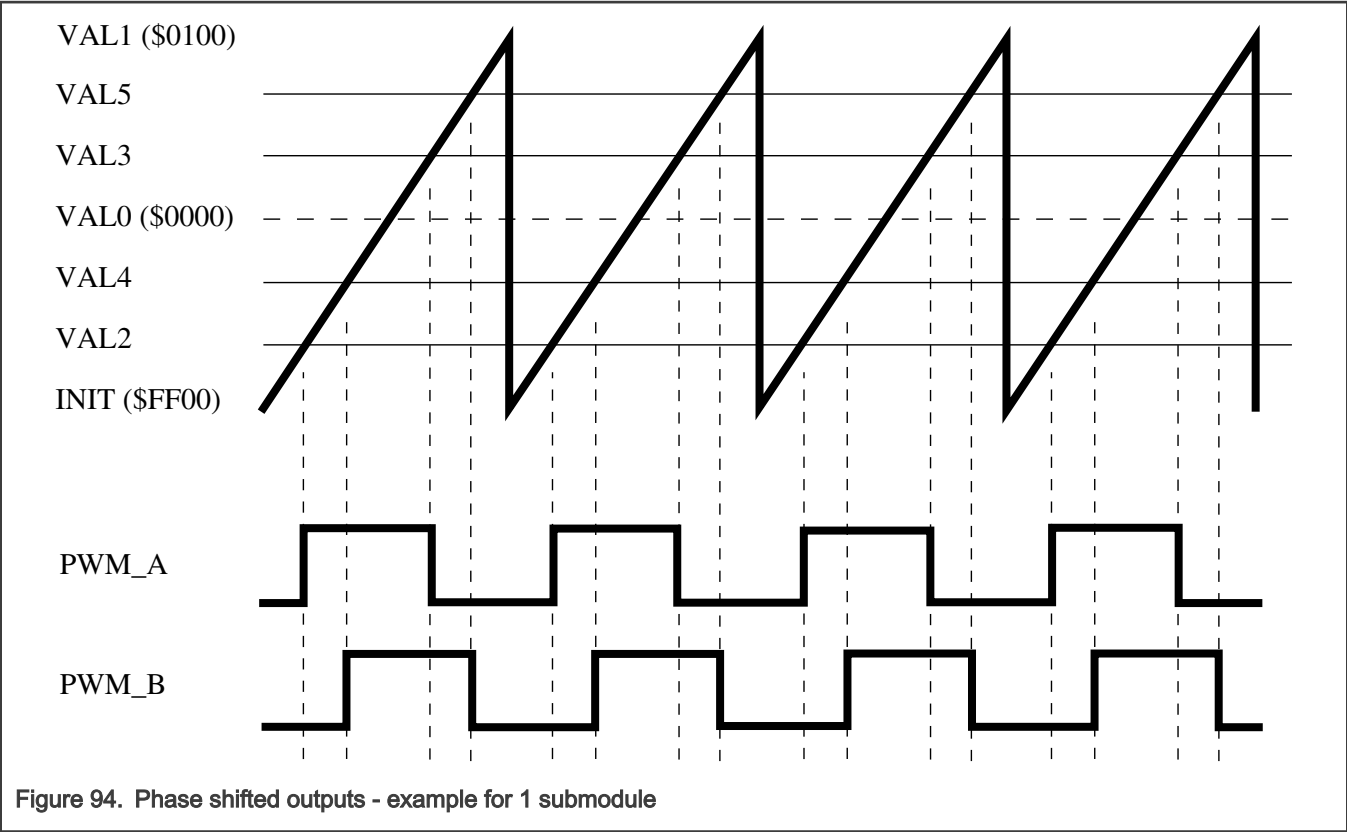

An additional benefit of phase shifted PWMs is shown in [Figure 95](#). In this case, an H-Bridge circuit is driven by 4 PWM signals to control the voltage waveform on the primary of a transformer. Both left and right side PWMs are configured to generate a square wave with 50% duty cycle. This works for the H-Bridge since no narrow pulse widths are generated reducing the high frequency switching requirements of the transistors. The RMS value of this waveform is directly controlled by the amount of phase shift of the square waves. Regardless of the phase shift, no DC component appears in the load voltage as long as the duty cycle of each square wave remains at 50% suitable for transformer loads. As a result, this topology is frequently used in industrial welders to adjust the amount of energy delivered to the weld arc.


NOTE

The square wave on the right side of the H-Bridge is phase shifted compared to the left side of the H-Bridge. As a result, the transformer primary sees the bottom waveform across its terminals.

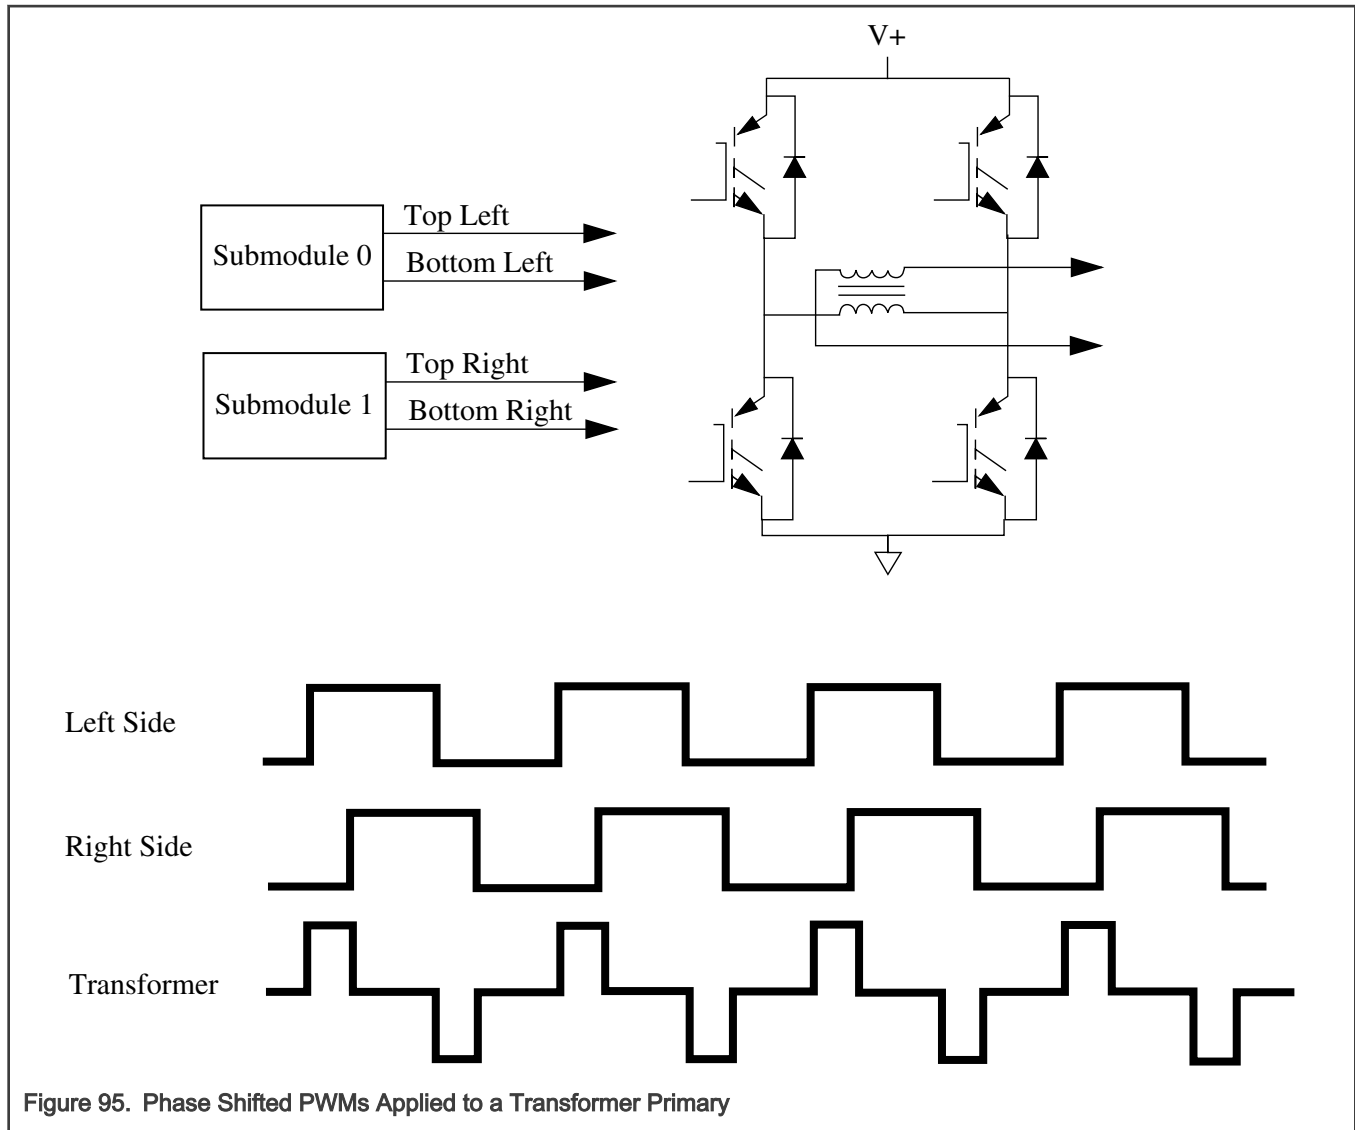


33.3.2.4 Double switching PWMs

Double switching PWM output is supported to aid in single shunt current measurement and three-phase reconstruction. This method supports two independent rising edges and two independent falling edges per PWM cycle. The VAL2 and VAL3 registers are used to generate the even channel (labeled as PWM_A in [Figure 96](#)) while VAL4 and VAL5 are used to generate the odd channel. The two channels (PWM23 or PWM_A and PWM45 or PWM_B from force out logic) are combined using XOR logic (force out logic) as the following figure shows. The DBLPWM signal can be run through the deadtime insertion logic.

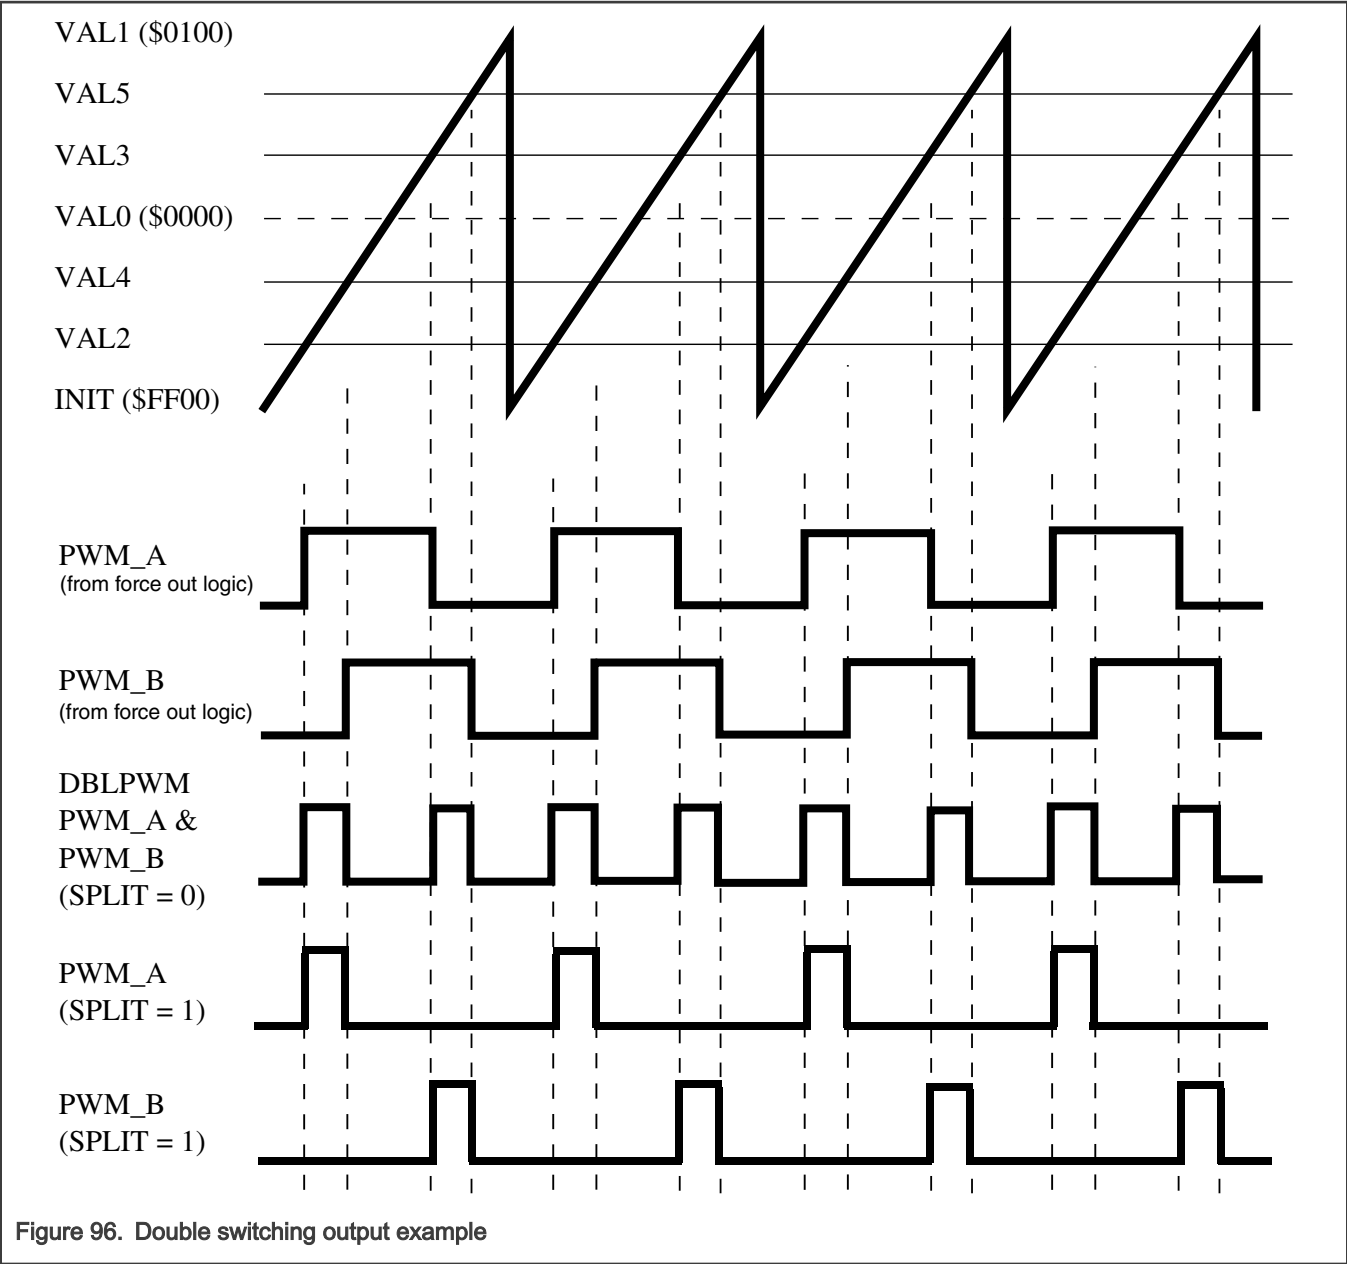


33.3.2.5 ADC triggering

In cases where the timing of the ADC triggering is critical, it must be scheduled as a hardware event instead of software activated. With this eFlexPWM module, multiple ADC triggers can be generated in hardware per PWM cycle without the requirement of another timer module. [Figure 97](#) shows how this is accomplished. When specifying a complementary mode of operation, only two edge comparators are required to generate the output PWM signals for a given submodule. This means the other comparators are free to perform other functions. In this example, the software does not need to quickly respond after the first conversion to set up other conversions that must occur in the same PWM cycle.

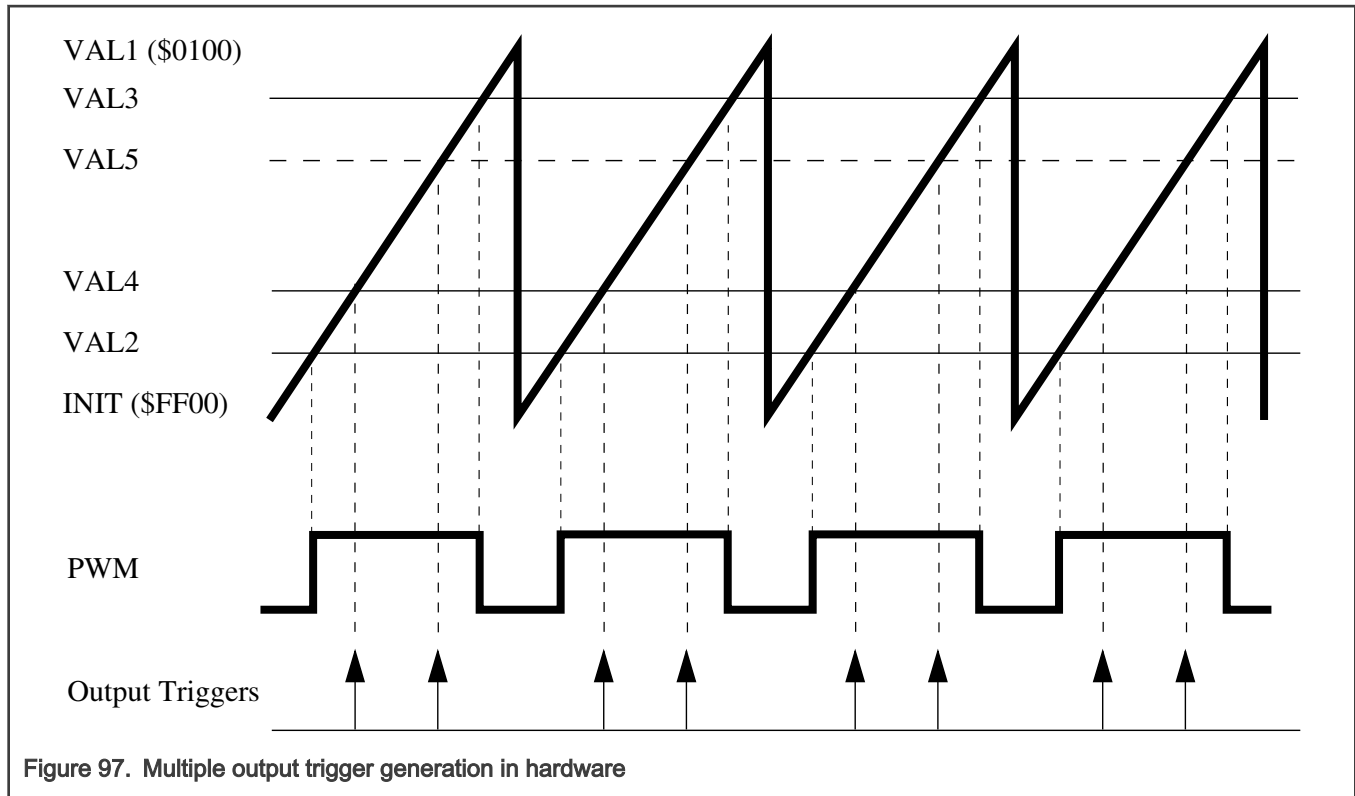


Because each submodule has its own timer, it is possible for each submodule to run at a different frequency. One of the options possible with this eFlexPWM module is to have one or more submodules running at a lower frequency, but still synchronized to the timer in submodule0. [Figure 98](#) shows how this feature can be used to schedule ADC triggers over multiple PWM cycles. You can use the lower-frequency submodule to control the sampling frequency of the software control algorithm where multiple ADC triggers can now be scheduled over the entire sampling period. In [Figure 98](#), *all* submodule comparators are shown being used for ADC trigger generation.

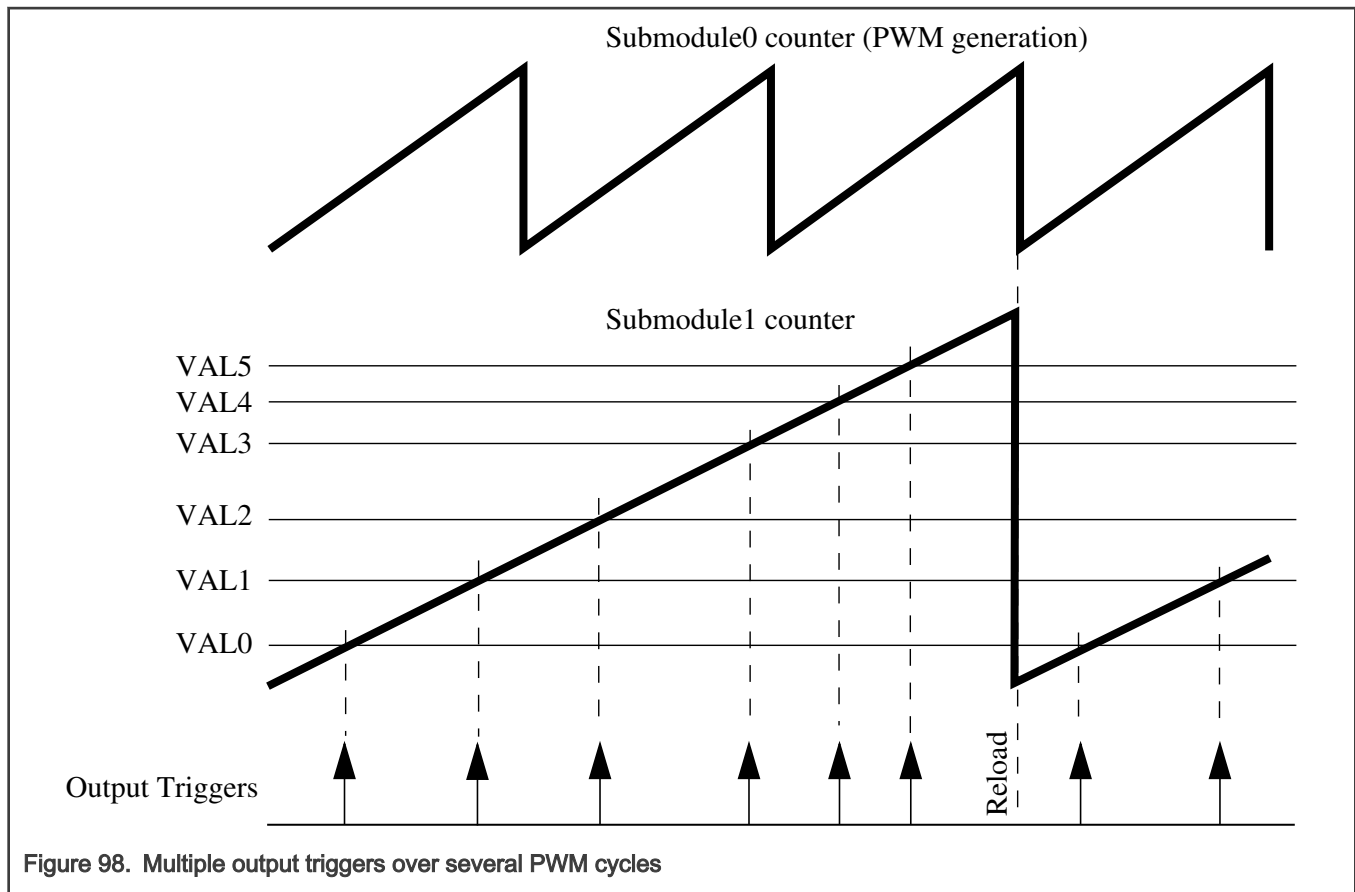


33.3.2.6 Enhanced capture capabilities (E-Capture)

When a PWM pin is not used for PWM generation, it can be used to perform input captures. For PWM generation, both edges of the PWM signals are specified via separate compare register values. When programmed for input capture, both of these registers work on the same pin to capture multiple edges, toggling from one to the other in either a free running or one-shot fashion. Programming the desired edge of each capture circuit, period, and pulse width of an input signal can easily be measured without the requirement to re-arm the circuit. In addition, each edge of the input signal can clock an 8-bit counter where the counter output is compared to a user specified value (EDGCMP). When the counter output equals EDGCMP, the value of the submodule timer is captured and the counter is automatically reset. This feature counts a specified number of edge events and then performs a capture and interrupt. The following figure illustrates some of the functionality of the E-Capture circuit.

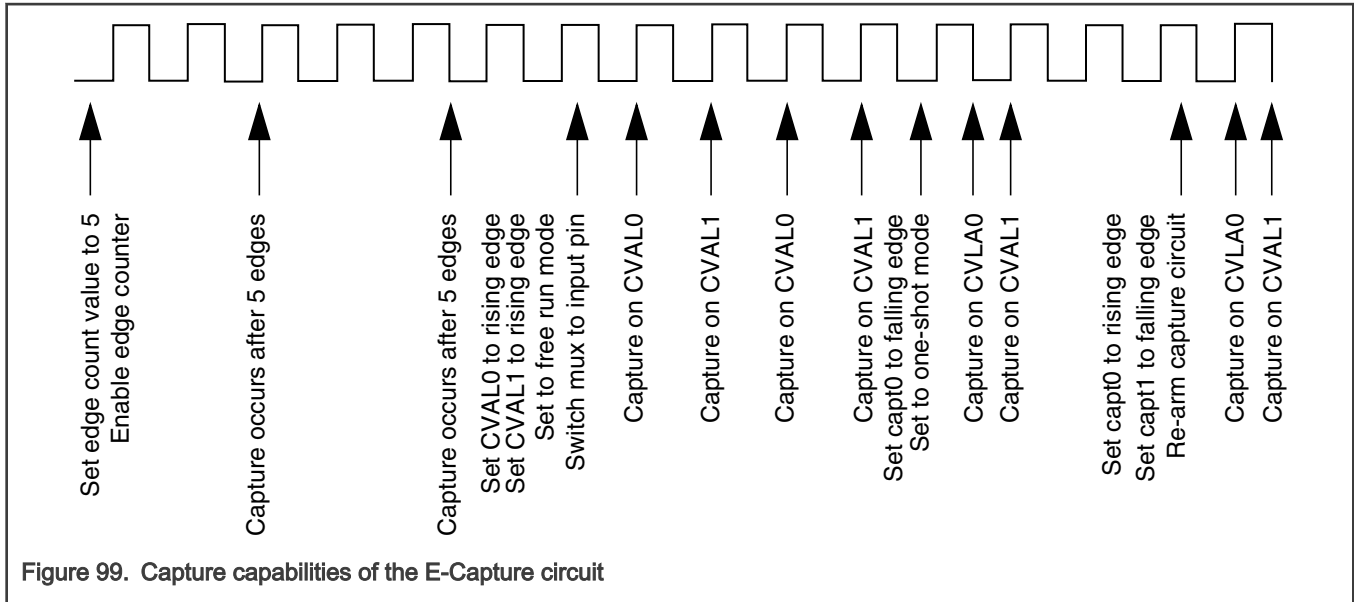

When a submodule is used for PWM generation, its timer counts up to the modulus value used to specify the PWM frequency and then is re-initialized. Therefore, using this timer for input captures on one of the other pins (for example, PWM_X) has limited utility since it does not count through all of the numbers and the timer reset represents a discontinuity in the 16-bit number range. However, when measuring a signal that is synchronous to the PWM frequency, the timer modulus range is suited for the application. As shown in [Figure 100](#), the output of a PWM power stage is connected to the PWM_X pin that is configured for free running input captures. Specifically, the CVAL0 capture circuitry is programmed for rising edges and the CVAL1 capture circuitry is set for falling edges. This results in new load pulse width data acquired every PWM cycle. To calculate the pulse width, subtract the CVAL0 register value from the CVAL1 register value. This measurement is beneficial when performing deadtime distortion correction on a half bridge circuit driving an inductive load. Also, these values can be directly compared to the VALx registers responsible for generating the PWM outputs to obtain a measurement of system propagation delays. For details, refer to the separate discussion of deadtime distortion correction.

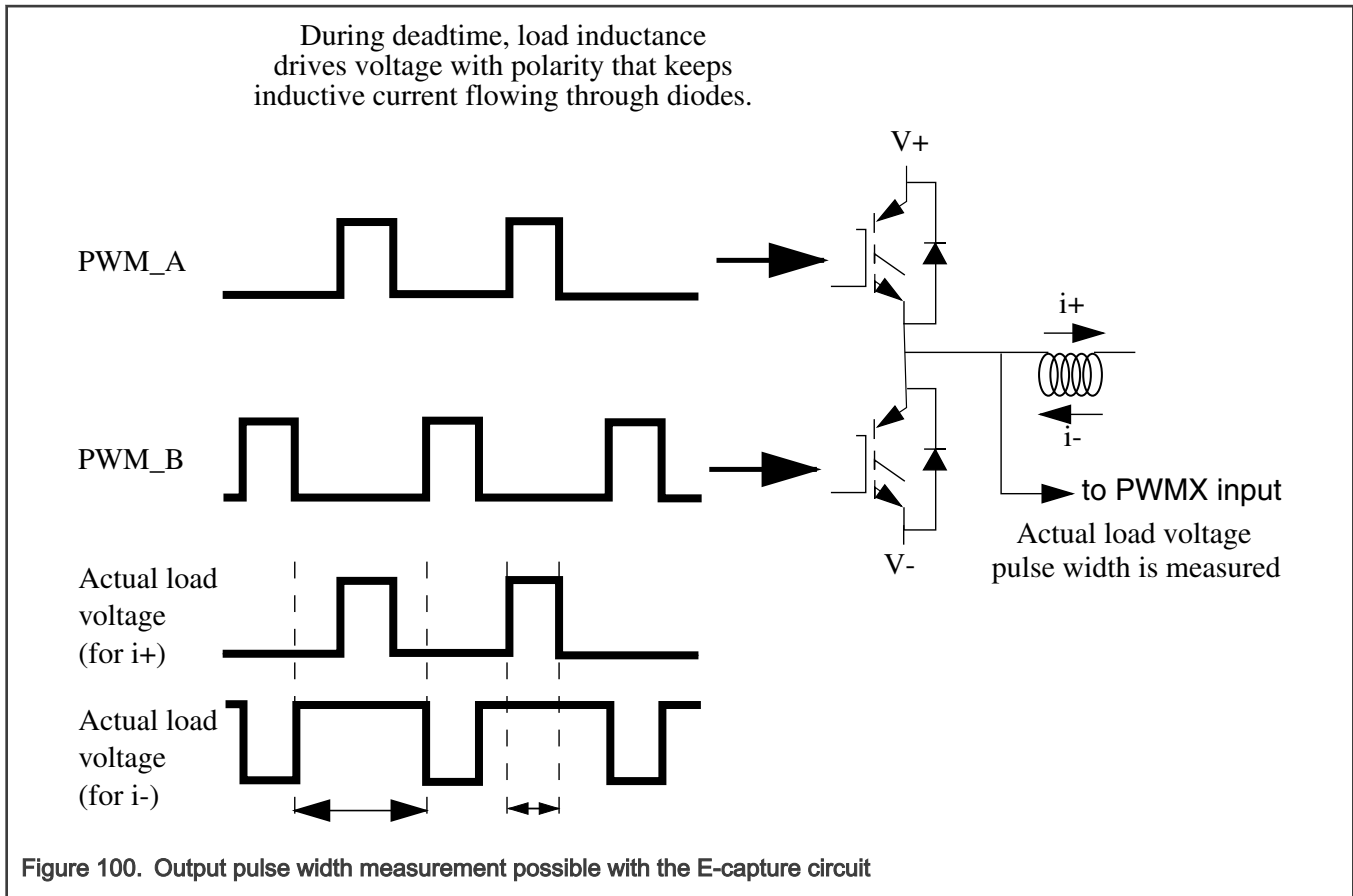


33.3.2.7 Synchronous switching of multiple outputs

Before the PWM signals are routed to the output pins, they are processed by a hardware block that permits all submodule outputs to be switched synchronously. This feature is useful in commutated motor applications where the next commutation state can be laid in ahead of time and then immediately switched to the outputs when the appropriate condition or time is reached. All the changes occur immediately after the trigger event occurs eliminating any interrupt latency and also the changes occur synchronously on all submodule outputs.

The synchronous output switching is accomplished via a signal called **FORCE_OUT**. This signal originates from the local **FORCE** bit within the submodule, from submodule0, or from external to the eFlexPWM module, and in most cases, is supplied from an external timer channel configured for output compare. In a typical application, software sets up the desired states of the output pins in preparation for the next **FORCE_OUT** event. This selection lays dormant until the **FORCE_OUT** signal transitions and then all outputs are switched simultaneously. The signal switching is performed upstream from the deadtime generator so that any abrupt changes that occur do not violate deadtime on the power stage when in complementary mode.


Figure 101 shows an application that can benefit from this feature. On a brushless DC motor in many cases, it is required to spin the motor without need of hall-effect sensor feedback. Instead, the back EMF of the motor phases is monitored and this information is used to schedule the next commutation event. The top waveforms of Figure 101 represent these back EMF signals. Timer compare events (represented by the long vertical lines in the diagram) are scheduled based on the zero crossings of the back-EMF waveforms. The eFlexPWM module is configured via software ahead of time with the next state of the PWM pins in anticipation of the compare event. When it happens, the output compare of the timer drives the **FORCE_OUT** signal which immediately changes the state of the PWM pins to the next commutation state with no software latency.

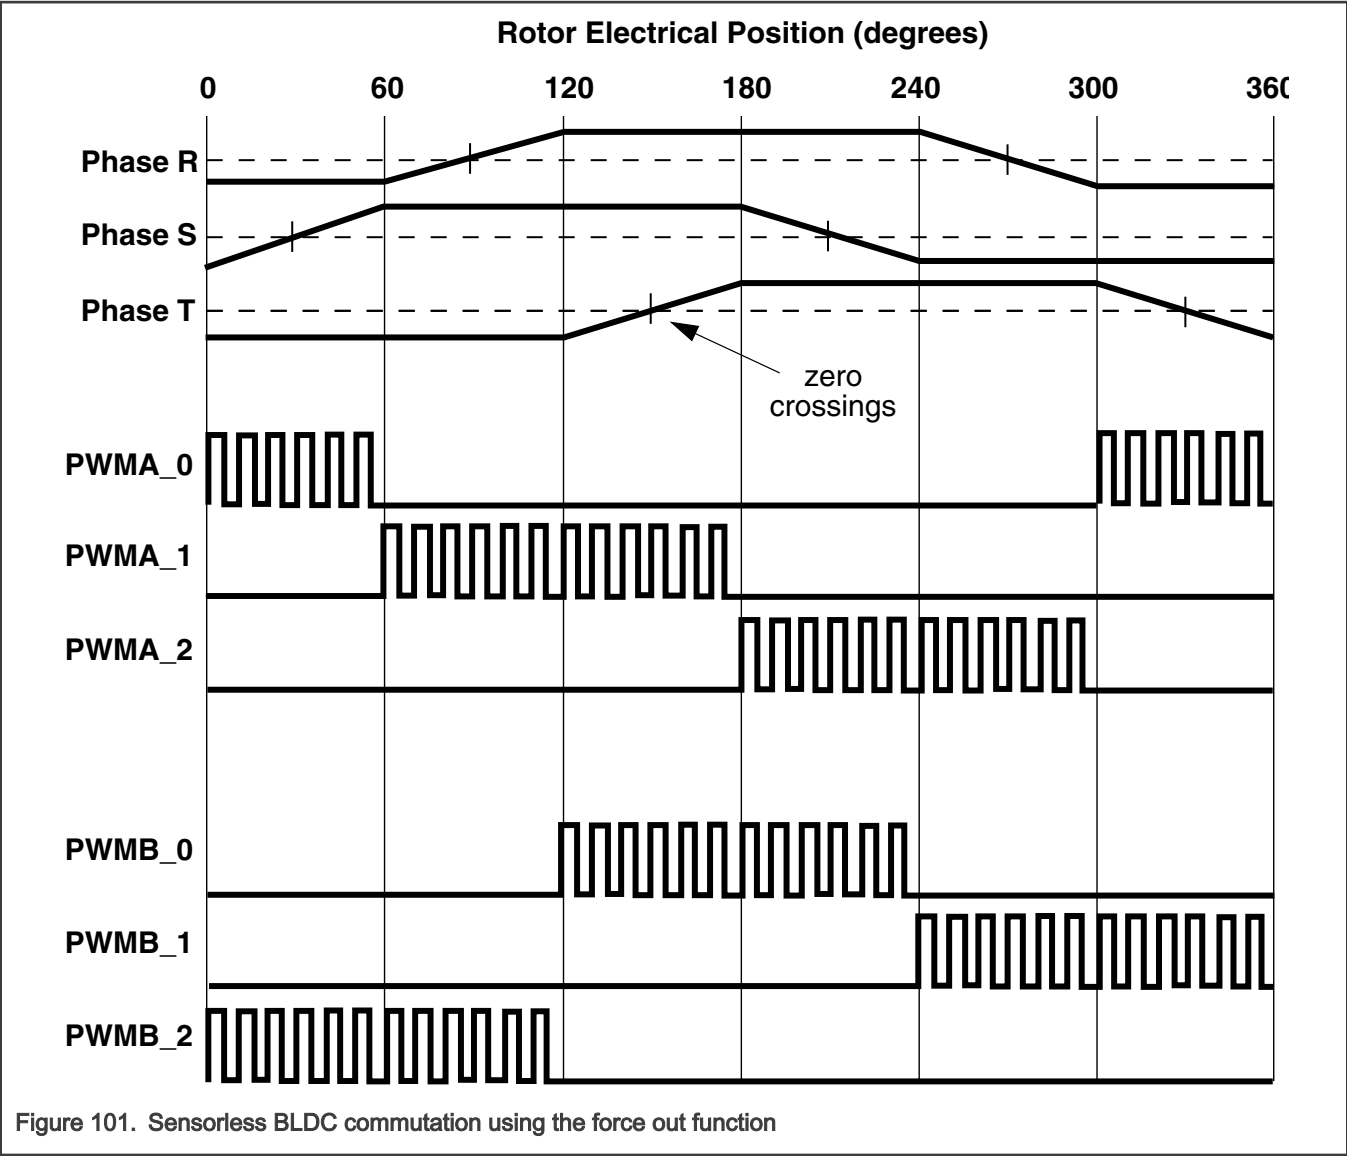

33.3.3 Operation

This section describes the implementation of various sections of eFlexPWM in detail.


The following figure is a high-level block diagram of output PWM generation.

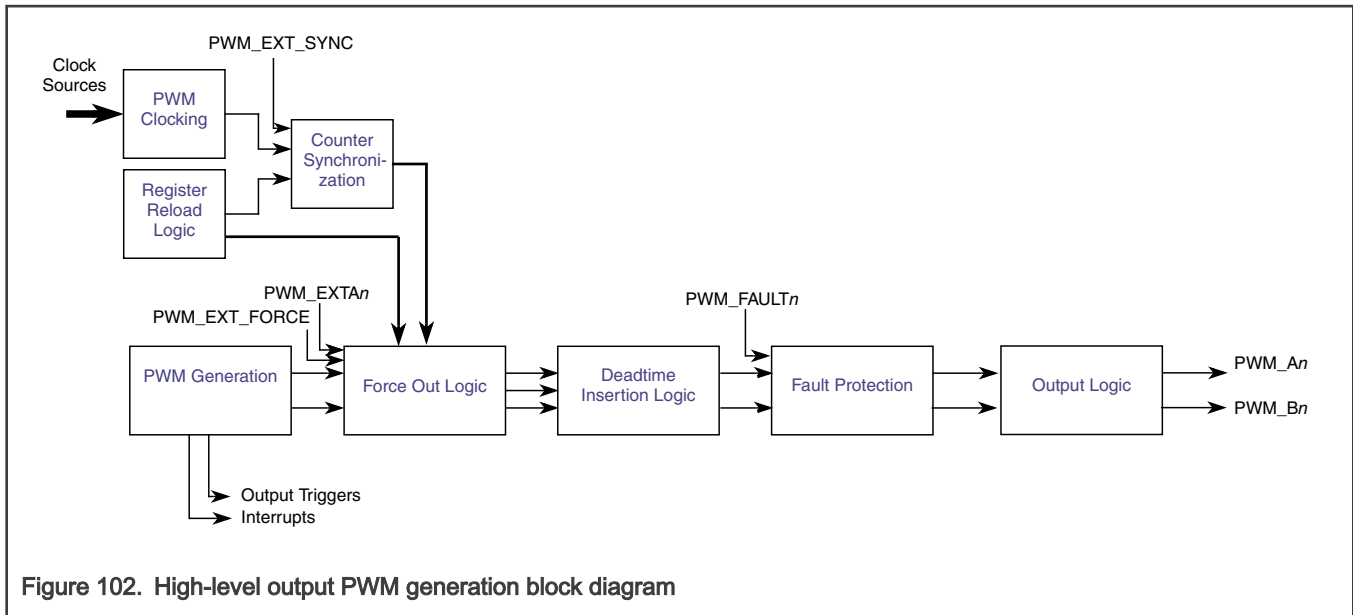

33.3.3.1 Register reload logic


The register reload logic is used to determine when the outer set of registers for all double buffered register pairs will be transferred to the inner set of registers. The register reload event can be scheduled to occur every "n" PWM cycles using CTRL[LDFQ] and CTRL[FULL], which is defined by VAL1 register. A half cycle reload option is also supported (CTRL[HALF]) where the reload can take place in the middle of a PWM cycle. The half cycle point is defined by the VAL0 register and does not have to be exactly in the middle of the PWM cycle.

As shown in [Figure 103](#) the reload signal from submodule0 can be broadcast as the Master Reload signal allowing the reload logic from submodule0 to control the reload of registers in other submodules.

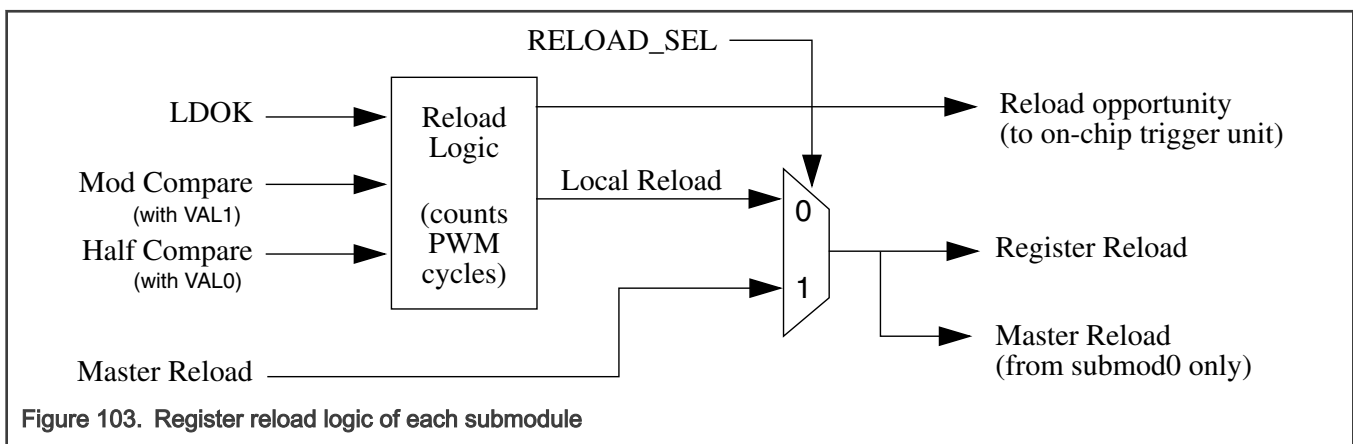

33.3.3.2 Counter synchronization

As shown in [Figure 104](#), the 16-bit counter counts up until its output equals VAL1 which is used to specify the counter modulus value. The resulting compare causes a rising edge to occur on the Local Synchronization signal which is one of four possible sources used to cause the 16-bit counter to be initialized with INIT. If Local Synchronization is selected as the counter initialization signal, VAL1 within the submodule effectively controls the timer period (and then the PWM frequency generated by that submodule), and everything operates or functions at a local level.

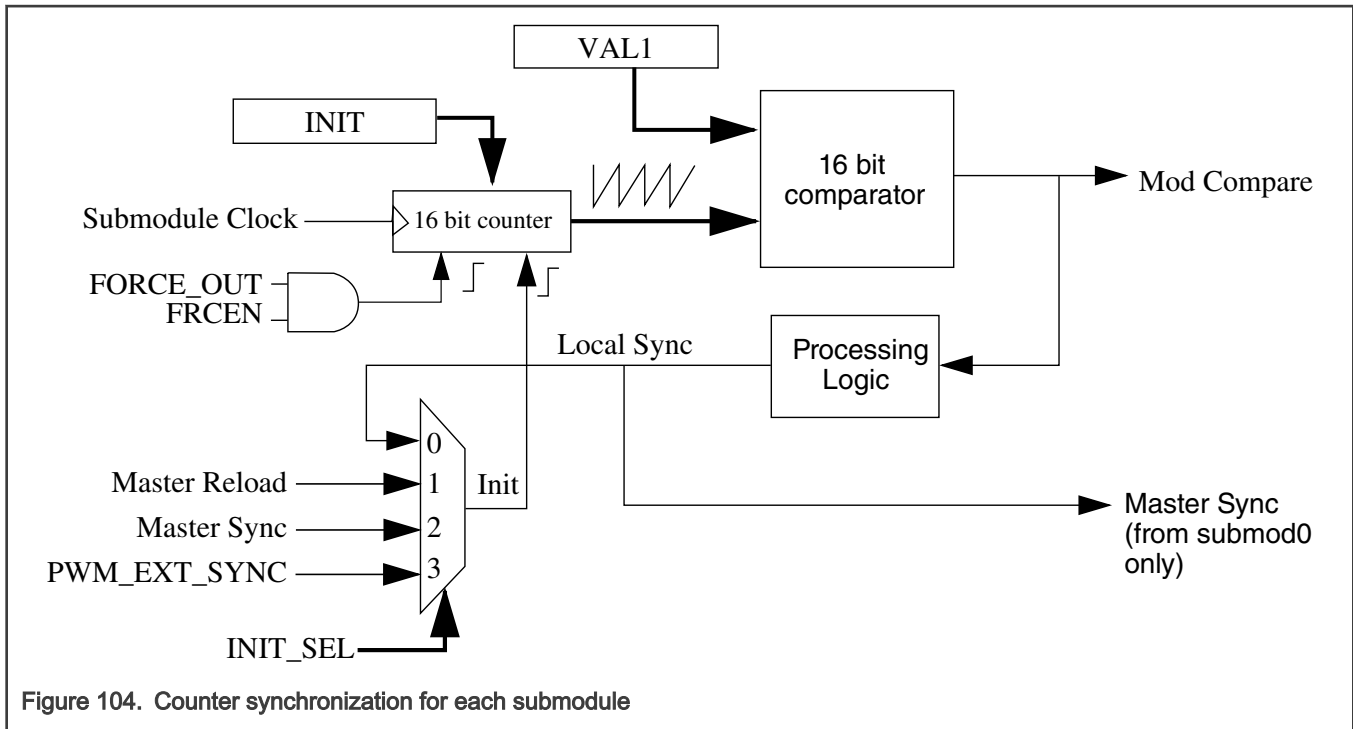

The Master Synchronization signal originates as the Local Sync from submodule0. If configured to do so, the timer period of any submodule can be locked to the period of the timer in submodule0.

The PWM_EXT_SYNC signal originates on chip or off chip depending on the system architecture. This signal may be selected as the source for counter initialization so that an external source can control the period of all submodules.

If the Master Reload signal is selected as the source for counter initialization, then the period of the counter will be locked to the register reload frequency of submodule0. Since the reload frequency is commensurate to the sampling frequency of the software control algorithm, the submodule counter period is equal the sampling period. As a result, this timer can be used to generate output compares or output triggers over the entire sampling period which may consist of several PWM cycles. The Master Reload signal can only originate from submodule0.

The counter can optionally initialize upon the assertion of the FORCE_OUT signal assuming that CTRL2[FRCEN] is set. As shown in Figure 104, this constitutes a second initialization input into the counter, which causes the counter to initialize regardless of which signal is selected as the counter initialization signal. A forced initialization causes a register reload if MCTRL[LDOK] is set.

The counter can be initialized by FORCE_OUT signal only when MCTRL[RUN] = 1 or CTRL2[CLK_SEL] = 2 which chooses auxiliary clock from SM0.

The FORCE_OUT signal is provided mainly for commutated applications. When PWM signals are commutated on an inverter controlling a brushless DC motor, it is necessary to restart the PWM cycle at the beginning of the commutation interval. This action effectively resynchronizes the PWM waveform to the commutation timing. Otherwise, the average voltage applied to a motor winding integrated over the entire commutation interval will be a function of the timing between the asynchronous commutation event for the PWM cycle. The effect is more critical at higher motor speeds where each commutation interval may consist of only a few PWM cycles. If the counter is not initialized at the start of each commutation interval, the result is an oscillation caused by the beating between the PWM frequency and the commutation frequency.

33.3.3.3 PWM generation

Figure 105 illustrates how PWM generation is accomplished in each submodule. In each case, two comparators and associated VALx registers are utilized for each PWM output signal. One comparator and VALx register are used to control the turn-on edge, while a second comparator and VALx register control the turn-off edge.

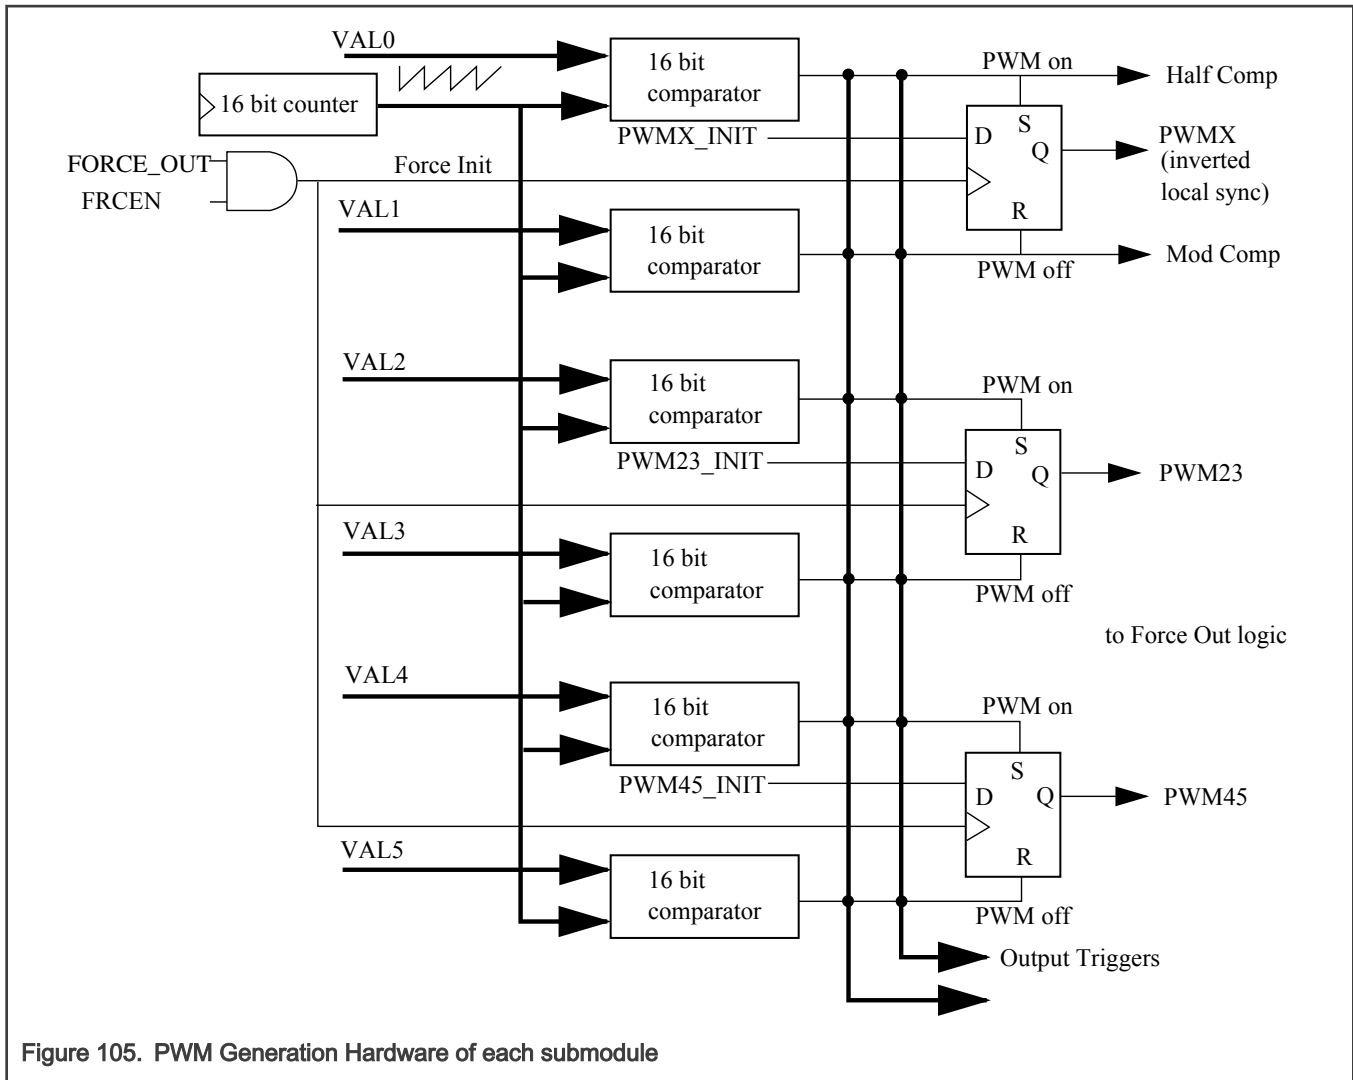


Figure 105. PWM Generation Hardware of each submodule

The generation of the Local Synchronization signal is performed exactly the same way as the other PWM signals in the submodule. While comparator 0 causes a falling edge of the Local Synchronization signal, comparator 1 generates a rising edge. Comparator 1 is also hardwired to the reload logic to generate the full cycle reload indicator.

If VAL1 is controlling the modulus of the counter and VAL0 is half of the VAL1 register minus the INIT value, then the half cycle reload pulse occurs exactly half way through the timer count period and the Local Synchronization will have a 50% duty cycle. On the other hand, if the VAL1 and VAL0 registers are not required for register reloading or counter initialization, they can be used to modulate the duty cycle of the Local Synchronization signal, effectively turning it into an auxiliary PWM signal (PWM_X) assuming that the PWM_X pin is not being used for another function such as input capture or deadtime distortion correction. Including the Local Synchronization signal, each submodule is capable of generating three PWM signals where software has complete control over each edge of each of the signals.

If the comparators and edge value registers are not required for PWM generation, they can be used for other functions such as output compares, generating output triggers, or generating interrupts at timed intervals.

The 16-bit comparators shown in Figure 105 are "equal to" comparators. In addition, if both the set and reset of the flip-flop are asserted, then the flop output goes to 0.

33.3.3.4 Output compare capabilities

By using the VALx registers in conjunction with the submodule timer and 16-bit comparators, buffered output compare functionality can be achieved with no additional hardware required. Specifically, the following output compare functions are possible:

- An output compare sets the output high
- An output compare sets the output low
- An output compare generates an interrupt
- An output compare generates an output trigger

In PWM generation, an output compare is initiated by programming a VALx register for a timer compare, which in turn causes the output of the D flip-flop to either set or reset. For example, if an output compare is desired on the PWM_A signal that sets it high, VAL2 would be programmed with the counter value where the output compare should take place. However, to prevent the D flip-flop from being reset again after the compare has occurred, the VAL3 register must be programmed to a value out of the modulus range of the counter. Therefore, a comparison that would result in resetting the D flip-flop output would never occur. Conversely, if an output compare is desired on the PWM_A signal that sets it low, the VAL3 register is programmed with the appropriate count value and the VAL2 register is programmed with a value out of the counter modulus range. Regardless of whether a high compare or low compare is programmed, an interrupt, or output trigger can be generated when the compare event occurs.


33.3.3.5 Force out logic

For each submodule, the software can select between eight signal sources for the FORCE_OUT signal depending on the chip architecture:

1. Local CTRL2[FORCE]
2. Master Force signal from submodule0
3. Local Reload signal
4. Master Reload signal from submodule0
5. Local Synchronization signal
6. Master Synchronization signal from submodule0
7. EXT_SYNC signal from on or off chip
8. EXT_FORCE signal from on or off chip

The local signals are used to change the signals on the output pins of the submodule without regard for synchronization with other submodules. However, if it is required that all signals on all submodule outputs change at the same time, the Master, EXT_SYNC, or EXT_FORCE signals must be selected.

Figure 106 illustrates the Force logic. The SEL23 and SEL45 fields each choose from one of four signals that can be supplied to the submodule outputs: the PWM signal, the inverted PWM signal, a binary level specified by software via the OUT23 and OUT45 bits, or the PWM_EXT_A alternate external control signals. The selection can be determined ahead of time, and when a FORCE_OUT event occurs, these values are presented to the signal selection mux that immediately switches the requested signal to the output of the mux for further processing downstream.

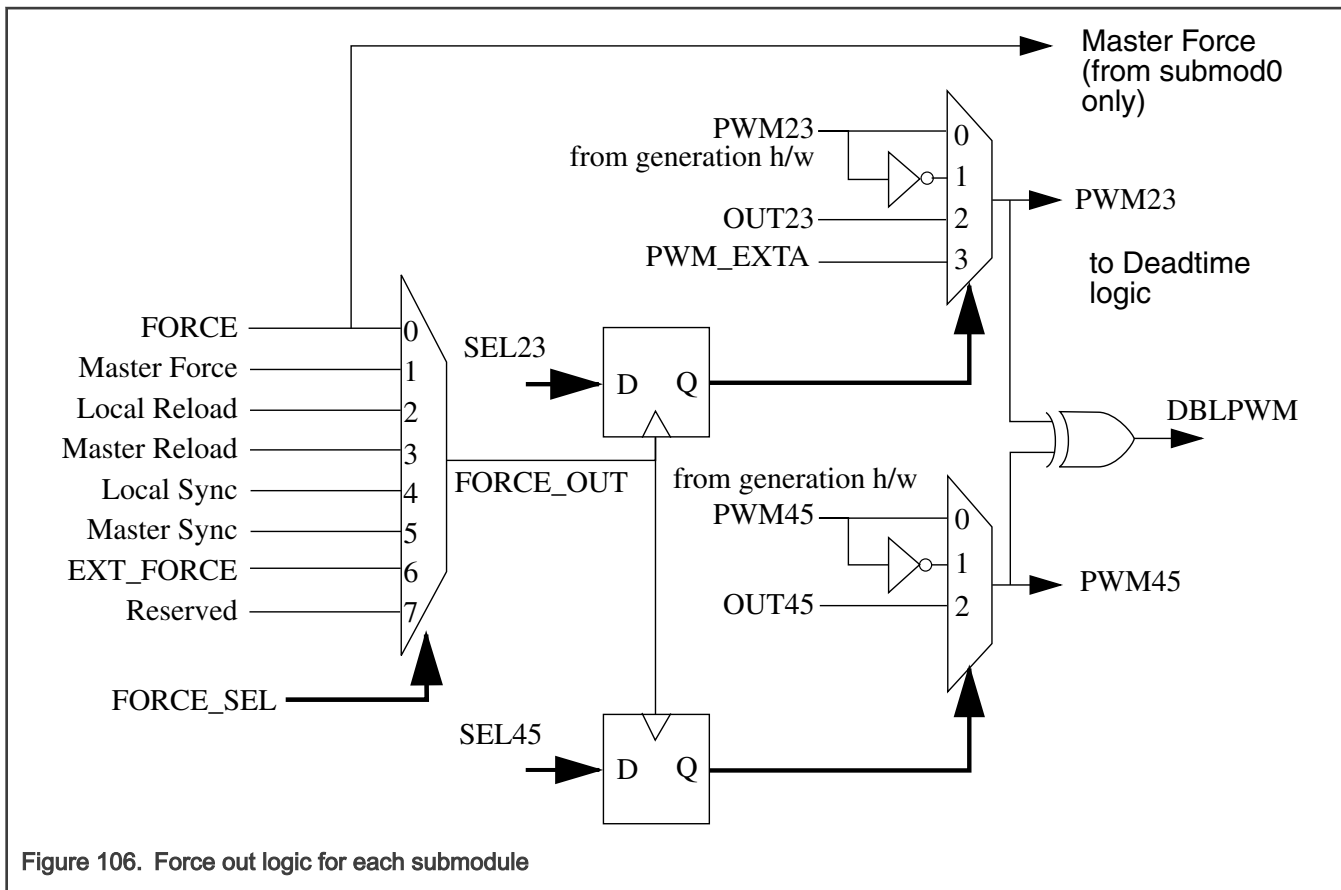


The local CTRL2[FORCE] signal of submodule0 can be broadcast as the Master Force signal to other submodules. This feature allows the CTRL2[FORCE] of submodule0 to synchronously update all of the submodule outputs at the same time. The EXT_FORCE signal originates from outside the eFlexPWM module from a source such as a timer or digital comparators in the Analog-to-Digital Converter.

33.3.3.6 Independent or complementary channel operation

Writing a logic one to CTRL2[INDEP] configures the pair of PWM outputs as two independent PWM channels. Each PWM output is controlled by its own VALx pair operating independently of the other output.

Writing a logic zero to CTRL2[INDEP] configures the PWM output as a pair of complementary channels. The PWM pins are paired as shown in [Figure 107](#) in complementary channel operation. The signal that is connected to the output pin (PWM23 or PWM45) is determined by MCTRL[IPOL].

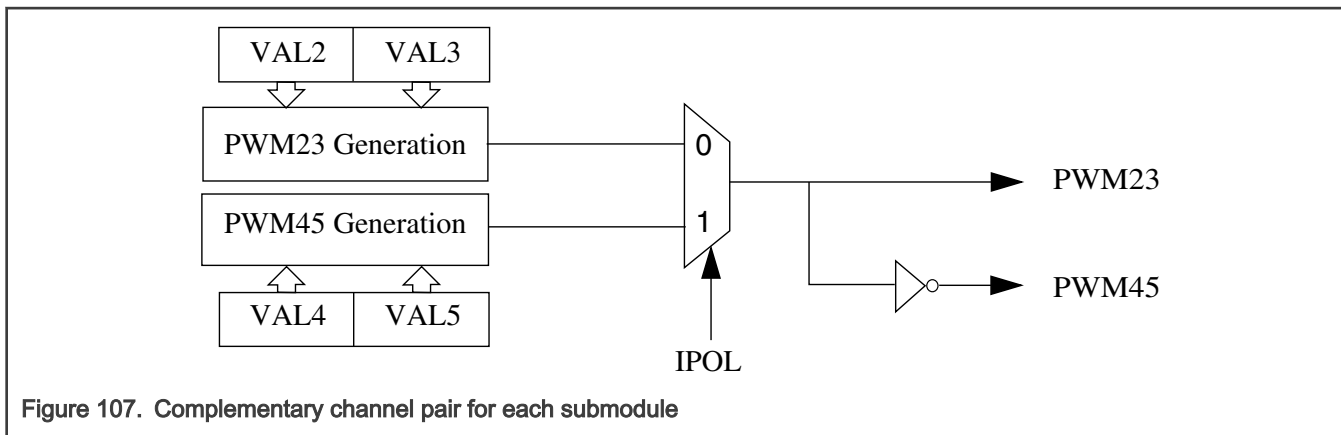

The complementary channel operation is for driving top and bottom transistors in a motor drive circuit, as shown in [Figure 108](#).

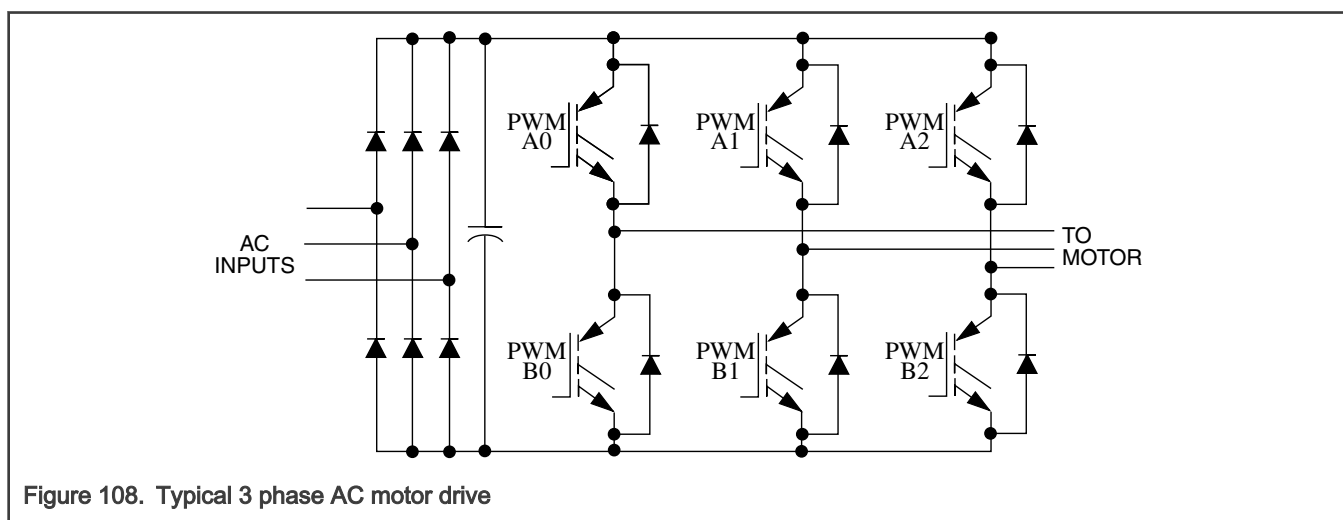


Figure 108. Typical 3 phase AC motor drive

The complementary operation allows the use of the deadtime insertion feature.

33.3.3.7 Deadtime insertion logic

The following figure shows the deadtime insertion logic of each submodule which is used to create non-overlapping complementary signals when not in independent mode.

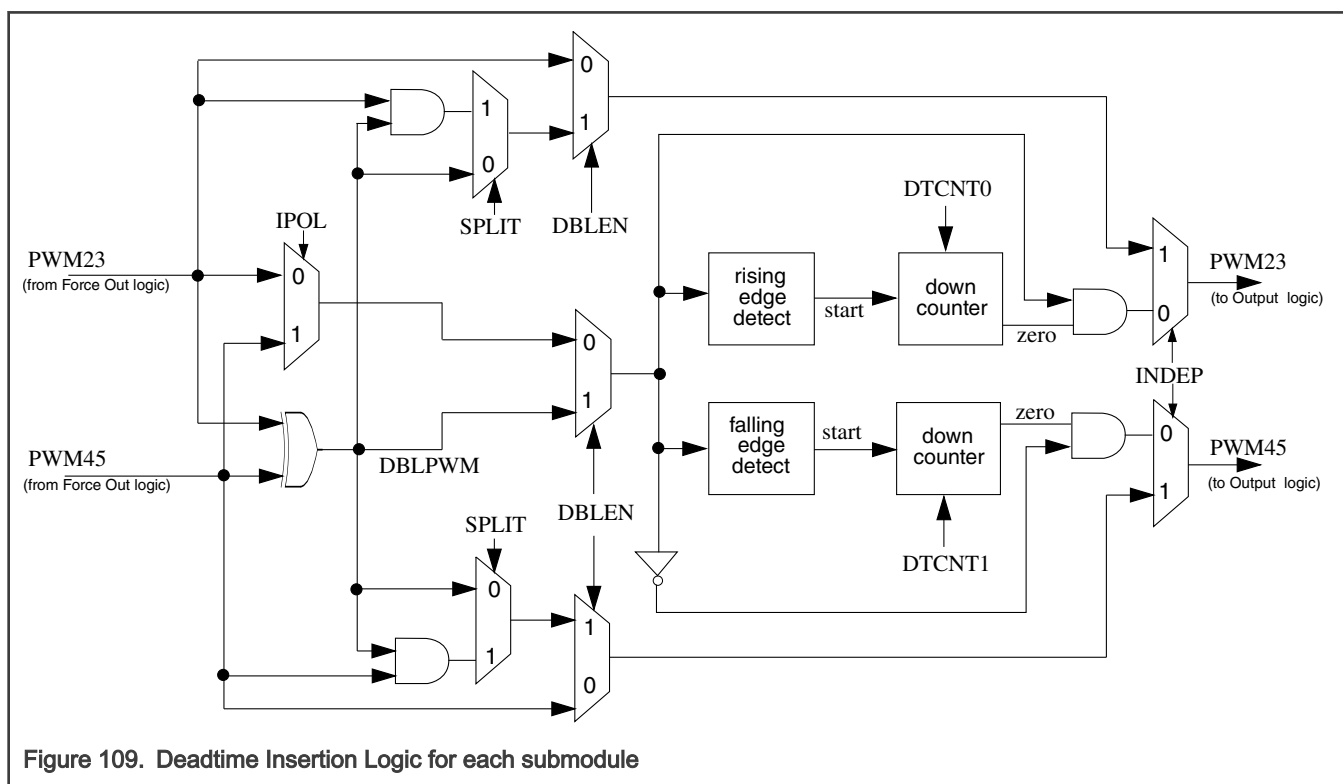


Figure 109. Deadtime Insertion Logic for each submodule


While in the complementary mode, a PWM pair can be used to drive top/bottom transistors, as shown in the figure. When the top PWM channel is active, the bottom PWM channel is inactive, and vice versa.

NOTE

To avoid short-circuiting the DC bus and endangering the transistor, there must be no overlap of conducting intervals between the top and bottom transistors. But the transistor's characteristics make its switching-off time longer than switching-on time. To avoid the conducting overlap of top and bottom transistors, deadtime needs to be inserted in the switching period, as shown in [Figure 110](#).

The deadtime generators automatically insert software-selectable activation delays into the pair of PWM outputs. The deadtime registers (DTCNT0 and DTCNT1) specify the number of IPBus clock cycles to use for deadtime delay. Every time the deadtime generator inputs change state, deadtime is inserted. Deadtime forces both PWM outputs in the pair to the inactive state.

When deadtime is inserted in complementary PWM signals connected to an inverter driving an inductive load, the PWM waveform on the inverter output will have a different duty cycle than what appears on the output pins of the eFlexPWM module. This results in a distortion in the voltage applied to the load. A method of correcting this, adding to or subtracting from the PWM value used, is discussed next.

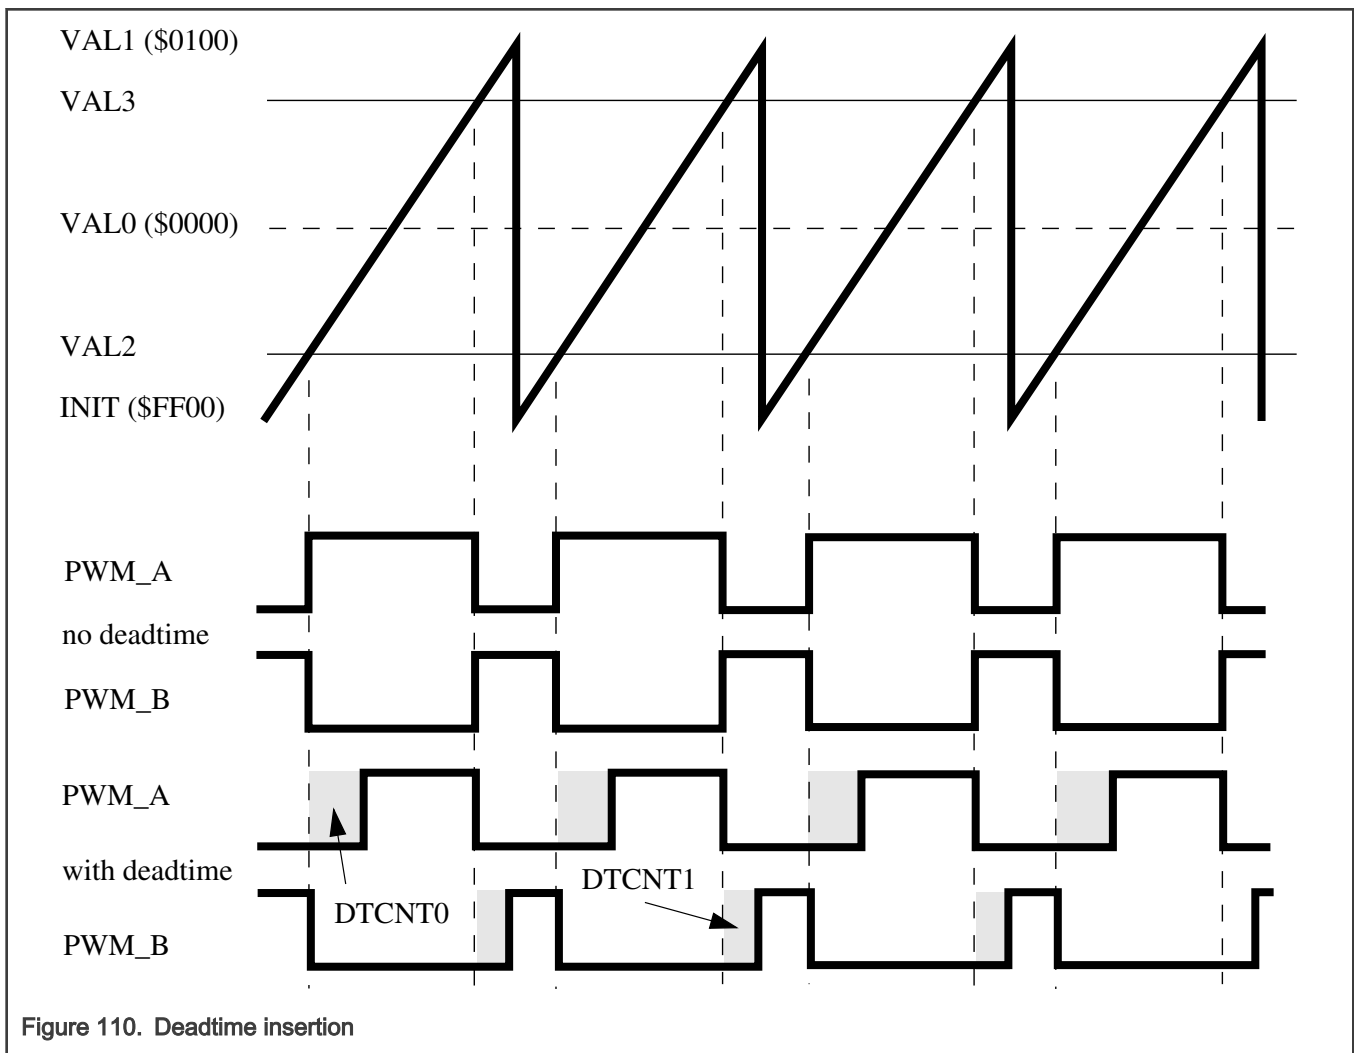

33.3.3.7.1 Top/Bottom correction

In complementary mode, either the top or the bottom transistor controls the output voltage. However, deadtime has to be inserted to avoid overlap of conducting interval between the top and bottom transistor. Both transistors in complementary mode are off during deadtime, allowing the output voltage to be determined by the current status of load and introducing distortion in the output voltage, as shown in [Figure 111](#). On AC induction motors running open-loop, the distortion typically manifests itself as poor low-speed performance, such as torque ripple and rough operation.

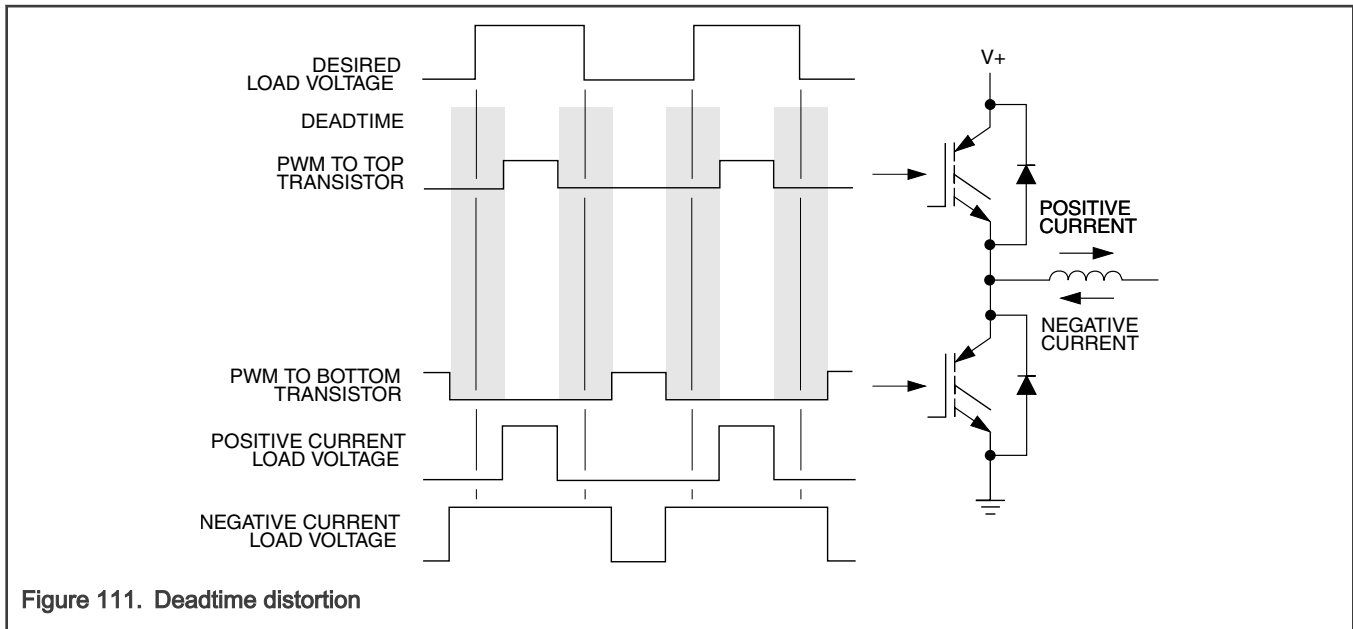


Figure 111. Deadtime distortion

During deadtime, load inductance distorts output voltage by keeping current flowing through the diodes. This deadtime current flow creates a load voltage that varies with the current direction. With a positive current flow, the load voltage during deadtime is equal to the bottom supply, putting the top transistor in control. With a negative current flow, the load voltage during deadtime is equal to the top supply putting the bottom transistor in control.

Remembering that the original PWM pulse widths were shortened by deadtime insertion, the averaged sinusoidal output is less than the desired value. However, when deadtime is inserted, it distorts in the motor current waveform inverter outputs. This distortion is aggravated by different turn-on and turn-off delays of each of the transistors. By giving the eFlexPWM module information on which transistor is controlling at a given time this distortion can be corrected.

For a typical circuit in complementary channel operation, only one of the transistors is effective in controlling the output voltage at any given time. This depends on the direction of the motor inverter current for that pair, as shown in Figure 111. To correct distortion one of two different factors must be added to the desired PWM value, depending on whether the top or bottom transistor is controlling the output voltage. Therefore, the software is responsible for calculating both compensated PWM values prior to placing them in the VALx registers. Either the VAL2/VAL3 or the VAL4/VAL5 register pair controls the pulse width at any given time. For a given PWM pair, whether the VAL2/VAL3 or VAL4/VAL5 pair is active depends on either:

- The state of the current status pin, PWMX, for that driver
- The state of the odd/even correction bit, MCTRL[IPOL], for that driver

To correct deadtime distortion, the software can decrease or increase the value in the appropriate VALx register.

- In edge-aligned operation, decreasing or increasing the PWM value by a correction value equal to the deadtime typically compensates for deadtime distortion.
- In center-aligned operation, decreasing or increasing the PWM value by a correction value equal to one-half the deadtime typically compensates for deadtime distortion.

33.3.3.7.2 Manual correction

To detect the current status, the voltage on each PWMX pin is sampled twice in a PWM period, at the end of each deadtime. The value is stored in CTRL[DT]. CTRL[DT] is a timing marker indicating when to toggle between PWM value registers. The software can then set MCTRL[IPOL] to switch between VAL2/VAL3 and VAL4/VAL5 register pairs according to CTRL[DT] values.

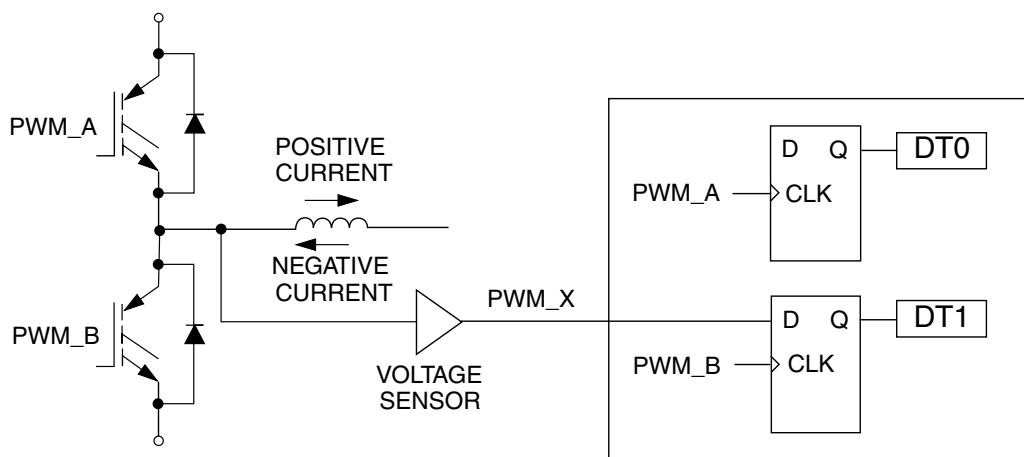


Figure 112. Current-status sense scheme for deadtime correction

Both D flip-flops latch low, CTRL[DT] = 00, during deadtime periods if the current is large and flowing out of the complementary circuit. See the preceding figure. Both D flip-flops latch the high, CTRL[DT] = 11, during deadtime periods if the current is also large and flowing into the complementary circuit.

However, under low-current, the output voltage of the complementary circuit during deadtime is between the high and low levels. The current cannot free-wheel through the opposition anti-body diode, regardless of polarity, giving additional distortion when the current crosses zero. Sampled results are CTRL[DT] = b10. Thus, the best time to change one PWM value register to another is just before the current zero crossing.


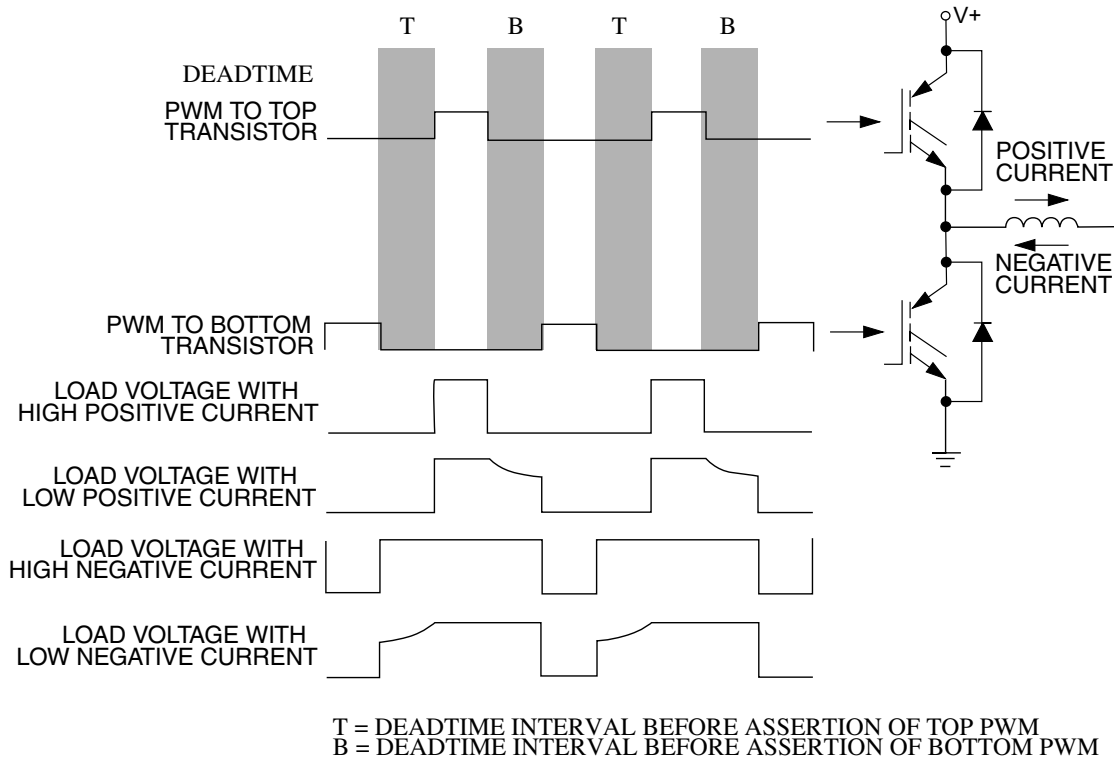



Figure 113. Output voltage waveforms

33.3.3.8 Output logic

The following figure shows the output logic of each submodule including how each PWM output has individual fault disabling, polarity control, and output enable. This allows for maximum flexibility when interfacing with the external circuitry.

The PWM23 and PWM45 signals which are output from the deadtime logic (as shown in [Figure 114](#)) are positive true signals. In other words, a high level on these signals should result in the corresponding transistor in the PWM inverter being turned ON. The voltage level required at the PWM output pin to turn the transistor ON or OFF is a function of the logic between the pin and the transistor. Therefore, it is imperative that the user program OCTRL[POLA] and OCTRL[POLB] before enabling the output pins. A fault condition can result in the PWM output being put in a high-impedance state, forced to a logic 1 state, or forced to a logic 0 state, depending on the values programmed into the OCTRL[PWMxFS] fields.

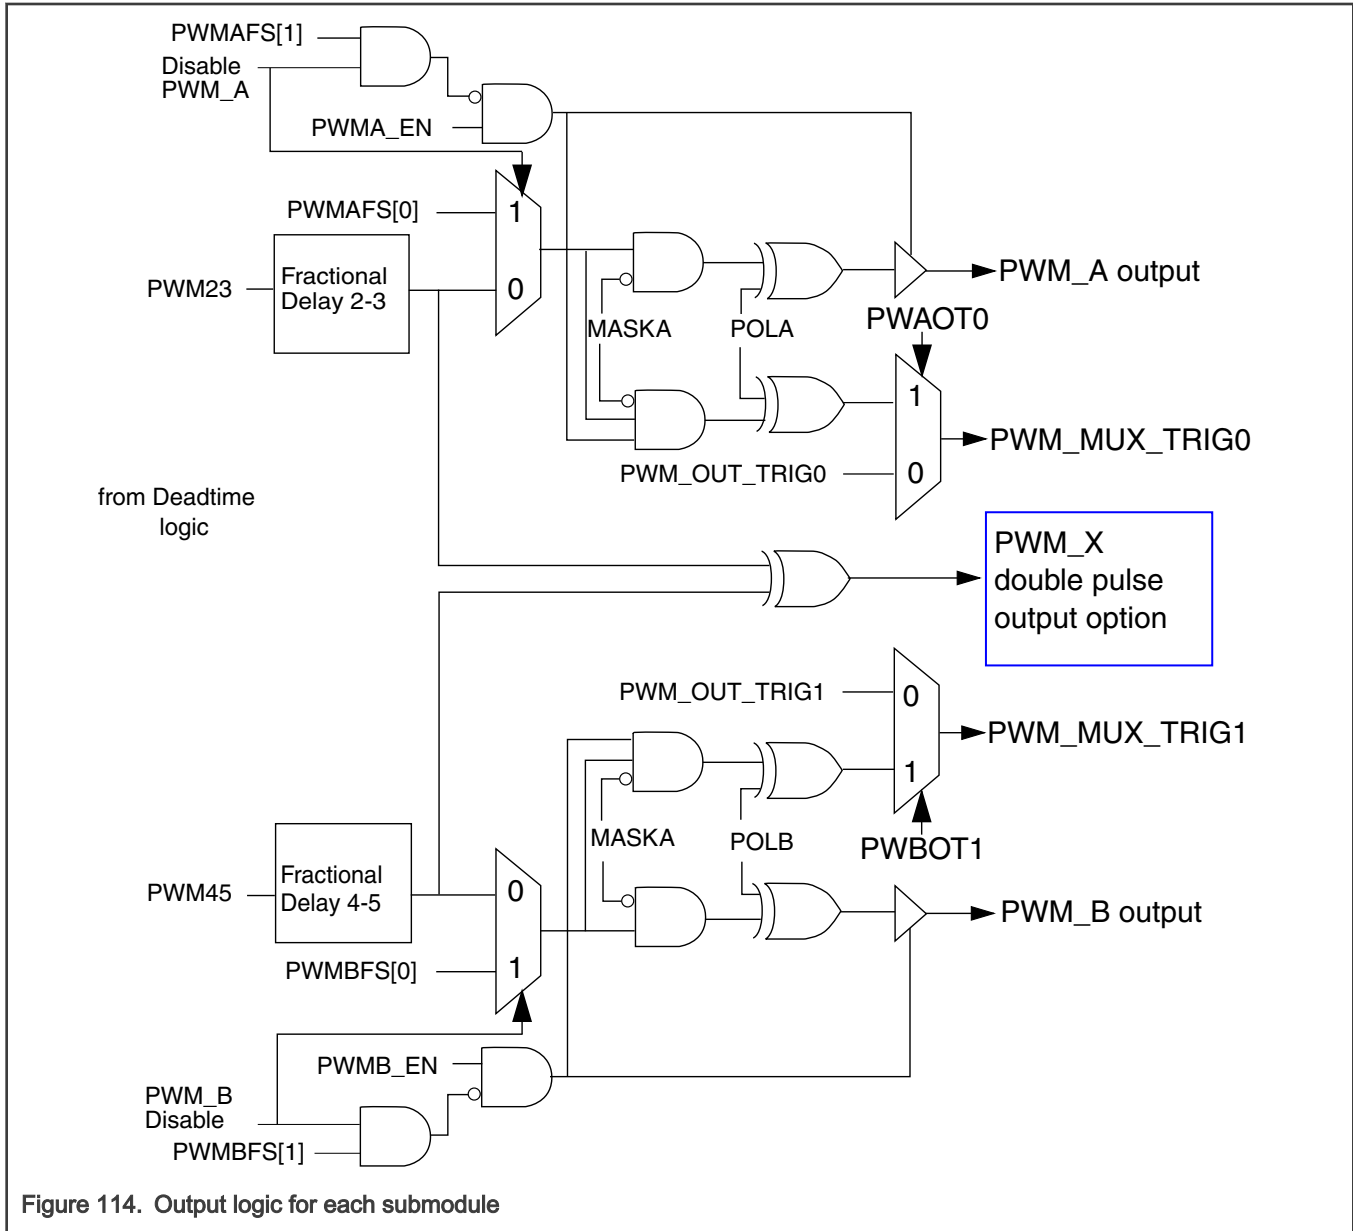


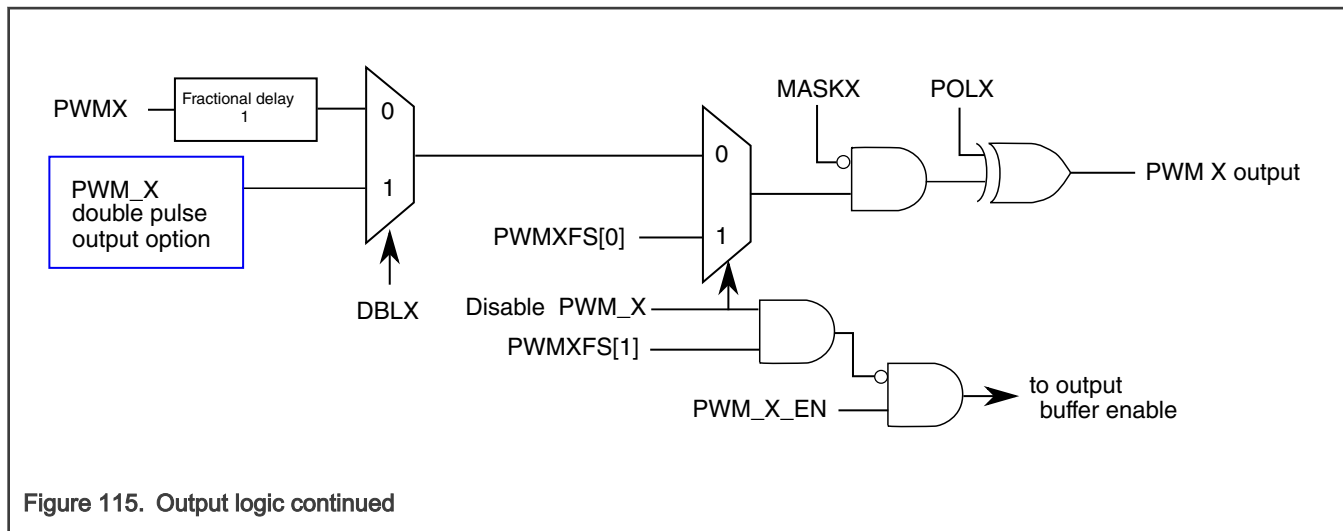

33.3.3.9 E-Capture

The Enhanced Capture (E-Capture) logic is designed to measure both edges of an input signal. As a result, when a submodule pin is configured for input capture, the CVALx registers associated with that pin are used to record the edge values.

The following figure shows block diagram of the E-Capture circuit. Upon entering the pin input, the signal is split into two paths. One goes straight to a mux input where software can select to pass the signal directly to the capture logic for processing. The other path connects the signal to an 8-bit counter which counts both the rising and falling edges of the signal. The output of this counter is compared to an 8-bit value that is specified by the user (EDGCOMPx) and when the two values are equal, the comparator generates a pulse that resets the counter. This pulse is also supplied to the mux input where software can select it to be processed by the capture logic. This feature permits the E-Capture circuit to count up to 256 edge events before initiating a capture event. This feature is useful for dividing down high frequency signals for capture processing so that capture interrupts do not overwhelm the CPU. Also, this feature can be used to generate an interrupt after "n" events have been counted.

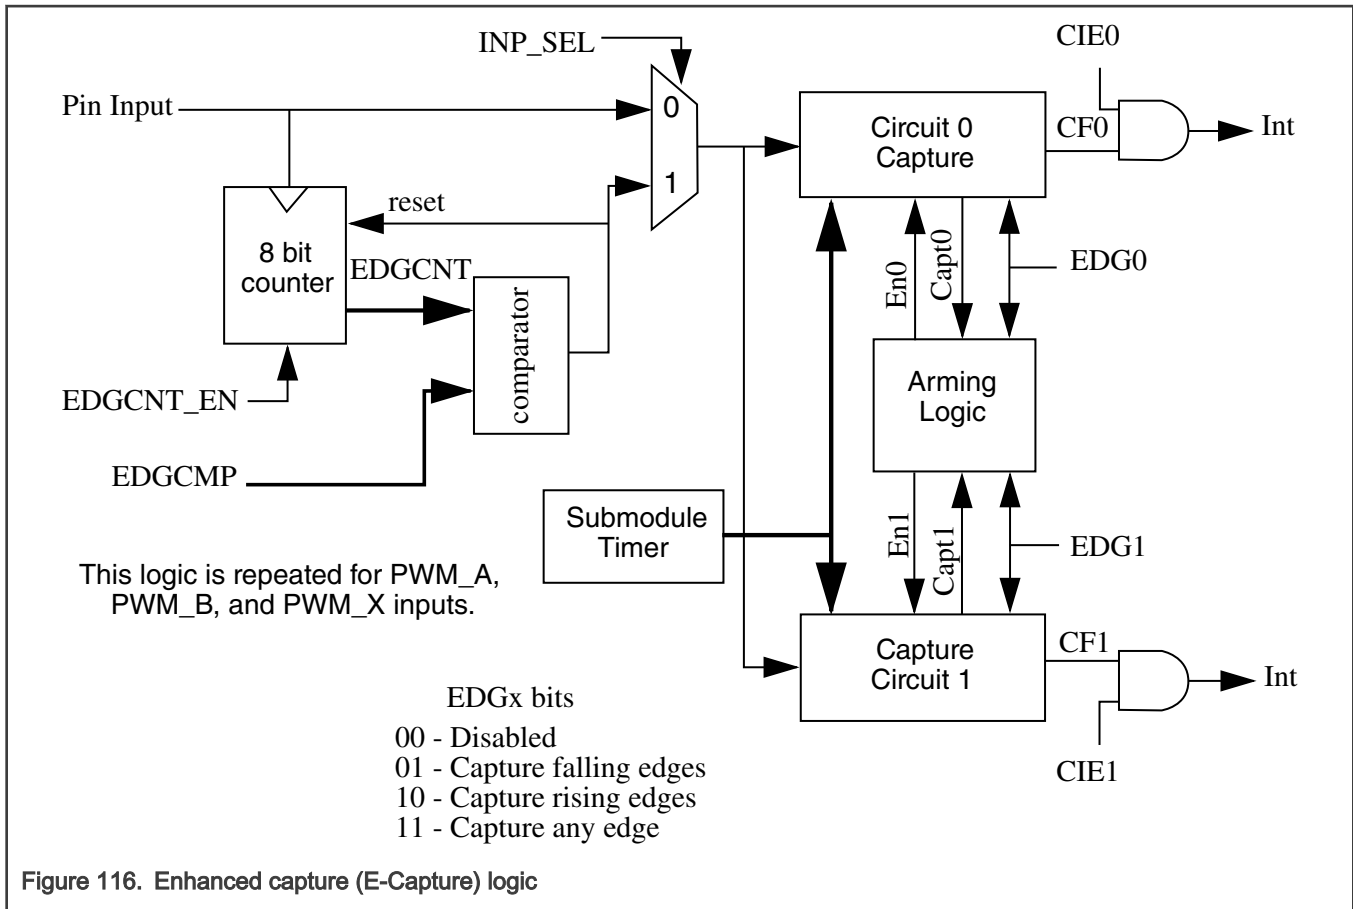

Based on the mode selection, the mux selects either the pin input or the compare output from the count/comparator circuit to be processed by the capture logic. The selected signal is routed to two separate capture circuits which work in tandem to capture sequential edges of the signal. The type of edge to be captured by each circuit is determined by CAPTCTRLx[EDGx1] and CAPTCTRLx[EDGx0], whose functionality is listed in the above figure. Also, controlling the operation of the capture circuits is the arming logic which allows captures to be performed in a free running (continuous) or one shot mode. In free running mode, the capture sequences will be performed indefinitely. If both capture circuits are enabled, they will work together in a ping-pong style where a capture event from one circuit leads to the arming of the other and vice versa. In one shot mode, only one capture sequence will be performed. If both capture circuits are enabled, capture circuit 0 is first armed and when a capture event occurs, capture circuit 1 is armed. Once the second capture occurs, further captures are disabled until another capture sequence is initiated. Both capture circuits are also capable of generating an interrupt to the CPU.

33.3.3.10 Fault protection

Fault protection can control any combination of PWM output pins. Faults are generated by a logic one on any of the FAULTx pins. This polarity can be changed via FCTRL[FLVL]. Each FAULTx pin can be mapped arbitrarily to any of the PWM outputs. When fault protection hardware disables PWM outputs, the PWM generator continues to run, only the output pins are forced to logic 0, logic 1, or high impedance depending on the values of OCTRL[PWMxFS].

The fault decoder disables PWM pins selected by the fault logic and the disable mapping (DISMAPn) registers. The following figure shows an example of the fault disable logic. Each bank of bits in DISMAPn control the mapping for a single PWM pin. See the following table.

The fault protection is enabled even when the module is not enabled. Therefore, a fault is latched in and must be cleared to prevent an interrupt when the module is enabled.

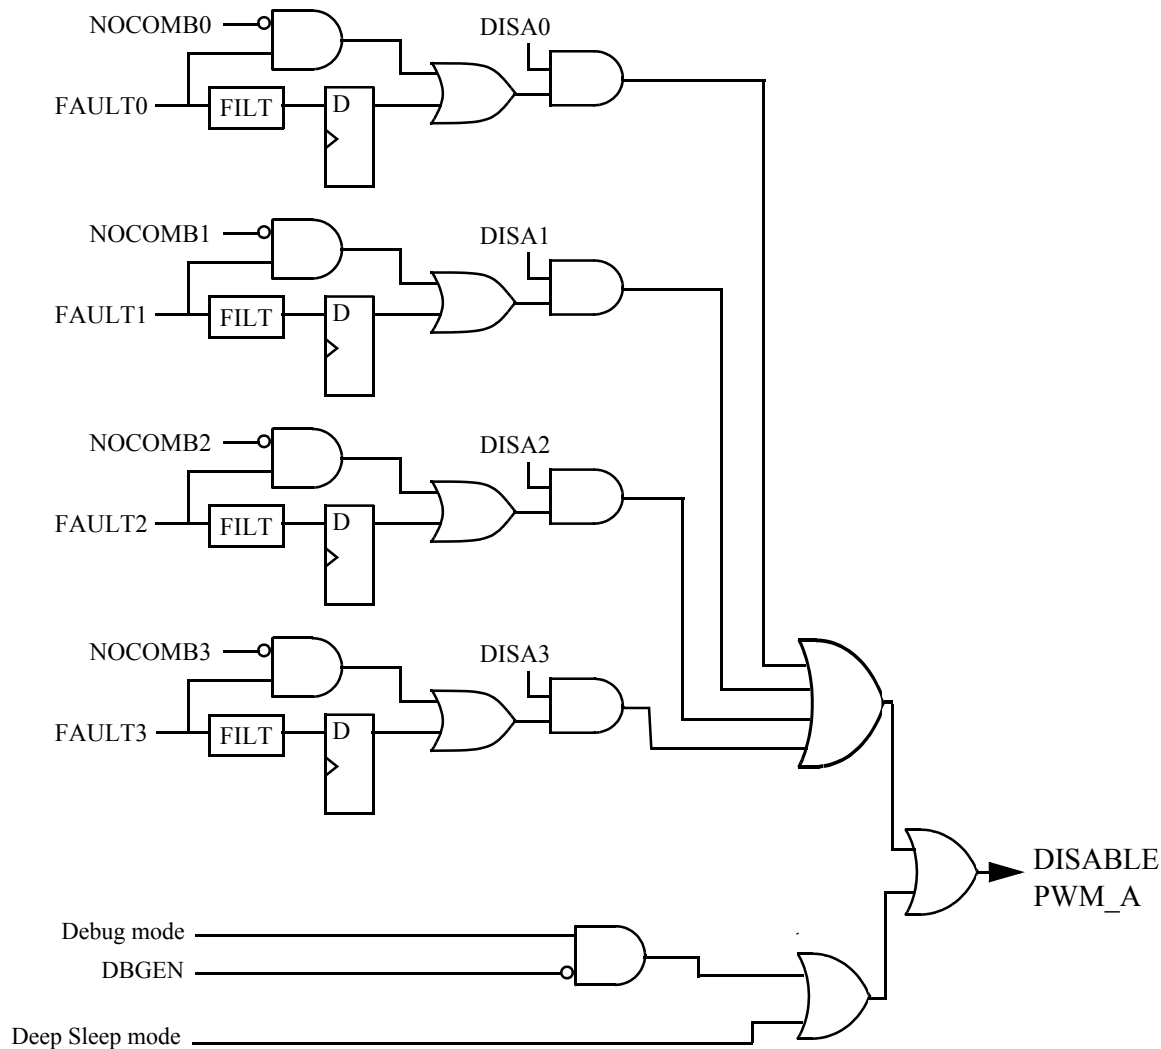


Figure 117. Fault decoder for PWM_A

Table 197. Fault Mapping

PWM Pin for 1 submodule	Controlling Register Bits
PWM_A	DISMAP0[DIS0A]
PWM_B	DISMAP0[DIS0B]
PWM_X	DISMAP0[DIS0X]

33.3.3.10.1 Fault pin filter

Each fault pin has a programmable filter that can be bypassed. The sampling period of the filter can be adjusted with FFILT[FILT_PER]. The number of consecutive samples that must agree before an input transition is recognized can be adjusted using FFILT[FILT_CNT]. Setting FFILT[FILT_PER] to all 0 disables the input filter for a given FAULTx pin.

Upon detecting a logic 0 on the filtered FAULTx pin (or a logic 1 if FCTRL[FLVLx] is set), the corresponding FSTS[FFPINx] and FSTS[FFLAGx] bits are set. FSTS[FFPINx] remains set as long as the filtered FAULTx pin is zero. Clear FSTS[FFLAGx] by writing a logic 1 to FSTS[FFLAGx].

If the FIE_x, FAULT_x pin interrupt enable bit is set, FSTS[FFLAG_x] generates a CPU interrupt request. The interrupt request latch remains set until:


- Software clears FSTS[FFLAG_x] by writing a logic one to the bit
- Software clears the FIE_x bit by writing a logic zero to it
- A reset occurs

Even with the filter enabled, there is a combinational path from the FAULT_x inputs to the PWM pins, which in turn bypasses the filter when FCTRL20[NOCOMB_x] = 0. This logic is also capable of holding a fault condition in the event of loss of clock to the eFlexPWM module.

33.3.3.10.2 Automatic fault clearing

Setting an automatic clearing mode bit, FCTRL[FAUTO_x] configures faults from the FAULT_x pin for automatic clearing.

When FCTRL[FAUTO_x] is set, disabled PWM pins are enabled when the FAULT_x pin returns to logic one and a new PWM full or half cycle begins. See the following figure. If FSTS[FFULL_x] is set and the fault condition on FAULT_x disappears, then the disabled PWM pins are enabled at the start of next full cycle. If FSTS[FHALF_x] is set, then the disabled PWM pins are enabled at the start of a half cycle. Clearing FSTS[FFLAG_x] does not affect disabled PWM pins when FCTRL[FAUTO_x] is set.

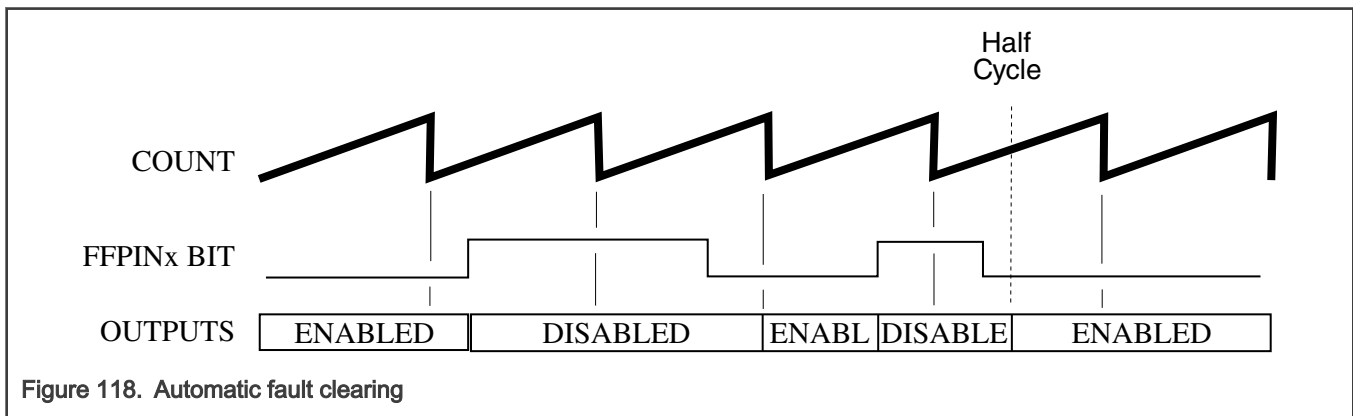

33.3.3.10.3 Manual fault clearing

Clearing the automatic clearing mode bit, FCTRL[FAUTO_x], configures faults from the FAULT_x pin for manual clearing:

- If the fault safety mode bits FCTRL[FSAFEx] are clear, then PWM pins disabled by the FAULT_x pins are enabled when:
 - Software clears the corresponding FSTS[FFLAG_x] flag
 - The pins are enabled when the next PWM full or half cycle begins regardless of the logic level detected by the filter at the FAULT_x pin, as shown in [Figure 119](#). If FSTS[FFULL_x] is set, then the disabled PWM pins are enabled at the start of a full cycle. If FSTS[FHALF_x] is set, then the disabled PWM pins are enabled at the start of a half cycle.
- If the fault safety mode bits FCTRL[FSAFEx] are set, then PWM pins disabled by the FAULT_x pins are enabled when:
 - Software clears the corresponding FSTS[FFLAG_x] flag
 - The filter detects a logic zero on the FAULT_x pin at the start of the next PWM full or half cycle boundary, as shown in [Figure 120](#). If FSTS[FFULL_x] is set, then the disabled PWM pins are enabled at the start of a full cycle. If FSTS[FHALF_x] is set, then the disabled PWM pins are enabled at the start of a half cycle.

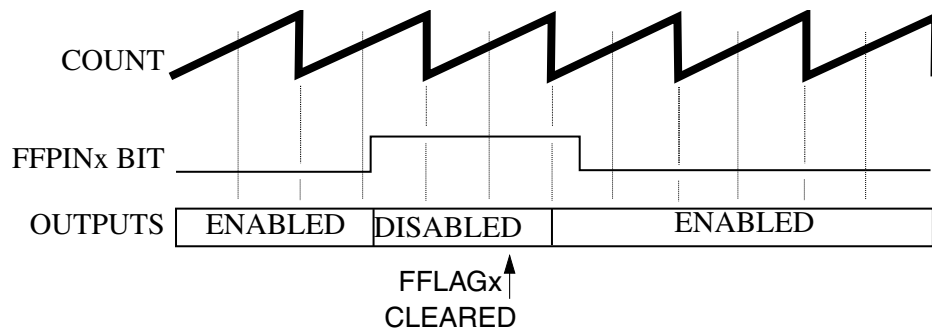


Figure 119. Manual fault clearing (FCTRL[FSAFEx] = 0, FSTS[FFULLx] = 1)

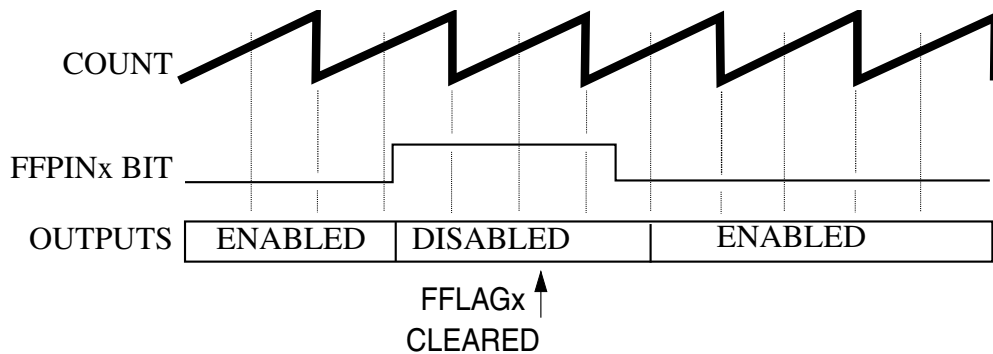


Figure 120. Manual fault clearing (FCTRL[FSAFEx] = 1, FSTS[FHALFx] = 1)

NOTE

Fault protection also applies during software output control when the SEL23 and SEL45 fields are set to select OUT23 and OUT45 bits or PWM_EXTx. Fault clearing still occurs at half or full PWM cycle boundaries while the PWM generator is engaged, MCTRL[RUN] equals one. But the OUTx bits can control the PWM pins while the PWM generator is off, MCTRL[RUN] equals zero. Thus, fault clearing occurs at IPBus cycles while the PWM generator is off and at the start of PWM cycles when the generator is engaged.

33.3.3.10.4 Fault testing

FTST[FTEST] is used to simulate a fault condition on each of the fault inputs within that fault channel.

33.3.3.11 PWM generator loading

33.3.3.11.1 Load enable

MCTRL[LDOK] enables loading of the following PWM generator parameters.

- The prescaler divisor: from CTRL[PRSC]
- The PWM period and pulse width: from the INIT, FRACVALx, and VALx registers

MCTRL[LDOK] allows the software to finish calculating all of these PWM parameters so they can be synchronously updated. The CTRL[PRSC], INIT, and VALx registers are loaded by software into a set of outer buffers. When MCTRL[LDOK] is set, these values are transferred to an inner set of registers at the beginning of the next PWM reload cycle to be used by the PWM generator when CTRL[LDMOD] is cleared. These values can be transferred to the inner set of registers immediately upon setting MCTRL[LDOK] if CTRL[LDMOD] is set. Set MCTRL[LDOK] by reading it when it is a logic zero and then writing a logic one to it. After loading, MCTRL[LDOK] is automatically cleared.

33.3.3.11.2 Load frequency

CTRL[LDFQ] selects an integral loading frequency of one to 16 PWM reload opportunities. CTRL[LDFQ] takes effect at every PWM reload opportunity, regardless of the state of MCTRL[LDOK]. CTRL[HALF] and CTRL[FULL] control reload timing. If CTRL[FULL] is set, a reload opportunity occurs at the end of every PWM cycle when the count equals VAL1. If CTRL[HALF] is set, a reload opportunity occurs at the half cycle when the count equals VAL0. If both CTRL[HALF] and CTRL[FULL] are set, a reload opportunity occurs twice per PWM cycle when the count equals VAL1 and when it equals VAL0.

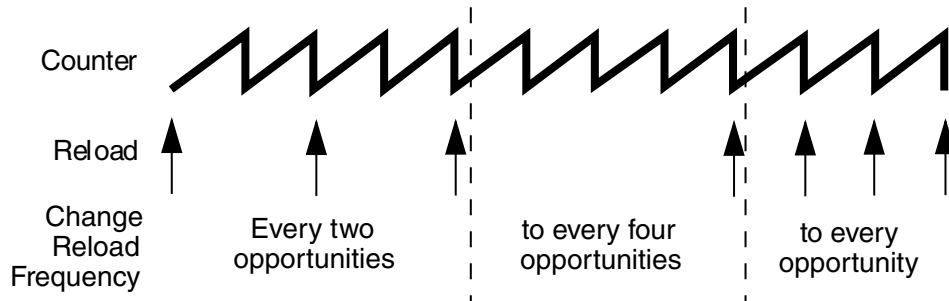


Figure 121. Full cycle reload frequency change

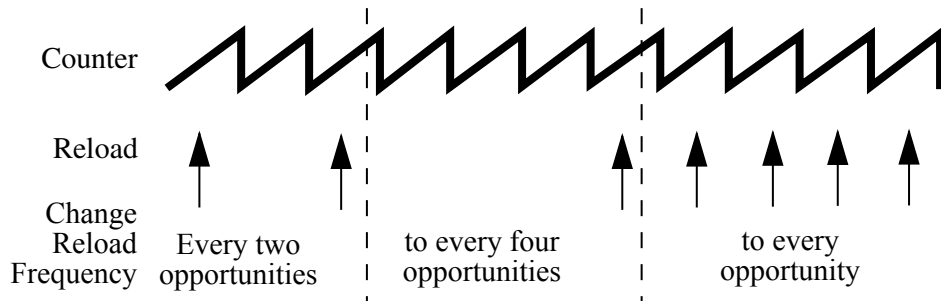


Figure 122. Half cycle reload frequency change


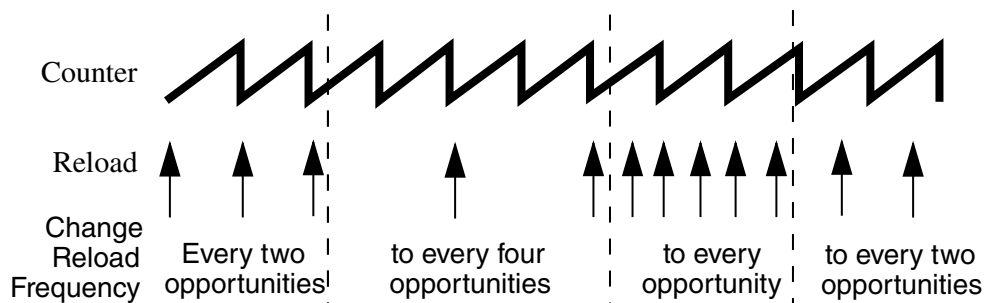


Figure 123. Full and half cycle reload frequency change

33.3.3.11.3 Reload flag

At every reload opportunity the PWM Reload Flag (STS[RF]) is set. Setting STS[RF] happens even if an actual reload is prevented by MCTRL[LDOK]. If the PWM reload interrupt enable bit INTEN[RIF] is set, the STS[RF] flag generates CPU interrupt requests allowing software to calculate new PWM parameters in real time. When INTEN[RIF] is not set, reloads still occur at the selected reload rate without generating CPU interrupt requests.

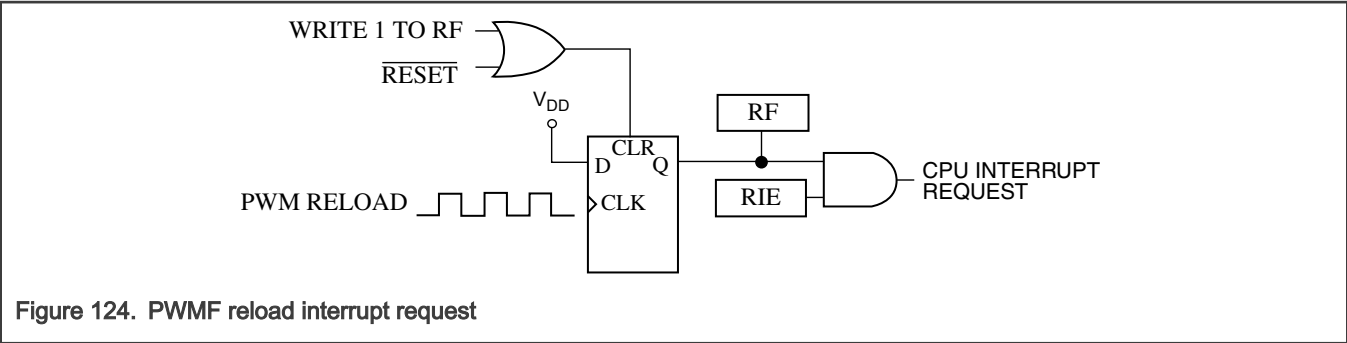

33.3.3.11.4 Reload errors

When one of the INIT, VALx, FRACVALx, or CTRL[PRSC] registers is updated (written by software), the STS[RUF] flag is set to indicate the data in the set of double buffered registers is not coherent. STS[RUF] is cleared by a successful reload which consists of the reload signal while MCTRL[LDOK] is set. If STS[RUF] is set and MCTRL[LDOK] is clear when the reload signal occurs, a reload error takes place and STS[REF] is set. If STS[RUF] is clear when a reload signal asserts, then the data is coherent and no error is flagged.

33.3.3.11.5 Initialization

Initialize all registers and then set MCTRL[LDOK] before setting MCTRL[RUN].

NOTE

If MCTRL[LDOK] is not set, setting MCTRL[RUN] also sets the STS[RF] flag. To prevent a CPU interrupt request, clear INTEN[RIF] before setting MCTRL[RUN].

The PWM generator uses the last values loaded if MCTRL[RUN] is cleared and then set while MCTRL[LDOK] equals zero.

When MCTRL[RUN] is cleared:

- The STS[RF] flag and pending CPU interrupt requests are not cleared
- All fault circuitry remains active
- Software/external output control remains active
- Deadtime insertion continues during software/external output control

33.3.4 Power modes

Be careful when using this module in Deep Sleep, Sleep, and Debug operating modes.

CAUTION

Some applications require regular software updates for proper operation. Failure to provide regular software updates could result in destroying the hardware setup.



To accommodate this situation, PWM outputs are placed in their inactive states in Deep Sleep mode, and they can optionally be placed in inactive states in Sleep and Debug modes. PWM outputs are reactivated (assuming they were active beforehand) when these modes are exited.

Table 198. Modes when PWM operation is restricted

Mode	Description
Deep Sleep	PWM outputs are inactive.
Debug	PWM outputs are driven or inactive as a function of CTRL2[DBGEN].

33.3.5 Clocking

Figure 125 shows the logic used to generate the main counter clock. Each submodule can select between three clock signals: the IPBus clock, EXT_CLK, and AUX_CLK. The EXT_CLK goes to all of the submodules. The AUX_CLK signal is broadcast from submodule0 and can be selected as the clock source by other submodules so that the 3-bit prescaler and MCTRL[RUN] from submodule0 can control all of the submodules.

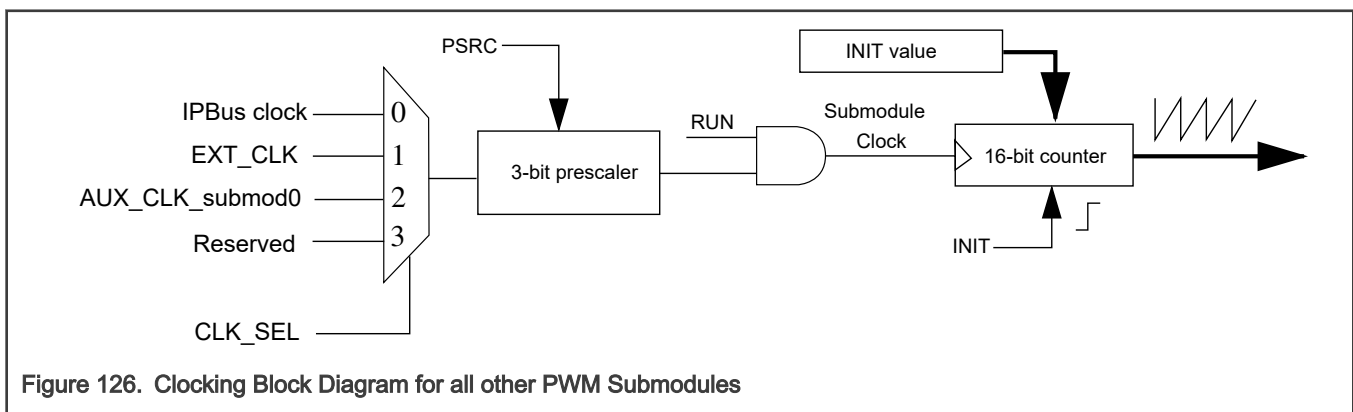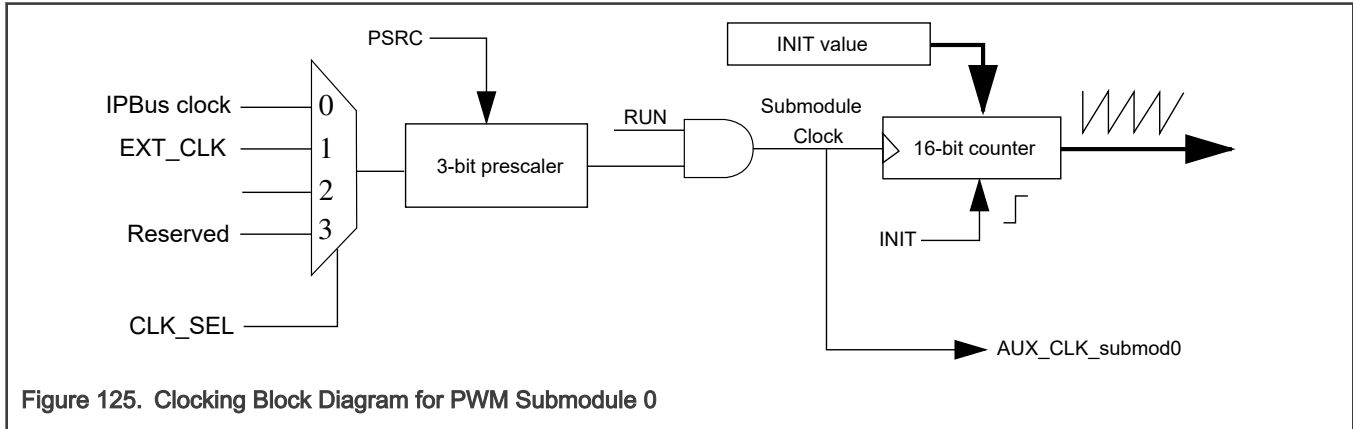

To permit lower PWM frequencies, the prescaler produces the PWM clock frequency by dividing the IPBus clock frequency by 1, 2, 4, 8, 16, 32, 64, or 128. The prescaler bits, CTRL[PRSC], select the prescaler divisor. This prescaler is buffered and will not be used by the PWM generator until MCTRL[LDOK] is set and a new PWM reload cycle begins or CTRL[LDMOD] is set.

33.3.6 Resets

All eFlexPWM registers are reset to their default values upon any system reset.

The reset forces all registers to their reset states and tristates the PWM outputs.

33.3.7 Interrupts

Each of the submodules within the eFlexPWM module can generate an interrupt from several sources. The fault logic can also generate interrupts. The interrupt service routine (ISR) must check the related interrupt enables and interrupt flags to determine the actual cause of the interrupt.

Table 199. Interrupt Summary

Core Interrupt	Interrupt Flag	Interrupt Enable	Name	Description
PWM_CMP0	SM0STS[CMPIE]	SM0INTEN[CMPIE]	Submodule 0 compare interrupt	Compare event has occurred
PWM_CAP0	SM0STS[CFX1], SM0STS[CFX0]	SM0INTEN[CFX1IE], SM0INTEN[CFX0IE]	Submodule 0 input capture interrupt	Input capture event has occurred
PWM_RELOAD0	SM0STS[RF]	SM0INTEN[RIE]	Submodule 0 reload interrupt	Reload event has occurred
PWM_CMP1	SM1STS[CMPIE]	SM1INTEN[CMPIE]	Submodule 1 compare interrupt	Compare event has occurred
PWM_CAP1	SM1STS[CFX1], SM1STS[CFX0]	SM1INTEN[CFX1IE], SM1INTEN[CFX0IE]	Submodule 1 input capture interrupt	Input capture event has occurred
PWM_RELOAD1	SM1STS[RF]	SM1INTEN[RIE]	Submodule 1 reload interrupt	Reload event has occurred
PWM_CMP2	SM2STS[CMPIE]	SM2INTEN[CMPIE]	Submodule 2 compare interrupt	Compare event has occurred
PWM_CAP2	SM2STS[CFX1], SM2STS[CFX0]	SM2INTEN[CFX1IE], SM2INTEN[CFX0IE]	Submodule 2 input capture interrupt	Input capture event has occurred
PWM_RELOAD2	SM2STS[RF]	SM2INTEN[RIE]	Submodule 2 reload interrupt	Reload event has occurred
PWM_CMP3	SM3STS[CMPIE]	SM3INTEN[CMPIE]	Submodule 3 compare interrupt	Compare event has occurred
PWM_CAP3	SM3STS[CFX1], SM3STS[CFX0]	SM3INTEN[CFX1IE], SM3INTEN[CFX0IE]	Submodule 3 input capture interrupt	Input capture event has occurred
PWM_RELOAD3	SM3STS[RF]	SM3INTEN[RIE]	Submodule 3 reload interrupt	Reload event has occurred
PWM_RERR	SM0STS[REF]	SM0INTEN[REIE]	Submodule 0 reload error interrupt	Reload error has occurred
	SM1STS[REF]	SM1INTEN[REIE]	Submodule 1 reload error interrupt	
	SM2STS[REF]	SM2INTEN[REIE]	Submodule 2 reload error interrupt	
	SM3STS[REF]	SM3INTEN[REIE]	Submodule 3 reload error interrupt	

Table continues on the next page...

Table 199. Interrupt Summary (continued)

Core Interrupt	Interrupt Flag	Interrupt Enable	Name	Description
PWM_FAULT	FSTS[FFLAG]	FCTRL[FIE]	Fault input interrupt	Fault condition has been detected

33.3.8 DMA

Each submodule can request a DMA read access for its capture FIFOs and a DMA write request for its double buffered registers.

Table 200. DMA summary

DMA request	DMA enable	Name	Description
Submodule 0 read request	SM0DMAEN[CX0DE]	SM0 Capture FIFO X0 read request	SM0CVAL0 contains a value to be read
Submodule 0 read request	SM0DMAEN[CX1DE]	SM0 Capture FIFO X1 read request	SM0CVAL1 contains a value to be read
Submodule 0 read request	SM0DMAEN[CAPTDE]	SM0 Capture FIFO read request source select	Selects source of submodule0 read DMA request
Submodule 0 write request	SM0DMAEN[VALDE]	SM0VALx write request	SM0VALx and SM0FRACVALx registers need to be updated
Submodule 1 read request	SM1DMAEN[CX0DE]	SM1 Capture FIFO X0 read request	SM1CVAL0 contains a value to be read
Submodule 1 read request	SM1DMAEN[CX1DE]	SM1 Capture FIFO X1 read request	SM1CVAL1 contains a value to be read
Submodule 1 read request	SM1DMAEN[CAPTDE]	SM1 Capture FIFO read request source select	Selects source of submodule1 read DMA request
Submodule 1 write request	SM1DMAEN[VALDE]	SM1VALx write request	SM1VALx and SM1FRACVALx registers need to be updated
Submodule 2 read request	SM2DMAEN[CX0DE]	SM2 Capture FIFO X0 read request	SM2CVAL0 contains a value to be read
Submodule 2 read request	SM2DMAEN[CX1DE]	SM2 Capture FIFO X1 read request	SM2CVAL1 contains a value to be read
Submodule 2 read request	SM2DMAEN[CAPTDE]	SM2 Capture FIFO read request source select	Selects source of submodule2 read DMA request
Submodule 2 write request	SM2DMAEN[VALDE]	SM2VALx write request	SM2VALx and SM2FRACVALx registers need to be updated
Submodule 3 read request	SM3DMAEN[CX0DE]	SM3 Capture FIFO X0 read request	SM3CVAL0 contains a value to be read

Table continues on the next page...

Table 200. DMA summary (continued)

DMA request	DMA enable	Name	Description
Submodule 3 read request	SM3DMAEN[CX1DE]	SM3 Capture FIFO X1 read request	SM3CVAL1 contains a value to be read
Submodule 3 read request	SM3DMAEN[CAPTDE]	SM3 Capture FIFO read request source select	Selects source of submodule3 read DMA request
Submodule 3 write request	SM3DMAEN[VALDE]	SM3VALx write request	SM3VALx and SM3FRACVALx registers need to be updated

33.4 External signals

The PWM has pins named PWM_An, PWM_Bn, PWM_Xn, FAULTn, EXT_SYNC, EXT_FORCE, and PWMn_EXTn. The PWM also has an on-chip input called EXT_CLK and output signals called PWMn_OUT_TRIGx and PWMn_MUX_TRIGx.

33.4.1 PWM_An and PWM_Bn - External PWM output pair

These pins are the output pins of the PWM channels. These pins can be independent PWM signals or a complementary pair. When not needed as an output, they can be used as inputs to the input capture circuitry.

33.4.2 PWM_Xn - Auxiliary PWM output signal

These pins are the auxiliary output pins of the PWM channels. They can be independent PWM signals. When not needed as an output, they can be used as inputs to the input capture circuitry or used to detect the polarity of the current flowing through the complementary circuit at deadtime correction.

33.4.3 FAULTn - Fault Inputs

These are input pins for disabling selected PWM outputs.

33.4.4 EXT_SYNC - External synchronization signal

These input signals allow a source external to the PWM to initialize the PWM counter. Therefore, the PWM can be synchronized to external circuitry.

33.4.5 EXT_FORCE - External output force signal

This input signal allows a source external to the PWM to force an update of the PWM outputs. Therefore, the PWM can be synchronized to external circuitry.

33.4.6 PWMn_EXTn - Alternate PWM control signals

These pins allow an alternate source to control the PWM_An and PWM_Bn outputs. Typically, the PWMn_EXTn input (depending on the state of MCTRL[IPOL]) is used for the generation of a complementary pair. Typical control signals include ADC conversion high/low limits, TMR outputs, GPIO inputs, and comparator outputs.

For pin input details, see chip-specific eFlexPWM information.

33.4.7 PWMn_OUT_TRIG0 and PWMn_OUT_TRIG1 - Output triggers

These outputs allow the PWM submodules to control timing of ADC conversions. See the description of the [SMnCTRL\[OUT_TRIG_EN\]](#) for information about how to enable these outputs and how the compare registers match up to the output triggers.

33.4.8 PWM[n]_MUX_TRIG0 and PWM[n]_MUX_TRIG1 - Output triggers

These outputs can be either PWMn_OUT_TRIG0/PWMn_OUT_TRIG1 signals or PWM_A/PWM_B signals from output logic. See the description of the PWAOT0 and PWBOT1 bits in the Output Trigger Control Register for information about how to enable these outputs.

33.4.9 EXT_CLK - External clock signal

This signal allows a source external to the PWM (typically a timer or an off-chip source) to control the PWM clocking. Therefore, the PWM can be synchronized to the timer, or multiple chips can be synchronized to each other.

33.5 eFlexPWM register descriptions

The address of a register is the sum of a base address and an address offset. The base address is defined at the core level, and the address offset is defined at the module level. The eFlexPWM module has a set of registers for each PWM submodule, for the configuration logic, and for each fault channel.

NOTE

While the registers are 16-bit wide, they can be accessed in pairs as 32-bit registers, if the pairs are word-aligned.

Submodule registers are repeated for each PWM submodule. To designate which submodule that they are in, register names are prefixed with SMx(x=0,1...). The base address of submodule 0 is the same as the base address for the eFlexPWM module as a whole. The base address of submodule 1 is offset 0x60 from the base address for the eFlexPWM module as a whole. This 0x60 offset is based on the number of registers in a submodule. The base address of submodule 2 is equal to the base address of submodule 1 plus this same 0x60 offset. The pattern repeats for the base address of submodule 3.

The base address of the configuration registers is equal to the base address of the eFlexPWM module as a whole plus an offset of 0x180.

33.5.1 eFlexPWM memory map

FlexPWM0 base address: 400A_9000h

FlexPWM1 base address: 400A_A000h

Offset	Register	Width (In bits)	Access	Reset value
0h	Counter Register (SM0CNT)	16	R	0000h
2h	Initial Count Register (SM0INIT)	16	RW	0000h
4h	Control 2 Register (SM0CTRL2)	16	RW	0000h
6h	Control Register (SM0CTRL)	16	RW	0400h
Ah	Value Register 0 (SM0VAL0)	16	RW	0000h
Eh	Value Register 1 (SM0VAL1)	16	RW	0000h
12h	Value Register 2 (SM0VAL2)	16	RW	0000h
16h	Value Register 3 (SM0VAL3)	16	RW	0000h
1Ah	Value Register 4 (SM0VAL4)	16	RW	0000h
1Eh	Value Register 5 (SM0VAL5)	16	RW	0000h
22h	Output Control Register (SM0OCTRL)	16	RW	0000h

Table continues on the next page...

Table continued from the previous page...

Offset	Register	Width (In bits)	Access	Reset value
24h	Status Register (SM0STS)	16	RW	0000h
26h	Interrupt Enable Register (SM0INTEN)	16	RW	0000h
28h	DMA Enable Register (SM0DMAEN)	16	RW	0000h
2Ah	Output Trigger Control Register (SM0TCTRL)	16	RW	0000h
2Ch	Fault Disable Mapping Register 0 (SM0DISMAP0)	16	RW	FFFFh
30h	Deadtime Count Register 0 (SM0DTCNT0)	16	RW	07FFh
32h	Deadtime Count Register 1 (SM0DTCNT1)	16	RW	07FFh
3Ch	Capture Control X Register (SM0CAPTCTRLX)	16	RW	0000h
3Eh	Capture Compare X Register (SM0CAPTCOMPX)	16	RW	0000h
40h	Capture Value 0 Register (SM0CVAL0)	16	R	0000h
42h	Capture Value 0 Cycle Register (SM0CVAL0CYC)	16	R	0000h
44h	Capture Value 1 Register (SM0CVAL1)	16	R	0000h
46h	Capture Value 1 Cycle Register (SM0CVAL1CYC)	16	R	0000h
5Eh	Capture PWM_X Input Filter Register (SM0CAPTFILTX)	16	RW	0000h
60h	Counter Register (SM1CNT)	16	R	0000h
62h	Initial Count Register (SM1INIT)	16	RW	0000h
64h	Control 2 Register (SM1CTRL2)	16	RW	0000h
66h	Control Register (SM1CTRL)	16	RW	0400h
6Ah	Value Register 0 (SM1VAL0)	16	RW	0000h
6Eh	Value Register 1 (SM1VAL1)	16	RW	0000h
72h	Value Register 2 (SM1VAL2)	16	RW	0000h
76h	Value Register 3 (SM1VAL3)	16	RW	0000h
7Ah	Value Register 4 (SM1VAL4)	16	RW	0000h
7Eh	Value Register 5 (SM1VAL5)	16	RW	0000h
82h	Output Control Register (SM1OCTRL)	16	RW	0000h
84h	Status Register (SM1STS)	16	RW	0000h
86h	Interrupt Enable Register (SM1INTEN)	16	RW	0000h
88h	DMA Enable Register (SM1DMAEN)	16	RW	0000h
8Ah	Output Trigger Control Register (SM1TCTRL)	16	RW	0000h
8Ch	Fault Disable Mapping Register 0 (SM1DISMAP0)	16	RW	FFFFh
90h	Deadtime Count Register 0 (SM1DTCNT0)	16	RW	07FFh

Table continues on the next page...

Table continued from the previous page...

Offset	Register	Width (In bits)	Access	Reset value
92h	Deadtime Count Register 1 (SM1DTCNT1)	16	RW	07FFh
9Ch	Capture Control X Register (SM1CAPTCTRLX)	16	RW	0000h
9Eh	Capture Compare X Register (SM1CAPTCOMPX)	16	RW	0000h
A0h	Capture Value 0 Register (SM1CVAL0)	16	R	0000h
A2h	Capture Value 0 Cycle Register (SM1CVAL0CYC)	16	R	0000h
A4h	Capture Value 1 Register (SM1CVAL1)	16	R	0000h
A6h	Capture Value 1 Cycle Register (SM1CVAL1CYC)	16	R	0000h
B8h	Phase Delay Register (SM1PHASEDLY)	16	RW	0000h
BEh	Capture PWM_X Input Filter Register (SM1CAPTFILTX)	16	RW	0000h
C0h	Counter Register (SM2CNT)	16	R	0000h
C2h	Initial Count Register (SM2INIT)	16	RW	0000h
C4h	Control 2 Register (SM2CTRL2)	16	RW	0000h
C6h	Control Register (SM2CTRL)	16	RW	0400h
CAh	Value Register 0 (SM2VAL0)	16	RW	0000h
CEh	Value Register 1 (SM2VAL1)	16	RW	0000h
D2h	Value Register 2 (SM2VAL2)	16	RW	0000h
D6h	Value Register 3 (SM2VAL3)	16	RW	0000h
DAh	Value Register 4 (SM2VAL4)	16	RW	0000h
DEh	Value Register 5 (SM2VAL5)	16	RW	0000h
E2h	Output Control Register (SM2OCTRL)	16	RW	0000h
E4h	Status Register (SM2STS)	16	RW	0000h
E6h	Interrupt Enable Register (SM2INTEN)	16	RW	0000h
E8h	DMA Enable Register (SM2DMAEN)	16	RW	0000h
EAh	Output Trigger Control Register (SM2TCTRL)	16	RW	0000h
ECh	Fault Disable Mapping Register 0 (SM2DISMAP0)	16	RW	FFFFh
F0h	Deadtime Count Register 0 (SM2DTCNT0)	16	RW	07FFh
F2h	Deadtime Count Register 1 (SM2DTCNT1)	16	RW	07FFh
FCh	Capture Control X Register (SM2CAPTCTRLX)	16	RW	0000h
FEh	Capture Compare X Register (SM2CAPTCOMPX)	16	RW	0000h
100h	Capture Value 0 Register (SM2CVAL0)	16	R	0000h
102h	Capture Value 0 Cycle Register (SM2CVAL0CYC)	16	R	0000h

Table continues on the next page...

Table continued from the previous page...

Offset	Register	Width (In bits)	Access	Reset value
104h	Capture Value 1 Register (SM2CVAL1)	16	R	0000h
106h	Capture Value 1 Cycle Register (SM2CVAL1CYC)	16	R	0000h
118h	Phase Delay Register (SM2PHASEDLY)	16	RW	0000h
11Eh	Capture PWM_X Input Filter Register (SM2CAPTFILTX)	16	RW	0000h
120h	Counter Register (SM3CNT)	16	R	0000h
122h	Initial Count Register (SM3INIT)	16	RW	0000h
124h	Control 2 Register (SM3CTRL2)	16	RW	0000h
126h	Control Register (SM3CTRL)	16	RW	0400h
12Ah	Value Register 0 (SM3VAL0)	16	RW	0000h
12Eh	Value Register 1 (SM3VAL1)	16	RW	0000h
132h	Value Register 2 (SM3VAL2)	16	RW	0000h
136h	Value Register 3 (SM3VAL3)	16	RW	0000h
13Ah	Value Register 4 (SM3VAL4)	16	RW	0000h
13Eh	Value Register 5 (SM3VAL5)	16	RW	0000h
142h	Output Control Register (SM3OCTRL)	16	RW	0000h
144h	Status Register (SM3STS)	16	RW	0000h
146h	Interrupt Enable Register (SM3INTEN)	16	RW	0000h
148h	DMA Enable Register (SM3DMAEN)	16	RW	0000h
14Ah	Output Trigger Control Register (SM3TCTRL)	16	RW	0000h
14Ch	Fault Disable Mapping Register 0 (SM3DISMAP0)	16	RW	FFFFh
150h	Deadtime Count Register 0 (SM3DTCNT0)	16	RW	07FFh
152h	Deadtime Count Register 1 (SM3DTCNT1)	16	RW	07FFh
15Ch	Capture Control X Register (SM3CAPTCTRLX)	16	RW	0000h
15Eh	Capture Compare X Register (SM3CAPTCOMPX)	16	RW	0000h
160h	Capture Value 0 Register (SM3CVAL0)	16	R	0000h
162h	Capture Value 0 Cycle Register (SM3CVAL0CYC)	16	R	0000h
164h	Capture Value 1 Register (SM3CVAL1)	16	R	0000h
166h	Capture Value 1 Cycle Register (SM3CVAL1CYC)	16	R	0000h
178h	Phase Delay Register (SM3PHASEDLY)	16	RW	0000h
17Eh	Capture PWM_X Input Filter Register (SM3CAPTFILTX)	16	RW	0000h
180h	Output Enable Register (OUTEN)	16	RW	0000h

Table continues on the next page...

Table continued from the previous page...

Offset	Register	Width (In bits)	Access	Reset value
182h	Mask Register (MASK)	16	RW	0000h
184h	Software Controlled Output Register (SWCOUT)	16	RW	0000h
186h	PWM Source Select Register (DTSRCSEL)	16	RW	0000h
188h	Master Control Register (MCTRL)	16	RW	0000h
18Ah	Master Control 2 Register (MCTRL2)	16	RW	0000h
18Ch	Fault Control Register (FCTRL0)	16	RW	0000h
18Eh	Fault Status Register (FSTS0)	16	RW	See section
190h	Fault Filter Register (FFILT0)	16	RW	0000h
192h	Fault Test Register (FTST0)	16	RW	0000h
194h	Fault Control 2 Register (FCTRL20)	16	RW	0000h

33.5.2 Counter Register (SM0CNT - SM3CNT)


Offset

Register	Offset
SM0CNT	0h
SM1CNT	60h
SM2CNT	C0h
SM3CNT	120h

Function

This field displays the state of the signed 16-bit submodule counter. This register is not byte accessible. Writing this register generates bus transfer error.

Diagram

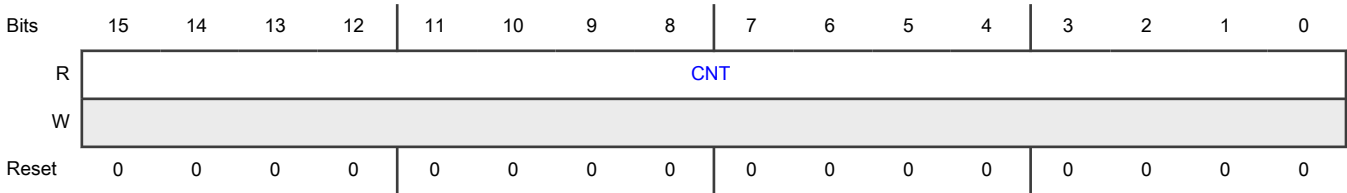

Fields

Field	Function
15-0	Counter Register Bits
CNT	

33.5.3 Initial Count Register (SM0INIT - SM3INIT)

Offset

Register	Offset
SM0INIT	2h
SM1INIT	62h
SM2INIT	C2h
SM3INIT	122h


Function

The 16-bit signed value in this buffered register defines the initial count value for the eFlexPWM module in PWM clock periods. This is the value loaded into the submodule counter when local sync, master sync, or master reload is asserted (based on the value of CTRL2[INIT_SEL]) or when CTRL2[FORCE] is asserted and force init is enabled. For PWM operation, the buffered contents of this register are loaded into the counter at the start of every PWM cycle. This register is not byte accessible.

NOTE

The INIT register is buffered. The value written does not take effect until MCTRL[LDOK] is set and the next PWM load cycle begins or CTRL[LDMOD] is set. This register cannot be written when MCTRL[LDOK] is set. Reading INIT reads the value in a buffer and not necessarily the value the PWM generator is currently using.

Diagram

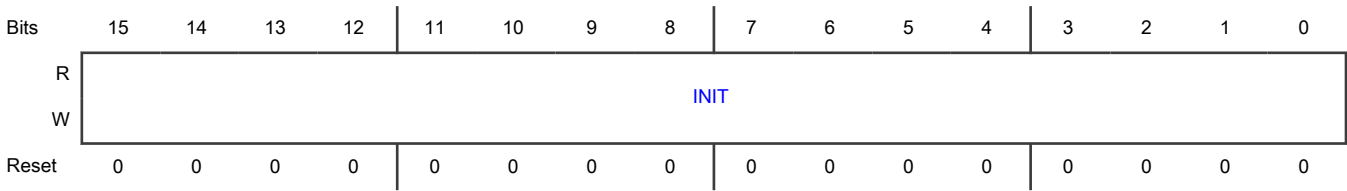

Fields

Field	Function
15-0	Initial Count Register Bits
INIT	

33.5.4 Control 2 Register (SM0CTRL2 - SM3CTRL2)


Offset

Register	Offset
SM0CTRL2	4h
SM1CTRL2	64h
SM2CTRL2	C4h
SM3CTRL2	124h

Function

Contains control fields for clock select and forcing output and initialization. This register is write-protected by MCTRL2[WRPROT] bits.

Diagram

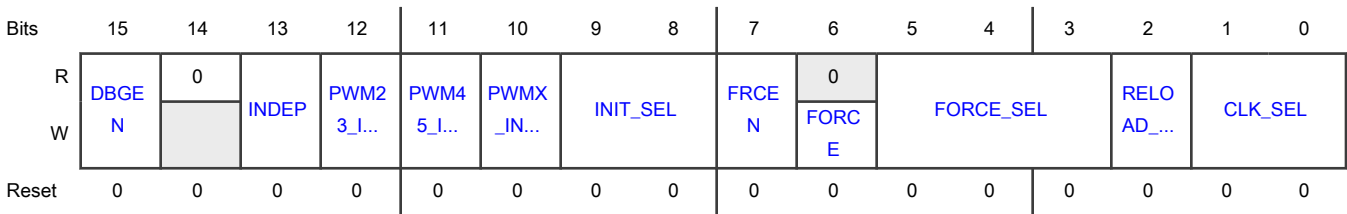

Fields

Field	Function
15	Debug Enable
DBGEN	When set to one, the PWM continues to run while the chip is in Debug mode. If the device enters Debug mode and this bit is zero, then the PWM outputs are disabled until Debug mode is exited. At that point, the PWM pins resume operation as programmed in the PWM registers.

Table continues on the next page...

Table continued from the previous page...

Field	Function
14 —	Reserved
13 INDEP	Independent or Complementary Pair Operation This bit determines if the PWM_A and PWM_B channels are independent PWMs or a complementary PWM pair. 0b - PWM_A and PWM_B form a complementary PWM pair. 1b - PWM_A and PWM_B outputs are independent PWMs.
12 PWM23_INIT	PWM23 Initial Value This bit determines the initial value for PWM23 and the value to which it is forced when FORCE_INIT is asserted.
11 PWM45_INIT	PWM45 Initial Value This bit determines the initial value for PWM45 and the value to which it is forced when FORCE_INIT is asserted.
10 PWMX_INIT	PWM_X Initial Value This bit determines the initial value for PWM_X and the value to which it is forced when FORCE_INIT is asserted.
9-8 INIT_SEL	Initialization Control Select These bits control the source of the INIT signal which goes to the counter. 00b - Local sync (PWM_X) causes initialization. 01b - Master reload from submodule 0 causes initialization. This setting should not be used in submodule 0 as it forces the INIT signal to logic 0. The submodule counter will only re-initialize when a master reload occurs. 10b - Master sync from submodule 0 causes initialization. This setting should not be used in submodule 0 as it forces the INIT signal to logic 0. 11b - EXT_SYNC causes initialization.
7 FRCEN	Force Enable This bit allows the CTRL2[FORCE] signal to initialize the counter without regard to the signal selected by CTRL2[INIT_SEL]. This is a software controlled initialization. A forced initialization will also assert the register reload if MCTRL[LDOK] is set. 0b - Initialization from a FORCE_OUT is disabled. 1b - Initialization from a FORCE_OUT is enabled.
6 FORCE	Force Initialization If CTRL2[FORCE_SEL] is set to 000, writing a 1 to this bit results in a FORCE_OUT event. This causes the following actions to be taken:

Table continues on the next page...

Table continued from the previous page...

Field	Function
	- The PWM_A and PWM_B output pins assume values based on DTSRCSEL[SMxSEL23] and DTSRCSEL[SMxSEL45]. - If CTRL2[FRCEN] is set, the counter value is initialized with the INIT register value only when the submodule MCTRL[RUN] = 1 or CTRL2[CLK_SEL] = 2.
5-3 FORCE_SEL	Force Select This bit determines the source of the FORCE OUTPUT signal for this submodule. 000b - The local force signal, CTRL2[FORCE], from this submodule is used to force updates. 001b - The master force signal from submodule 0 is used to force updates. This setting should not be used in submodule 0 as it holds the FORCE OUTPUT signal to logic 0. 010b - The local reload signal from this submodule is used to force updates without regard to the state of LDOK. 011b - The master reload signal from submodule0 is used to force updates if LDOK is set. This setting should not be used in submodule0 as it holds the FORCE OUTPUT signal to logic 0. 100b - The local sync signal from this submodule is used to force updates. 101b - The master sync signal from submodule0 is used to force updates. This setting should not be used in submodule0 as it holds the FORCE OUTPUT signal to logic 0. 110b - The external force signal, EXT_FORCE, from outside the eFlexPWM module causes updates. 111b - The external sync signal, EXT_SYNC, from outside the eFlexPWM module causes updates.
2 RELOAD_SEL	Reload Source Select This bit determines the source of the RELOAD signal for this submodule. When this bit is set, MCTRL[LDOK[0]] for submodule 0 should be used since the local MCTRL[LDOK] will be ignored. 0b - The local RELOAD signal is used to reload registers. 1b - The master RELOAD signal (from submodule 0) is used to reload registers. This setting should not be used in submodule 0 as it forces the RELOAD signal to logic 0.
1-0 CLK_SEL	Clock Source Select These bits determine the source of the clock signal for this submodule. 00b - The IPBus clock is used as the clock for the local prescaler and counter. 01b - EXT_CLK is used as the clock for the local prescaler and counter. 10b - Submodule 0's clock (AUX_CLK) is used as the source clock for the local prescaler and counter. This setting should not be used in submodule 0 as it forces the clock to logic 0. 11b - Reserved

33.5.5 Control Register (SM0CTRL - SM3CTRL)


Offset

Register	Offset
SM0CTRL	6h
SM1CTRL	66h
SM2CTRL	C6h
SM3CTRL	126h

Function

Includes control settings for timing, loading, and buffering.

Diagram

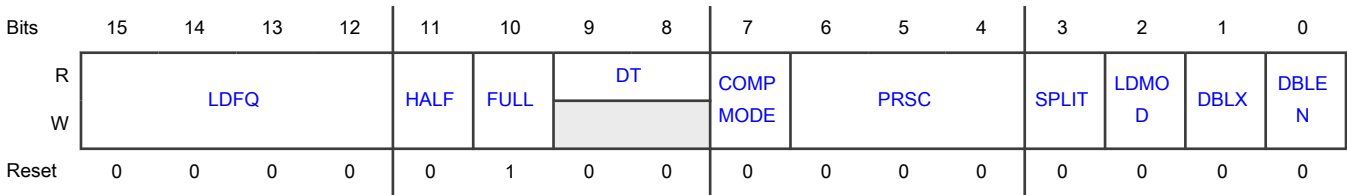

Fields

Field	Function
15-12 LDFQ	Load Frequency These buffered bits select the PWM load frequency. Reset clears LDFQ, selecting loading every PWM opportunity. A PWM opportunity is determined by HALF and FULL. The register bits are write-protected by MCTRL2[WRPROT] bits. NOTE LDFQ takes effect when the current load cycle is complete, regardless of the state of MCTRL[LDOK]. Reading LDFQ reads the buffered values and not necessarily the values currently in effect. 0000b - Every PWM opportunity 0001b - Every 2 PWM opportunities 0010b - Every 3 PWM opportunities 0011b - Every 4 PWM opportunities 0100b - Every 5 PWM opportunities 0101b - Every 6 PWM opportunities 0110b - Every 7 PWM opportunities 0111b - Every 8 PWM opportunities

Table continues on the next page...

Table continued from the previous page...

Field	Function
	1000b - Every 9 PWM opportunities 1001b - Every 10 PWM opportunities 1010b - Every 11 PWM opportunities 1011b - Every 12 PWM opportunities 1100b - Every 13 PWM opportunities 1101b - Every 14 PWM opportunities 1110b - Every 15 PWM opportunities 1111b - Every 16 PWM opportunities
11 HALF	Half Cycle Reload This bit enables half-cycle reloads. A half cycle is defined by when the submodule counter matches the VAL0 register and does not have to be halfway through the PWM cycle. This bit is write-protected by MCTRL2[WRPROT] bits. 0b - Half-cycle reloads disabled. 1b - Half-cycle reloads enabled.
10 FULL	Full Cycle Reload This bit enables full-cycle reloads. A full cycle is defined by when the submodule counter matches the VAL1 register. Either CTRL[HALF] or CTRL[FULL] must be set to move the buffered data into the registers used by the PWM generators or CTRL[LDMOD] must be set. If both CTRL[HALF] and CTRL[FULL] are set, then reloads can occur twice per cycle. This bit is write-protected by MCTRL2[WRPROT] bits. 0b - Full-cycle reloads disabled. 1b - Full-cycle reloads enabled.
9-8 DT	Deadtime These bits reflect the sampled values of the PWM_X input at the end of each deadtime. Sampling occurs at the end of deadtime 0 for DT[0] and the end of deadtime 1 for DT[1]. Reset clears these bits. The register bits are write-protected by MCTRL2[WRPROT] bits.
7 COMPMODE	Compare Mode This bit controls how comparisons are made between the VAL* registers and the PWM submodule counter. This bit can be written one time after which it requires a reset to release the bit for writing again. 0b - The VAL* registers and the PWM counter are compared using an "equal to" method. This means that PWM edges are only produced when the counter is equal to one of the VAL* register values. This implies that a PWM_A output that is high at the end of a period maintains this state until a match with VAL3 clears the output in the following period. 1b - The VAL* registers and the PWM counter are compared using an "equal to or greater than" method. This means that PWM edges are produced when the counter is equal to or greater than one of the VAL* register values. This implies that a PWM_A output that is high at the end of a period could go low at the start of the next period if the starting counter value is greater than (but not necessarily equal to) the new VAL3 value.

Table continues on the next page...

Table continued from the previous page...

Field	Function
6-4 PRSC	Prescaler These buffered bits select the divide ratio of the PWM clock frequency selected by CTRL2[CLK_SEL]. NOTE Reading CTRL[PRSC] reads the buffered values and not necessarily the values currently in effect. CTRL[PRSC] takes effect at the beginning of the next PWM cycle and only when the load okay bit MCTRL[LDOK] is set, or CTRL[LDMOD] is set. This field cannot be written when MCTRL[LDOK] is set. 000b - Prescaler 1. PWM clock frequency = f_{clk} 001b - Prescaler 2. PWM clock frequency = $f_{clk} / 2$ 010b - Prescaler 4. PWM clock frequency = $f_{clk} / 4$ 011b - Prescaler 8. PWM clock frequency = $f_{clk} / 8$ 100b - Prescaler 16. PWM clock frequency = $f_{clk} / 16$ 101b - Prescaler 32. PWM clock frequency = $f_{clk} / 32$ 110b - Prescaler 64. PWM clock frequency = $f_{clk} / 64$ 111b - Prescaler 128. PWM clock frequency = $f_{clk} / 128$
3 SPLIT	Split the DBLPWM signal to PWM_A and PWM_B This bit is used in independent mode when DBLEN is set. This bit allows the two PWM pulses generated by DBLEN to be split with one pulse on PWM_A and one on PWM_B. The two pulses within the same PWM period are created by an XOR function of the PWM_A and PWM_B sources. The splitting function causes PWM_A to output the pulse that occurs when the PWM_A source is 1 and the PWM_B source is 0. The PWM_B output occurs when the PWM_B source is 1 and the PWM_A source is 0. (See Double switching PWMs.) This bit is write-protected by MCTRL2[WRPROT] bits. 0b - DBLPWM is not split. PWM_A and PWM_B each have double pulses. 1b - DBLPWM is split to PWM_A and PWM_B.
2 LDMOD	Load Mode Select This bit selects the timing of loading the buffered registers for this submodule. This bit is write-protected by MCTRL2[WRPROT] bits. 0b - Buffered registers of this submodule are loaded and take effect at the next PWM reload if MCTRL[LDOK] is set. 1b - Buffered registers of this submodule are loaded and take effect immediately upon MCTRL[LDOK] being set. In this case, it is not necessary to set CTRL[FULL] or CTRL[HALF].
1 DBLX	PWM_X Double Switching Enable This bit enables the double switching behavior on PWM_X. When this bit is set, the PWM_X output shall be the exclusive OR combination of PWM_A and PWM_B prior to polarity and masking considerations. This bit is write-protected by MCTRL2[WRPROT] bits. 0b - PWM_X double pulse disabled.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	1b - PWM_X double pulse enabled.
0 DBLEN	Double Switching Enable This bit enables the double switching PWM behavior (See Double switching PWMs). This bit is write-protected by MCTRL2[WRPROT] bits. 0b - Double switching disabled. 1b - Double switching enabled.

33.5.6 Value Register 0 (SM0VAL0 - SM3VAL0)

Offset


Register	Offset
SM0VAL0	Ah
SM1VAL0	6Ah
SM2VAL0	CAh
SM3VAL0	12Ah

Function

NOTE

The VAL0 register is buffered. The value written does not take effect until MCTRL[LDOK] is set and the next PWM load cycle begins or CTRL[LDMOD] is set. VAL0 cannot be written when MCTRL[LDOK] is set. Reading VAL0 reads the value in a buffer. It is not necessarily the value that the PWM generator is currently using.

Diagram

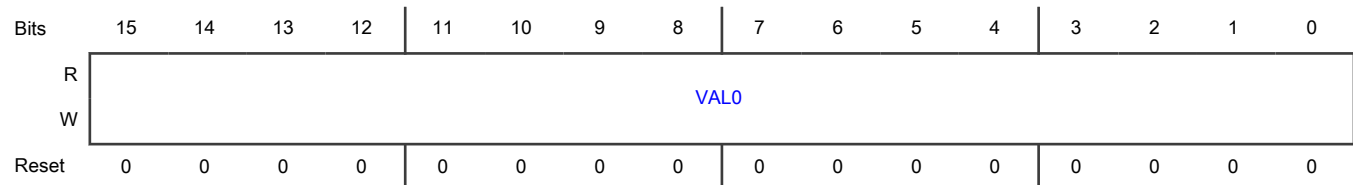

Fields

Field	Function
15-0 VAL0	Value 0 The 16-bit signed value in this buffered register defines the mid-cycle reload point for the PWM in PWM clock periods. This value also defines when the PWM_X signal is set and the local sync signal is reset. This register is not byte accessible.

Table continues on the next page...

Field	Function
	NOTE The actual behavior takes effect when counter equal VAL0+1.

33.5.7 Value Register 1 (SM0VAL1 - SM3VAL1)

Offset

Register	Offset
SM0VAL1	Eh
SM1VAL1	6Eh
SM2VAL1	CEh
SM3VAL1	12Eh

Function


NOTE

The VAL1 register is buffered. The value written does not take effect until MCTRL[LDOK] is set and the next PWM load cycle begins or CTRL[LDMOD] is set. VAL1 cannot be written when MCTRL[LDOK] is set. Reading VAL1 reads the value in a buffer. It is not necessarily the value that the PWM generator is currently using.

When using FRACVAL1, limit the maximum value of VAL1 to 0xFFFE for unsigned applications or to 0x7FFE for signed applications, to avoid counter rollovers caused by accumulating the fractional period defined by FRACVAL1.

If the VAL1 register defines the timer period (Local Sync is selected as the counter initialization signal), a 100% duty cycle cannot be achieved on the PWM_X output. After the count reaches VAL1, the PWM_X output is low for a minimum of one count every cycle. When the Master Sync signal (only originated by the Local Sync from submodule 0) is used to control the timer period, the VAL1 register can be free for other functions such as PWM generation without the duty cycle limitation.

Diagram

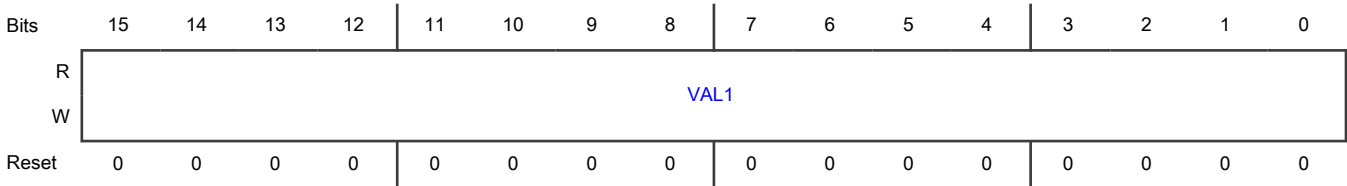

Fields

Field	Function
15-0 VAL1	Value 1

Table continues on the next page...

Field	Function
	The 16-bit signed value written to this buffered register defines the modulo count value (maximum count) for the submodule counter. When reaching this count value, the counter reloads itself with the contents of the INIT register and asserts the local sync signal while resetting PWM_X. This register is not byte accessible. NOTE The actual behavior takes effect when the counter equals VAL1+1.

33.5.8 Value Register 2 (SM0VAL2 - SM3VAL2)

Offset


Register	Offset
SM0VAL2	12h
SM1VAL2	72h
SM2VAL2	D2h
SM3VAL2	132h

Function

NOTE

The VAL2 register is buffered. The value written does not take effect until MCTRL[LDOK] is set and the next PWM load cycle begins or CTRL[LDMOD] is set. VAL2 cannot be written when MCTRL[LDOK] is set. Reading VAL2 reads the value in a buffer and not necessarily the value that the PWM generator is currently using.

Diagram

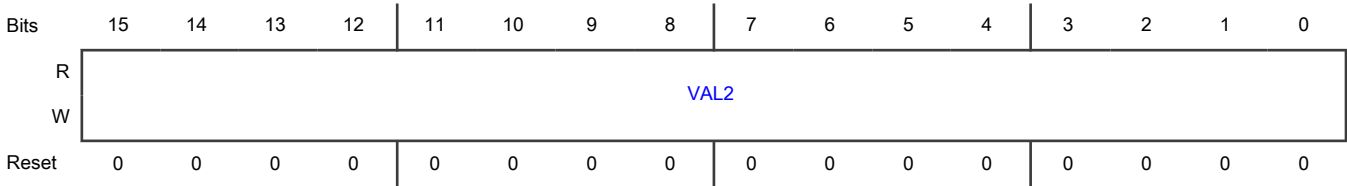

Fields

Field	Function
15-0 VAL2	Value 2 The 16-bit signed value in this buffered register defines the count value to set PWM23 high. This register is not byte accessible. NOTE The actual behavior takes effect when the counter equals VAL2+1.

33.5.9 Value Register 3 (SM0VAL3 - SM3VAL3)

Offset


Register	Offset
SM0VAL3	16h
SM1VAL3	76h
SM2VAL3	D6h
SM3VAL3	136h

Function

NOTE

The VAL3 register is buffered. The value written does not take effect until MCTRL[LDOK] is set and the next PWM load cycle begins or CTRL[LDMOD] is set. VAL3 cannot be written when MCTRL[LDOK] is set. Reading VAL3 reads the value in a buffer and not necessarily the value that the PWM generator is currently using.

Diagram

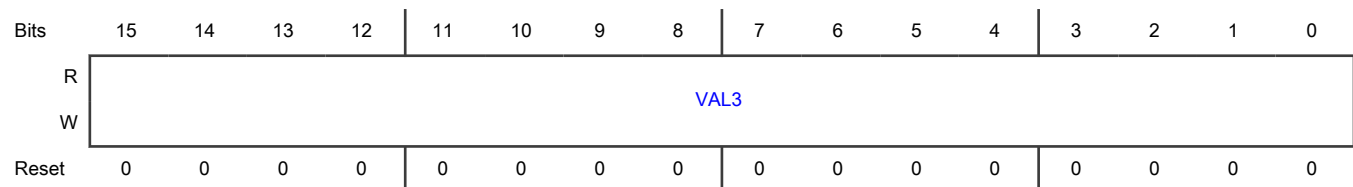

Fields

Field	Function
15-0 VAL3	Value 3 The 16-bit signed value in this buffered register defines the count value to set PWM23 low. This register is not byte accessible. NOTE The actual behavior takes effect when the counter equals VAL3+1.

33.5.10 Value Register 4 (SM0VAL4 - SM3VAL4)

Offset


Register	Offset
SM0VAL4	1Ah
SM1VAL4	7Ah
SM2VAL4	DAh
SM3VAL4	13Ah

Function

NOTE

The VAL4 register is buffered. The value written does not take effect until MCTRL[LDOK] is set and the next PWM load cycle begins or CTRL[LDMOD] is set. VAL4 cannot be written when MCTRL[LDOK] is set. Reading VAL4 reads the value in a buffer and not necessarily the value that the PWM generator is currently using.

Diagram

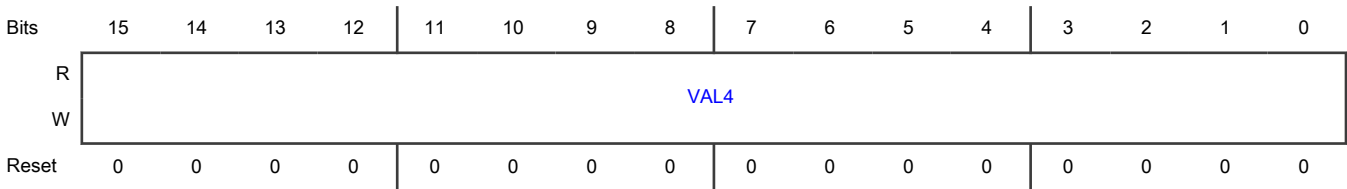

Fields

Field	Function
15-0	Value 4
VAL4	The 16-bit signed value in this buffered register defines the count value to set PWM45 high. This register is not byte accessible. NOTE The actual behavior takes effect when the counter equals VAL4+1.

33.5.11 Value Register 5 (SM0VAL5 - SM3VAL5)

Offset


Register	Offset
SM0VAL5	1Eh
SM1VAL5	7Eh
SM2VAL5	DEh
SM3VAL5	13Eh

Function

NOTE

The VAL5 register is buffered. The value written does not take effect until MCTRL[LDOK] is set and the next PWM load cycle begins or CTRL[LDMOD] is set. VAL5 cannot be written when MCTRL[LDOK] is set. Reading VAL5 reads the value in a buffer and not necessarily the value that the PWM generator is currently using.

Diagram

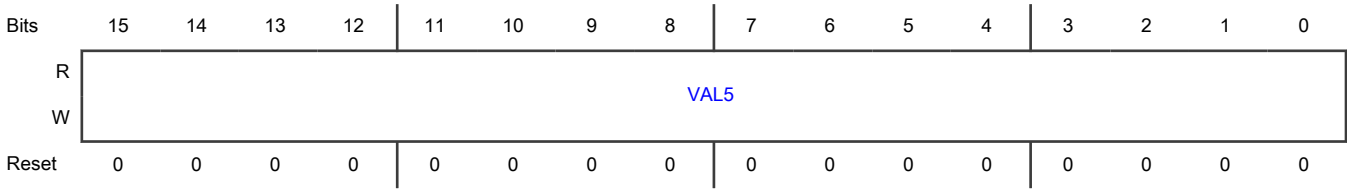

Fields

Field	Function
15-0	Value 5
VAL5	The 16-bit signed value in this buffered register defines the count value to set PWM45 low. This register is not byte accessible.
NOTE The actual behavior takes effect when the counter equals VAL5+1.	

33.5.12 Output Control Register (SM0OCTRL - SM3OCTRL)


Offset

Register	Offset
SM0OCTRL	22h
SM1OCTRL	82h
SM2OCTRL	E2h
SM3OCTRL	142h

Function

Contains output controls for fault states. This register is write-protected by MCTRL2[WRPROT] bits.

Diagram

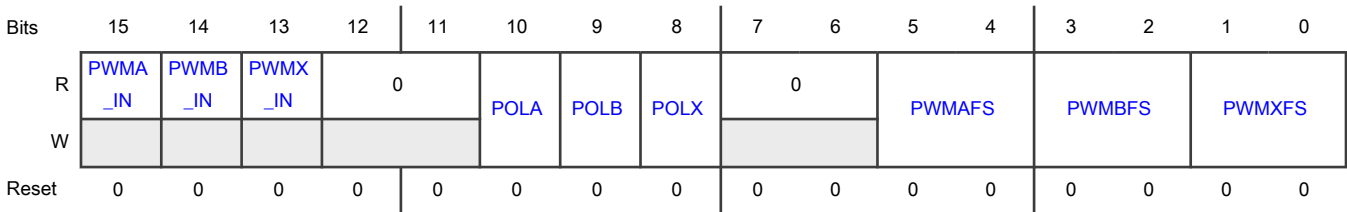

Fields

Field	Function
15	PWM_A Input

Table continues on the next page...

Table continued from the previous page...

Field	Function
PWMA_IN	This bit shows the logic value currently being driven into the PWM_A input. The reset state is undefined.
14 PWMB_IN	PWM_B Input This bit shows the logic value currently being driven into the PWM_B input. The reset state is undefined.
13 PWMX_IN	PWM_X Input This bit shows the logic value currently being driven into the PWM_X input. The reset state is undefined.
12-11 —	Reserved
10 POLA	PWM_A Output Polarity This bit inverts the PWM_A output polarity. 0b - PWM_A output not inverted. A high level on the PWM_A pin represents the "on" or "active" state. 1b - PWM_A output inverted. A low level on the PWM_A pin represents the "on" or "active" state.
9 POLB	PWM_B Output Polarity This bit inverts the PWM_B output polarity. 0b - PWM_B output not inverted. A high level on the PWM_B pin represents the "on" or "active" state. 1b - PWM_B output inverted. A low level on the PWM_B pin represents the "on" or "active" state.
8 POLX	PWM_X Output Polarity This bit inverts the PWM_X output polarity. 0b - PWM_X output not inverted. A high level on the PWM_X pin represents the "on" or "active" state. 1b - PWM_X output inverted. A low level on the PWM_X pin represents the "on" or "active" state.
7-6 —	Reserved
5-4 PWMAFS	PWM_A Fault State These bits determine the fault state for the PWM_A output during fault conditions and Deep Sleep mode. It may also define the output state during Debug mode depending on the setting of CTRL2[DBGEN]. 00b - Output is forced to logic 0 state prior to consideration of output polarity control. 01b - Output is forced to logic 1 state prior to consideration of output polarity control. 10b,11b - Output is put in a high-impedance state.
3-2 PWMBFS	PWM_B Fault State

Table continues on the next page...

Table continued from the previous page...

Field	Function
	These bits determine the fault state for the PWM_B output during fault conditions and Deep Sleep mode. It may also define the output state during Debug mode depending on the setting of CTRL2[DBGEN]. 00b - Output is forced to logic 0 state prior to consideration of output polarity control. 01b - Output is forced to logic 1 state prior to consideration of output polarity control. 10b,11b - Output is put in a high-impedance state.
1-0 PWMXFS	PWM_X Fault State These bits determine the fault state for the PWM_X output during fault conditions and Deep Sleep mode. It may also define the output state during Debug mode depending on the setting of CTRL2[DBGEN]. 00b - Output is forced to logic 0 state prior to consideration of output polarity control. 01b - Output is forced to logic 1 state prior to consideration of output polarity control. 10b,11b - Output is put in a high-impedance state.

33.5.13 Status Register (SM0STS - SM3STS)

Offset

Register	Offset
SM0STS	24h
SM1STS	84h
SM2STS	E4h
SM3STS	144h

Function

Contains Compare and Capture flag status.

Diagram

Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0	RUF	REF	RF	0				CFX1	CFX0	CMPF					
W			W1C	W1C					W1C	W1C	W1C					
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
15	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
—	
14 RUF	Registers Updated Flag This bit is set when one of the INIT, VALx, FRACVALx, or CTRL[PRSC] registers has been written, which indicates potentially non-coherent data in the set of double buffered registers. Clear this bit by a proper reload sequence consisting of a reload signal while MCTRL[LDOK] = 1. Reset clears this bit. 0b - No register update has occurred since last reload. 1b - At least one of the double buffered registers has been updated since the last reload.
13 REF	Reload Error Flag This bit is set when a reload cycle occurs while MCTRL[LDOK] is 0 and the double buffered registers are in a non-coherent state (STS[RUF] = 1). Clear this bit by writing a logic one to this location. Reset clears this bit. 0b - No reload error occurred. 1b - Reload signal occurred with non-coherent data and MCTRL[LDOK] = 0.
12 RF	Reload Flag This bit is set at the beginning of every reload cycle regardless of the state of MCTRL[LDOK]. Clear this bit by writing a logic one to this location when DMAEN[VALDE] is clear (non-DMA mode). This bit can also be cleared by the DMA done signal when DMAEN[VALDE] is set (DMA mode) . Reset clears this bit. 0b - No new reload cycle since last STS[RF] clearing 1b - New reload cycle since last STS[RF] clearing
11-8 —	Reserved
7 CFX1	Capture Flag X1 This bit is set when a capture event occurs on the Capture X1 circuit . This bit is cleared by writing a one to this bit position if DMAEN[CX1DE] is clear (non-DMA mode) or by the DMA done signal if DMAEN[CX1DE] is set (DMA mode) . Reset clears this bit.
6 CFX0	Capture Flag X0 This bit is set when a capture event occurs on the Capture X0 circuit . This bit is cleared by writing a one to this bit position if DMAEN[CX0DE] is clear (non-DMA mode) or by the DMA done signal if DMAEN[CX0DE] is set (DMA mode) . Reset clears this bit.
5-0 CMPF	Compare Flags These bits are set when the submodule counter value matches the value of one of the VALx registers. Clear these bits by writing a 1 to a bit position. 00_0000b - No compare event has occurred for a particular VALx value. 00_0001b - A compare event has occurred for a particular VALx value.

33.5.14 Interrupt Enable Register (SM0INTEN - SM3INTEN)


Offset

Register	Offset
SM0INTEN	26h
SM1INTEN	86h
SM2INTEN	E6h
SM3INTEN	146h

Function

Contains Compare and Capture interrupt enables.

Diagram

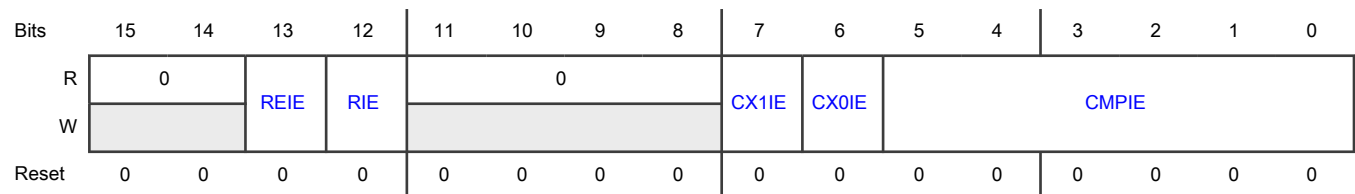

Fields

Field	Function
15-14 —	Reserved
13 REIE	Reload Error Interrupt Enable This bit enables the reload error flag, STS[REF], to generate CPU interrupt requests. Reset clears this bit. 0b - STS[REF] CPU interrupt requests disabled 1b - STS[REF] CPU interrupt requests enabled
12 RIE	Reload Interrupt Enable This bit enables the reload flag, STS[RF], to generate CPU interrupt requests. Reset clears this bit. 0b - STS[RF] CPU interrupt requests disabled 1b - STS[RF] CPU interrupt requests enabled
11-8 —	Reserved
7 CX1IE	Capture X 1 Interrupt Enable This bit allows the STS[CFX1] flag to create an interrupt request to the CPU. Do not set this bit and DMAEN[CX1DE].

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - Interrupt request disabled for STS[CFX1]. 1b - Interrupt request enabled for STS[CFX1].
6 CX0IE	Capture X 0 Interrupt Enable This bit allows the STS[CFX0] flag to create an interrupt request to the CPU. Do not set this bit and DMAEN[CX0DE]. 0b - Interrupt request disabled for STS[CFX0]. 1b - Interrupt request enabled for STS[CFX0].
5-0 CMPIE	Compare Interrupt Enables These bits enable the STS[CMPI] flags to cause a compare interrupt request to the CPU. 00_0000b - The corresponding STS[CMPI] bit will not cause an interrupt request. 00_0001b - The corresponding STS[CMPI] bit will cause an interrupt request.

33.5.15 DMA Enable Register (SM0DMAEN - SM3DMAEN)


Offset

Register	Offset
SM0DMAEN	28h
SM1DMAEN	88h
SM2DMAEN	E8h
SM3DMAEN	148h

Function

Contains controls for DMA. This register is write-protected by MCTRL2[WRPROT] bits.

Diagram

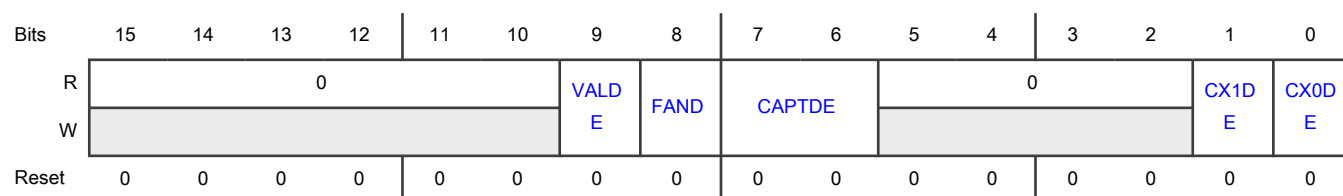

Fields

Field	Function
15-10 —	Reserved
9 VALDE	Value Registers DMA Enable This bit enables DMA write requests for the VALx and FRACVALx registers when STS[RF] is set. Reset clears this bit. 0b - DMA write requests disabled 1b - Enabled. DMA write requests for the VALx and FRACVALx registers enabled
8 FAND	FIFO Watermark AND Control This bit works in conjunction with the DMAEN[CAPTDE] field when it is set to watermark mode (DMAEN[CAPTDE] = 01). While DMAEN[CAXDE], DMAEN[CBxDE], and DMAEN[CXxDE] determine which FIFO watermarks the DMA read request is sensitive to. This bit determines if the selected watermarks are AND'ed together or OR'ed together to create the request. 0b - Selected FIFO watermarks are OR'ed together. 1b - Selected FIFO watermarks are AND'ed together.
7-6 CAPTDE	Capture DMA Enable Source Select These bits select the source of enabling the DMA read requests for the capture FIFOs. Reset clears these bits. 00b - Read DMA requests disabled. 01b - Exceeding a FIFO watermark sets the DMA read request. This requires at least one of DMAEN[CX1DE], or DMAEN[CX0DE] to be set to determine which watermark(s) the DMA request is sensitive. 10b - A local synchronization (VAL1 matches counter) sets the read DMA request. 11b - A local reload (STS[RF] being set) sets the read DMA request.
5-2 —	Reserved
1 CX1DE	Capture X1 FIFO DMA Enable This bit enables DMA read requests for the Capture X1 FIFO data when STS[CFX1] is set. Reset clears this bit. Do not set both this bit and INTEN[CX1IE].

Table continues on the next page...

Table continued from the previous page...

Field	Function
0 CX0DE	Capture X0 FIFO DMA Enable This bit enables DMA read requests for the Capture X0 FIFO data when STS[CFX0] is set. Reset clears this bit. Do not set both this bit and INTEN[CX0IE].

33.5.16 Output Trigger Control Register (SM0TCTRL - SM3TCTRL)


Offset

Register	Offset
SM0TCTRL	2Ah
SM1TCTRL	8Ah
SM2TCTRL	EAh
SM3TCTRL	14Ah

Function

Contains trigger controls. This register is write-protected by MCTRL2[WRPROT] bits.

Diagram

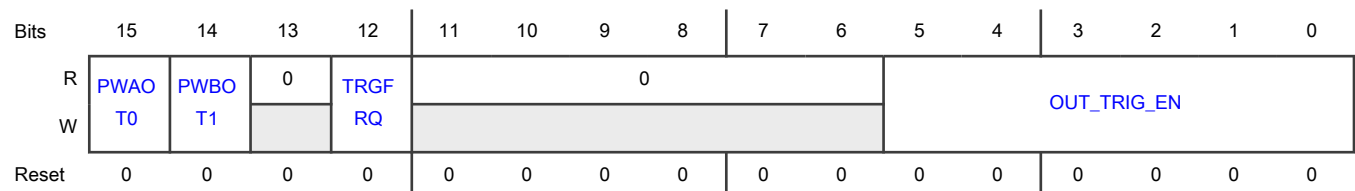

Fields

Field	Function
15 PWAOT0	Mux Output Trigger 0 Source Select This bit selects which signal to bring out on the PWM's PWM_MUX_TRIG0 port. 0b - Route the PWM_OUT_TRIG0 signal to PWM_MUX_TRIG0 port. 1b - Route the PWM_A output to the PWM_MUX_TRIG0 port.
14 PWBOT1	Mux Output Trigger 1 Source Select This bit selects which signal to bring out on the PWM's PWM_MUX_TRIG1 port. 0b - Route the PWM_OUT_TRIG1 signal to PWM_MUX_TRIG1 port. 1b - Route the PWM_B output to the PWM_MUX_TRIG1 port.

Table continues on the next page...

Table continued from the previous page...

Field	Function
13 —	Reserved
12 TRGFRQ	Trigger Frequency This bit allows control over the frequency of the trigger outputs when using non-zero values of CTRL[LDFQ]. 0b - Trigger outputs are generated during every PWM period even if the PWM is not reloaded every period due to CTRL[LDFQ] being non-zero. 1b - Trigger outputs are generated only during the final PWM period prior to a reload opportunity when the PWM is not reloaded every period due to CTRL[LDFQ] being non-zero.
11-6 —	Reserved
5-0 OUT_TRIG_EN	Output Trigger Enables These bits enable the generation of PWM_OUT_TRIG0 and PWM_OUT_TRIG1 outputs based on the counter value matching the value in one or more of the VAL0-5 registers. NOTE Due to delays in creating the PWM outputs, the output trigger signals lead the PWM output edges by 2-3 clock cycles depending on the fractional cycle value being used. 1x_xxxx b - PWM_OUT_TRIG1 will set when the counter value matches the VAL5 value. x1_xxxx b - PWM_OUT_TRIG0 will set when the counter value matches the VAL4 value. xx_1xxx b - PWM_OUT_TRIG1 will set when the counter value matches the VAL3 value. xx_x1xx b - PWM_OUT_TRIG0 will set when the counter value matches the VAL2 value. xx_xx1x b - PWM_OUT_TRIG1 will set when the counter value matches the VAL1 value. xx_xxx1 b - PWM_OUT_TRIG0 will set when the counter value matches the VAL0 value.


33.5.17 Fault Disable Mapping Register 0 (SM0DISMAP0 - SM3DISMAP0)

Offset

Register	Offset
SM0DISMAP0	2Ch
SM1DISMAP0	8Ch
SM2DISMAP0	ECh
SM3DISMAP0	14Ch

Function

This register determines which PWM pins are disabled by the fault protection inputs. Reset sets all of the bits in the fault disable mapping register. This register is write-protected by MCTRL2[WRPROT] bits.

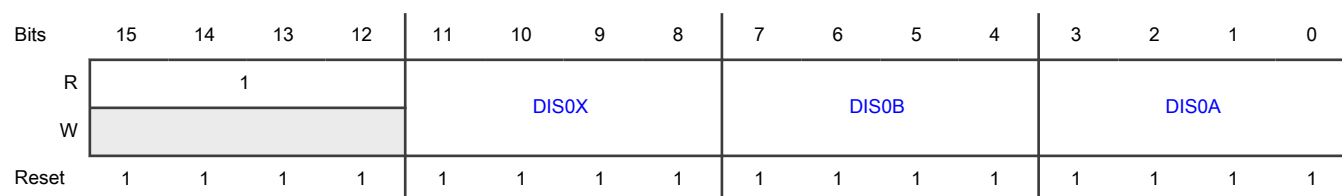Diagram**Fields**

Field	Function
15-12 —	Reserved
11-8 DIS0X	PWM_X Fault Disable Mask 0 Each of the four bits of this field is one-to-one associated with the four FAULTx inputs of fault channel 0. The PWM_X output is turned off if there is a logic 1 on a FAULTx input and a 1 in the corresponding bit of this field. DIS0X[0] is associated with FAULT0. DIS0X[1] is associated with FAULT1. DIS0X[2] is associated with FAULT2. DIS0X[3] is associated with FAULT3. A reset sets all bits in this field.
7-4 DIS0B	PWM_B Fault Disable Mask 0 Each of the four bits of this field is one-to-one associated with the four FAULTx inputs of fault channel 0. The PWM_B output is turned off if there is a logic 1 on a FAULTx input and a 1 in the corresponding bit of this field. DIS0B[0] is associated with FAULT0. DIS0B[1] is associated with FAULT1. DIS0B[2] is associated with FAULT2. DIS0B[3] is associated with FAULT3. A reset sets all bits in this field.
3-0 DIS0A	PWM_A Fault Disable Mask 0 Each of the four bits of this field is one-to-one associated with the four FAULTx inputs of fault channel 0. The PWM_A output is turned off if there is a logic 1 on a FAULTx input and a 1 in the corresponding bit of this field. DIS0A[0] is associated with FAULT0. DIS0A[1] is associated with FAULT1. DIS0A[2] is associated with FAULT2. DIS0A[3] is associated with FAULT3. A reset sets all bits in this field.

33.5.18 Deadtime Count Register 0 (SM0DTCNT0 - SM3DTCNT0)**Offset**

Register	Offset
SM0DTCNT0	30h
SM1DTCNT0	90h
SM2DTCNT0	F0h
SM3DTCNT0	150h

Function

Deadtime operation applies only to complementary channel operation. The values written to the DTCNTx registers are in terms of IPBus clock cycles regardless of the setting of CTRL[PRSC] and/or CTRL2[CLK_SEL]. Reset sets the deadtime count registers to a default value of 0x07FF, selecting a deadtime of 2047 IPBus clock cycles, when fractional delay is not enabled. The DTCNTx registers are not byte accessible.

Diagram



Fields

Field	Function
15-11 —	Reserved
10-0 DTCNT0	Deadtime Count Register 0 This field is used to control the deadtime during 0 to 1 transitions of the PWM_A output (assuming normal polarity).


33.5.19 Deadtime Count Register 1 (SM0DTCNT1 - SM3DTCNT1)

Offset

Register	Offset
SM0DTCNT1	32h
SM1DTCNT1	92h
SM2DTCNT1	F2h
SM3DTCNT1	152h

Function

Deadtime operation applies only to complementary channel operation. The values written to the DTCNTx registers are in terms of IPBus clock cycles regardless of the setting of CTRL[PRSC] and/or CTRL2[CLK_SEL]. Reset sets the deadtime count registers to a default value of 0x07FF, selecting a deadtime of 2047 IPBus clock cycles, when fractional delay is not enabled. The DTCNTx registers are not byte accessible.

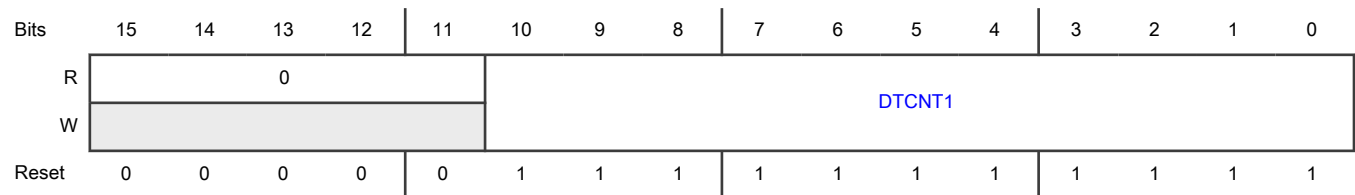Diagram**Fields**


Field	Function
15-11 —	Reserved
10-0 DTCNT1	Deadtime Count Register 1 This field is used to control the deadtime during 0 to 1 transitions of the complementary PWM_B output.

33.5.20 Capture Control X Register (SM0CAPTCTRLX)**Offset**

Register	Offset
SM0CAPTCTRLX	3Ch

Function

Contains capture controls for mode X. This register is write-protected by MCTRL2[WRPROT] bits.

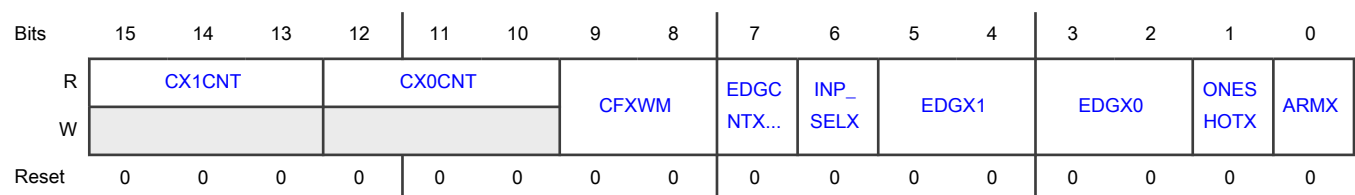Diagram**Fields**

Field	Function
15-13 CX1CNT	Capture X1 FIFO Word Count This field reflects the number of words in the Capture X1 FIFO. (FIFO depth is 1.)
12-10 CX0CNT	Capture X0 FIFO Word Count This field reflects the number of words in the Capture X0 FIFO. (FIFO depth is 1.)

Table continues on the next page...

Table continued from the previous page...

Field	Function
9-8 CFXWM	Capture X FIFOs Water Mark This field represents the water mark level for capture X FIFOs. The capture flags, STS[CFX1] and STS[CFX0], will not be set until the word count of the corresponding FIFO is greater than this water mark level. (FIFO depth is 1.)
7 EDGCNTX_EN	Edge Counter X Enable This bit enables the edge counter which counts rising and falling edges on the PWM_X input signal. 0b - Edge counter disabled and held in reset 1b - Edge counter enabled
6 INP_SELX	Input Select X This bit selects between the raw PWM_X input signal and the output of the edge counter/compare circuitry as the source for the input capture circuit. 0b - Raw PWM_X input signal selected as source. 1b - Edge Counter. Output of edge counter/compare selected as source. When this bitfield is set to 1, the internal edge counter is enabled and the rising and/or falling edges specified by the CAPTCTRLX[EDGX0] and CAPTCTRLX[EDGX1] fields are ignored. The software must place a value other than 00 in either or both of the CAPTCTRLX[EDGX0] and/or CAPTCTRLX[EDGX1] fields to enable one or both of the capture registers.
5-4 EDGX1	Edge X 1 These bits control the input capture 1 circuitry by determining which input edges cause a capture event. 00b - Disabled 01b - Capture falling edges 10b - Capture rising edges 11b - Capture any edge
3-2 EDGX0	Edge X 0 These bits control the input capture 0 circuitry by determining which input edges cause a capture event. 00b - Disabled 01b - Capture falling edges 10b - Capture rising edges 11b - Capture any edge
1 ONESHOTX	One Shot Mode Aux This field selects between free running and one shot mode for the input capture circuitry. 0b - Free Running. Free running mode is selected if both capture circuits are enabled, then capture circuit 0 is armed first after the ARMX bit is set. Once a capture occurs, capture circuit 0 is disarmed, and capture circuit 1 is armed. After capture circuit 1 performs a capture, it is

Table continues on the next page...

Table continued from the previous page...

Field	Function
	disarmed, and capture circuit 0 is re-armed. The process continues indefinitely. If only one of the capture circuits is enabled, then captures continue indefinitely on the enabled capture circuit. 1b - One Shot. One shot mode is selected if both capture circuits are enabled, then capture circuit 0 is armed first after the ARMX bit is set. Once a capture occurs, capture circuit 0 is disarmed, and capture circuit 1 is armed. After capture circuit 1 performs a capture, it is disarmed, and the ARMX bit is cleared. No further captures are performed until the ARMX bit is set again. If only one of the capture circuits is enabled, then a single capture occurs on the enabled capture circuit and the ARMX bit is then cleared.
0 ARMX	Arm X Setting this bit high starts the input capture process. This bit can be cleared at any time to disable input capture operation. This bit is self-cleared when in one shot mode and one or more of the enabled capture circuits has had a capture event. 0b - Input capture operation is disabled. 1b - Input capture operation as specified by CAPTCTRLX[EDGXx] is enabled.

33.5.21 Capture Compare X Register (SM0CAPTCOMPX)


Offset

Register	Offset
SM0CAPTCOMPX	3Eh

Function

Contains capture and control values for mode X. This register is write-protected by MCTRL2[WRPROT] bits.

Diagram

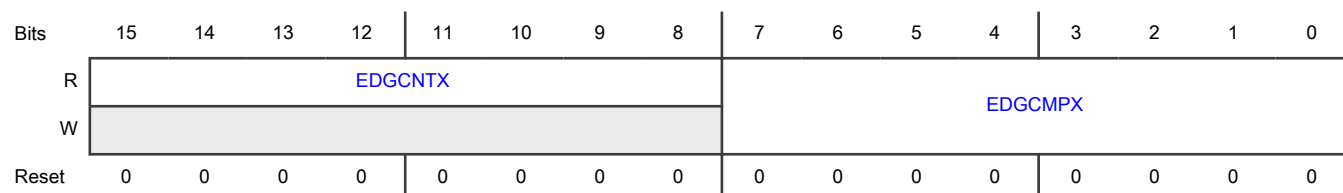

Fields

Field	Function
15-8 EDGCNTX	Edge Counter X This field contains the edge counter value for the PWM_X input capture circuitry.
7-0 EDGCMPLX	Edge Compare X This field is the compare value associated with the edge counter for the PWM_X input capture circuitry.

33.5.22 Capture Value 0 Register (SM0CVAL0)


Offset

Register	Offset
SM0CVAL0	40h

Function

Writing this register generates bus transfer error.

Diagram

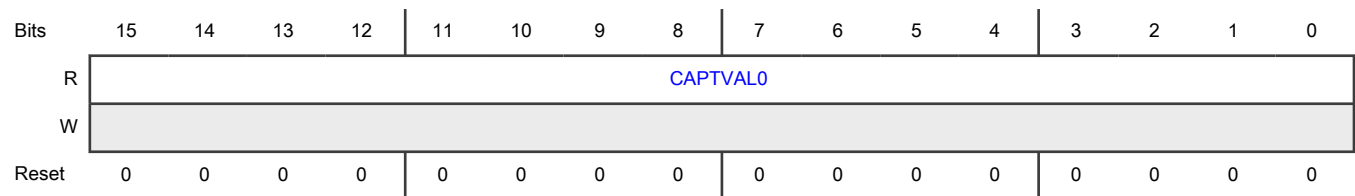

Fields

Field	Function
15-0 CAPTVAL0	Capture Value 0 This field stores the value captured from the submodule counter. Exactly when this capture occurs is defined by CAPTCTRLX[EDGX0]. Each capture increases the value of CAPTCTRLX[CX0CNT] by 1 until the maximum value is reached. Each read of this field decreases the value of CAPTCTRLX[CX0CNT] by 1 until 0 is reached. This field is not byte accessible.

33.5.23 Capture Value 0 Cycle Register (SM0CVAL0CYC)


Offset

Register	Offset
SM0CVAL0CYC	42h

Function

Writing this register generates bus transfer error.

Diagram

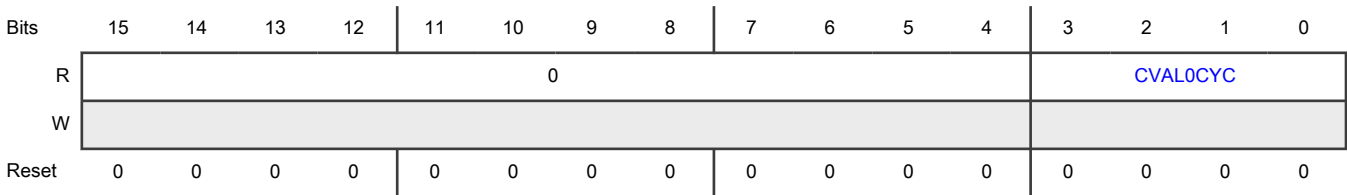

Fields

Field	Function
15-4 —	Reserved
3-0 CVAL0CYC	Capture Value 0 Cycle This field stores the cycle number corresponding to the value captured in CVAL0. This field is incremented each time the counter is loaded with the INIT value at the end of a PWM modulo cycle.

33.5.24 Capture Value 1 Register (SM0CVAL1)


Offset

Register	Offset
SM0CVAL1	44h

Function

Writing this register generates bus transfer error.

Diagram

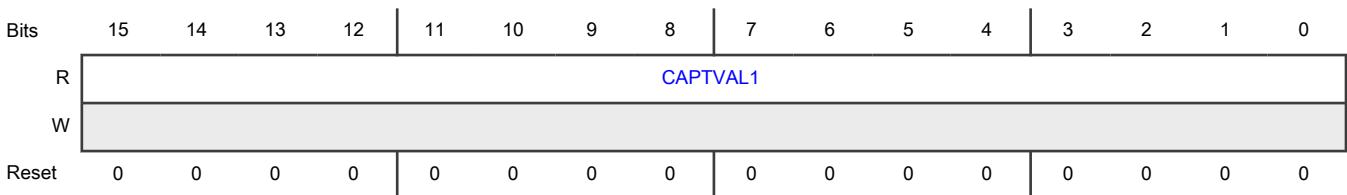

Fields

Field	Function
15-0 CAPTVAL1	Capture Value 1 This field stores the value captured from the submodule counter when this capture occurs is defined by CAPTCTRLX[EDGX1]. Each capture increases the value of CAPTCTRLX[CX1CNT] by 1 until the maximum value is reached. Each read of this field decreases the value of CAPTCTRLX[CX1CNT] by 1 until 0 is reached. This field is not byte accessible.

33.5.25 Capture Value 1 Cycle Register (SM0CVAL1CYC)

Offset

Register	Offset
SM0CVAL1CYC	46h

Function

Writing this register generates bus transfer error.

Diagram

Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0												CVAL1CYC			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
15-4 —	Reserved
3-0 CVAL1CYC	Capture Value 1 Cycle This field stores the cycle number corresponding to the value captured in CVAL1. This field is incremented each time the counter is loaded with the INIT value at the end of a PWM modulo cycle. Resets to 0 at POR or hard reset.

33.5.26 Capture PWM_X Input Filter Register (SM0CAPTFILTX - SM3CAPTFILTX)

Offset

Register	Offset
SM0CAPTFILTX	5Eh
SM1CAPTFILTX	BEh
SM2CAPTFILTX	11Eh
SM3CAPTFILTX	17Eh

Function

Input filter considerations include:

- The CAPTX_FILT_PER value should be set such that the sampling period is larger than the period of the expected noise. This way a noise spike will only corrupt one sample. The CAPTX_FILT_CNT value should be chosen to reduce the

probability of noisy samples causing an incorrect transition to be recognized. The probability of an incorrect transition is defined as the probability of an incorrect sample raised to the CAPTX_FILT_CNT+3 power.

- The values of FILT_PER and CAPTX_FILT_CNT must also be traded off against the desire for minimal latency in recognizing input transitions. Turning on the input filter (setting CAPTX_FILT_PER to a non-zero value) introduces a latency of ((CAPTX_FILT_CNT+4) x CAPTX_FILT_PER x IPBus clock period).


NOTE

When the filter is enabled, there is a combinational path to disable the PWM outputs to ensure rapid response to input capture conditions if the eFlexPWM module loses its clock. The latency induced by the filter will be seen in the time to set FSTS[FFLAG] and FSTS[FFPIN].

This register is not byte accessible

This register is write-protected by MCTRL2[WRPROT] bits.

Diagram

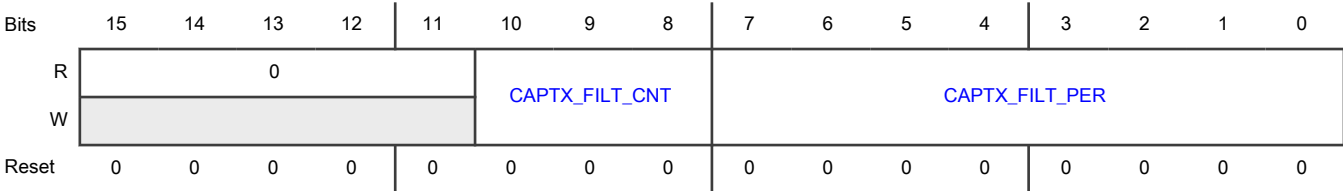

Fields

Field	Function
15-11 —	Reserved
10-8 CAPTX_FILT_CNT	Input Capture Filter Count These bits represent the number of consecutive samples that must agree prior to the input filter accepting an input transition. The number of samples is the decimal value of this field plus three: the bit field value of 0-7 represents 3-10 samples, respectively. The value of CAPTX_FILT_CNT affects the input latency.
7-0 CAPTX_FILT_PER	Input Capture Filter Period This field applies universally to all capture inputs. These bits represent the sampling period (in IPBus clock cycles) of the input capture pin input filter. Each input is sampled multiple times at the rate specified by this field. If CAPTX_FILT_PER is 0x00 (default), then the input filter is bypassed. The value of CAPTX_FILT_PER affects the input latency. NOTE When changing values for CAPTX_FILT_PER from one non-zero value to another non-zero value, first write a value of zero to clear the filter.

33.5.27 Capture Control X Register (SM1CAPTCTRLX)

Offset

Register	Offset
SM1CAPTCTRLX	9Ch

Function

Contains capture controls for mode X. This register is write-protected by MCTRL2[WRPROT] bits.

Diagram

Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	CX1CNT				CX0CNT				CFXWM	EDGC	INP_	EDGX1	EDGX0	ONES	HOTX	ARMX
W										NTX...	SELX					
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
15-13 CX1CNT	Capture X1 FIFO Word Count This field reflects the number of words in the Capture X1 FIFO. (FIFO depth is 1.)
12-10 CX0CNT	Capture X0 FIFO Word Count This field reflects the number of words in the Capture X0 FIFO. (FIFO depth is 1.)
9-8 CFXWM	Capture X FIFOs Water Mark This field represents the water mark level for capture X FIFOs. The capture flags, STS[CFX1] and STS[CFX0], will not be set until the word count of the corresponding FIFO is greater than this water mark level. (FIFO depth is 1.)
7 EDGCNTX_EN	Edge Counter X Enable This bit enables the edge counter which counts rising and falling edges on the PWM_X input signal. 0b - Edge counter disabled and held in reset 1b - Edge counter enabled
6 INP_SELX	Input Select X This bit selects between the raw PWM_X input signal and the output of the edge counter/compare circuitry as the source for the input capture circuit. 0b - Raw PWM_X input signal selected as source. 1b - Edge Counter. Output of edge counter/compare selected as source. When this bitfield is set to 1, the internal edge counter is enabled and the rising and/or falling edges specified by the

Table continues on the next page...

Table continued from the previous page...

Field	Function
	CAPTCTRLX[EDGX0] and CAPTCTRLX[EDGX1] fields are ignored. The software must place a value other than 00 in either or both of the CAPTCTRLX[EDGX0] and/or CAPTCTRLX[EDGX1] fields to enable one or both of the capture registers.
5-4 EDGX1	Edge X 1 These bits control the input capture 1 circuitry by determining which input edges cause a capture event. 00b - Disabled 01b - Capture falling edges 10b - Capture rising edges 11b - Capture any edge
3-2 EDGX0	Edge X 0 These bits control the input capture 0 circuitry by determining which input edges cause a capture event. 00b - Disabled 01b - Capture falling edges 10b - Capture rising edges 11b - Capture any edge
1 ONESHOTX	One Shot Mode Aux This field selects between free running and one shot mode for the input capture circuitry. 0b - Free Running. Free running mode is selected if both capture circuits are enabled, then capture circuit 0 is armed first after the ARMX bit is set. Once a capture occurs, capture circuit 0 is disarmed, and capture circuit 1 is armed. After capture circuit 1 performs a capture, it is disarmed, and capture circuit 0 is re-armed. The process continues indefinitely. If only one of the capture circuits is enabled, then captures continue indefinitely on the enabled capture circuit. 1b - One Shot. One shot mode is selected if both capture circuits are enabled, then capture circuit 0 is armed first after the ARMX bit is set. Once a capture occurs, capture circuit 0 is disarmed, and capture circuit 1 is armed. After capture circuit 1 performs a capture, it is disarmed, and the ARMX bit is cleared. No further captures are performed until the ARMX bit is set again. If only one of the capture circuits is enabled, then a single capture occurs on the enabled capture circuit and the ARMX bit is then cleared.
0 ARMX	Arm X Setting this bit high starts the input capture process. This bit can be cleared at any time to disable input capture operation. This bit is self-cleared when in one shot mode and one or more of the enabled capture circuits has had a capture event. 0b - Input capture operation is disabled. 1b - Input capture operation as specified by CAPTCTRLX[EDGXx] is enabled.

33.5.28 Capture Compare X Register (SM1CAPTCOMPX)


Offset

Register	Offset
SM1CAPTCOMPX	9Eh

Function

Contains capture and control values for mode X. This register is write-protected by MCTRL2[WRPROT] bits.

Diagram

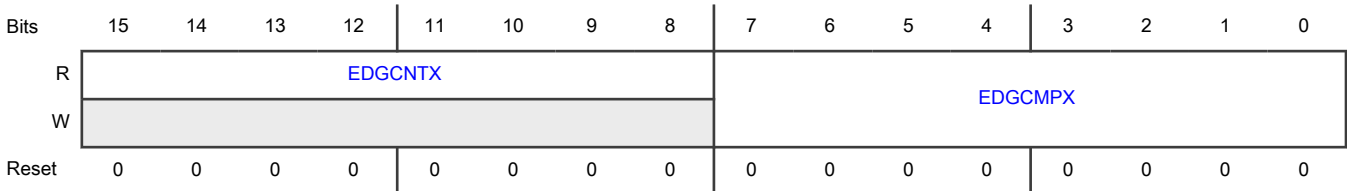

Fields

Field	Function
15-8 EDGCNTX	Edge Counter X This field contains the edge counter value for the PWM_X input capture circuitry.
7-0 EDGCMPLX	Edge Compare X This field is the compare value associated with the edge counter for the PWM_X input capture circuitry.

33.5.29 Capture Value 0 Register (SM1CVAL0)


Offset

Register	Offset
SM1CVAL0	A0h

Function

Writing this register generates bus transfer error.

Diagram

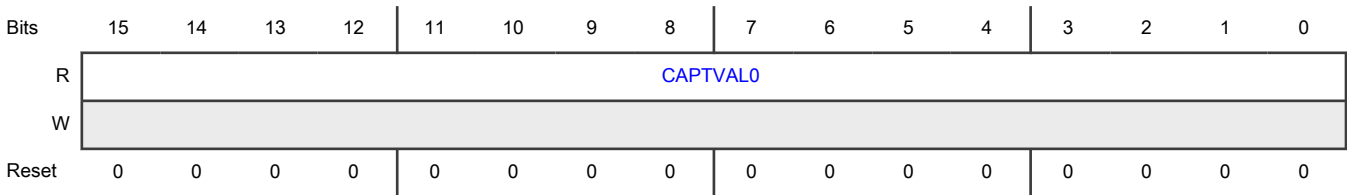

Fields

Field	Function
15-0 CAPTVAL0	Capture Value 0 This field stores the value captured from the submodule counter. Exactly when this capture occurs is defined by CAPTCTRLX[EDGX0]. Each capture increases the value of CAPTCTRLX[CX0CNT] by 1 until the maximum value is reached. Each read of this field decreases the value of CAPTCTRLX[CX0CNT] by 1 until 0 is reached. This field is not byte accessible.

33.5.30 Capture Value 0 Cycle Register (SM1CVAL0CYC)


Offset

Register	Offset
SM1CVAL0CYC	A2h

Function

Writing this register generates bus transfer error.

Diagram

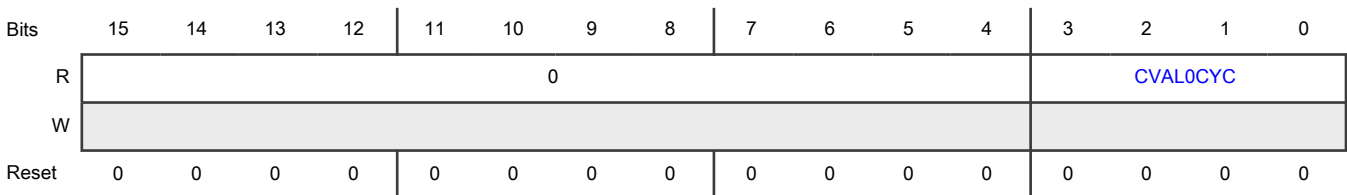

Fields

Field	Function
15-4 —	Reserved
3-0 CVAL0CYC	Capture Value 0 Cycle This field stores the cycle number corresponding to the value captured in CVAL0. This field is incremented each time the counter is loaded with the INIT value at the end of a PWM modulo cycle.

33.5.31 Capture Value 1 Register (SM1CVAL1)


Offset

Register	Offset
SM1CVAL1	A4h

Function

Writing this register generates bus transfer error.

Diagram

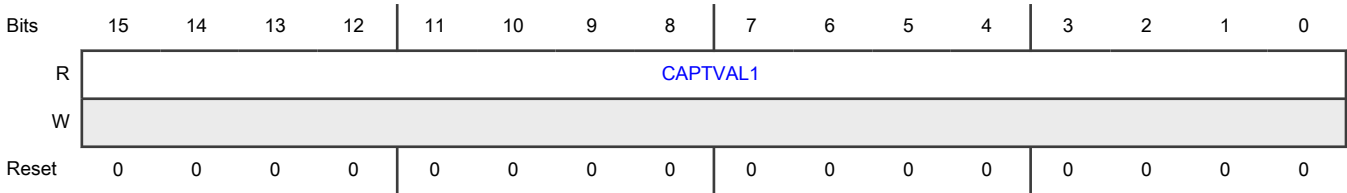

Fields

Field	Function
15-0 CAPTVAL1	Capture Value 1 This field stores the value captured from the submodule counter when this capture occurs is defined by CAPTCTRLX[EDGX1]. Each capture increases the value of CAPTCTRLX[CX1CNT] by 1 until the maximum value is reached. Each read of this field decreases the value of CAPTCTRLX[CX1CNT] by 1 until 0 is reached. This field is not byte accessible.


33.5.32 Capture Value 1 Cycle Register (SM1CVAL1CYC)

Offset

Register	Offset
SM1CVAL1CYC	A6h

Function

Writing this register generates bus transfer error.

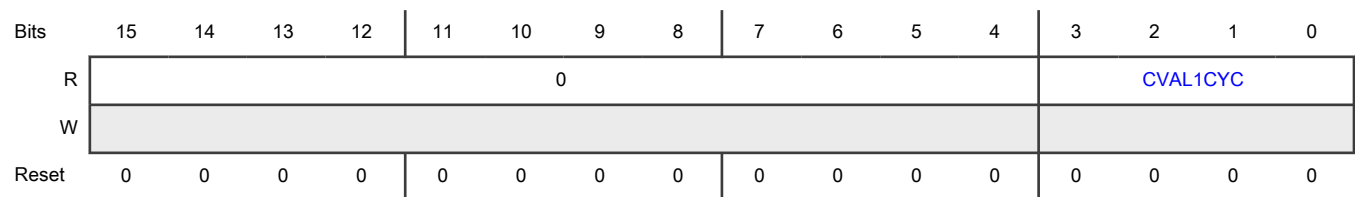Diagram**Fields**

Field	Function
15-4 —	Reserved
3-0 CVAL1CYC	Capture Value 1 Cycle This field stores the cycle number corresponding to the value captured in CVAL1. This field is incremented each time the counter is loaded with the INIT value at the end of a PWM modulo cycle. Resets to 0 at POR or hard reset.

33.5.33 Phase Delay Register (SM1PHASEDLY - SM3PHASEDLY)**Offset**

Register	Offset
SM1PHASEDLY	B8h
SM2PHASEDLY	118h
SM3PHASEDLY	178h


Function

The 16-bit unsigned value in this buffered register defines the delay from the master sync signal of submodule 0 to the time that this submodule recognizes the master sync in PWM clock periods. CTRL2[INIT_SEL] must be set to 10b to select the master sync signal as the source for initialization when using this register. Setting this register with a non-zero value and using the master sync signal as the initialization source, allows the output of this submodule to be a fixed number of cycles delayed from submodule 0. For PWM operation, the buffered contents of this register are updated at the start of every PWM cycle. This field is not byte accessible.

NOTE

The PHASEDLY register is buffered. The value written does not take effect until MCTRL[LDOK] is set and the next PWM load cycle begins or CTRL[LDMOD] is set. This register cannot be written when MCTRL[LDOK] is set. Reading PHASEDLY reads the value in a buffer and not necessarily the value that the PWM generator is currently using. Also, the value of this register should not be set to a value larger than the period defined in submodule 0.

Diagram

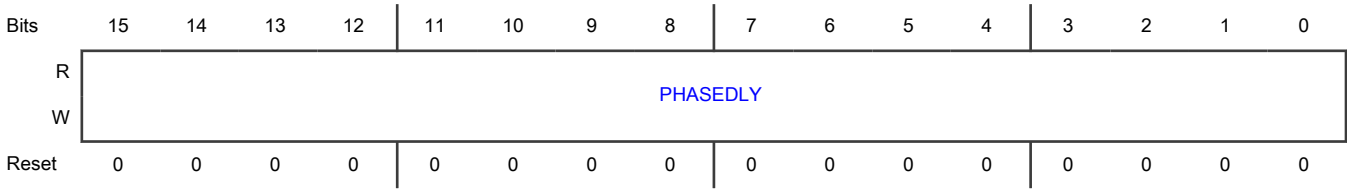

Fields

Field	Function
15-0 PHASEDLY	Initial Count Register Bits

33.5.34 Capture Control X Register (SM2CAPTCTRLX)


Offset

Register	Offset
SM2CAPTCTRLX	FCh

Function

Contains capture controls for mode X. This register is write-protected by MCTRL2[WRPROT] bits.

Diagram

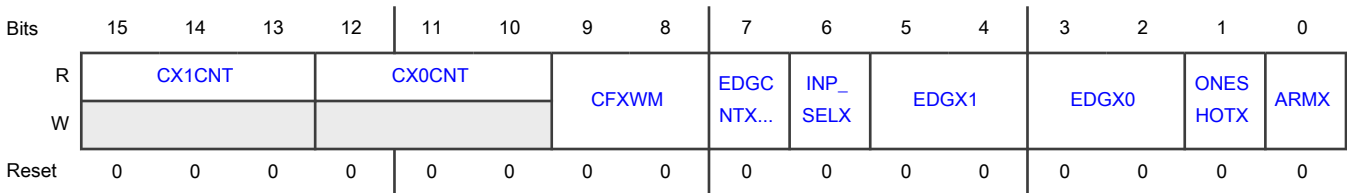

Fields

Field	Function
15-13 CX1CNT	Capture X1 FIFO Word Count This field reflects the number of words in the Capture X1 FIFO. (FIFO depth is 1.)
12-10 CX0CNT	Capture X0 FIFO Word Count This field reflects the number of words in the Capture X0 FIFO. (FIFO depth is 1.)
9-8 CFXWM	Capture X FIFOs Water Mark

Table continues on the next page...

Table continued from the previous page...

Field	Function
	This field represents the water mark level for capture X FIFOs. The capture flags, STS[CFX1] and STS[CFX0], will not be set until the word count of the corresponding FIFO is greater than this water mark level. (FIFO depth is 1.)
7 EDGCNTX_EN	Edge Counter X Enable This bit enables the edge counter which counts rising and falling edges on the PWM_X input signal. 0b - Edge counter disabled and held in reset 1b - Edge counter enabled
6 INP_SELX	Input Select X This bit selects between the raw PWM_X input signal and the output of the edge counter/compare circuitry as the source for the input capture circuit. 0b - Raw PWM_X input signal selected as source. 1b - Edge Counter. Output of edge counter/compare selected as source. When this bitfield is set to 1, the internal edge counter is enabled and the rising and/or falling edges specified by the CAPTCTRLX[EDGX0] and CAPTCTRLX[EDGX1] fields are ignored. The software must place a value other than 00 in either or both of the CAPTCTRLX[EDGX0] and/or CAPTCTRLX[EDGX1] fields to enable one or both of the capture registers.
5-4 EDGX1	Edge X 1 These bits control the input capture 1 circuitry by determining which input edges cause a capture event. 00b - Disabled 01b - Capture falling edges 10b - Capture rising edges 11b - Capture any edge
3-2 EDGX0	Edge X 0 These bits control the input capture 0 circuitry by determining which input edges cause a capture event. 00b - Disabled 01b - Capture falling edges 10b - Capture rising edges 11b - Capture any edge
1 ONESHOTX	One Shot Mode Aux This field selects between free running and one shot mode for the input capture circuitry. 0b - Free Running. Free running mode is selected if both capture circuits are enabled, then capture circuit 0 is armed first after the ARMX bit is set. Once a capture occurs, capture circuit 0 is disarmed, and capture circuit 1 is armed. After capture circuit 1 performs a capture, it is disarmed, and capture circuit 0 is re-armed. The process continues indefinitely. If only one of the capture circuits is enabled, then captures continue indefinitely on the enabled capture circuit.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	1b - One Shot. One shot mode is selected if both capture circuits are enabled, then capture circuit 0 is armed first after the ARMX bit is set. Once a capture occurs, capture circuit 0 is disarmed, and capture circuit 1 is armed. After capture circuit 1 performs a capture, it is disarmed, and the ARMX bit is cleared. No further captures are performed until the ARMX bit is set again. If only one of the capture circuits is enabled, then a single capture occurs on the enabled capture circuit and the ARMX bit is then cleared.
0 ARMX	Arm X Setting this bit high starts the input capture process. This bit can be cleared at any time to disable input capture operation. This bit is self-cleared when in one shot mode and one or more of the enabled capture circuits has had a capture event. 0b - Input capture operation is disabled. 1b - Input capture operation as specified by CAPTCTRLX[EDGXx] is enabled.

33.5.35 Capture Compare X Register (SM2CAPTCOMPX)


Offset

Register	Offset
SM2CAPTCOMPX	FEh

Function

Contains capture and control values for mode X. This register is write-protected by MCTRL2[WRPROT] bits.

Diagram

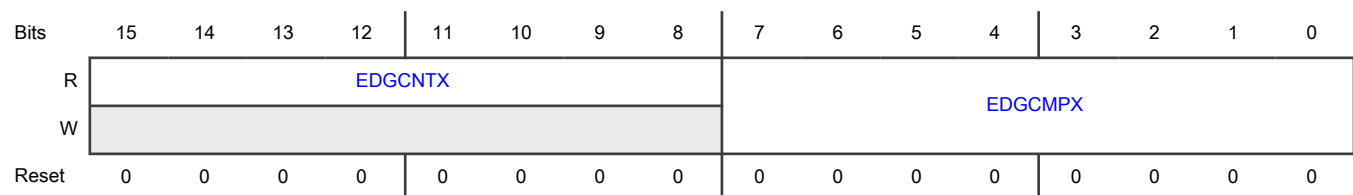

Fields

Field	Function
15-8 EDGCNTX	Edge Counter X This field contains the edge counter value for the PWM_X input capture circuitry.
7-0 EDGCMPLX	Edge Compare X This field is the compare value associated with the edge counter for the PWM_X input capture circuitry.

33.5.36 Capture Value 0 Register (SM2CVAL0)


Offset

Register	Offset
SM2CVAL0	100h

Function

Writing this register generates bus transfer error.

Diagram

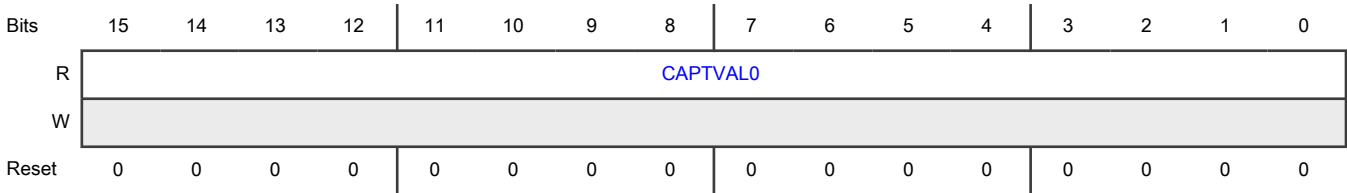

Fields

Field	Function
15-0 CAPTVAL0	Capture Value 0 This field stores the value captured from the submodule counter. Exactly when this capture occurs is defined by CAPTCTRLX[EDGX0]. Each capture increases the value of CAPTCTRLX[CX0CNT] by 1 until the maximum value is reached. Each read of this field decreases the value of CAPTCTRLX[CX0CNT] by 1 until 0 is reached. This field is not byte accessible.

33.5.37 Capture Value 0 Cycle Register (SM2CVAL0CYC)


Offset

Register	Offset
SM2CVAL0CYC	102h

Function

Writing this register generates bus transfer error.

Diagram

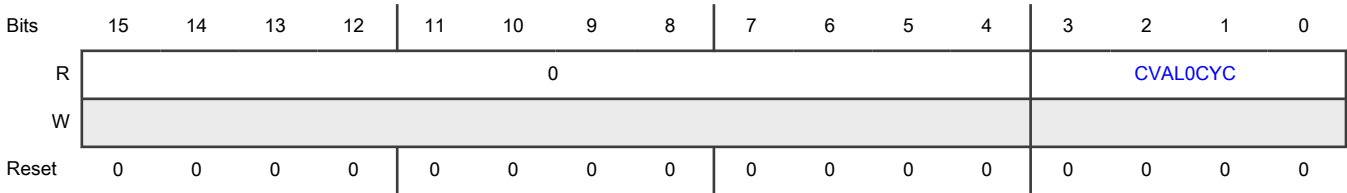

Fields

Field	Function
15-4 —	Reserved
3-0 CVAL0CYC	Capture Value 0 Cycle This field stores the cycle number corresponding to the value captured in CVAL0. This field is incremented each time the counter is loaded with the INIT value at the end of a PWM modulo cycle.

33.5.38 Capture Value 1 Register (SM2CVAL1)


Offset

Register	Offset
SM2CVAL1	104h

Function

Writing this register generates bus transfer error.

Diagram

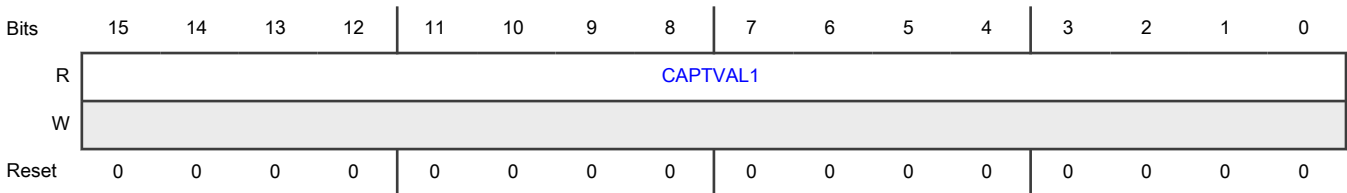

Fields

Field	Function
15-0 CAPTVAL1	Capture Value 1 This field stores the value captured from the submodule counter when this capture occurs is defined by CAPTCTRLX[EDGX1]. Each capture increases the value of CAPTCTRLX[CX1CNT] by 1 until the maximum value is reached. Each read of this field decreases the value of CAPTCTRLX[CX1CNT] by 1 until 0 is reached. This field is not byte accessible.

33.5.39 Capture Value 1 Cycle Register (SM2CVAL1CYC)

Offset

Register	Offset
SM2CVAL1CYC	106h

Function

Writing this register generates bus transfer error.

Diagram

Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0												CVAL1CYC			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
15-4 —	Reserved
3-0 CVAL1CYC	Capture Value 1 Cycle This field stores the cycle number corresponding to the value captured in CVAL1. This field is incremented each time the counter is loaded with the INIT value at the end of a PWM modulo cycle. Resets to 0 at POR or hard reset.


33.5.40 Capture Control X Register (SM3CAPTCTRLX)

Offset

Register	Offset
SM3CAPTCTRLX	15Ch

Function

Contains capture controls for mode X. This register is write-protected by MCTRL2[WRPROT] bits.

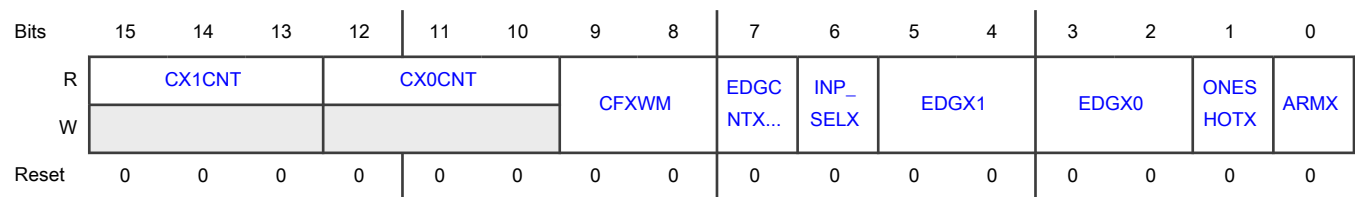Diagram**Fields**

Field	Function
15-13 CX1CNT	Capture X1 FIFO Word Count This field reflects the number of words in the Capture X1 FIFO. (FIFO depth is 1.)
12-10 CX0CNT	Capture X0 FIFO Word Count This field reflects the number of words in the Capture X0 FIFO. (FIFO depth is 1.)
9-8 CFXWM	Capture X FIFOs Water Mark This field represents the water mark level for capture X FIFOs. The capture flags, STS[CFX1] and STS[CFX0], will not be set until the word count of the corresponding FIFO is greater than this water mark level. (FIFO depth is 1.)
7 EDGCNTX_EN	Edge Counter X Enable This bit enables the edge counter which counts rising and falling edges on the PWM_X input signal. 0b - Edge counter disabled and held in reset 1b - Edge counter enabled
6 INP_SELX	Input Select X This bit selects between the raw PWM_X input signal and the output of the edge counter/compare circuitry as the source for the input capture circuit. 0b - Raw PWM_X input signal selected as source. 1b - Edge Counter. Output of edge counter/compare selected as source. When this bitfield is set to 1, the internal edge counter is enabled and the rising and/or falling edges specified by the CAPTCTRLX[EDGX0] and CAPTCTRLX[EDGX1] fields are ignored. The software must place a value other than 00 in either or both of the CAPTCTRLX[EDGX0] and/or CAPTCTRLX[EDGX1] fields to enable one or both of the capture registers.
5-4 EDGX1	Edge X 1 These bits control the input capture 1 circuitry by determining which input edges cause a capture event. 00b - Disabled 01b - Capture falling edges 10b - Capture rising edges 11b - Capture any edge
3-2	Edge X 0

Table continues on the next page...

Table continued from the previous page...

Field	Function
EDGX0	These bits control the input capture 0 circuitry by determining which input edges cause a capture event. 00b - Disabled 01b - Capture falling edges 10b - Capture rising edges 11b - Capture any edge
1 ONESHOTX	One Shot Mode Aux This field selects between free running and one shot mode for the input capture circuitry. 0b - Free Running. Free running mode is selected if both capture circuits are enabled, then capture circuit 0 is armed first after the ARMX bit is set. Once a capture occurs, capture circuit 0 is disarmed, and capture circuit 1 is armed. After capture circuit 1 performs a capture, it is disarmed, and capture circuit 0 is re-armed. The process continues indefinitely. If only one of the capture circuits is enabled, then captures continue indefinitely on the enabled capture circuit. 1b - One Shot. One shot mode is selected if both capture circuits are enabled, then capture circuit 0 is armed first after the ARMX bit is set. Once a capture occurs, capture circuit 0 is disarmed, and capture circuit 1 is armed. After capture circuit 1 performs a capture, it is disarmed, and the ARMX bit is cleared. No further captures are performed until the ARMX bit is set again. If only one of the capture circuits is enabled, then a single capture occurs on the enabled capture circuit and the ARMX bit is then cleared.
0 ARMX	Arm X Setting this bit high starts the input capture process. This bit can be cleared at any time to disable input capture operation. This bit is self-cleared when in one shot mode and one or more of the enabled capture circuits has had a capture event. 0b - Input capture operation is disabled. 1b - Input capture operation as specified by CAPTCTRLX[EDGXx] is enabled.

33.5.41 Capture Compare X Register (SM3CAPTCOMPX)


Offset

Register	Offset
SM3CAPTCOMPX	15Eh

Function

Contains capture and control values for mode X. This register is write-protected by MCTRL2[WRPROT] bits.

Diagram

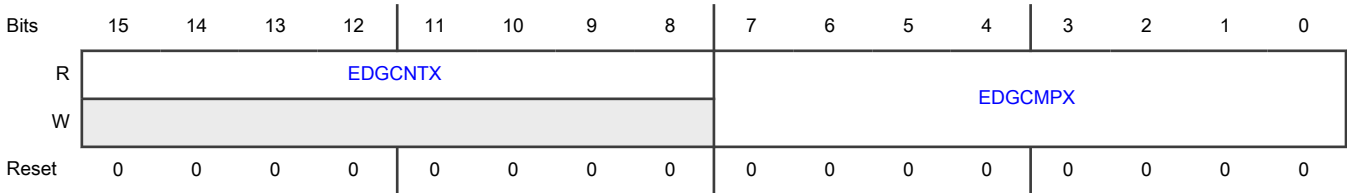

Fields

Field	Function
15-8 EDGCNTX	Edge Counter X This field contains the edge counter value for the PWM_X input capture circuitry.
7-0 EDGCMPLX	Edge Compare X This field is the compare value associated with the edge counter for the PWM_X input capture circuitry.

33.5.42 Capture Value 0 Register (SM3CVAL0)


Offset

Register	Offset
SM3CVAL0	160h

Function

Writing this register generates bus transfer error.

Diagram

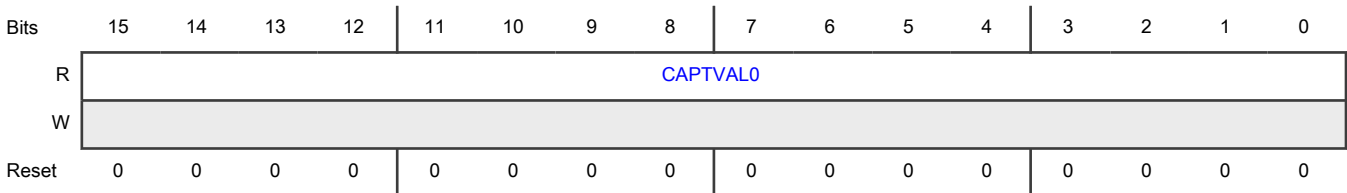

Fields

Field	Function
15-0 CAPTVAL0	Capture Value 0 This field stores the value captured from the submodule counter. Exactly when this capture occurs is defined by CAPTCTRLX[EDGX0]. Each capture increases the value of CAPTCTRLX[CX0CNT] by 1 until the maximum value is reached. Each read of this field decreases the value of CAPTCTRLX[CX0CNT] by 1 until 0 is reached. This field is not byte accessible.

33.5.43 Capture Value 0 Cycle Register (SM3CVAL0CYC)


Offset

Register	Offset
SM3CVAL0CYC	162h

Function

Writing this register generates bus transfer error.

Diagram

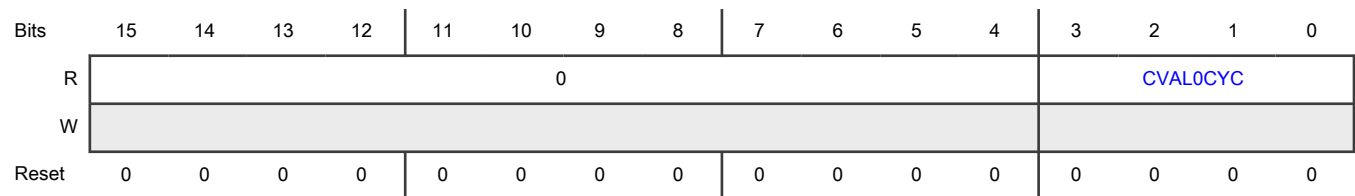

Fields

Field	Function
15-4 —	Reserved
3-0 CVAL0CYC	Capture Value 0 Cycle This field stores the cycle number corresponding to the value captured in CVAL0. This field is incremented each time the counter is loaded with the INIT value at the end of a PWM modulo cycle.

33.5.44 Capture Value 1 Register (SM3CVAL1)


Offset

Register	Offset
SM3CVAL1	164h

Function

Writing this register generates bus transfer error.

Diagram

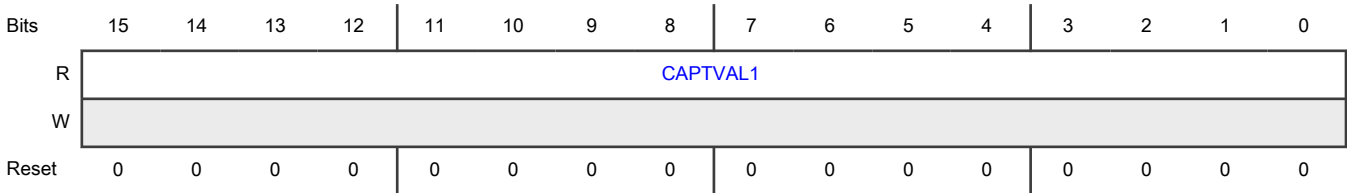

Fields

Field	Function
15-0 CAPTVAL1	Capture Value 1 This field stores the value captured from the submodule counter when this capture occurs is defined by CAPTCTRLX[EDGX1]. Each capture increases the value of CAPTCTRLX[CX1CNT] by 1 until the maximum value is reached. Each read of this field decreases the value of CAPTCTRLX[CX1CNT] by 1 until 0 is reached. This field is not byte accessible.

33.5.45 Capture Value 1 Cycle Register (SM3CVAL1CYC)


Offset

Register	Offset
SM3CVAL1CYC	166h

Function

Writing this register generates bus transfer error.

Diagram

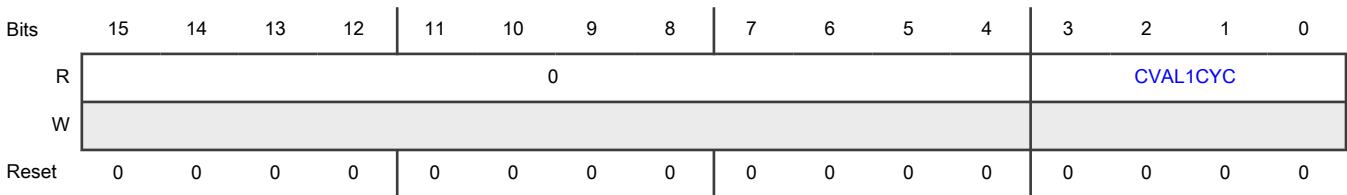

Fields

Field	Function
15-4 —	Reserved
3-0 CVAL1CYC	Capture Value 1 Cycle This field stores the cycle number corresponding to the value captured in CVAL1. This field is incremented each time the counter is loaded with the INIT value at the end of a PWM modulo cycle. Resets to 0 at POR or hard reset.

33.5.46 Output Enable Register (OUTEN)


Offset

Register	Offset
OUTEN	180h

Function

Contains PWM output enables. This register is write-protected by MCTRL2[WRPROT] bits.

Diagram

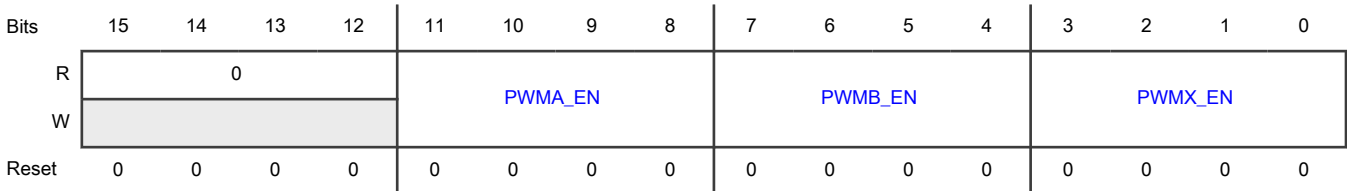

Fields

Field	Function
15-12 —	Reserved
11-8 PWMA_EN	PWM_A Output Enables This field enables the PWM_A outputs of submodules 3 - 0, respectively. Set these bits to 0 (output disabled) when a PWM_A pin is being used for input capture. • 0b0 PWM_A output disabled. • 0b1 PWM_A output enabled.
7-4 PWMB_EN	PWM_B Output Enables This field enables the PWM_B outputs of submodules 3 - 0, respectively. Set these bits to 0 (output disabled) when a PWM_B pin is being used for input capture. • 0b0 PWM_B output disabled. • 0b1 PWM_B output enabled.
3-0 PWMX_EN	PWM_X Output Enables This field enables the PWM_X outputs of submodules 3 - 0, respectively. Set these bits to 0 (output disabled) when a PWM_X pin is being used for input capture or deadtime correction. • 0b0 PWM_X output disabled. • 0b1 PWM_X output enabled.

33.5.47 Mask Register (MASK)

Offset

Register	Offset
MASK	182h

Function

MASK is double buffered and does not take effect until a FORCE_OUT event occurs within the appropriate submodule. Reading MASK reads the buffered values and not necessarily the values currently in effect. This double buffering can be overridden by setting the UPDATE_MASK bits.

Diagram

Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R					MASKA				MASKB				MASKX			
W	UPDATE_MASK															
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
15-12 UPDATE_MASK	Update Mask Bits Immediately This field masks or unmasks the PWM_X (X = A, B, or X) outputs of submodules 3 - 0 respectively by forcing the MASK* (* = A, B or X) bits to be immediately updated within submodules 3 - 0, respectively without waiting for a FORCE_OUT event. These self-clearing bits always read as zero. Software may write to any or all of these bits and may set these bits in the same write operation that updates the MASKA, MASKB, and MASKX fields of this register. 0b0 Normal operation. MASK* bits within the corresponding submodule are not updated until a FORCE_OUT event occurs within the submodule. 0b1 Immediate operation. MASK* bits within the corresponding submodule are updated on the following clock edge after setting this bit. For example: - UPDATE_MASK[3]=1 updates the mask bits MASKA[3], MASKB[3], and MASKX[3]. - UPDATE_MASK[3:0]=0101 updates the mask bits MASKA[2], MASKA[0], MASKB[2], MASKB[0], MASKX[2], and MASKX[0].
11-8 MASKA	PWM_A Masks This field masks the PWM_A outputs of submodules 3 - 0, respectively by forcing the output to logic 0 prior to consideration of the output polarity. 0b0 PWM_A output normal. 0b1 PWM_A output masked.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	MASKA[3:0] masks PWM_A_3 through PWM_A_0
7-4 MASKB	PWM_B Masks This field masks the PWM_B outputs of submodules 3 - 0, respectively by forcing the output to logic 0 prior to consideration of the output polarity. • 0b0 PWM_B output normal. • 0b1 PWM_B output masked. MASKB[3:0] masks PWM_B_3 through PWM_B_0
3-0 MASKX	PWM_X Masks This field masks the PWM_X outputs of submodules 3 - 0, respectively by forcing the output to logic 0 prior to consideration of the output polarity. • 0b0 PWM_X output normal. • 0b1 PWM_X output masked. MASKX[3:0] masks PWM_X_3 through PWM_X_0

33.5.48 Software Controlled Output Register (SWCOUT)

Offset

Register	Offset
SWCOUT	184h

Function

These bits are double buffered and do not take effect until a FORCE_OUT event occurs within the appropriate submodule. Reading these bits reads the buffered value and not necessarily the value currently in effect.

Diagram

Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0								SM3O	SM3O	SM2O	SM2O	SM1O	SM1O	SM0O	SM0O
W									UT23	UT45	UT23	UT45	UT23	UT45	UT23	UT45
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
15-8	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
—	
7 SM3OUT23	Submodule 3 Software Controlled Output 23 This field is used when DTSRCSEL[SM3SEL23] is set to 0b10. It allows software control of which signal is supplied to the deadtime generator of that submodule. 0b - A logic 0 is supplied to the deadtime generator of submodule 3 instead of PWM23. 1b - A logic 1 is supplied to the deadtime generator of submodule 3 instead of PWM23.
6 SM3OUT45	Submodule 3 Software Controlled Output 45 This field is used when DTSRCSEL[SM3SEL45] is set to b10. It allows software control of which signal is supplied to the deadtime generator of that submodule. 0b - A logic 0 is supplied to the deadtime generator of submodule 3 instead of PWM45. 1b - A logic 1 is supplied to the deadtime generator of submodule 3 instead of PWM45.
5 SM2OUT23	Submodule 2 Software Controlled Output 23 This field is used when DTSRCSEL[SM2SEL23] is set to b10. It allows software control of which signal is supplied to the deadtime generator of that submodule. 0b - A logic 0 is supplied to the deadtime generator of submodule 2 instead of PWM23. 1b - A logic 1 is supplied to the deadtime generator of submodule 2 instead of PWM23.
4 SM2OUT45	Submodule 2 Software Controlled Output 45 This field is used when DTSRCSEL[SM2SEL45] is set to b10. It allows software control of which signal is supplied to the deadtime generator of that submodule. 0b - A logic 0 is supplied to the deadtime generator of submodule 2 instead of PWM45. 1b - A logic 1 is supplied to the deadtime generator of submodule 2 instead of PWM45.
3 SM1OUT23	Submodule 1 Software Controlled Output 23 This field is used when DTSRCSEL[SM1SEL23] is set to b10. It allows software control of which signal is supplied to the deadtime generator of that submodule. 0b - A logic 0 is supplied to the deadtime generator of submodule 1 instead of PWM23. 1b - A logic 1 is supplied to the deadtime generator of submodule 1 instead of PWM23.
2 SM1OUT45	Submodule 1 Software Controlled Output 45 This field is used when DTSRCSEL[SM1SEL45] is set to b10. It allows software control of which signal is supplied to the deadtime generator of that submodule. 0b - A logic 0 is supplied to the deadtime generator of submodule 1 instead of PWM45. 1b - A logic 1 is supplied to the deadtime generator of submodule 1 instead of PWM45.
1 SM0OUT23	Submodule 0 Software Controlled Output 23

Table continues on the next page...

Table continued from the previous page...

Field	Function
	This field is used when DTSRCSEL[SM0SEL23] is set to b10. It allows software control of which signal is supplied to the deadtime generator of that submodule. 0b - A logic 0 is supplied to the deadtime generator of submodule 0 instead of PWM23. 1b - A logic 1 is supplied to the deadtime generator of submodule 0 instead of PWM23.
0 SM0OUT45	Submodule 0 Software Controlled Output 45 This field is used when DTSRCSEL[SM0SEL45] is set to b10. It allows software control of which signal is supplied to the deadtime generator of that submodule. 0b - A logic 0 is supplied to the deadtime generator of submodule 0 instead of PWM45. 1b - A logic 1 is supplied to the deadtime generator of submodule 0 instead of PWM45.

33.5.49 PWM Source Select Register (DTSRCSEL)

Offset

Register	Offset
DTSRCSEL	186h

Function

The PWM source select bits are double buffered and do not take effect until a FORCE_OUT event occurs within the appropriate submodule. Reading these bits reads the buffered value and not necessarily the value currently in effect. This register is write-protected by MCTRL2[WRPROT] bits.

Diagram

Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R																
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
15-14 SM3SEL23	Submodule 3 PWM23 Control Select This field selects possible overrides to the generated SM3PWM23 signal that passes to the deadtime logic upon the occurrence of a FORCE_OUT event in that submodule. 00b - Generated SM3PWM23 signal used by the deadtime logic. 01b - Inverted generated SM3PWM23 signal used by the deadtime logic.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	10b - SWCOUT[SM3OUT23] used by the deadtime logic. 11b - PWM3_EXT_A signal used by the deadtime logic.
13-12 SM3SEL45	Submodule 3 PWM45 Control Select This field selects possible overrides to the generated SM3PWM45 signal that passes to the deadtime logic upon the occurrence of a FORCE_OUT event in that submodule. 00b - Generated SM3PWM45 signal used by the deadtime logic. 01b - Inverted generated SM3PWM45 signal used by the deadtime logic. 10b - SWCOUT[SM3OUT45] used by the deadtime logic. 11b - Reserved
11-10 SM2SEL23	Submodule 2 PWM23 Control Select This field selects possible overrides to the generated SM2PWM23 signal that passes to the deadtime logic upon the occurrence of a FORCE_OUT event in that submodule. 00b - Generated SM2PWM23 signal used by the deadtime logic. 01b - Inverted generated SM2PWM23 signal used by the deadtime logic. 10b - SWCOUT[SM2OUT23] used by the deadtime logic. 11b - PWM2_EXT_A signal used by the deadtime logic.
9-8 SM2SEL45	Submodule 2 PWM45 Control Select This field selects possible overrides to the generated SM2PWM45 signal that passes to the deadtime logic upon the occurrence of a FORCE_OUT event in that submodule. 00b - Generated SM2PWM45 signal used by the deadtime logic. 01b - Inverted generated SM2PWM45 signal used by the deadtime logic. 10b - SWCOUT[SM2OUT45] used by the deadtime logic. 11b - Reserved
7-6 SM1SEL23	Submodule 1 PWM23 Control Select This field selects possible overrides to the generated SM1PWM23 signal that passes to the deadtime logic upon the occurrence of a FORCE_OUT event in that submodule. 00b - Generated SM1PWM23 signal used by the deadtime logic. 01b - Inverted generated SM1PWM23 signal used by the deadtime logic. 10b - SWCOUT[SM1OUT23] used by the deadtime logic. 11b - PWM1_EXT_A signal used by the deadtime logic.
5-4 SM1SEL45	Submodule 1 PWM45 Control Select This field selects possible overrides to the generated SM1PWM45 signal that passes to the deadtime logic upon the occurrence of a FORCE_OUT event in that submodule.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	00b - Generated SM1PWM45 signal used by the deadtime logic. 01b - Inverted generated SM1PWM45 signal used by the deadtime logic. 10b - SWCOUT[SM1OUT45] used by the deadtime logic. 11b - Reserved
3-2 SM0SEL23	Submodule 0 PWM23 Control Select This field selects possible overrides to the generated SM0PWM23 signal that passes to the deadtime logic upon the occurrence of a FORCE_OUT event in that submodule. 00b - Generated SM0PWM23 signal used by the deadtime logic. 01b - Inverted generated SM0PWM23 signal used by the deadtime logic. 10b - SWCOUT[SM0OUT23] used by the deadtime logic. 11b - PWM0_EXT_A signal used by the deadtime logic.
1-0 SM0SEL45	Submodule 0 PWM45 Control Select This field selects possible overrides to the generated SM0PWM45 signal that passes to the deadtime logic upon the occurrence of a FORCE_OUT event in that submodule. 00b - Generated SM0PWM45 signal used by the deadtime logic. 01b - Inverted generated SM0PWM45 signal used by the deadtime logic. 10b - SWCOUT[SM0OUT45] used by the deadtime logic. 11b - Reserved

33.5.50 Master Control Register (MCTRL)


Offset

Register	Offset
MCTRL	188h

Function

In every 4-bit field in this register, each bit acts on a separate submodule. Accordingly, the description of every bit field refers to the effect of an individual bit.

Diagram

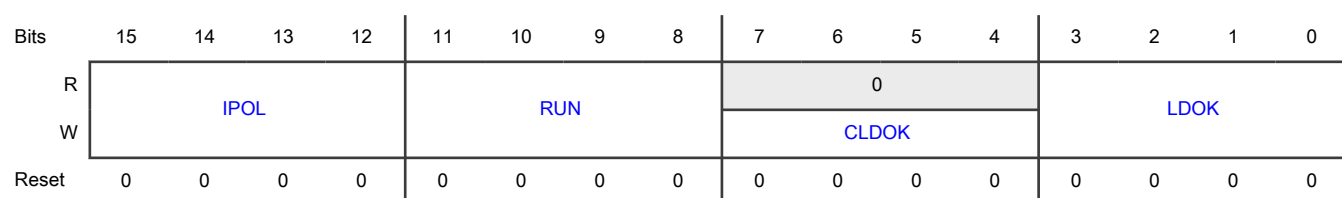

Fields

Field	Function
15-12 IPOL	Current Polarity This field corresponds to submodules 3 - 0, respectively. Each bit selects between PWM23 and PWM45 as the source for the generation of the complementary PWM pair output for the corresponding submodule. MCTRL[IPOL] is ignored in independent mode. MCTRL[IPOL] does not take effect until a FORCE_OUT event takes place in the appropriate submodule. Reading MCTRL[IPOL] reads the buffered value and not necessarily the value currently in effect. 0000b - PWM23 is used to generate complementary PWM pair in the corresponding submodule. 0001b - PWM45 is used to generate complementary PWM pair in the corresponding submodule.
11-8 RUN	Run This field enables the clocks to the PWM generator of submodules 3 - 0, respectively. The corresponding MCTRL[RUN] bit must be set for each submodule that is using its input capture functions or is using the local reload as its reload source. When this bit equals zero, the submodule counter is reset, and PWM outputs are held. A reset clears this field. 0000b - PWM counter is stopped, but PWM outputs hold the current state. 0001b - PWM counter is started in the corresponding submodule.
7-4 CLDOK	Clear Load Okay This field corresponds to submodules 3 - 0, respectively. Each write-only bit is used to clear the corresponding bit of MCTRL[LDOK]. Write a 1 to CLDOK to clear the corresponding MCTRL[LDOK] bit. If a reload occurs within a submodule with the corresponding MCTRL[LDOK] bit set at the same time that MCTRL[CLDOK] is written, then the reload in that submodule will not be performed and MCTRL[LDOK] will be cleared. CLDOK bit is self-clearing and always reads as a 0.
3-0 LDOK	Load Okay This field corresponds to submodules 3 - 0, respectively. Each read/set bit loads CTRL[PRSC] and the INIT, FRACVALx, and VALx registers of the corresponding submodule into a set of buffers. The buffered prescaler divisor, submodule counter modulus value, and PWM pulse width take effect at the next PWM reload if CTRL[LDMOD] is clear or if CTRL[LDMOD] is set. Set the corresponding MCTRL[LDOK] bit by reading it when it is logic zero and then writing a logic one to it. The VALx, FRACVALx, INIT, and CTRL[PRSC] registers of the corresponding submodule cannot be written while the corresponding MCTRL[LDOK] bit is set. In Master Reload Mode (CTRL2[RELOAD_SEL]=1), it is necessary to set the LDOK bit corresponding to submodule0; however, it is recommended to also set the LDOK bit of the slave submodules, to prevent unwanted writes to the registers in the slave submodules.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	The MCTRL[LDOK] bit is automatically cleared after the new values are loaded, or it can be manually cleared before a reload by writing a logic 1 to the appropriate MCTRL[CLDOK] bit. LDOK bits cannot be written with a zero. MCTRL[LDOK] can be set in DMA mode when the DMA indicates that it has completed the update of all CTRL[PRSC], INIT, FRACVALx, and VALx registers in the corresponding submodule. Reset clears LDOK field. 0000b - Do not load new values. 0001b - Load prescaler, modulus, and PWM values of the corresponding submodule.

33.5.51 Master Control 2 Register (MCTRL2)

Offset

Register	Offset
MCTRL2	18Ah

Function

Includes control for monitoring the PLL state and write protection of some configuration registers.

Diagram

Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0								STRETCH_CNT		0		WRPROT		Reserved	
W									_PRSC							
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
15-8 —	Reserved
7-6 STRETCH_CNT_PRSC	Stretch IPBus clock count prescaler for mux0_trig/mux1_trig/out0_trig/out1_trig/pwma_trig/pwmb_trig If user config eFlexPWM work in fast clk mode(use SoC level register, eFlexPWM input signal fast_clk_mode is high), then user can use these bits to stretch output signals mux0_trig/mux1_trig/out0_trig/out1_trig/pwma_trig/pwmb_trig. 00b - Stretch count is zero, no stretch. 01b - Stretch mux0_trig/mux1_trig/out0_trig/out1_trig/pwma_trig/pwmb_trig for 2 IPBus clock period.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	10b - Stretch mux0_trig/mux1_trig/out0_trig/out1_trig/pwma_trig/pwmb_trig for 4 IPBus clock period. 11b - Stretch mux0_trig/mux1_trig/out0_trig/out1_trig/pwma_trig/pwmb_trig for 8 IPBus clock period.
5-4 —	Reserved
3-2 WRPROT	Write protect Enable write protection of some configuration registers of eFlexPWM. 00b - Write protection off (default). 01b - Write protection on. 10b - Write protection off and locked until chip reset. 11b - Write protection on and locked until chip reset.
1-0 —	Reserved


33.5.52 Fault Control Register (FCTRL0)

Offset

Register	Offset
FCTRL0	18Ch

Function

For every 4-bit field in this register, the bits act on the fault inputs in order. For example, FLVL bits 15-12 act on faults 3-0, respectively. This register is write-protected by MCTRL2[WRPROT] bits.

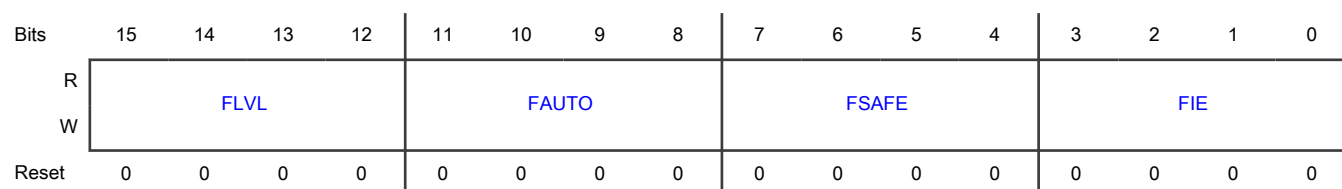Diagram**Fields**

Field	Function
15-12 FLVL	Fault Level This field selects the active logic level of the individual fault inputs 3-0, respectively. A reset clears this field. 0000b - A logic 0 on the fault input indicates a fault condition. 0001b - A logic 1 on the fault input indicates a fault condition.
11-8 FAUTO	Automatic Fault Clearing This field selects automatic or manual clearing of faults 3-0, respectively. A reset clears this field. 0000b - Manual fault clearing. PWM outputs disabled by this fault are not enabled until FSTS[FFLAGx] is clear at the start of a half cycle or full cycle depending on the states of FSTS[FHALF] and FSTS[FFULL]. If neither FFULL nor FHALF is set, then the fault condition cannot be cleared. This is further controlled by FCTRL[FSAFE]. 0001b - Automatic fault clearing. PWM outputs disabled by this fault are enabled when FSTS[FFPINx] is clear at the start of a half cycle or full cycle depending on the states of FSTS[FHALF] and FSTS[FFULL] without regard to the state of FSTS[FFLAGx]. If neither FFULL nor FHALF is set, then the fault condition cannot be cleared.
7-4 FSAFE	Fault Safety Mode This field selects the safety mode during manual fault clearing. A reset clears this field. FSTS[FFPINx] may indicate that a fault condition still exists even though the actual fault signal at the FAULTx pin is clear due to the fault filter latency. 0000b - Normal mode. PWM outputs disabled by this fault are not enabled until FSTS[FFLAGx] is clear at the start of a half cycle or full cycle depending on the states of FSTS[FHALF] and FSTS[FFULL] without regard to the state of FSTS[FFPINx]. If neither FHALF nor FFULL is set, then the fault condition cannot be cleared. The PWM outputs disabled by this fault input will not be re-enabled until the actual FAULTx input signal de-asserts since the fault input will combinationally disable the PWM outputs (as programmed in DISMAPn). 0001b - Safe mode. PWM outputs disabled by this fault are not enabled until FSTS[FFLAGx] is clear and FSTS[FFPINx] is clear at the start of a half cycle or full cycle depending on the states of FSTS[FHALF] and FSTS[FFULL]. If neither FHALF nor FFULL is set, then the fault condition cannot be cleared.
3-0 FIE	Fault Interrupt Enables This field enables CPU interrupt requests generated by the FAULTx pins. A reset clears this field.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	NOTE The fault protection circuit is independent of the FIEEx bit and is always active. If a fault is detected, the PWM outputs are disabled according to the disable mapping register. 0000b - FAULTx CPU interrupt requests disabled. 0001b - FAULTx CPU interrupt requests enabled.

33.5.53 Fault Status Register (FSTS0)

Offset

Register	Offset
FSTS0	18Eh

Function

Includes controls related to fault conditions.

Diagram

Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	FHALF				FFPIN				FFULL				FFLAG			
W																
Reset	0	0	0	0	u	u	u	u	0	0	0	0	u	u	u	u

Fields

Field	Function
15-12 FHALF	Half Cycle Fault Recovery This field is used to control the timing for re-enabling the PWM outputs after a fault condition. These bits apply to both automatic and manual clearing of a fault condition. These register bits are write-protected by MCTRL2[WRPROT] bits. NOTE Both FHALF and FFULL can be set so that the fault recovery occurs at the start of a full cycle and at the start of a half cycle (as defined by VAL0). If neither FHALF nor FFULL is set, then no fault recovery is possible. 0000b - PWM outputs are not re-enabled at the start of a half cycle. 0001b - PWM outputs are re-enabled at the start of a half cycle (as defined by VAL0).
11-8	Filtered Fault Pins

Table continues on the next page...

Table continued from the previous page...

Field	Function
FFPIN	These read-only bits reflect the current state of the filtered FAULTx pins converted to high polarity. A logic 1 indicates that a fault condition exists on the filtered FAULTx pin. A reset has no effect on this field. After the system reset de-asserts, these are the possible values of FFPIN: If FCTRL[FLVL] = 0 and FAULTx = 0, then FFPIN is set to 1. If FCTRL[FLVL] = 0 and FAULTx = 1, then FFPIN is kept as 0. If FCTRL[FLVL] = 1 and FAULTx = 0, then FFPIN is kept as 0. If FCTRL[FLVL] = 1 and FAULTx = 1, then FFPIN is set to 1.
7-4 FFULL	Full Cycle This field is used to control the timing for re-enabling the PWM outputs after a fault condition. These bits apply to both automatic and manual clearing of a fault condition. These register bits are write-protected by MCTRL2[WRPROT] bits. NOTE Both FHALF and FFULL can be set so that the fault recovery occurs at the start of a full cycle and at the start of a half cycle (as defined by VAL0). If neither FHALF nor FFULL is set, then no fault recovery is possible. 0000b - PWM outputs are not re-enabled at the start of a full cycle 0001b - PWM outputs are re-enabled at the start of a full cycle
3-0 FFLAG	Fault Flags These read-only flags are set within two CPU cycles after a transition to active on the FAULTx pin. Clear this bit by writing a logic one to it. A reset clears this field. While the reset value is 0, these bits may be set to 1 by the time they can be read depending on the state of the fault input signals. After the system reset de-asserts, these are the possible values of FFLAG: If FCTRL[FLVL] = 0 and FAULTx = 0, then FFLAG is set to 1. If FCTRL[FLVL] = 0 and FAULTx = 1, then FFLAG is kept as 0. If FCTRL[FLVL] = 1 and FAULTx = 0, then FFLAG is kept as 0. If FCTRL[FLVL] = 1 and FAULTx = 1, then FFLAG is set to 1. 0000b - No fault on the FAULTx pin. 0001b - Fault on the FAULTx pin.

33.5.54 Fault Filter Register (FFILT0)

Offset

Register	Offset
FFILT0	190h

Function

The settings in this register are shared among each of the fault input filters within the fault channel.

Input filter considerations include:


- Set the `FILT_PER` value such that the sampling period is larger than the period of the expected noise. This way a noise spike corrupts one sample. Select the `FILT_CNT` value to reduce and recognize the probability of noisy samples causing an incorrect transition. The probability of an incorrect transition is defined as the probability of an incorrect sample raised to the `FILT_CNT+3` power.
- The values of `FILT_PER` and `FILT_CNT` must be traded off against the desire for minimal latency in recognizing input transitions. Turning on the input filter (setting `FILT_PER` to a non-zero value) introduces a latency of $((FILT\_CNT+4) \times FILT\_PER \times IPBus \text{ clock period})$.

NOTE

When the filter is enabled, there is a combinational path to disable the PWM outputs to ensure rapid response to fault conditions, and fault response if the eFlexPWM module loses its clock. The latency induced by the filter will be seen in the time to set `FSTS[FFLAG]` and `FSTS[FFPIN]`.

This register is write-protected by `MCTRL2[WRPROT]` bits.

Diagram

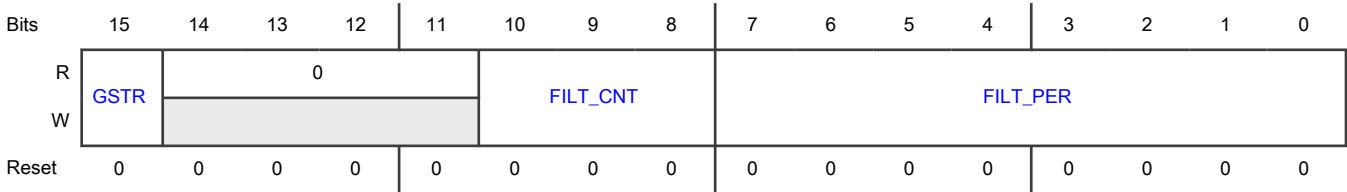

Fields

Field	Function
15 GSTR	Fault Glitch Stretch Enable This field is used to enable the fault glitch-stretching logic. This logic ensures that narrow fault glitches are stretched to be at least 2 IPBus clock cycles wide. In some cases, a narrow fault input can cause problems due to the short PWM output shutdown/re-activation time. The stretching logic ensures that a glitch on the fault input, when the fault filter is disabled, will be registered in the fault flags. 0b - Fault input glitch stretching is disabled. 1b - Input fault signals are stretched to at least 2 IPBus clock cycles.
14-11 —	Reserved
10-8 FILT_CNT	Fault Filter Count These bits represent the number of consecutive samples that must agree prior to the input filter accepting an input transition. The number of samples is the decimal value of this field plus three: the bit field value of 0-7 represents 3-10 samples, respectively. The value of <code>FILT_CNT</code> affects the input latency.
7-0 FILT_PER	Fault Filter Period This 8-bit field applies universally to all fault inputs.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	These bits represent the sampling period (in IPBus clock cycles) of the fault pin input filter. Each input is sampled multiple times at the rate specified by this field. If FILT_PER is 0x00 (default), then the input filter is bypassed. The value of FILT_PER affects the input latency. NOTE When changing values for FILT_PER from one non-zero value to another non-zero value, first write a value of zero to clear the filter.

33.5.55 Fault Test Register (FTST0)


Offset

Register	Offset
FTST0	192h

Function

Contains FTEST field for fault simulation.

Diagram

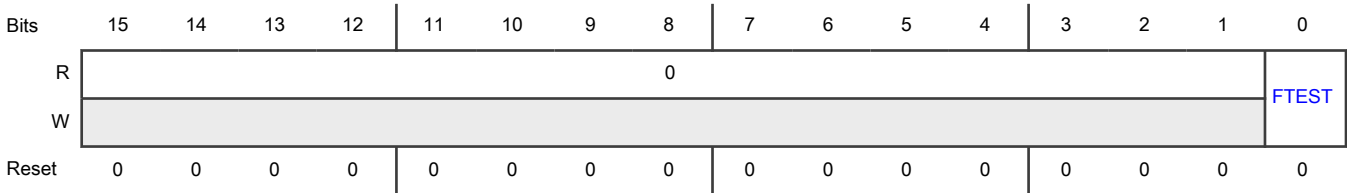

Fields

Field	Function
15-1 —	Reserved
0 FTEST	Fault Test This field is used to simulate a fault condition. Setting this bit causes a simulated fault to be sent into all of the fault filters. The condition propagates to the fault flags and possibly the PWM outputs depending on the DISMAPn settings. Clearing this bit removes the simulated fault condition. This register bit is write-protected by MCTRL2[WRPROT] bits. 0b - No fault 1b - Cause a simulated fault

33.5.56 Fault Control 2 Register (FCTRL20)


Offset

Register	Offset
FCTRL20	194h

Function

Controls combinational link from fault inputs to PWM outputs. This register is write-protected by MCTRL2[WRPROT] bits.

Diagram

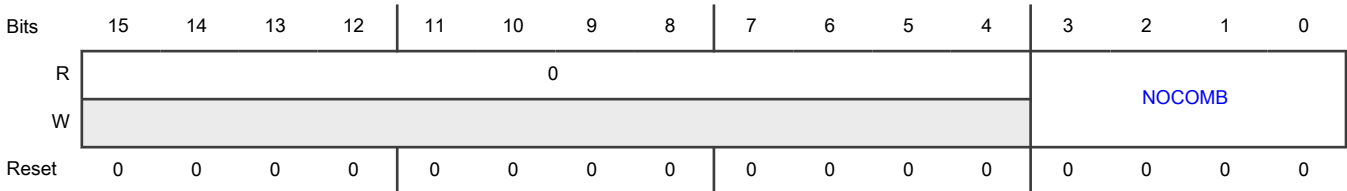

Fields

Field	Function
15-4 —	Reserved
3-0 NOCOMB	No Combinational Path From Fault Input To PWM Output This field is used to control the combinational path from the fault inputs to the PWM outputs. When these bits are low (default), the corresponding fault inputs have a combinational path to the PWM outputs that are sensitive to these fault inputs (as defined by DISMAP0). This combinational path is a safety feature that ensures the output is disabled even if the SOC has a failure of its clocking system. The combinational path also means that a pulse on the fault input can cause a brief disable of the PWM output even if the fault pulse is not wide enough to get through the input filter and be latched in the fault logic. Setting these bits removes the combinational path and uses the filtered and latched fault signals as the fault source to disable the PWM outputs. This eliminates fault glitches from creating PWM output glitches but also increases the latency to respond to a real fault. 0000b - There is a combinational link from the fault inputs to the PWM outputs. The fault inputs are combined with the filtered and latched fault signals to disable the PWM outputs. 0001b - The direct combinational path from the fault inputs to the PWM outputs is disabled and the filtered and latched fault signals are used to disable the PWM outputs.

Chapter 34

Quadrature Decoder (eQDC)

34.1 Chip-specific eQDC information

Table 201. Reference links to related information

Topic	Related module	Reference
Full description	QDC	QDC
System memory map		Memory map
Clocking		Clock distribution
Power Management		Power Management
Signal multiplexing	Port control	Signal multiplexing
Peripheral Input Mux	INPUTMUX	Peripheral Input multiplexing

34.1.1 Module instances

This device has two instances of the eQDC module: eQDC0, eQDC1.

34.1.2 Peripheral interconnections

This module provides interfacing capability to position/speed sensors used in industrial motor control applications. It has five input signals: PHASEA, PHASEB, INDEX, TRIGGER, and HOME. This module is used to decode shaft position, revolution count and speed.

See the attached Peripheral Mux Assignments spreadsheet for details.

34.2 Overview

eQDC does the following:

- Interfaces to position or speed sensors that are used in industrial motor control applications.
- Decodes shaft position, revolution count, and speed.

eQDC receives the following 8 input signals from position or speed sensors:

- PHASEA
- PHASEB
- INDEX/PRESET
- TRIGGER
- HOME/ENABLE
- ICAP[3:1]

eQDC outputs the following 11 signals for system use:

- POS_MATCH[3:0]
- COMP_FLG[3:0]
- DIR
- CNT_DN


- CNT_UP

NOTE

For eQDC, "asserted" indicates an output of 1 and "de-asserted" indicates an output of 0.

34.2.1 Block diagram

This is the block diagram of eQDC.

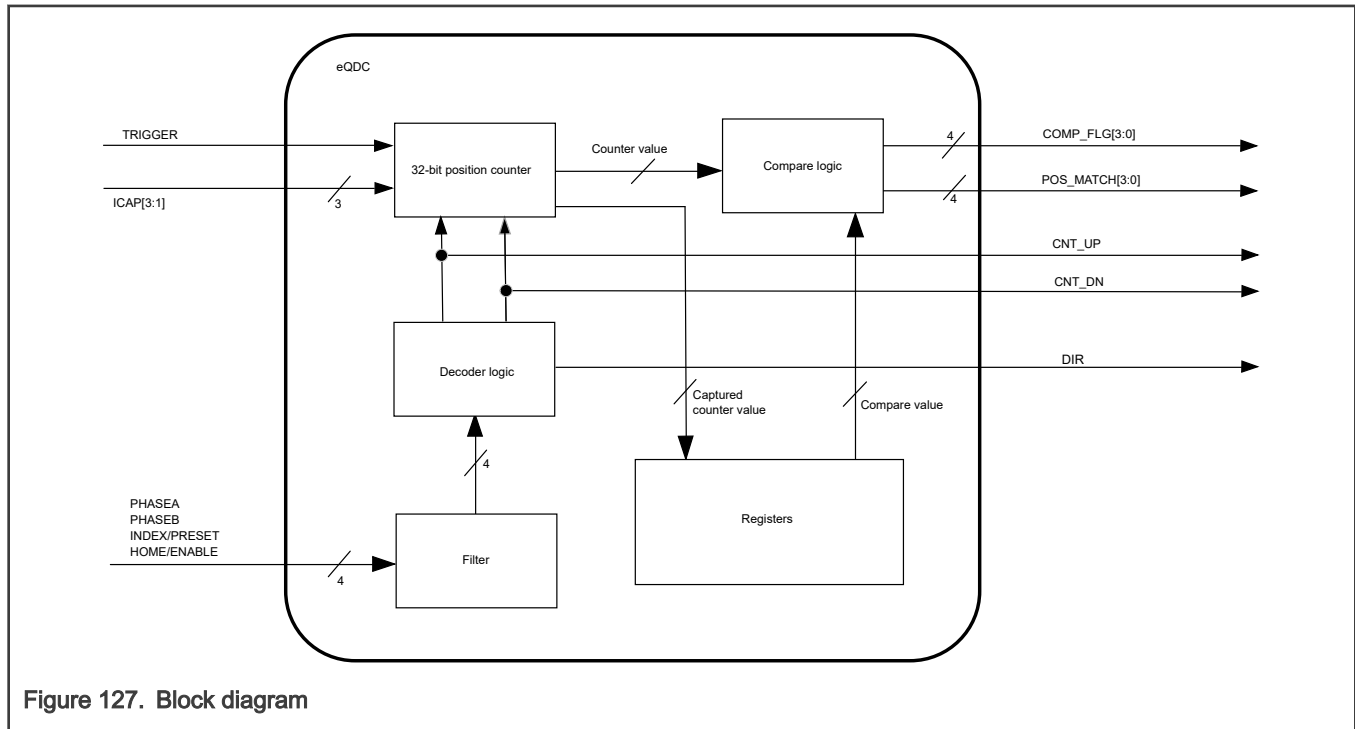

34.2.2 Features

- Logic to decode quadrature signals
- Configurable digital filters for inputs (these filters can be bypassed)
- 32-bit position counter capable of modulo counting
- Position counter that can be initialized by software or external events
- 16-bit position difference register
- Compare function that can indicate when shaft has reached a defined position
- A watchdog timer that can detect a non-rotating shaft condition
- Preloadable 16-bit revolution counter
- Maximum count frequency equals the peripheral clock rate
- Configurable interrupt when both PHASEA and PHASEB inputs change in the same cycle

34.3 Functional description

The following timing diagram shows the basic operation of an incremental position quadrature decoder.

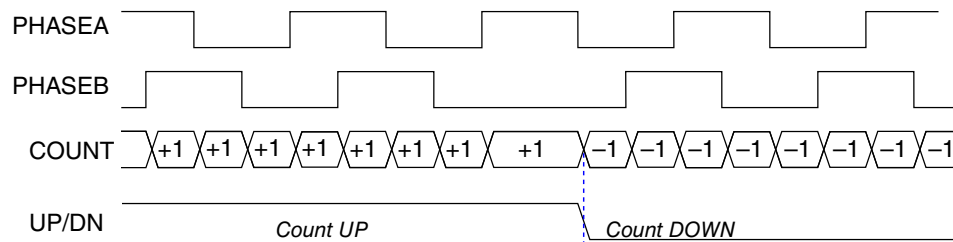


Figure 128. Quadrature decoder signals

34.3.1 Positive versus negative direction

A typical quadrature encoder has 3 outputs: PHASEA signal, PHASEB signal, INDEX pulse (not shown).

- If PHASEA leads PHASEB, then motion is in the positive direction.
- If PHASEA trails PHASEB, then motion is in the negative direction.

Transitions on these phases can be integrated to yield position or differentiated to yield velocity. The quadrature decoder is designed to perform these functions in hardware.

34.3.2 Speed measurement

For applications with a fast-moving shaft encoder, the speed can be measured using either of the following methods:

- calculating the change in the position counter per unit time
- reading the position difference counter register

For applications with low motor speeds and low-line count quadrature encoders, the timer module enables high-resolution speed measurement by calculating the time intervals between quadrature phases.

- The timer module uses a 16-bit free running counter operated from a prescaled version of the peripheral clock.
- The prescaler `FILT[PRSC]` divides the peripheral clock by values ranging from 1 to 32768. A 100 MHz peripheral clock frequency would yield a resolution of from 10 ns to 327.68 μ s and a maximum count period of from 0.65535 ms to 21474.5 ms. For example, with a 1000-tooth decoder, speeds could be calculated down to 0.0007 rpm using a prescaler.

34.3.3 Glitch filter

Because the quadrature decoder logic must sense signal transitions, the signal inputs are first run through a glitch filter. This glitch filter has a digital delay line, which samples multiple time points on the signal and verifies a stable new signal state before outputting this new signal state to the internal quadrature decoder logic. To adapt to a variety of signal bandwidths, the sample rate of this delay line is programmable.

34.3.4 Edge detect state machine

The Edge detect state machine looks for changes in the 4 possible states of the filtered PHASEA and PHASEB input signals. Direction of motion is calculated using these changes. Direction of motion is formatted as `Count_Up` and `Count_Down` signals. These signals are routed into up to 3 up/down counters:

- Position counter
- Revolution counter
- Position difference counter

34.3.5 Counter registers, and hold registers and how to initialize

When any of the counter registers is read, the contents of this counter register is written to the corresponding hold register. Taking a snapshot of the counters' values allows a consistent view of a system's position and the speed to be attained. If CTRL2[PMEN] is set, the position difference hold register is only updated when the position difference counter register is read. To capture a time stamp of when these registers are read, use the POS_MATCH output with a timer channel.

34.3.5.1 Position counter (POS)

POS counts up (upper position counter, UPOS) or down (lower position counter, LPOS) on every count pulse generated by the position difference of PHASEA and PHASEB input signals. POS acts as an integration_info, whose count value is proportional to position. De-assertion of ENABLE pin stops the operation of POS. POS is initialized when any of the following conditions is met:

- If CTRL2[INITPOS] is set, a positive edge of TRIGGER input occurs.
- A write to CTRL[SWIP]
- If CTRL2[OPMODE] is cleared and CTRL[XIP] is set to 1, INDEX signal transition occurs
- If CTRL2[OPMODE] is cleared and CTRL[HIP] is set to 1, HOME signal transition occurs
- If CTRL2[OPMODE] is set, a positive edge of PRESET signal occurs.
- Position counter roll-over and roll-under

POS can be initialized to initial register if CTRL[REV]=0 and initialized to modulus register if CTRL[REV]=1, but if CTRL2[EMIP]=1 and INDEX signal transition initiates POS, POS is initialized under the circumstances listed in the following table:

	CTRL[XNE] = 0	CTRL[XNE] = 1	CTRL[REV] = 0	CTRL[REV] = 1
PHASEA leads PHASEB (Clockwise)	positive edge of INDEX resets POS	negative edge of INDEX resets POS	POS is reset to initial value	POS is reset to modulus value
PHASEA lags PHASEB (Counterclockwise)	negative edge of INDEX resets POS	positive edge of INDEX resets POS	POS is reset to modulus value	POS is reset to initial value

The INDEX and HOME signals can be programmed to interrupt the processor. When UPOS or LPOS is read, a snapshot of each of the following counter registers is placed into the corresponding hold register:

- position counter register
- If CTRL2[PMEN] is cleared, position difference counter register
- revolution counter register

34.3.5.2 Position counter hold (POSH)

POSH stores a copy of POS when POS is read.

When POS is initialized by any event, the contents of POS are also copied into POSH. Meanwhile, count direction flag IOMR[DIR] is copied into count direction flag hold IOMR[DIRH]. When CTRL2[UPDHLD] is set to 1, the rising edge of TRIGGER input takes a snapshot of POS and stores it in UPOSH or LPOSH.

Beside taking snapshot of POS counter by positive transient of TRIGGER input, 3 more signals are added to take snapshot of POS counter:

- Positive transition of ICAP[3] input can take snapshot of POS counter into UPOSH3/LPOSH3
- Positive transition of ICAP[2] input can take snapshot of POS counter into UPOSH2/LPOSH2
- Positive transition of ICAP[1] input can take snapshot of POS counter into UPOSH1/LPOSH1

Note: This is used for an error checking mechanism to check of the position counter accumulated the correct number of counts between the same event. As example, the 1024-line incremental encoder must count 4096 counts when moving in the same direction between the index.

34.3.5.3 Position difference counter (POSD)

POSD contains the position difference value occurring between each read of the position register. The position register counts up or down on every count pulse. The position difference counter acts as a differentiator, whose count value is proportional to the change in position since the last time the position counter was read.

POSD is cleared when any of the following conditions is met:

- If CTRL2[PMEN] is cleared, when POS, POSD, or REV register is read, POSD is cleared and its contents are copied into POSDH.
- If CTRL2[PMEN] is cleared, positive edge of TRIGGER input occurs when CTRL2[UPDPOS] is set
- If CTRL2[PMEN] is set, when POSD is read.
- If CTRL2[PMEN] is set, positive edge of TRIGGER input occurs when CTRL2[UPDHLD] is set.

34.3.5.4 Position difference counter hold (POSDH)

POSDH takes and stores a snapshot of POSD. The snapshot is taken when any of the following conditions is met:

- If CTRL2[PMEN] is cleared, when POS, POSD, or REV register is read.
- When POSD is read (no matter CTRL2[PMEN] is clear or set).
- If CTRL2[UPDHLD] is set, a positive edge of the TRIGGER input occurs (no matter CTRL2[PMEN] is cleared or set).

34.3.5.5 Revolution counter (REV)

REV counts or integrates revolutions by counting index pulses. The direction of the count is determined by PHASEA and PHASEB input signals. A different count direction on the rising and falling edges of the index pulse indicates that eQDC changed direction on the index pulse. If CTRL2[OPMODE] is set, de-assertion of ENABLE input signal stops the operation of REV and PRESET signal transition initializes revolution counter to zero.

34.3.5.6 Revolution counter hold (REXH)

REXH takes a snapshot of REV when either of the following conditions is met:

- When POS, POSD, or REV register is read.
- If CTRL2[UPDHLD] is set, when a positive edge of the TRIGGER input signal occurs.

34.3.5.7 Watchdog timer (WDG)

WDG ensures that the algorithm is indicating motion in the shaft; 2 successive counts indicate proper operation and resets the timer. If CTRL2[OPMODE] is set, PRESET signal transition initializes WDG r to zero, and de-assertion of ENABLE input stops the operation of the WDG.

- The timeout value is programmable.
- When a timeout occurs, an interrupt to the processor can be generated.

34.3.5.8 Last edge time counter (LASTEDGE)

LASTEDGE contains the time since the last edge on PHASEA or PHASEB. The last edge time counter counts up on every prescaled clock pulse.

When POSD is read, contents in LASTEDGE are copied into LASTEDGEH.

34.3.5.9 Position difference period counter (POSDPER)

POSDPER contains the accumulated time from the last time the position difference counter was read. It counts up on every prescaled clock pulse and is loaded from the last edge time counter when POSD is read.

34.3.6 Double-set registers loading operation

The following registers are double-set (namely outer or inner-set), which enables them to be re-configured when eQDC is operating:

- Compare registers (UCOMP0/LCOMP0,UCOMP1/LCOMP1,UCOMP2/LCOMP2,UCOMP3/LCOMP3)
- Initial registers (UINIT/LINIT)
- Modulus registers (UMOD/LMOD)

After a value is written to one of these registers, the value is "buffered" into outer-set registers temporarily. Values will be loaded into inner-set registers and take effect using the following two methods:

- If CTRL2[LDMODE] is set to 1, "buffered" values are loaded into inner-set and take effect at the next roll-over or roll-under if CTRL[LDOK] is set.
- If CTRL2[LDMODE] is set to 0, "buffered" values are loaded into inner-set and take effect immediately when CTRL[LDOK] is set.

The double-set registers can be configured manually or automatically.

To configure the double-set registers manually:

1. Initialize the double-set registers:
 - a. Set CTRL2[LDMODE] to 0.
 - b. Clear CTRL[LDOK] if it is not 0.
 - c. Write values into double-set registers, so the values are "buffered" into outer-set registers.
 - d. Set CTRL[LDOK] to 1.
 - e. Wait for CTRL[LDOK] to become 0, which means the values have been loaded into inner-set registers.
 - f. Change CTRL2[LDMODE] value as desired.
2. Update the double-set registers:
 - a. Clear CTRL[LDOK] if it is not 0.
 - b. Write values into double-set registers, so the values are "buffered" into outer-set registers.
 - c. Set CTRL[LDOK] to 1. When the values are loaded into inner-set registers, CTRL[LDOK] is cleared automatically.
 - d. Go back to step a for iteration.

To configure the double-set registers automatically:

1. Initialize the double-set registers:
 - a. Set CTRL2[LDMODE] to 0.
 - b. Clear CTRL[LDOK] if it is not 0.
 - c. Write values into double-set registers, so the values are "buffered" into outer-set registers.
 - d. Set CTRL[LDOK] to 1.
 - e. Wait for CTRL[LDOK] to become 0, which means the values have been loaded into inner-set registers.
 - f. Set CTRL2[LDMODE] to 1.
 - g. Set CTRL[DMAEN] to 1 to enable DMA function.
 - h. Set CTRL[LDOK] to 1. This step is to ensure the DMA automatic operation occurs properly. DMA is triggered by loading values from outer-set to inner-set.
2. After initialization, the DMA is triggered in the following manner:
 - a. Values are loaded into inner-set registers when the counter rolls over or rolls under, then CTRL[LDOK] is cleared automatically and a DMA request is sent out for next outer-set registers value update.

- b. After DMA updates the outer-set registers, CTRL[LDOK] is set to 1 automatically. It then goes back to step a for iteration.

34.3.7 Modes of operation

eQDC operates in the following modes:

- Quadrature Decode Operation mode (CTRL[PH1] = 0, CTRL2[OPMODE] = 0)
- Quadrature Count Operation mode (CTRL[PH1] = 0, CTRL2[OPMODE] = 1)
- Single Phase Decode Operation mode (CTRL[PH1] = 1, CTRL2[OPMODE] = 0)
- Single Phase Count Operation mode (CTRL[PH1] = 1, CTRL2[OPMODE] = 1)

These operation modes support the following applications:

- Pulse accumulator
- Frequency Meter
- Period Meter
- PulseTrain Output with optional Quadrature and Direction

34.3.7.1 Quadrature decode (QDC) operation mode (CTRL[PH1] = 0, CTRL2[OPMODE] = 0)

In this mode, PHASEA and PHASEB input signals from speed or position sensors are decoded by the following signals in eQDC:

1. PHASEA/PHASEB: Two 90 degree out of phase pulse trains.
2. INDEX: Can be configured to cause a change of state on REV, and initialize POS.
3. HOME: Can be configured to initialize POS.
4. TRIGGER: Can be configured to take a snapshot of POS, POSD, and REV and to reinitialize POS.
5. ICAP[3:1]: Takes a snapshot of POS.

eQDC outputs the following signals for system use:

- POS_MATCH[3:0]: Position match:

Records the time at which the position of the shaft matches a user-defined value of the compare register or the time at which the position information is read:

- If CTRL2[OUTCTL] is cleared, POS_MATCH[x](x range is 0-3) is asserted when the value of POS equals the value of the corresponding compare register (UCOMPx/LCOMPx), and de-asserted when the value of POS does not equal the value of the corresponding compare register (UCOMPx/LCOMPx).
- If CTRL2[OUTCTL] is set, POS_MATCH[x](x range is 0-3) is asserted a pulse with 1 peripheral clock cycle width when UPOS or LPOS, REV, or POSD is read.

- COMP_FLG[3:0]: Position Counter Compare Output:

- COMP_FLG[x](x range is 0-3) is asserted when the value of Position Counter is equal to or greater than the value of the corresponding compare register (UCOMPx/LCOMPx).
- COMP_FLG[x](x range is 0-3) is de-asserted when the value of Position Counter is smaller than the value of the corresponding compare register (UCOMPx/LCOMPx).

- DIR: Direction of position counting:

- Direction is up when DIR is asserted
- Direction is down when DIR is de-asserted.

- CNT_UP: Position counter count up: when eQDC decodes a count-up event, CNT_UP outputs a pulse which width is 1 peripheral clock cycle.

- CNT_DN: Position counter count down: when eQDC decodes a count-down event, CNT_DN outputs a pulse which width is 1 peripheral clock cycle.

There are three count modes(if CTRL[REV]=0,it is normal operation; if CTRL[REV]=1,it is reverse operation):

- Mode 0[CM0](CTRL2[CMODE]=00): [Normal Quadrature X4 / Reverse Quadrature X4](#)
- Mode 1[CM1](CTRL2[CMODE]=01): [Normal Quadrature X2 / Reverse Quadrature X2](#)
- Mode 2[CM2](CTRL2[CMODE]=10): [Normal Quadrature X1 / Reverse Quadrature X1](#)

34.3.7.2 Quadrature count (QCT) operation mode (CTRL[PH1] = 0, CTRL2[OPMODE] = 1)

In this mode, PHASEA and PHASEB input signals from speed or position sensors are counted by the following signals in eQDC:

- PHASEA/PHASEB: Two 90 degree out of phase pulse trains.
- PRESET: Initializes POS and resets POSD:
 - If CTRL[REV]=0, a positive edge of PRESET initializes POS to INIT value (UNIT/LINIT).
 - If CTRL[REV]=1, a positive edge of PRESET initializes POS to modulus value (UMOD/LMOD).
- ENABLE: All counters start counting when ENABLE is asserted; all counters stop counting when ENABLE is de-asserted.
- TRIGGER: Can be configured to take a snapshot of POS, POSD, and REV and to reinitialize POS.
- ICAP[3:1]: Takes a snapshot of POS.

eQDC outputs the following signals for system use:

- POS_MATCH[3:0]: position match:

Records the time at which the position of the shaft matches a user-defined value of the compare register or the time at which the position information is read:

- If CTRL2[OUTCTL] is cleared, POS_MATCH[x](x range is 0-3) is asserted when the value of POS equals the value of the corresponding compare register (UCOMPx/LCOMPx), and de-asserted when the value of POS does not equal the value of the corresponding compare register (UCOMPx/LCOMPx).
- If CTRL2[OUTCTL] is set, POS_MATCH[x](x range is 0-3) is asserted a pulse with 1 peripheral clock cycle width when UPOS or LPOS, REV, or POSD is read.
- COMP_FLG[3:0]: Position Counter Compare Output:
 - COMP_FLG[x](x range is 0-3) is asserted when the value of POS is equal to or greater than the value of the corresponding compare register (UCOMPx/LCOMPx).
 - COMP_FLG[x](x range is 0-3) is de-asserted when the value of POS is smaller than the value of the corresponding compare register (UCOMPx/LCOMPx).
- DIR: Direction of position counting:
 - Direction is up when DIR is asserted
 - Direction is down when DIR is de-asserted.
- CNT_UP: Position counter count up: when eQDC decodes a count-up event, CNT_UP outputs a pulse which width is 1 peripheral clock cycle.
- CNT_DN: Position counter count down: when eQDC decodes a count-down event, CNT_DN outputs a pulse which width is 1 peripheral clock cycle.

There are three count modes(if CTRL[REV]=0,it is normal operation; if CTRL[REV]=1,it is reverse operation):

- Mode 0[CM0](CTRL2[CMODE]=00): [Normal Quadrature X4 / Reverse Quadrature X4](#)
- Mode 1[CM1](CTRL2[CMODE]=01): [Normal Quadrature X2 / Reverse Quadrature X2](#)
- Mode 2[CM2](CTRL2[CMODE]=10): [Normal Quadrature X1 / Reverse Quadrature X1](#)

34.3.7.3 Single phase decode (PH1DC) operation mode (CTRL[PH1] = 1, CTRL2[OPMODE] = 0)

In this mode, PHASEA and PHASEB input signals from speed or position sensors are decoded by the following signals in eQDC:

- PHASEA: Pulse trains.
- PHASEB: Pulse trains or direction.
- INDEX: Can be configured to cause a change of state on REV and to initialize POS.
- HOME: Can be configured to initialize POS.
- TRIGGER: Can be configured to take a snapshot of POS, POSD, and REV and to reinitialize POS.
- ICAP[3:1]: Takes a snapshot of POS.

eQDC outputs the following signals for system use:

- POS_MATCH[3:0]: position match:

Records the time at which the position of the shaft matches a user-defined value of the compare register or the time at which the position information is read:

- If CTRL2[OUTCTL] is cleared, POS_MATCH[x](x range is 0-3) is asserted when the value of POS equals the value of the corresponding compare register (UCOMPx/LCOMPx), and de-asserted when the value of POS does not equal the value of the corresponding compare register (UCOMPx/LCOMPx).
- If CTRL2[OUTCTL] is set, POS_MATCH[x](x range is 0-3) is asserted a pulse with 1 peripheral clock cycle width when UPOS or LPOS, REV, or POSD is read.

- COMP_FLG[3:0]: Position Counter Compare Output:

- COMP_FLG[x](x range is 0-3) is asserted when the value of POS is equal to or greater than the value of the corresponding compare register (UCOMPx/LCOMPx).
- COMP_FLG[x](x range is 0-3) is de-asserted when the value of POS is smaller than the value of the corresponding compare register (UCOMPx/LCOMPx).

- DIR: Direction of position counting:

- Direction is up when DIR is asserted
- Direction is down when DIR is de-asserted.

- CNT_UP: Position counter count up: when eQDC decodes a count-up event, CNT_UP outputs a pulse which width is 1 peripheral clock cycle.
- CNT_DN: Position counter count down: when eQDC decodes a count-down event, CNT_DN outputs a pulse which width is 1 peripheral clock cycle.

There are three count modes:

- Mode 0[CM0](CTRL2[CMODE]=00): **UP/DOWN Pulse Count mode**. Both position counter (POS) and position difference counter (POSD) count in the up direction when input PHASEA rising edge occurs. Both counters count in the down direction when input PHASEB rising edge occurs. If CTRL[REV] is 1, then the position counter will count in the opposite direction.
- Mode 1[CM1](CTRL2[CMODE]=01): **Signed Count mode (Double Edge)**. Both position counter (POS) and position difference counter (POSD) count the input PHASEA on both rising edge and falling edge while the input PHASEB provides the selected position counter direction (up/down). If CTRL[REV] is 1, then the position counter will count in the opposite direction.
- Mode 2[CM2](CTRL2[CMODE]=10): **Signed Count mode (Single Edge)**. Both position counter (POS) and position difference counter (POSD) count on the input PHASEA rising edge while the input PHASEB provides the selected position counter direction (up/down). If CTRL[REV] is 1, then the position counter will count in the opposite direction.

NOTE

If the positive edge of both PHASEA and PHASEB occurs simultaneously, an error interrupt is generated CTRL2[SABIRQ] and counter is unchanged.

34.3.7.4 Single phase count (PH1CT) operation mode (CTRL[PH1] = 1, CTRL2[OPMODE] = 1)

In this mode, PHASEA and PHASEB input signals from speed or position sensors are counted by the following signals in eQDC:

- PHASEA: Pulse trains.
- PHASEB: Pulse trains or direction.
- PRESET: Initializes POS and resets POSD:
 - If CTRL[REV]=0, a positive edge of PRESET initializes POS to initial value (UNIT/LINIT).
 - If CTRL[REV]=1, a positive edge of PRESET initializes POS to modulus value (UMOD/LMOD).
- ENABLE: All counters start counting when ENABLE is asserted; all counters stop counting when ENABLE is de-asserted.
- TRIGGER: Can be configured to take a snapshot of POS, POSD, and REV, and to reinitialize POS.
- ICAP[3:1]: Takes a snapshot of POS.

eQDC outputs the following signals for system use:

- POS_MATCH[3:0]: position match:

Records the time at which the position of the shaft matches a user-defined value of the compare register or the time at which the position information is read:

 - If CTRL2[OUTCTL] is cleared, POS_MATCH[x](x range is 0-3) is asserted when the value of POS equals the value of the corresponding compare register (UCOMPx/LCOMPx), and de-asserted when the value of POS does not equal the value of the corresponding compare register (UCOMPx/LCOMPx).
 - If CTRL2[OUTCTL] is set, POS_MATCH[x](x range is 0-3) is asserted a pulse with 1 peripheral clock cycle width when UPOS or LPOS, REV, or POSD is read.
- COMP_FLG[3:0]: Position Counter Compare Output:
 - COMP_FLG[x](x range is 0-3) is asserted when the value of POS is equal to or greater than the value of the corresponding compare register (UCOMPx/LCOMPx).
 - COMP_FLG[x](x range is 0-3) is de-asserted when the value of POS is smaller than the value of the corresponding compare register (UCOMPx/LCOMPx).
- DIR: Direction of position counting:
 - Direction is up when DIR is asserted
 - Direction is down when DIR is de-asserted.
- CNT_UP: Position counter count up: when eQDC decodes a count-up event, CNT_UP outputs a pulse which width is 1 peripheral clock cycle.
- CNT_DN: Position counter count down: when eQDC decodes a count-down event, CNT_DN outputs a pulse which width is 1 peripheral clock cycle.

There are three count modes:

- Mode 0[CM0](CTRL2[CMODE]=00): **UP/DOWN Pulse Count mode**. Both position counter (POS) and position difference counter (POSD) count in the up direction when input PHASEA rising edge occurs, both counters count in the down direction when input PHASEB rising edge occurs.
- Mode 1[CM1](CTRL2[CMODE]=01): **Signed Count mode (Double Edge)**. Both position counter (POS) and position difference counter (POSD) count the input PHASEA on both rising edge and falling edge while the input PHASEB provides the selected position counter direction (up/down) .

- Mode 2[CM2](CTRL2[CMODE]=10): **Signed Count mode (Single Edge)**. Both position counter (POS) and position difference counter (POSD) count on the input PHASEA rising edge while the input PHASEB provides the selected position counter direction (up/down) .

NOTE

If the positive edge of both PHASEA and PHASEB occurs simultaneously, an error interrupt is generated CTRL2[SABIRQ] and counter is unchanged.

34.3.7.5 Normal quadrature X1

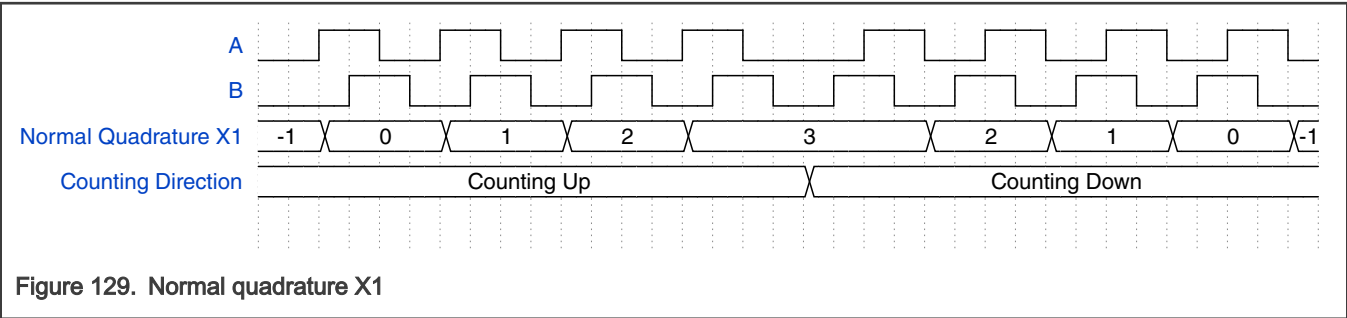


Figure 129. Normal quadrature X1

34.3.7.6 Normal quadrature X2

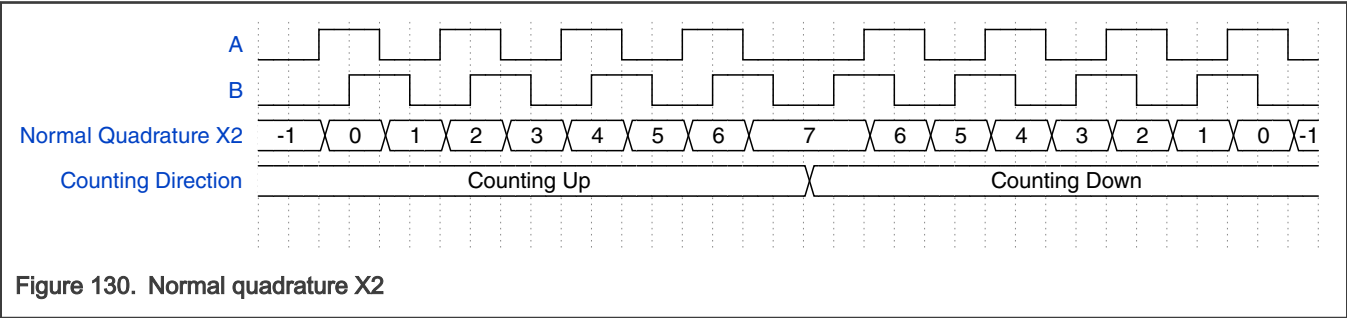


Figure 130. Normal quadrature X2

34.3.7.7 Normal quadrature X4


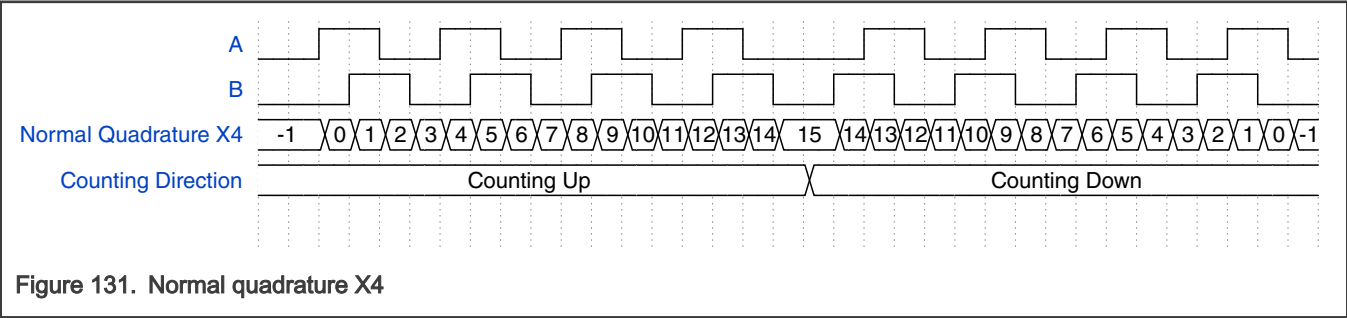


Figure 131. Normal quadrature X4


34.3.7.8 Reverse quadrature X1

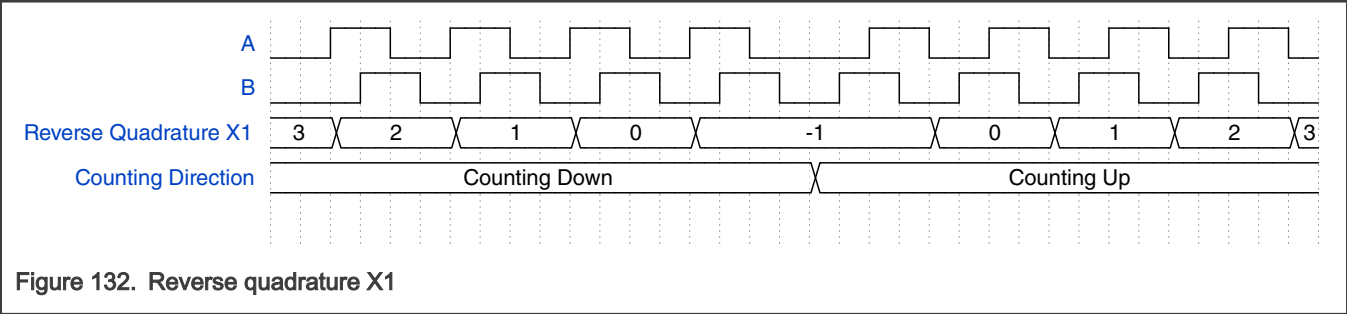

NOTE

Set CTRL[REV] to 1 for the position counter to count in the opposite direction.


34.3.7.9 Reverse quadrature X2

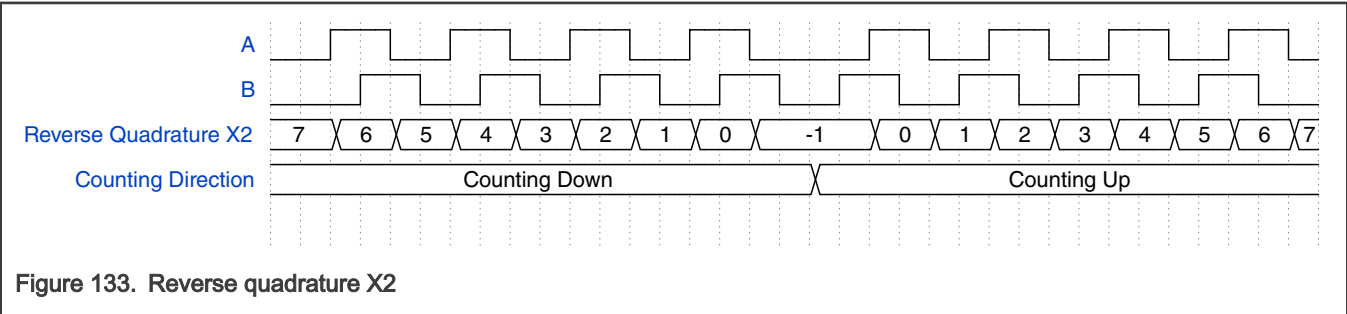

NOTE

Set CTRL[REV] to 1 for the position counter to count in the opposite direction.


34.3.7.10 Reverse quadrature X4

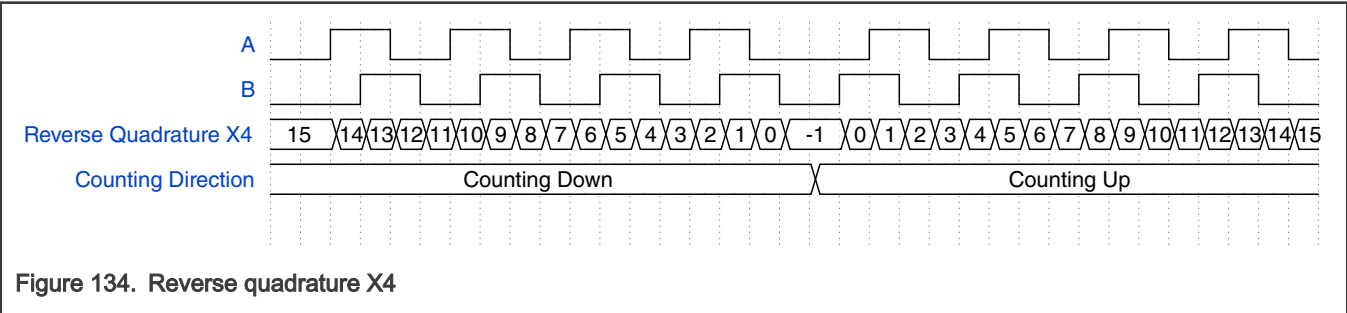


NOTE

Set CTRL[REV] to 1 for the position counter to count in the opposite direction.


34.3.7.11 UP/DOWN pulse count mode

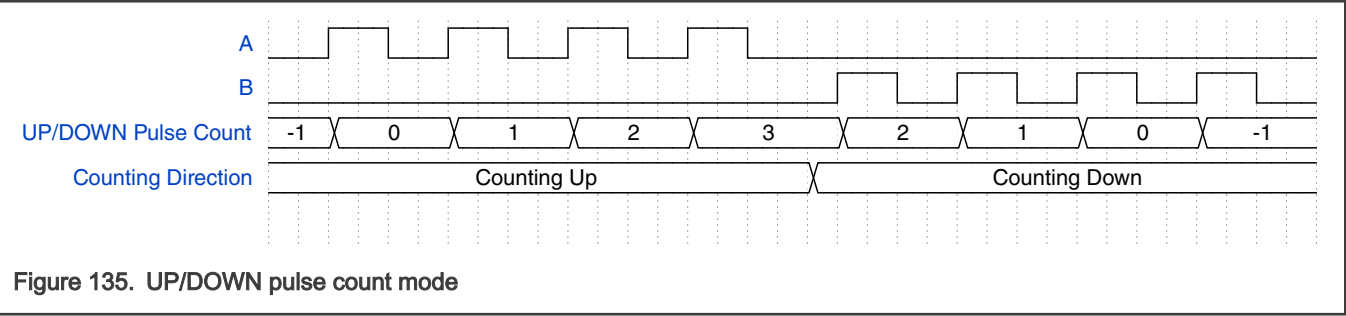

34.3.7.12 Signed count mode (double edge)

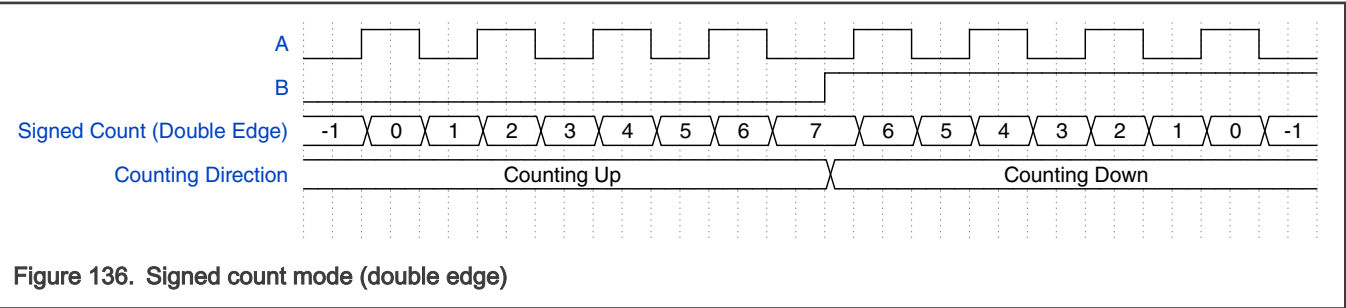


34.3.7.13 Signed count mode (single edge)

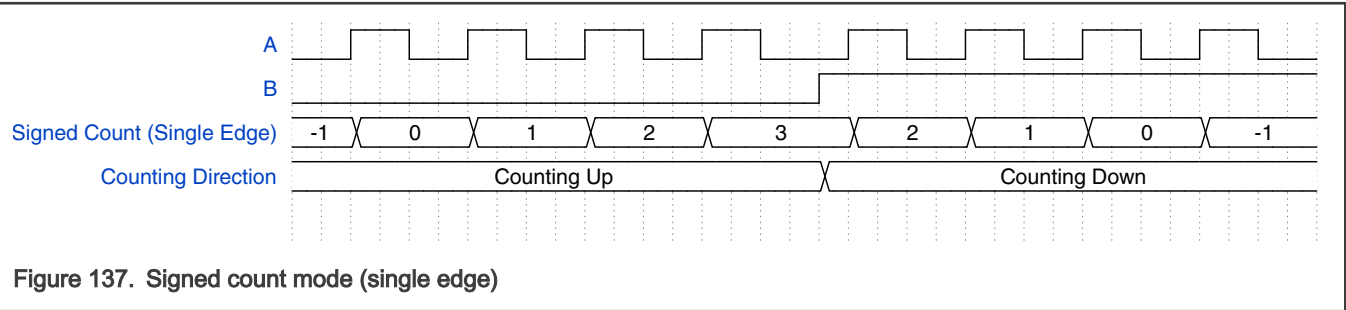

34.3.8 Speed measurement method

This section explains the speed measurement method, including the speed measurement algorithm.
The following figure shows the module working mechanism.

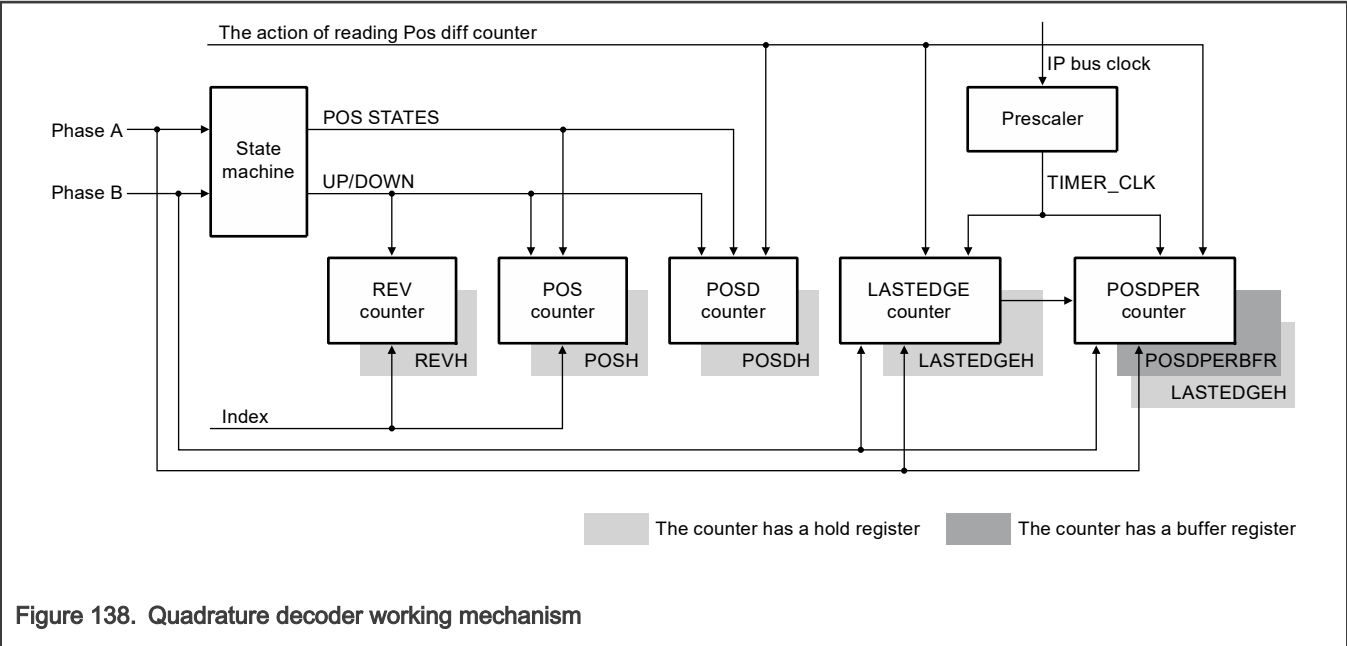

The following figure shows counters behavior and updating mechanism in the speed measurement method.

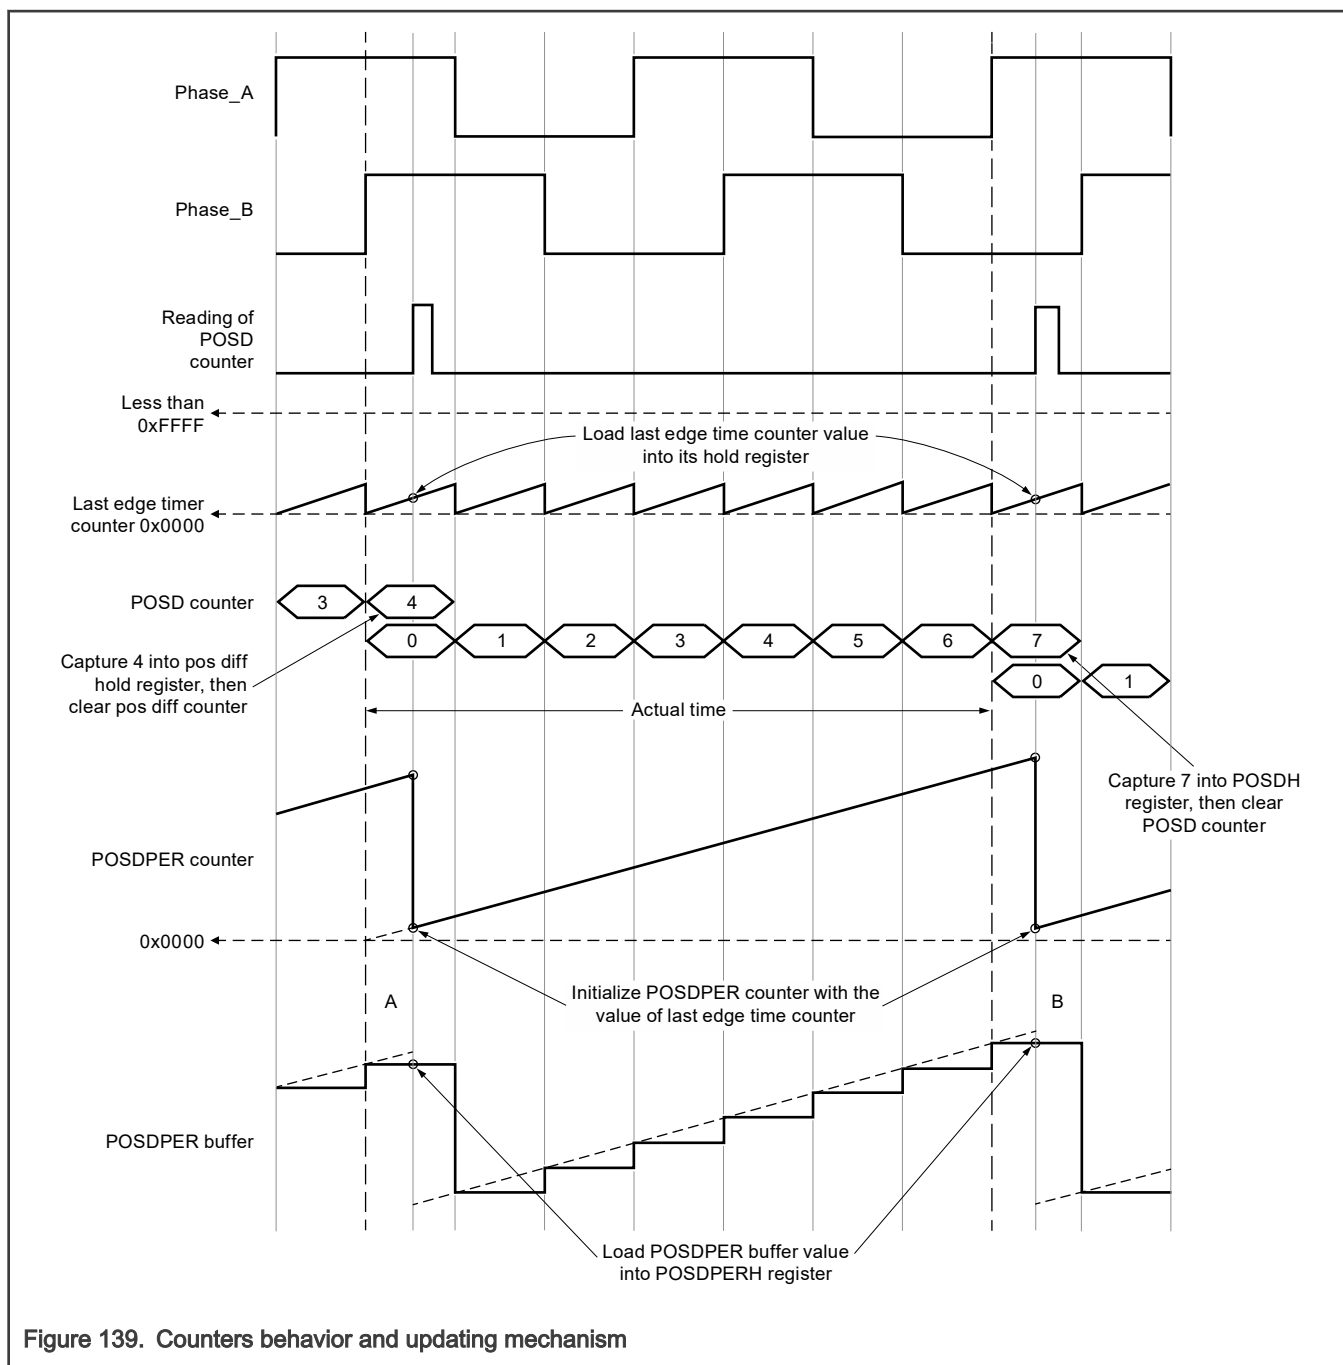


Figure 139. Counters behavior and updating mechanism

A reading of POSD occurs at time point A and it also occurs at time point B. "Actual time" represents the time duration between the first PhaseA/B edges right before time points A and B. At time point B, after reading POSD, POSDPERH contains the time length of "Actual time" and POSDH contains the value of PhaseA/B pulses within that "Actual time". Speed can be calculated based on POSDPERH and POSDH. A visualized explanation of speed measurement with this method is shown in the figure below.

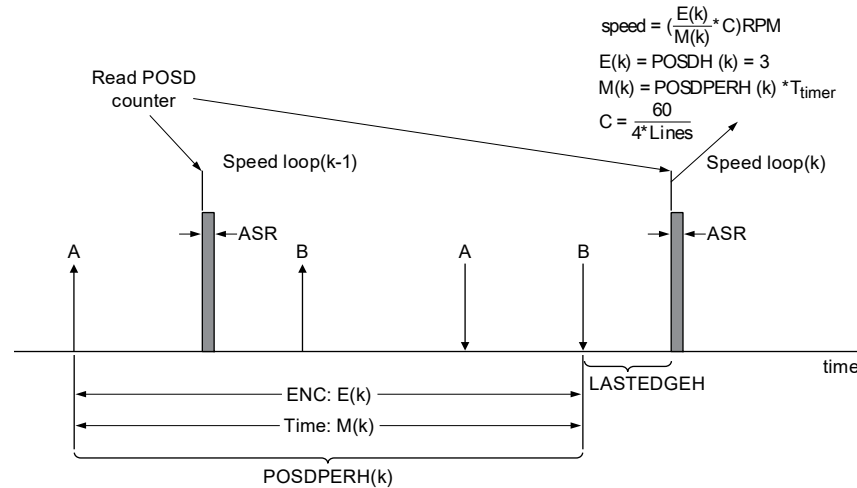


Figure 140. High speed measurement with method

Speed calculation algorithm

In order to cover all the cases in real applications, a simple speed measurement algorithm is necessary. See the algorithm shown below.

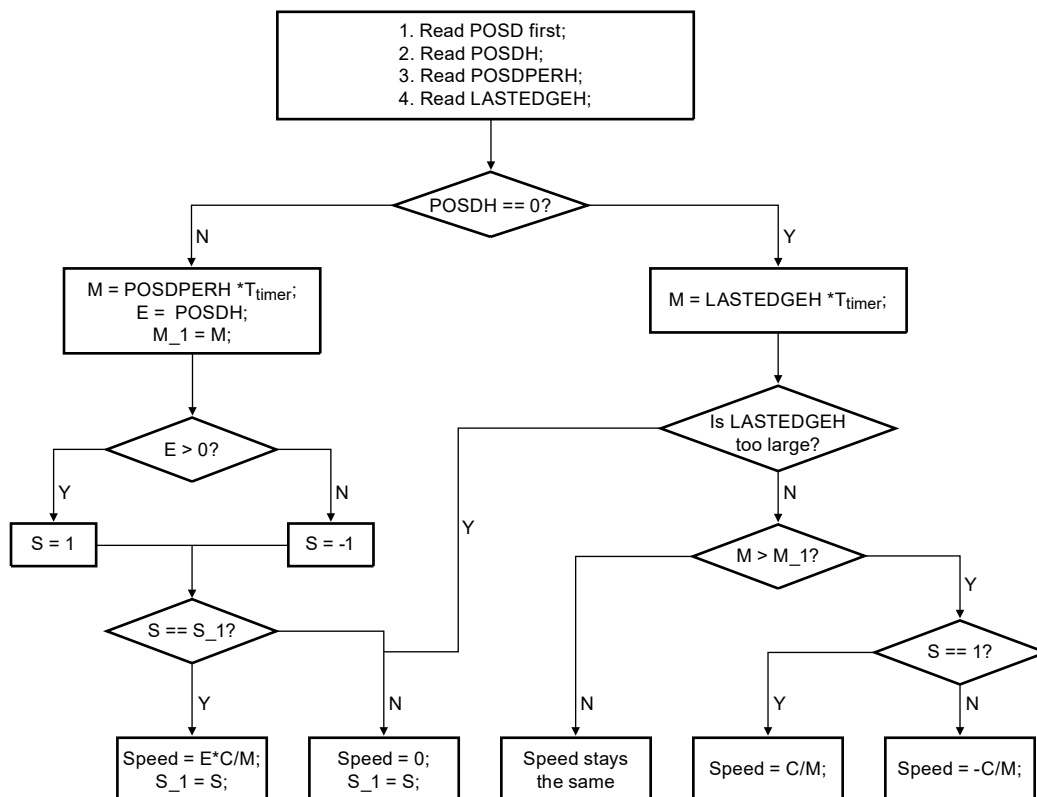


Figure 141. Flowchart of speed calculation with method

Speed calculation of motor's starting from standstill (chip is out of reset)

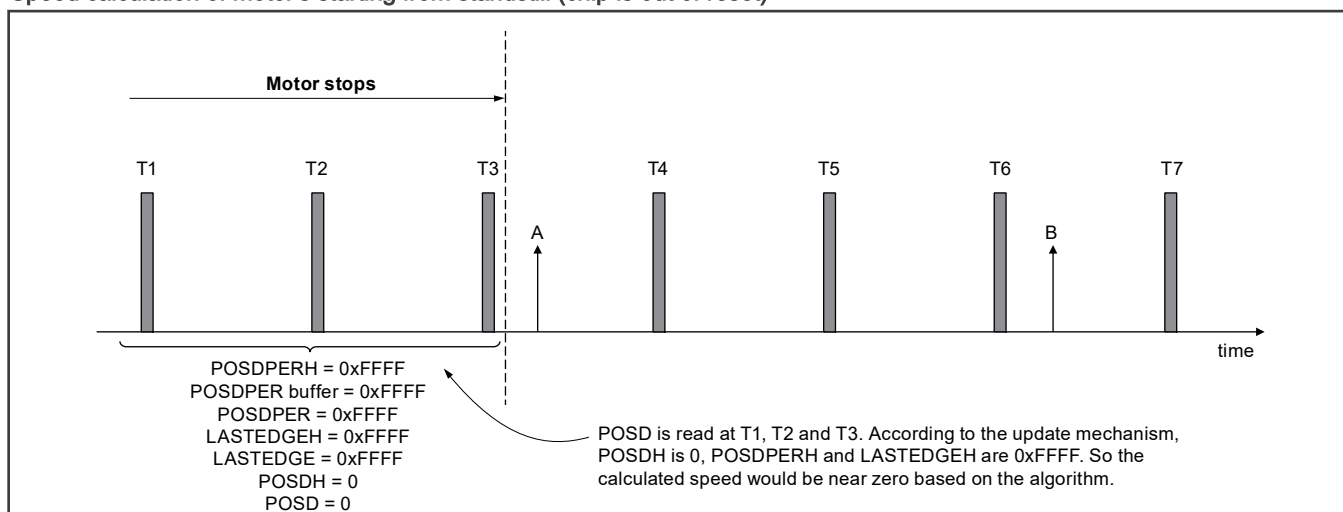


Figure 142. Speed measurement at time point T1~T3

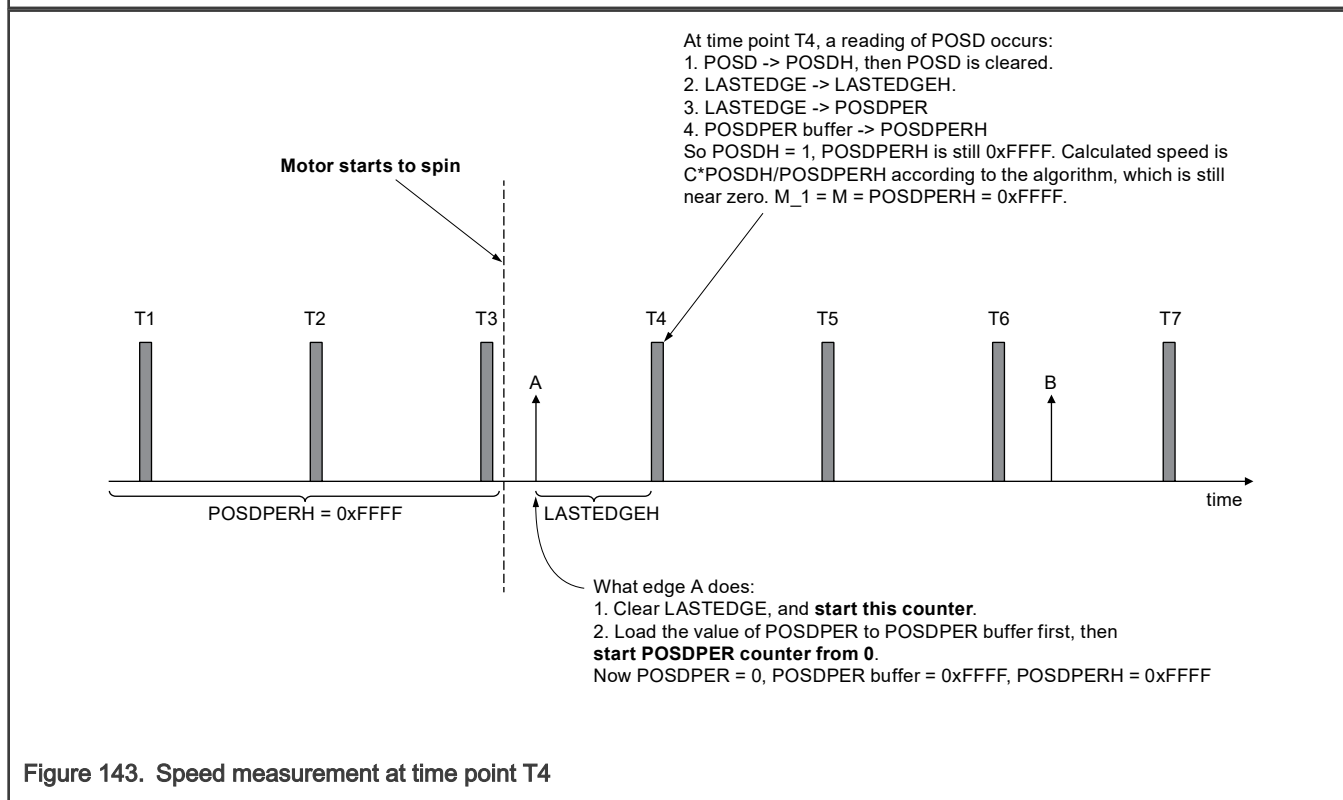


Figure 143. Speed measurement at time point T4

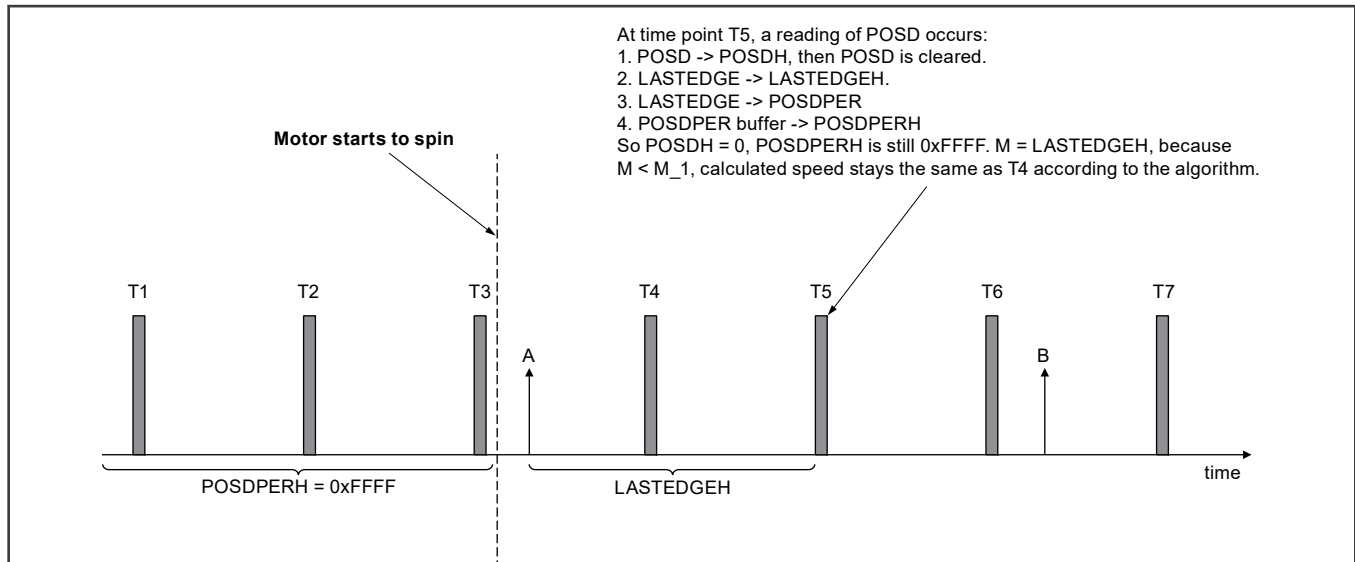


Figure 144. Speed measurement at time point T5

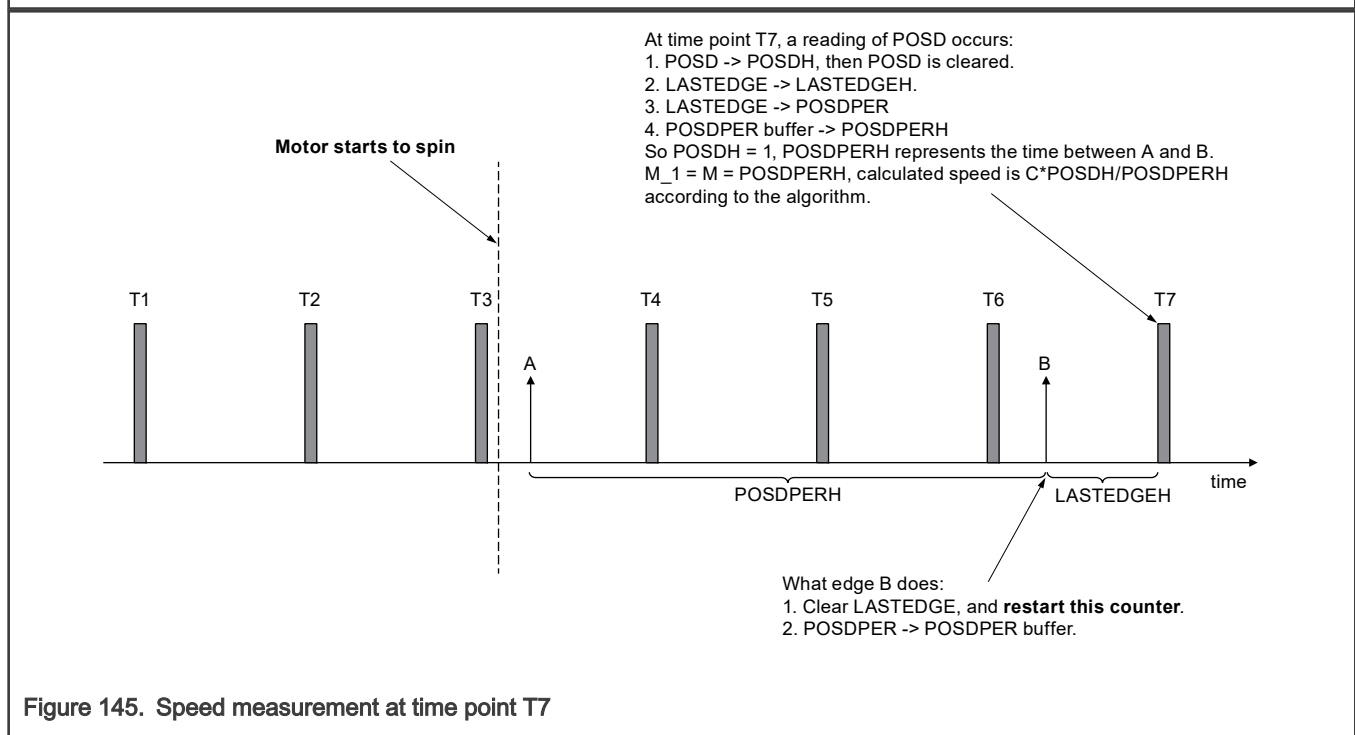


Figure 145. Speed measurement at time point T7

Speed calculation when motor stops

At time point T8, a reading of POSD occurs:
 1. POSD → POSDH, then POSD is cleared.
 2. LASTEDGE → LASTEDGEH.
 3. LASTEDGE → POSDPER
 4. POSDPER buffer → POSDPERH
 So POSDH = 0, POSDPERH still represents the time between A and B. M = LASTEDGEH, calculated speed stays the same as T7 since $M < M_{-1}$.

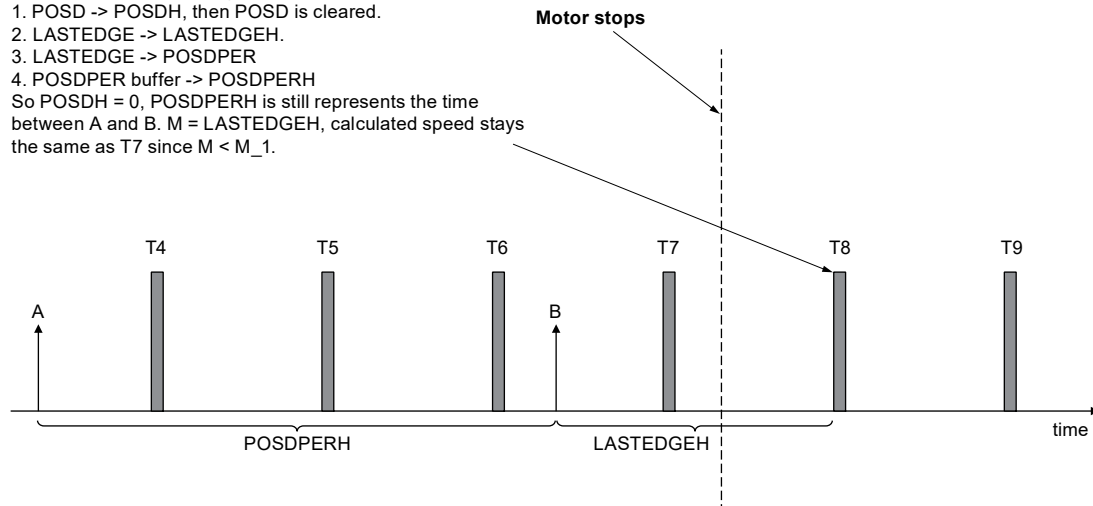


Figure 146. Speed measurement at time point T8

At time point Tn, a reading of POSD occurs:
 1. POSD → POSDH, then POSD is cleared.
 2. LASTEDGE → LASTEDGEH.
 3. LASTEDGE → POSDPER
 4. POSDPER buffer → POSDPERH
 So POSDH = 0, POSDPERH still represents the time between A and B.
 $M = \text{LASTEDGEH} = 0xFFFF$. Calculated speed will be 0 if 0xFFFF is considered being too large, or C/M, which is very near 0.

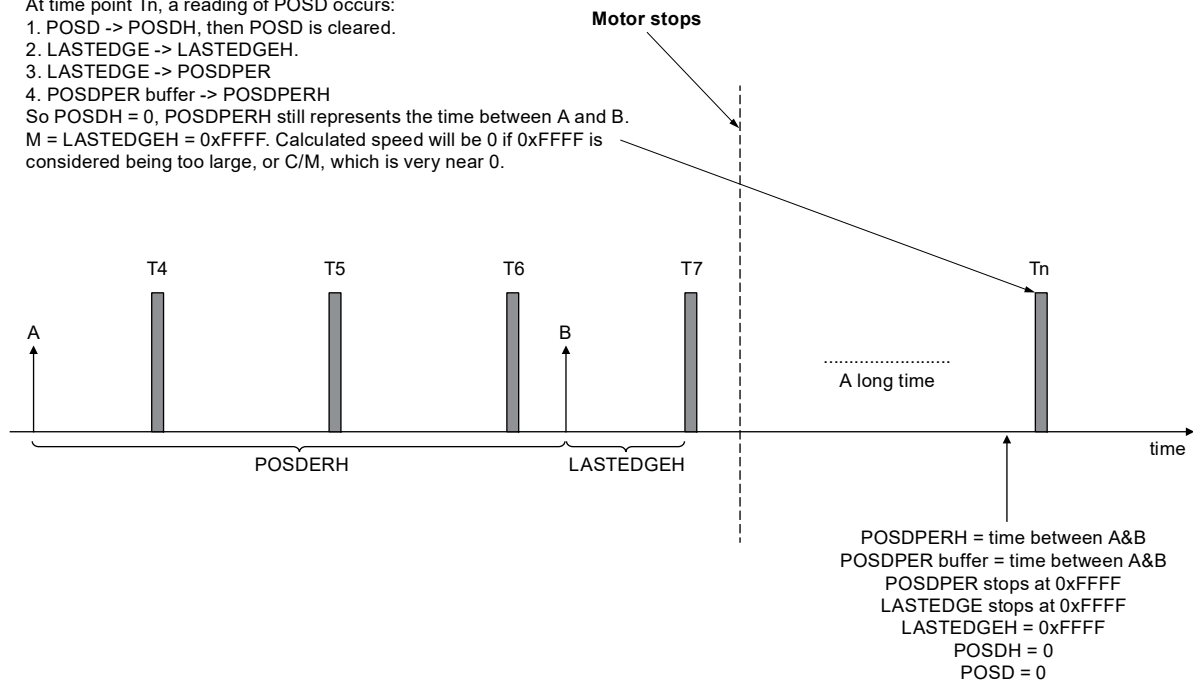


Figure 147. Speed measurement at time point Tn

Speed calculation when motor starts again

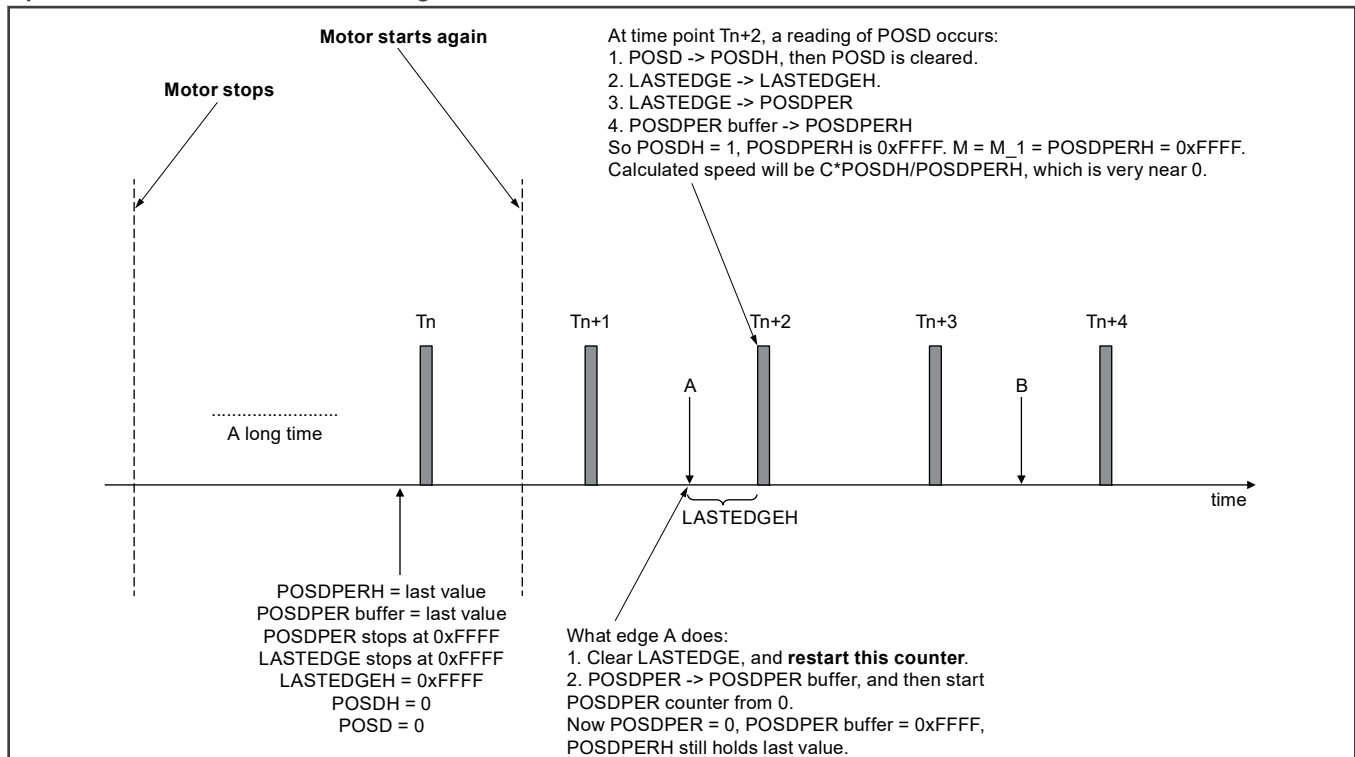


Figure 148. Speed measurement at time point T_{n+2}


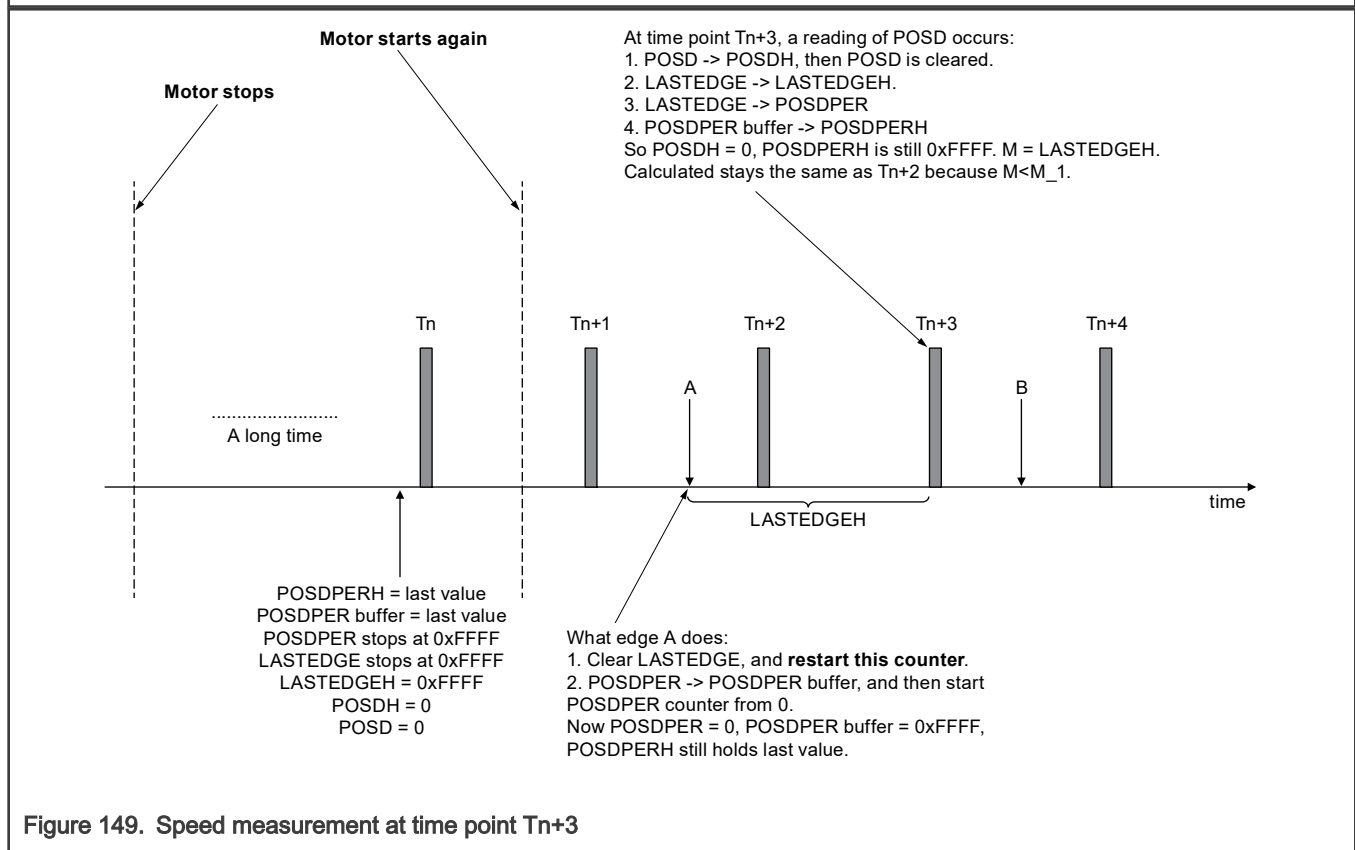


Figure 149. Speed measurement at time point T_{n+3}

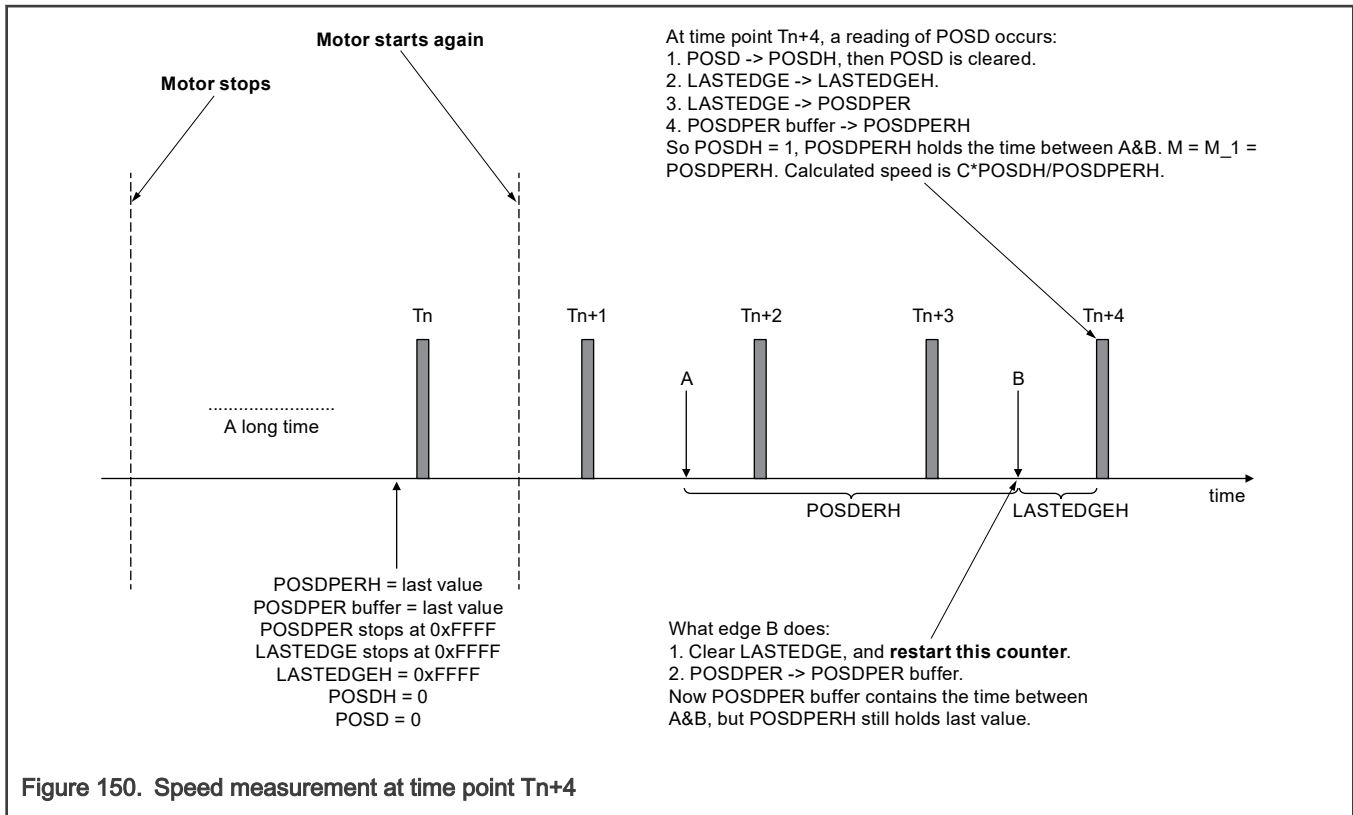

34.3.9 Reset

eQDC is reset by any system reset. Make sure you clear all inputs (of PhaseA, PhaseB, and etc.) before resetting eQDC.

34.3.10 Clocking

The peripheral clock is the only clock required when eQDC operates.

34.3.11 Interrupts

The following table lists the module interrupts.

Table 202. Interrupt Summary

Core Interrupt	Interrupt Flag	Interrupt Enable	Description
ipi_int_home	CTRL[HIRQ]	CTRL[HIE]	HOME/ENABLE signal transition interrupt
ipi_int_index	CTRL[XIRQ]	CTRL[XIE]	INDEX/PRESET signal transition interrupt
ipi_int_ro	INTCTRL[ROIRQ]	INTCTRL[ROIE]	roll-over interrupt
ipi_int_ru	INTCTRL[RUIRQ]	INTCTRL[RUIE]	roll-under interrupt
ipi_int_wdog	CTRL[WDIRQ]	CTRL[WDIE]	Watchdog timeout interrupt
ipi_int_comp	INTCTRL[CMP0IRQ] ~ INTCTRL[CMP3IRQ]	INTCTRL[CMP0IE] ~ INTCTRL[CMP3IE]	Compare match interrupt

Table continues on the next page...

Table 202. Interrupt Summary (continued)

Core Interrupt	Interrupt Flag	Interrupt Enable	Description
ipi_int_dir	INTCTRL[DIRIRQ]	INTCTRL[DIRIE]	Count direction change interrupt
ipi_int_sab	INTCTRL[SABIRQ]	INTCTRL[SABIE]	Simultaneous PHASEA and PHASEB change interrupt

34.4 External signals

eQDC receives the following 8 input signals from position or speed sensors:

- PHASEA
- PHASEB
- INDEX/PRESET
- TRIGGER
- HOME/ENABLE
- ICAP[3:1]

eQDC outputs the following 11 signals for system use:

- POS_MATCH[3:0]
- COMP_FLG[3:0]
- DIR
- CNT_DN
- CNT_UP

Table 203. Signals

Signal			Description
PHASEA	Phase A	Input	The PHASEA input can be connected to one of the phases from a two-phase shaft quadrature encoder output. PHASEA and PHASEB are used by eQDC to indicate a decoder increment has passed, and to calculate its direction. • When eQDC is used as a single phase decode/count, PHASEA can also be used as the single input. Direction for two-phase shaft quadrature encoder output when CTRL[REV] = 0: • PHASEA is the leading phase for a shaft rotating in the positive direction. • PHASEA is the trailing phase for a shaft rotating in the negative direction.
PHASEB	Phase B	Input	The PHASEB input can be connected to the other phase from a two-phase shaft quadrature encoder output. • When eQDC is used as a single phase decode/count mode, PHASEB and CTRL[REV] control counter direction. Direction for two-phase shaft quadrature encoder output when CTRL[REV] = 0: • PHASEB is the trailing phase for a shaft rotating in the positive direction. • PHASEB is the leading phase for a shaft rotating in the negative direction.

Table continues on the next page...

Table 203. Signals (continued)

Signal			Description
INDEX/ PRESET	INDEX/ PRESET	Input	- This input can work as INDEX or PRESET, selection bit is CTRL2[OPMODE] - Normally connected to the index pulse output of a quadrature encoder, the INDEX pulse can optionally reset the position counter of eQDC. The INDEX pulse also causes a change of state on the revolution counter. The direction of this state change (increment or decrement) is calculated from the PHASEA and PHASEB inputs. In Quadrature Count mode or Single Phase Count mode, this signal can present the counter PRESET function. - The positive edge of PRESET input can initialize position/revolution/watchdog counters.
HOME/ENABLE	HOME/ENABLE	Input	The HOME input can be used by eQDC and the timer module. - This input can work as HOME or ENABLE, selection bit is CTRL2[OPMODE] - The HOME input can be used to trigger the initialization of the position counter (UPOS/LPOS). Often the HOME signal is connected to a sensor on the motor or machine, sending notification that it has reached a defined home position. In Quadrature Count mode or Single Phase Count mode, this signal can present the counter ENABLE function. - All counters start counting when ENABLE is asserted, all counters stop counting when ENABLE is de-asserted.
TRIGGER	TRIGGER	Input	- Initializes UPOS or LPOS. - Takes a snapshot of POS, REV, and POSD.
ICAP[3:1]	Input capture	Input	Takes snapshots of POS and stores them into the corresponding UPOSH/LPOSH: - Positive edge of ICAP[3] input takes snapshots of POS and stores it into UPOSH3/LPOSH3. - Positive edge of ICAP[2] input takes snapshots of POS and stores it into UPOSH2/LPOSH2. - Positive edge of ICAP[1] input takes snapshots of POS and stores it into UPOSH1/LPOSH1.
POS_MATCH[3:0]	Position Match	Output	- Records the time at which the position of the shaft matches a user-defined compare value (UCOMPx/LCOMPx), the POS_MATCH[x](x range is 0-3) output can be used to trigger a timer channel. - Alternatively, records the time at which the position information was read, (when the position counters (UPOS and LPOS), revolution counter (REV), or position difference counter (POSD) registers are read) the POS_MATCH[x](x range is 0-3) output can be used to trigger a timer channel.

Table continues on the next page...

Table 203. Signals (continued)

Signal			Description
			Note: - If CTRL2[OUTCTL] is cleared, POS_MATCH[x](x range is 0-3) is asserted when the value of POS equals the value of the corresponding compare register (UCOMPx/LCOMPx), and de-asserted when the value of POS does not equal the value of the corresponding compare register (UCOMPx/LCOMPx). - If CTRL2[OUTCTL] is set, POS_MATCH[x](x range is 0-3) is asserted a pulse with 1 peripheral clock cycle width when UPOS or LPOS, REV, or POSD is read.
COMP_FLG[3:0]	Position Counter Compare Output	Output	- COMP_FLG[x](x range is 0-3) is asserted when the value of POS is equal to or greater than the value of the corresponding compare register (UCOMPx/LCOMPx). - COMP_FLG[x](x range is 0-3) is de-asserted when the value of POS is smaller than the value of the corresponding compare register (UCOMPx/LCOMPx).
DIR	Direction of position counting	Output	Indicates the direction of position counting: 1 indicates up. 0 indicates down.
CNT_UP	Position counter count up	Output	When eQDC decodes a count-up event, CNT_UP outputs a pulse with a width of 1 peripheral clock cycle.
CNT_DN	position counter count down	Output	When eQDC decodes a count-down event, CNT_DN outputs a pulse with a width of 1 peripheral clock cycle.

34.5 Initialization

This module does not require initialization.

34.6 Register descriptions

This section describes the memory map and registers of eQDC.

NOTE

Writing to a read-only (RO) register will cause bus errors.

34.6.1 eQDC register descriptions

The address of a register is the sum of a base address and an address offset.

34.6.1.1 eQDC memory map

eQDC0 base address: 400A_7000h

eQDC1 base address: 400A_8000h

Offset	Register	Width (In bits)	Access	Reset value
0h	Control Register (CTRL)	16	RW	0000h
2h	Control 2 Register (CTRL2)	16	RW	0000h
4h	Input Filter Register (FILT)	16	RW	0000h
6h	Last Edge Time Register (LASTEDGE)	16	R	FFFFh
8h	Position Difference Period Counter Register (POSDPER)	16	R	FFFFh
Ah	Position Difference Period Buffer Register (POSDPERBFR)	16	R	FFFFh
Ch	Upper Position Counter Register (UPOS)	16	RW	0000h
Eh	Lower Position Counter Register (LPOS)	16	RW	0000h
10h	Position Difference Counter Register (POSD)	16	RW	0000h
12h	Position Difference Hold Register (POSDH)	16	R	0000h
14h	Upper Position Hold Register (UPOSH)	16	R	0000h
16h	Lower Position Hold Register (LPOSH)	16	R	0000h
18h	Last Edge Time Hold Register (LASTEDGEH)	16	R	FFFFh
1Ah	Position Difference Period Hold Register (POSDPERH)	16	R	FFFFh
1Ch	Revolution Hold Register (RE VH)	16	R	0000h
1Eh	Revolution Counter Register (REV)	16	RW	0000h
20h	Upper Initialization Register (UINIT)	16	RW	0000h
22h	Lower Initialization Register (LINIT)	16	RW	0000h
24h	Upper Modulus Register (UMOD)	16	RW	0000h
26h	Lower Modulus Register (LMOD)	16	RW	0000h
28h	Upper Position Compare Register 0 (UCOMP0)	16	RW	8000h
2Ah	Lower Position Compare Register 0 (LCOMP0)	16	RW	0000h
2Ch	Upper Position Compare 1 (UCOMP1)	16	W	8000h
2Ch	Upper Position Holder Register 1 (UPOSH1)	16	R	0000h
2Eh	Lower Position Compare 1 (LCOMP1)	16	W	0000h
2Eh	Lower Position Holder Register 1 (LPOSH1)	16	R	0000h
30h	Upper Position Compare 2 (UCOMP2)	16	W	8000h
30h	Upper Position Holder Register 3 (UPOSH2)	16	R	0000h
32h	Lower Position Compare 2 (LCOMP2)	16	W	0000h
32h	Lower Position Holder Register 2 (LPOSH2)	16	R	0000h
34h	Upper Position Compare 3 (UCOMP3)	16	W	8000h
34h	Upper Position Holder Register 3 (UPOSH3)	16	R	0000h

Table continues on the next page...

Table continued from the previous page...

Offset	Register	Width (In bits)	Access	Reset value
36h	Lower Position Compare 3 (LCOMP3)	16	W	0000h
36h	Lower Position Holder Register 3 (LPOSH3)	16	R	0000h
38h	Interrupt Control Register (INTCTRL)	16	RW	0000h
3Ah	Watchdog Timeout Register (WTR)	16	RW	0000h
3Ch	Input Monitor Register (IMR)	16	RW	0000h
3Eh	Test Register (TST)	16	RW	0000h
50h	Upper VERID (UVERID)	16	R	0001h
52h	Lower VERID (LVERID)	16	R	0001h

34.6.1.2 Control Register (CTRL)

Offset

Register	Offset
CTRL	0h

Function

Controls various features of eQDC.

Diagram

Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	HIRQ	HIE	HIP	HNE	0	REV	PH1	XIRQ	XIE	XIP	XNE	WDIR Q	WDIE	WDE	DMAE N	LDOK
W	W1C				SWIP			W1C				W1C				
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
15 HIRQ	HOME/ENABLE Signal Transition Interrupt Request HOME/ENABLE Signal Transition Interrupt Request is set when a positive or negative transition on the HOME/ENABLE signal occurs, according to the Use Negative Edge of HOME/ENABLE Input bit (CTRL[HNE]). If HOME/ENABLE Signal Transition Interrupt Request bit is set and HOME/ENABLE Interrupt Enable bit (CTRL[HIE]) is set, then a HOME/ENABLE interrupt occurs. HOME/ENABLE Signal Transition Interrupt Request bit remains set until it is cleared by software

Table continues on the next page...

Table continued from the previous page...

Field	Function
	Write a one to this bit (HIRQ) to clear it 0b - No transition on the HOME/ENABLE signal has occurred 1b - A transition on the HOME/ENABLE signal has occurred
14 HIE	HOME/ENABLE Interrupt Enable Enables/disables HOME/ENABLE signal interrupts. 0b - Disabled 1b - Enabled
13 HIP	Enable HOME to Initialize Position Counter UPOS/LPOS Enables the position counter to be initialized by the HOME signal. 0b - No action 1b - HOME signal initializes the position counter
12 HNE	Use Negative Edge of HOME/ENABLE Input Selects using the positive/negative edge of the HOME/ENABLE input. 0b - When CTRL[OPMODE] = 0, use HOME positive edge to trigger initialization of position counters. When CTRL[OPMODE] = 1, use ENABLE high level to enable POS/POSD/WDG/REV counters 1b - When CTRL[OPMODE] = 0, use HOME negative edge to trigger initialization of position counters. When CTRL[OPMODE] = 1, use ENABLE low level to enable POS/POSD/WDG/REV counters
11 SWIP	Software-Triggered Initialization of Position Counters UPOS and LPOS Writing 1 to Software-Triggered Initialization of Position Counters bit initializes the position counter. Software-Triggered Initialization of Position Counters bit is always read as 0. 0b - No action 1b - Initialize position counter
10 REV	Enable Reverse Direction Counting Selects the direction of the count and position counter initial value. Note: if CTRL2[EMIP]=1 and INDEX input transition initialize position counter, this REV bit affects position counter initial value in a different manner, please refer to chapter "Position Counter(POS)" in Functional Description. Otherwise, REV bit takes affect as following: 0b - Count normally and the position counter initialization uses upper/lower initialization register UINIT/LINIT 1b - Count in the reverse direction and the position counter initialization uses upper/lower modulus register UMOD/LMOD
9	Enable Single Phase Mode

Table continues on the next page...

Table continued from the previous page...

Field	Function									
PH1	Bypass/use the quadrature decoder logic. 0b - Standard quadrature decoder, where PHASEA and PHASEB represent a two-phase quadrature signal. 1b - Single phase mode, bypass the quadrature decoder, refer to CTRL2[CMODE] description									
8 XIRQ	INDEX/PRESET Pulse Interrupt Request INDEX/PRESET Pulse Interrupt Request is set when a transition on the INDEX/PRESET signal occurs, according to the Use Negative Edge of INDEX/PRESET Pulse bit (CTRL[XNE]). If INDEX/PRESET Pulse Interrupt Request bit is set and INDEX/PRESET Pulse Interrupt Enable bit (CTRL[XIE]) is set, then an INDEX/PRESET interrupt occurs. - INDEX/PRESET Pulse Interrupt Request remains set until cleared by software - Write a one to this bit (XIRQ) to clear it 0b - INDEX/PRESET pulse has not occurred 1b - INDEX/PRESET pulse has occurred									
7 XIE	INDEX/PRESET Pulse Interrupt Enable Enables/disables INDEX/PRESET pulse interrupts. 0b - Disabled 1b - Enabled									
6 XIP	INDEX Triggered Initialization of Position Counters UPOS and LPOS Enables/disables the position counter to be initialized by the INDEX pulse. 0b - INDEX pulse does not initialize the position counter 1b - INDEX pulse initializes the position counter									
5 XNE	Select Positive/Negative Edge of INDEX/PRESET Pulse Selects the positive/negative edge of the INDEX/PRESET pulse. Note: if CTRL2[EMIP]=1 and CTRL2[OPMODE]=0, XNE bit affects INDEX pulse in a different manner as following table: <table><tr><th></th><th>CTRL[XNE] = 0</th><th>CTRL[XNE] = 1</th></tr><tr><td>PHA leads PHB (Clockwise)</td><td>Use rising edge of Index</td><td>Use falling edge of Index</td></tr><tr><td>PHA lags PHB (Counter Clockwise)</td><td>Use falling edge of Index</td><td>Use rising edge of Index</td></tr></table> otherwise, XNE bit affects INDEX pulse as following: 0b - Use positive edge of INDEX/PRESET pulse 1b - Use negative edge of INDEX/PRESET pulse		CTRL[XNE] = 0	CTRL[XNE] = 1	PHA leads PHB (Clockwise)	Use rising edge of Index	Use falling edge of Index	PHA lags PHB (Counter Clockwise)	Use falling edge of Index	Use rising edge of Index
	CTRL[XNE] = 0	CTRL[XNE] = 1								
PHA leads PHB (Clockwise)	Use rising edge of Index	Use falling edge of Index								
PHA lags PHB (Counter Clockwise)	Use falling edge of Index	Use rising edge of Index								

Table continues on the next page...

Table continued from the previous page...

Field	Function
4 WDIRQ	Watchdog Timeout Interrupt Request Watchdog Timeout Interrupt Request is set when a watchdog timeout interrupt occurs. • Watchdog Timeout Interrupt Request remains set until cleared by software • Write a one to this bit (WDIRQ) to clear it • Watchdog Timeout Interrupt Request bit is also cleared when Watchdog Enable (CTRL[WDE]) is disabled (=0) 0b - No Watchdog timeout interrupt has occurred 1b - Watchdog timeout interrupt has occurred
3 WDIE	Watchdog Timeout Interrupt Enable Enables/disables watchdog timeout interrupts. 0b - Disabled 1b - Enabled
2 WDE	Watchdog Enable Enables/disables the watchdog timer that is monitoring the PHASEA and PHASEB inputs for motor movement. 0b - Disabled 1b - Enabled
1 DMAEN	DMA Enable This bit enables DMA for new written buffer values of COMPx/INIT/MOD(x range is 0-3) Please note: When set to 1, this bit can't be cleared by writing 0 to it. 0b - DMA is disabled 1b - DMA is enabled. DMA request asserts automatically when the values in the outer-set of buffered compare registers (UCOMP0/LCOMP0;UCOMP1/LCOMP1;UCOMP2/LCOMP2;UCOMP3/LCOMP3), initial registers(UNIT/LINIT) and modulus registers (UMOD/LMOD) are loaded into the inner-set of buffer and then LDOK is cleared automatically. After the completion of this DMA transfer, LDOK is set automatically, it ensures outer-set values can be loaded into inner-set which in turn triggers DMA again.
0 LDOK	Load Okay This bit enables that the outer-set values of buffered compare registers (UCOMPx/LCOMPx, x=0~3), initial register(UNIT/LINIT) and modulus register(UMOD/LMOD) can be loaded into their inner-sets and take effect. When LDOK is set, this loading action occurs at the next position counter roll-over or roll-under if CTRL2[LDMOD] is set, or it occurs immediately if CTRL2[LDMOD] is cleared. LDOK is automatically cleared after the values in outer-set is loaded into the inner-set. Set LDOK bit by reading it, then write a logic 1 to it. LDOK can be manually cleared before a loading action occurs by writing a logic 0 to it. The outer-set of the registers cannot be written while LDOK is 1.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - No loading action taken. Users can write new values to buffered registers (writing into outer-set of these buffered registers) 1b - Outer-set values are ready to be loaded into inner-set and take effect. The loading time point depends on CTRL2[LDMOD].

34.6.1.3 Control 2 Register (CTRL2)

Offset

Register	Offset
CTRL2	2h

Function

Controls various features of eQDC.

Diagram

Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R																
W	C	M	O	D	E	M	I	P					L	O	P	M
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
15-14 CMODE	Counting Mode These bits control the basic counting and behavior of Position Counter and Position Difference Counter. Setting CTRL[REV] to 1 can reverse the counting direction. In quadrature Mode (CTRL[PH1] = 0): 00b - CM0: Normal/Reverse Quadrature X4 01b - CM1: Normal/Reverse Quadrature X2 10b - CM2: Normal/Reverse Quadrature X1 11b - CM3: Reserved In Single Phase Mode (CTRL[PH1] = 1): 00b - CM0: UP/DOWN Pulse Count Mode 01b - CM1: Signed Mode, count PHASEA rising/falling edge, position counter counts up when PHASEB is low and counts down when PHASEB is high

Table continues on the next page...

Table continued from the previous page...

Field	Function															
	10b - CM2: Signed Count Mode, count PHASEA rising edge only, position counter counts up when PHASEB is low and counts down when PHASEB is high 11b - CM3: Reserved															
13 ONCE	Count Once This bit selects modulo loop or one shot counting mode. NOTE Any of the following event initializes and restarts the position counter: • Write to CTRL[SWIP]. • INDEX signal transition if CTRL2[OPMODE] bit is clear and CTRL[XIP] is set. • HOME signal transition if CTRL2[OPMODE] bit is clear and CTRL[HIP] is set. • PRESET signal transition if CTRL2[OPMODE] bit is set and ENABLE signal is 1. • Positive edge transition of TRIGGER input if CTRL2[INITPOS] is set. 0b - Position counter counts repeatedly 1b - Position counter counts until roll-over or roll-under, then stop.															
12 INITPOS	Initial Position Register • When Initial Position Register is set (=1), it allows the rising edge of TRIGGER input to initialize the position counter (UPOS and LPOS registers) to UINIT/LINIT values (if CTRL[REV]=0) or UMOD/LMOD values (if CTRL[REV]=1). • When Initial Position Register is clear (=0), the position counter (UPOS/LPOS) is not initialized on rising edge of TRIGGER input 0b - Don't initialize position counter on rising edge of TRIGGER 1b - Initialize position counter on rising edge of TRIGGER															
11 EMIP	Enables/disables the position counter to be initialized by Index Event Edge Mark When CTRL[XIP] =1, this bit is used to enable the position counter to be initialized by Index Event Edge Mark cooperated with CTRL[REV] and CTRL[XNE] as following table: <table><tr><th></th><th>CTRL[XNE] = 0</th><th>CTRL[XNE] = 1</th><th>CTRL[REV] = 0</th><th>CTRL[REV] = 1</th></tr><tr><td>PHA leads PHB (Clockwise)</td><td>INDEX rising edge reset position counter</td><td>INDEX falling edge reset position counter</td><td>Reset position counter to initial value</td><td>Reset position counter to modulus value</td></tr><tr><td>PHA lags PHB (Counter Clockwise)</td><td>INDEX falling edge reset position counter</td><td>INDEX rising edge reset position counter</td><td>Reset position counter to modulus value</td><td>Reset position counter to initial value</td></tr></table> 0b - disables the position counter to be initialized by Index Event Edge Mark 1b - enables the position counter to be initialized by Index Event Edge Mark.		CTRL[XNE] = 0	CTRL[XNE] = 1	CTRL[REV] = 0	CTRL[REV] = 1	PHA leads PHB (Clockwise)	INDEX rising edge reset position counter	INDEX falling edge reset position counter	Reset position counter to initial value	Reset position counter to modulus value	PHA lags PHB (Counter Clockwise)	INDEX falling edge reset position counter	INDEX rising edge reset position counter	Reset position counter to modulus value	Reset position counter to initial value
	CTRL[XNE] = 0	CTRL[XNE] = 1	CTRL[REV] = 0	CTRL[REV] = 1												
PHA leads PHB (Clockwise)	INDEX rising edge reset position counter	INDEX falling edge reset position counter	Reset position counter to initial value	Reset position counter to modulus value												
PHA lags PHB (Counter Clockwise)	INDEX falling edge reset position counter	INDEX rising edge reset position counter	Reset position counter to modulus value	Reset position counter to initial value												

Table continues on the next page...

Table continued from the previous page...

Field	Function
10 PMEN	Period measurement function enable This bit is used to indicate the period measurement functions of LASTEDGE, LASTEDGEH, POSDPER, POSDPERBFR, and POSDPERH are being used. 0b - Period measurement functions are not used. POSD is loaded to POSDH and then cleared whenever POSD, UPOS, LPOS or REV is read. 1b - Period measurement functions are used. POSD is loaded into POSDH and then cleared only when POSD is read.
9 OUTCTL	Output Control Output Control controls the pulsing of the POS_MATCH output signal. 0b - POS_MATCH[x](x range is 0-3) is asserted when the Position Counter is equal to according compare value (UCOMPx/LCOMPx)(x range is 0-3), and de-asserted when the Position Counter not equal to the compare value (UCOMPx/LCOMPx)(x range is 0-3) 1b - All POS_MATCH[x](x range is 0-3) are asserted a pulse, when the UPOS, LPOS, REV, or POSD registers are read
8 REVMOD	Revolution Counter Modulus Enable Revolution Counter Modulus Enable selects how the revolution counter (REV) is incremented/decremented. By default, the revolution counter is controlled based on the count direction and the INDEX pulse. As an option, the revolution counter can be controlled using the roll-over/under detection during modulo counting. 0b - Use INDEX pulse to increment/decrement revolution counter (REV) 1b - Use modulus counting roll-over/under to increment/decrement revolution counter (REV)
7-4 —	Reserved
3 LDMOD	Buffered Register Load (Update) Mode Select This bit selects the loading time point of the buffered compare registers UCOMPx/LCOMPx, x=0~3, initial register (UINIT/LINIT), and modulus register (UMOD/LMOD) 0b - Buffered registers are loaded and take effect immediately upon CTRL[LDOK] is set. 1b - Buffered registers are loaded and take effect at the next roll-over or roll-under if CTRL[LDOK] is set.
2 OPMODE	Operation Mode Select 0b - Decode Mode: Input nodes INDEX/PRESET and HOME/ENABLE are assigned to function of INDEX and HOME. 1b - Count Mode: Input nodes INDEX/PRESET and HOME/ENABLE are assigned to functions of PRESET and ENABLE. In this mode: (1)only when ENABLE=1, all counters (position/position difference/revolution/watchdog) can run, when ENABLE=0, all counters (position/position difference/revolution/watchdog) can't run. (2) the rising edge of PRESET input can initialize

Table continues on the next page...

Table continued from the previous page...

Field	Function															
	position/revolution/watchdog counters (position counter initialization also need referring to bit CTRL[REV]).															
1 UPDPOS	Update Position Registers - When UPDPOS bit is set (=1), it allows the rising edge of TRIGGER input to clear the POSD, REV, UPOS and LPOS registers to zero. - When UPDPOS bit is clear (=0), the rising edge of TRIGGER input does not clear POSD, REV, UPOS and LPOS registers to zero. - If both UPDPOS bit and INITPOS bit are set, then when rising edge of TRIGGER input occurs, the UPOS/LPOS registers are not cleared to zero, but be initialized to value of UINIT/LINIT registers(if CTRL[REV]=0) or value of UMOD/LMOD registers(if CTRL[REV]=1). - Do not set this bit when using the LASTEDGE and POSDPER registers to measure speed.															
0 UPDHLD	Update Hold Registers - When UPDHLD bit is set (=1), it allows the rising edge of TRIGGER input to cause an update of the POSDH, REVH, UPOSH, and LPOSH registers - When UPDHLD bit is clear (=0), the hold registers (POSDH, REVH) are not updated by the rising edge of TRIGGER input, and hold registers UPOSH/LPOSH are not updated by the rising edge of TRIGGER input if INITPOS bit is also clear. - Do not set this bit when using the LASTEDGE and POSDPER registers to measure speed. UPOSH/LPOSH has little difference with POSDH and REVH on UPDHLD bit, both UPDHLD bit and INITPOS bit allow the rising edge of TRIGGER input to take effect on UPOSH/LPOSH, so make a list here: <table><tr><th>INITPOS</th><th>UPDHLD</th><th>State of UPOSH/LPOSH</th></tr><tr><td>0</td><td>0</td><td>Rising edge of TRIGGER input does not take effect on UPOSH/LPOSH</td></tr><tr><td>0</td><td>1</td><td>Rising edge of TRIGGER input updates UPOSH/LPOSH with the value of POS counter</td></tr><tr><td>1</td><td>0</td><td>Rising edge of TRIGGER input updates UPOSH/LPOSH with the value of POS counter, and then POS counter is initialized</td></tr><tr><td>1</td><td>1</td><td>Rising edge of TRIGGER input updates UPOSH/LPOSH with the value of POS counter, and then POS counter is initialized</td></tr></table> Note:Updating the Position Difference Hold Register (POSDH) also causes the Position Difference Counter Register (POSD) to be cleared.	INITPOS	UPDHLD	State of UPOSH/LPOSH	0	0	Rising edge of TRIGGER input does not take effect on UPOSH/LPOSH	0	1	Rising edge of TRIGGER input updates UPOSH/LPOSH with the value of POS counter	1	0	Rising edge of TRIGGER input updates UPOSH/LPOSH with the value of POS counter, and then POS counter is initialized	1	1	Rising edge of TRIGGER input updates UPOSH/LPOSH with the value of POS counter, and then POS counter is initialized
INITPOS	UPDHLD	State of UPOSH/LPOSH														
0	0	Rising edge of TRIGGER input does not take effect on UPOSH/LPOSH														
0	1	Rising edge of TRIGGER input updates UPOSH/LPOSH with the value of POS counter														
1	0	Rising edge of TRIGGER input updates UPOSH/LPOSH with the value of POS counter, and then POS counter is initialized														
1	1	Rising edge of TRIGGER input updates UPOSH/LPOSH with the value of POS counter, and then POS counter is initialized														

34.6.1.4 Input Filter Register (FILT)

Offset

Register	Offset
FILT	4h

Function

The Input Filter Register sets the values of the input filter sample period (FILT_PER) and the input filter sample count (FILT_CNT).

- The Input Filter Sample Period (FILT_PER) should be set so that the sampling period is larger than the period of the expected noise. Doing this means that a noise spike only corrupts one sample.
- The Input Filter Sample Count (FILT_CNT) should be chosen to reduce the probability of noisy samples causing an incorrect transition to be recognized. The probability of an incorrect transition is defined as the probability of an incorrect sample raised to the power of $FILT\_CNT+3$.

The values of the Input Filter Sample Period (FILT_PER) and the Input Filter Sample Count (FILT_CNT) must also be traded off against the desire for minimal latency in recognizing valid input transitions. Turning on the input filter (setting the Input Filter Sample Period (FILT_PER) to a non-zero value) introduces a latency of $((FILT\_CNT+3)*FILT\_PER+2)$ IP Bus clock periods.

The filter latency can be measured:

- Drive the quadrature decoder inputs (PHASEA, PHASEB, INDEX, HOME)
- Monitor the filtered output in the Input Monitor Register (IMR)
- Determine how many IP Bus clock cycles that it takes before the output shows up, by using the following equations, where f is FILT_PER and s is FILT_CNT.

— $DELAY \text{ (IP Bus clock cycles)} = f * (s+3) + 1$ (to read the filtered output)

— $DELAY \text{ (IP Bus clock cycles)} = f * (s+3) + 2$ (to monitor the output in the IMR)

One more additional IP Bus clock cycle is needed to read the filtered output, and 2 more IP Bus clock cycles are needed to monitor the filtered output in the IMR. The sample rate is set when it reaches the number f . The following examples use the preceding equations:

- Example: when $f = 0$, the filter is bypassed: $DELAY = 1$ or 2 clock cycles.
- Example: when $f = 5$ and $s = 2$: $DELAY = 5 * (2+3) + (1 \text{ or } 2) = 26$ or 27 clock cycles.

Diagram

Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	PRSC				FILT_CS	FILT_CNT			FILT_PER							
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
15-12	Prescaler

Table continues on the next page...

Table continued from the previous page...


Field	Function
PRSC	The Prescaler field is used to prescale the peripheral clock that is used by the LASTEDGE and POSDPER counters as well as watchdog timer and Input Filter. The clock is prescaled by a value of 2^{PRSC} which means that the prescaler logic can divide the clock by a minimum of 1 and a maximum of 32,768.
11 FILT_CS	Filter Clock Source selection 0b - Peripheral Clock 1b - Prescaled peripheral clock by PRSC
10-8 FILT_CNT	Input Filter Sample Count The Input Filter Sample Count represents the number of consecutive samples that must agree, before the input filter accepts an input transition. • A value of 0x0 represents 3 samples • A value of 0x7 represents 10 samples The value of the Input Filter Sample Count (FILT_CNT) affects the input latency.
7-0 FILT_PER	Input Filter Sample Period The Input Filter Sample Period represents the sampling period (in IP Bus clock cycles) of the decoder input signals. Each input is sampled multiple times at the rate specified by the Input Filter Sample Period. • If FILT_PER is 0x00 (default), then the input filter is bypassed. Bypassing the digital filter enables the position/position difference counters to operate with count rates up to the IP Bus frequency. • The value of the Input Filter Sample Period (FILT_PER) affects the input latency. • When changing the Input Filter Sample Period (FILT_PER) from a non-zero value to another non-zero value, write a value of 0 first, to clear the filter.

34.6.1.5 Last Edge Time Register (LASTEDGE)

Offset

Register	Offset
LASTEDGE	6h

Diagram

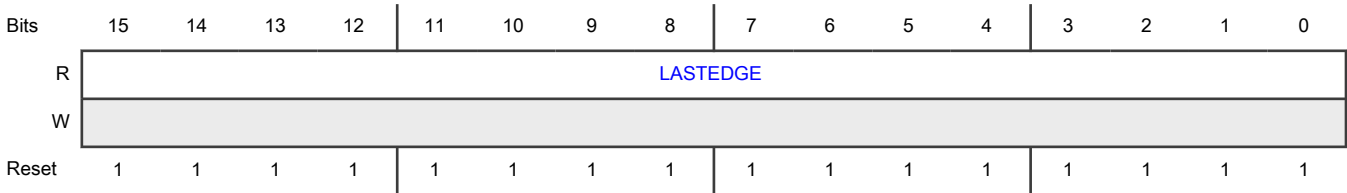

Fields


Field	Function
15-0 LASTEDGE	Last Edge Time Counter The Last Edge Time counter represents the time since the last edge occurred on PHASEA or PHASEB. LASTEDGE counts up using the peripheral clock that is prescaled by FILT[PRSC]. Any edge on PHASEA or PHASEB resets this register to 0 and starts counting. If the LASTEDGE count reaches 0xffff, the counting stops in order to prevent an overflow. Counting continues when an edge occurs on PHASEA or PHASEB.

34.6.1.6 Position Difference Period Counter Register (POSDPER)

Offset

Register	Offset
POSDPER	8h

Diagram

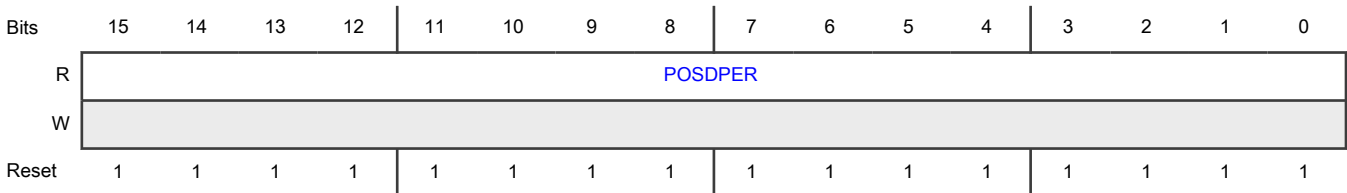

Fields


Field	Function
15-0 POSDPER	Position difference period The Position Difference Period counter counts up using the peripheral clock that is prescaled by FILT[PRSC]. Reading the POSD register also causes the value of the LASTEDGE register to be loaded into POSDPER. If the POSDPER count reaches 0xffff, the counting stops in order to prevent an overflow. Counting continues when an edge occurs on PHASEA or PHASEB.

34.6.1.7 Position Difference Period Buffer Register (POSDPERBFR)

Offset

Register	Offset
POSDPERBFR	Ah

Diagram

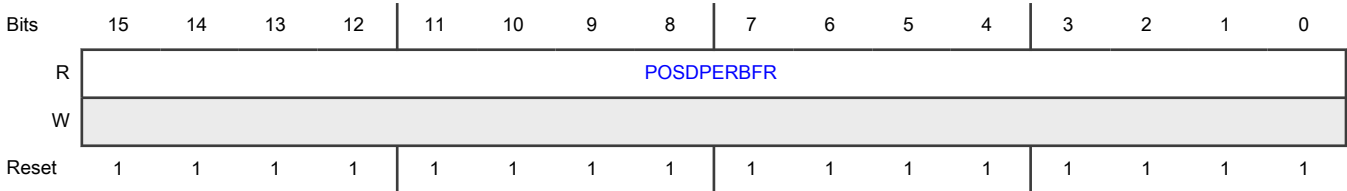

Fields

Field	Function
15-0	Position difference period buffer
POSDPERBFR	The Position Difference Period buffer register is a buffer register for the POSDPER value. POSDPERBFR is updated with the value of POSDPER when any edge occurs on PHASEA or PHASEB.

34.6.1.8 Upper Position Counter Register (UPOS)


Offset

Register	Offset
UPOS	Ch

Function

Contains the upper (most significant) half of the Position Counter. This is the binary count from the Position Counter.

Diagram

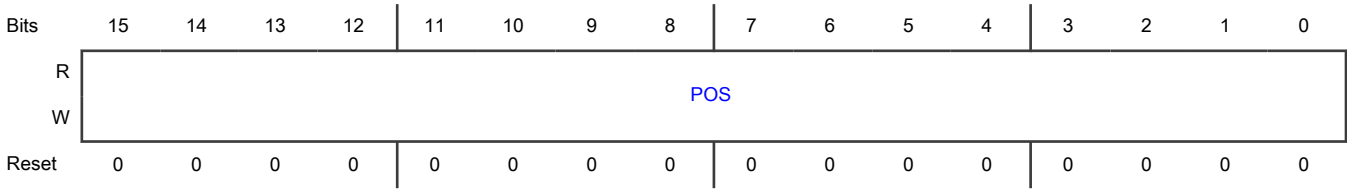

Fields

Field	Function
15-0	POS
POS	The upper (most significant) half of the Position Counter

34.6.1.9 Lower Position Counter Register (LPOS)


Offset

Register	Offset
LPOS	Eh

Function

Contains the lower (least significant) half of the Position Counter. This is the binary count from the Position Counter.

Diagram

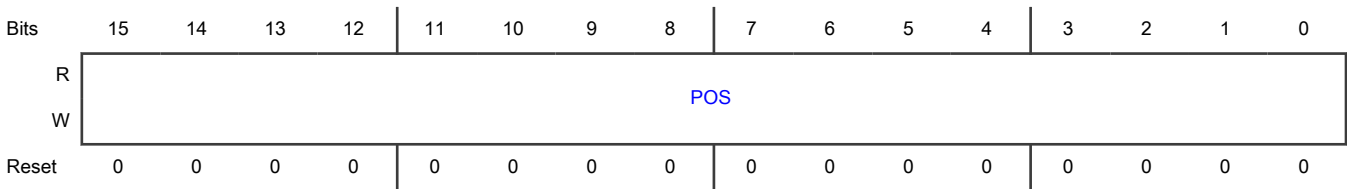

Fields

Field	Function
15-0	POS
POS	The lower (least significant) half of the Position Counter

34.6.1.10 Position Difference Counter Register (POSD)

Offset


Register	Offset
POSD	10h

Function

The Position Difference Counter Register contains the position change in value occurring between each read of the Position Register. The value of the Position Difference Counter Register can be used to calculate velocity.

- The 16-bit Position Difference Counter computes up or down on every count pulse.
- This Position Difference Counter acts as a differentiator, whose count value is proportional to the change in position since the last time that the Position Counter was read.
- When the Position Difference Counter (POSD) is read, its contents are copied into the Position Difference Hold Register (POSDH) and the Position Difference Counter is cleared.

Diagram

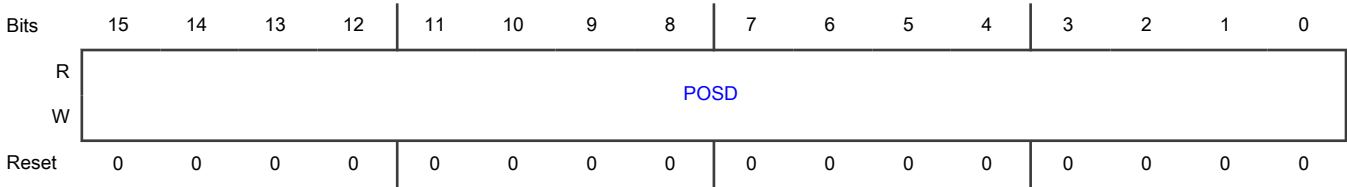

Fields

Field	Function
15-0	POSD
POSD	The position change in value between each read of the Position Register.

34.6.1.11 Position Difference Hold Register (POSDH)


Offset

Register	Offset
POSDH	12h

Function

The Position Difference Hold Register register contains a snapshot of the value of the Position Difference Counter Register (POSD). The value of the Position Difference Hold Register (POSDH) can be used to calculate velocity.

Diagram

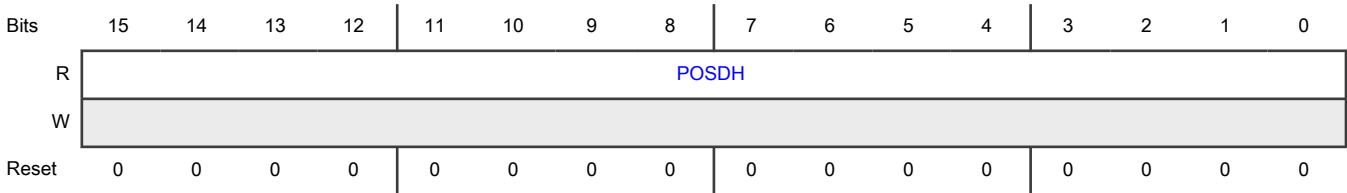

Fields

Field	Function
15-0 POSDH	POSDH The value of the POSD register

34.6.1.12 Upper Position Hold Register (UPOSH)


Offset

Register	Offset
UPOSH	14h

Function

Contains a snapshot of the Upper Position Counter Register (UPOS register).

Diagram

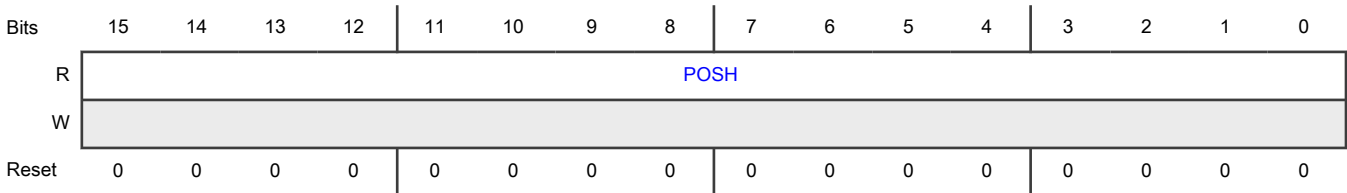

Fields

Field	Function
15-0 POSH	POSH The value of the Upper Position Counter Hold Register (UPOSH)


34.6.1.13 Lower Position Hold Register (LPOSH)

Offset

Register	Offset
LPOSH	16h

Function
Contains a snapshot of the Lower Position Counter Register (LPOS).

Diagram

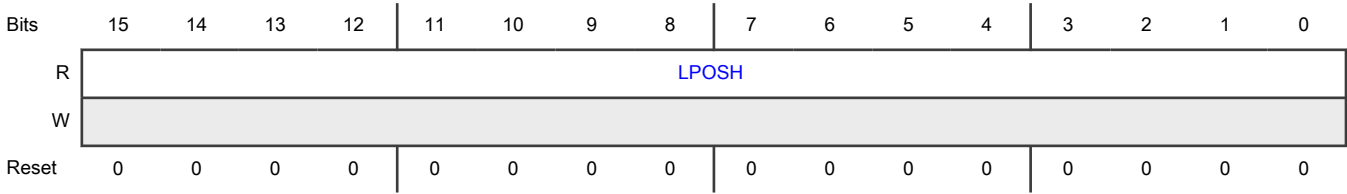

Fields


Field	Function
15-0	POSH
LPOSH	The value of the Lower Position Counter Hold Register (LPOSH)

34.6.1.14 Last Edge Time Hold Register (LASTEDGEH)

Offset

Register	Offset
LASTEDGEH	18h

Diagram

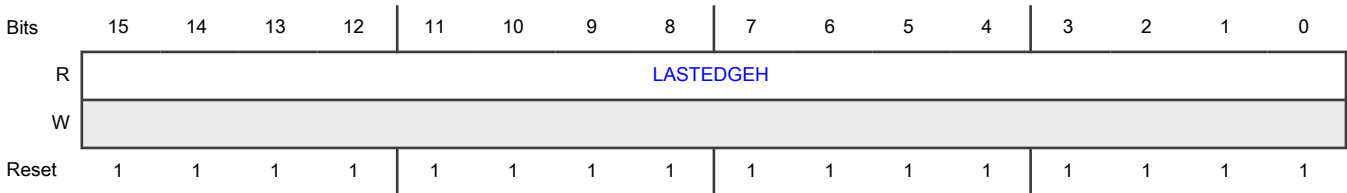

Fields


Field	Function
15-0	Last Edge Time Hold
LASTEDGEH	The Last Edge Time Hold register is a hold register for the LASTEDGE value. LASTEDGEH is updated with the value of LASTEDGE when the POSD register is read.

34.6.1.15 Position Difference Period Hold Register (POSDPERH)

Offset

Register	Offset
POSDPERH	1Ah

Diagram

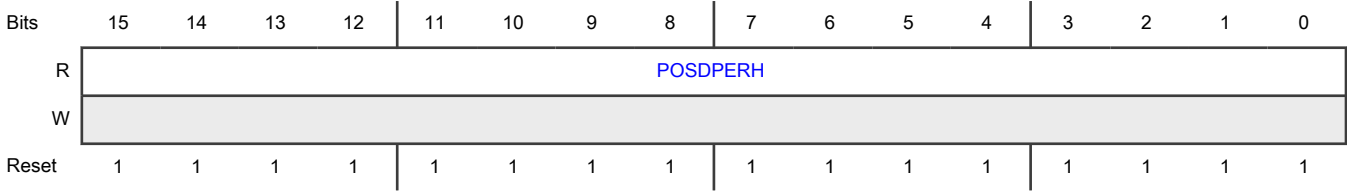

Fields

Field	Function
15-0	Position difference period hold
POSDPERH	The Position Difference Period Hold register is a hold register for the POSDPER value. POSDPERH is updated with the value of POSDPERBFR when the POSD register is read.

34.6.1.16 Revolution Hold Register (REVH)


Offset

Register	Offset
REVH	1Ch

Function

Contains a snapshot of the value of the Revolution Counter Register (REV).

Diagram

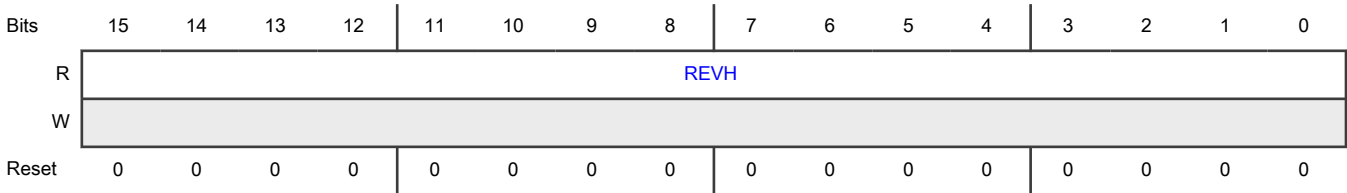

Fields

Field	Function
15-0	REVH
REVH	The value of the Revolution Counter Register (REV)

34.6.1.17 Revolution Counter Register (REV)


Offset

Register	Offset
REV	1Eh

Function

Contains the current value of the Revolution Counter.

Diagram

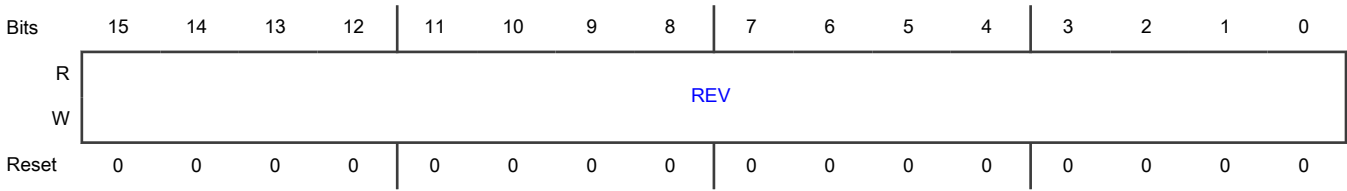

Fields

Field	Function
15-0	REV
REV	The current value of the Revolution Counter

34.6.1.18 Upper Initialization Register (UNIT)


Offset

Register	Offset
UNIT	20h

Function

Contains the value to be used to initialize the upper half of the position counter (UPOS). It is a double-set register (please refer to chapter "Double-set Registers Loading Operation"). Writing this register actually writes to the out-set, and reading this register returns inner-set value which is the value that is taking effect.

Diagram

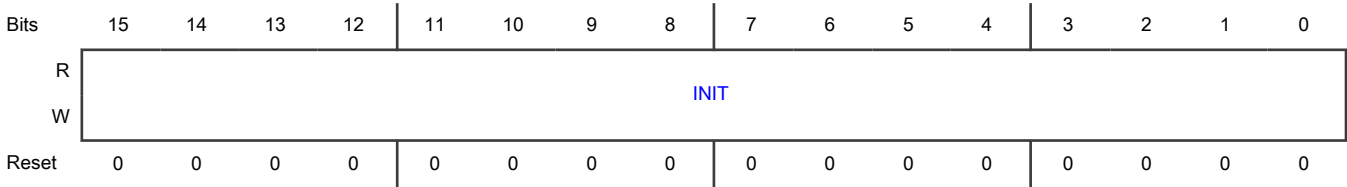

Fields

Field	Function
15-0	INIT
INIT	The value to be used to initialize the upper half of the position counter (UPOS).

34.6.1.19 Lower Initialization Register (LINIT)


Offset

Register	Offset
LINIT	22h

Function

Contains the value to be used to initialize the lower half of the position counter (LPOS). It is a double-set register (please refer to chapter "Double-set Registers Loading Operation"). Writing this register actually writes to the out-set, and reading this register returns inner-set value which is the value that is taking effect.

Diagram

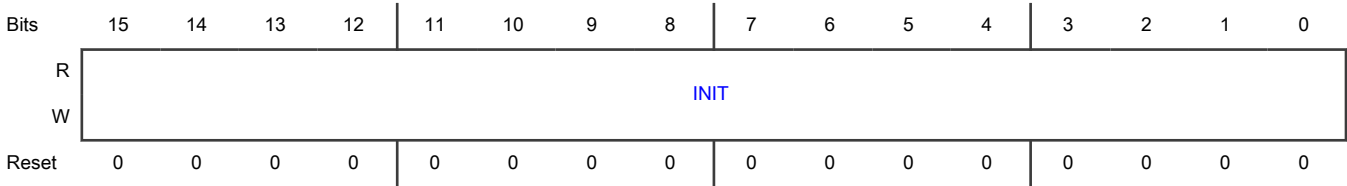

Fields

Field	Function
15-0	INIT
INIT	The value to be used to initialize the lower half of the position counter (LPOS)

34.6.1.20 Upper Modulus Register (UMOD)


Offset

Register	Offset
UMOD	24h

Function

The Upper Modulus Register contains the upper (most significant) half of the Modulus register. MOD acts as the upper bound during modulo counting, and as the upper reload value when rolling over from the lower bound. It is a double-set register (please refer to chapter "Double-set Registers Loading Operation"). Writing this register actually writes to the out-set, and reading this register returns inner-set value which is the value that is taking effect.

Diagram

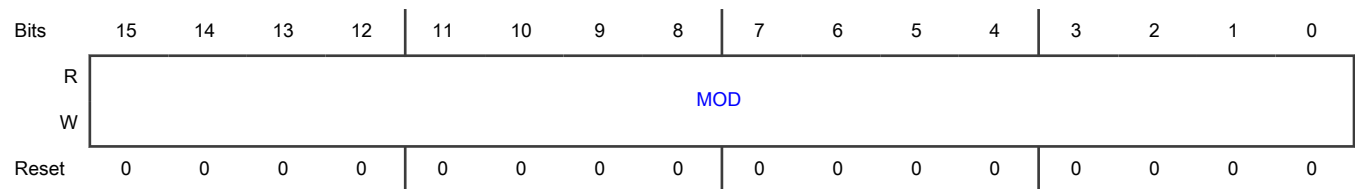

Fields

Field	Function
15-0	MOD
MOD	Upper (most significant) half of the Modulus register

34.6.1.21 Lower Modulus Register (LMOD)


Offset

Register	Offset
LMOD	26h

Function

The Lower Modulus Register contains the lower (least significant) half of the Modulus register. MOD acts as the upper bound during modulo counting, and as the upper reload value when rolling over from the lower bound. It is a double-set register (please refer to chapter "Double-set Registers Loading Operation"). Writing this register actually writes to the out-set, and reading this register returns inner-set value which is the value that is taking effect.

Diagram

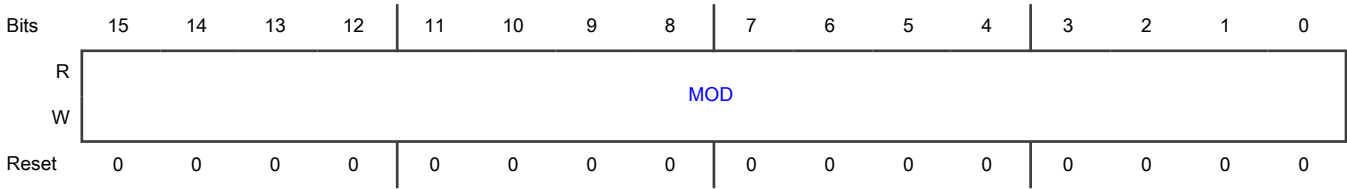

Fields

Field	Function
15-0	MOD
MOD	Lower (least significant) half of the Modulus register

34.6.1.22 Upper Position Compare Register 0 (UCOMP0)


Offset

Register	Offset
UCOMP0	28h

Function

The Upper Position Compare Register contains the upper (most significant) half of the Position Compare register 0. When the value of the Position counter (POS) matches the value of the Position Compare register 0 (COMP0), the Compare Interrupt Request flag (INTCTRL[*CMP0IRQ*]) is set and the POS_MATCH[0] output is asserted. COMP_FLG[0] is asserted when the Position Counter is equal or greater than COMP0. COMP_FLG[0] is de-asserted when the Position Counter is less than COMP0. Note: If COMP0 value equals initial value (INIT) or modulus value (MOD), COMP_FLG[0] does not take effect. It is a double-set register (please refer to chapter "Double-set Registers Loading Operation"). Writing this register actually writes to the out-set, and reading this register returns inner-set value which is the value that is taking effect.

Diagram

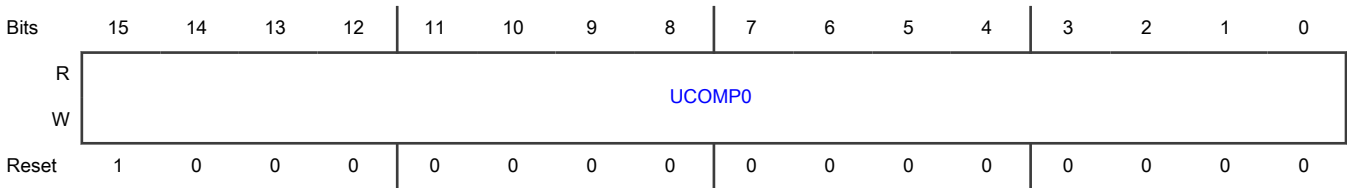

Fields

Field	Function
15-0	UCOMP0
UCOMP0	Upper (most significant) half of the Position Compare register 0

34.6.1.23 Lower Position Compare Register 0 (LCOMP0)


Offset

Register	Offset
LCOMP0	2Ah

Function

The Lower Position Compare Register contains the lower (least significant) half of the Position Compare register 0. When the value of the Position counter (POS) matches the value of the Position Compare register 0 (COMP0), the Compare Interrupt Request flag (INTCTRL[COMP0IRQ]) is set and the POS_MATCH[0] output is asserted. COMP_FLG[0] is asserted when the Position Counter is equal or greater than COMP0. COMP_FLG[0] is de-asserted when the Position Counter is less than COMP0. Note: If COMP0 value equals initial value (INIT) or modulus value (MOD), COMP_FLG[0] does not take effect. It is a double-set register (please refer to chapter "Double-set Registers Loading Operation"). Writing this register actually writes to the out-set, and reading this register returns inner-set value which is the value that is taking effect.

Diagram

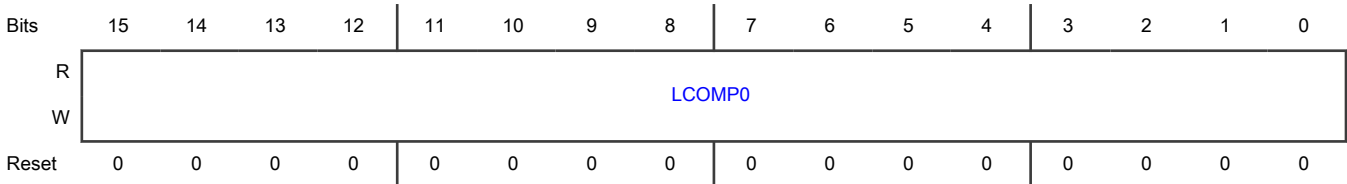

Fields

Field	Function
15-0	LCOMP0
LCOMP0	Lower (least significant) half of the Position Compare register 0

34.6.1.24 Upper Position Compare 1 (UCOMP1)


Offset

Register	Offset
UCOMP1	2Ch

Function

The Upper Position Compare Register contains the upper (most significant) half of the Position Compare register 1. When the value of the Position counter (POS) matches the value of the Position Compare register 1 (COMP1), the Compare Interrupt Request flag (INTCTRL[COMP1IRQ]) is set and the POS_MATCH[1] output is asserted. COMP_FLG[1] is asserted when the Position Counter is equal or greater than COMP1. COMP_FLG[1] is de-asserted when the Position Counter is less than COMP1. Note: If COMP1 value equals initial value (INIT) or modulus value (MOD), COMP_FLG[1] does not take effect. It is a double-set register (please refer to chapter "Double-set Registers Loading Operation"). Writing this register actually writes to the out-set.

Diagram

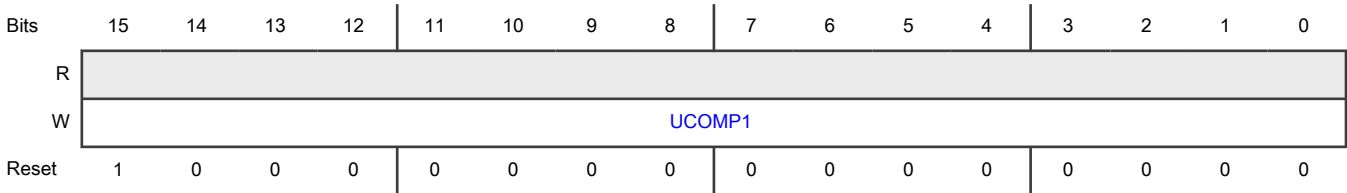

Fields

Field	Function
15-0	UCOMP1
UCOMP1	When write, it writes Upper (most significant) half of the Position Compare register 1.

34.6.1.25 Upper Position Holder Register 1 (UPOSH1)


Offset

Register	Offset
UPOSH1	2Ch

Function

UPOSH1 share the same address with UCOMP1. When read, this register means the value of the Upper Position Counter Hold Register 1 (UPOSH1), which is the upper 16 bits of POSH1. Position counter is captured into POSH1 on the rising edge of ICAP[1].

Diagram

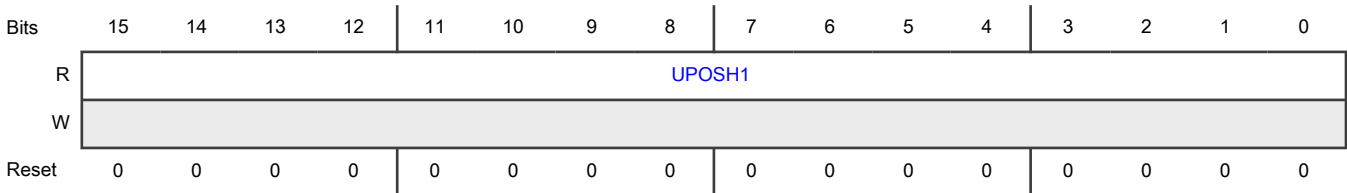

Fields

Field	Function
15-0	UPOSH1
UPOSH1	When read, it means the value of the Upper Position Hold Counter Register 1 (UPOSH1)

34.6.1.26 Lower Position Compare 1 (LCOMP1)


Offset

Register	Offset
LCOMP1	2Eh

Function

The Lower Position Compare Register contains the upper (most significant) half of the Position Compare register 1. When the value of the Position counter (POS) matches the value of the Position Compare register 1 (COMP1), the Compare Interrupt Request flag (INTCTRL[COMP1IRQ]) is set and the POS_MATCH[1] output is asserted. COMP_FLG[1] is asserted when the Position Counter is equal or greater than COMP1. COMP_FLG[1] is de-asserted when the Position Counter is less than COMP1. Note: If COMP1 value equals initial value (INIT) or modulus value (MOD), COMP_FLG[1] does not take effect. It is a double-set register (please refer to chapter "Double-set Registers Loading Operation"). Writing this register actually writes to the out-set.

Diagram

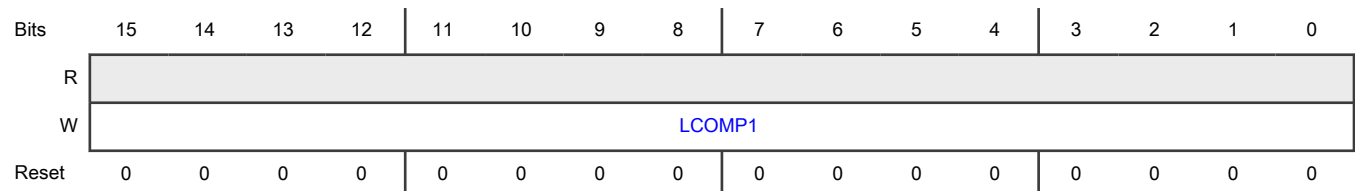

Fields

Field	Function
15-0	LCOMP1
LCOMP1	When write, it writes Lower (most significant) half of the Position Compare register 1.

34.6.1.27 Lower Position Holder Register 1 (LPOSH1)


Offset

Register	Offset
LPOSH1	2Eh

Function

LPOSH1 share the same address with LCOMP1. When read, this register means the value of the Lower Position Counter Hold Register 1 (LPOSH1), which is the lower 16 bits of POSH1. Position counter is captured into POSH1 on the rising edge of ICAP[1].

Diagram

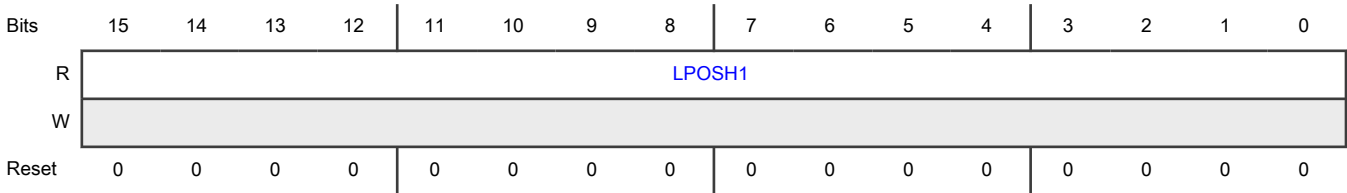

Fields

Field	Function
15-0	LPOSH1
LPOSH1	When read, it means the value of the Lower Position Counter Hold Register 1(LPOSH1)

34.6.1.28 Upper Position Compare 2 (UCOMP2)


Offset

Register	Offset
UCOMP2	30h

Function

The Upper Position Compare Register contains the upper (most significant) half of the Position Compare register 2. When the value of the Position counter (POS) matches the value of the Position Compare register 2 (COMP2), the Compare Interrupt Request flag (INTCTRL[**CMP2IRQ**]) is set and the POS_MATCH[2] output is asserted. COMP_FLG[2] is asserted when the Position Counter is equal or greater than COMP2. COMP_FLG[2] is de-asserted when the Position Counter is less than COMP2. Note: If COMP2 value equals initial value (INIT) or modulus value (MOD), COMP_FLG[2] does not take effect. It is a double-set register (please refer to chapter "Double-set Registers Loading Operation"). Writing this register actually writes to the out-set.

Diagram

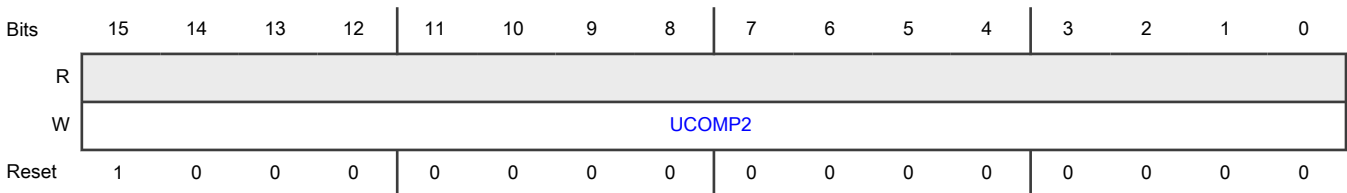

Fields

Field	Function
15-0	UCOMP2
UCOMP2	When write, it writes Upper (most significant) half of the Position Compare register 2.

34.6.1.29 Upper Position Holder Register 3 (UPOSH2)


Offset

Register	Offset
UPOSH2	30h

Function

UPOSH2 share the same address with UCOMP2. When read, this register means the value of the Upper Position Counter Hold Register 2 (UPOSH2), which is the upper 16 bits of POSH2. Position counter is captured into POSH2 on the rising edge of ICAP[2].

Diagram

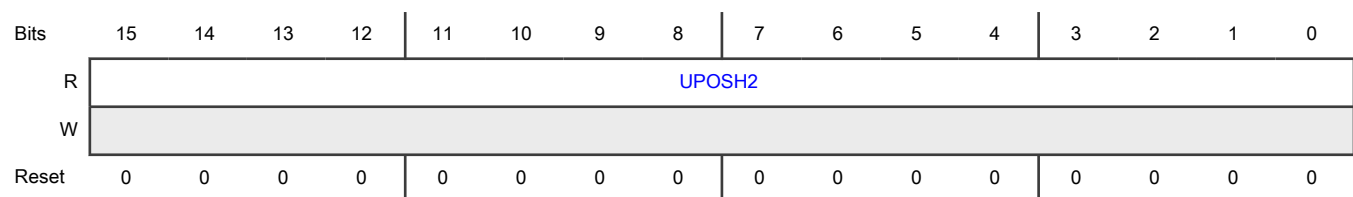

Fields

Field	Function
15-0	UPOSH2
UPOSH2	When read, it means the value of the Upper Position Counter Hold Register 2 (UPOSH2)

34.6.1.30 Lower Position Compare 2 (LCOMP2)


Offset

Register	Offset
LCOMP2	32h

Function

The Lower Position Compare Register contains the Lower (most significant) half of the Position Compare register 2. When the value of the Position counter (POS) matches the value of the Position Compare register 2 (COMP2), the Compare Interrupt Request flag (INTCTRL[COMP2IRQ]) is set and the POS_MATCH[2] output is asserted. COMP_FLG[2] is asserted when the Position Counter is equal or greater than COMP2. COMP_FLG[2] is de-asserted when the Position Counter is less than COMP2. Note: If COMP2 value equals initial value (INIT) or modulus value (MOD), COMP_FLG[2] does not take effect. It is a double-set register (please refer to chapter "Double-set Registers Loading Operation"). Writing this register actually writes to the out-set.

Diagram

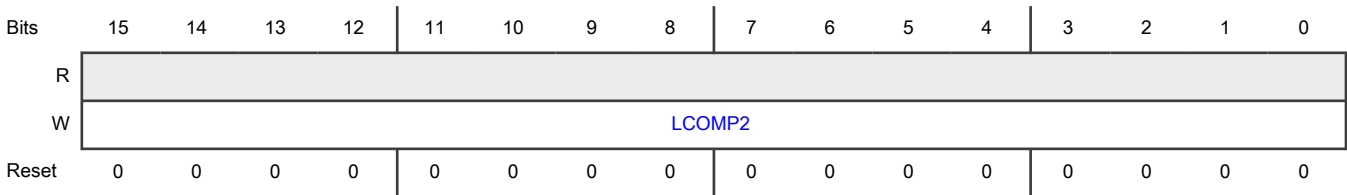

Fields

Field	Function
15-0 LCOMP2	LCOMP2 When write, it writes Lower (most significant) half of the Position Compare register 2.

34.6.1.31 Lower Position Holder Register 2 (LPOSH2)


Offset

Register	Offset
LPOSH2	32h

Function

LPOSH2 share the same address with LCOMP2.When read,this register means the value of the Lower Position Counter Hold Register 2(LPOSH2),which is the lower 16 bits of POSH2.Position counter is captured into POSH2 on the rising edge of ICAP[2].

Diagram

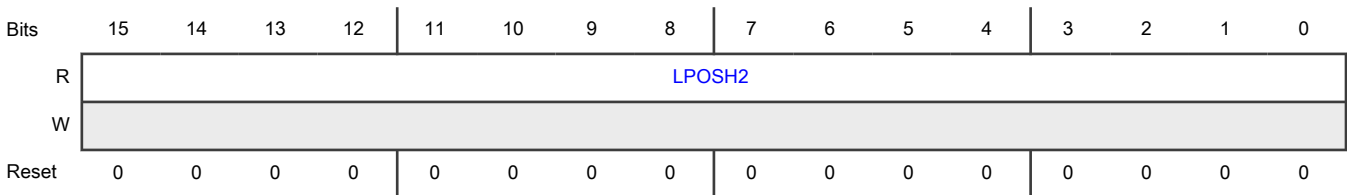

Fields

Field	Function
15-0 LPOSH2	LPOSH2 When read, it means the value of the Lower Position Counter Hold Register 2(LPOSH2)

34.6.1.32 Upper Position Compare 3 (UCOMP3)


Offset

Register	Offset
UCOMP3	34h

Function

The Upper Position Compare Register contains the upper (most significant) half of the Position Compare register 3. When the value of the Position counter (POS) matches the value of the Position Compare register 3 (COMP3), the Compare Interrupt Request flag (INTCTRL[COMP3IRQ]) is set and the POS_MATCH[3] output is asserted. COMP_FLG[3] is asserted when the Position Counter is equal or greater than COMP3. COMP_FLG[3] is de-asserted when the Position Counter is less than COMP3. Note: If COMP3 value equals initial value (INIT) or modulus value (MOD), COMP_FLG[3] does not take effect. It is a double-set register (please refer to chapter "Double-set Registers Loading Operation"). Writing this register actually writes to the out-set.

Diagram

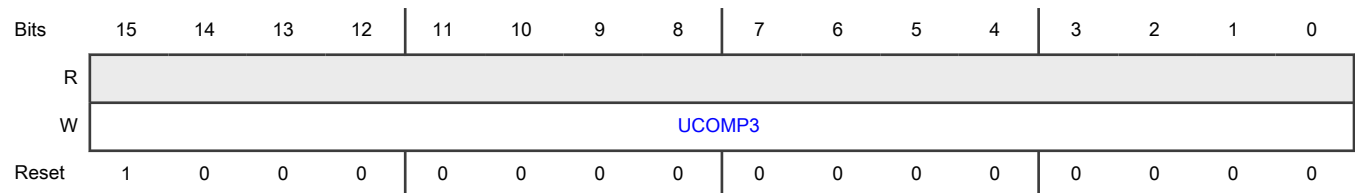

Fields

Field	Function
15-0	UCOMP3
UCOMP3	When write, it writes Upper (most significant) half of the Position Compare register 3.

34.6.1.33 Upper Position Holder Register 3 (UPOSH3)


Offset

Register	Offset
UPOSH3	34h

Function

UPOSH3 share the same address with UCOMP3. When read, this register means the value of the Upper Position Counter Hold Register 3 (UPOSH3), which is the upper 16 bits of POSH3. Position counter is captured into POSH3 on the rising edge of ICAP[3].

Diagram

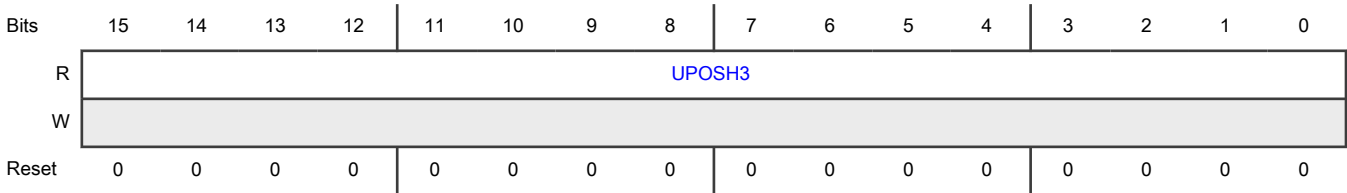

Fields

Field	Function
15-0	UPOSH3
UPOSH3	When read, it means the value of the Upper Position Counter Hold Register 3(UPOSH3)

34.6.1.34 Lower Position Compare 3 (LCOMP3)


Offset

Register	Offset
LCOMP3	36h

Function

The Lower Position Compare Register contains the Lower (most significant) half of the Position Compare register 3. When the value of the Position counter (POS) matches the value of the Position Compare register 3 (COMP3), the Compare Interrupt Request flag (INTCTRL[COMP3IRQ]) is set and the POS_MATCH[3] output is asserted. COMP_FLG[3] is asserted when the Position Counter is equal or greater than COMP3. COMP_FLG[3] is de-asserted when the Position Counter is less than COMP3. Note: If COMP3 value equals initial value (INIT) or modulus value (MOD), COMP_FLG[3] does not take effect. It is a double-set register (please refer to chapter "Double-set Registers Loading Operation"). Writing this register actually writes to the out-set.

Diagram

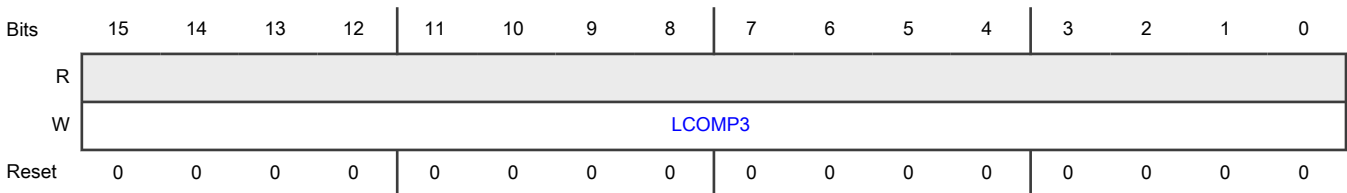

Fields

Field	Function
15-0	LCOMP3
LCOMP3	When write, it writes Lower (most significant) half of the Position Compare register 3.

34.6.1.35 Lower Position Holder Register 3 (LPOSH3)


Offset

Register	Offset
LPOSH3	36h

Function

When read,this register means the value of the Lower Position Counter Register 3(LPOS)

Diagram

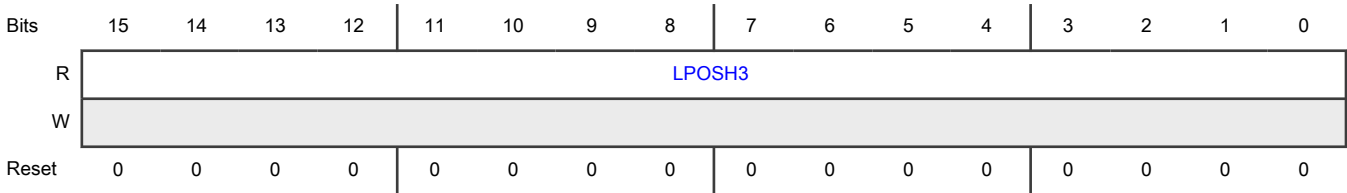

Fields

Field	Function
15-0	LPOSH3
LPOSH3	LPOSH3 share the same address with LCOMP3.When read,it means the value of the Lower Position Counter Register 3(LPOS3),which is the lower 16 bits of POSH3.Position counter is captured into POSH3 on the rising edge of ICAP[3].

34.6.1.36 Interrupt Control Register (INTCTRL)

Offset

Register	Offset
INTCTRL	38h

Diagram

Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	CMP3I RQ	CMP3I E	CMP2I RQ	CMP2I E	CMP1I RQ	CMP1I E	CMP0I RQ	CMP0I E	ROIR Q	ROIE	RUIR Q	RUIE	DIRIR Q	DIRIE	SABIR Q	SABIE
W	W1C		W1C		W1C		W1C		W1C		W1C		W1C		W1C	
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
15 CMP3IRQ	Compare3 Interrupt Request Compare3 Interrupt Request is set when the position counter matches the COMP3 value. - Compare3 Interrupt Request remains set until cleared by software - Write 1 to this bit (CMP3IRQ) to clear it 0b - No match has occurred (the position counter does not match the COMP3 value) 1b - COMP3 match has occurred (the position counter matches the COMP3 value)
14 CMP3IE	Compare3 Interrupt Enable Enables/disables compare3 interrupt. 0b - Disabled 1b - Enabled
13 CMP2IRQ	Compare2 Interrupt Request Compare2 Interrupt Request is set when the position counter matches the COMP2 value. - Compare2 Interrupt Request remains set until cleared by software - Write 1 to this bit (CMP2IRQ) to clear it 0b - No match has occurred (the position counter does not match the COMP2 value) 1b - COMP2 match has occurred (the position counter matches the COMP2 value)
12 CMP2IE	Compare2 Interrupt Enable Enables/disables compare2 interrupts. 0b - Disabled 1b - Enabled
11 CMP1IRQ	Compare1 Interrupt Request Compare1 Interrupt Request is set when the position counter matches the COMP1 value. - Compare Interrupt Request remains set until cleared by software - Write 1 to this bit (CMP1IRQ) to clear it 0b - No match has occurred (the position counter does not match the COMP1 value) 1b - COMP1 match has occurred (the position counter matches the COMP1 value)

Table continues on the next page...

Table continued from the previous page...

Field	Function
10 CMP1IE	Compare1 Interrupt Enable Enables/disables compare1 interrupt. 0b - Disabled 1b - Enabled
9 CMP0IRQ	Compare 0 Interrupt Request Compare 0 Interrupt Request is set when the position counter matches the COMP0 value. - Compare Interrupt Request remains set until cleared by software - Write 1 to this bit (CMP0IRQ) to clear it 0b - No match has occurred (the position counter does not match the COMP0 value) 1b - COMP match has occurred (the position counter matches the COMP0 value)
8 CMP0IE	Compare 0 Interrupt Enable Enables/disables compare 0 interrupts. 0b - Disabled 1b - Enabled
7 ROIRQ	Roll-over Interrupt Request Roll-over Interrupt Request bit is set (=1) when the position counter (POS) value is greater than the modulus value, which means roll-over. - Roll-over Interrupt Request remains set until cleared by software - Write a one to this bit (ROIRQ) to clear it 0b - No roll-over has occurred 1b - Roll-over has occurred
6 ROIE	Roll-over Interrupt Enable Roll-over Interrupt Enable read/write bit enables roll-over interrupts, based on Roll-under Interrupt Request (INTCTRL[ROIRQ]) being set. 0b - Disabled 1b - Enabled
5 RUIRQ	Roll-under Interrupt Request Roll-under Interrupt Request bit is set (=1) when the position counter (POS) value less than initial value, which means roll-under - Roll-under Interrupt Request remains set until cleared by software - Write a one to this bit (RUIRQ) to clear it 0b - No roll-under has occurred 1b - Roll-under has occurred

Table continues on the next page...

Table continued from the previous page...

Field	Function
4 RUIE	Roll-under Interrupt Enable Roll-under Interrupt Enable read/write bit enables roll-under interrupts, based on the Roll-over Interrupt Request bit (INTCTRL[RUIRQ]) being set. 0b - Disabled 1b - Enabled
3 DIRIRQ	Count direction change interrupt Count direction change interrupt bit is set(=1) when POS/POSD/REV counter count direction changes, which means IMR[DIR] changes from 0 to 1 or from 1 to 0 0b - Count direction unchanged 1b - Count direction changed
2 DIRIE	Count direction change interrupt enable Count direction change interrupt enable interrupt 0b - Disabled 1b - Enabled
1 SABIRQ	Simultaneous PHASEA and PHASEB Change Interrupt Request Simultaneous PHASEA and PHASEB Change Interrupt Request indicates that the PHASEA and PHASEB inputs changed simultaneously (within a single clock period). This event typically indicates an error condition, because quadrature coding requires only one of these inputs to change at a time. • Simultaneous PHASEA and PHASEB Change Interrupt Request bit remains set until it is cleared by software or a reset • Write 1 to this bit (SABIRQ) to clear it 0b - No simultaneous change of PHASEA and PHASEB has occurred 1b - A simultaneous change of PHASEA and PHASEB has occurred
0 SABIE	Simultaneous PHASEA and PHASEB Change Interrupt Enable Simultaneous PHASEA and PHASEB Change Interrupt Enable bit enables simultaneous PHASEA and PHASEB change interrupts, based on the Simultaneous PHASEA and PHASEB Change Interrupt Request (SABIRQ) bit being set. 0b - Disabled 1b - Enabled

34.6.1.37 Watchdog Timeout Register (WTR)


Offset

Register	Offset
WTR	3Ah

Function

The Watchdog Timeout Register stores the timeout count for the quadrature decoder module watchdog timer. This quadrature decoder module watchdog timer is separate from any other watchdog timer(s) that may also be in the device.

Diagram

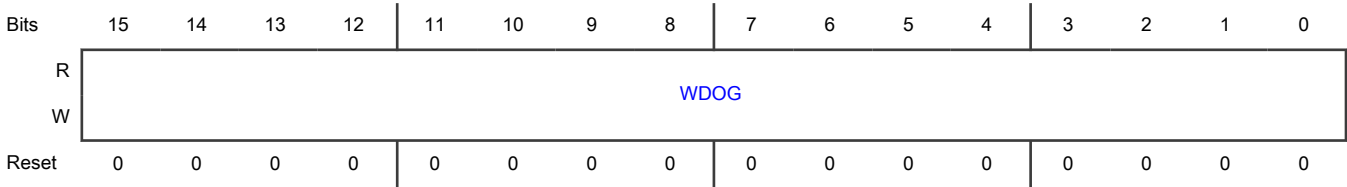

Fields

Field	Function
15-0	WDOG
WDOG	WDOG[15:0] is a binary representation of the number of clock cycles, using the peripheral clock prescaled by FILT[PRSC], 0xFFFF plus one count in this register determines the timing out period.

34.6.1.38 Input Monitor Register (IMR)

Offset

Register	Offset
IMR	3Ch

Function

The Input Monitor Register contains the values of the raw and filtered PHASEA, PHASEB, INDEX/PRESET and HOME/ENABLE input signals. The reset value depends on the values of the raw and filtered values of PHASEA, PHASEB, INDEX/PRESET and HOME/ENABLE input signals:

- The Input Monitor Register [3:0] contains the values of the raw value of PHASEA, PHASEB, INDEX/PRESET and HOME/ENABLE input signals.
- The Input Monitor Register [7:4] contains the values of the filtered value of PHASEA, PHASEB, INDEX/PRESET and HOME/ENABLE input signals.
- The Input Monitor Register [7:4] supply filter bypass function for PHASEA, PHASEB, INDEX/PRESET and HOME/ENABLE input signals.
- The Input Monitor Register [11:8] contains the values of the 4 POS counter CMPs flag.
- The Input Monitor Register [15:14] contains the values of the count direction flag and count direction flag hold.
- If no pull-up or pull-down is connected to PHASEA, PHASEB, INDEX/PRESET and HOME/ENABLE input signals, then the reset value of the 4 lower bits of the Input Monitor Register (IMR) are all unknown.

Diagram

Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	DIR	DIRH	0		CMP3 F	CMP2 F	CMP1 F	CMPF 0	FPHA	FPHB	FIND_ PRE	FHOM _ENA	PHA	PHB	INDEX _P...	HOME _EN...
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
15 DIR	Count Direction Flag Output The Count Direction Flag indicates the direction of the current count. 0b - Current count was in the down direction 1b - Current count was in the up direction
14 DIRH	Count Direction Flag Hold DIRH contains a snapshot of the DIR when initializing POS
13-12 —	Reserved
11 CMP3F	Position Compare3 Flag Output Flag of compare3 0b - When the position counter value is less than value of COMP3 register 1b - When the position counter is greater or equal than value of COMP3 register
10 CMP2F	Position Compare2 Flag Output Flag of compare2 0b - When the position counter is less than value of COMP2 register 1b - When the position counter is greater or equal than value of COMP2 register
9 CMP1F	Position Compare1 Flag Output Flag of compare1 0b - When the position counter is less than value of COMP1 register 1b - When the position counter is greater or equal than value of COMP1 register
8 CMPF0	Position Compare 0 Flag Output Flag of compare 0 0b - When the position counter is less than value of COMP0 register 1b - When the position counter is greater or equal than value of COMP0 register
7	filter operation on PHASEA input

Table continues on the next page...

Table continued from the previous page...

Field	Function
FPHA	When write 1, it means filter for PHASEA input is bypassed When read, it shows filtered version of PHASEA input
6 FPHB	filter operation on PHASEB input When write 1, it means filter for PHASEB input is bypassed When read, it shows filtered version of PHASEB input
5 FIND_PRE	filter operation on INDEX/PRESET input When write 1, it means filter for INDEX/PRESET input is bypassed When read, it shows filtered version of INDEX/PRESET input
4 FHOME_ENA	filter operation on HOME/ENABLE input When write 1, it means filter for HOME/ENABLE input is bypassed When read, it shows filtered version of HOME/ENABLE input
3 PHA	PHA Raw PHASEA input
2 PHB	PHB Raw PHASEB input
1 INDEX_PRESET	INDEX_PRESET Raw INDEX/PRESET input
0 HOME_ENABLE	HOME_ENABLE The raw HOME/ENABLE input

34.6.1.39 Test Register (TST)

Offset

Register	Offset
TST	3Eh

Function


The Test Register controls and sets the frequency of a quadrature signal generator; it provides a quadrature test signal to the inputs of the quadrature decoder module.

- The TEST_COUNT value is counted down to zero when the test module is enabled (TEN = 1) and the counter is enabled (TCE = 1).

- Each count value of one represents a single quadrature cycle interpreted as a count of one by the position counter (UPOS and LPOS) if it is enabled (TEN = 1, TCE = 1).
- Repeated writing of new values to TEST_COUNT can cause an extra phase transition and therefore an extra count by the Position Counter.
- The period field determines the length (in IP Bus clock cycles) of each quadrature cycle phase.

The Test Register is a factory test feature; however, it can also be useful in customer software development and testing.

Diagram

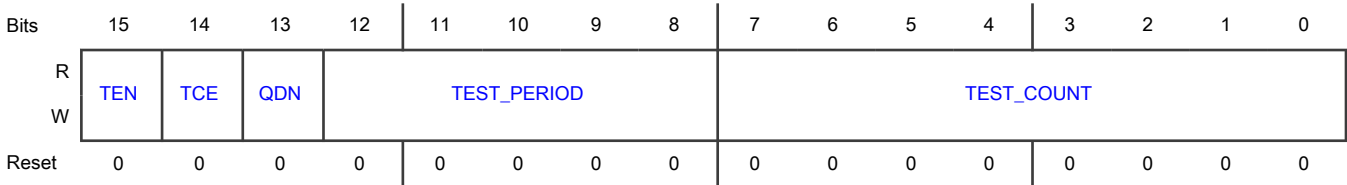

Fields

Field	Function
15 TEN	Test Mode Enable Connects the test module to inputs of the quadrature decoder module. 0b - Disabled 1b - Enabled
14 TCE	Test Counter Enable Connects the test counter to inputs of the quadrature decoder module. 0b - Disabled 1b - Enabled
13 QDN	Quadrature Decoder Negative Signal Selects whether a negative or positive Quadrature Decoder signal is generated. 0b - Generates a positive quadrature decoder signal 1b - Generates a negative quadrature decoder signal
12-8 TEST_PERIOD	TEST_PERIOD Period of quadrature phase in IP Bus clock cycles
7-0 TEST_COUNT	TEST_COUNT The number of quadrature advances to generate

34.6.1.40 Upper VERID (UVERID)


Offset

Register	Offset
UVERID	50h

Function

Version ID Upper part

Diagram

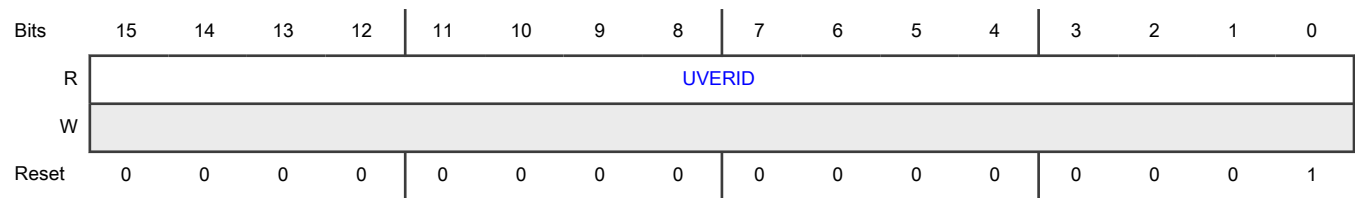

Fields

Field	Function
15-0 UVERID	UVERID Upper (most significant) half of the VERID

34.6.1.41 Lower VERID (LVERID)


Offset

Register	Offset
LVERID	52h

Function

Version ID Lower part

Diagram

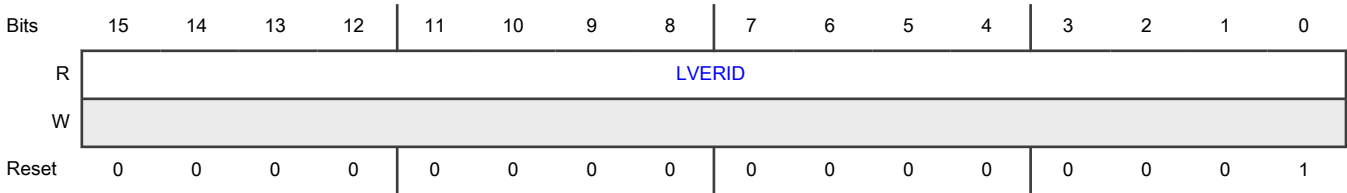

Fields

Field	Function
15-0	LVERID
LVERID	Lower (most significant) half of the VERID

Chapter 35

Frequency Measurement (FREQME)

35.1 Chip-specific Frequency Measurement information

Table 204. Reference links to related information

Topic	Related module	Reference
Full description	FREQME	Frequency Measurement
System memory map		Memory map
Clocking		Clock distribution
Power Management		Power Management
Signal multiplexing	Port control	Signal multiplexing
Peripheral Input Mux	INPUTMUX	Peripheral Input multiplexing

35.1.1 Module instances

This device has one instance of the Frequency Measurement module.

35.1.2 Input clock sources

Following are the input clocks for frequency measurement circuit:

- 0 Reserved
- 1 clk_in
- 2 FRO12M
- 3 fro_hf_div
- 4 Reserved
- 5 clk_16k[1]
- 6 SLOW_CLK
- 7 FREQME_CLK_IN0
- 8 FREQME_CLK_IN1
- 9 AOIO_OUT0
- 10 AOIO_OUT1
- 11 PWM0_SM0_MUX_TRIG0
- 12 PWM0_SM0_MUX_TRIG1
- 13 PWM0_SM1_MUX_TRIG0
- 14 PWM0_SM1_MUX_TRIG1
- 15 PWM0_SM2_MUX_TRIG0
- 16 PWM0_SM2_MUX_TRIG1
- 17 PWM0_SM3_MUX_TRIG0
- 18 PWM0_SM3_MUX_TRIG1

- 32 AOI1_OUT0
- 33 AOI1_OUT1
- 34 PWM1_SM0_MUX_TRIG0
- 35 PWM1_SM0_MUX_TRIG1
- 36 PWM1_SM1_MUX_TRIG0
- 37 PWM1_SM1_MUX_TRIG1
- 38 PWM1_SM2_MUX_TRIG0
- 39 PWM1_SM2_MUX_TRIG1
- 40 PWM1_SM3_MUX_TRIG0
- 41 PWM1_SM3_MUX_TRIG1

For details, see the FREQMEAS_REF and FREQMEAS_TAR registers in [Peripheral Input multiplexing](#) chapter.

35.2 Overview

FREQME accurately measures the frequency of an on- or off-chip target clock signal using a selectable on-chip reference clock. For example, it can accurately determine the frequency of a low-power oscillator that varies depending on process and temperature.

35.2.1 Block diagram

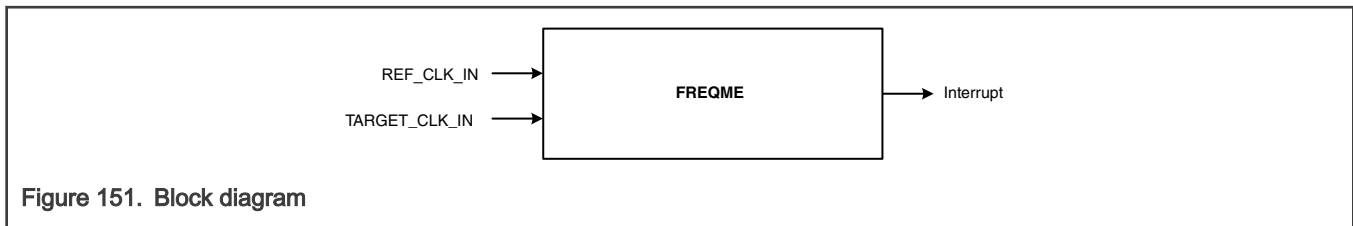


Figure 151. Block diagram

See the chip-specific FREQME information for the target and reference clock selection options.

35.2.2 Features

- High-accuracy Frequency Measurement mode for on- and off-chip clocks
- Pulse Width Measurement (PWM) mode
- Reference and target clock inputs selectable from among various chip-specific options
- Optional measurement complete interrupt
- Result out-of-range detection with optional interrupt

35.3 Functional description

The following sections describe FREQME functional details.

35.3.1 Frequency Measurement mode

In Frequency Measurement mode ([CTL_W\[PULSE_MODE\]](#) = 0), FREQME counts the number of target clock cycles that occur during a specified number of cycles from a reference clock that has a known frequency. You can then calculate the target clock frequency based on the frequency of the reference clock, the number of reference clock cycles, and the number of target clock cycles (see [Equation 16](#)).

The frequency measurement circuit is based on two 31-bit counters—one clocked by the selected reference clock and one by the selected target clock. You can only read the target clock counter. FREQME synchronizes the clocks at the start and end of

each count sequence during preparation for the next count sequence. A count sequence consists of incrementing the target clock counter for each target clock pulse that occurs during the time defined by $2^{\text{CTRL\_W[REF\_SCALE]}}$ periods of the reference clock.

After selecting reference and target clocks, you initiate a measurement cycle by writing 1 to [CTRL_W\[MEASURE_IN_PROGRESS\]](#). You can then poll this same field, which automatically transitions to 0 when the measurement operation completes. Alternatively, the completion of the measurement operation can generate an interrupt.

The measurement cycle terminates when the reference counter equals the value $2^{\text{CTRLSTAT[REFSCALE]}}$. If $\text{CTRLSTAT[REFSCALE]} = 0$, the reference counter counts to one and stops. You can use this feature to measure the frequency of a fast target clock using a slow reference clock such as the 32 kHz clock without taking much time for the measurement to complete. The penalty is reduced accuracy in the measurement.

When the counting operation completes, the state of the target counter is loaded into [CTRL_R\[RESULT\]](#), and the [CTRL_W\[MEASURE_IN_PROGRESS\]](#) field is 0. You can then read the value and calculate the target frequency as follows, with the frequencies given in MHz.

$$F_{\text{target}} = (\text{CTRL\_R[RESULT]} - 2) \times F_{\text{reference}} \div 2^{\text{CTRLSTAT[REFSCALE]}}$$

Equation 16. Calculating the target clock frequency

35.3.1.1 Accuracy

The Frequency Measurement mode can measure the frequency of any on-chip (or off-chip) clock (referred to as the target clock) with a high degree of accuracy by using an on-chip clock of known frequency as a reference clock.

Uncertainty in the reference clock (for example a $\pm 1\%$ accuracy of the clock) adds to the measurement error of the target clock. In general, though, this additional error is less than the uncertainty of the reference clock.

35.3.2 Pulse Measurement mode

When you write 1 to [CTRL_W\[PULSE_MODE\]](#) and write 1 to [CTRL_W\[MEASURE_IN_PROGRESS\]](#) to start a measurement cycle, FREQME counts target clock pulses while the reference clock is in a specific state (high or low), selected by writing to [CTRL_W\[PULSE_POL\]](#). See the description of these fields for more details.

35.3.3 Clocking

The clock inputs are as follows:

- Reference clock (REF_CLK_IN). This clock has a known frequency.
- Target clock (TARGET_CLK_IN). This clock frequency can be calculated based on the reference clock.
- Peripheral clock used for register access (PCLK). This clock is used to write and read memory-mapped registers of this module.

NOTE

These clocks can be all synchronous.

See the chip-specific FREQME information for the target and reference clock selection options.

35.3.4 Interrupts

The following interrupts can optionally be generated at the completion of a frequency measurement cycle.

Table 205. Interrupts

Condition	Interrupt enable field	Interrupt status field
Result is ready to read	CTRL_W[RESULT_READY_INT_EN]	CTRLSTAT[RESULT_READY_INT_EN]

Table continues on the next page...

Table 205. Interrupts (continued)

Condition	Interrupt enable field	Interrupt status field
Result is greater than MAX[MAX_VALUE]	CTRL_W[GT_MAX_INT_EN]	CTRLSTAT[GT_MAX_INT_EN]
Result is less than MIN[MIN_VALUE]	CTRL_W[LT_MIN_INT_EN]	CTRLSTAT[LT_MIN_INT_EN]

35.4 External signals

Table 206. External signals

Signal	Description	Direction
REF_CLK_IN	Reference clock. On-chip clock with known frequency chosen as reference.	Input
TARGET_CLK_IN	Target clock. On- or off-chip clock to be measured by FREQME.	Input

35.5 Initialization

Initialize FREQME by performing the following steps:

1. Enable the clock that drives FREQME in the chip-level clock control register. This step enables the register interface and the peripheral function clock.
2. Clear the FREQME peripheral reset in the chip-level reset control register.
3. If measuring an external clock, use the Input/Output pin configuration registers to connect the FREQME target clock input (TARGET_CLK_IN) to an external pin.
4. Ensure that the reference and target clocks are enabled.
5. Select the reference and target clocks.

35.6 Memory map and register definition

This section includes the FREQME memory map and detailed descriptions of all registers.

35.6.1 FREQME register descriptions

35.6.1.1 FREQME memory map

FREQME0 base address: 4000_9000h

Offset	Register	Width (In bits)	Access	Reset value
0h	Control (in Read mode) (CTRL_R)	32	R	0000_0000h
0h	Control (in Write mode) (CTRL_W)	32	W	0000_0000h
4h	Control Status (CTRLSTAT)	32	RW	0000_0000h
8h	Minimum (MIN)	32	RW	0000_0000h
Ch	Maximum (MAX)	32	RW	7FFF_FFFFh

35.6.1.2 Control (in Read mode) (CTRL_R)


Offset

Register	Offset
CTRL_R	0h

Function

Contains different fields depending on whether you are performing a read or a write. Reading this register provides the measurement results and the status of the measurement cycle.

Diagram

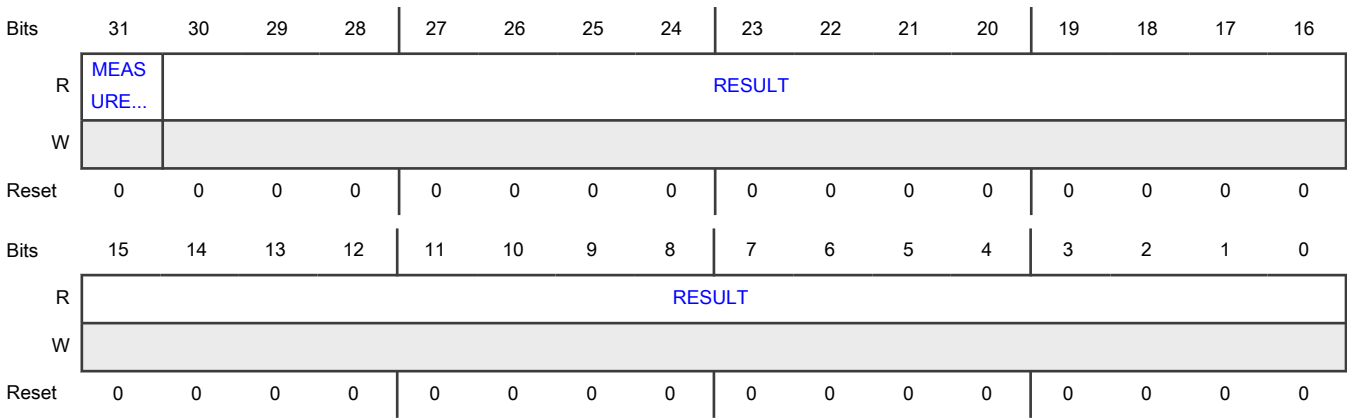

Fields

Field	Function
31 MEASURE_IN_PROGRESS	Measurement In Progress Indicates whether measurement is in progress or complete. If complete, you can read the result from RESULT . 0b - Complete 1b - In progress
30-0 RESULT	Indicates the measurement result—either the target clock counter value (for Frequency Measurement mode) or pulse width measurement (for Pulse Width Measurement mode). This field is valid only when MEASURE_IN_PROGRESS = 0, In Continuous mode (CTRL_W[CONTINUOUS_MODE_EN] = 1), the value is the result from the most-recently completed measurement.

35.6.1.3 Control (in Write mode) (CTRL_W)

Offset

Register	Offset
CTRL_W	0h

Function

Writes to this register control and configure the measurement cycle.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R																
W	MEASURE_IN_PROGRESS	CONTINUOUS_MODE_EN														
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R																
W	0	RESULT_LT_VALID	GT_MAX_STAT	LT_MIN_STAT	0		PULSE_E_P	PULSE_E_M								
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31 MEASURE_IN_PROGRESS	Measurement In Progress Initiates a frequency measurement cycle or terminates a measurement cycle that is in progress. Writing 1 to this field initiates a frequency or pulse width measurement process. Hardware automatically writes 0 to the MEASURE_IN_PROGRESS field when the measurement cycle completes. If there is an active measurement in progress, a new measurement starts. Writing 0 to this field forces the termination of any measurement cycle currently in progress and resets CTRL_R[RESULT] or just resets CTRL_R[RESULT] if idle. 0b - Terminates measurement 1b - Initiates measurement
30 CONTINUOUS_MODE_EN	Continuous Mode Enable When you write 1 to both MEASURE_IN_PROGRESS and this field, measurement is performed continuously. The result for the most-recently completed measurement is available in CTRL_R[RESULT]. When the result is out of range (that is, CTRLSTAT[GT_MAX_STAT] = 1 or CTRLSTAT[LT_MIN_STAT] = 1), this field automatically transitions to 0 and the continuous measurement is suspended. After clearing both status bits, you must write 1 to both MEASURE_IN_PROGRESS and this field restart measurement in continuous mode.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - Disable 1b - Enable
29-15 —	Reserved
14 RESULT_READY_INT_EN	Result Ready Interrupt Enable Generates interrupt when a measurement completes and the result is ready (CTRLSTAT[RESULT_READY_STAT] = 1). 0b - Disable 1b - Enable
13 GT_MAX_INT_EN	Greater Than Maximum Interrupt Enable Generates an interrupt when the result is greater than MAX[MAX_VALUE] (CTRLSTAT[GT_MAX_STAT] = 1). 0b - Disable 1b - Enable
12 LT_MIN_INT_EN	Less Than Minimum Interrupt Enable Generates an interrupt when the result is less than MIN[MIN_VALUE] (CTRLSTAT[LT_MIN_STAT] = 1). 0b - Disable 1b - Enable
11-10 —	Reserved
9 PULSE_POL	Pulse Polarity Specifies whether a pulse width (high period or low period) of the reference clock is measured in the Pulse Width Measurement mode. NOTE PULSE_POL is valid only in the Pulse Width Measurement mode. • A high period measurement is triggered by the rising edge on the reference clock input. • A low period measurement is triggered by the falling edge on the reference clock input. 0b - High period 1b - Low period
8 PULSE_MODE	Pulse Width Measurement Mode Select Selects the measurement mode—either Frequency Measurement mode or Pulse Width Measurement mode.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	In Frequency Measurement mode, measurement begins at the rising edge of the selected reference clock and continues until a count of $2^{\text{REF\_SCALE}}$ reference clock pulses is reached. In Pulse Width Measurement mode, the counter starts incrementing when the selected trigger edge (rising edge for high period measurement or falling edge for low period) occurs, and stops at the next edge (falling edge for a high period measurement or rising edge for a low period measurement). Select high or low period measurement by writing the desired value to PULSE_POL. 0b - Frequency Measurement mode 1b - Pulse Width Measurement mode
7-5 —	Reserved
4-0 REF_SCALE	Reference Clock Scaling Factor Specifies the reference clock scaling factor in Frequency Measurement mode. The reference count cycle is $2^{\text{REF\_SCALE}}$. A higher number provides better accuracy but consumes more processing time. This field is valid only in Frequency Measurement mode.

35.6.1.4 Control Status (CTRLSTAT)

Offset

Register	Offset
CTRLSTAT	4h

Function

Contains the current CTRL_W register configuration fields.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	MEAS	CONTI				RESU	GT_M	LT_MI					0			
	URE...	NU...				LT_...	AX_...	N_...								
W						W1C	W1C	W1C								
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0	RESU	GT_M	LT_MI			PULS	PULS					0			REF_SCALE
		LT_...	AX_...	N_...			E_P...	E_M...								
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31 MEASURE_IN_PROGRESS	Measurement in Progress Status Indicates the current CTRL_W[MEASURE_IN_PROGRESS] value. 0b - Not in progress 1b - In progress
30 CONTINUOUS_MODE_EN	Continuous Mode Enable Status Indicates the current CTRL_W[CONTINUOUS_MODE_EN] value. 0b - Disabled 1b - Enabled
29-27 —	Reserved
26 RESULT_READY_STAT	Result Ready Status Indicates that a measurement is complete and CTRL_R[RESULT] is ready to read. Write 1 to this field to clear. 0b - Not complete 1b - Complete
25 GT_MAX_STAT	Greater Than Maximum Result Status Indicates that a measurement is complete and the result is greater than the maximum expected value (CTRL_R[RESULT] > MAX[MAX_VALUE]). Write 1 to this field to clear. 0b - Less than MAX[MAX_VALUE] 1b - Greater than MAX[MAX_VALUE]
24 LT_MIN_STAT	Less Than Minimum Results Status Indicates that a measurement is complete and the result is less than the minimum expected value (CTRL_R[RESULT] < MIN[MIN_VALUE]). Write 1 to this field to clear. 0b - Greater than MIN[MIN_VALUE] 1b - Less than MIN[MIN_VALUE]
23-15 —	Reserved
14 RESULT_READY_INT_EN	Result Ready Interrupt Enable Indicates the current CTRL_W[RESULT_READY_INT_EN] value. 0b - Disabled 1b - Enabled
13	Greater Than Maximum Interrupt Enable

Table continues on the next page...

Table continued from the previous page...

Field	Function
GT_MAX_INT_EN	Indicates the current CTRL_W[GT_MAX_INT_EN] value. 0b - Disabled 1b - Enabled
12 LT_MIN_INT_EN	Less Than Minimum Interrupt Enable Indicates the current CTRL_W[LT_MIN_INT_EN] value. 0b - Disabled 1b - Enabled
11-10 —	Reserved
9 PULSE_POL	Pulse Polarity Indicates the current CTRL_W[PULSE_POL] value. 0b - High period 1b - Low period
8 PULSE_MODE	Pulse Mode Indicates the current CTRL_W[PULSE_MODE] value. 0b - Frequency Measurement mode 1b - Pulse Width Measurement mode
7-5 —	Reserved
4-0 REF_SCALE	Reference Scale Indicates the current CTRL_W[REF_SCALE] value.

35.6.1.5 Minimum (MIN)


Offset

Register	Offset
MIN	8h

Function

Specifies the minimum expected value for the measurement result.

Diagram

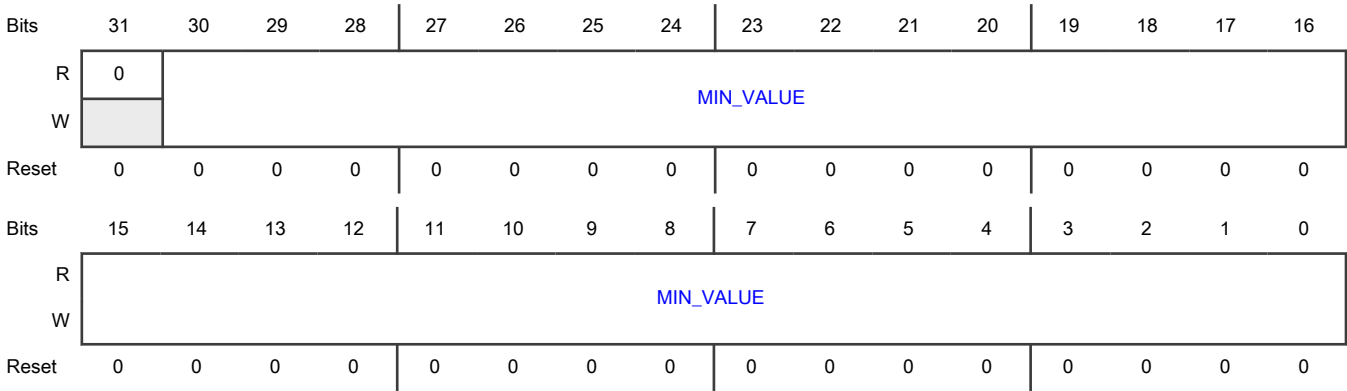

Fields

Field	Function
31 —	Reserved
30-0 MIN_VALUE	Minimum Value Minimum expected value for the measurement result.

35.6.1.6 Maximum (MAX)


Offset

Register	Offset
MAX	Ch

Function

Specifies the maximum expected value for the measurement result.

Diagram

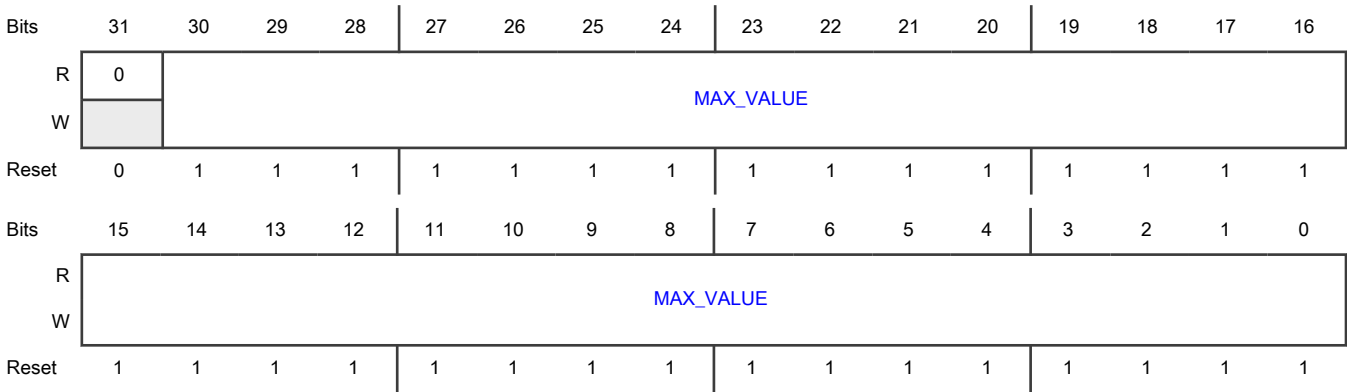

Fields

Field	Function
31 —	Reserved
30-0 MAX_VALUE	Maximum Value Maximum expected value for the measurement result.

Chapter 36

Low-power Timer (LPTMR)

36.1 Chip-specific LPTMR information

Table 207. Reference links to related information

Topic	Related module	Reference
Full description	LPTMR	LPTMR
System memory map		Memory map
Clocking		Clock distribution
Power Management		Power Management
Signal multiplexing	Port control	Signal multiplexing

36.1.1 Module instances

This device has one instance of the LPTMR module, LPTMR0.

36.1.2 LPTMR clocks

The prescaler and glitch filter of the LPTMR module (the module functional clock) can be clocked from one of four sources determined by LPTMRx_PSR[PCS]. The following table shows the clock assignments for this field.

NOTE

The chosen clock must remain enabled if the LPTMR is to continue operating in all required low-power modes.

The LPTMR allows the maximum clock frequency of 25 MHz.

Table 208. LPTMRn prescaler/glitch filter clocking options

LPTMRn_PSR[PCS]	Prescaler/glitch filter clock number	Chip clock
00	0	Reserved.
01	1	FRO_16K
10	2	Reserved
11	3	Combination of clocks configured in MRCC_LPTMR0_CLKSEL[MUX] field in SYSCON module. The Clock frequency must be less than 25 MHz to be used as a clock for the Low Power Timers. See Figure 56

36.1.3 LPTMR pulse counter input options

LPTMRn_CSR[TPS] configures the input source used in pulse counter mode. The following table shows the input assignments for this field.

Table 209. LPTMRn (n=0,1) pulse counter input options

LPTMRn_CSR[TPS]	Pulse counter input number	Chip input
00	0	CMP0_OUT
01	1	CMP1_OUT
10	2	LPTMRn_Alt2
11	3	LPTMRn_Alt3

36.1.4 LPTMR Reset

LPTMR is reset only on POR.

36.2 Overview

You can configure LPTMR to operate as a time counter with an optional prescaler, or as a pulse counter with an optional glitch filter, across all power modes, including low-power modes. It is reset only on POR only or Cold Reset which would include LVD/HVD sources., allowing it to be used as a time-of-day counter.

36.2.1 Block diagram

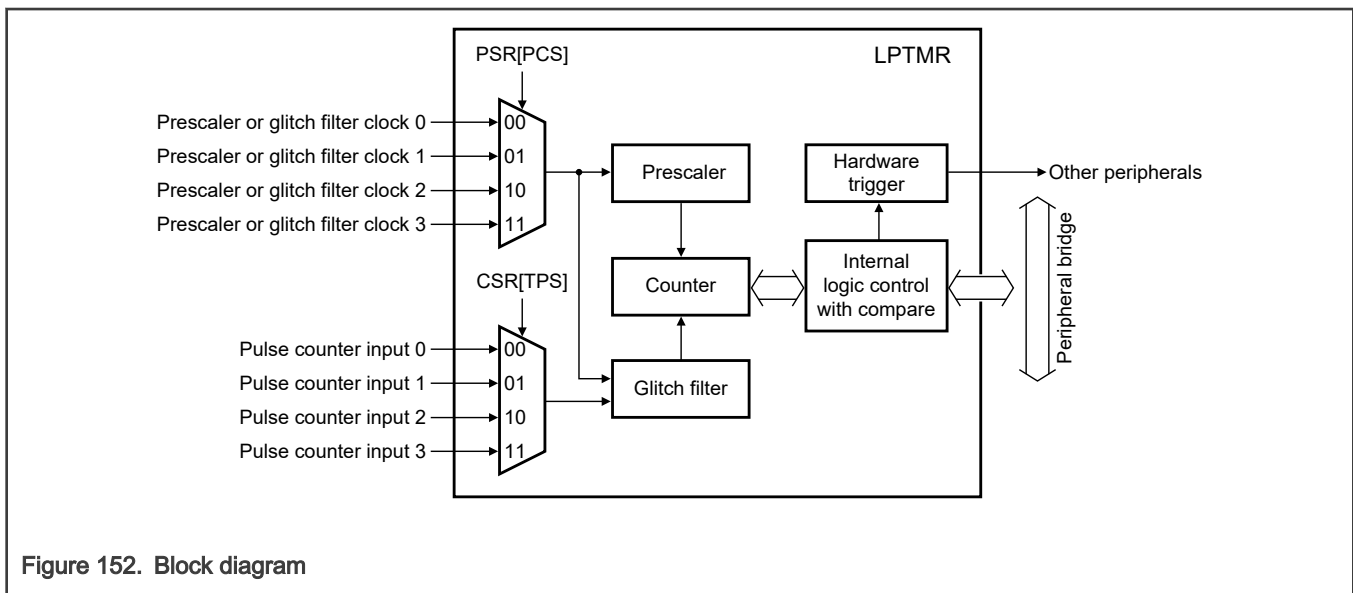


Figure 152. Block diagram

36.2.2 Features

- 32-bit time counter or pulse counter with compare:
 - Optional interrupt that can generate an asynchronous wake-up from any low-power mode
 - Hardware trigger output
 - Counter that supports a free-running mode or reset on compare
- Configurable clock source for prescaler and glitch filter
- Configurable input source for pulse counter (rising-edge or falling-edge)

36.3 Functional description

36.3.1 Low-power modes

In low-power modes, LPTMR continues to operate normally. You can configure LPTMR to exit a low-power mode by generating either an interrupt or a DMA request.

36.3.2 Clocks

The LPTMR prescaler and glitch filter can be clocked by one of the clocks that you configure by using [PSR\[PCS\]](#). You must enable the clock source before you enable LPTMR.

In Pulse Counter mode, with the glitch filter bypassed, the selected input source directly clocks [Counter \(CNR\)](#), and no other clock source is required. To minimize power in this case, configure the glitch filter clock source for a clock that is disabled.

NOTE

- You may need to configure the clock source that you select in [PSR\[PCS\]](#) for it to remain enabled in low-power modes. Otherwise, LPTMR does not operate in low-power modes.
- The clock source or pulse input source selected for LPTMR must not exceed the maximum frequency of f_{LPTMR} defined in the chip data sheet.

36.3.3 Reset

LPTMR is reset only on POR only or Cold Reset which would include LVD/HVD sources.. When configuring LPTMR registers, you must initially write to [Control Status \(CSR\)](#) with LPTMR disabled, before configuring [Prescaler and Glitch Filter \(PSR\)](#) and [Compare \(CMR\)](#). Then, you must write 1 to [CSR\[TEN\]](#) as the last step in the initialization. Doing so ensures that LPTMR is configured correctly and the LPTMR counter is reset to zero following a POR only or Cold Reset which would include LVD/HVD sources..

36.3.4 Prescaler and glitch filter

The LPTMR prescaler and glitch filter share the same logic, which operates as a prescaler in Time Counter mode and as a glitch filter in Pulse Counter mode.

NOTE

You must not alter the prescaler and glitch filter configuration when LPTMR is enabled.

36.3.4.1 Prescaler enabled

In Time Counter mode, when the prescaler is enabled, the output of the prescaler directly clocks [Counter \(CNR\)](#). When LPTMR is enabled, CNR increments every 2^1 to 2^{16} prescaler clock cycles. After LPTMR is enabled, the first increment of CNR takes an additional one or two prescaler clock cycles because of the synchronization logic.

36.3.4.2 Prescaler bypassed

In Time Counter mode, when the prescaler is bypassed, the selected prescaler clock increments [Counter \(CNR\)](#) on every clock cycle. When LPTMR is enabled, the first increment takes an additional one or two prescaler clock cycles because of the synchronization logic.

36.3.4.3 Glitch filter enabled

In Pulse Counter mode, when the glitch filter is enabled, the output of the glitch filter directly clocks [Counter \(CNR\)](#). When LPTMR is first enabled, the output of the glitch filter is asserted, that is, logic 1 for active-high and logic 0 for active-low. The following table shows the change in glitch filter output with the selected input source.

Table 210. Glitch filter output with the selected input source

If	Then
The selected input source remains deasserted for at least 2^1 to 2^{15} consecutive prescaler clock rising edges	The glitch filter output also deasserts.
The selected input source remains asserted for at least 2^1 to 2^{15} consecutive prescaler clock rising edges	The glitch filter output also asserts.

NOTE

The input is sampled only on the rising clock edge.

The value of CNR increments each time the glitch filter output asserts. In Pulse Counter mode, the maximum rate at which CNR can increment is once every 2^2 to 2^{16} glitch filter clock edges. When first enabled, the glitch filter waits for an additional one or two glitch filter clock edges because of the synchronization logic.

36.3.4.4 Glitch filter bypassed

In Pulse Counter mode, when the glitch filter is bypassed, the selected input source increments the value of [Counter \(CNR\)](#) every time it asserts. Before LPTMR is first enabled, the selected input source is forced to be asserted. This prevents CNR from incrementing if the selected input source is already asserted when LPTMR is first enabled.

36.3.5 Counter

The value of [Counter \(CNR\)](#) increments by 1 on every:

- Prescaler clock in Time Counter mode, with prescaler bypassed.
- Prescaler output in Time Counter mode, with prescaler enabled.
- Input source assertion in Pulse Counter mode, with glitch filter bypassed.
- Glitch filter output in Pulse Counter mode, with glitch filter enabled.

CNR is reset when LPTMR is disabled or if the counter register overflows. If [CSR\[TFC\]](#) = 0, then CNR is also reset whenever [CSR\[TCF\]](#) = 1.

When the core is halted in Debug mode:

- CNR continues incrementing if configured for Pulse Counter mode.
- CNR stops incrementing if configured for Time Counter mode.

You cannot initialize CNR but can read it at any time. On each read of CNR, you must first write a value to it. This synchronizes and registers the current value of CNR into a temporary register. The contents of the temporary register are returned on each read of CNR.

When reading CNR, the bus clock must be at least two times faster than the rate at which the LPTMR counter is incrementing; otherwise, incorrect data may be returned.

36.3.6 Compare

After the next [Counter \(CNR\)](#) increment (when its value is equal to that of [Compare \(CMR\)](#)), the following events occur:

- [CSR\[TCF\]](#) is read as 1b.
- LPTMR generates an interrupt if [CSR\[TIE\]](#) is 1 as well.
- LPTMR generates a hardware trigger.
- LPTMR writes 0 to CNR if [CSR\[TFC\]](#) is 0.

When LPTMR is enabled, you can modify the value of CMR only when [CSR\[TCF\]](#) is 1. When updating CMR, you must write to it and clear [CSR\[TCF\]](#) before the LPTMR counter increments past the new LPTMR compare value.

NOTE

When LPTMR is enabled in Time Counter mode, the first increment takes an additional one or two clock cycles because of the synchronization logic. This results in the first compare (and therefore interrupt and hardware trigger) occurring slightly later. A faster prescaler clock or larger prescaler value minimizes this impact.

36.3.7 Interrupt

LPTMR generates an interrupt whenever [CSR\[TIE\]](#) and [CSR\[TCF\]](#) are 1. [CSR\[TCF\]](#) is cleared by disabling LPTMR or writing a logic 1 to it.

You can modify the value of [CSR\[TIE\]](#) and write 1 to [CSR\[TCF\]](#) when LPTMR is enabled.

LPTMR generates an interrupt asynchronously to the system clock. The interrupt can be used to generate a wake-up from any low-power mode, provided LPTMR is enabled as a wake-up source.

36.3.8 Hardware trigger

The LPTMR hardware trigger asserts at the same time [CSR\[TCF\]](#) is set and can be used to trigger hardware events in other peripherals without your intervention. The hardware trigger is always enabled.

Table 211. Hardware trigger

When	Then
CMR[COMPARE] and CSR[TFC] are 0	The LPTMR hardware trigger asserts on the first compare and does not deassert.
CMR[COMPARE] is set to a nonzero value, or if CSR[TFC] = 1	The LPTMR hardware trigger asserts on each compare and deasserts on the following increment of Counter (CNR) .

36.4 External signals

Table 212. External signals

Signal	Description		Direction
LPTMR_ALT <i>n</i>	Pulse Counter Input LPTMR can select one of the input pins to be used in Pulse Counter mode.		Input
	State meaning	Assertion—If configured for Pulse Counter mode with an active-high input, assertion causes Counter (CNR) to increment. Deassertion—If configured for Pulse Counter mode with an active-low input, deassertion causes CNR to increment.	
	Timing	Assertion or deassertion may occur at any time; input may assert asynchronously to the bus clock.	

36.5 Initialization

Perform the following procedure to initialize LPTMR:

1. Configure [Control Status \(CSR\)](#) for the selected mode and pin configuration, when [CSR\[TEN\]](#) is 0. This resets the counter and clears the flag.
2. Configure [Prescaler and Glitch Filter \(PSR\)](#) with the selected clock source and prescaler or glitch filter configuration.

3. Configure [Compare \(CMR\)](#) with the selected compare point.
4. Write 1 to CSR[TEN] to enable LPTMR.

36.6 Application information

36.6.1 Application 1: Generate an interrupt every 100 ms using 32.768 kHz clock source

1. Disable LPTMR by writing 0 to [CSR\[TEN\]](#).
2. Select a 32.768 kHz clock source by configuring [PSR\[PCS\]](#).
3. Bypass the prescaler and glitch filter by writing 1 to [PSR\[PBYP\]](#).
4. Assert an interrupt every 3277 cycles by configuring [CMR\[COMPARE\]](#) = 0CCCh.
5. Enable LPTMR by writing 1 to CSR[TEN].
6. Enable the LPTMR interrupt by writing 1 to [CSR\[TIE\]](#).

NOTE

This is just an example. See the chip-specific LPTMR information for the clocks supported on a given chip.

36.6.2 Application 2: Generate an interrupt once a minute using 32.768 kHz clock source

1. Disable LPTMR by writing 0 to [CSR\[TEN\]](#).
2. Select a 32.768 kHz clock source by configuring [PSR\[PCS\]](#).
3. Select the prescaler to divide the prescaler clock by 32768 to increment the counter once a second by configuring [PSR\[PRESCALE\]](#) = 0Eh.
4. Assert an interrupt every 60 seconds by configuring [CMR\[COMPARE\]](#) = 003Bh.
5. Enable LPTMR by writing 1 to CSR[TEN].
6. Enable the LPTMR interrupt by writing 1 to [CSR\[TIE\]](#).

NOTE

This is just an example. See the chip-specific LPTMR information for the clocks supported on a given chip.

36.7 Memory map and register definition

NOTE

The LPTMR registers are reset only on POR only or Cold Reset which would include LVD/HVD sources.. See [Reset](#) for more information.

36.7.1 LPTMR register descriptions

36.7.1.1 LPTMR memory map

LPTMR0 base address: 400A_B000h

Offset	Register	Width (In bits)	Access	Reset value
0h	Control Status (CSR)	32	RW	0000_0000h

Table continues on the next page...

Table continued from the previous page...

Offset	Register	Width (In bits)	Access	Reset value
4h	Prescaler and Glitch Filter (PSR)	32	RW	0000_0000h
8h	Compare (CMR)	32	RW	0000_0000h
Ch	Counter (CNR)	32	RW	0000_0000h

36.7.1.2 Control Status (CSR)


Offset

Register	Offset
CSR	0h

Function

Controls various features of LPTMR.

Diagram

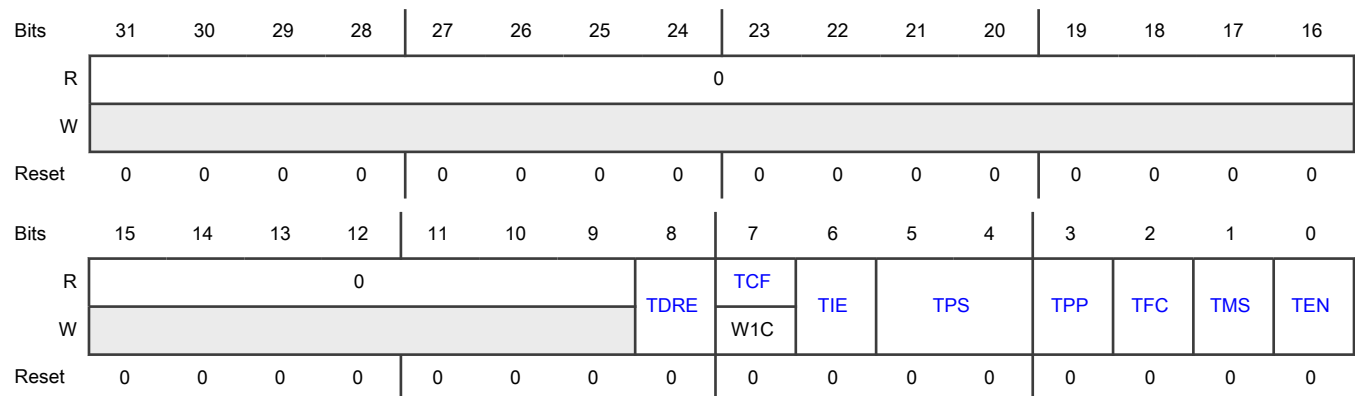

Fields

Field	Function
31-9 —	Reserved
8 TDRE	Timer DMA Request Enable Enables the timer DMA request. When TDRE is 1, the LPTMR DMA request is generated whenever CSR[TCF] is also set. Then, CSR[TCF] is cleared after the DMA controller completes execution. 0b - Disable 1b - Enable

Table continues on the next page...

Table continued from the previous page...

Field	Function
7 TCF	Timer Compare Flag Compares the timer. TCF sets on the next Counter (CNR) increment when LPTMR is enabled and Counter (CNR) equals Compare (CMR). TCF is cleared when LPTMR is disabled or a logic 1 is written to it. NOTE You must clear this flag before enabling the timer interrupt or DMA request. NOTE This field behaves differently for register reads and writes. When reading 0b - CNR ≠ (CMR + 1) 1b - CNR = (CMR + 1) When writing 0b - No effect 1b - Clear the flag
6 TIE	Timer Interrupt Enable Enables the timer interrupt. If TIE is 1, then LPTMR generates an interrupt if CSR[TCF] is 1 as well. 0b - Disable 1b - Enable
5-4 TPS	Timer Pin Select Configures the input source to be used in Pulse Counter mode. The input connections vary by chip. For details, see the chip configuration information about connections to these inputs. You must modify this field only when LPTMR is disabled. 00b - Input 0 01b - Input 1 10b - Input 2 11b - Input 3
3 TPP	Timer Pin Polarity Configures the polarity of the input source in Pulse Counter mode. If TPP is 0, then the pulse counter input source is active-high, and Counter (CNR) increments on the rising edge. If TPP is 1, then the pulse counter input source is active-low, and CNR increments on the falling edge. You must modify this field only when LPTMR is disabled. 0b - Active-high 1b - Active-low

Table continues on the next page...

Table continued from the previous page...

Field	Function
2 TFC	Timer Free-Running Counter Specifies when the counter resets. If TFC is 0, Counter (CNR) resets on the count cycle following Counter (CNR) becoming equal to Compare (CMR). If TFC is 1, CNR resets on overflow. In both cases, CSR[TCF] sets to 1 on the cycle after CNR and CMR match. You must modify this field only when LPTMR is disabled. 0b - Reset when TCF asserts 1b - Reset on overflow
1 TMS	Timer Mode Select Configures the mode of LPTMR. You must modify this field only when LPTMR is disabled. 0b - Time Counter 1b - Pulse Counter
0 TEN	Timer Enable Enables the LPTMR timer. If TEN is 0, it resets the LPTMR internal logic, including CNR[COUNTER] and CSR[TCF]. If TEN is 1, LPTMR is enabled. Do not alter CSR[5:1] when writing 1 to this field. 0b - Disable 1b - Enable

36.7.1.3 Prescaler and Glitch Filter (PSR)


Offset

Register	Offset
PSR	4h

Function

Configures features related to the prescaler and glitch filter.

Diagram

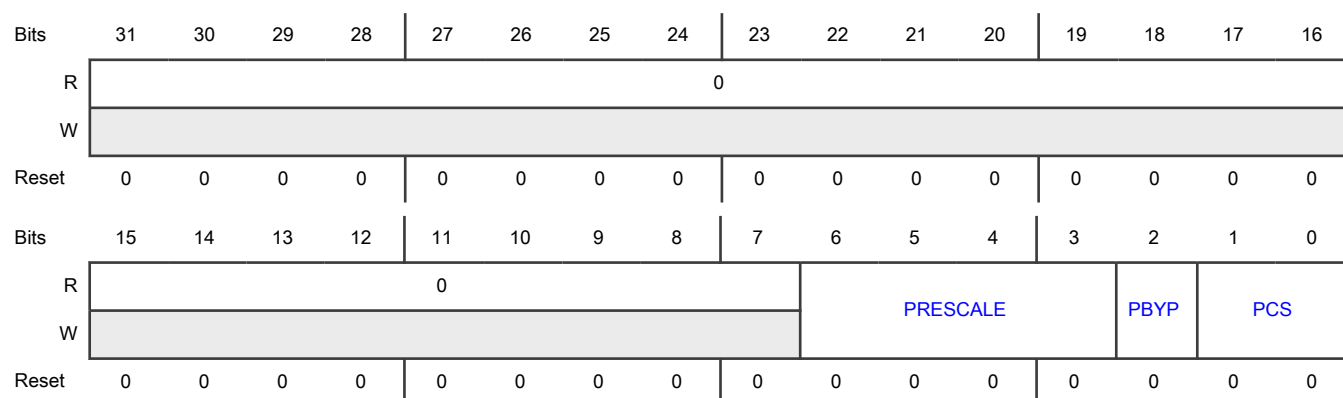

Fields

Field	Function
31-7 —	Reserved
6-3 PRESCALE	Prescaler and Glitch Filter Value Configures the size of the prescaler in Time Counter mode and the width of the glitch filter in Pulse Counter mode. The width of the glitch filter can vary by one cycle because of the pulse counter input synchronization. You must modify this field only when LPTMR is disabled. 0000b - Prescaler divides the prescaler clock by 2; glitch filter does not support this configuration 0001b - Prescaler divides the prescaler clock by 4; glitch filter recognizes change on input pin after two rising clock edges 0010b - Prescaler divides the prescaler clock by 8; glitch filter recognizes change on input pin after four rising clock edges 0011b - Prescaler divides the prescaler clock by 16; glitch filter recognizes change on input pin after eight rising clock edges 0100b - Prescaler divides the prescaler clock by 32; glitch filter recognizes change on input pin after 16 rising clock edges 0101b - Prescaler divides the prescaler clock by 64; glitch filter recognizes change on input pin after 32 rising clock edges 0110b - Prescaler divides the prescaler clock by 128; glitch filter recognizes change on input pin after 64 rising clock edges 0111b - Prescaler divides the prescaler clock by 256; glitch filter recognizes change on input pin after 128 rising clock edges 1000b - Prescaler divides the prescaler clock by 512; glitch filter recognizes change on input pin after 256 rising clock edges 1001b - Prescaler divides the prescaler clock by 1024; glitch filter recognizes change on input pin after 512 rising clock edges

Table continues on the next page...

Table continued from the previous page...

Field	Function
	1010b - Prescaler divides the prescaler clock by 2048; glitch filter recognizes change on input pin after 1024 rising clock edges 1011b - Prescaler divides the prescaler clock by 4096; glitch filter recognizes change on input pin after 2048 rising clock edges 1100b - Prescaler divides the prescaler clock by 8192; glitch filter recognizes change on input pin after 4096 rising clock edges 1101b - Prescaler divides the prescaler clock by 16,384; glitch filter recognizes change on input pin after 8192 rising clock edges 1110b - Prescaler divides the prescaler clock by 32,768; glitch filter recognizes change on input pin after 16,384 rising clock edges 1111b - Prescaler divides the prescaler clock by 65,536; glitch filter recognizes change on input pin after 32,768 rising clock edges
2 PBYP	Prescaler and Glitch Filter Bypass Controls the clocking of Counter (CNR). If PBYP is 0, the output of the prescaler or glitch filter clocks CNR. If PBYP is 1, the selected prescaler clock in Time Counter mode, or else the selected input source in Pulse Counter mode, directly clocks CNR. You must modify this field only when LPTMR is disabled. 0b - Prescaler and glitch filter enable 1b - Prescaler and glitch filter bypass
1-0 PCS	Prescaler and Glitch Filter Clock Select Selects the clock to be used by the LPTMR prescaler and glitch filter. In Time Counter mode, PCS selects the input clock to the prescaler. In Pulse Counter mode, PCS selects the input clock to the glitch filter. See the chip configuration details for information on connections to these inputs. You must modify this field only when LPTMR is disabled. 00b - Clock 0 01b - Clock 1 10b - Clock 2 11b - Clock 3


36.7.1.4 Compare (CMR)

Offset

Register	Offset
CMR	8h

Function
Configures the compare values to [Counter \(CNR\)](#) (see [Compare](#) for more information).

Diagram

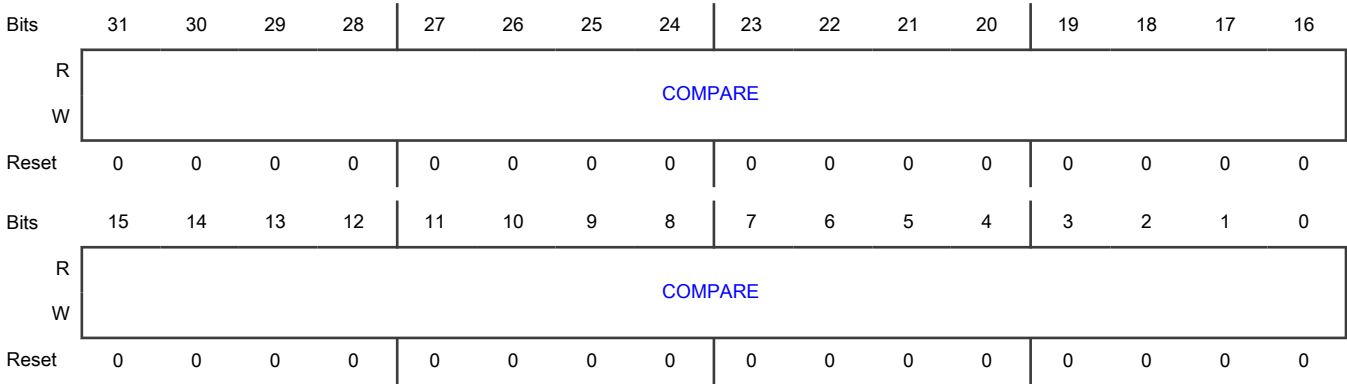

Fields

Field	Function
31-0 COMPARE	Compare Value Configures the compare values to Counter (CNR). On the next CNR increment, if LPTMR is enabled and Counter (CNR) equals Compare (CMR), then: 1. LPTMR writes 1 to CSR[TCF]. 2. The hardware trigger asserts until the next time CNR increments. If CMR = 0, the hardware trigger remains asserted until LPTMR is disabled. If LPTMR is enabled, you must modify the value of CMR only if CSR[TCF] is 1.


36.7.1.5 Counter (CNR)

Offset

Register	Offset
CNR	Ch

Function
Specifies counter values (see [Counter](#) for more information).

Diagram

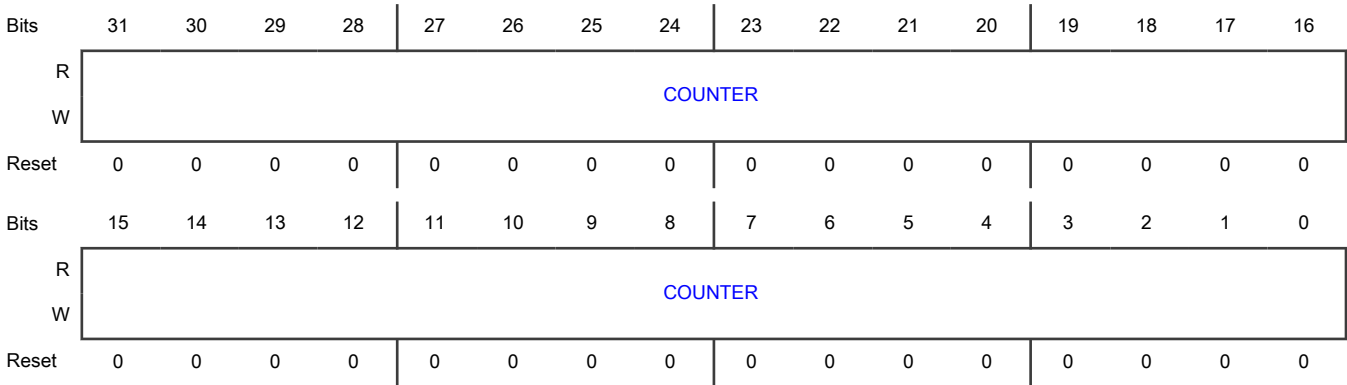

Fields

Field	Function
31-0 COUNTER	Counter Value Contains the current value of the LPTMR counter at the time you last wrote to this register.

Chapter 37

Flexible Data Rate CAN (FlexCAN)

37.1 Chip-specific FLEXCAN information

Table 213. Reference links to related information

Topic	Related module	Reference
Full description	FLEXCAN	FLEXCAN
System memory map		Memory map
Clocking		Clock distribution
Power Management		Power Management
Signal multiplexing	Port control	Signal multiplexing

37.1.1 Module instances

This device support one instance of FLEXCAN: FlexCAN0.

37.2 Overview

FlexCAN is a communication controller implementing the CAN protocol according to the ISO 11898-1:2015 standard and CAN 2.0 Part B protocol specifications.


The CAN protocol was primarily designed to be used as a vehicle serial data bus, meeting the specific real-time processing and reliable operation requirements in the electromagnetic interference (EMI) environment of a vehicle. FlexCAN is a full implementation of the CAN protocol specification, the CAN with flexible data rate (CAN FD) protocol, and the CAN version 2.0 Part B protocol. It supports both standard and extended message frames and long payloads.

NOTE

Legacy Receive (RX) FIFO cannot be used in CAN Flexible Data (FD) mode. In CAN FD mode, use the Enhanced Receive FIFO feature instead of the Legacy Receive FIFO.

37.2.1 Block diagram

[Figure 153](#) shows the main submodules implemented in FlexCAN.

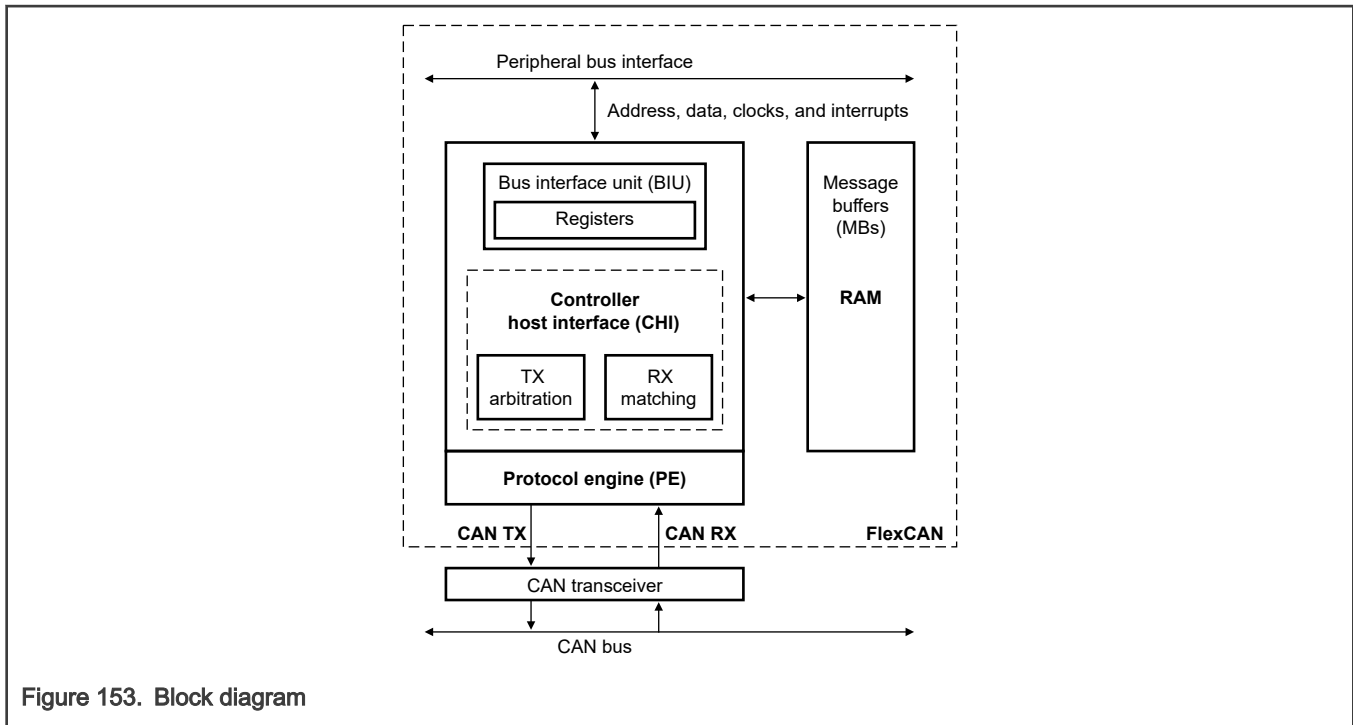

The Protocol Engine (PE) submodule manages the serial communication on the CAN bus:

- RAM access for receiving and transmitting message frames
- Receive message validation
- Error handling
- CAN FD message detection

Controller Host Interface (CHI) manages:

- Message buffer (MB) selection for reception and transmission
- Arbitration and ID matching algorithms for both CAN FD and non-CAN FD message formats

Bus Interface Unit (BIU) controls access to and from the internal interface bus to establish connection to the CPU and to other blocks. The BIU manages access to:

- Clocks
- Address and data buses
- Interrupt outputs
- DMA
- Test signals

37.2.2 Features

- Full implementation of *CAN with Flexible data rate (CAN FD) protocol specification* and *CAN Specification Version 2.0, Part B*:
 - Standard data frames
 - Extended data frames
 - Data length of 0–64 bytes
 - Programmable bit rate (see chip-specific FlexCAN information for specific maximum rate configuration)

- Content-related addressing
- Compliance with ISO 11898-1:2015 standard
- Flexible message buffers that can be configured to store a payload of 0, 8, 16, 32, or 64 bytes
 - Increasing the payload size decreases the number of supported message buffers (see [FlexCAN memory partition for CAN FD](#)).
 - Message buffers are configurable as receive or transmit, supporting standard and extended messages.
- Individual Receive Mask registers for each message buffer
- Full-featured Legacy RX FIFO with storage capacity for six frames and automatic internal pointer handling with DMA support
- Full-featured Enhanced RX FIFO with storage capacity of 12 CAN FD frames and automatic internal pointer handling with DMA support
- Transmission abort capability
- Optional general purpose RAM space, using RAM not used by reception or transmission structures
- Listen-Only mode
- Programmable loopback mode supporting self-test operation
- Programmable transmission priority scheme: lowest ID, lowest buffer number, or highest priority
- Timestamp based on 16-bit free-running timer
- Global network time, synchronized by specific message
- Maskable interrupts
- Independence from transmission medium (external transceiver is assumed)
- Short latency time due to arbitration scheme for high-priority messages
- Low-power modes, with programmable wake-up on bus activity or matching with received frames (Pretended Networking mode)
- Transceiver delay compensation when transmitting CAN FD messages at faster data rates
- Management of remote request frames, automatically or by software
- Restriction only to write CAN bit time settings and configuration bits in Freeze mode
- Transmit message buffer status (lowest-priority buffer or empty buffer)
- Identifier Acceptance Filter Hit Indicator (IDHIT) register for received frames
- [ESR1\[SYNCH\]](#) to indicate module is synchronous with CAN bus
- CRC status for transmitted message
- Legacy RX FIFO Global Mask register
- Selectable priority between message buffers and receive FIFO during matching process
- Powerful legacy RX FIFO ID filtering, capable of matching incoming IDs against either 128 extended IDs, 256 standard IDs, or 512 partial (8-bit) IDs, with 32 individual masking capability
- Powerful enhanced RX FIFO ID filtering, capable of matching incoming IDs against either 16 extended or 32 standard ID filter elements with three filtering schemes: mask plus filter, range, and two filters without mask
- Complete backward compatibility with previous FlexCAN version
- Pretended networking functionality in low power: Doze mode, Stop mode

37.3 Functional description

FlexCAN is a CAN protocol engine with a flexible message buffer system for transmitting and receiving CAN frames. The system is a set of message buffers (MBs) that stores configuration and control data, timestamp, message ID, and data (see [Message buffer structure](#)).

For classical CAN frames, FlexCAN supports simultaneous reception through Legacy FIFO and message buffer. For CAN FD frames, FlexCAN supports reception through message buffer and enhanced receive FIFO.

For message buffer reception, a matching algorithm makes it possible to store received frames only into MBs that have the same ID programmed in the ID field. A masking scheme makes it possible to match the ID programmed on the message buffer with a range of IDs on received CAN frames. For transmission, an arbitration algorithm decides the prioritization of message buffers to be transmitted based on the message ID (optionally augmented by three local priority bits) or the message buffer ordering.

A message buffer is active at a given time if it can participate in both the matching and arbitration processes. A receive message buffer with a 0b code is inactive (see [Table 248](#)). A transmit message buffer with a 1000b or 1001b code is also inactive (see [Table 249](#)).

FlexCAN can receive and transmit messages in CAN FD format. The message buffers are sized to store the quantity of data bytes selected by [FDCTRL\[MBDSRn\]](#). The quantity of FD message buffers available for a given quantity of data bytes is described in the [CAN FD Control \(FDCTRL\)](#) register. See also [FlexCAN memory partition for CAN FD](#).

37.3.1 Modes of operation

FlexCAN has these functional modes:

Table 214. Functional modes

Mode	Description
Normal (User or Supervisor)	In Normal mode, FlexCAN receives and transmits message frames, manages errors normally, and enables all CAN Protocol functions. User and Supervisor modes differ in the access to some restricted control registers.
Freeze	Freeze mode is enabled when MCR[FRZ] = 1. If enabled, FlexCAN enters Freeze mode when MCR[HALT] is 1 or when Debug mode is requested at chip level and FlexCAN writes 1 to MCR[FRZACK] . In this mode, no transmission or reception of frames is done, and synchronicity to the CAN bus is lost. See Freeze mode .
Loopback	FlexCAN enters this mode when CTRL1[LPB] becomes 1. In this mode, FlexCAN performs an internal loopback that can be used for self-test. The bit stream output of the transmitter is internally fed back to the receiver input. The receiving CAN input pin is ignored and the transmitting CAN output goes to the recessive state (logic 1). FlexCAN behaves as it normally does when transmitting and treats its own transmitted message as a message received from a remote node. To ensure proper reception of its own message, FlexCAN ignores the bit sent during the ACK slot in the CAN frame acknowledge field. Both transmit and receive interrupts are generated.
Listen-Only	FlexCAN enters this mode when CTRL1[LOM] becomes 1. In this mode, transmission is disabled, all error counters are frozen, and the module operates in a CAN Error Passive mode. Only messages acknowledged by another CAN station are received. If FlexCAN detects an unacknowledged message, it flags a BIT0 error (without changing the REC), as if it was trying to acknowledge the message.
CAN FD Active	In this mode, FlexCAN can transmit and receive all messages formatted according to the CAN FD Standard (2.0) and 2.0B Protocol in an interleaved fashion. The CPU can put FlexCAN into CAN FD Active mode by configuring MCR[FDEN] in Freeze mode.

Some features available in classical CAN are unavailable in CAN FD mode.

Table 215. Differences between classical CAN and CAN FD

Feature	Classical CAN	CAN FD
Legacy RX FIFO DMA	Yes	No
Legacy RX FIFO	Yes	No
Enhanced RX FIFO DMA	Yes	Yes
Enhanced RX FIFO	Yes	Yes
Pretended network support	Yes	No

FlexCAN can operate in these low-power modes:

Table 216. Low-power modes

Mode	Description
Module Disable	FlexCAN enters this mode when the CPU writes 1 to MCR[MDIS] and FlexCAN writes 1 to MCR[LPMACK] . After FlexCAN is disabled, it issues a request to disable the clocks to the CAN Protocol Engine and Controller Host Interface submodules. Writing 0 to MCR[MDIS] exits this mode. See Module Disable mode .
Doze	FlexCAN enters this mode when MCR[DOZE] is 1, Doze mode is requested at chip level, and FlexCAN writes 1 to MCR[LPMACK] . When in Doze mode, FlexCAN issues a request to disable the clocks to the CAN Protocol Engine and the CAN Controller-Host Interface submodules. This mode is exited when: • MCR[DOZE] becomes 0 • The chip is removed from Doze mode • Or activity is detected on the CAN bus and the Self-Wake-up mechanism is enabled. See Doze mode .
Stop	FlexCAN enters this mode when Stop mode is requested at chip level and FlexCAN writes 1 to MCR[LPMACK] . When in Stop mode, FlexCAN puts itself in an inactive state and then informs the CPU that the clocks can be shut down globally. Exit from this mode occurs when the Stop mode request is removed, or when activity is detected on the CAN bus and the Self-Wake-up mechanism is enabled. See Stop mode .
Pretended Network (PN)	FlexCAN can operate in this mode with Doze mode or Stop mode. Before entering one of these low-power modes, you must write 1 to MCR[PNET_EN] . When in a low-power mode, CHI subblock clocks are shut down and CAN_PE subblock remains clocked. The receive process remains active to filter incoming messages (see Receive process in Pretended Networking mode) as defined by the configuration registers (see Pretended Networking Control 1 (CTRL1_PN)). Upon detecting a wake-up event, a wake-up interrupt is issued to the system. When MCR[PNET_EN] becomes 1, the CPU must disable Self-Wake-up by writing 0 to MCR[SLFWAK] (see Module Configuration (MCR)).

37.3.1.1 Modes of operation details

FlexCAN has functional modes and low-power modes. See [Modes of operation](#) for an introductory description of all the modes of operation. The following subsections contain functional details about Freeze mode and low-power modes.

CAUTION

FlexCAN does not support "Permanent Dominant" failure on the CAN bus line. If a Low-Power request or Freeze mode request occurs during a "Permanent Dominant" condition, the corresponding acknowledgment field can never be 1.

37.3.1.1.1 Freeze mode

This mode is requested either by the CPU writing 1 to [MCR\[HALT\]](#) or when the chip is put into Debug mode. [MCR\[FRZ\]](#) must be 1 and the module must not be in a low-power mode.

To obtain acknowledgment, FlexCAN writes 1 to [MCR\[FRZACK\]](#). The CPU must only consider FlexCAN to be in Freeze mode when both request and acknowledgment conditions are satisfied.

When Freeze mode is requested, FlexCAN:

1. Waits to be in either Intermission, Error Passive, Bus Off, or Idle state.
2. Waits for all internal activities like arbitration, matching, move-in, and move-out to finish. A pending move-in does not prevent entering Freeze mode.
3. Ignores the receive input pin and drives the transmit pin as recessive.
4. Stops the prescaler, halting all CAN protocol activities.
5. Grants write access to the Error Counters register, which is read-only in other modes.
6. Writes 1 to [MCR\[NOTRDY\]](#) and [MCR\[FRZACK\]](#).

After requesting Freeze mode, you must wait for [MCR\[FRZACK\]](#) to become 1 before executing any other action, otherwise FlexCAN may operate unpredictably. In Freeze mode, all memory-mapped registers are accessible.

Freeze mode is exited in one of these conditions:

- CPU writes 0 to [MCR\[FRZ\]](#).
- The chip is removed from Debug mode or the [MCR\[HALT\]](#) becomes 0.

[MCR\[FRZACK\]](#) becomes 0 after the protocol engine recognizes the negation of the freeze request. After leaving Freeze mode, FlexCAN tries to resynchronize to the CAN bus by waiting for 11 consecutive recessive bits.

37.3.1.1.2 Module Disable mode

This low-power mode is normally used to disable a complete FlexCAN block temporarily, with no power consumption. The CPU requests this mode by writing 1 to [MCR\[MDIS\]](#), and FlexCAN acknowledges the request by writing 1 to [MCR\[LPMACK\]](#). The CPU must only consider FlexCAN to be in Disable mode when both the request and acknowledgment conditions are satisfied.

If FlexCAN is disabled during Freeze mode, the module requests to disable the clocks to the PE and CHI submodules, writes 1 to [MCR\[LPMACK\]](#) and writes 0 to [MCR\[FRZACK\]](#).

It is not recommended to use Module Disable mode under Pretended Networking mode. Write 0 to [MCR\[MDIS\]](#) and wait for [MCR\[LPMACK\]](#) to become 0 before writing 1 to [MCR\[PNET_EN\]](#).

If the module is disabled during transmission or reception, FlexCAN:

1. Waits to be in either Idle or Bus Off state, or waits for the third bit of Intermission and then checks that it is recessive.
2. Waits for all internal activities like arbitration, matching, move-in, and move-out to finish. FlexCAN does not take a pending move-in into account.
3. Ignores its receive input pin and drives its transmit pin as recessive.
4. Shuts down the clocks to the PE and CHI submodules.
5. Writes 1 to [MCR\[NOTRDY\]](#) and [MCR\[LPMACK\]](#).

In this mode, the Bus Interface Unit continues to operate, enabling the CPU to access memory-mapped registers, except for:

- The Receive Message Buffers Global Mask registers
- The Receive Buffer 14 Mask register
- The Receive Buffer 15 Mask register

When in Disable mode, these items may not be accessible:

- The message buffers
- The Receive Individual Mask registers
- The reserved words within RAM

To exit this mode, the CPU writes 0 to [MCR\[MDIS\]](#), causing FlexCAN to request to resume the clocks and write 0 to [MCR\[LPMACK\]](#). This write occurs after the CAN protocol engine recognizes the negation of disable mode requested by the CPU.

37.3.1.1.3 Doze mode

This is a system low-power mode in which the CPU bus is kept alive and a global Doze mode request is sent to all peripherals asking them to enter low-power mode. When Doze mode is globally requested, [MCR\[DOZE\]](#) needs to have been asserted previously for Doze mode to be triggered. The acknowledgement is obtained through the assertion of [MCR\[LPMACK\]](#) by FlexCAN. The CPU must only consider FlexCAN to be in Doze mode when both request and acknowledgement conditions are satisfied.

If Doze mode is triggered during Freeze mode, FlexCAN requests to shut down the clocks to the PE and CHI submodules, sets [MCR\[LPMACK\]](#) and negates [MCR\[FRZACK\]](#). If Doze mode is triggered during transmission or reception, FlexCAN does the following:

- Waits to be in either Idle or Bus Off state, or else waits for the third bit of Intermission and checks it to be recessive.
- Waits for all internal activities like arbitration, matching, move-in, and move-out to finish. A pending move-in is not taken into account.
- Ignores its Rx input pin and drives its Tx pin as recessive.
- Shuts down the clocks to the PE and CHI submodules.
- Sets [MCR\[NOTRDY\]](#) and [MCR\[LPMACK\]](#).

The Bus Interface Unit continues to operate, enabling the CPU to access memory-mapped registers, except the Rx Mailboxes Global Mask registers, the Rx Buffer 14 Mask register, the Rx Buffer 15 Mask register.

Also, the message buffers, the Rx Individual Mask registers, and the reserved words within RAM may not be accessed when the module is in Doze mode.

Exiting Doze mode is done in one of the following ways:

- CPU removing the Doze mode request
- CPU negating [MCR \[DOZE\]](#)
- Self-Wake mechanism

In the Self-Wake mechanism, if [MCR\[SLFWAK\]](#) was set at the time FlexCAN entered Doze mode, then after detection of a recessive to dominant transition on the CAN bus, FlexCAN negates the DOZE bit, requests to resume its clocks and negates the LPMACK after the CAN protocol engine recognizes the negation of the Doze mode request. It also sets [ESR \[WAKINT\]](#) and, if enabled by [MCR\[WAKMSK\]](#), generates a Wake-Up interrupt to the CPU. FlexCAN then waits for 11 consecutive recessive bits to synchronize to the CAN bus. As a consequence, it does not receive the frame that woke it up. The following table details the effect of SLFWAK and WAKMSK after wakeup from Doze mode.

Table 217. Wakeup from Doze mode

SLFWAK	WAKINT	WAKMSK	FlexCAN clocks enabled	Wakeup interrupt generated
0	—	—	No	No
0	—	—	No	No
1	0	0	No	No

Table continues on the next page...

Table 217. Wakeup from Doze mode (continued)

SLFWAK	WAKINT	WAKMSK	FlexCAN clocks enabled	Wakeup interrupt generated
1	0	1	No	No
1	1	0	Yes	No
1	1	1	Yes	Yes

37.3.1.1.4 Stop mode

In this low-power mode for the system, all chip clocks can be stopped for maximum power savings. Stop mode is globally requested by the CPU and FlexCAN writes 1 to a Stop Acknowledgment signal to indicate acknowledgment. The CPU must only consider FlexCAN to be in Stop mode when both request and acknowledgment conditions are satisfied.

If FlexCAN receives the global Stop mode request during Freeze mode, it shuts down the clocks globally by:

1. Writing 1 to [MCR\[LPMACK\]](#).
2. Writing 0 to [MCR\[FRZACK\]](#).
3. Sending the Stop Acknowledge signal to the CPU.

If Stop mode is requested during transmission or reception, FlexCAN:

1. Waits to be in either Idle or Bus Off state, or waits for the third bit of Intermission and verifies that it is recessive.
2. Waits for all internal activities like arbitration, matching, move-in, and move-out to finish. FlexCAN does not take a pending move-in into account.
3. Ignores its receive input pin and drives its transmit pin as recessive.
4. Writes 1 to [MCR\[NOTRDY\]](#) and [MCR\[LPMACK\]](#).
5. Sends a Stop Acknowledge signal to the CPU, so that the CPU can shut down the clocks globally.

FlexCAN exits Stop mode when the CPU resumes the clocks and removes the Stop mode request. This exit can occur as a result of the Self-Wake mechanism.

In Self-Wake, if [MCR\[SLFWAK\]](#) = 1 when FlexCAN enters Stop mode, then upon detecting a recessive-to-dominant transition on the CAN bus, FlexCAN writes 1 to [ESR1\[WAKINT\]](#). If enabled by [MCR\[WAKMSK\]](#), FlexCAN generates a wake-up interrupt to the CPU. Upon receiving the interrupt, the CPU should resume the clocks and remove the Stop mode request. FlexCAN waits for 11 consecutive recessive bits to synchronize to the CAN bus. As a consequence, FlexCAN does not receive the frame that woke it up. [Table 218](#) details the effect of [MCR\[SLFWAK\]](#) and [MCR\[WAKMSK\]](#) upon wakeup from Stop mode. Waking from Stop mode only works when both fields are 1.

After the CAN protocol engine recognizes the negation of the Stop mode request, FlexCAN writes 0 to [MCR\[LPMACK\]](#). FlexCAN then waits for 11 consecutive recessive bits to synchronize to the CAN bus. As a consequence, FlexCAN does not receive the frame that woke it up.

Table 218. Waking from Stop mode

SLFWAK	WAKINT	WAKMSK	Chip clocks enabled	Wake-up interrupt generated
0	—	—	No	No
0	—	—	No	No

Table continues on the next page...

Table 218. Waking from Stop mode (continued)

SLFWAK	WAKINT	WAKMSK	Chip clocks enabled	Wake-up interrupt generated
1	0	0	No	No
1	0	1	No	No
1	1	0	No	No
1	1	1	Yes	Yes

NOTE

When FlexCAN is in the Bus Off state and Low-Power mode, FlexCAN may take an extra 128 IDLE cycles to leave the Bus Off state after exiting Low-Power mode.

37.3.1.1.5 Pretended Networking (PN) mode

This special low-power mode receives wake-up messages with low power consumption. This mode can be selected to operate together with Doze mode or Stop mode. Before entering a low-power mode, [MCR\[PNET_EN\]](#) must be 1. After entering a low-power mode, the CHI subblock is shut down and the CAN_PE subblock is kept active. The receive process is still active to filter incoming messages (see [Receive process in Pretended Networking mode](#)) as defined by the configuration registers (see [Pretended Networking Control 1 \(CTRL1_PN\)](#)). Upon detecting a wake-up event, FlexCAN issues a wake-up interrupt to the system.

To enter Pretended Networking mode, FlexCAN must be in Normal mode, not in Freeze or Module Disable mode. In Pretended Networking mode, FlexCAN keeps itself synchronized with the CAN bus in Doze or Stop mode. Then, when either Doze or Stop mode is requested, FlexCAN:

1. Waits to be in the Idle state, or waits for the third bit of Intermission, then verifies that it is recessive.
2. Writes 1 to [MCR\[LPMACK\]](#).
3. Requests the shutdown of the CHI submodule clock, while keeping the PE submodule clock active.

FlexCAN can exit Pretended Networking mode in one of these ways:

- The CPU removes the Doze mode request.
- The CPU writes 0 to [MCR\[DOZE\]](#).
- The CPU removes the Stop mode request.
- FlexCAN waits until Bus Idle, or until the third bit of Intermission state, to write 0 to [MCR\[LPMACK\]](#).

The above exit events can be triggered:

- By FlexCAN, after detecting a wake-up event and issuing the respective interrupt.
- By the CPU itself, when another method wakes it up.

Consequently, FlexCAN waits until the Bus Idle state, or until the third bit of the Intermission state, to write 0 to [MCR\[LPMACK\]](#) and resume Normal mode. This procedure ensures that FlexCAN is synchronized to the CAN bus after exiting Pretended Networking mode. The CPU must wait for [MCR\[LPM_ACK\]](#) to become 0 before performing any access to FlexCAN.

When [MCR\[PNET_EN\]](#) becomes 1, the CPU must disable the self-wake-up by writing 0 to [MCR\[SLFWAK\]](#) (see [Module Configuration \(MCR\)](#)).

NOTE

For more information about the difference between FD and non-FD regarding this feature, see [Table 215](#).

37.3.2 Transmission process

NOTE

Instances of MB_CS in this topic refer to items in message buffers. See [Message buffer structure](#) for details.

To transmit a CAN frame, the CPU must prepare a message buffer for transmission by executing the following procedure:

1. Check whether the respective interrupt flag is set, and clear it if necessary.
2. If the message buffer is active (transmission pending), request an abort of the transmission. Write the ABORT code (1001b) to the CODE field of the Control and Status word.
3. Poll the IFLAG register until the corresponding IFLAG flag is set, or wait for the interrupt request (if enabled by the respective IMASK field).
4. Read the CODE field to identify whether the transmission was aborted or transmitted (see [Transmission abort mechanism](#)).
5. Clear the corresponding interrupt flag.
6. Write the ID register (containing the local priority if enabled via [MCR\[LPRIOEN\]](#)).
7. Write payload data bytes.
8. Configure the Control and Status word as needed.
 - a. Set ID type via MB_CS[IDE].
 - b. Set Remote Transmission Request (if needed) via MB_CS[RTR].
 - c. If [MCR\[FDEN\] = 1](#), configure MB_CS[EDL] and MB_CS[BRS]. For details about the relationship between the written value and transmitted value of MB_CS[ESI], see [Table 229](#).^[1]
 - d. Configure Data Length Code in bytes via MB_CS[DLC]. See [Table 251](#) for detailed information.
 - e. To transmit the CAN frame, activate the message buffer by writing Ch to MB_CS[CODE].

NOTE

To maximize software performance, configure all the fields in the MB_CS word in a single 32-bit write operation. If the fields are configured in separate writes, MB_CS[CODE] must be the last write in the Control and Status word.

When the MB is activated, it participates in the arbitration process and its contents are eventually transmitted according to its priority. When the DLC value stored in the MB selected for transmission exceeds the MB payload size, FlexCAN completes the expected DLC by adding a constant CCh pattern.

After a successful transmission:

1. The value of the free-running timer is written into the timestamp field.
2. The CODE field in the Control and Status word is updated.
3. Both [Cyclic Redundancy Check \(CRCR\)](#) and [CAN FD CRC \(FDCRC\)](#) are updated.
4. A status flag is set in the Interrupt Flag register.
5. If allowed by the corresponding Interrupt Mask Register field, an interrupt is generated.

After transmission, the new CODE field depends on the code used to activate the message buffer (see [Table 248](#) and [Table 249](#) in [Message buffer structure](#)).

When the Abort feature is enabled ([MCR\[AEN\]](#) is 1), after the Interrupt flag is set for an MB configured as transmit buffer, the message buffer is blocked. The CPU cannot update the message buffer until the Interrupt Flag is cleared by the CPU. The CPU must clear the corresponding IFLAG flag before preparing this MB for a new transmission or reception.

[1] There is no need to write the ESI field; it is automatically transmitted as dominant by error active nodes and as recessive by error passive nodes. If FlexCAN is operating as a network gateway, however, the CPU writes MB_CS[ESI] according to the error status of the node that sent the message.

NOTE

For backward compatibility ([MCR\[AEN\]](#) is 0), write the INACTIVE code (1000b) to the CODE field to deactivate the MB. In this case, the pending frame may be transmitted without notification (see [Message buffer inactivation](#)).

37.3.3 Arbitration process

The arbitration process scans the message buffers, searching for the transmission MB that holds the message to be sent at the next opportunity. This MB is called the arbitration winner. The scan starts from the lowest number MB and continues to the higher ones.

The arbitration process is triggered when at least one of the following occur:

- CRC field of the CAN frame arrives. The starting point depends on the value of [CTRL2\[TASD\]](#).
- Error Delimiter field of a CAN frame is in progress.
- Overload Delimiter field of a CAN frame is in progress.
- The winner of the arbitration is deactivated, and the CAN bus has not reached the first bit of the Intermission field.
- CPU writes to the Control and Status word of a winner MB, and the CAN bus has not reached the first bit of the Intermission field.
- CHI is in the Idle state and the CPU writes to the Control and Status word of any message buffer.
- FlexCAN exits Bus Off state.
- FlexCAN leaves Freeze mode or a low-power mode.

If the arbitration process does not evaluate all message buffers before the CAN bus reaches the first bit of the Intermission field, the temporary arbitration winner is invalidated. FlexCAN will not compete for the CAN bus at the next opportunity.

The arbitration process selects the winner among the active transmission message buffers at the end of the scan according to the values of [CTRL1\[LBUF\]](#) and [MCR\[LPRIOEN\]](#).

See [Arbitration process \(continued\)](#) for more information about this process.

37.3.3.1 Lowest-number message buffer first

If [CTRL1\[LBUF\]](#) is 1, the first (lowest number) active transmission message buffer found is the arbitration winner. [MCR\[LPRIOEN\]](#) has no effect when [CTRL1\[LBUF\]](#) is 1.

37.3.3.2 Highest-priority message buffer first

If [CTRL1\[LBUF\]](#) is 0, the arbitration process searches for the active transmission message buffer with the highest priority. The frame of this message buffer has a higher probability of winning the arbitration on the CAN bus when multiple external nodes compete for the bus simultaneously.

The sequence of bits considered for this arbitration is called the arbitration value of the message buffer. The transmission message buffer with the lowest arbitration value among all transmission message buffers has the highest priority.

If two or more message buffers have equivalent arbitration values, the message buffer with the lowest number is the arbitration winner.

The composition of the arbitration value depends on [MCR\[LPRIOEN\]](#).

37.3.3.2.1 Local priority disabled

If [MCR\[LPRIOEN\]](#) = 0, the arbitration value is built using the exact sequence of bits that would be transmitted in a CAN frame where local priority is disabled.

Table 219. Composition of the arbitration value when local priority is disabled

Format	Message buffer arbitration value (32 bits)				
Standard (IDE = 0)	Standard ID (11 bits)	RTR (1 bit)	IDE (1 bit)	— (18 bits)	— (1 bit)
Extended (IDE = 1)	Extended ID[28:18] (11 bits)	SRR (1 bit)	IDE (1 bit)	Extended ID[17:0] (18 bits)	RTR (1 bit)

37.3.3.2.2 Local priority enabled

To enable local priority, [MCR\[LPRIOEN\]](#) must be 1. In this case, the message buffer PRIO field (see [Message buffer structure](#)) is included at the very left of the arbitration value.

Table 220. Composition of the arbitration value when local priority is enabled

Format	Message buffer arbitration value (35 bits)					
Standard (IDE = 0)	PRIO (3 bits)	Standard ID (11 bits)	RTR (1 bit)	IDE (1 bit)	— (18 bits)	— (1 bit)
Extended (IDE = 1)	PRIO (3 bits)	Extended ID[28:18] (11 bits)	SRR (1 bit)	IDE (1 bit)	Extended ID[17:0] (18 bits)	RTR (1 bit)

Because the PRIO field is the most significant part of the arbitration value, message buffers with low PRIO values have higher priority than message buffers with high PRIO values. This priority is maintained regardless of the rest of their arbitration values.

The PRIO field is not part of the frame on the CAN bus. Its purpose is only to affect the internal arbitration process.

37.3.3.3 Arbitration process (continued)

After the arbitration winner is found (see [Arbitration process](#)), its content is copied to a hidden auxiliary message buffer called a transmit serial message buffer (TX SMB). The TX SMB has the same structure as a normal message buffer, but is not user-accessible. This copy operation is called move-out. After it is done, write access to the Control and Status word of the corresponding MB is blocked (if [MCR\[AEN\]](#) = 1). Write access is restored in one of the following events:

- The CPU clears the corresponding IFLAG flag after the message buffer is transmitted.
- FlexCAN enters Freeze mode or Bus Off state.
- FlexCAN loses the bus arbitration, or there is an error during the transmission.

At the first opportunity window on the CAN bus, the message on the TX SMB is transmitted according to the CAN protocol rules.

The arbitration process can be triggered under the following conditions:

- During RX and TX frames from CAN CRC field to end of frame. The value of [CTRL2\[TASD\]](#) may be changed to optimize the arbitration start point.
- During CAN Bus Off state from TX_ERR_CNT = 124 to 128. The value of [CTRL2\[TASD\]](#) may be changed to optimize the arbitration start point.
- During Control and Status write by CPU in Bus Idle. The first Control and Status write starts the arbitration process, and a second Control and Status write during this same arbitration restarts the process. If other Control and Status writes are performed, the transmission arbitration process is pending. If there is no arbitration winner after the arbitration process has finished, then the TX arbitration machine begins a new arbitration process. If there is a pending arbitration and Bus Idle state starts, then an arbitration process is triggered. In this case, the first and second Control and Status writes in Bus Idle do not restart the arbitration process. If there is not enough time to finish arbitration in the Wait for Bus Idle state and the next state is Idle, the scan is not interrupted. That scan is completed during Bus Idle state. During this arbitration, a Control and Status write does not cause an arbitration restart.

- Deactivation of an arbitration winner during a valid arbitration window.
- Upon exiting Freeze mode (first bit of the Wait for Bus Idle state). If a resynchronization occurs during the Wait for Bus Idle state, the arbitration process is restarted.

The arbitration process stops when:

- All message buffers are scanned.
- A transmission message buffer is found (if lowest buffer feature is enabled).
- An arbitration winner deactivates or aborts during any arbitration process.
- There is not enough time to finish the transmission arbitration process (for instance, when a deactivation is performed near the end of frame). In this case, the arbitration process is pending.
- An error or overload flag occurs in the bus.
- A low-power or Freeze mode request occurs in Idle state.

Arbitration is considered pending when:

- It is not possible to finish arbitration process in time.
- A Control and Status write occurs during arbitration, when that write is performed in an MB whose number is lower than the transmission arbitration pointer.
- Any Control and Status write occurs when there is no transmission arbitration process in progress.
- RX Match has updated an RX code to TX code.
- FlexCAN enters the Bus Off state.

If a Control and Status write is performed in the arbitration winner, a new process is restarted immediately.

If a Control and Status write is performed in an MB whose number is higher than the transmission arbitration pointer, the ongoing arbitration process scans this MB as normal.

37.3.4 Receive process

To be able to receive CAN frames into a message buffer, the CPU must prepare it for reception by executing the following steps:

1. If the message buffer is active (either TX or RX), deactivate it (see [Message buffer inactivation](#)), preferably with a safe deactivation (see [Transmission abort mechanism](#)).
2. Write the ID word into the message buffer.
3. To activate the message buffer, write the EMPTY code (0100b) to the CODE field of the Control and Status word. No setup is required for EDL, BRS, and ESI fields. The respective fields in the received message overwrite these fields.

After the MB is activated, it can receive frames that match the programmed filter. At the end of a successful reception, the move-in process updates the message buffer (see [Move-in](#)) as follows:

1. The received data field (up to eight bytes for Classical CAN message format and up to 64 bytes for CAN FD message format) is stored.
2. The received Identifier field is stored.
3. The value of the free-running timer when the second bit of the Identifier field of the frame is written into the Timestamp field of the MB.
4. The received SRR, IDE, RTR, EDL, BRS, ESI, and DLC fields are stored.
5. The CODE field in the Control and Status word is updated (see [Table 248](#) and [Table 249](#) in Section [Message buffer structure](#)).
6. If allowed by the corresponding Interrupt Mask field, a status flag is set in the Interrupt Flag register and an interrupt is generated.

The recommended way for the CPU to service (read) the frame received in a message buffer is:

1. Read the Control and Status word of that message buffer.
2. Verify that the BUSY bit is 0, indicating that the message buffer is locked. If it is not 0, repeat step 1 until it becomes 0. See [Message buffer lock mechanism](#).
3. Read the contents of the message buffer. After the message buffer is locked, FlexCAN move-in processes do not modify its contents. See [Move-in](#).
4. Acknowledge the proper flag in the IFLAG registers.
5. Unlock the message buffer by reading the free-running timer.

To verify frame reception, the CPU should poll the status flag bit for that specific message buffer in one of the IFLAG registers, not the CODE field of that message buffer. Polling the CODE field does not work in this case. After a frame is received and the CPU services the message buffer (by reading the Control and Status word and unlocking the message buffer), the CODE field does not return to EMPTY. It remains FULL, as explained in [Table 248](#). If the CPU tries to work around this behavior by writing to the Control and Status word to force an EMPTY code after reading the message buffer without a prior safe deactivation, a newly received frame matching the filter of that message buffer may be lost.

CAUTION

In summary: never poll by reading the Control and Status word of the message buffers directly. Instead, read the IFLAG registers.

The Identifier field of the received frame is always stored in the matching message buffer. If the match was due to masking, the contents of the ID field in a message buffer may change. When [MCR\[SRXDIS\]](#) becomes 1, FlexCAN does not store frames transmitted by itself in any MB, even if it contains a matching receive MB. Also, no interrupt flag or interrupt signal is generated. Otherwise, when [MCR\[SRXDIS\]](#) becomes 0, if a matching receive MB exists, FlexCAN can receive frames transmitted by itself.

When [MCR\[DMA\]](#) becomes 1, upon receiving a frame in the Legacy FIFO, IFLAG1[BUF5I] generates a DMA request and does not generate a CPU interrupt (see [Legacy RX FIFO in DMA operation](#)). The IMASK1 fields in the Legacy RX FIFO region are not used.

The DMA controller must service the received frame using the following procedure:

1. Read the Control and Status word (read 80h address, optional).
2. Read the ID field (read 84h address, optional).
3. Read all data bytes (start read at 88h address, optional).

37.3.5 Matching process

The matching process scans the message buffer memory for RX MBs programmed with the same ID as the one received from the CAN bus. The matching starts from the lowest number message buffer and continues toward the higher-numbered ones.

For enhanced RX FIFO, see [Enhanced RX FIFO](#).

For legacy RX FIFO, see [Legacy RX FIFO](#).

As the frame is received, it is stored in a hidden auxiliary MB called Receive Serial Message Buffer (RX SMB).

The starting point of the matching process depends on the following conditions:

- If the received frame is a remote frame, the starting point is the CRC field of the frame.
- If the received frame is a data frame with DLC field equal to zero, the starting point is the CRC field of the frame.
- If the received frame is a data frame and the DLC field has a nonzero value, the starting point is the DATA field of the frame.

If a matching ID is found in one of the message buffers, the move-in process transfers the contents of the RX SMB to the matched MB. If any CAN protocol error is detected, no match results are transferred to the matched MB at the end of reception.

The matching process scans all matching elements of the active receive MBs (CODE is EMPTY, FULL, OVERRUN, or ANSWER). The process searches for a successful comparison to the matching elements of the RX SMB that is receiving the frame on the CAN bus. The RX SMB has the same structure as a message buffer. The reception structures (message buffers)

associated with the matching elements that had a successful comparison are the matched structures. The matching winner is selected at the end of the scan among those matched structures. The matching winner depends on conditions described in [Table 221](#).

Table 221. Matching architecture

Structure	SMB[RTR]	CTRL2[RRS]	CTRL2[EACE N]	MB[IDE]	MB[RTR]	MB[ID ¹]	MB[CODE]
Message buffer	0	—	0	cmp ²	no_cmp ³	cmp_msk ⁴	EMPTY, FULL, or OVERRUN
Message buffer	0	—	1	cmp_msk	cmp_msk	cmp_msk	EMPTY, FULL, or OVERRUN
Message buffer	1	0	—	cmp	no_cmp	cmp	RANSWER
Message buffer	1	1	0	cmp	no_cmp	cmp_msk	EMPTY, FULL, or OVERRUN
Message buffer	1	1	1	cmp_msk	cmp_msk	cmp_msk	EMPTY, FULL, or OVERRUN

1. For message buffer structure, if SMB[IDE] is 1, the ID is 29 bits (ID Standard plus ID Extended). If SMB[IDE] is 0, the ID is 11 bits (ID Standard). For Legacy RX FIFO structure, the ID depends on IDAM.
2. cmp: Compares the RX SMB contents to the MB contents regardless of masks.
3. no_cmp: The RX SMB contents are not compared to the MB contents.
4. cmp_msk: Compares the RX SMB contents to MB contents, accounting for masks.

NOTE

For Enhanced RX FIFO, see [Enhanced RX FIFO matching process](#).

A reception structure is free-to-receive when any of the following conditions is satisfied:

- The CODE field of the message buffer is EMPTY.
- The CODE field of the message buffer is either FULL or OVERRUN, and it has already been serviced (the CPU has read the Control and Status word and unlocked it as described in [Message buffer lock mechanism](#)).
- The CODE field of the message buffer is either FULL or OVERRUN and an inactivation (see [Message buffer inactivation](#)) is performed.

The scan order for message buffers is from the matching element with the lowest number to the higher ones.

37.3.5.1 Matching priority

[MCR\[IRMQ\]](#) affects the matching winner search for MBs. If the field is 0, the matching winner is the first matched MB whether it is free-to-receive or not. If it is 1, the matching winner is selected according to this priority:

1. The first free-to-receive matched message buffer
2. The last non-free-to-receive matched message buffer

37.3.5.2 Special cases

If a non-safe MB inactivation (see [Message buffer inactivation](#)) occurs during the matching process and the inactivated MB is the temporary matching winner, the temporary matching winner is invalidated. The matching elements scan is not stopped and

not restarted; it continues normally. The consequence is that the current matching process works as if the matching elements compared before the inactivation did not exist. In this case, a message may be lost.

Consider an example where:

- [MCR\[IRMQ\]](#) is 1.
- There are two message buffers with the same ID: the second and fifth MBs in the array.
- FlexCAN starts receiving messages with that ID.

When the first message arrives, the matching algorithm finds the first match in message buffer number 2. The code of this message buffer is EMPTY, so the message is stored in that MB. When the second message arrives, the matching algorithm finds MB number 2 again, but it is not "free-to-receive." It continues looking, finds MB number 5, and stores the message in that MB. If yet another message with the same ID arrives, the matching algorithm finds no matching free-to-receive MBs, so it overwrites the last matched message buffer (MB number 5). In doing so, it updates the CODE field of the message buffer to OVERRUN.

The ability to match the same ID in more than one MB can be used to implement a reception queue to allow more time for the CPU to service the MBs. By programming more than one MB with the same ID, received messages are queued into the message buffers. The CPU can examine the Timestamp field of the message buffers to determine the order in which the messages arrived.

Matching a range of IDs is possible via ID acceptance masks. FlexCAN supports individual masking per message buffer (see [Receive Individual Mask \(RXIMR0 - RXIMR31\)](#)). During the matching algorithm, if a mask field is 1, the corresponding ID bit is compared. If the mask field is 0, the corresponding ID bit is a "don't care". Individual Mask Registers are implemented in RAM, so they are not initialized out of reset. Also, they can only be programmed when the module is in Freeze mode; otherwise, the module blocks them.

FlexCAN also supports an alternate masking scheme with only [RX Message Buffers Global Mask \(RXMGMASK\)](#), [Receive 14 Mask \(RX14MASK\)](#), and [Receive 15 Mask \(RX15MASK\)](#) for backward compatibility with legacy applications. This alternate masking scheme is enabled when the [MCR\[IRMQ\]](#) = 0.

37.3.6 Receive process in Pretended Networking mode

Pretended Networking mode adds specific wake-up functionality in low-power modes (Doze and Stop mode). When Pretended Networking (PN) mode is enabled by writing 1 to [MCR\[PNET_EN\]](#), FlexCAN continues processing received CAN messages in low-power mode. FlexCAN is able to detect specific wake-up messages by filtering them against identifier (ID) and payload target values using preselected matching criteria.

NOTE

Wake-up functionality is not available for messages in CAN FD format. When in PN mode, CAN FD format messages are ignored.

PN registers are located in the 0B00h–0B7Ch address range and can be written only in Freeze mode. These registers are used for writing PN configuration (both control and target values) prior to entering PN mode. They are also used for reading wake-up flags and the received message ID and data when returning to Normal mode after wake-up. The CPU must wait for [MCR\[LPMACK\]](#) to become 0 before performing any access to FlexCAN PN registers.

PN control registers are described in [Pretended Networking Control 1 \(CTRL1_PN\)](#) and [Pretended Networking Control 2 \(CTRL2_PN\)](#). The control fields that configure the filtering criteria are:

- Payload filtering selection: [CTRL_n_PN\[PLFS\]](#)
- ID filtering selection: [CTRL_n_PN\[IDFS\]](#)
- Filtering combination selection: [CTRL_n_PN\[FCS\]](#)

Table 222. PN target values

Value	Description
FLT_IDE	IDE target value used to filter the incoming message by its format (standard or extended)

Table continues on the next page...

Table 222. PN target values (continued)

Value	Description
FLT_RTR	RTR target value used to filter the incoming message by its type (data or remote frame)
FLT_DLC_HI and FLT_DLC_LO	Target DLC range used to filter the size of the payload of an incoming message
FLT_ID1	ID target value used to filter the incoming message ID (equal to, smaller than or equal to, greater than or equal to, or the lower limit value in an ID range)
FLT_ID2	ID target value used as the upper limit in an ID range
PL1	Payload target value used to filter the incoming message payload (equal to, smaller than or equal to, greater than or equal to, or the lower limit value in a payload range)
PL2	Payload target value used as the upper limit in a payload range

IDE, RTR, ID, and payload filters have their respective masks. The ones in these masks determine which bits are considered in equality comparisons. The zeroes in these masks determine which bits are don't care. ID and payload masks are used only for exact ID and exact payload comparisons.

37.3.6.1 ID filtering

The IDs of incoming messages can be filtered based on the following criteria:

- Match the exact ID value, found by comparing the ID field of the incoming message to the content of target [Pretended Networking ID Filter 1 \(FLT_ID1\)](#). The ID mask is used.
- Less than or equal to the maximum range of ID. That is, any message with ID value smaller than or equal to the content of target FLT_ID1 is accepted. The ID mask is not used.
- Greater than or equal to the minimum range of ID. That is, any message with ID value greater than or equal to the content of target FLT_ID1 is accepted. The ID mask is not used.
- Inside a range of IDs. Any message with an ID value greater than or equal to the content of target FLT_ID1 and smaller than or equal to the content of target [Pretended Networking ID Filter 2 or ID Mask \(FLT_ID2_IDMASK\)](#) is accepted. The ID mask is not used.

See [CTRL1_PN\[IDFS\]](#).

The above criteria for ID filtering must be coherent with FLT_IDE and FLT_RTR target values in [Pretended Networking ID Filter 1 \(FLT_ID1\)](#). Only RX frames that match the respective IDE and RTR bits to the contents of [FLT_ID1\[FLT_IDE\]](#) and [FLT_ID1\[FLT_RTR\]](#) are compared. When a range of IDs is selected (CTRL1_PN[IDFS] = 11), both FLT_ID1 and FLT_ID2 are referred to the same FLT_IDE and FLT_RTR fields in FLT_ID1.

The ID mask is applied only to the exact ID comparison filtering option (CTRL1_PN[IDFS] = 00) to determine which bits are considered in the comparison. For the exact match option, the mask can select any bit within the ID field. For maximum range, minimum range, and inside range comparisons, the ID mask is not considered.

The IDE and RTR masks are applied in both exact and range ID comparison filtering options to determine which bits are considered in comparison.

37.3.6.2 Payload filtering

Similar to the ID criteria, 64-bit data or payloads (PL) of incoming messages can be filtered based on the following criteria:

- A match with the exact payload value, found by comparing the payload field of the incoming message to the content of PL1. The payload mask is used.
- Less than or equal to the maximum range of payload. That is, any message with payload value smaller than or equal to the content of PL1 is accepted. The payload mask is not used.

- Greater than or equal to the minimum range of payload. That is, any message with payload value greater than or equal to the content of PL1 is accepted. The payload mask is not used.
- Inside a range of payloads. Any message with a payload value greater than or equal to the content of PL1 and smaller than or equal to the content of PL2 is accepted. The payload mask is not used.

See [CTRL1_PN\[PLFS\]](#).

The above criteria for payload filtering must be coherent with upper and lower limit values in [Pretended Networking Data Length Code \(DLC\) Filter \(FLT_DLC\)](#). The payload of an incoming message is filtered using the selected criteria only if the DLC value of the incoming message is inside a DLC range:

- Greater than or equal to [FLT_DLC\[FLT_DLC_LO\]](#) (lower limit)
- Lower than or equal to [FLT_DLC\[FLT_DLC_HI\]](#) (upper limit)

A DLC value outside the specified range results in a mismatch. If you configure `FLT_DLC_LO = FLT_DLC_HI`, only payloads of the specified quantity of bytes are filtered. DLC is not maskable.

When the inside range of payloads option is selected (`CTRL1_PN[PLFS] = 11`), both PL1 and PL2 are considered with the 8-byte data length. All data bytes excluded by the DLC of the received message are considered to have value zero.

The payload mask is only used in the exact match option (`CTRL1_PN[PLFS] = 00`). This mask determines which bits or bytes in the 8-byte data field of both incoming message and the contents of PL1 register are used for matching. Mask length must meet the expected range of DLC values. For maximum range, minimum range, and inside range comparisons, the payload mask is not considered.

When FlexCAN receives a remote frame and [CTRL1_PN\[FCS\]](#) is configured to select payload comparison, payload filtering is not considered and the comparison results in a mismatch.

37.3.6.3 Other filtering

Incoming messages can also be filtered based on the quantity and rate of message reception, specifically:

- Several messages that match the filtering criteria for ID or payload for a predefined number of times. This number can be from 1 to 255. See [Pretended Networking Control 1 \(CTRL1_PN\)](#).
- No message matching the filtering criteria for ID or payload up to a timeout trigger. That is, non-reception of a matching message for a defined quantity of time. See [Pretended Networking Control 2 \(CTRL2_PN\)](#).

When the counter reaches the predefined timeout value, FlexCAN can generate a wake-up timeout event from an internal timer with associated comparator circuitry capable of generating a timeout flag. This behavior is specified in [CTRL2_PN\[MATCHTO\]](#).

The above filtering criteria can be used together as follows:

- Message ID filtering only
- Message ID filtering and Payload filtering
- Message ID filtering only occurring *n* times
- Message ID filtering and Payload filtering occurring *n* times

The timeout counter runs concurrently with the reception filtering process. Both engines (timeout counter and message filtering) are independent. If an incoming message matches the selected filter criteria, the timeout counter continues counting until the CPU wakes up. If the timeout counter reaches the target value, the message filtering process continues to filter incoming messages until the CPU wakes up. [WU_MTC\[MOUNTER\]](#) reports the number of matched messages that occurred in Pretended Networking mode up to the moment the CPU wakes up.

In Pretended Networking mode, the wake-up event that may occur sets the respective wake-up flag (see [Pretended Networking Wake-Up Match \(WU_MTC\)](#)):

- [WU_MTC\[WUMF\]](#) indicates a successful match meeting the selected filtering criteria.
- [WU_MTC\[WTOF\]](#) indicates a timeout trigger.

Any of these flags generates interrupts to the CPU, provided the respective mask bits are enabled (`CTRL1_PN[WUMF_MSK] = 1` or `CTRL1_PN[WTOF_MSK] = 1`).

There are four Wake-up Message Buffers (WMBs) used to store incoming messages in Pretended Networking mode. Up to four messages can be stored (see [Wake-Up Message Buffer \(WMB0_CS - WMB3_CS\)](#)).

When `CTRL1_PN[NMATCH]` = 1, only one message is received if the filtering criteria are matched. This message is stored in WMB0.

If `CTRL1_PN[NMATCH]` is between two and four, WMB1, WMB2, and WMB3 store the second, third, and fourth matching messages, respectively.

If `CTRL1_PN[NMATCH]` is greater than four, the last four matching messages are stored in the WMBs. The WMB index indicates the arrival order. The last message is stored in WMB3.

Only the valid data bytes of the incoming match message are stored in the data field of WMBs. The non-valid data bytes are read as zero. If `DLC = 0` and `RTR = 1`, the data field is filled with zeroes. In any of the above cases, the wake-up interrupt is generated only when the filtering criteria are completed and `CTRL1_PN[WUMF_MSK] = 1`.

When a non-match wake-up event occurs (timeout or external) and `WU_MTC[MOUNTER] ≥ 4`, the message stored in WMB0 does not have valid content. WMB0 is used as a buffer for the current message in the CAN bus. Messages received during Pretended Networking mode do not have time stamps, and the respective field in the WMB structure must be ignored.

In low-power mode (Doze or Stop), all processes are shut down except for the PN functionality inside the CAN_PE subblock, which remains clocked by the oscillator clock (see [Clock domains and restrictions](#)). FlexCAN continues to receive incoming messages, but only compares them to the predefined target values according to the selected filtering criteria. The matching, arbitration, move-in, and move-out processes, normally available in Normal mode, are not performed in Pretended Networking mode.

FlexCAN in Pretended Networking reacts to messages on the CAN bus in the same manner as in Normal mode. It generates acknowledge bits, detect and count errors, and so on.

37.3.7 Move process

There are two types of move process: move-in and move-out.

37.3.7.1 Move-in

The move-in process is the copying of a message received by an RX SMB to an RX message buffer that has matched it. Each RX SMB has its own move-in process, but only one is performed at a given time. The move-in starts only when the message held by the RX SMB has a corresponding match (see [Matching process](#)) and all of the following conditions are true:

- The CAN bus has reached or already gone past:
 - The second bit of Intermission field next to the frame that carried the message that is in the RX SMB.
 - The first bit of an overload frame next to the frame that carried the message in the RX SMB.
- There is no ongoing matching process.
- The CPU is not locking the destination message buffer.
- No move-in process from another RX SMB is ongoing. If more than one move-in process is to be started at the same time, both are performed and the newest process substitutes for the oldest.

The term "pending move-in" is used throughout the documentation and stands for a move-to-be that does not satisfy all of the above conditions.

If any of the following conditions is satisfied, the move-in is canceled and the RX SMB is able to receive another message:

- The destination message buffer is inactivated after the CAN bus has reached the first bit of the Intermission field next to the frame that carried the message. Also, its matching process has finished.
- There is a previous pending move-in to the same destination message buffer.
- The RX SMB is receiving a frame transmitted by FlexCAN itself and self-reception is disabled (`MCR[SRXDIS] = 1`).
- Any CAN protocol error is detected.

If the module enters Freeze or Low-Power mode, the pending move-in is not canceled. It remains on hold, waiting for Freeze and Low-Power mode to be exited and for the module to be unlocked. If a message buffer is unlocked during Freeze mode, the move-in occurs immediately.

The move-in process is FlexCAN executing the following steps:

1. Read all data words from the RX SMB in accordance with the selected payload size for the RX storage element.
2. Write all data words to the RX message buffer according to the selected payload size for the RX storage element. If the data size of the storage element is smaller than the original payload size described in the DLC field of the message, the payload is truncated. The high-order bytes that do not fit the destination size are lost.
3. Read the Control and Status and ID words from the RX SMB.
4. Write the Control and Status and ID words to the RX message buffer, and update the CODE field.

The move-in process is not atomic; the inactivation of the destination message buffer immediately cancels it (see [Message buffer inactivation](#)). In this case, the message buffer may remain partially updated, and therefore incoherent.

To alert the CPU that the message buffer content is temporarily incoherent, the BUSY Bit (least significant bit of the CODE field) of the destination message buffer becomes 1 during move-in.

37.3.7.2 Move-out

The move-out process is the copying of content from a TX message buffer to the TX SMB when a message for transmission is available (see [Arbitration process](#)). The move-out occurs in the following conditions:

- In the first bit of the Intermission field
- During the Bus Off state, when the TX error counter is in the 124 to 128 range
- During the Bus Idle state
- During the Wait for Bus Idle state

The move-out process is not atomic. Only the CPU has priority to access the memory concurrently outside the Bus Idle state. In Bus Idle, the move-out has the lowest priority of the concurrent memory accesses.

37.3.8 Data coherence

In order to maintain data coherency and proper FlexCAN operation, the CPU must obey the rules described in [Transmission process](#) and [Receive process](#).

37.3.8.1 Transmission abort mechanism

The abort mechanism provides a safe way to request the abortion of a pending transmission. A feedback mechanism is provided to inform the CPU whether the transmission was aborted or the frame could not be aborted and was transmitted instead.

These primary conditions must be fulfilled in order to abort a transmission:

- [MCR\[AEN\]](#) must be 1.
- The first CPU action must be the writing of abort code (1001b) into the CODE field of the Control and Status word.

Active message buffers configured for transmission must be aborted before they can be updated. The write operation is blocked and the transmission is not disturbed when the abort code is written to:

- A message buffer currently being transmitted.
- A message buffer that was already loaded into the TX SMB for transmission.

In this case, the abort request is captured and kept pending until one of the following conditions is satisfied:

- The module loses the bus arbitration.
- There is an error during the transmission.
- The module is put into Freeze mode.

- The module enters the Bus Off state.
- There is an overload frame.

If none of the conditions above are reached:

1. The message buffer is transmitted correctly.
2. The interrupt flag is set in the proper IFLAG register.
3. If enabled, an interrupt to the CPU is generated.

The abort request is automatically cleared when the interrupt flag is set. If only one of the above conditions is reached, the frame is not transmitted. In this case:

1. The abort code is written into the CODE field.
2. The interrupt flag is set in the proper IFLAG register.
3. Optionally, an interrupt is generated to the CPU.

If the CPU writes the abort code before the transmission begins internally, the write operation is not blocked. The MB is updated and the interrupt flag is set. In this way, the CPU only needs to read the abort code to verify that the active MB was safely inactivated. In this case, although `MCR[AEN] = 1` and the CPU wrote the abort code, the MB is inactivated and not aborted, because the transmission did not start yet. A message buffer is aborted only when the abort request is captured and kept pending until one of the previous conditions is satisfied.

37.3.8.2 Message buffer inactivation

Inactivation protects the message buffer against updates by FlexCAN internal processes. It allows the CPU to rely on message buffer data coherence after having updated it, even in Normal mode.

Inactivation of transmission message buffers must be performed only when `MCR[AEN] = 0`.

If a message buffer is inactivated, it does not participate in the arbitration process or the matching process until it is reactivated. See [Transmission process](#) and [Receive process](#) for detailed instructions on how to inactivate and reactivate a message buffer.

To inactivate a message buffer, the CPU must update its CODE field to INACTIVE (either 0b or 1000b).

Because you cannot synchronize the CODE field update with FlexCAN internal processes, an inactivation can have the following consequences:

- A frame in the bus that matches the filtering of an inactivated RX message buffer may be lost without notice. This loss can occur even if there are other message buffers with the same filter.
- A frame containing the message within an inactivated TX message buffer may be transmitted without setting the respective IFLAG flag.

To perform a safe inactivation and avoid the above consequences for TX message buffers, the CPU must use the transmission abort mechanism (see [Transmission abort mechanism](#)).

The inactivation automatically unlocks the message buffer (see [Message buffer lock mechanism](#)).

37.3.8.3 Message buffer lock mechanism

In addition to message buffer inactivation, FlexCAN uses a message buffer lock mechanism to maintain data coherence for the receive process. When the CPU reads the Control and Status word of an RX message buffer with codes FULL or OVERRUN, FlexCAN is configured to allow the CPU to read the whole message buffer in an atomic operation. FlexCAN sets an internal lock flag for that message buffer.

The lock is released in any of the following events:

- The CPU reads the free-running timer (global unlock operation).
- The CPU reads the Control and Status word of another message buffer, regardless of its code.

- The CPU writes into the Control and Status word. This procedure is not recommended for normal unlocking, because it cancels a pending move and may lose a received message.

The message buffer lock prevents a new frame from being written into the message buffer when the CPU is reading it.

NOTE

The locking mechanism applies only to RX message buffers that have a code other than INACTIVE (0b) or EMPTY^[1] (0100b). TX message buffers cannot be locked.

Consider an example where:

- The second and the fifth message buffers of the array are programmed with the same ID.
- FlexCAN has already received and stored messages into these two message buffers.
- The CPU reads message buffer number 5 while another message with the same ID is arriving.

When the CPU reads the Control and Status word of message buffer number 5, this message buffer is locked. The new message arrives and the matching algorithm finds no free-to-receive message buffers, so it overrides message buffer number 5. This message buffer is locked, so the new message cannot be written to it. The message remains in the RX SMB until the message buffer is unlocked, and only then is it written to the message buffer.

If the message buffer remains locked and another new message with the same ID arrives, the new message overwrites the one in the RX SMB. There is no indication of lost messages in the CODE field of the message buffer or in [Error and Status 1 \(ESR1\)](#).

When the message is moved from the RX SMB to the message buffer, the BUSY bit on the CODE field becomes 1. If the CPU reads the Control and Status word and identifies that the BUSY bit is 1, it must wait until the BUSY bit becomes 0 to access the MB.

NOTE

If the BUSY bit is 1 or the message buffer is empty, reading the Control and Status word does not lock the message buffer.

Inactivation takes precedence over locking. If the CPU inactivates a locked receive message buffer, then its lock status is negated and the message buffer is marked as invalid for the current matching round. Any pending message on the RX SMB is not transferred to the message buffer. A message buffer is unlocked when the CPU reads [Free-Running Timer \(TIMER\)](#) or the Control and Status word of another message buffer.

The lock and unlock mechanisms have the same functionality in Normal and Freeze modes.

An unlock during Normal or Freeze mode results in the move-in of the pending message. If unlocking occurs during a low-power mode, however, the move-in is postponed (see [Modes of operation](#)). Move-in takes place only when the module returns to Normal or Freeze mode.

37.3.9 Enhanced RX FIFO

FlexCAN supports an enhanced RX FIFO engine which can store up to 12 CAN FD messages. The region 2000h–204Bh contains the output of the FIFO, which the CPU should read. To enable the enhanced RX FIFO, write 1 to [ERFCR\[ERFEN\]](#). FlexCAN has two FIFO options, Legacy RX FIFO and Enhanced RX FIFO, but both options cannot be enabled at the same time. See [Legacy RX FIFO](#) for additional information.

To configure the enhanced RX FIFO watermark, write a value to [ERFCR\[ERFWM\]](#). If [ERFCR\[ERFWM\]](#) is configured, the CPU is notified only if a minimum number of messages is stored in the FIFO. When the number of stored messages is greater than the value in [ERFCR\[ERFWM\]](#), the module sets [ERFSR\[ERFWMIE\]](#). Optionally, if [MCR\[DMA\]](#) or [ERFIER\[ERFWMIE\]](#) are enabled, a DMA transfer or an interrupt can be triggered, respectively.

For the enhanced RX FIFO to receive, the CPU must execute the configuration procedure below. If the CPU must change any configurations of the Enhanced RX FIFO, the same procedure must be followed.

Prerequisites

[1] In previous FlexCAN versions, reading the Control and Status word locked the message buffer even when CODE indicates it is EMPTY. This behavior is maintained when the IRMQ bit is 0.

[MCR\[RFEN\]](#) must be 0.

Procedure

Step	Purpose	Programming	Notes
1	Enter Freeze mode.	See Freeze mode .	—
2	If enhanced RX FIFO is not already enabled, enable it.	Write 1 to ERFCR[ERFEN] .	—
3	Reset enhanced RX FIFO engine.	Write 1 to ERFSR[ERFCLR] .	—
4	If the enhanced RX FIFO error flags are set, clear them.	Write 1 to these flags: • ERFSR[ERFUFW] • ERFSR[ERFOVF] • ERFSR[ERFWM] • ERFSR[ERFDA]	—
5	Specify the total number of enhanced RX FIFO filter elements to be used in Enhanced RX FIFO reception.	Write the number to ERFCR[NFE] .	—
6	Specify the number of extended ID and standard ID filter elements to be used in Enhanced RX FIFO reception.	Write the number to ERFCR[NEXIF] .	$ERFCR[NEXIF] \leq ERFCR[NFE] + 1$.
7	If you are using DMA, enable DMA.	Write 1 to MCR[DMA] .	—
8	If you are using DMA, specify the number of words to transfer for each Enhanced RX FIFO data element.	Write the number to ERFCR[DMALW] .	—
9	Specify the Enhanced RX FIFO watermark.	Write the number to ERFCR[ERFWM] .	If $MCR[DMA] = 1$, $ERFCR[ERFWM]$ should be 0h.
10	If you are using interrupts, enable the interrupts.	Write 1 to the interrupt enables in Enhanced RX FIFO Interrupt Enable (ERFIER) .	—
11	Configure the filter elements.	Write to the ERFFELn registers.	ERFFELn registers are implemented in RAM; you must explicitly initialize them before prior any reception.
12	Exit Freeze mode.	See Freeze mode .	—

There are two types of enhanced RX FIFO filter elements that can be stored in [ERFFEL \$n\$](#) registers: extended-ID filter elements and standard-ID filter elements. Each extended-ID filter element is stored in two [ERFFEL \$n\$](#) registers, and each standard-ID filter element is stored in one [ERFFEL \$n\$](#) register. [ERFCR\[NFE\]](#) defines the total number of Enhanced RX FIFO filter elements.

In addition, the filter memory space can be split into two regions: one for extended-ID filter elements and another for standard-ID filter elements, according to [ERFCR\[NEXIF\]](#). [Figure 154](#) shows how the enhanced RX filter elements are defined. See [Enhanced RX FIFO matching process](#) for information about the Enhanced RX FIFO matching process and filter element formats.

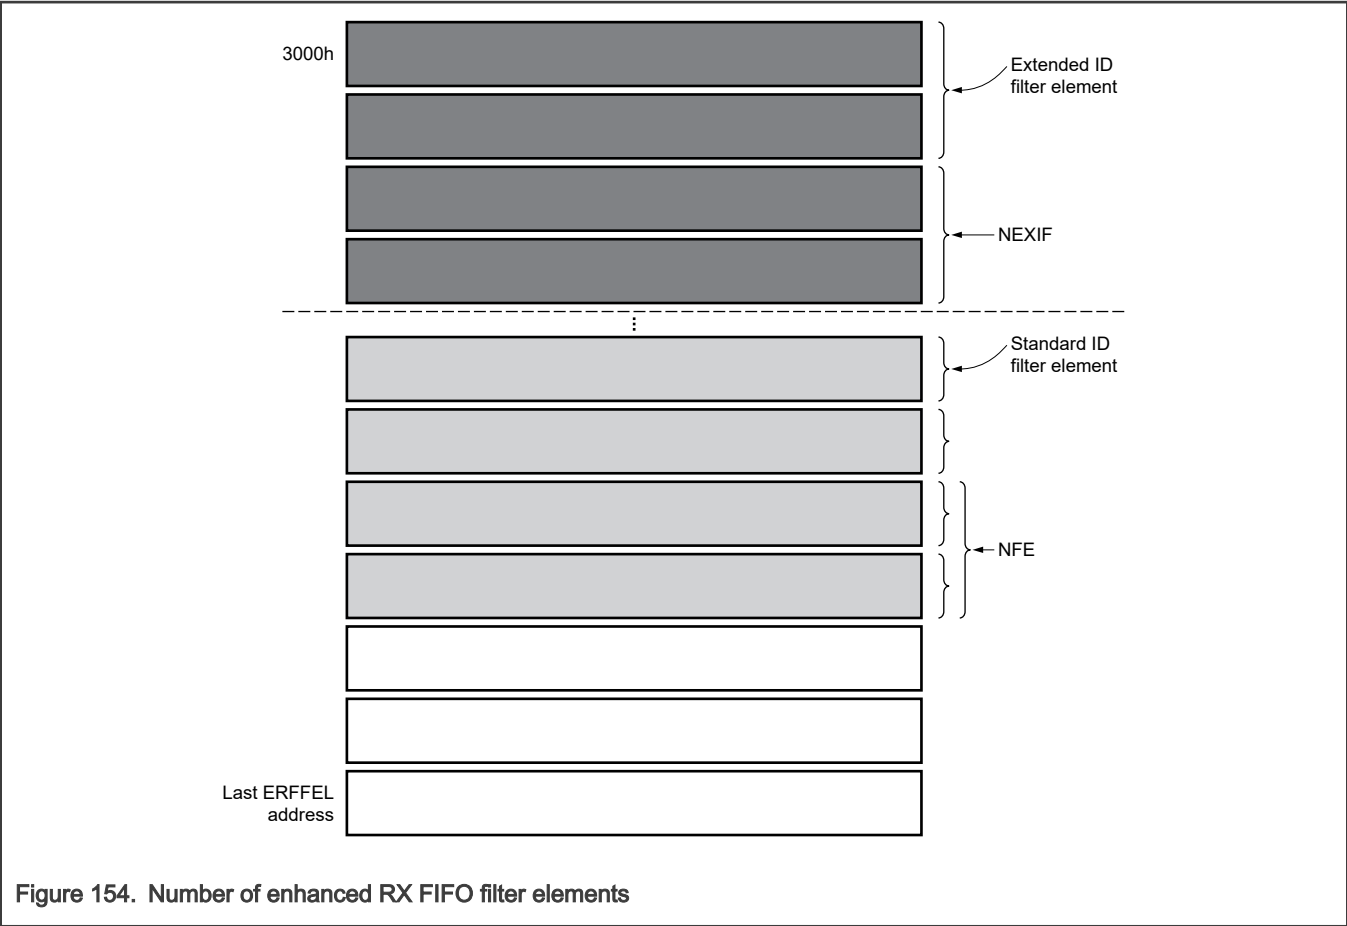


Figure 154. Number of enhanced RX FIFO filter elements

37.3.9.1 Enhanced RX FIFO matching process

When `ERFCR[ERFEN]` = 1, FlexCAN scans the `ERFFEL $n$` memory region. If at least one filter element satisfies the matching criteria, the CAN message content is transferred to the enhanced RX FIFO memory. If multiple filters match the incoming message ID, the first matching filter found by the matching process must be indicated in `IDHIT`.

Each `ERFFEL $n$` register can store one standard filter element. `ERFFEL $n$ [FEL]`[31:30], also called `FSCH`, determines the matching criteria in this way:

- If `FSCH` = b00, the filter scheme is based on mask and filter. A CAN message matches a standard ID filter element only if these criteria are reached:
 1. CAN message is base-frame format (`IDE` = 0).
 2. (`ID[ $n$ ] = STD ID filter [ $n$ ]`) or (`STD ID Mask[ $n$ ] = 0`) for each bit n from 0 to 10.
 3. (`RTR = RTR Filter`) or (`RTR MASK = 0`).

In this explanation, `RTR` and `ID` are the Remote Transmit Request field and the ID from a CAN message, respectively.

If `FSCH` = b00, the filters and masks are defined as shown in Table 223.

Table 223. Standard ID filter element with filter and mask scheme (`FSCH` = b00)

31	30	29	28	27	26							16	15			12	11	10									0
FSCH = b00		Reserved		RTR Filter	STD ID Filter								Reserved			RTR MASK	STD ID MASK										

- If FSCH = b01, the filter scheme is based on range. A CAN message matches a standard ID filter element only if these criteria are reached:
 1. CAN message is base frame format (IDE = 0).
 2. $ID \geq \text{STD ID Filter1}$.
 3. $ID \leq \text{STD ID Filter2}$.
 4. (RTR = RTR filter) or (RTR MASK = 0).

RTR and ID are the Remote Transmit Request bit and ID from a CAN message, respectively. If FSCH = b01, the filters and mask are defined as shown in [Table 224](#).

Table 224. Standard ID filter element with range scheme (FSCH = b01)

31	30	29	28	27	26								16	15			12	11	10									0
FSCH = b01		Reserved		RTR Filter	STD ID Filter2								Reserved		RTR MASK	STD ID Filter1												

- If FSCH = b10, the filter scheme is based on two filters without masks. A CAN message matches a standard ID filter element only if these criteria are reached:
 1. CAN message is base frame format (IDE = 0).
 2. $(ID[n] = \text{STD ID Filter1}[n])$ or $(ID[n] = \text{STD ID Filter2}[n])$ for each bit n from 0 to 10.
 3. (RTR = RTR Filter1) or (RTR = RTR Filter2).

RTR and ID are the Remote Transmit Request bit and ID from a CAN message, respectively. If FSCH = b10, the filters are defined as shown in [Table 225](#).

Table 225. Standard ID filter element with two-filter scheme (FSCH = b10)

31	30	29	28	27	26								16	15			12	11	10									0
FSCH = b10		Reserved		RTR Filter 2	STD ID Filter2								Reserved		RTR Filter 1	STD ID Filter1												

Each pair of ERFFEL n registers can store one extended filter element. ERFFEL n [FSCH] determines the matching criteria in this way:

- If FSCH = b00, the filter scheme is based on mask and filter. A CAN message matches an extended ID filter element only if these criteria are reached:
 1. CAN message is extended frame format (IDE = 1).
 2. $(ID[n] = \text{EXT ID filter}[n])$ or $(\text{EXT ID Mask}[n] = 0)$ for each bit n from 0 to 28.
 3. (RTR = RTR Filter) or (RTR MASK = 0).

If FSCH = b00, the filters and masks are defined as shown in [Table 226](#).

Table 226. Extended ID filter element with filter + mask scheme (FSCH = b00)

31	30	29	28																									0
FSCH		RTR Filter	EXT ID Filter																									
Reserved		RTR MASK	EXT ID MASK																									

- If FSCH = b01, the filter scheme is based on range. A CAN message matches an extended ID filter element only if the following criteria are reached:
 1. CAN message is extended frame format (IDE = 1).
 2. ID $\geq$ EXT ID Filter1.
 3. ID $\leq$ EXT ID Filter2.
 4. (RTR = RTR Filter) or (RTR MASK = 0).

If FSCH = b01, the filters and masks are defined as shown in [Table 227](#).

Table 227. Extended ID filter element with range scheme (FSCH = b01)

31	30	29	28																										0
FSCH		RTR Filter	EXT ID Filter2																										
Reserved		RTR MASK	EXT ID Filter 1																										

- If FSCH = b10, the filter scheme is based on two filters without masks. A CAN message matches an extended ID filter element only if these criteria are reached:
 1. CAN message is extended frame format (IDE = 1).
 2. (ID[n] = EXT ID Filter1[n]) or (ID[n] = EXT ID Filter2[n]) for each bit *n* from 0 to 28.
 3. (RTR = RTR Filter1) or (RTR = RTR Filter2).

If FSCH = b10, the filters are defined as shown in [Table 228](#).

Table 228. Extended ID filter element with two-filter scheme (FSCH = b10)

31	30	29	28																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																	</

37.3.9.2 Enhanced RX FIFO under DMA operation

You can enable the DMA feature by writing 1 to both [ERFCR\[ERFEN\]](#) and [MCR\[DMA\]](#). The DMA controller can read the received message by reading a message buffer structure at the enhanced FIFO output port at the address range defined in [Enhanced RX FIFO structure](#).

NOTE

FlexCAN supports 32-bit access only for DMA transfers.

For proper FIFO engine operation, the CPU should not access the Enhanced FIFO output port address range during DMA operation. Before writing 1 to MCR[DMA], the CPU must service Enhanced RX FIFO status bits. Otherwise, these bits may show that the FIFO has data to be serviced, and mistakenly generate a DMA request. Before writing 0 to MCR[DMA], the CPU must first clear the [ERFSR\[ERFUFW\]](#), [ERFSR\[ERFOVF\]](#), [ERFSR\[ERFWM\]](#), and [ERFSR\[ERFDA\]](#) flags. It must then clear the enhanced RX FIFO engine by writing one to [ERFSR\[ERFCLR\]](#).

When there is one frame available to be read from the Enhanced RX FIFO, FlexCAN sets **ERFSR[ERFDA]**. Upon receiving the request, the DMA controller can read the message in the Enhanced RX FIFO output. Each message reading process must end by the address defined in **ERFCR[DMALW]**.

Follow these rules for Enhanced RX FIFO DMA operation:

- Because a DMA transfer cannot be changed dynamically, program `ERFCR[DMALW]` so the enhanced RX FIFO element can store the largest CAN message present on the CAN bus.
- Data bytes are valid according to the DLC field. See [Table 251](#).

Each time the DMA controller reads one message from the FIFO, FlexCAN clears `ERFSR[ERFDA]`. If there is at least one message stored in the FIFO, FlexCAN sets it again.

Consider an example where the maximum number of bytes in the data field of a CAN frame for a certain application is eight. In that case, the last enhanced RX FIFO address offset can be found in [Table 261](#) and [Table 262](#). Using this address offset, `ERFCR[DMALW]` can be determined in this way:

- Maximum number of data bytes = 8
- Last address offset = `TS_OFF` = 2010h
- `DMALW` = 4

37.3.9.3 Enhanced RX FIFO clear operation

When `ERFCR[ERFEN]` is 1, the CPU can clear the Enhanced RX FIFO by writing 1 to `ERFSR[ERFCLR]`. The clear operation resets the internal FIFO pointers, but the FIFO content stored in RAM is not changed. This operation can only be performed in Freeze mode; the module blocks the operation in other modes. This operation does not clear `ERFSR[ERFUFW]`, `ERFSR[ERFOVF]`, `ERFSR[ERFDA]`, or `ERFSR[ERFWM]`. The CPU must service all these fields before executing the clear FIFO operation.

37.3.10 Legacy RX FIFO

The Legacy RX FIFO is receive-only. To enable it, write 1 to `MCR[RFEN]`. To maintain software backward compatibility with previous versions of FlexCAN that did not have the Legacy FIFO feature, the reset value of this field is zero.

CAUTION

Do not enable Legacy RX FIFO when the CAN FD feature is enabled.

The Legacy FIFO is six messages deep. The memory region the Legacy FIFO structure occupies (both message buffers and Legacy FIFO engine) is described in [Legacy RX FIFO structure](#). The CPU can read the received messages sequentially, in the order they were received, by repeatedly reading a message buffer structure at the output of the Legacy FIFO.

`IFLAG1[BUF5I]` (Frames Available in Legacy RX FIFO) is set when at least one frame is available to be read from the Legacy FIFO. If the corresponding mask bit enables it, an interrupt is generated. Upon receiving the interrupt, the CPU can read the message (accessing the output of the Legacy FIFO as a message buffer) and [Legacy RX FIFO Information \(RXFIR\)](#), then clear the interrupt. If there are more messages in the Legacy FIFO, clearing the interrupt:

1. Updates the output of the Legacy FIFO with the next message.
2. Updates `RXFIR` with the attributes of that message.
3. Reissues the interrupt to the CPU.

Otherwise, the flag remains cleared. The output of the Legacy FIFO is valid only when `IFLAG1[BUF5I]` is set.

`IFLAG1[BUF6I]` (Legacy RX FIFO Warning) is set when the Legacy RX FIFO receives a new message that increases the number of unread messages from four to five. This change means that the Legacy RX FIFO is almost full. The flag remains set until the CPU clears it.

`IFLAG1[BUF7I]` (Legacy RX FIFO Overflow) is set when an incoming message is lost because the Legacy RX FIFO is full. The flag is not set when the Legacy RX FIFO is full and a message buffer captures the message. The flag remains set until the CPU clears it.

Clearing one of the three flags above does not affect the state of the other two.

If an IFLAG flag is set and the corresponding mask bit is 1, an interrupt is generated.

A powerful filtering scheme is provided to accept only frames intended for the target application, reducing the interrupt servicing workload. The filtering criteria are specified by programming a table of up to 128 32-bit registers, according to [CTRL2\[RFFN\]](#). This table can be configured to one of the following formats (see also [Legacy RX FIFO structure](#)):

- Format A: 128 Identifier Acceptance Filters (IDAFs) — extended or standard IDs including IDE and RTR
- Format B: 256 IDAFs — standard IDs or extended 14-bit ID slices including IDE and RTR
- Format C: 512 IDAFs — standard or extended 8-bit ID slices

NOTE

A chosen format is applied to all entries of the filter table. It is not possible to mix formats within the table.

Every frame available in the Legacy RX FIFO has a corresponding Identifier Acceptance Filter Hit Indicator (IDHIT). The IDHIT can be read in the IDHIT field in the Control and Status word, as shown in the Legacy RX FIFO Structure description. The CPU can also obtain this information by accessing [Legacy RX FIFO Information \(RXFIR\)](#). [RXFIR\[IDHIT\]](#) refers to the message at the output of the Legacy FIFO, and is valid when [IFLAG1\[BUF5I\]](#) is set. RXFIR must be read only before clearing the flag, guaranteeing that the information refers to the correct frame within the Legacy FIFO.

The Individual Mask Registers ([RXIMR_n](#)) individually affect up to 32 elements of the filter table, according to the value of [CTRL2\[RFFN\]](#). This configuration allows very powerful filtering criteria to be defined. If [MCR\[IRMQ\]](#) is 0, the Legacy RX FIFO filter table is affected by [Legacy RX FIFO Global Mask \(RXFGMASK\)](#).

NOTE

See [Table 215](#) for information about the difference between FD and non-FD regarding this feature.

37.3.10.1 Legacy RX FIFO in DMA operation

The receive-only Legacy FIFO can support DMA. To enable this feature, write 1 to both [MCR\[RFEN\]](#) and [MCR\[DMA\]](#). To maintain backward compatibility with previous versions of the module that did not have the DMA feature, the reset value of [MCR\[DMA\]](#) is zero.

The DMA controller can read the received message by reading a message buffer structure at the Legacy FIFO output port in the 80h–8Ch address range.

NOTE

FlexCAN supports 32-bit access only for DMA transfers.

When [MCR\[DMA\]](#) = 1, the CPU must not access the Legacy FIFO output port address range. Before writing 1 to [MCR\[DMA\]](#), the CPU must service the [IFLAG](#) flags set in the Legacy RX FIFO region. Otherwise, these flags may indicate that the FIFO has data to be serviced, and mistakenly generate a DMA request. Before writing 0 to [MCR\[DMA\]](#), the CPU must perform a clear Legacy FIFO operation.

When at least one frame available to be read from the FIFO, [IFLAG1\[BUF5I\]](#) (Frames available in Legacy RX FIFO) is set. A DMA request is generated simultaneously. Upon receiving the request, the DMA controller can read the message (accessing the output of the Legacy FIFO as a message buffer). The DMA reading process must end by reading address 8Ch. This read operation:

- Clears [IFLAG1\[BUF5I\]](#).
- Updates the FIFO output with the next message (if the FIFO is not empty).
- Updates [Legacy RX FIFO Information \(RXFIR\)](#) with the attributes of the new message.

If there are more messages stored in the FIFO, [IFLAG1\[BUF5I\]](#) is reasserted and another DMA request is issued. Otherwise, the flag remains cleared.

[IFLAG1\[BUF6I\]](#) and [IFLAG1\[BUF7I\]](#) are not used when the DMA feature is enabled.

When FlexCAN is working with DMA, the CPU does not receive any Legacy RX FIFO interruption and must not clear the related [IFLAG](#) flags. The related [IMASK](#) bits are not used to mask the generation of DMA requests.

NOTE

See [Table 215](#) for information about the difference between FD and non-FD regarding this feature.

37.3.10.2 Clear legacy FIFO

When [MCR\[RFEN\]](#) = 1, you can use the clear Legacy FIFO operation to empty Legacy FIFO contents. When the CPU writes 1 to [IFLAG1\[BUF0I\]](#), the clear FIFO operation occurs. This operation can only be performed in Freeze mode; FlexCAN blocks it in other modes. This operation does not clear the FIFO IFLAG flags; the CPU must service all FIFO IFLAG flags before executing the clear FIFO operation.

When Legacy RX FIFO is working with DMA, the clear FIFO operation clears [IFLAG1\[BUF5I\]](#), and the DMA request is canceled.

CAUTION

The clear Legacy FIFO operation does not clear IFLAG flags, except when [MCR\[DMA\]](#) = 1; in this case, only [IFLAG1\[BUF5I\]](#) is cleared.

37.3.11 ACK suppression

FlexCAN does not send acknowledgment when connected through CAN HUB and ACK suppression is enabled by [CTRL2\[ASD\]](#). When any of the on-chip CAN controllers (connected through CAN HUB) are transmitting, all the on-chip receivers do not send the acknowledgment of received frames. All the on-chip receivers accept the frames only when there is acknowledgment by external receivers. If there is no acknowledgment by external receivers, the frame is dropped and the BIT error is notified.

37.3.12 CAN protocol-related features

37.3.12.1 CAN FD ISO compliance

The CAN FD protocol has been improved to increase the failure-detection capability that was in the original CAN FD protocol. This original protocol is also called non-ISO CAN FD, by CAN in Automation (CiA). A three-bit stuff counter and a parity bit have been introduced in the improved CAN FD protocol, now called ISO CAN FD. The CRC calculation has also been modified. All these improvements make the ISO CAN FD protocol incompatible with the non-ISO CAN FD protocol. FlexCAN still supports non-ISO CAN FD, so it can be used during an intermediate phase, for evaluation and development purposes.

It is recommended that you configure FlexCAN with the ISO CAN FD protocol by writing 1 to [CTRL2\[ISOCANFDEN\]](#).

37.3.12.2 CAN FD frames

ISO 11898-1:2015 specifies the Classical Frame format compliant to ISO 11898-1:2003 (2003) and introduces the CAN Flexible Data Rate Frame format (CAN FD). The Classical Frame format allows bit rates up to one Mbit/s and payloads up to eight bytes per frame. The Flexible Data Rate Frame format allows bit rates faster than one Mbit/s and payloads longer than eight bytes per frame. FlexCAN can receive and transmit CAN FD messages interleaved with Classical CAN messages.

There are additional control bits in the CAN FD frame:


- The Extended Data Length (EDL) bit enables a longer data payload with different data length coding.
- The Bit Rate Switch (BRS) bit decides whether the bit rate is switched inside a CAN FD format frame.
- The Error State Indicator (ESI) flag is transmitted dominant by error active nodes, and recessive by error passive nodes.

There are no Remote Frames (see [Remote frames](#)) in the CAN FD format. A message configured to transmit a Remote Frame is always sent out in Classical CAN format. When an FD frame is received and matches a message buffer, the RTR bit in the receiving message buffer becomes 0. The RTR bit must be considered in classical frames only.

37.3.12.2.1 CAN FD messages

CAN FD messages may be formatted as long frames where the data field exceeds eight bytes, and may range from 12 up to 64 bytes. They can also be configured to support bit rate switching. In this case, the control field, data field, and CRC field of a CAN frame are transmitted with a higher bit rate than the beginning and end of the frame. Messages in the classical CAN format

are limited to transport a maximum payload of eight bytes at nominal rate. [Figure 155](#) illustrates the message formats for classical and FD frames with either standard or extended ID.

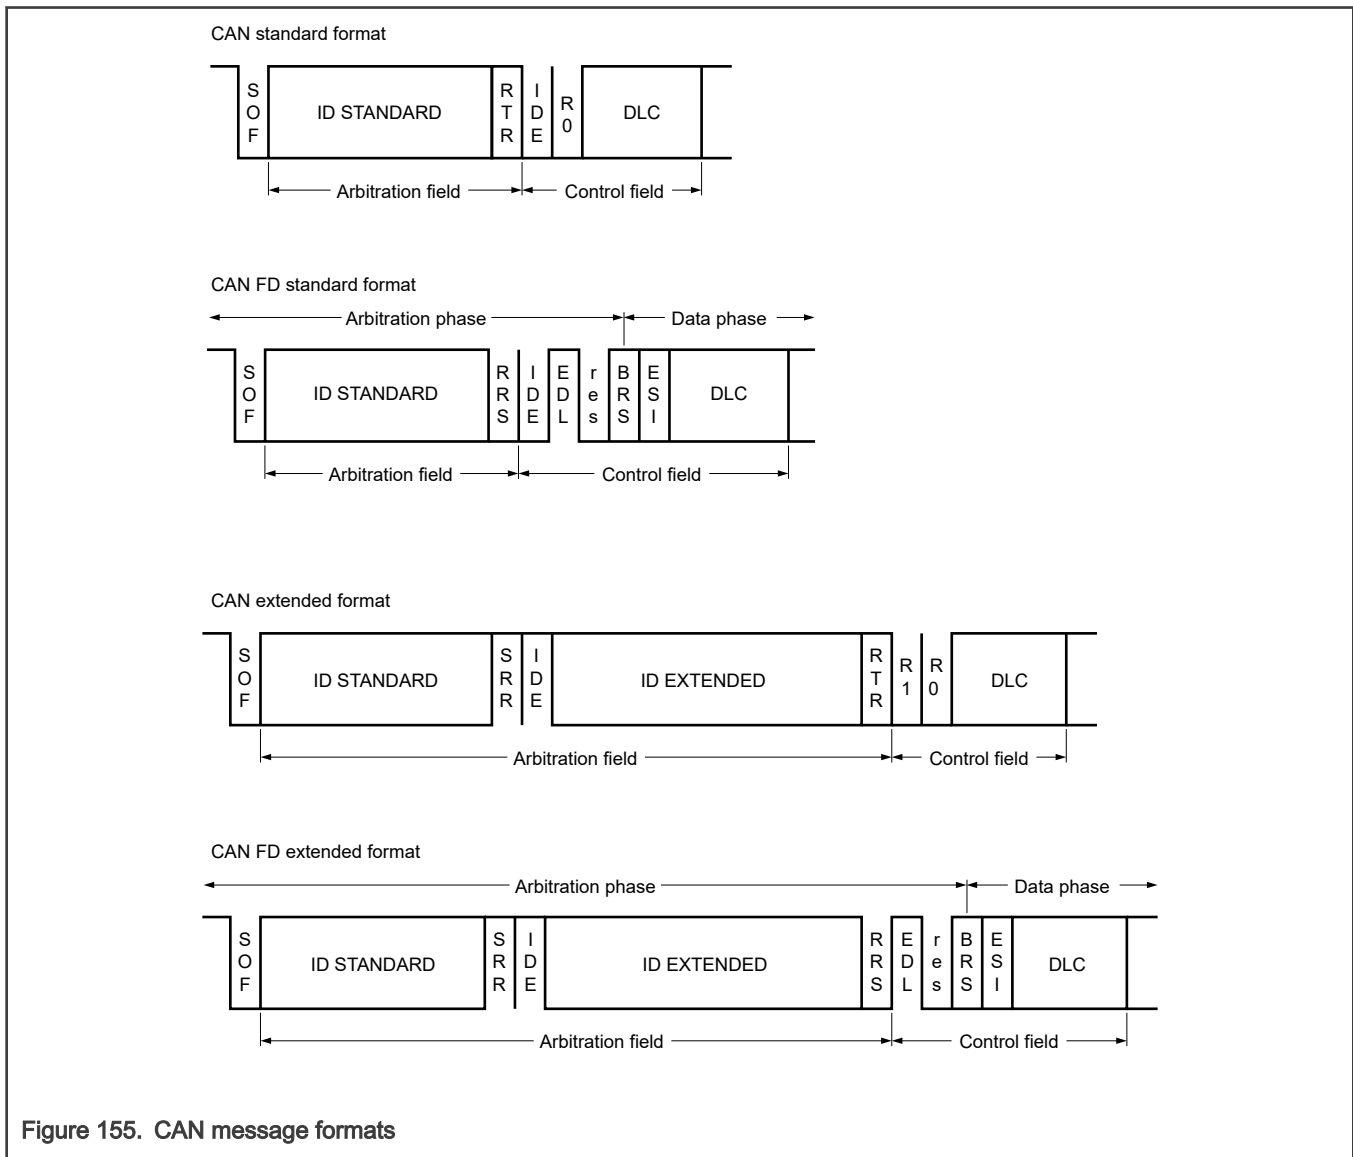

[MCR\[FDEN\]](#) enables the ability to receive and transmit CAN FD messages. A recessive R0 bit in CAN frames with 11-bit identifiers, or a recessive R1 bit in CAN frames with 29-bit identifiers, is decoded as an EDL bit (not a reserved one). A recessive EDL bit identifies a CAN FD frame, and a dominant EDL bit identifies a Classical CAN frame. The BRS bit specifies whether this frame switches the bit rate in its data phase. A long frame is decoded according to the DLC field value (see DLC definition in [Message buffer structure](#)).

CAN FD messages can be transmitted with two different bit rates. The first part of a CAN FD frame, from the Start of Frame (SOF) bit until the Bit Rate Switch (BRS) bit is called the arbitration phase. This part is transmitted with the nominal bit rate based on a set of nominal CAN bit timing configuration values. The second part, from the BRS bit until the CRC Delimiter bit, is called the data phase. When this second part is transmitted, a second set of CAN data bit timing configuration values determines the data bit rate. Finally, from the CRC delimiter until the Intermission bits, the transmission returns to nominal bit rate.

37.3.12.2.2 BRS in CAN FD

In CAN FD frames with bit rate switching, the bit timing changes inside the frame at the sample point of the BRS bit if this bit is recessive. Before the BRS bit, in the CAN FD arbitration phase, the nominal CAN bit timing is used as defined by [CAN Bit Timing](#)


(CBT). (Control 1 (CTRL1) also defines this timing for backward compatibility.) Upon detecting a recessive BRS bit, the CAN data bit timing is used as defined by CAN FD Bit Timing (FDCBT).

NOTE

If the time quantum length in nominal bit timing and in the data bit timing are not identical, a quantization error of up to one time quantum of the arbitration phase may be present as a phase error. This situation can occur after the switch from arbitration to data phase, and it lasts until the next synchronization event. The length of the time quantum should be the same in nominal and data bit timing. This configuration minimizes the chance of error frames on the CAN bus, and optimizes the clock tolerance in networks that use FD frames.

If BRS = 1 in the selected TX MB, FDCTRL[FDRATE] enables the transmission of all frames with bit rate switching. If FDCTRL[FDRATE] = 0, the transmission is performed at nominal rate regardless of the BRS bit value. FDCTRL[FDRATE] can be written at any time but takes effect only for the next message transmitted or received.

Nominal bit timing is resumed at the sample point of the CRC Delimiter bit or when an error is detected, whichever occurs first. Figure 156 describes the mechanism for entering and leaving the data phase when the BRS bit is recessive.

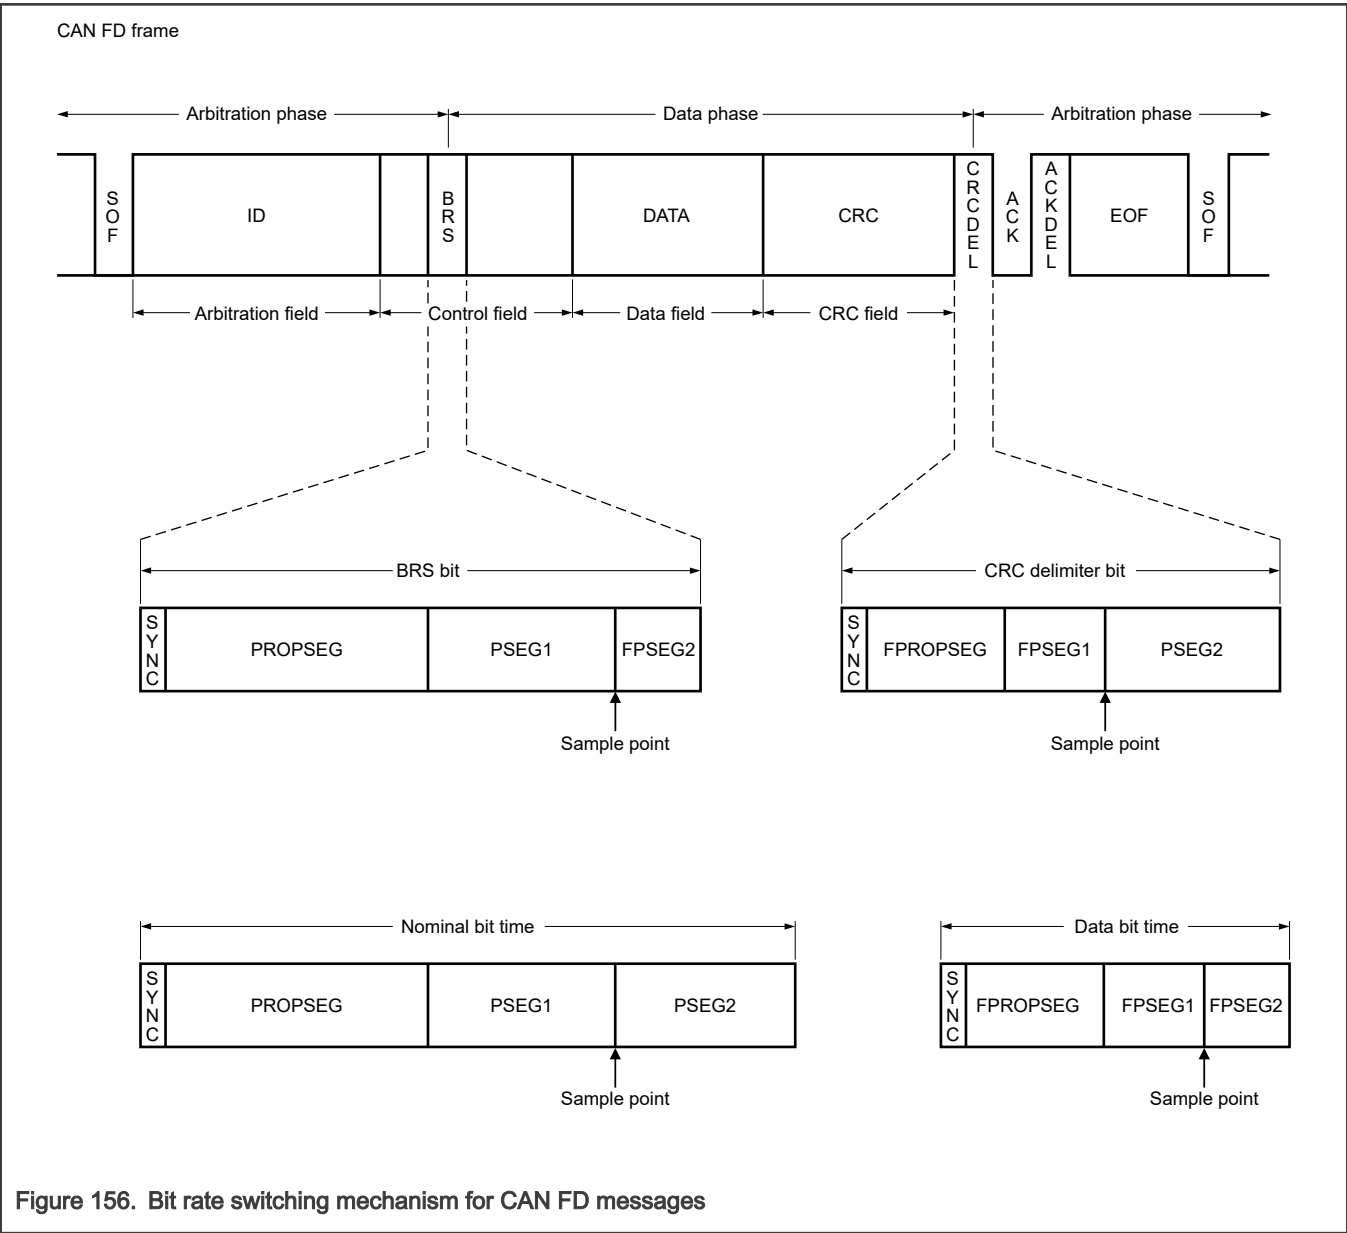

NOTE

In Classical CAN frames, the CRC delimiter is one recessive bit. In CAN FD frames, the CRC delimiter may consist of one or two recessive bits. FlexCAN sends only one recessive bit as the CRC delimiter. It accepts two recessive bits before the recessive-to-dominant edge that starts the acknowledge slot. As a receiver, FlexCAN sends its acknowledge bit after the first CRC delimiter bit. In CAN FD frames, FlexCAN accepts a two-bit dominant ACK slot as a valid ACK to compensate for phase shifts between the receivers.

The maximum configurable bit rate in the CAN FD data phase depends on the clock frequency of the CAN_PE subblock. For example, for a CAN_PE clock frequency of 40 MHz and the shortest configurable bit time of 5 time quanta, the bit rate in the data phase is 8 Mbit/s.

NOTE

The frequency used in this example may not be supported on this chip. It is shown only to demonstrate how the maximum configurable bit rate is calculated.

37.3.12.2.3 ESI in CAN FD

The value of the ESI field is determined by either of the following:

- The error state of the transmitter at the start of the transmission, if the frame is originated in the FlexCAN node
- The original transmitting node when FlexCAN is acting as a gateway for the message

If the transmitter is error-passive, ESI is transmitted recessive; otherwise, it is transmitted dominant. The permutations of the relationship between the written value and the transmitted value of the ESI are shown in [Table 229](#).

Table 229. Written versus transmitted values of the ESI field

FlexCAN fault confinement status at start of frame	ESI field of TX MB	Transmitted ESI
Error active	0	0 (Error Active)
Error passive	0	1 (Error Passive)
Error active	1	1 (Error Passive)
Error passive	1	1 (Error Passive)

37.3.12.2.4 CRC calculations in CAN FD

Different CAN frame formats have different CRC polynomials. The first polynomial, CRC_15, is used for all frames in Classical CAN format. The second, CRC_17, is used for frames in CAN FD format with a data field up to 16 bytes long. The third, CRC_21, is used for frames in CAN FD format with a data field longer than 16 bytes. Each polynomial results in a Hamming distance of 6. At the start of the frame, all three CRC polynomials are calculated concurrently. The values of the EDL bit and the DLC field select the CRC sequence to be transmitted. When receiving a message, FlexCAN decodes EDL and DLC to select the adequate CRC polynomial to check for a CRC error.

In CAN FD format frames, stuff bits are included in the bit stream for CRC calculation. In Classical CAN format frames, stuff bits are not included. After the transmission of the last bit relevant to the CRC calculation, [CAN FD CRC \(FDCRC\)](#) stores the calculated CRC for the transmitted message. This storage is performed with adequate length for the type of message, for CAN FD and non-FD messages. [Cyclic Redundancy Check \(CRCR\)](#) reports a valid CRC for Classical CAN messages only.

In CAN FD format frames, the CAN bit stuffing method changes for the CRC sequence, so the stuff bits are inserted at fixed positions. When FlexCAN is transmitting a CAN FD frame, a fixed stuff bit is inserted just before the first bit of the CRC sequence. This insertion occurs even if the last bits of the preceding field do not fulfill the CAN stuff condition. Additional stuff bits are inserted after each fourth bit of the CRC sequence. The value of any fixed stuff bit is the inverse value of its preceding bit. When FlexCAN receives a CAN FD frame, it discards the fixed stuff bits from the bit stream for the CRC check. A stuff error is detected if the fixed stuff bit has the same value as its preceding bit.

37.3.12.2.5 CAN FD errors

FlexCAN detects errors in CAN FD frames the same way as in Classical CAN frames. The error counters [ECR\[RXERRCNT\]](#) and [ECR\[TXERRCNT\]](#) accumulate the counts of RX and TX errors, respectively, for both FD and non-FD frames indiscriminately. Two extra error counters, [ECR\[RXERRCNT_FAST\]](#) and [ECR\[TXERRCNT_FAST\]](#), accumulate RX and TX errors occurring in the data phase of CAN FD frames with BRS = 1 only. The rules for updating the error counters are the same for both CAN FD and non-FD frames (see [Error Counter \(ECR\)](#)).

These error flags report errors in both CAN FD and non-FD frames:

- [ESR1\[BIT1ERR\]](#)
- [ESR1\[BIT0ERR\]](#)
- [ESR1\[ACKERR\]](#)
- [ESR1\[CRCERR\]](#)
- [ESR1\[FRMERR\]](#)
- [ESR1\[STFERR\]](#)

If [CTRL1\[ERRMSK\]](#) = 1, they also generate the ERRINT interrupt.

These additional error flags indicate the occurrence of errors in the data phase of CAN FD frames with BRS = 1:

- [ESR1\[BIT1ERR_FAST\]](#)
- [ESR1\[BIT0ERR_FAST\]](#)
- [ESR1\[CRCERR_FAST\]](#)
- [ESR1\[FRMERR_FAST\]](#)
- [ESR1\[STFERR_FAST\]](#)

No ACKERR is detected in the data phase of a CAN FD frame. Fault confinement status reported in [ESR1\[FLTCONF\]](#) is the same for both CAN FD and Classical CAN frames, and is based on [ECR\[RXERRCNT\]](#) and [ECR\[TXERRCNT\]](#) only. Information in [ECR\[RXERRCNT_FAST\]](#) and [ECR\[TXERRCNT_FAST\]](#) may be considered as status to help detect the error nature related to the bit rate value.

When FlexCAN detects an error while transmitting or receiving a CAN FD message in the data phase, it immediately switches:

- Back to the arbitration phase, and
- Back to the nominal rate to start an error flag.

37.3.12.2.6 CAN FD synchronization

Resynchronization and hard synchronization occur in CAN FD frames in the same way as in Classical CAN ones. A hard synchronization is also performed at the recessive-to-dominant edge from EDL to R0 in CAN FD format frames. FlexCAN does not resynchronize when transmitting in the CAN FD data phase.

37.3.12.3 Transceiver delay compensation

The CAN FD protocol allows the transmission and reception of data at a higher bit rate than the nominal rate used in the arbitration phase, when BRS = 1 in the message. This feature enables the use of rates up to 8 Mbit/s.

During the data phase of a CAN FD frame, if the transmitter cannot receive its own latest transmitted bit at the sample point of that bit, it detects a bit error. When bit rate switching is enabled (BRS = 1), the CAN bit time in the data phase can become shorter than the loop delay of the transceiver. This condition impedes the correct comparison between the transmitted bit and the received bit within the current CAN bit time interval.

The transceiver delay compensation (TDC) process defines a secondary sample point where the transmitted bit is correctly compared to the received bit to check for bit errors.

You can enable the TDC mechanism via [FDCTRL\[TDCEN\]](#) or [ETDC\[ETDCEN\]](#). The TDC mechanism is effective only during the data phase of FD frames with BRS = 1. It has no effect on either non-FD frames or FD frames transmitted at the normal bit rate. When the transmitted message has BRS = 1, TDC is active from the sample point of the BRS bit until the sample point of the CRC Delimiter bit. When TDC is active, the real received bit is compared to the delayed transmitted bit, where the delay is calculated based on the measured transceiver loop delay.

NOTE

The transmitters using TDC disregard the value of the CRC delimiter bit. A global error at the end of the CRC field causes the receivers to send error frames that the transmitter detects during Acknowledge or End of Frame.

For every transmitted FD frame with BRS = 1, the transition from the recessive EDL bit to the dominant R0 bit triggers the delay measurement (as shown in [Figure 157](#)). The loop delay is measured in Protocol Engine (PE) clock periods (CANCLK, see [Protocol timing](#)), from the transmitted EDL-R0 edge to the received EDL-R0 edge. The measured loop delay time added to an offset value specified in [FDCTRL\[TDCOFF\]](#) or [ETDC\[ETDCOFF\]](#) determines the position of the secondary sample point. [FDCTRL\[TDCVAL\]](#) or [ETDC\[ETDCVAL\]](#) stores the result of this calculation. The TDCVAL and ETDCVAL value saturates at its maximum value of 63 CANCLK and 255 CANCLK when the delay measurement is too long.

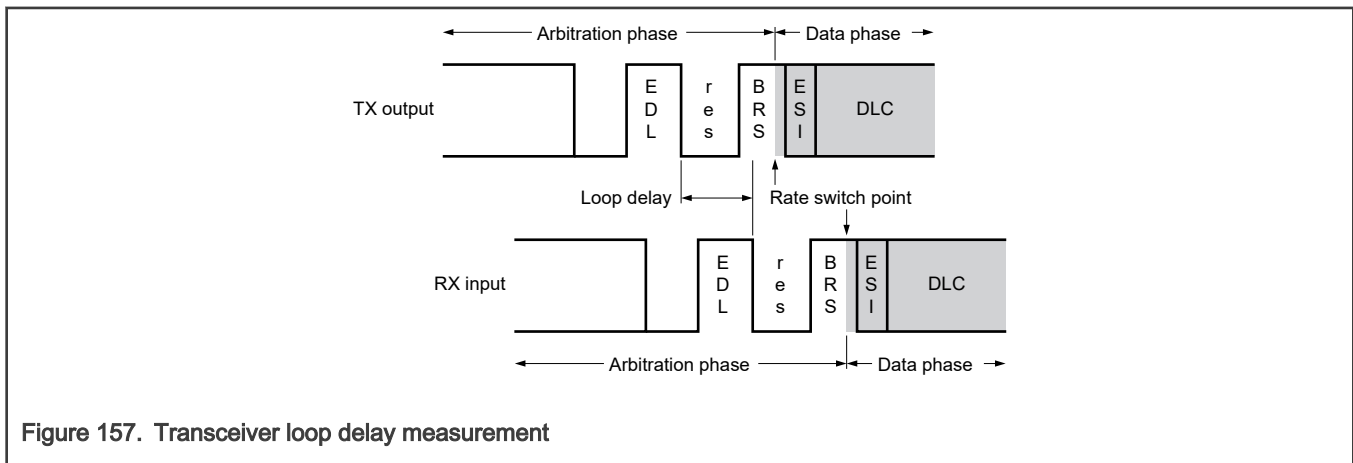


Figure 157. Transceiver loop delay measurement


The measured loop delay is not enough to define the secondary sample point, because it relates to the CAN bit edges. The transceiver delay compensation offset [FDCTRL\[TDCOFF\]](#) or [ETDC\[ETDCOFF\]](#) is used to shift the secondary sample point to an intermediate point inside the bit time, far away from its edges. The value of [FDCTRL\[TDCOFF\]](#) or [ETDC\[ETDCOFF\]](#) cannot be larger than the CAN bit duration in the data phase.

If the secondary sample point is set very near the CAN bit edge (SYNC field), problems may occur during the bit sampling in the data phase. For the TDC to work reliably, the offset must use optimal settings. To ensure that bit sampling is performed in the best region, configure the TDC offset as shown in this equation:


$$\begin{aligned} \text{Offset} &= (FPSEG1 + FPROPSEG + 2) \times (FPRES DIV + 1) \\ \text{or} \\ \text{Offset} &= (DTSEG1 + 2) \times (EDPRES DIV + 1), \text{ if } ETDCEN \end{aligned}$$

Equation 17. TDC offset calculation

[Figure 158](#) shows the SSP position when these settings are used.

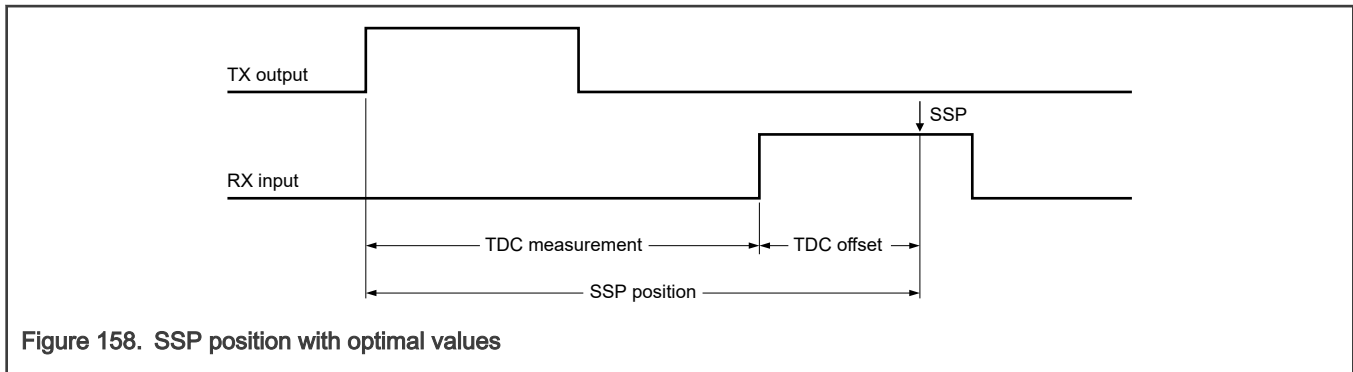

Alternatively, if [CTRL2\[BTE\]](#) and [ETDC\[ETDCEN\]](#) are 1, you can write 1 to [ETDC\[TDMDIS\]](#) to disable the transceiver delay measurement. In this case, only [ETDC\[ETDCOFF\]](#) defines the SSP position. [Figure 159](#) shows the secondary sample point position when the transceiver delay measurement is disabled.

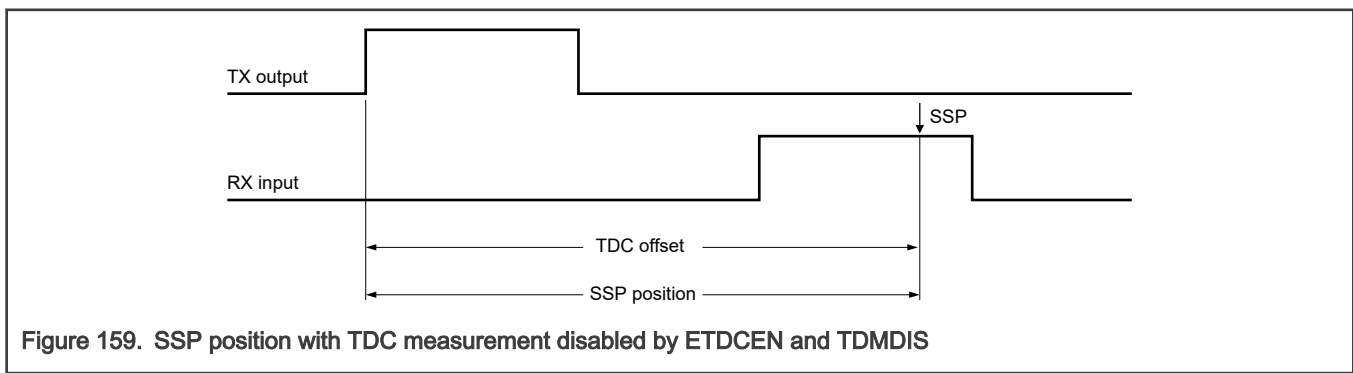

During the data phase of CAN FD frames with bit rate switching enabled, at the onset of every TX CAN bit:

- The transmitted TX bit value is temporarily stored in a buffer.
- A time countdown based on [FDCTRL\[TDCVAL\]](#) or [ETDC\[ETDCVAL\]](#) is started. This countdown ends with the comparison of the received RX bit (delayed by the external loop delay plus the specified offset) to the stored TX bit.

If a bit error is detected at the secondary sample point, FlexCAN issues an error flag to the CAN bus at the next sample point.

During the arbitration phase, delay compensation is always disabled. During the data phase, the TDC mechanism of FlexCAN can compensate a maximum delay of 3 CAN bit times – 2 T_q . Beyond this limit, the [FDCTRL\[TDCFAIL\]](#) or [ETDC\[ETDCFAIL\]](#) flag is set. The flag indicates when the TDC mechanism is out of range and is unable to compensate the transceiver loop delay.

37.3.12.4 Remote frames

A remote frame is a special type of frame. You can program a message buffer to be a remote request frame by configuring the message buffer as Transmit with the [RTR](#) = 1. After the remote request frame is transmitted successfully, the message buffer becomes a receive message buffer, with the same ID as before.

When FlexCAN receives a remote request frame, the frame can be treated in different ways, depending on remote request storing ([CTRL2\[RRS\]](#)) and RX FIFO Enable ([MCR\[RFEN\]](#)):

- If [RRS](#) = 0, the ID of the frame is compared to the IDs of the transmit message buffers with the [CODE](#) field 1010b. If a matching ID exists, this message buffer frame is transmitted. If the matching message buffer has the [RTR](#) = 1, FlexCAN transmits a remote frame as a response. The received remote request frame is not stored in a receive buffer. It is only used to trigger a transmission of a frame in response.

The mask registers are not used in remote frame matching, and all ID bits (except [RTR](#)) of the incoming received frame should match. If a remote request frame is received and matches a message buffer, this message buffer immediately enters the internal arbitration process. However, it is considered a normal TX message buffer, with no higher priority. The data length of this frame is independent of the [DLC](#) field in the remote frame that initiated its transmission.

- If CTRL2[RRS] = 1, the ID of the frame is compared to the IDs of the receive message buffers with the CODE field 0100b, 0010b, or 0110b. If a matching ID exists, this message buffer stores the remote frame in the same fashion as a data frame. No automatic remote response frame is generated. The mask registers are used in the matching process.
- If MCR[RFEN] = 1, FlexCAN does not generate an automatic response for remote request frames that match the Legacy FIFO filtering criteria. If the remote frame matches one of the target IDs, it is stored in the Legacy FIFO and presented to the CPU.
For filtering formats A and B (see [Legacy RX FIFO structure](#)), it is possible to select whether remote frames are accepted or not. For format C, remote frames are always accepted if they match the ID. Remote request frames are considered as normal frames. They generate a Legacy FIFO overflow when a successful reception occurs and the Legacy FIFO is already full.
- If ERFCR[ERFEN] = 1, FlexCAN does not generate an automatic response for remote request frames that match the Enhanced RX FIFO filtering criteria. Remote Request Frames are considered normal frames. They generate an Enhanced RX FIFO overflow when a successful reception occurs and the enhanced RX FIFO is already full.

NOTE

There is no remote frame in the CAN FD format. A fixed dominant RRS bit replaces the RTR bit. FlexCAN receives and transmits remote frames in the Classical CAN format.

37.3.12.5 Overload frames

When a dominant bit is detected on the CAN bus in these locations, FlexCAN transmits overload frames:

- The first or second bit of Intermission.
- The seventh bit (last) of End of Frame field (RX frames).
- The eighth bit (last) of Error Frame Delimiter or Overload Frame Delimiter.

37.3.12.6 timestamp

The value of the free-running timer is sampled at the beginning of the Identifier field on the CAN bus. This value is stored at the end of move-in in the TIME_STAMP field, providing network behavior regarding time.

The FlexCAN bit clock clocks the free-running timer, which defines the baud rate on the CAN bus. During a message transmission or reception, it increments by one for each bit that is received or transmitted. When there is no message on the bus, it counts using the previously programmed baud rate.

The free-running timer is not incremented during Disable, Doze, Stop, and Freeze modes. It can be reset upon a specific frame reception, enabling network time synchronization. See [CTRL1\[TSYN\]](#).

37.3.12.7 Protocol timing

[Figure 160](#) shows the structure of the clock generation circuitry that feeds the CAN Protocol Engine (PE) submodule.

NOTE

To identify the proper clock source, see the clock distribution chapter (module clocks table).



Figure 160. CAN engine clocking scheme

37.3.12.7.1 Bit timing configuration

FlexCAN supports various means to configure bit timing parameters required by the CAN protocol. [Control 1 \(CTRL1\)](#) has various fields to control bit timing parameters:

- [CTRL1\[PRESDIV\]](#)

- CTRL1[PROPSEG]
- CTRL1[PSEG1]
- CTRL1[PSEG2]
- CTRL1[RJW]

CAN Bit Timing (CBT) extends the range of the CAN bit timing variables in CTRL1. [Enhanced Data Phase CAN Bit Timing \(EDCBT\)](#) provides a second set of CAN bit timing variables to be applied at the data phase of CAN FD frames with the Bit Rate Switch (BRS) = 1.

[Enhanced Nominal CAN Bit Timing \(ENCBT\)](#) extends the range of CAN bit timing variables in CBT. [Enhanced Nominal CAN Bit Timing \(ENCBT\)](#) extends the range of CAN bit timing variables in FDCBT. When using ENCBT and EDCBT, you must program the nominal bit timing and data phase serial clock (Sclock) dividers in [Enhanced CAN Bit Timing Prescalers \(EPRS\)](#).

NOTE

When the CAN FD feature is enabled, always write 1 to [CBT\[BTF\]](#) or [CTRL2\[BTE\]](#) and specify the CAN bit timing variables in CBT or ENCBT. See [CAN Bit Timing \(CBT\)](#) or [Enhanced Nominal CAN Bit Timing \(ENCBT\)](#).

CTRL1[PRES DIV], and its extended range [CBT\[EPRES DIV\]](#) (or [EPRS\[ENPRES DIV\]](#)) and [FDCBT\[FPRES DIV\]](#) (or [EPRS\[EDPRES DIV\]](#)) for the data phase bits of CAN FD messages, defines the prescaler value that generates the serial clock (Sclock). (See [Equation 18](#).) The period of Sclock defines the time quantum used to compose the CAN waveform. A time quantum (Tq) is the atomic unit of time managed by the CAN engine. It is the smallest time unit for all configuration values.

$$T_q = \frac{(PRES DIV + 1)}{f_{CANCLK}}$$

Equation 18. Time quantum

The bit rate, which defines the rate the CAN message is received or transmitted, is calculated with the formula:

$$CAN \text{ bit time} = (\text{Number of time quanta in 1 bit time}) \times T_q$$

$$Bit \text{ rate} = \frac{1}{CAN \text{ bit time}}$$


Equation 19. CAN bit time and baud rate

37.3.12.7.2 Bit time segments

A bit time is subdivided into three segments as shown in [Figure 161](#). See also [Figure 162](#), [Figure 163](#), and [Table 230](#).

NOTE

For further explanation of the underlying concepts, see ISO 11898-1:2015. See also *CAN Specification Version 2.0, Part A and Part B* for bit timing.

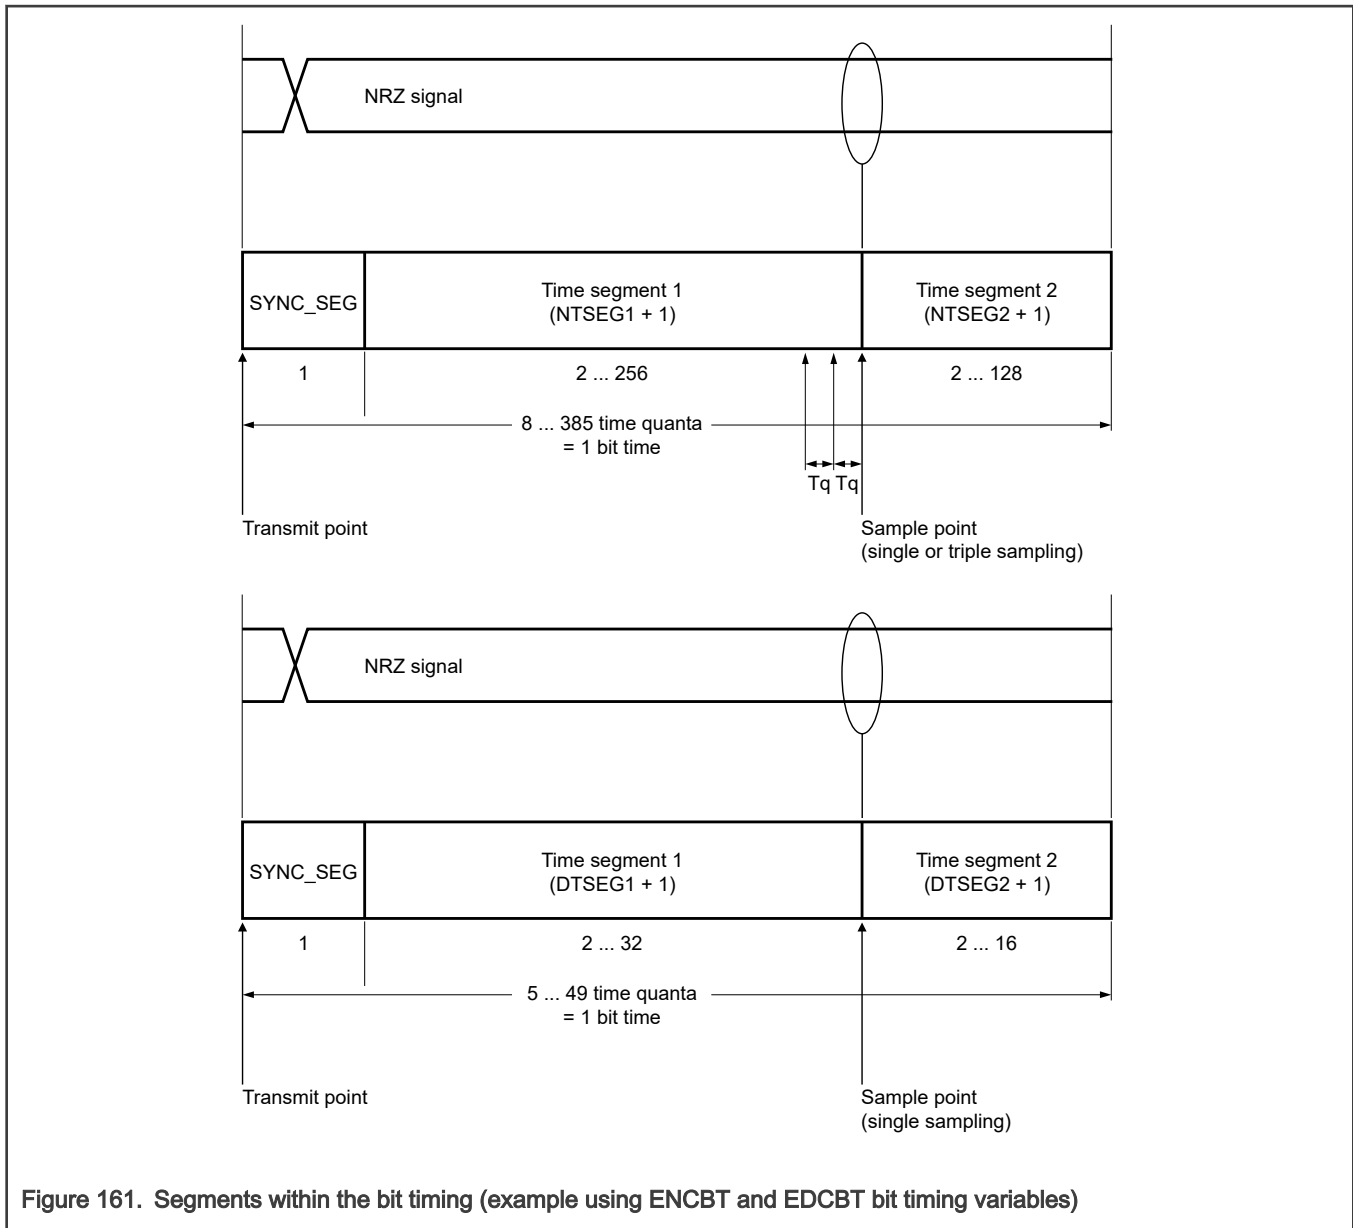

The three bit time segments are:

- SYNC_SEG—this segment has a fixed length of one time quantum. Signal edges are expected to occur within this section.
- Time Segment 1—this segment includes the propagation segment and the phase segment 1 of the CAN standard.

It can be programmed by configuring [CTRL1\[PROPSEG\]](#) and [CTRL1\[PSEG1\]](#) so that the sum (plus 2) is 2–16 time quanta. When [CBT\[BTF\]](#) = 1, FlexCAN uses [CBT\[EPROPSEG\]](#) and [CBT\[EPSEG1\]](#) so that the sum (plus 2) is 2–96 time quanta. For messages in CAN FD format with the BRS = 1, FlexCAN uses [FDCBT\[FPROPSEG\]](#) and [FDCBT\[FPSEG1\]](#) so that the sum (plus 1) is 2–39 time quanta.

If [CTRL2\[BTE\]](#) = 1, FlexCAN uses [ENCIBT\[NTSEG1\]](#) to configure time segment 1 to 2–256 time quanta. For the data phase in CAN FD messages with BRS = 1, [EDCIBT\[DTSEG1\]](#) must be used for configuring time segment 1 to 2–32 time quanta.

- Time Segment 2—this segment represents the phase segment 2 of the CAN standard.


It can be programmed by configuring [CTRL1\[PSEG2\]](#) (plus 1) to be 2–8 time quanta. When [CBT\[BTF\]](#) = 1, FlexCAN uses [CBT\[EPSEG2\]](#) so that its value (plus 1) is 2–32 time quanta. For messages in CAN FD format with the BRS = 1, FlexCAN uses

[FDCBT\[FPSEG2\]](#) instead, so that its value (plus 1) is 2–8 time quanta. Time segment 2 cannot be smaller than the Information Processing Time (IPT), which is 2 time quanta in FlexCAN.

If CTRL2[BTE] = 1, FlexCAN uses [ENCBT\[NTSEG2\]](#) to configure time segment 2 to 2–128 time quanta. For the data phase in CAN FD messages with BRS = 1, [EDCBT\[DTSEG2\]](#) must configure time segment 2 to 2–16 time quanta.

NOTE

The bit time defined by the above time segments must not be smaller than five time quanta. For bit time calculations, use an Information Processing Time (IPT) of two, which is the value implemented in the FlexCAN module.

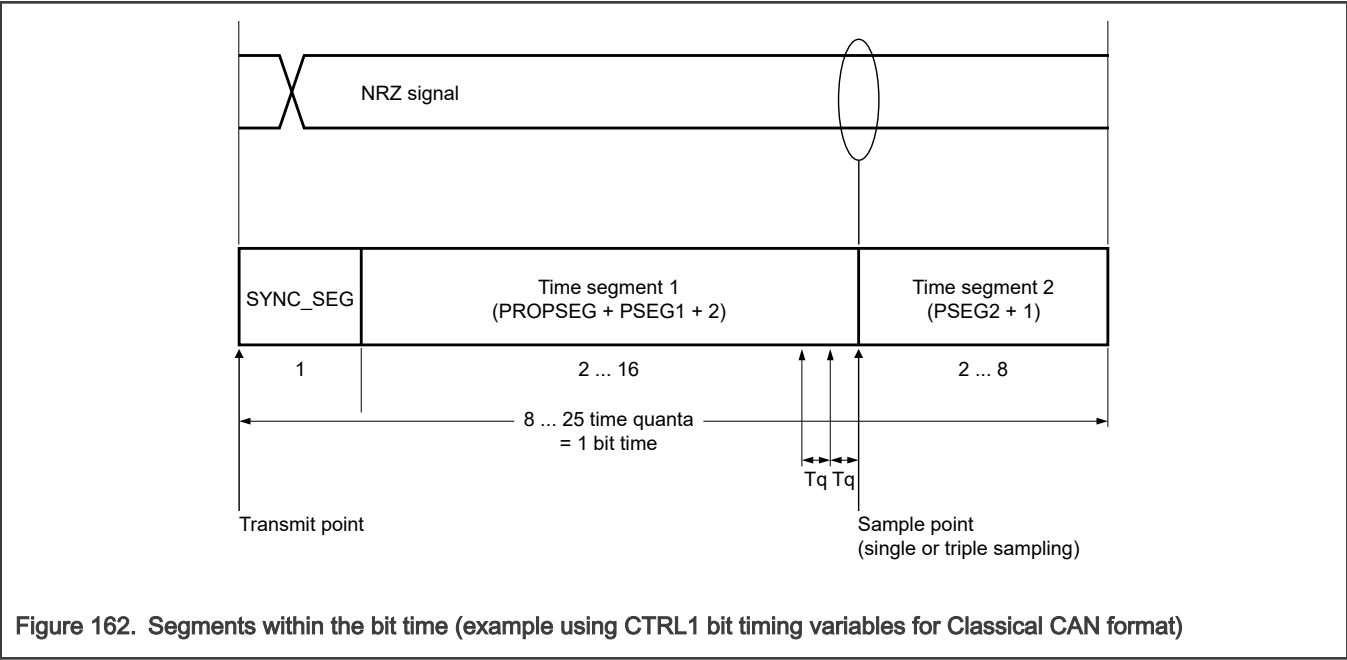

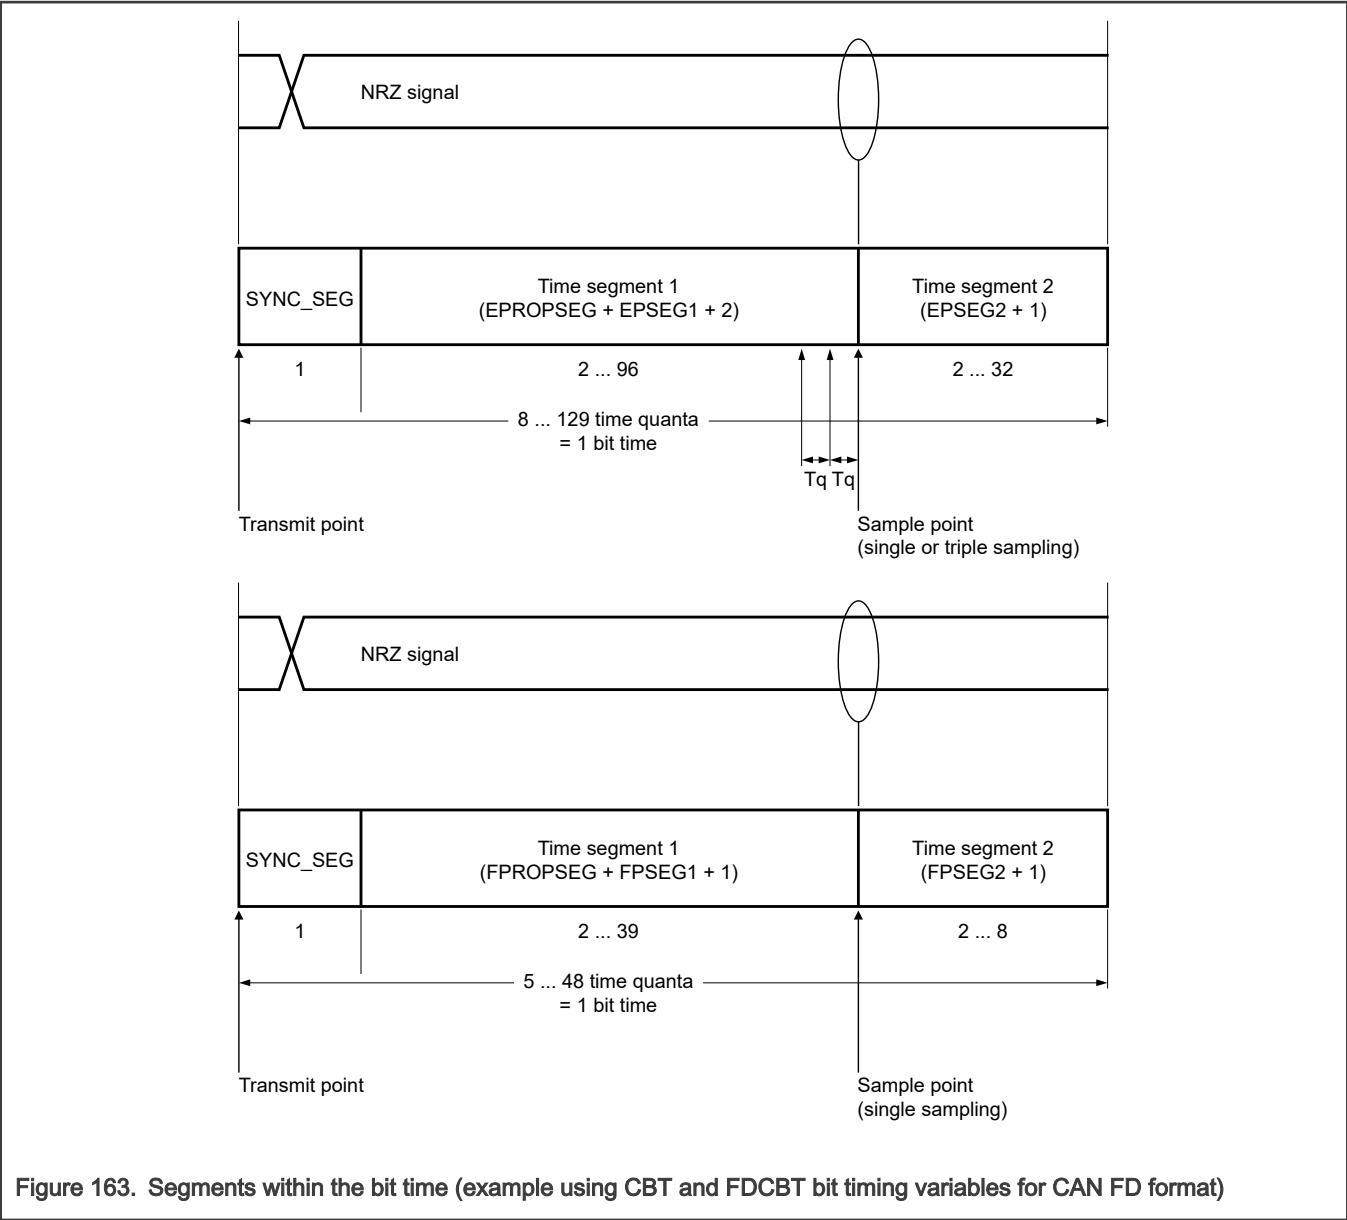


Table 230. Time segment syntax

Syntax	Description
SYNC_SEG	Period during which the system expects transitions to occur on the bus
TSEG1	Period corresponding to the sum of PROPSEG and PSEG1
TSEG2	Period corresponding to the PSEG2 value
Transmit point	Point at which a node in Transmit mode transfers a new value to the CAN bus
Sample point	Point at which a node samples the bus. If the option of three samples per bit is selected, this point marks the position of the third sample.

Table 231 gives some examples of the CAN-compliant segment settings for Classical CAN format (Bosch CAN 2.0B) (non-FD) messages.

Table 231. Bosch CAN 2.0B standard compliant bit time segment settings

Time segment 1	Time segment 2	Resynchronization jump width
5 to 10	2	1 to 2
4 to 11	3	1 to 3
5 to 12	4	1 to 4
6 to 13	5	1 to 4
7 to 14	6	1 to 4
8 to 15	7	1 to 4
9 to 16	8	1 to 4

NOTE

You must ensure the bit time settings comply with the CAN Protocol standard (ISO 11898-1:2015).

37.3.12.7.3 Calculating peripheral clocks

A CAN bit can be used as a measure of duration (for example, estimating the occurrence of a CAN bit event in a message). When a CAN bit is used in this way, the number of peripheral clocks in one CAN bit (NumClkBit) can be calculated as:

$$NumClkBit = \frac{f_{SYS}}{f_{CANCLK}} \times (PRES DIV + 1) \times (PROPSEG + PSEG1 + PSEG2 + 4)$$

Equation 20. Number of peripheral clocks per CAN bit when CTRL2[BTE] = 0

Or, if CTRL2[BTE] = 1:

$$NumClkBit = \frac{f_{SYS}}{f_{CANCLK}} \times (ENPRES DIV + 1) \times (NTSEG1 + NTSEG2 + 3)$$

Equation 21. Number of peripheral clocks per CAN bit when CTRL2[BTE] = 1

Where:

- NumClkBit is the number of peripheral clocks in one CAN bit.
- f_{CANCLK} is the Protocol Engine (PE) Clock (see [Figure 160](#)), in Hz.
- f_{SYS} is the frequency of operation of the system (CHI) clock, in Hz.
- PSEG1 is the value of CTRL1[PSEG1].
- PSEG2 is the value of CTRL1[PSEG2].
- PROPSEG is the value of CTRL1[PROPSEG].
- PRES DIV is the value in CTRL1[PRES DIV].
- ENPRES DIV is the value of EPRS[ENPRES DIV].
- NTSEG1 is the value of ENCBT[NTSEG1].
- NTSEG2 is the value of ENCBT[NTSEG2].

The formula above is also applicable to the alternative CAN bit timing variables described in:

- [CAN Bit Timing \(CBT\)](#)

- [Enhanced Nominal CAN Bit Timing \(ENCBT\)](#)
- [CAN FD Bit Timing \(FDCBT\)](#)
- [Enhanced Nominal CAN Bit Timing \(ENCBT\)](#)

For example, 180 CAN bits = (180 × NumClkBit) peripheral clock periods.

37.3.12.8 Arbitration and matching timing

During normal reception and transmission, the matching, arbitration, move-in, and move-out processes are executed during certain time windows inside the CAN frame. These windows are shown in the following figures.

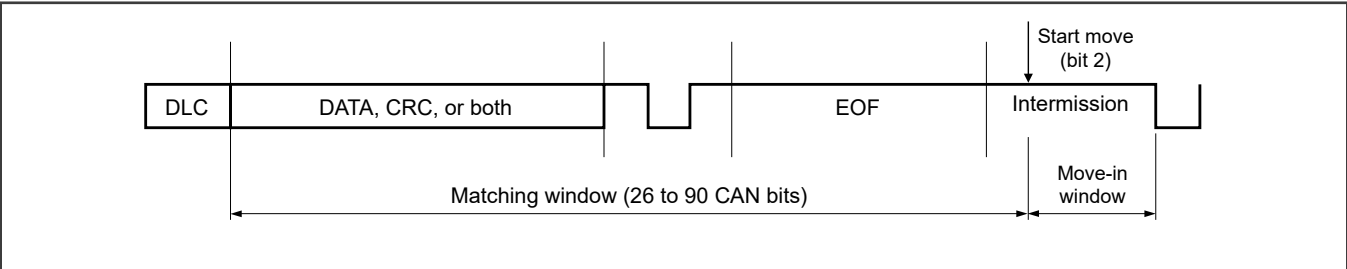


Figure 164. Matching and move-in time windows

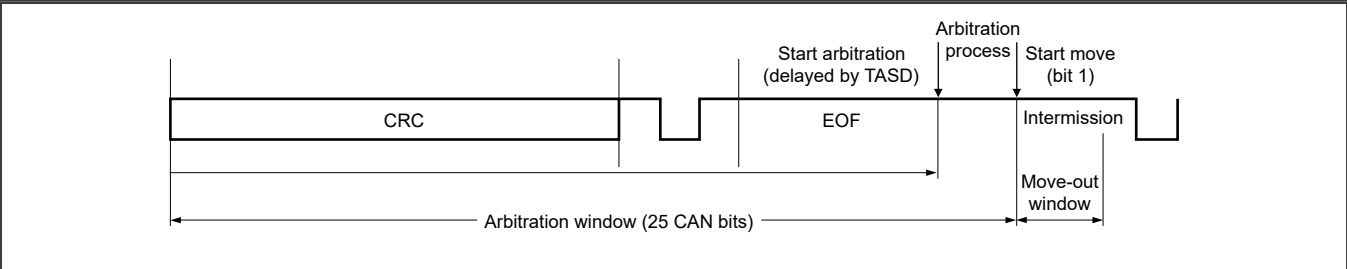


Figure 165. Arbitration and move-out time windows

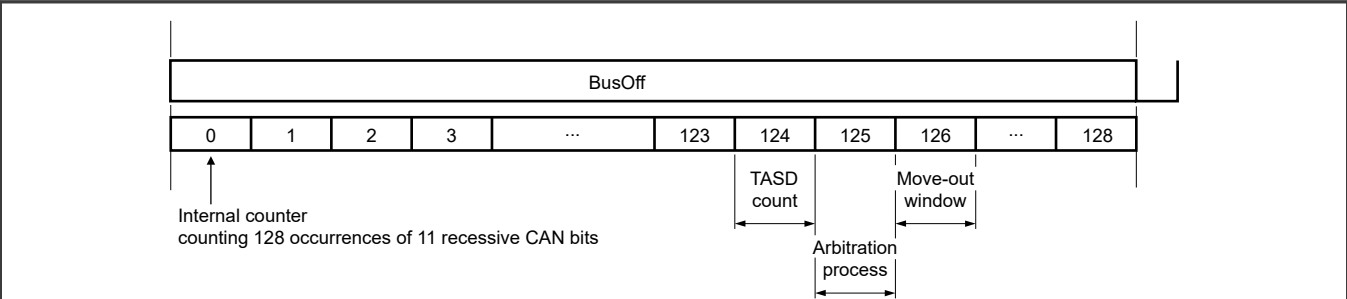


Figure 166. Arbitration at the end of bus off and move-out time windows

NOTE

In these figures, the matching and arbitration timing do not consider delays caused by concurrent memory access due to the CPU or other internal FlexCAN subblocks.

37.3.12.9 TX arbitration start delay

TX Arbitration Start Delay ([CTRL2\[TASD\]](#)) indicates the number of CAN bits that FlexCAN uses to delay the TX arbitration process starting point from the first bit of the CRC field of the current frame. This variable can be written only in Freeze mode; FlexCAN blocks it in other modes.

The ability of the CPU to reconfigure message buffers for transmission after the end of the internal arbitration process impacts transmission performance. In the arbitration process, FlexCAN finds the winner MB for transmission (see [Arbitration process](#)). If

the arbitration ends too early (before the first bit of the Intermission field) the CPU may reconfigure some TX message buffers. It is possible that the winning message buffer is no longer the best candidate to be transmitted.

TASD can optimize the transmission performance by defining the arbitration start point, as shown in [Figure 167](#), based on factors such as:

- Peripheral-to-oscillator clock ratio
- CAN bit timing variables that determine the CAN bit rate
- Number of message buffers in use by the matching and arbitration processes

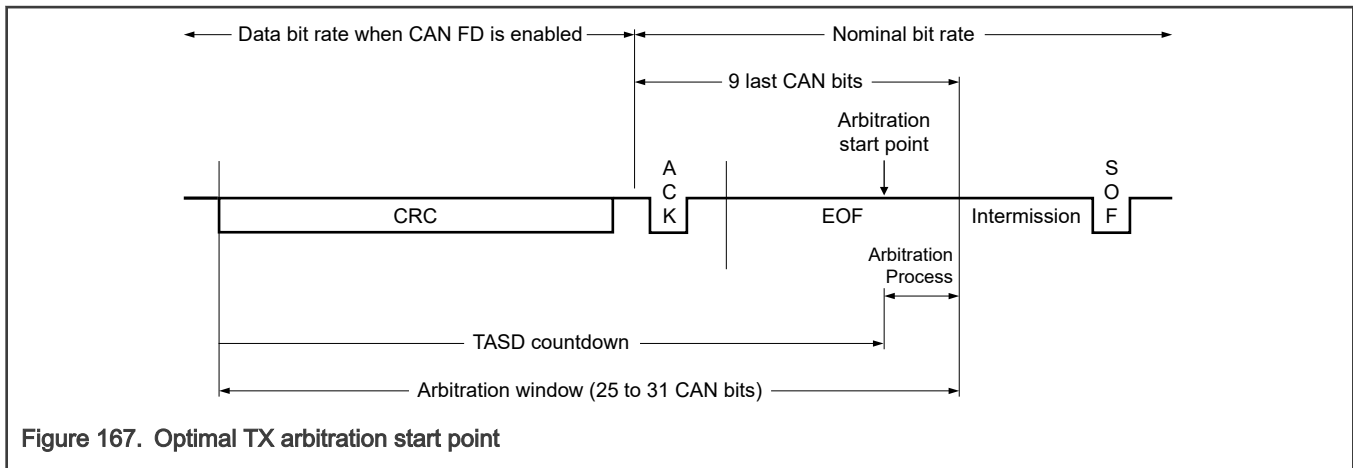


Figure 167. Optimal TX arbitration start point

The duration of an arbitration process, in terms of CAN bits, is:

- Directly proportional to the number of available message buffers
- Directly proportional to the CAN bit rate
- Inversely proportional to the peripheral clock frequency

The optimal arbitration timing occurs when the last message buffer is scanned immediately before the first bit of the Intermission field of a CAN frame. For instance, if the following are true:

- There are few message buffers.
- The peripheral-to-oscillator clock ratio is high.
- The CAN baud rate is low.

Then the arbitration can be placed closer to the end of the frame, adding more delay to its starting point, and vice versa.

If CTRL2[TASD] = 0, the arbitration start is not delayed, and more time is reserved for arbitration. Alternatively, if CTRL2[TASD] is close to 24, the CPU can configure a TX message buffer later, and less time is reserved for arbitration. If too little time is reserved for arbitration, FlexCAN may not be able to find a winner MB in time. The transmitted arbitration winner may not have the best chance to win the bus arbitration against external nodes on the CAN bus.

The optimal TASD value can be calculated as follows:

For CAN FD frames and $(MAXMB + 1) \leq NMB_{END}$

$$TASD = 31 - \frac{2 * (MAXMB + 1) + 4}{CPCB_N}$$

For CAN FD frames and $(MAXMB + 1) > NMB_{END}$

$$TASD = 22 - \frac{2 * (MAXMB + 1) - NMB_{END}}{CPCB_F}$$

For non-FD frames

$$TASD = 25 - \frac{2 * (MAXMB + 1) + 4}{CPCB}$$

Equation 22. Optimal value for TASD

Where:

$$NMB_{END} = \frac{(9 * CPCB_N) - 4}{2}$$

$$BITRATE_N = \left(\frac{f_{CANCLK}}{[1 + (EPSEG1 + 1) + (EPSEG2 + 1) + (EPROPSEG + 1)] * (EPRES DIV + 1)} \right)$$

$$BITRATE_F = \left(\frac{f_{CANCLK}}{[1 + (FPSEG1 + 1) + (FPSEG2 + 1) + FPROPSEG] * (FPRES DIV + 1)} \right)$$

$$CPCB_N = \frac{f_{SYS}}{BITRATE_N}$$

$$CPCB_F = \frac{f_{SYS}}{BITRATE_F}$$

$$CPCB = CPCB_N$$

Equation 23. Variables used in TASD calculation

- MAXMB is the value in [MCR\[MAXMB\]](#).
- NMB_{END} is the number of message buffers that the arbitration process can scan during the last nine CAN bits at the end of a frame. (See [Equation 23](#).)
- BITRATE_N is the CAN bit rate in bits per second calculated by the nominal CAN bit time variables.
- BITRATE_F is the CAN bit rate in bits per second calculated by the data CAN bit time variables.
- CPCB_N is the number of peripheral clocks per CAN bit in nominal bit rate for CAN FD frames.
- CPCB_F is the number of peripheral clocks per CAN bit in data bit rate for CAN FD frames.
- CPCB is the number of peripheral clocks per CAN bit for non-FD frames.
- f_{CANCLK} is the oscillator clock, in Hz.
- f_{SYS} is the peripheral clock, in Hz.
- EPSEG1 is the value in [CBT\[EPSEG1\]](#) ([CTRL1\[PSEG1\]](#) can also be used).
- EPSEG2 is the value in [CBT\[EPSEG2\]](#) ([CTRL1\[PSEG2\]](#) can also be used).
- EPROPSEG is the value in [CBT\[EPROPSEG\]](#) ([CTRL1\[PROPSEG\]](#) can also be used).
- EPRES DIV is the value in [CBT\[EPRES DIV\]](#) ([CTRL1\[PRES DIV\]](#) can also be used).
- FPSEG1 is the value in [FDCBT\[FPSEG1\]](#).

- FPSEG2 is the value in [FDCBT\[FPSEG2\]](#).
- FPROPSEG is the value in [FDCBT\[FPROPSEG\]](#).
- FPRES DIV is the value in [FDCBT\[FPRES DIV\]](#).
- NTSEG1 is the value in [ENCBT\[NTSEG1\]](#).
- NTSEG2 is the value in [ENCBT\[NTSEG2\]](#).
- ENPRES DIV is the value in [EPRS\[ENPRES DIV\]](#).
- DTSEG1 is the value in [EDCBT\[DTSEG1\]](#).
- DTSEG2 is the value in [EDCBT\[DTSEG2\]](#).
- EDPRES DIV is the value in [EPRS\[EDPRES DIV\]](#).

If [CTRL2\[BTE\]](#) = 1, then:

$$BITRATE_N = \frac{f_{CANCLK}}{[1 + (NTSEG1 + 1) + (NTSEG2 + 1)] \times (ENPRES DIV + 1)}$$

Equation 24. Nominal baud rate when [CTRL2\[BTE\]](#) = 1

$$BITRATE_F = \frac{f_{CANCLK}}{[1 + (DTSEG1 + 1) + (DTSEG2 + 1)] \times (EDPRES DIV + 1)}$$

Equation 25. Fast baud rate when [CTRL2\[BTE\]](#) = 1

See also [Protocol timing](#) for more details.

37.3.12.9.1 T ASD configuration examples

The following tables show the T ASD value calculated for some configuration cases.

Case 1:

- Clock ratio = 2:1 (for example, peripheral clock 80 MHz and oscillator clock 40 MHz)
- Bit rate in arbitration phase = 1 Mbaud

Table 232. T ASD values in Case 1

Number of message buffers	T ASD value	Maximum bit rate in data phase (MBd)
16	24	Invalid
32	24	8.0

Case 2:

- Clock ratio = 1:1 (for example, peripheral clock 40 MHz and oscillator clock 40 MHz)
- Bit rate in arbitration phase = 1 Mbaud

Table 233. T ASD values in Case 2

Number of message buffers	T ASD value	Maximum bit rate in data phase (MBd)
16	24	Invalid
32	23	6.67

Case 3:

- Clock ratio = 2:1 (for example, peripheral clock 40 MHz and oscillator clock 20 MHz)

- Bit rate in arbitration phase = 1 Mbaud

Table 234. T ASD values in Case 3

Number of message buffers	T ASD value	Maximum bit rate in data phase (MBd)
16	24	Invalid
32	23	4.0

37.3.13 Clocks

The following table describes the clock sources for FlexCAN. See the chip clocking chapter for clock setting, configuration, and gating information.

Table 235. FlexCAN clocks

Clock name	Description
MODULE_CLK (system_clk)	Peripheral clock
MODULE_CLK_CHI (host_clock)	Control Host Interface (CHI) clock
MODULE_CLK_PE (protocol_engine_clock)	Protocol Engine (PE) clock
MODULE_CLK_PE_NOGATE (protocol_engine_clock_nogate)	Protocol Engine clock (no gating)
MODULE_CLK_S (system_clock_nogate)	Peripheral access clock

37.3.13.1 Clock domains and restrictions

FlexCAN has two clock domains asynchronous to each other:

- The bus domain feeds the Control Host Interface (CHI) submodule.
- The oscillator domain feeds the CAN Protocol Engine (PE) submodule.

When the two domains are connected to clocks with different frequencies or phases, the frequency relationship between the two clock domains is restricted. In asynchronous operation, the bus domain clock frequency must always be greater than the oscillator domain clock frequency.

NOTE

Asynchronous operation with a 1:1 ratio between peripheral and oscillator clocks is not allowed.

When performing matching and arbitration, FlexCAN must scan the whole message buffer memory during the time slot of one CAN frame, comprised of a number of CAN bits. To provide sufficient time for the scan, observe the following requirements:

- The peripheral clock frequency cannot be less than the oscillator clock frequency.
- There must be a minimum number of peripheral clocks per CAN bit, as specified in [Table 236](#).

Table 236. Minimum number of peripheral clocks per CAN bit for Classical CAN format

Number of message buffers	Value of MCR[RFEN]	Value of ERFCR[ERFEN]	Minimum number of peripheral clocks per CAN bit
16	0	0	16
32	0	0	16

Table continues on the next page...

Table 236. Minimum number of peripheral clocks per CAN bit for Classical CAN format (continued)

Number of message buffers	Value of MCR[RFEN]	Value of ERFCR[ERFEN]	Minimum number of peripheral clocks per CAN bit
16	1	0	16
32	1	0	17
16	0	1	16
32	0	1	19

For classical frame format, the minimum number of peripheral clocks per CAN bit specified in [Table 236](#) determines the minimum peripheral clock frequency for a given number of message buffers and for an expected CAN bit rate. The CAN bit rate depends on the number of time quanta in a CAN bit. This number can be defined by adjusting one or more of the bit timing values contained in:

- [Control 1 \(CTRL1\)](#)
- [CAN Bit Timing \(CBT\)](#)
- [Enhanced Nominal CAN Bit Timing \(ENCBT\)](#)

The time quantum (Tq) is defined in [Protocol timing](#). The minimum number of time quanta per CAN bit must be eight, so the oscillator clock frequency should be at least eight times the CAN bit rate.

37.3.13.1.1 Clock restrictions for CAN FD

For CAN FD frame format, some constraints must be satisfied. The equation below calculates the number of peripheral clocks per CAN bit in nominal bit rate (NumClkNomBit).

$$\begin{aligned} \text{NumClkNomBit} &= \frac{f_{\text{SYS}}}{f_{\text{CANCLK}}} \times (\text{PRES DIV} + 1) \times (\text{PROPSEG} + \text{PSEG1} + \text{PSEG2} + 4) \\ &= \frac{f_{\text{SYS}}}{\text{NomBitRate}} \end{aligned}$$

Equation 26. Number of peripheral clocks per nominal CAN bit

Where PRES DIV, PSEG1, and PSEG2 are CAN bit time values in [Control 1 \(CTRL1\)](#). Alternatively, EPRES DIV, EPSEG1, and EPSEG2 values in [CAN Bit Timing \(CBT\)](#) or the values of [EPR\[ENPRES DIV\]](#), [ENCBT\[NTSEG1\]](#), and [ENCBT\[NTSEG2\]](#) can be used instead. NumClkNomBit can also be calculated as a function of the expected nominal bit rate used in the arbitration phase (NomBitRate), as shown in the equation above.

The number of CAN bits in the data phase of an FD frame with BRS = 1 (fast CAN bits) depends on the number of data bytes in the payload. The number of fast CAN bits (NumOfFastBits) can be determined in [Table 237](#). Having fewer data bytes means having fewer fast CAN bits. It also means that less time is available for FlexCAN to scan the whole message buffer memory during the internal matching and arbitration processes.

Table 237. Number of fast CAN bits in a CAN FD frame

Minimum number of data bytes	DLC field	NumOfFastBits
0	0h	21
1	1h	29
2	2h	37
3	3h	45
4	4h	53

Table continues on the next page...

Table 237. Number of fast CAN bits in a CAN FD frame (continued)

Minimum number of data bytes	DLC field	NumOfFastBits
5	5h	61
6	6h	69
7	7h	77
8	8h	85
12	9h	117
16	Ah	149
20	Bh	186
24	Ch	218
32	Dh	282
48	Eh	410
64	Fh	538

The critical part of a CAN FD frame is during the data phase, where the CAN bit rate is faster than in the arbitration phase. The minimum number of peripheral clocks per fast CAN bit (MinNumClkFastBit) can be calculated to guarantee that enough time is available for FlexCAN to scan the message buffer memory during reception and transmission. The equation below calculates this constraint.

$$MinNumClkFastBit_A = \frac{(8.5 \times MaxNumOfMb) + [ERFEN \times (2 \times NFE + 4)] + 64 - (9 \times NumClkNomBit)}{NumOfFastBits}$$

Equation 27. Minimum number of peripheral clocks per fast CAN bit for FlexCAN scan process

Where MaxNumOfMb is the maximum number of available message buffers defined in [MCR\[MAXMB\]](#). NFE and ERFEN are the fields defined in [Enhanced RX FIFO Control \(ERFCR\)](#).

The clock-domain-crossing circuit between the CHI and PE subblocks also imposes a minimum number of peripheral clocks per fast CAN bit. This minimum is required for the handshake mechanism to work properly without losing status information through the interface, as shown in the equation below.

$$MinNumClkFastBit_B = 3 \times \left(1 + \frac{f_{SYS}}{f_{CANCLK}} \right)$$

Equation 28. Minimum number of peripheral clocks per fast CAN bit for FlexCAN clock domain interface

Therefore, the larger of the two values calculated above determines the minimum number of peripheral clocks per fast CAN bit (MinNumClkFastBit).

$$MinNumClkFastBit = Maximum (MinNumClkFastBit_A, MinNumClkFastBit_B)$$

Equation 29. Minimum number of peripheral clocks per fast CAN bit

Then, the maximum CAN bit rate in the data phase of CAN FD frames (DataBitRateMAX) can be calculated as below.

$$DataBitRate_{MAX} = \frac{f_{CANCLK}}{ROUNDUP\left(\frac{MinNumClkFastBit \times f_{CANCLK}}{f_{SYS}}\right)}$$

Equation 30. Maximum achievable baud rate for data phase

These factors affect the maximum data bit rate attainable by FlexCAN in CAN FD mode:

- The peripheral and oscillator clock frequencies
- The maximum number of message buffers
- The expected nominal bit rate

Also, the data bit rate depends on the minimum payload size of FD frames used in a given application.

To illustrate how the configuration of FlexCAN variables affects the CAN FD bit rate, consider this application example:

- The peripheral clock frequency is set to 50 MHz
 - The oscillator clock frequency is set to 40 MHz
1. Considering the nominal bit rate as 1 Mbit/s, the number of peripheral clocks per CAN bit in nominal bit rate is calculated as below.

$$NumClkNomBit = \frac{50 \times 10^6}{1 \times 10^6} = 50$$

Equation 31. Calculation example for number of peripheral clocks per nominal CAN bit

2. The number of fast CAN bits (NumOfFastBits) is determined in [Table 237](#). For example, if the minimum payload in FD frames is 8 bytes, there are 85 CAN bits in the data phase.
3. Assuming the maximum number of message buffers is 96, and Enhanced RX FIFO is disabled, the minimum number of peripheral clocks per fast CAN bit (MinNumClkFastBit) can be calculated.

$$MinNumClkFastBit_A = \frac{(8.5 \times 96) + 64 - (9 \times 50)}{85} = 5.06$$

Equation 32. Calculation example for number of peripheral clocks per fast CAN bit for FlexCAN scan process

$$MinNumClkFastBit_B = 3 \times \left(1 + \frac{50}{40}\right) = 6.75$$

Equation 33. Calculation example for number of peripheral clocks per fast CAN bit for FlexCAN clock domain interface

$$MinNumClkFastBit = \text{Maximum} (5.06, 6.75) = 6.75$$

Equation 34. Calculation example for number of peripheral clocks per fast CAN bit

4. The maximum CAN bit rate in the data phase can finally be found.

$$DataBitRate_{MAX} = \frac{40 \times 10^6}{ROUNDUP\left(\frac{6.75 \times 40 \times 10^6}{50 \times 10^6}\right)} = 6.667 \text{ Mbps}$$

Equation 35. Calculation example for maximum achievable baud rate

Even though the oscillator clock frequency (40 MHz) is adequate to generate a data rate of 8 Mbit/s in CAN FD mode, the specific FlexCAN configuration limits this rate to 6.667 Mbit/s. This limitation is mainly due to the low peripheral clock frequency that imposes the MinNumClkFastBitB bound.

Table 238 shows the maximum data rate for CAN FD with Enhanced RX FIFO disabled according to clock frequencies, payload size, and number of available message buffers. For some cases, if the number of available message buffers is reduced, FlexCAN can then achieve a data rate up to 8 Mbit/s.

Table 238. Maximum CAN bit rate in data phase on CAN FD frames with Enhanced RX FIFO disabled

Peripheral clock frequency (MHz)	Minimum payload size	Number of available message buffers	Maximum data rate (Mbit/s)
40	8	94	6.667
40	8	114	>5.0
40	12	>117	6.667
40	12	128	5.714
50	12–64	128	6.667
60	8	126	8.0
60	12	128	8.0
67	6	128	8.0
80	3	128	8.0
100	0	128	8.0

37.3.14 Reset

You can reset FlexCAN in the following ways:

- Chip-level hard reset, which resets all memory-mapped registers asynchronously.
- Soft reset:
 - [MCR\[SOFTTRST\]](#), which resets some of the memory-mapped registers synchronously. To see which registers soft reset affects, see [Table 241](#).
 - The chip level soft reset input is not supported, use the [MCR\[SOFTTRST\]](#) to trigger a soft reset.

Soft reset is synchronous and must follow an internal request-and-acknowledge procedure across clock domains. Therefore, it may take some time to propagate its effects fully. [MCR\[SOFTTRST\]](#) remains 1 when soft reset is pending, so software can poll this field to identify when the reset has completed. Soft reset cannot be applied when clocks are shut down in a low-power mode. The low-power mode should be exited and the clocks resumed before applying soft reset.

When the module is enabled ([MCR\[MDIS\]](#) becomes 0), FlexCAN automatically enters Freeze mode. In Freeze mode:

1. FlexCAN is unsynchronized to the CAN bus.
2. [MCR\[HALT\]](#) and [MCR\[FRZ\]](#) become 1.
3. The internal state machines are disabled.
4. [MCR\[FRZACK\]](#) and [MCR\[NOTRDY\]](#) become 1.

The TX pin is in the recessive state and FlexCAN does not initiate any transmission or reception of CAN frames. Reset does not affect the message buffers and the RX Individual Mask registers, so they are not automatically initialized.

37.3.15 Interrupts

FlexCAN has many interrupt sources:

- Interrupts due to message buffers
- Interrupts due to interrupts combined via an OR operator from:
 - Message buffers
 - Bus Off
 - Bus Off Done
 - Error
 - Error Fast (errors detected in the data phase of CAN FD format messages with BRS = 1)
 - Wake Up
 - Wake Up Match
 - Wake Up Timeout
 - TX Warning
 - RX Warning

If its corresponding IMASK bit is 1, each message buffer can be an interrupt source. There is no distinction between TX and RX interrupts for a particular buffer, under the assumption that the buffer is initialized for either transmission or reception. Each buffer has an assigned flag bit in the IFLAG registers. When the corresponding buffer completes a successful transfer, the flag is set. When the CPU writes 1 to it, the flag is cleared (unless another interrupt is generated at the same time).

NOTE

The CPU must clear only the bit causing the current interrupt. For this reason, do not use bit manipulation instructions (BSET) to clear interrupt flags. These instructions may cause accidental clearing of interrupt flags which are set after entering the current interrupt handler.

If the Legacy RX FIFO is enabled ([MCR\[RFEN\]](#) = 1) and DMA is disabled ([MCR\[DMA\]](#) = 0), the interrupts corresponding to message buffers 0–7 have different meanings.

- Bit 7 of [Interrupt Flags 1 \(IFLAG1\)](#) becomes the Legacy FIFO Overflow flag
- Bit 6 becomes the Legacy FIFO Warning flag
- Bit 5 becomes the Frames Available in Legacy FIFO flag
- Bits 4–0 are unused.

See [Interrupt Flags 1 \(IFLAG1\)](#) for more information.

If both Legacy RX FIFO and DMA are enabled ([MCR\[RFEN\]](#) = 1 and [MCR\[DMA\]](#) = 1), FlexCAN does not generate any Legacy FIFO interrupt. Bit 5 of IFLAG1 still indicates Frames Available in Legacy FIFO and generates a DMA request. Bits 7, 6, and 4–0 are unused.

CAUTION

Legacy FIFO cannot be enabled when CAN FD is enabled.

When multiple message buffer interrupt sources are combined via an OR operator into a single interrupt, the interrupt is generated when any associated message buffer (or FIFO, if applicable) generates an interrupt. In this case, the CPU must read the IFLAG registers to determine which message buffer or FIFO source caused the interrupt.

These interrupt sources generate interrupts like the message buffer interrupt sources, and can be read from [Error and Status 1 \(ESR1\)](#):

- Bus Off
- Bus Off Done
- Error
- Error Fast

- Wake Up
- TX Warning
- RX Warning

The Bus Off, Error, TX Warning, and RX Warning interrupt masks are located in [Control 1 \(CTRL1\)](#); the wake-up interrupt mask is located in [Module Configuration \(MCR\)](#).

The interrupt sources for Pretended Networking (Wake-up by Match Flag and Wake-up by Timeout Flag) can be read in [Pretended Networking Wake-Up Match \(WU_MTC\)](#). The respective interrupt mask bits are located in [Pretended Networking Control 1 \(CTRL1_PN\)](#).

37.3.16 Bus interface

CPU access to FlexCAN registers is subject to the following rules:

- Unrestricted read and write access to supervisor registers results in an access error. In [Table 241](#), supervisor registers are registers identified with an S, and registers that are identified with S/U that are in Supervisor Mode
- Read and write access to implemented reserved address space results in an access error.
- Write access to positions whose bits are all currently read-only results in an access error. If at least one of the bits is not read-only, no access error is issued. Write permission to specific positions or some of their bits can change depending on the mode of operation or transitory state. See register and field descriptions for details.
- Read and write access to unimplemented address space results in an access error.
- Read and write access to RAM-located positions during Low-Power mode results in an access error.
- The RXIMR memory region can be considered as general-purpose memory and available for access via these methods:
 - If you write 0 to [MCR\[IRMQ\]](#), the individual masks (RXIMR) are disabled. In this case, the RXIMR memory region is considered general-purpose memory.
 - If [MCR\[MAXMB\]](#) is programmed with a value smaller than the available number of message buffers, the unused memory space can be used as general-purpose RAM space. Reserved words within RAM cannot be used. For example, suppose the RAM in FlexCAN can support up to 16 message buffers, [CTRL2\[RFFN\]](#) = 0h, and [MCR\[MAXMB\]](#) = 0.
 - In this case, the maximum number of message buffers becomes one.
 - The RAM starts at 0080h, and the space 0080h–008Fh is used by the one message buffer.
 - The memory space 0090h–017Fh is available.
 - The space 0180h–087Fh is reserved.
 - The space 0880h–0883h is used by the one individual mask and the available memory in the mask register space is 0884h–08BFh.
 - In the space from 08C0h–09DFh, there are reserved words for internal use which cannot be used as general-purpose RAM.

As a rule, free memory space for general purpose depends only on [MCR\[MAXMB\]](#).

- If [MCR\[FDEN\]](#) = 1, general-purpose memory can be used only outside Freeze mode.

Table 239. Access permissions

Supervisor access	0				1		
Supervisor mode MCR[SUPV] = 1	0			1	Any		
Modes of operation	Normal	Freeze	Low-power	Any	Normal	Freeze	Low-power
MCR	Bus error	Bus error	Bus error	Bus error	Read and write	Read and write	Read and write
CTRL1	Read and write	Read and write	Read and write	Bus error	Read and write	Read and write	Read and write
TIMER	Read and write	Read and write	Read and write	Bus error	Read and write	Read and write	Read and write
TCR	Bus error	Bus error	Bus error	Bus error	Bus error	Bus error	Bus error
RXMGMASK ¹	Bus error for write operation	Read and write	Bus error for write operation	Bus error	Bus error for write operation	Read and write	Bus error for write operation
RX14MASK ¹	Bus error for write operation	Read and write	Bus error for write operation	Bus error	Bus error for write operation	Read and write	Bus error for write operation
RX15MASK ¹	Bus error for write operation	Read and write	Bus error for write operation	Bus error	Bus error for write operation	Read and write	Bus error for write operation
ECR	Bus error for write operation	Read and write	Bus error for write operation	Bus error	Bus error for write operation	Read and write	Bus error for write operation
ESR1	Read and write	Read and write	Read and write	Bus error	Read and write	Read and write	Read and write
IMASK1	Read and write	Read and write	Read and write	Bus error	Read and write	Read and write	Read and write
IFLAG1	Read and write	Read and write	Read and write	Bus error	Read and write	Read and write	Read and write
CTRL2	Read and write	Read and write	Read and write	Bus error	Read and write	Read and write	Read and write
ESR2	Read and write	Read and write	Read and write	Bus error	Read and write	Read and write	Read and write
CRCR	Bus error for write operation	Bus error for write operation	Bus error for write operation	Bus error	Bus error for write operation	Bus error for write operation	Bus error for write operation
RXFGMASK ¹	Bus error for write operation	Read and write	Bus error for write operation	Bus error	Bus error for write operation	Read and write	Bus error for write operation

Table continues on the next page...

Table 239. Access permissions (continued)

Supervisor access	0				1		
Supervisor mode MCR[SUPV] = 1	0			1	Any		
Modes of operation	Normal	Freeze	Low-power	Any	Normal	Freeze	Low-power
RXFIR ¹	Bus error for write operation	Bus error for write operation	Bus error for write operation	Bus error	Bus error for write operation	Bus error for write operation	Bus error for write operation
CBT	Bus error for write operation	Read and write	Bus error for write operation	Bus error	Bus error for write operation	Read and write	Bus error for write operation
DBG1	Bus error for write operation	Bus error for write operation	Bus error for write operation	Bus error for write operation	Bus error for write operation	Bus error for write operation	Bus error for write operation
DBG2	Bus error for write operation	Bus error for write operation	Bus error for write operation	Bus error for write operation	Bus error for write operation	Bus error for write operation	Bus error for write operation
MB ^{1 2}	Read and write	Read and write	Read and write	Bus error	Read and write	Read and write	Read and write
Legacy FIFO header ¹	Read and write	Read and write	Read and write	Bus error	Read and write	Read and write	Read and write
Legacy FIFO reserved space ¹	Bus error	Bus error	Bus error	Bus error	Bus error	Bus error	Bus error
Legacy FIFO filters ¹	Read and write	Read and write	Read and write	Bus error	Read and write	Read and write	Read and write
RXIMR ¹	Bus error	Read and write	Bus error	Bus error	Bus error	Read and write	Bus error
CTRL1_PN	Read and write ³	Read and write	Read and write ³	Bus error	Read and write ³	Read and write	Read and write ³
CTRL2_PN	Read and write ³	Read and write	Read and write ³	Bus error	Read and write ³	Read and write	Read and write ³
WU_MTC	Read and write	Read and write	Read and write	Bus error	Read and write	Read and write	Read and write
FLT_ID1	Read and write ³	Read and write	Read and write ³	Bus error	Read and write ³	Read and write	Read and write ³
FLT_DLC	Read and write ³	Read and write	Read and write ³	Bus error	Read and write ³	Read and write	Read and write ³
PL1_LO	Read and write ³	Read and write	Read and write ³	Bus error	Read and write ³	Read and write	Read and write ³
PL1_HI	Read and write ³	Read and write	Read and write ³	Bus error	Read and write ³	Read and write	Read and write ³

Table continues on the next page...

Table 239. Access permissions (continued)

Supervisor access	0				1		
Supervisor mode MCR[SUPV] = 1	0			1	Any		
Modes of operation	Normal	Freeze	Low-power	Any	Normal	Freeze	Low-power
FLT_ID2_IDMASK	Read and write ³	Read and write	Read and write ³	Bus error	Read and write ³	Read and write	Read and write ³
PL2_PLMASK_LO	Read and write ³	Read and write	Read and write ³	Bus error	Read and write ³	Read and write	Read and write ³
PL2_PLMASK_HI	Read and write ³	Read and write	Read and write ³	Bus error	Read and write ³	Read and write	Read and write ³
WMB0	Read and write ³	Read and write ³	Read and write ³	Bus error	Read and write ³	Read and write ³	Read and write ³
WMB1	Read and write ³	Read and write ³	Read and write ³	Bus error	Read and write ³	Read and write ³	Read and write ³
WMB2	Read and write ³	Read and write ³	Read and write ³	Bus error	Read and write ³	Read and write ³	Read and write ³
WMB3	Read and write ³	Read and write ³	Read and write ³	Bus error	Read and write ³	Read and write	Read and write ³
EPRS	Bus error for write operation	Read and write	Bus error for write operation	Bus error	Bus error for write operation	Read and write	Bus error for write operation
ENCBT	Bus error for write operation	Read and write	Bus error for write operation	Bus error	Bus error for write operation	Read and write	Bus error for write operation
EDCBT	Bus error for write operation	Read and write	Bus error for write operation	Bus error	Bus error for write operation	Read and write	Bus error for write operation
ETDC	Bus error for write operation	Read and write	Bus error for write operation	Bus error	Bus error for write operation	Read and write	Bus error for write operation
FDCTRL	Read and write	Read and write	Read and write	Bus error	Read and write	Read and write	Read and write
FDCBT	Read and write ³	Read and write	Read and write ³	Bus error	Read and write ³	Read and write	Read and write ³
FDCRC	Bus error for write operation	Bus error for write operation	Bus error for write operation	Bus error	Bus error for write operation	Bus error for write operation	Bus error for write operation
ERFCR	Read and write ³	Read and write	Read and write ³	Bus error	Read and write ³	Read and write	Read and write ³
ERFIER	Read and write	Read and write	Read and write	Bus error	Read and write	Read and write	Read and write

Table continues on the next page...

Table 239. Access permissions (continued)

Supervisor access	0				1		
Supervisor mode MCR[SUPV] = 1	0			1	Any		
Modes of operation	Normal	Freeze	Low-power	Any	Normal	Freeze	Low-power
ERFSR	Read and write	Read and write	Read and write	Bus error	Read and write	Read and write	Read and write
Enhanced Rx FIFO header ⁴	Bus error for write operation	Bus error for write operation	Bus error for write operation	Bus error	Bus error for write operation	Bus error for write operation	Bus error for write operation
Enhanced Rx FIFO reserved space ⁴	Bus error	Bus error	Bus error	Bus error	Bus error	Bus error	Bus error
ERFFEL	Bus error for write operation	Read and write	Bus error for write operation	Bus error	Bus error for write operation	Read and write	Bus error for write operation
General purpose RAM ¹	Read and write	Read and write	Read and write	Bus error	Read and write	Read and write	Read and write
Reserved space (used) ¹	Bus error	Bus error	Bus error	Bus error	Bus error	Bus error	Bus error
Reserved space (empty) ¹	Bus error	Bus error	Bus error	Bus error	Bus error	Bus error	Bus error

1. Access in low power is only possible if RAM_clk and MODULE_CLK are enabled.
2. If **MCR[RFEN] = 1**, see Legacy FIFO access rules in the rows below.
3. Write operation has no effect.
4. If **MCR[RFEN] = 1**, do not access Enhanced RX FIFO.

37.4 External signal descriptions

FlexCAN has two I/O signals connected to the external chip pins. These signals are summarized in [Table 240](#) and described in the following subsections.

Table 240. FlexCAN signal descriptions

Signal	Description	I/O
CAN RX	CAN receive pin	Input
CAN TX	CAN transmit pin	Output

37.4.1 CAN RX

This pin is the receive pin from the CAN bus transceiver. Logic level 0 represents its dominant state. Logic level 1 represents its recessive state.

37.4.2 CAN TX

This pin is the transmit pin to the CAN bus transceiver. Logic level 0 represents its dominant state. Logic level 1 represents its recessive state.

37.5 Initialization and application information

37.5.1 FlexCAN initialization sequence

For any configuration change or initialization, you must put FlexCAN into Freeze mode (see [Freeze mode](#)). The module must be initialized after every reset. FlexCAN memory must be initialized before switching to functional mode.

The following is a generic initialization sequence applicable to FlexCAN:

1. Initialize [Module Configuration \(MCR\)](#).
 - a. Enable the individual filtering per message buffer and reception queue features by writing 1 to [MCR\[IRMQ\]](#).
 - b. Enable the warning interrupts by writing 1 to [MCR\[WRNEN\]](#).
 - c. If required, disable frame self-reception by writing 1 to [MCR\[SRXDIS\]](#).
 - d. Enable the Legacy RX FIFO by writing 1 to [MCR\[RFEN\]](#) or enable the Enhanced RX FIFO by writing 1 to [ERFCR\[ERFEN\]](#).
 - e. If Legacy RX FIFO or Enhanced RX FIFO is enabled and DMA is required, write 1 to [MCR\[DMA\]](#).
 - f. If Pretended Networking mode is required, write 1 to [MCR\[PNET_EN\]](#).
 - g. Enable the abort mechanism by writing 1 to [MCR\[AEN\]](#).
 - h. Enable the local priority feature by writing 1 to [MCR\[LPRIOEN\]](#).
2. Initialize [Control 1 \(CTRL1\)](#) and [CAN FD Bit Timing \(FDCBT\)](#). Optionally initialize [CAN Bit Timing \(CBT\)](#).
 - a. Determine the bit timing parameters: [CTRL1\[PROPSEG\]](#), [CTRL1\[PSEG1\]](#), [CTRL1\[PSEG2\]](#), and [CTRL1\[RJW\]](#).
 - b. Optionally determine the bit timing parameters: [CBT\[EPROPSEG\]](#), [CBT\[EPSEG1\]](#), [CBT\[EPSEG2\]](#), and [CBT\[ERJW\]](#).
 - c. Determine the CAN FD bit timing parameters: [FDCBT\[FPROPSEG\]](#), [FDCBT\[FPSEG1\]](#), [FDCBT\[FPSEG2\]](#), and [FDCBT\[FRJW\]](#).
 - d. Determine the bit rate by programming [CTRL1\[PRES DIV\]](#) and optionally programming [CBT\[EPRES DIV\]](#).
 - e. Determine the CAN FD bit rate by programming [FDCBT\[FPRES DIV\]](#).
 - f. Determine the internal arbitration mode by programming [CTRL1\[LBUF\]](#).
3. Initialize the message buffers. (See [Message buffer structure](#) for message buffer details.)
 - a. The control and status word of all message buffers must be initialized.
 - b. If RX FIFO is enabled, the ID filter table must be initialized.
 - c. Other entries in each message buffer should be initialized as required.
4. Initialize [Receive Individual Mask \(RXIMR0 - RXIMR31\)](#).
5. Write 1 to required interrupt mask bits in:
 - IMASK registers (for all message buffer interrupts)
 - [Module Configuration \(MCR\)](#) (for wake-up interrupt)
 - [Control 1 \(CTRL1\)](#) and [Control 2 \(CTRL2\)](#) (for Bus Off and Error interrupts)
6. If Pretended Networking mode is enabled, configure the necessary registers for selective wake-up.
7. Write 0 to [MCR\[HALT\]](#).

After the last step listed above, FlexCAN attempts to synchronize to the CAN bus.

37.6 Memory map and register definition

This section describes the registers and data structures in FlexCAN. The base address of the module depends on the particular memory map of the chip.

37.6.1 FlexCAN memory mapping

The address space occupied by FlexCAN has 128 bytes for registers starting at the module base address, followed by embedded RAM starting at address offset 0080h.

Each individual register is identified by its complete name and corresponding mnemonic. The access type can be Supervisor (S) or Unrestricted (U). Most registers can be configured to have either Supervisor or Unrestricted access by programming [MCR\[SUPV\]](#). These registers are identified as S/U in the Access column of [Table 241](#).

NOTE

An invalid register access results in a bus error. Invalid accesses include reading a write-only register, writing a read-only register, and accessing an invalid address.

NOTE

To update the parity bits in memory properly, all FlexCAN memory must be initialized before reading registers which are implemented in memory. You must also initialize [RX Message Buffers Global Mask \(RXMGMASK\)](#), [Receive 14 Mask \(RX14MASK\)](#), [Receive 15 Mask \(RX15MASK\)](#) and [Legacy RX FIFO Global Mask \(RXFGMASK\)](#). [MCR\[RFEN\]](#) and [ERFCR\[ERFEN\]](#) must not be 1 during memory initialization.

Table 241. Register access and reset information

Register	Access type	Affected by hard reset	Affected by soft reset
Module Configuration (MCR)	S	Yes	Yes
Control 1 (CTRL1)	S/U	Yes	No
Free-Running Timer (TIMER)	S/U	Yes	Yes
RX Message buffers Global Mask (RXMGMASK)	S/U	No	No
RX Buffer 14 Mask (RX14MASK)	S/U	No	No
RX Buffer 15 Mask (RX15MASK)	S/U	No	No
Error Counter (ECR)	S/U	Yes	Yes
Error and Status 1 (ESR1)	S/U	Yes	Yes
Interrupt Masks 1 (IMASK1)	S/U	Yes	Yes
Interrupt Flags 1 (IFLAG1)	S/U	Yes	Yes
Control 2 (CTRL2)	S/U	Yes	No
Error and Status 2 (ESR2)	S/U	Yes	Yes
Cyclic Redundancy Check (CRCR)	S/U	Yes	Yes
RX FIFO Global Mask (RXFGMASK)	S/U	No	No
RX FIFO Information (RXFIR)	S/U	No	No
CAN Bit Timing (CBT)	S/U	Yes	No

Table continues on the next page...

Table 241. Register access and reset information (continued)

Register	Access type	Affected by hard reset	Affected by soft reset
Message buffers	S/U	No	No
RX Individual Masks	S/U	No	No
Pretended Networking Control 1 (CTRL1_PN)	S/U	Yes	Yes
Pretended Networking Control 2 (CTRL2_PN)	S/U	Yes	Yes
Pretended Networking Wake Up Match (WU_MTC)	S/U	Yes	Yes
Pretended Networking ID Filter 1 (FLT_ID1)	S/U	Yes	Yes
Pretended Networking DLC Filter (FLT_DLC)	S/U	Yes	Yes
Pretended Networking Payload Low Filter 1 (PL1_LO)	S/U	Yes	Yes
Pretended Networking Payload High Filter 1 (PL1_HI)	S/U	Yes	Yes
Pretended Networking ID Filter 2 or ID Mask (FLT_ID2_IDMASK)	S/U	Yes	Yes
Pretended Networking Payload Low Filter 2 or Payload Low Mask (PL2_PLMASK_LO)	S/U	Yes	Yes
Pretended Networking Payload High Filter 2 or Payload High Mask (PL2_PLMASK_HI)	S/U	Yes	Yes
Pretended Networking Wake Up Message Buffer 0 (WMB0)	S/U	Yes	No
Pretended Networking Wake Up Message Buffer 1 (WMB1)	S/U	Yes	No
Pretended Networking Wake Up Message Buffer 2 (WMB2)	S/U	Yes	No
Pretended Networking Wake Up Message Buffer 3 (WMB3)	S/U	Yes	No
Enhanced CAN Bit Timing Prescalers (EPRS)	S/U	Yes	No
Enhanced Nominal CAN Bit Timing (ENCBT)	S/U	Yes	No
Enhanced Data Phase CAN bit Timing (EDCBT)	S/U	Yes	No
Enhanced Transceiver Delay Compensation (ETDC)	S/U	Yes	No
CAN FD Control (FDCTRL)	S/U	Yes	No
CAN FD Bit Timing (FDCBT)	S/U	Yes	No
CAN FD CRC (FDCRC)	S/U	Yes	Yes
Enhanced RX FIFO Control (ERFCR)	S/U	Yes	Yes
Enhanced RX FIFO Interrupt Enable (ERFIER)	S/U	Yes	Yes

Table continues on the next page...

Table 241. Register access and reset information (continued)

Register	Access type	Affected by hard reset	Affected by soft reset
Enhanced RX FIFO Status (ERFSR)	S/U	Yes	Yes
Enhanced RX FIFO	S/U	No	No
Enhanced RX FIFO Filter Element (ERFFEL)	S/U	No	No

FlexCAN can store CAN messages for transmission and reception using message buffers and RX FIFO structures.

37.6.2 FlexCAN register descriptions

The table below shows the FlexCAN memory map.

The address range from offset 80h–27Fh allocates the thirty-two 128-bit message buffers. The memory maps for the message buffers are in [FlexCAN message buffer memory map](#).

The address range from offset 2000h–2048h allocates the Enhanced RX FIFO output, and the address range from offset 204Ch–238Ch allocates the rest of Enhanced RX FIFO 11 elements. The memory map for the Enhanced RX FIFO is in [Enhanced RX FIFO structure](#).

37.6.2.1 FlexCAN memory map

CAN0 base address: 400C_C000h

Offset	Register	Width (In bits)	Access	Reset value
0h	Module Configuration (MCR)	32	RW	D890_000Fh
4h	Control 1 (CTRL1)	32	RW	0000_0000h
8h	Free-Running Timer (TIMER)	32	RW	0000_0000h
10h	RX Message Buffers Global Mask (RXMGMASK)	32	RW	See section
14h	Receive 14 Mask (RX14MASK)	32	RW	See section
18h	Receive 15 Mask (RX15MASK)	32	RW	See section
1Ch	Error Counter (ECR)	32	RW	0000_0000h
20h	Error and Status 1 (ESR1)	32	RW	0000_0000h
28h	Interrupt Masks 1 (IMASK1)	32	RW	0000_0000h
30h	Interrupt Flags 1 (IFLAG1)	32	RW	0000_0000h
34h	Control 2 (CTRL2)	32	RW	00A0_0000h
38h	Error and Status 2 (ESR2)	32	R	0000_0000h
44h	Cyclic Redundancy Check (CRCR)	32	R	0000_0000h
48h	Legacy RX FIFO Global Mask (RXFGMASK)	32	RW	See section
4Ch	Legacy RX FIFO Information (RXFIR)	32	R	See section

Table continues on the next page...

Table continued from the previous page...

Offset	Register	Width (In bits)	Access	Reset value
50h	CAN Bit Timing (CBT)	32	RW	0000_0000h
880h - 8FCh	Receive Individual Mask (RXIMR0 - RXIMR31)	32	RW	See section
B00h	Pretended Networking Control 1 (CTRL1_PN)	32	RW	0000_0100h
B04h	Pretended Networking Control 2 (CTRL2_PN)	32	RW	0000_0000h
B08h	Pretended Networking Wake-Up Match (WU_MTC)	32	RW	0000_0000h
B0Ch	Pretended Networking ID Filter 1 (FLT_ID1)	32	RW	0000_0000h
B10h	Pretended Networking Data Length Code (DLC) Filter (FLT_DLC)	32	RW	0000_0008h
B14h	Pretended Networking Payload Low Filter 1 (PL1_LO)	32	RW	0000_0000h
B18h	Pretended Networking Payload High Filter 1 (PL1_HI)	32	RW	0000_0000h
B1Ch	Pretended Networking ID Filter 2 or ID Mask (FLT_ID2_IDMASK)	32	RW	0000_0000h
B20h	Pretended Networking Payload Low Filter 2 and Payload Low Mask (PL2_PLMASK_LO)	32	RW	0000_0000h
B24h	Pretended Networking Payload High Filter 2 and Payload High Mask (PL2_PLMASK_HI)	32	RW	0000_0000h
B40h	Wake-Up Message Buffer (WMB0_CS)	32	R	0000_0000h
B44h	Wake-Up Message Buffer for ID (WMB0_ID)	32	R	0000_0000h
B48h	Wake-Up Message Buffer for Data 0–3 (WMB0_D03)	32	R	0000_0000h
B4Ch	Wake-Up Message Buffer Register Data 4–7 (WMB0_D47)	32	R	0000_0000h
B50h	Wake-Up Message Buffer (WMB1_CS)	32	R	0000_0000h
B54h	Wake-Up Message Buffer for ID (WMB1_ID)	32	R	0000_0000h
B58h	Wake-Up Message Buffer for Data 0–3 (WMB1_D03)	32	R	0000_0000h
B5Ch	Wake-Up Message Buffer Register Data 4–7 (WMB1_D47)	32	R	0000_0000h
B60h	Wake-Up Message Buffer (WMB2_CS)	32	R	0000_0000h
B64h	Wake-Up Message Buffer for ID (WMB2_ID)	32	R	0000_0000h
B68h	Wake-Up Message Buffer for Data 0–3 (WMB2_D03)	32	R	0000_0000h
B6Ch	Wake-Up Message Buffer Register Data 4–7 (WMB2_D47)	32	R	0000_0000h
B70h	Wake-Up Message Buffer (WMB3_CS)	32	R	0000_0000h
B74h	Wake-Up Message Buffer for ID (WMB3_ID)	32	R	0000_0000h
B78h	Wake-Up Message Buffer for Data 0–3 (WMB3_D03)	32	R	0000_0000h
B7Ch	Wake-Up Message Buffer Register Data 4–7 (WMB3_D47)	32	R	0000_0000h
BF0h	Enhanced CAN Bit Timing Prescalers (EPRS)	32	RW	0000_0000h

Table continues on the next page...

Table continued from the previous page...

Offset	Register	Width (In bits)	Access	Reset value
BF4h	Enhanced Nominal CAN Bit Timing (ENCBT)	32	RW	0000_0000h
BF8h	Enhanced Data Phase CAN Bit Timing (EDCBT)	32	RW	0000_0000h
BFCh	Enhanced Transceiver Delay Compensation (ETDC)	32	RW	0000_0000h
C00h	CAN FD Control (FDCTRL)	32	RW	8000_0100h
C04h	CAN FD Bit Timing (FDCBT)	32	RW	0000_0000h
C08h	CAN FD CRC (FDCRC)	32	R	0000_0000h
C0Ch	Enhanced RX FIFO Control (ERFCR)	32	RW	0000_0000h
C10h	Enhanced RX FIFO Interrupt Enable (ERFIER)	32	RW	0000_0000h
C14h	Enhanced RX FIFO Status (ERFSR)	32	RW	0000_0000h
3000h - 307Ch	Enhanced RX FIFO Filter Element (ERFFEL0 - ERFFEL31)	32	RW	See section

37.6.2.2 Module Configuration (MCR)


Offset

Register	Offset
MCR	0h

Function

Defines global system configurations, including the module operation modes and the maximum message buffer configuration.

Diagram

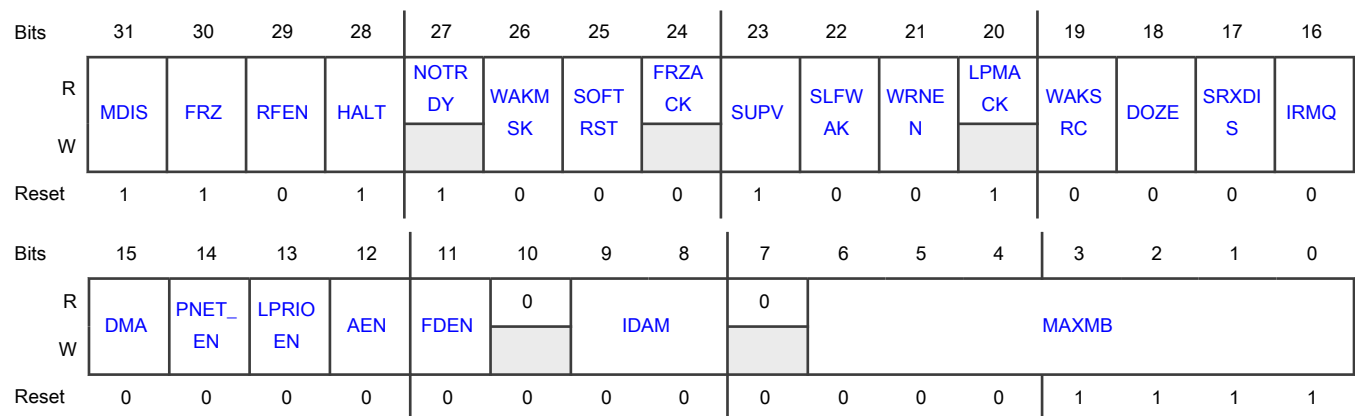

Fields

Field	Function
31 MDIS	Module Disable Disables FlexCAN. When disabled, FlexCAN disables the clocks to the CAN Protocol Engine and Controller Host Interface submodules. Soft reset does not affect this field. 0b - Enable 1b - Disable
30 FRZ	Freeze Enable Specifies FlexCAN behavior when MCR[HALT] = 1 or when Debug mode is requested at chip level. When this field becomes 1, FlexCAN can enter Freeze mode. Writing 0 to this field causes FlexCAN to exit from Freeze mode. 0b - Disable 1b - Enable
29 RFEN	Legacy RX FIFO Enable Enables the Legacy RX FIFO feature. When this field is 1, message buffers 0–5 cannot be used for normal reception and transmission. The corresponding memory region (80h–DCh) is used by the FIFO engine and additional message buffers (up to 32, depending on CTRL2[RFFN]). These message buffers are used as Legacy RX FIFO ID filter table elements. This field also impacts the definition of the minimum number of peripheral clocks per CAN bit as described in Table 236. This field can be written in Freeze mode only; the module blocks it in other modes. NOTE When CAN FD operation is enabled (see MCR[FDEN]), you cannot write 1 to this field. NOTE This field must not be 1 if ERFCR[ERFEN] = 1. 0b - Disable 1b - Enable
28 HALT	Halt FlexCAN Puts FlexCAN into Freeze mode. The CPU should write 0 to this field after initializing the message buffers and Control 1 (CTRL1) and Control 2 (CTRL2). FlexCAN performs no reception or transmission before this field becomes 0. Freeze mode cannot be entered when FlexCAN is in a low-power mode. 0b - No request 1b - Enter Freeze mode, if MCR[FRZ] = 1.
27 NOTRDY	FlexCAN Not Ready Indicates whether FlexCAN is in Disable mode, Doze mode, Stop mode or Freeze mode. When FlexCAN has exited these modes, this field becomes 0. Soft reset does not affect this field. 0b - FlexCAN is in Normal mode, Listen-Only mode, or Loopback mode. 1b - FlexCAN is in Disable mode, Doze mode, Stop mode, or Freeze mode.

Table continues on the next page...

Table continued from the previous page...

Field	Function
26 WAKMSK	Wake-up Interrupt Mask Enables the wake-up interrupt generation under the Self Wake-Up mechanism. 0b - Disabled 1b - Enabled
25 SOFRST	Soft Reset Resets internal state machines of FlexCAN and some memory-mapped registers. The CPU can write 1 to this field directly. This field also becomes 1 when global soft reset is requested at the chip level. Because soft reset is synchronous and must follow a request-and-acknowledge procedure across clock domains, it may take some time to propagate its effect fully. When reset is pending, this field remains 1; it automatically becomes 0 when reset completes. You can poll this field to know when the soft reset has completed. Soft reset cannot be applied when clocks are shut down in a low-power mode. Transfer the module out of the low-power mode before applying soft reset. Soft reset does not affect this field. NOTE This field becomes 0 within 2 CAN bits after assertion of this bit. 0b - No reset 1b - Soft reset affects reset registers
24 FRZACK	Freeze Mode Acknowledge Indicates whether FlexCAN is in Freeze mode and its prescaler is stopped. The Freeze mode request cannot be granted until current transmission or reception processes have finished. Therefore, you can poll this field to know when FlexCAN has entered Freeze mode. If the Freeze mode request is negated, this field becomes 0 after the FlexCAN prescaler is running again. If Freeze mode is requested when FlexCAN is in a low-power mode, this field becomes 1 only when the low-power mode is exited. See Freeze mode. Soft reset does not affect this field. NOTE This field becomes 1 within 180 CAN bits if current transmission or reception is ongoing for classical frames and 730 CAN bits if current transmission or reception is ongoing for FD frames after the low-power mode requested by CPU. This field becomes 0 within 2 CAN bits after the Freeze mode request removal (see Protocol timing). 0b - Not in Freeze mode, prescaler running. 1b - In Freeze mode, prescaler stopped.
23 SUPV	Supervisor Mode Configures FlexCAN to be either in Supervisor or User mode. The registers that this field affects are marked as S/U in the Access type column of Table 241. The affected registers start with Supervisor access allowance only. In User mode, affected registers allow both Supervisor and Unrestricted accesses. In Supervisor mode, affected registers allow only Supervisor access. Unrestricted access behaves as though the access is performed on an unimplemented register location.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	This field can be written only in Freeze mode; the module blocks it in other modes. 0b - User mode 1b - Supervisor mode
22 SLFWAK	Self-Wake-Up Feature Enables the self-wake-up feature when FlexCAN is in a low-power mode other than Disable mode. When this feature is enabled, the FlexCAN module monitors the bus for a wake-up event (that is, a recessive-to-dominant transition). If a wake-up event is detected during Doze mode, FlexCAN requests to resume its clocks. If enabled to do so, it also generates a wake-up interrupt to the CPU. If a wake-up event is detected during Stop mode, FlexCAN generates, if enabled to do so, a wake-up interrupt to the CPU. The CPU can exit Stop mode globally and FlexCAN can request to resume the clocks. When FlexCAN is in a low-power mode other than Disable mode, this field cannot be written, as the module blocks it. When MCR[PNET_EN] = 1, this feature must be disabled. 0b - Disable 1b - Enable
21 WRNEN	Warning Interrupt Enable Enables the generation of the flags ESR1[TWRNINT] and ESR1[RWRNINT]. When this field is 1, TWRNINT and RWRNINT flags are set when the respective error counter transitions from less than 96 to greater than or equal to 96. When this field is 0, the TWRNINT and RWRNINT flags are always zero, independent of the values of the error counters. No warning interrupt is generated. This field can be written in Freeze mode only; the module blocks it in other modes. 0b - Disable 1b - Enable
20 LPMACK	Low-Power Mode Acknowledge Indicates whether FlexCAN is in a low-power mode (Disable mode, Doze mode, Stop mode). A low-power mode cannot be entered until all current transmission and reception processes have finished. The CPU can poll this field to know when FlexCAN has entered low-power mode. Soft reset does not affect this field. NOTE This field becomes 1 within 180 CAN bits if current transmission or reception is ongoing for classical frames and 730 CAN bits if current transmission or reception is ongoing for FD frames after the low-power mode requested by CPU. This field becomes 0 within 2 CAN bits after the low-power mode request removal (see Protocol timing). When FlexCAN is in Pretended Networking mode, this field becomes 0 within 180 CAN bits after the low-power mode request removal. 0b - Not in a low-power mode 1b - In a low-power mode

Table continues on the next page...

Table continued from the previous page...

Field	Function
19 WAKSRC	Wake-Up Source Determines whether the integrated low-pass filter is applied to the RX input that FlexCAN uses to detect recessive-to-dominant edges on the CAN bus. This filter can protect the RX CAN input from spurious wake-up. This field can be written only in Freeze mode. The module blocks it in other modes. 0b - No filter applied 1b - Filter applied
18 DOZE	Doze Mode Enable Determines whether FlexCAN can enter low-power mode when Doze mode is requested at chip level. This field is automatically reset when FlexCAN wakes from Doze mode upon detecting activity on the CAN bus (self wake-up enabled). 0b - Disable 1b - Enable
17 SRXDIS	Self-Reception Disable Determines whether FlexCAN can receive frames transmitted by itself. If 1, frames transmitted by the module are not stored in any MB, regardless of whether the MB is programmed with an ID that matches the transmitted frame. No interrupt flag or interrupt signal is generated due to the frame reception. This field can be written only in Freeze mode; the module blocks it in other modes. 0b - Enable 1b - Disable
16 IRMQ	Individual RX Masking and Queue Enable Indicates whether RX matching process is based on individual masking and queue, or based on a masking scheme with RX Message Buffers Global Mask (RXMGMASK), Receive 14 Mask (RX14MASK), Receive 15 Mask (RX15MASK), and Legacy RX FIFO Global Mask (RXFGMASK). When this field is disabled, for backward compatibility with legacy applications, reading the Control and Status word locks the MB even if it is empty. This field can be written in Freeze mode only. The module blocks it in other modes. 0b - Disable 1b - Enable
15 DMA	DMA Enable Enables DMA. The DMA feature can only be used in Legacy RX FIFO or Enhanced RX FIFO, so MCR[RFEN] or ERFCR[ERFEN] must be 1. When DMA and RFEN are 1, IFLAG1[BUF5I] generates the DMA request, and no RX FIFO interrupt is generated. This field can be written in Freeze mode only; the module blocks it in other modes. 0b - Disable 1b - Enable
14	Pretended Networking Enable

Table continues on the next page...

Table continued from the previous page...

Field	Function
PNET_EN	Enables Pretended Networking functionality. When in Doze mode or Stop mode, the PE subblock is kept operational. It can process RX message filtering as defined by the Pretended Networking configuration registers. See Receive process in Pretended Networking mode. This field can be written in Freeze mode only; the module blocks it in other modes. 0b - Disable 1b - Enable
13 LPRIEN	Local Priority Enable Enables the local priority feature. It is used to expand the ID used during the arbitration process. With this expanded ID concept, the arbitration process is done based on the full 32-bit word. However, the actual transmitted ID is 11 bits for standard frames and 29 bits for extended frames. This field can be written only in Freeze mode; the module blocks it in other modes. This bit is provided for backward compatibility with legacy applications. 0b - Disable 1b - Enable
12 AEN	Abort Enable Enables the TX abort mechanism. This mechanism guarantees a safe procedure for aborting a pending transmission, so that no frame is sent in the CAN bus without notification. This field can be written only in Freeze mode; the module blocks it in other modes. NOTE When this field is 1, only use the abort mechanism (see Transmission abort mechanism) to update message buffers configured for transmission. CAUTION Writing the abort code into RX message buffers can cause unpredictable results when this field is 1. 0b - Disabled 1b - Enabled
11 FDEN	CAN FD Operation Enable Enables the CAN with flexible data rate (CAN FD) operation. This field can be written in Freeze mode only. FlexCAN can receive and transmit messages in CAN 2.0 format. If this field is enabled, FlexCAN can also receive and transmit messages in CAN FD format. FlexCAN can transmit FD frame format according to ISO 11898-1:2015. NOTE If the value of this field is 1, the Legacy RX FIFO Enable (MCR[RFEN]) field cannot be 1. 0b - Disable 1b - Enable

Table continues on the next page...

Table continued from the previous page...

Field	Function
10 —	Reserved
9-8 IDAM	ID Acceptance Mode Identifies the format of the Legacy RX FIFO ID filter table elements. This field configures all elements of the table at the same time; they are all the same format. See Legacy RX FIFO structure. This field can be written only in Freeze mode; the module blocks it in other modes. 00b - Format A: One full ID (standard and extended) per ID filter table element. 01b - Format B: Two full standard IDs or two partial 14-bit (standard and extended) IDs per ID filter table element. 10b - Format C: Four partial 8-bit standard IDs per ID filter table element. 11b - Format D: All frames rejected.
7 —	Reserved
6-0 MAXMB	Number of the Last Message Buffer Defines the number of the last message buffer that takes part in the matching and arbitration processes. The reset value (0Fh) is equivalent to a 16-MB configuration. This field can be written only in Freeze mode; the module blocks it in other modes. NOTE You must write a value smaller than or equal to the number of available message buffers to this field, as described in FlexCAN memory partition for CAN FD. Additionally, the MAXMB value must consider the region of message buffers occupied by Legacy RX FIFO and its ID filters table space defined by CTRL2[RFFN]. MAXMB also impacts the definition of the minimum number of peripheral clocks per CAN bit, as described in Table 236.

37.6.2.3 Control 1 (CTRL1)

Offset

Register	Offset
CTRL1	4h

Function

Contains specific FlexCAN control features related to the CAN bus. These features include bit rate, programmable sampling point within an RX bit, Loopback mode, Listen-Only mode, Bus Off recovery behavior, and interrupt enabling (Bus-Off, Error, Warning). It also determines the division factor for the clock prescaler.

The CAN bit timing variables (CTRL1[PRES DIV], CTRL1[PROPSEG], CTRL1[PSEG1], CTRL1[PSEG2], and CTRL1[RJW]) can also be configured in [CAN Bit Timing \(CBT\)](#), which extends the range of all these variables. If [CBT\[BTf\] = 1](#), CTRL1[PRES DIV], CTRL1[PROPSEG], CTRL1[PSEG1], CTRL1[PSEG2], and CTRL1[RJW] become read-only.

If **CTRL2[BTE]** = 1, CTRL1[PRES DIV], CTRL1[PROPSEG], CTRL1[PSEG1], CTRL1[PSEG2], and CTRL1[RJW] are not used by the module. Instead, these fields are read as zero, and a write operation to them has no effect.


NOTE

When the CAN FD feature is enabled, do not use CTRL1[PRES DIV], CTRL1[PROPSEG], CTRL1[PSEG1], CTRL1[PSEG2], and CTRL1[RJW] for CAN bit timing. Instead use CBT[EPRES DIV], CBT[ERJW], CBT[EPSEG1], CBT[EPSEG2], and CBT[EPROPSEG].

The CAN bit variables in CTRL1 and in CBT are stored in the same internal register.

Soft reset does not affect the contents of this register.

Diagram

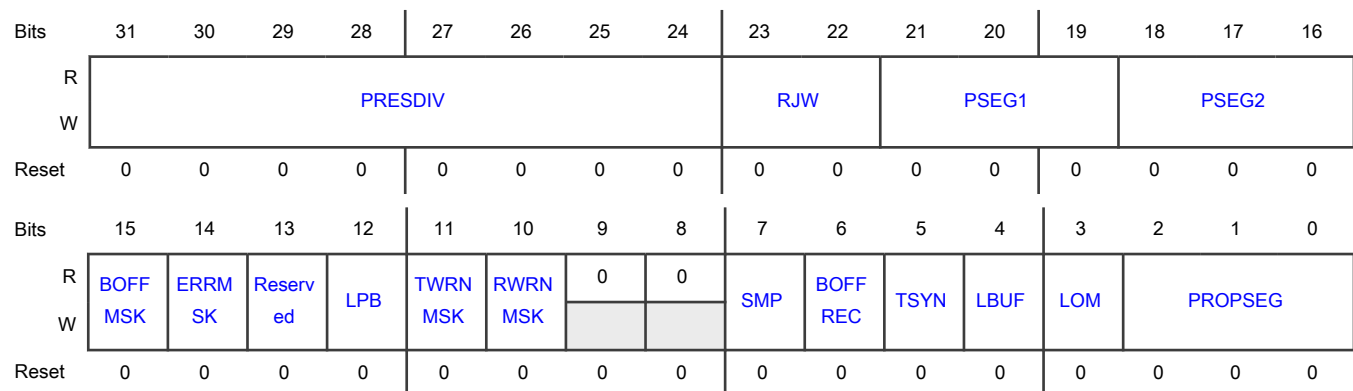

Fields

Field	Function
31-24 PRES DIV	Prescaler Division Factor Determines the ratio between the PE clock frequency and the serial clock (Sclock) frequency. The Sclock period defines the time quantum of the CAN protocol. For the reset value, the Sclock frequency is equal to the PE clock frequency. The maximum value of this field is FFh, which gives a minimum Sclock frequency equal to the PE clock frequency divided by 256. See Protocol timing for more information. This field can be written only in Freeze mode; the module blocks it in other modes. Sclock frequency = PE clock frequency ÷ (PRES DIV + 1).
23-22 RJW	Resync Jump Width Defines the maximum number of time quanta that one resynchronization can change a bit time. One time quantum is equal to one Sclock period. The valid programmable values are 0–3. See Protocol timing for more information. This field can be written only in Freeze mode; the module blocks it in other modes. Resync Jump Width = RJW + 1.
21-19 PSEG1	Phase Segment 1 Defines the length of phase segment 1 in the bit time. The valid programmable values are 0–7. See Protocol timing for more information. This field can be written only in Freeze mode; the module blocks it in other modes. PhaseBuffer Segment 1 = (PSEG1 + 1) × Time Quanta.

Table continues on the next page...

Table continued from the previous page...

Field	Function
18-16 PSEG2	Phase Segment 2 Defines the length of phase segment 2 in the bit time. The valid programmable values are 1–7. See Protocol timing for more information. This field can be written only in Freeze mode; the module blocks it in other modes. Phase Buffer Segment 2 = (PSEG2 + 1) × Time Quanta.
15 BOFFMSK	Bus Off Interrupt Mask Provides a mask for the Bus Off interrupt ESR1[BOFFINT]. 0b - Interrupt disabled 1b - Interrupt enabled
14 ERRMSK	Error Interrupt Mask Provides a mask for the Error interrupt ESR1[ERRINT]. 0b - Interrupt disabled 1b - Interrupt enabled
13 —	Reserved NOTE Writeable only if the module is disabled. Otherwise the access type is read-only.
12 LPB	Loopback Mode Configures FlexCAN to operate in Loopback mode. In this mode, FlexCAN performs an internal loopback that can be used for self-test operation. The bit stream output of the transmitter is fed back internally to the receiver input. The RX CAN input pin is ignored and the TX CAN output goes to the recessive state (logic 1). FlexCAN behaves as it normally does when transmitting, and treats its own transmitted message as a message received from a remote node. In this mode, FlexCAN ignores the bit sent during the ACK slot in the CAN frame acknowledge field. It generates an internal acknowledge bit to ensure proper reception of its own message. Both transmit and receive interrupts are generated. This field can be written only in Freeze mode; the module blocks it in other modes. NOTE In this mode, MCR[SRXDIS] cannot become 1, because it would impede the self-reception of a transmitted message. NOTE FDCTRL[TDCEEN] and MCR[ETDCEEN] must be 0 when this field is 1. 0b - Disabled 1b - Enabled
11	TX Warning Interrupt Mask

Table continues on the next page...

Table continued from the previous page...

Field	Function
TWRNMSK	Provides a mask for the TX Warning interrupt associated with the ESR1[TWRNINT] flag. When MCR[WRNEN] = 0, this field is read as 0. This field can be written only if MCR[WRNEN] = 1. 0b - Disabled 1b - Enabled
10 RWRNMSK	RX Warning Interrupt Mask Provides a mask for the RX Warning interrupt associated with the ESR1[RWRNINT] flag. When MCR[WRNEN] = 0, this field is read as 0. This field can be written only if MCR[WRNEN] = 1. 0b - Disabled 1b - Enabled
9 —	Reserved
8 —	Reserved
7 SMP	CAN Bit Sampling Determines the sampling mode of CAN bits at the RX input. This field can be written in Freeze mode only; the module blocks it in other modes. NOTE For proper operation, to write 1 to this field, you must guarantee a minimum value of two time quanta in CTRL1[PSEG1] (or CBT[EPSEG1]). This bit cannot become 1 when CAN FD is enabled (MCR[FDEN] = 1). 0b - One sample is used to determine the bit value. 1b - Three samples are used to determine the value of the received bit: the regular one (sample point) and two preceding samples. A majority rule is used.
6 BOFFREC	Bus Off Recovery Determines how FlexCAN recovers from Bus Off state. If 0, automatic recovering from Bus Off state occurs according to the CAN Specification 2.0B. If 1, automatic recovering from Bus Off is disabled. The module remains in Bus Off state until you write 1 to this field. If this field becomes 0 before 128 sequences of 11 recessive bits are detected on the CAN bus, Bus Off recovery happens as if this field had never become 1. If this field becomes 0 after 128 sequences of 11 recessive bits occurred, FlexCAN resynchronizes to the bus. It waits for 11 recessive bits before joining the bus. After this field becomes 0, it can become 1 again during Bus Off, but it will only be effective the next time the module enters Bus Off. If this field becomes 0 when the module is in Bus Off, writing 1 to this field is not effective for the current Bus Off recovery. NOTE See Bus Off in the CAN Protocol standard (ISO 11898-1:2015) for details.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - Enabled 1b - Disabled
5 TSYN	Timer Sync Enables a mechanism that resets the free-running timer each time a message is received in message buffer 0. This feature provides the means to synchronize multiple FlexCAN stations with a special "SYNC" message (that is, global network time). If MCR[RFEN] = 1 (Legacy RX FIFO enabled), the first available message buffer, according to CTRL2[RFFN] , is used for timer synchronization instead of MB0. This field can be written in Freeze mode only; the module blocks it in other modes. 0b - Disable 1b - Enable
4 LBUF	Lowest Buffer Transmitted First Determines the ordering mechanism for message buffer transmission. When 1, MCR[LPRIOEN] does not affect the priority arbitration. This field can be written in Freeze mode only; the module blocks it in other modes. 0b - Buffer with highest priority is transmitted first. 1b - Lowest number buffer is transmitted first.
3 LOM	Listen-Only Mode Configures FlexCAN to operate in Listen-Only mode. In this mode, transmission is disabled, all error counters described in Error Counter (ECR) are frozen, and the module operates in CAN Error Passive mode. Only messages acknowledged by another CAN station are received. If FlexCAN detects an unacknowledged message, it flags a BIT0 error without changing the receive error counter (ECR[RXERRCNT]), as if it is trying to acknowledge the message. FlexCAN acknowledges Listen-Only mode when ESR1[FLTCNF] = 1, indicating the Error Passive state. There can be some delay between the Listen-Only mode request and its acknowledgment. This field can be written in Freeze mode only; the module blocks it in other modes. 0b - Listen-Only mode is deactivated. 1b - FlexCAN module operates in Listen-Only mode.
2-0 PROPSEG	Propagation Segment Defines the length of the propagation segment in the bit time. The valid programmable values are 0–7. This field can be written only in Freeze mode; the module blocks it in other modes. Propagation segment time = (PROPSEG + 1) × Time Quanta. One Time Quantum = one Sclock period.

37.6.2.4 Free-Running Timer (TIMER)

Offset

Register	Offset
TIMER	8h

Function

Represents a 16-bit free-running counter that the CPU can read and write. The timer starts from 0h after reset, counts linearly to FFFFh, and wraps around.

The CAN bit clock increments the timer, which defines the baud rate on the CAN bus. During a message transmission or reception, it increments by one for each bit that is received or transmitted. When there is no message on the bus, it counts using the previously programmed baud rate. The timer is not incremented during Disable, Doze, Stop, Pretended Networking, and Freeze modes.


The timer value is captured when the second bit of the identifier field of any frame is on the CAN bus. This captured value is written into the timestamp entry in a message buffer after a successful reception or transmission of a message.

If CTRL1[TSYN] = 1, the timer is reset whenever a message is received in the first available message buffer, according to CTRL2[RFFN].

The CPU can write to this register anytime. However, if the write occurs simultaneously with the timer being reset by a reception in the first message buffer, the write value is discarded.

Reading this register affects the message buffer unlocking procedure (see [Message buffer lock mechanism](#)).

Diagram

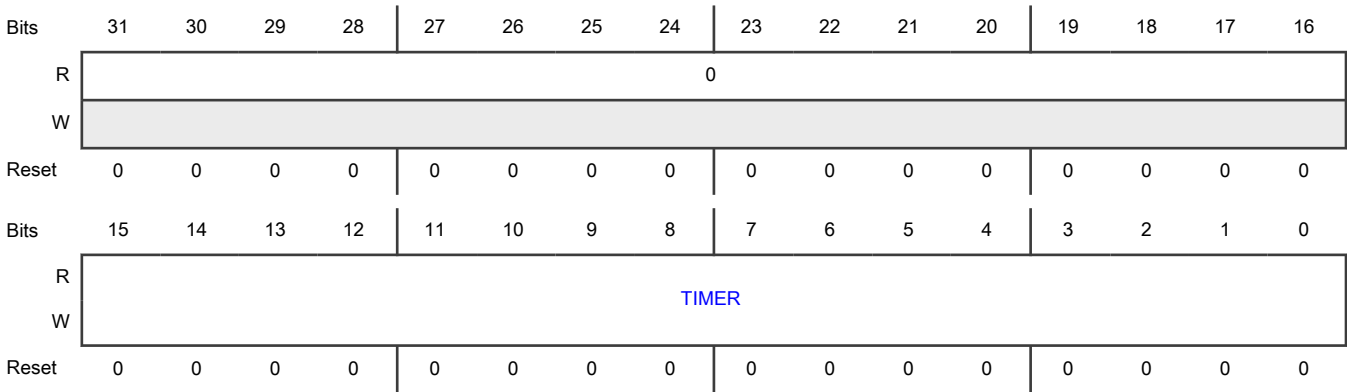

Fields

Field	Function
31-16 —	Reserved
15-0 TIMER	Timer Value Contains the free-running counter value.

37.6.2.5 RX Message Buffers Global Mask (RXMGMASK)

Offset

Register	Offset
RXMGMASK	10h

Function

Masks the filter bits of all RX message buffers, excluding MB14 and MB15, which have individual mask registers.


This register is located in RAM.

RXMGMASK is provided for legacy application support.

- When [MCR\[IRMQ\]](#) is 0, RXMGMASK is always in effect. The bits in RXMGMASK[MG] mask the MB filter bits.
- When [MCR\[IRMQ\]](#) is 1, RXMGMASK has no effect. The bits in RXMGMASK[MG] do not mask the MB filter bits.

This register can only be written in Freeze mode; the module blocks it in other modes.

Diagram

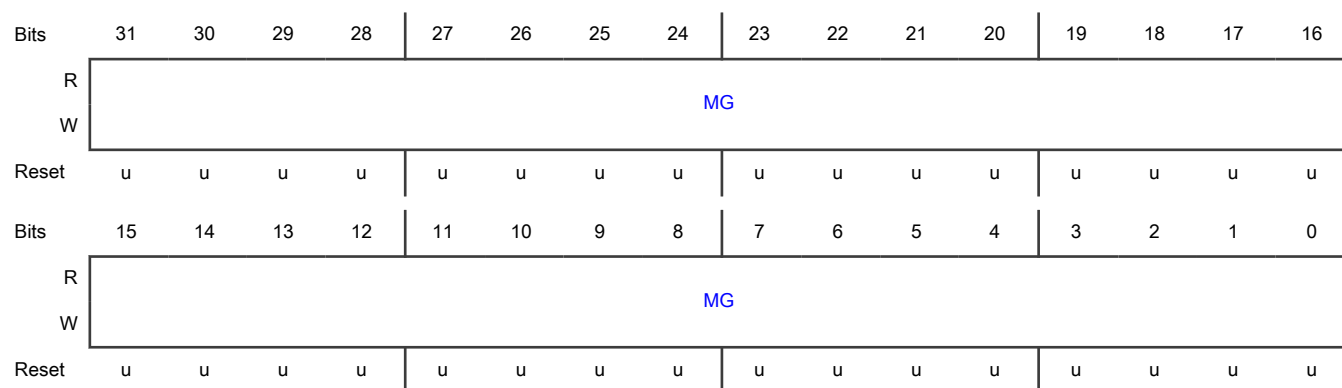

Fields

Field	Function																																							
31-0	Global Mask for RX Message Buffers																																							
MG	Masks the message buffer filter bits. The alignment with the ID word of the message buffer is imperfect. The two most significant MG bits affect the fields RTR and IDE, which are located in the Control and Status word of the MB. The following table shows which MG bits mask each MB filter field.																																							
	<table><tr><th rowspan="2">SMB[RTR] ¹</th><th rowspan="2">CTRL2[RRS]</th><th rowspan="2">CTRL2[EACE N]</th><th colspan="4">Message buffer filter fields</th></tr><tr><th>MB[RTR]</th><th>MB[IDE]</th><th>MB[ID]</th><th>Reserved</th></tr><tr><td>0</td><td>-</td><td>0</td><td>Note ²</td><td>Note ³</td><td>MG[28:0]</td><td>MG[31:29]</td></tr><tr><td>0</td><td>-</td><td>1</td><td>MG[31]</td><td>MG[30]</td><td>MG[28:0]</td><td>MG[29]</td></tr><tr><td>1</td><td>0</td><td>-</td><td>-</td><td>-</td><td>-</td><td>MG[31:0]</td></tr><tr><td>1</td><td>1</td><td>0</td><td>-</td><td>-</td><td>MG[28:0]</td><td>MG[31:29]</td></tr></table>	SMB[RTR] ¹	CTRL2[RRS]	CTRL2[EACE N]	Message buffer filter fields				MB[RTR]	MB[IDE]	MB[ID]	Reserved	0	-	0	Note ²	Note ³	MG[28:0]	MG[31:29]	0	-	1	MG[31]	MG[30]	MG[28:0]	MG[29]	1	0	-	-	-	-	MG[31:0]	1	1	0	-	-	MG[28:0]	MG[31:29]
SMB[RTR] ¹	CTRL2[RRS]				CTRL2[EACE N]	Message buffer filter fields																																		
		MB[RTR]	MB[IDE]	MB[ID]		Reserved																																		
0	-	0	Note ²	Note ³	MG[28:0]	MG[31:29]																																		
0	-	1	MG[31]	MG[30]	MG[28:0]	MG[29]																																		
1	0	-	-	-	-	MG[31:0]																																		
1	1	0	-	-	MG[28:0]	MG[31:29]																																		

Field	Function					
	SMB[RTR] ¹	CTRL2[RRS]	CTRL2[EACEN]	Message buffer filter fields		
				MB[RTR]	MB[IDE]	MB[ID]
	1	1	1	MG[31]	MG[30]	MG[28:0]
1. RTR bit of the incoming frame. It is saved into an auxiliary MB called RX serial message buffer (RX SMB). 2. If CTRL2[EACEN] is 0, the RTR bit of MB is never compared with the RTR bit of the incoming frame. 3. If CTRL2[EACEN] is 0, the IDE bit of MB is always compared with the IDE bit of the incoming frame. 0b - The corresponding bit in the filter is "don't care." 1b - The corresponding bit in the filter is checked.						

37.6.2.6 Receive 14 Mask (RX14MASK)

Offset

Register	Offset
RX14MASK	14h

Function


Masks the filter fields of MB14.

This register is located in RAM.

RX14MASK is provided for legacy application support. When **MCR[IRMQ]** = 1, RX14MASK has no effect.

This register can only be programmed when the module is in Freeze mode; the module blocks it in other modes.

Diagram

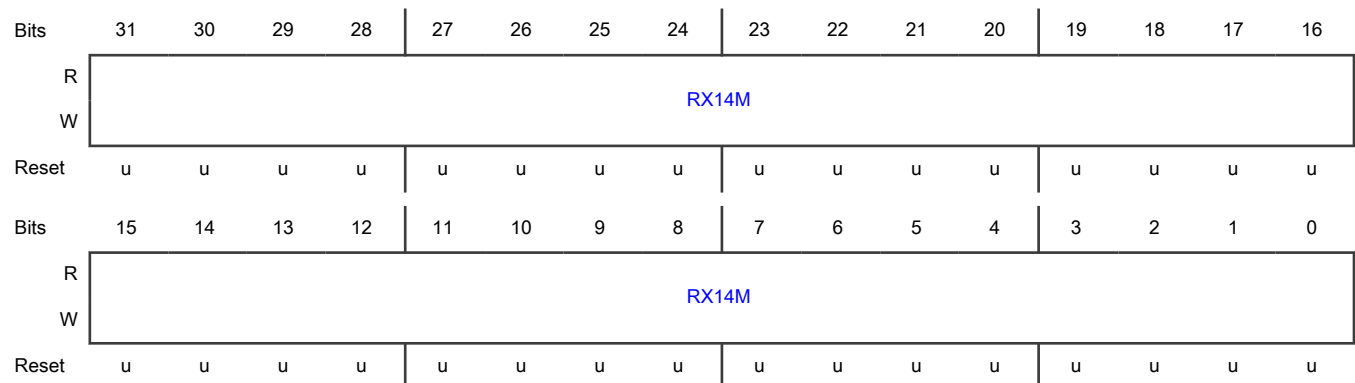

Fields

Field	Function
31-0 RX14M	RX Buffer 14 Mask Bits Masks the corresponding MB14 filter field in the same way that RX Message Buffers Global Mask (RXMGMASK) masks the filters of the other message buffers. 0b - The corresponding bit in the filter is "don't care." 1b - The corresponding bit in the filter is checked.

37.6.2.7 Receive 15 Mask (RX15MASK)

Offset

Register	Offset
RX15MASK	18h

Function


Masks the filter fields of MB15.

This register is located in RAM.

RX15MASK is provided for legacy application support. When [MCR\[IRMQ\]](#) = 1, RX15MASK has no effect.

This register can be programmed only when the module is in Freeze mode; the module blocks it in other modes.

Diagram

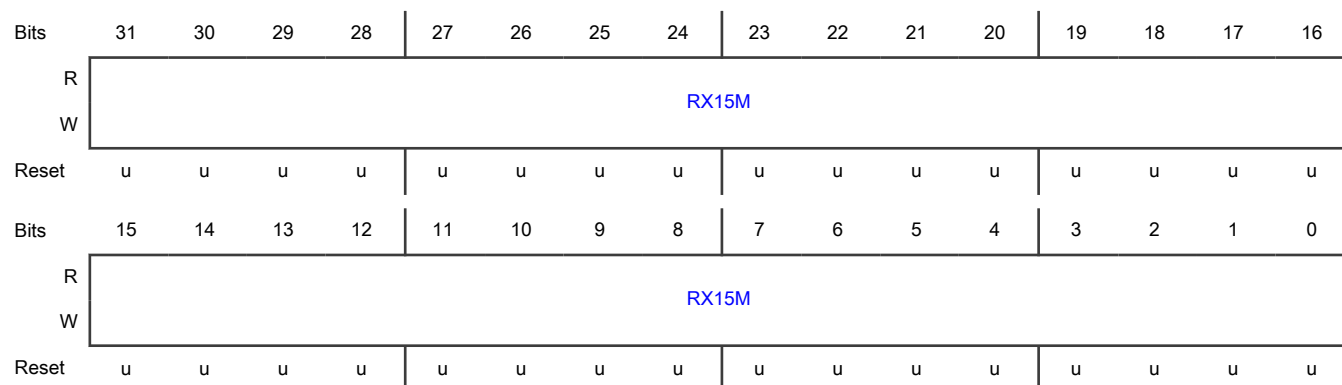

Fields

Field	Function
31-0 RX15M	RX Buffer 15 Mask Bits Masks the corresponding MB15 filter field in the same way that RX Message Buffers Global Mask (RXMGMASK) masks the filters of other message buffers.

Table continues on the next page...

Field	Function
	0b - The corresponding bit in the filter is "don't care." 1b - The corresponding bit in the filter is checked.

37.6.2.8 Error Counter (ECR)

Offset

Register	Offset
ECR	1Ch

Function

Contains error counters for received and transmitted messages.

[TXERRCNT](#) and [RXERRCNT](#) consider all errors in both CAN FD and non-FD message formats. [TXERRCNT_FAST](#) and [RXERRCNT_FAST](#) count only the errors that occur in the data phase of CAN FD frames that have BRS = 1.

The Fault Confinement state ([ESR1\[FLTCNF\]](#)) is updated based on TXERRCNT and RXERRCNT counters only. The rules for increasing and decreasing these counters are described in the CAN protocol and are entirely implemented in FlexCAN.


The basic rules for FlexCAN bus state transitions are:

- If the value of TXERRCNT or RXERRCNT becomes greater than or equal to 128, [ESR1\[FLTCNF\]](#) is updated to reflect Error Passive state.
- If the state of FlexCAN is Error Passive, and TXERRCNT or RXERRCNT decrements to a value less than 128 when the other already satisfies this condition, [ESR1\[FLTCNF\]](#) is updated to reflect Error Active state.
- If the value of TXERRCNT becomes greater than 255, [ESR1\[FLTCNF\]](#) is updated to reflect Bus Off state, and an interrupt may be issued. The value of TXERRCNT is then reset to zero.
- If FlexCAN is in Bus Off, TXERRCNT is cascaded with another internal counter to count the occurrences of 11 consecutive recessive bits on the bus. TXERRCNT is reset to zero. It counts in a manner where the internal counter counts 11 such bits and then wraps around when incrementing the TXERRCNT. When TXERRCNT reaches the value of 128, [ESR1\[FLTCNF\]](#) is updated to Error Active, and both error counters are reset to zero. Upon any instance of a dominant bit following a stream of less than 11 consecutive recessive bits, the internal counter resets itself to zero without affecting the TXERRCNT value. The TXERRCNT_FAST counter is frozen during Bus Off.
- If only one node is operating during system startup, its TXERRCNT increases upon each attempted message transmission, as a result of acknowledge errors (indicated by [ESR1\[ACKERR\]](#)). After the transition to Error Passive state, TXERRCNT no longer increments upon acknowledge errors. The chip never goes into the Bus Off state.
- If RXERRCNT increases to a value greater than 127, it is not incremented further, even if more errors are detected when being a receiver. At the next successful message reception, the counter is set to a value between 119 and 127 to return to the Error Active state.
- TXERRCNT_FAST and RXERRCNT_FAST error counter values increment and decrement based on errors detected only in the data phase of CAN FD frames that have BRS = 1. These counters follow the same increment and decrement rules as TXERRCNT and RXERRCNT. These counters do not wrap around and get stuck at their maximum value (255). They stop counting and keep their values frozen when FlexCAN is in the Bus Off state. They are reset when FlexCAN leaves the Bus Off state and resume counting after FlexCAN returns to the Error Active state.
- When FlexCAN is in Pretended Networking mode, RXERRCNT and RXERRCNT_FAST keep counting errors, and error flags are stored. TXERRCNT and TXERRCNT_FAST preserve their values and do not change, because no transmission occurs in Pretended Networking mode. Error counters and error flags that changed values in Pretended Networking mode

are updated in this register and in [Error and Status 1 \(ESR1\)](#) when FlexCAN returns to Normal mode. If FlexCAN is in Pretended Networking mode, the FAST error flags in ESR1 are not set.

NOTE

See Fault confinement in the CAN Protocol standard (ISO 11898-1:2015) for details.

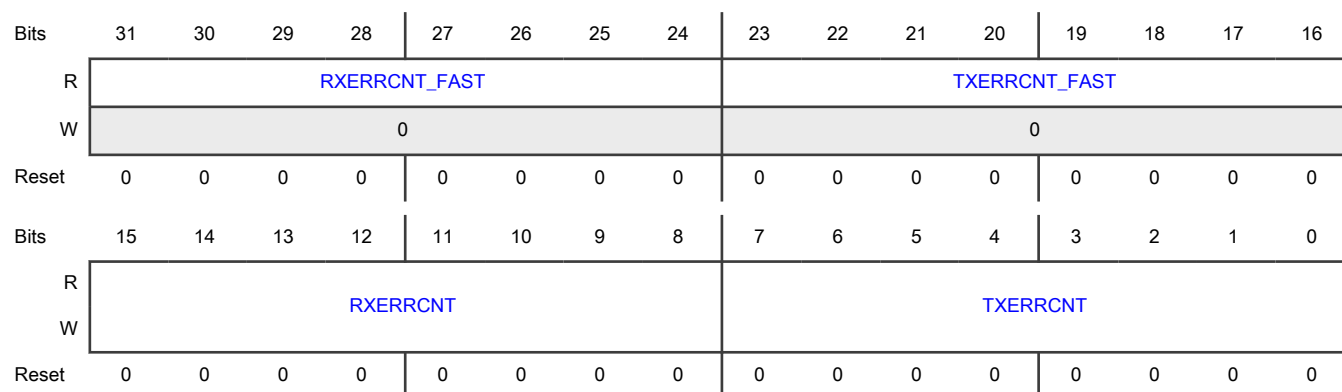Diagram**Fields**

Field	Function
31-24 RXERRCNT_FAST	Receive Error Counter for Fast Bits Counts errors detected in the data phase of received CAN FD messages that have BRS = 1. This field is read-only except in Freeze mode, when the CPU can write an 8-bit zero value only.
23-16 TXERRCNT_FAST	Transmit Error Counter for Fast Bits Counts errors detected in the data phase of transmitted CAN FD messages that have BRS = 1. This field is read-only except in Freeze mode, when the CPU can write an 8-bit zero value only.
15-8 RXERRCNT	Receive Error Counter Counts all errors detected in received messages. This field is read-only except in Freeze mode, when the CPU can write to it.
7-0 TXERRCNT	Transmit Error Counter Counts all errors detected in transmitted messages. This field is read-only except in Freeze mode, when the CPU can write to it.

37.6.2.9 Error and Status 1 (ESR1)**Offset**

Register	Offset
ESR1	20h

Function

Reports various error conditions detected in the reception and transmission of a CAN frame. This register provides status information about the chip, and is the source of some interrupts to the CPU. The reported error conditions are:

NOTE

Reading host can clear these fields.

- Errors detected in CAN frames of any format:
 - BIT1ERR
 - BIT0ERR
 - ACKERR
 - CRCERR
 - FRMERR
 - STFERR
- Errors detected in the data phase of CAN FD frames with the BRS bit set only:
 - BIT1ERR_FAST
 - BIT0ERR_FAST
 - CRCERR_FAST
 - FRMERR_FAST
 - STFERR_FAST

One or more error flags may report an error detected in a single CAN frame. To account for more error events occurring in subsequent frames when the CPU does not attempt to read this register, error reporting is cumulative.

Status flags:

- TXWRN
- RXWRN
- IDLE
- TX
- FLTCONF
- RX
- SYNCH

Interrupt flags:

- BOFFINT
- BOFFDONEINT
- ERRINT
- ERRINT_FAST
- WAKINT
- TWRNINT
- RWRNINT

The CPU should follow this procedure when servicing interrupt requests generated by these flags:

1. Read this register to capture all error condition and status flags. This action clears the respective flags that were set since the last read access.

- Write 1 to clear the interrupt flag that triggered the interrupt request.
- Write 1 to clear the ERROVR flag, if it is set.

Starting from all error flags cleared, a first error event sets either **ERRINT** or **ERRINT_FAST** (provided the corresponding mask bit is 1). If other error events in subsequent frames occur before the CPU serves the interrupt request, the **ERROVR** flag is set to indicate that errors from different frames have accumulated.

Table 242. CAN bus status

SYNCH	IDLE	TX	RX	FlexCAN state
0	0	0	0	Not synchronized to CAN bus
1	1	X	X	Idle
1	0	1	0	Transmitting
1	0	0	1	Receiving

NOTE

See Fault confinement in the CAN Protocol standard (ISO 11898-1:2015) for details.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	BIT1E RR...	BIT0E RR...	0	CRCE RR...	FRME RR...	STFE RR...	0	0	0	0	ERRO VR	ERRIN T...	BOFF DON...	SYNC H	TWRN INT	RWRN INT
W											W1C	W1C	W1C		W1C	W1C
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	BIT1E RR	BIT0E RR	ACKE RR	CRCE RR	FRME RR	STFE RR	TXWR N	RXWR N	IDLE	TX	FLTCONF	RX	BOFFI NT	ERRIN T	WAKI NT	
W														W1C	W1C	W1C
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31 BIT1ERR_FAS T	Fast Bit1 Error Flag Indicates when an inconsistency occurs between the transmitted and the received bit in the data phase of CAN FD frames that have BRS = 1. After a read operation, the field's value clears to 0. 0b - No such occurrence. 1b - At least one bit transmitted as recessive is received as dominant.
30	Fast Bit0 Error Flag

Table continues on the next page...

Table continued from the previous page...

Field	Function
BIT0ERR_FAS T	Indicates when an inconsistency occurs between the transmitted and the received bit in the data phase of CAN FD frames that have BRS = 1. After a read operation, the field's value clears to 0. 0b - No such occurrence. 1b - At least one bit transmitted as dominant is received as recessive.
29 —	Reserved
28 CRCERR_FAS T	Fast Cyclic Redundancy Check Error Flag Indicates that the receiver node has detected a CRC error in the CRC field of CAN FD frames that have BRS = 1. This error means that the calculated CRC is different from the received CRC. After a read operation, the field's value clears to 0. 0b - No such occurrence. 1b - A CRC error occurred since last read of this register.
27 FRMERR_FAS T	Fast Form Error Flag Indicates whether the receiver node has detected a form error in the data phase of CAN FD frames that have BRS = 1. This error means that a fixed-form bit field contains at least one illegal bit. After a read operation, the field's value clears to 0. 0b - No such occurrence. 1b - A form error occurred since last read of this register.
26 STFERR_FAST	Fast Stuffing Error Flag Indicates that a stuffing error has been detected in the data phase of CAN FD frames that have BRS = 1. After a read operation, the field's value clears to 0. 0b - No such occurrence. 1b - A stuffing error occurred since last read of this register.
25-24 —	Reserved
23 —	Reserved
22 —	Reserved
21 ERROVR	Error Overrun Flag Indicates that an error condition occurred when any error flag is already set.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - No overrun 1b - Overrun
20 ERRINT_FAST	Fast Error Interrupt Flag Indicates that at least one error flag detected in the data phase of CAN FD frames that have BRS = 1 (BIT1ERR_FAST, BIT0ERR_FAST, CRCERR_FAST, FRMERR_FAST, or STFERR_FAST) is set. If CTRL2[ERRMSK_FAST] = 1, an interrupt is generated to the CPU. 0b - No such occurrence. 1b - Error flag set in the data phase of CAN FD frames that have BRS = 1.
19 BOFFDONEINT	Bus Off Done Interrupt Flag Indicates whether ECR[TXERRCNT] has finished counting 128 occurrences of 11 consecutive recessive bits on the CAN bus and is ready to leave Bus Off. If CTRL2[BOFFDONEMSK] = 1, an interrupt is generated to the CPU. 0b - No such occurrence 1b - FlexCAN module has completed Bus Off process.
18 SYNCH	CAN Synchronization Status Flag Indicates whether FlexCAN is synchronized to the CAN bus and able to participate in the communication process. FlexCAN sets and clears this flag. See the table in Error and Status 1 (ESR1) . 0b - Not synchronized 1b - Synchronized
17 TWRNINT	TX Warning Interrupt Flag Indicates whether TX error counter changed from less than 96 to greater than or equal to 96. If MCR[WRNEN] = 1, this flag is set when the TXWRN flag transitions from 0 to 1, meaning that the TX error counters reached 96. If CTRL1[TWRNMSK] = 1, an interrupt is sent to the CPU. When MCR[WRNEN] = 0, this flag is masked. The CPU must clear this flag before writing 0 to MCR[WRNEN] . Otherwise, this flag is set when MCR[WRNEN] = 1 again. Writing 0 has no effect. This flag is not generated when in the Bus Off state. This flag is not updated during Freeze mode. When FlexCAN returns to Normal mode from Pretended Network mode (see Receive process in Pretended Networking mode), this bit is not updated. 0b - No such occurrence 1b - TX error counter changed from less than 96 to greater than or equal to 96.
16 RWRNINT	RX Warning Interrupt Flag Indicates whether the RX error counter changed from less than 96 to greater than or equal to 96. If MCR[WRNEN] = 1, this flag is set when the RXWRN flag transitions from 0 to 1, meaning that the RX error counters reached 96. If CTRL1[RWRNMSK] = 1, an interrupt is sent to the CPU. When MCR[WRNEN] = 0, this flag is masked. The CPU must clear this flag before writing 0 to MCR[WRNEN] . Otherwise, this flag is set when MCR[WRNEN] = 1 again. Writing 0 has no effect.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	This flag is not updated during Freeze mode. When FlexCAN returns to Normal mode from Pretended Network mode (see Receive process in Pretended Networking mode), this bit is updated to reflect the RX error counter state. 0b - No such occurrence 1b - RX error counter changed from less than 96 to greater than or equal to 96.
15 BIT1ERR	Bit1 Error Flag Indicates when an inconsistency occurs between the transmitted and the received bit in a non-CAN FD message or in the arbitration or data phase of a CAN FD message. This flag is updated when FlexCAN returns to Normal mode from Pretended Network mode. NOTE A transmitter does not set this flag for an arbitration field or ACK slot. It is not set for a node sending an error passive flag that detects dominant bits. After a read operation, the field's value clears to 0. 0b - No such occurrence. 1b - At least one bit sent as recessive is received as dominant.
14 BIT0ERR	Bit0 Error Flag Indicates when an inconsistency occurs between the transmitted and the received bit in a non-CAN FD message or in the arbitration or data phase of a CAN FD message. This field is updated when FlexCAN returns to Normal mode from Pretended Network mode. After a read operation, the field's value clears to 0. 0b - No such occurrence. 1b - At least one bit sent as dominant is received as recessive.
13 ACKERR	Acknowledge Error Flag Indicates whether the transmitter node has detected an acknowledge error. This error means that a dominant bit has not been detected during the ACK SLOT. This flag is updated when FlexCAN returns to Normal mode from Pretended Network mode. After a read operation, the field's value clears to 0. 0b - No error 1b - Error occurred since last read of this register.
12 CRCERR	Cyclic Redundancy Check Error Flag Indicates whether the receiver node has detected a cyclic redundancy check (CRC) error either in a non-FD message or in the arbitration or data phase of a frame in CAN FD format. This error means that the calculated CRC is different from the received. This flag is updated when FlexCAN returns to Normal mode from Pretended Network mode.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	After a read operation, the field's value clears to 0. 0b - No error 1b - Error occurred since last read of this register.
11 FRMERR	Form Error Flag Indicates whether a form error has been detected in a non-FD message or in the arbitration or data phase of an FD message by the receiver node. This error means that a fixed-form field contains at least one illegal bit. This flag is updated when FlexCAN returns to Normal mode from Pretended Network mode. After a read operation, the field's value clears to 0. 0b - No error 1b - Error occurred since last read of this register.
10 STFERR	Stuffing Error Flag Indicates that a stuffing error has been detected in a non-FD message or in the arbitration or data phase of an FD message by the receiver node. This flag is updated when FlexCAN returns to Normal mode from Pretended Network mode. After a read operation, the field's value clears to 0. 0b - No error 1b - Error occurred since last read of this register.
9 TXWRN	TX Error Warning Flag Indicates when repetitive errors occur during message transmission. Only the value of ECR[TXERRCNT] affects this flag. This flag is not updated during Freeze mode. After a read operation, the field's value clears to 0. 0b - No such occurrence. 1b - TXERRCNT is 96 or greater.
8 RXWRN	RX Error Warning Flag Indicates when repetitive errors occur during message reception. Only the value of ECR[RXERRCNT] affects this flag. This flag is not updated during Freeze mode. Additionally, this flag is updated when FlexCAN returns to Normal mode from Pretended Networking mode. After a read operation, the field's value clears to 0. 0b - No such occurrence. 1b - RXERRCNT is greater than or equal to 96.
7 IDLE	Idle Indicates whether CAN bus is in IDLE state. See Table 242. 0b - Not IDLE

Table continues on the next page...

Table continued from the previous page...

Field	Function
	1b - IDLE
6 TX	FlexCAN In Transmission Indicates whether FlexCAN is transmitting a message. See Table 242. 0b - Not transmitting 1b - Transmitting
5-4 FLTCONF	Fault Confinement State Indicates the confinement state of FlexCAN. If CTRL1[LOM] = 1, after a delay that depends on the CAN bit timing, this field indicates Error Passive. The same delay affects the way that this field reflects an update to ECR register by the CPU. It may be necessary to wait up to one CAN bit time for coherence to be restored. Soft reset affects this field, but if CTRL1[LOM] = 1, its reset value lasts for only one CAN bit. After that time, this field reports Error Passive. 00b - Error Active 01b - Error Passive 1xb - Bus Off
3 RX	FlexCAN in Reception Flag Indicates whether FlexCAN is receiving a message. See the table in Error and Status 1 (ESR1). 0b - Not receiving 1b - Receiving
2 BOFFINT	Bus Off Interrupt Flag Indicates whether FlexCAN has entered Bus Off state. If CTRL1[BOFFMSK] = 1, an interrupt is generated to the CPU. Writing 0 to this field has no effect. 0b - No such occurrence. 1b - FlexCAN module entered Bus Off state.
1 ERRINT	Error Interrupt Flag Indicates that at least one of the error flags (ESR1[BIT1ERR], ESR1[BIT0ERR], ESR1[ACKERR], ESR1[CRCERR], ESR1[FRMERR], or ESR1[STFERR]) is set. If the corresponding mask CTRL1[ERRMSK] = 1, an interrupt is generated to the CPU. Writing 0 to this field has no effect. 0b - No such occurrence. 1b - Indicates setting of any error flag in the Error and Status register.
0 WAKINT	Wake-up Interrupt Flag Generates an interrupt to the CPU when a recessive-to-dominant transition is detected on the CAN bus and MCR[WAKMSK] = 1. This field applies when FlexCAN is in low-power mode during Self Wake-up:

Table continues on the next page...

Table continued from the previous page...

Field	Function
	• Doze mode • Stop mode When MCR[SLFWAK] = 0, this flag is masked. The CPU must clear this flag before disabling the field. Otherwise, it is set when MCR[SLFWAK] becomes 1 again. Writing 0 has no effect. 0b - No such occurrence. 1b - Indicates that a recessive-to-dominant transition was received on the CAN bus.

37.6.2.10 Interrupt Masks 1 (IMASK1)


Offset

Register	Offset
IMASK1	28h

Function

Masks interrupt flags. This register allows any of the 32 message buffer interrupts to be enabled or disabled for MB31–MB0. It contains one interrupt mask bit per buffer. This configuration allows the CPU to determine which buffer generates an interrupt after a successful transmission or reception when the corresponding [Interrupt Flags 1 \(IFLAG1\)](#) flag is set.

Diagram

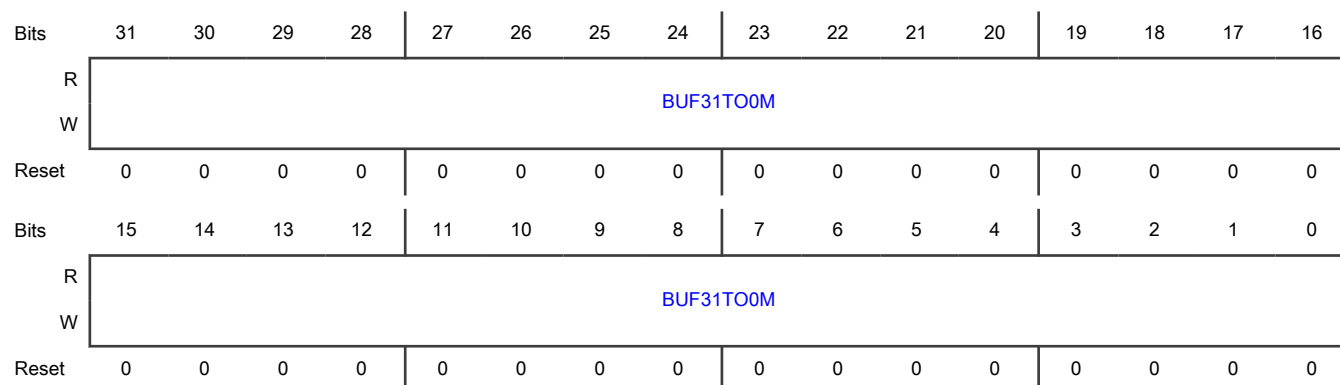

Fields

Field	Function
31-0	Buffer MBi Mask
BUF31TO0M	Enables or disables the corresponding FlexCAN message buffer interrupt for MB31–MB0.

Table continues on the next page...

Field	Function
	NOTE If the corresponding Interrupt Flags 1 (IFLAG1) flag is set, writing 1 or 0 to a field in IMASK1 can set or clear an interrupt request. 0b - The corresponding buffer interrupt is disabled. 1b - The corresponding buffer interrupt is enabled.

37.6.2.11 Interrupt Flags 1 (IFLAG1)

Offset

Register	Offset
IFLAG1	30h

Function

Contains the flags for the 32 message buffer interrupts for MB31–MB0. It contains one interrupt flag bit per buffer. Each successful transmission or reception sets the corresponding IFLAG1 bit. If the corresponding [Interrupt Masks 1 \(IMASK1\)](#) bit is set, an interrupt is generated. There is an exception when DMA for Legacy RX FIFO is enabled, as described below.

The BUF7I–BUF5I flags also represent Legacy FIFO interrupts when the Legacy RX FIFO is enabled. When [MCR\[RFEN\]](#) is 1 and [MCR\[DMA\]](#) is 0, the function of the eight least significant interrupt flags changes:

- BUF7I, BUF6I, and BUF5I indicate operating conditions of the Legacy FIFO.
- BUF4I–BUF1I fields are reserved.
- BUF0I empties the Legacy FIFO.


Before writing 1 to [MCR\[RFEN\]](#), the CPU must service the IFLAG flags set in the Legacy RX FIFO region; see [Legacy RX FIFO](#). Otherwise, these IFLAG flags mistakenly show the related message buffers now belonging to Legacy FIFO as having contents to be serviced. When [MCR\[RFEN\]](#) is 0, the Legacy FIFO flags must be cleared. The same care must be taken when a [CTRL2\[RFFN\]](#) value is selected, extending Legacy RX FIFO filters beyond MB7. For example, when RFFN is 8h, Legacy RX FIFO filters occupy the MB23–MB0 range, and related IFLAG flags must be cleared.

When [MCR\[RFEN\]](#) and [MCR\[DMA\]](#) are 1 (DMA feature for Legacy RX FIFO enabled), the function of the eight least significant interrupt flags (BUF7I–BUF0I) changes to support DMA operation. BUF7I, BUF6I, and BUF4I–BUF1I are not used.

BUF5I indicates the operating condition of the Legacy FIFO, and BUF0I empties the Legacy FIFO. Moreover, BUF5I does not generate a CPU interrupt, but it does generate a DMA request. IMASK1 bits in the Legacy RX FIFO region are not considered when bit [MCR\[DMA\]](#) = 1. In addition, the CPU must not clear the BUF5I flag when DMA is enabled. Before writing 1 to [MCR\[DMA\]](#), the CPU must service the IFLAG flags set in the Legacy RX FIFO region. When [MCR\[DMA\]](#) is 0, the Legacy FIFO must be empty. Legacy FIFO must be disabled when [MCR\[FDEN\]](#) = 1.

Before updating [MCR\[MAXMB\]](#), the CPU must service the IFLAG1 flags whose MB value is greater than the [MCR\[MAXMB\]](#) to be updated. Otherwise, those flags remain set and are inconsistent with the number of message buffers available.

Diagram

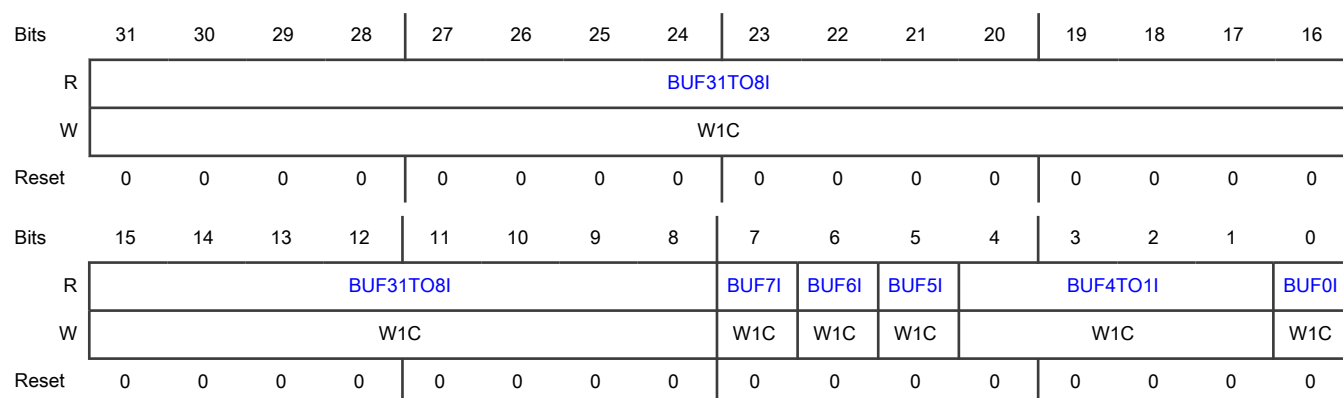

Fields

Field	Function
31-8 BUF31TO8I	Buffer MBi Interrupt Flags the corresponding FlexCAN message buffer interrupt for MB31–MB8. 0b - The corresponding buffer has no occurrence of successfully completed transmission or reception. 1b - The corresponding buffer has successfully completed transmission or reception.
7 BUF7I	Buffer MB7 Interrupt or Legacy RX FIFO Overflow Flags the interrupt for MB7 when MCR[RFEN] = 0 (Legacy RX FIFO disabled). NOTE When a CPU write changes the value of MCR[RFEN], FlexCAN clears this flag. When MCR[RFEN] = 1, this flag represents a Legacy RX FIFO overflow. In this case, the flag indicates that a message was lost because the Legacy RX FIFO is full. When the Legacy RX FIFO is full and a message buffer captures the message, this flag is not set. 0b - No occurrence of MB7 completing transmission or reception, or no FIFO overflow. 1b - MB7 completed transmission or reception, or FIFO overflow.
6 BUF6I	Buffer MB6 Interrupt or Legacy RX FIFO Warning Flags the interrupt for MB6 when MCR[RFEN] = 0 (Legacy RX FIFO disabled). NOTE When a CPU write changes the value of MCR[RFEN], FlexCAN clears this flag. When MCR[RFEN] = 1, this flag represents a Legacy RX FIFO warning. In this case, the flag indicates when the number of unread messages within the Legacy RX FIFO is increased to five from four due to the reception of a new message. In other words, the Legacy RX FIFO is almost full. If this flag is cleared when there are more than four unread messages, it does not set again until the number of unread messages in the Legacy RX FIFO decreases to four or fewer. 0b - No occurrence of MB6 completing transmission or reception, or FIFO not almost full.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	1b - MB6 completed transmission or reception, or FIFO almost full.
5 BUF5I	Buffer MB5 Interrupt or Frames available in Legacy RX FIFO Flags the interrupt for MB5 when MCR[RFEN] = 0 (Legacy RX FIFO disabled). NOTE When a CPU write changes the value of MCR[RFEN], FlexCAN clears this flag. When MCR[RFEN] = 1, the BUF5I flag represents frames available in Legacy RX FIFO. In this case, the flag indicates that at least one frame is available to be read from the Legacy RX FIFO. When MCR[DMA] = 1, this flag generates a DMA request. The CPU must not clear this field by writing 1 to BUF5I. 0b - No occurrence of completed transmission or reception, or no frames available 1b - MB5 completed transmission or reception, or frames available
4-1 BUF4TO1I	Buffer MBi Interrupt or Reserved Flags the interrupts for MB4–MB1 when MCR[RFEN] = 0 (Legacy RX FIFO disabled). NOTE When a CPU write changes the value of MCR[RFEN], FlexCAN clears these flags. When MCR[RFEN] = 1, the BUF4TO1I flags are reserved. 0b - The corresponding buffer has no occurrence of successfully completed transmission or reception. 1b - The corresponding buffer has successfully completed transmission or reception.
0 BUF0I	Buffer MB0 Interrupt or Clear Legacy FIFO bit Flags the interrupt for MB0 when MCR[RFEN] = 0 (Legacy RX FIFO disabled). If MCR[RFEN] = 1, this field is used to trigger the clear Legacy FIFO operation. This operation empties the Legacy FIFO contents. Before performing this operation, the CPU must service all Legacy FIFO-related IFLAG flags. When MCR[DMA] = 1, this operation also clears the BUF5I flag, aborting the DMA request. The clear Legacy FIFO operation occurs when the CPU writes 1 to BUF0I. This operation is only allowed in Freeze mode; the module blocks it in other conditions. 0b - MB0 has no occurrence of successfully completed transmission or reception. 1b - MB0 has successfully completed transmission or reception.

37.6.2.12 Control 2 (CTRL2)

Offset

Register	Offset
CTRL2	34h

Function

Complements [Control 1 \(CTRL1\)](#), providing control bits for memory write-access in Freeze mode. This register extends Legacy FIFO filter quantity, and adjusts the operation of internal FlexCAN processes such as matching and arbitration.


Soft reset does not affect the contents of this register.

[Table 243](#) shows how the value of [CTRL2\[RFFN\]](#) determines the Legacy RX FIFO filter structure.

Table 243. Possible Legacy RX FIFO filter structures

RFFN[3:0]	Number of Legacy RX FIFO filter elements	Message buffers occupied by Legacy RX FIFO and ID filter table	Remaining available message buffers	Legacy RX FIFO ID filter table elements affected by RX individual masks	Legacy RX FIFO ID filter table elements affected by Legacy RX FIFO global mask
0h	8	MB 0–7	MB 8–31	Elements 0–7	None
1h	16	MB 0–9	MB 10–31	Elements 0–9	Elements 10–15
2h	24	MB 0–11	MB 12–31	Elements 0–11	Elements 12–23
3h	32	MB 0–13	MB 14–31	Elements 0–13	Elements 14–31
4h	40	MB 0–15	MB 16–31	Elements 0–15	Elements 16–39
5h	48	MB 0–17	MB 18–31	Elements 0–17	Elements 18–47
6h	56	MB 0–19	MB 20–31	Elements 0–19	Elements 20–55
7h	64	MB 0–21	MB 22–31	Elements 0–21	Elements 22–63
8h	72	MB 0–23	MB 24–31	Elements 0–23	Elements 24–71
9h	80	MB 0–25	MB 26–31	Elements 0–25	Elements 26–79
Ah	88	MB 0–27	MB 28–31	Elements 0–27	Elements 28–87
Bh	96	MB 0–29	MB 30–31	Elements 0–29	Elements 30–95
Ch	104	MB 0–31	none	Elements 0–31	Elements 32–103

Diagram

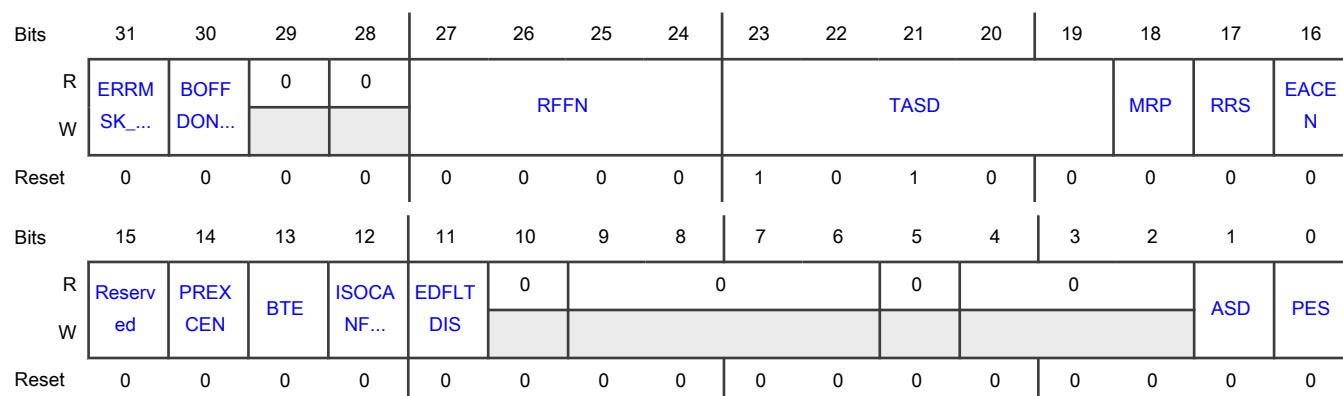

Fields

Field	Function
31 ERRMSK_FAST	Error Interrupt Mask for Errors Detected in the Data Phase of Fast CAN FD Frames Enables the ESR1[ERRINT_FAST] interrupt. 0b - Disable 1b - Enable
30 BOFFDONEMSK	Bus Off Done Interrupt Mask Enables the Bus Off Done interrupt, ESR1[BOFFDONEINT] . 0b - Disable 1b - Enable
29 —	Reserved
28 —	Reserved
27-24 RFFN	Number of Legacy Receive FIFO Filters Defines the number of Receive Legacy FIFO filters, as shown in Table 243. The chip determines the maximum selectable number of filters. Do not program this field with values that cause the number of message buffers occupied by Legacy RX FIFO and Legacy RX FIFO ID Filter to exceed MCR[MAXMB]. MCR[MAXMB] defines the number of message buffers present. This field can only be written in Freeze mode; the module blocks it in other modes. Each group of eight filters occupies a memory space equivalent to two message buffers. The more filters are implemented, the fewer message buffers are available. The Legacy RX FIFO occupies the memory space originally reserved for MB5–MB0. This field should be programmed with a value corresponding to a number of filters less than the number of available memory words. The number of available words can be calculated as follows: $(\text{SETUP\_MB} - 6) \times 4$ Where SETUP_MB is the smaller of the parameter NUMBER_OF_MB and MCR[MAXMB]. The number of remaining message buffers available is: $(\text{SETUP\_MB} - 8) - (\text{RFFN} \times 2)$ If the number of Legacy RX FIFO filters programmed through RFFN exceeds the SETUP_MB value (memory space available), the exceeding ones are not functional. NOTE • The number of the last remaining available message buffers is the smaller of (NUMBER_OF_MB - 1) and MCR[MAXMB]. • If RX Individual Mask registers are not enabled, the Legacy RX FIFO Global Mask affects all Legacy RX FIFO filters.
23-19	Transmission Arbitration Start Delay

Table continues on the next page...

Table continued from the previous page...

Field	Function
TASD	Indicates by how many CAN bits the transmission arbitration process start point can be delayed from the first bit of CRC field on CAN bus. See TX arbitration start delay for details. This field can be written only in Freeze mode; the module blocks it in other modes.
18 MRP	Message Buffers Reception Priority Sets the priority for the matching process. This field can be written only in Freeze mode; the module blocks it in other modes. 0b - Matching starts from Legacy RX FIFO or Enhanced RX FIFO and continues on message buffers. 1b - Matching starts from message buffers and continues on Legacy RX FIFO or Enhanced RX FIFO.
17 RRS	Remote Request Storing Determines what the module does with a remote request. The remote request frame is submitted to a matching process. If this field is 1, the frame is stored in the corresponding message buffer in the same fashion as a data frame. No automatic remote response frame is generated. If this field is 0, an automatic remote response frame is generated if a message buffer with CODE = 1010b is found with the same ID. You can only write to this field in Freeze mode. The module blocks it in other modes. 0b - Generated 1b - Stored
16 EACEN	Entire Frame Arbitration Field Comparison Enable for RX Message Buffers Controls the comparison of IDE and RTR fields within RX message buffer filters with their corresponding bits in the incoming frame by the matching process. If enabled, the IDE and RTR fields of the RX message buffer are compared to their corresponding bits within the incoming frame (mask bits apply). If disabled, the IDE field of the RX message buffer filter is always compared and RTR is never compared despite mask bits. This field does not affect matching for Legacy RX FIFO or Enhanced RX FIFO. You can only write to this field in Freeze mode; the module blocks it in other modes. 0b - Disable 1b - Enable
15 —	Reserved When writing to this field, always write the reset value.
14 PREXCEN	Protocol Exception Enable Enables the protocol exception feature. You can only write to this field in Freeze mode.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	NOTE See Protocol exception event in the CAN Protocol standard (ISO 11898-1:2015) for details. 0b - Disabled 1b - Enabled
13 BTE	Bit Timing Expansion Enable Enables the use of Enhanced CAN Bit Timing Prescalers (EPRS), Enhanced Data Phase CAN Bit Timing (EDCBT), and Enhanced Nominal CAN Bit Timing (ENCBT) to configure the CAN bit timing segments, instead of using the bit timing fields of CAN Bit Timing (CBT), CAN FD Bit Timing (FDCBT), and Control 1 (CTRL1). If this field is 1: • CTRL1[PRES DIV], CTRL1[PROPSEG], CTRL1[PSEG1], CTRL1[PSEG2], and CTRL1[RJW] are read as zero. A write operation to these fields has no effect. • CBT[EPRES DIV], CBT[ERJW], CBT[EPROPSEG], CBT[EPSEG1], and CBT[EPSEG2], and the corresponding fields in CAN FD Bit Timing (FDCBT), are read as zero. A write operation to these fields has no effect. • ETDC[ETDCOFF], ETDC[ETDCEN], ETDC[ETDCFAIL], and ETDC[ETDCVAL] are used by FlexCAN instead of FDCTRL[TDCOFF], FDCTRL[TDCEN], FDCTRL[TDCFAIL], and FDCTRL[TDCVAL]. These fields are read as zero, and a write operation to them has no effect. • ETDC[TDMDIS] can be used to disable transceiver delay measurement. 0b - Disable 1b - Enable
12 ISOCANFDEN	ISO CAN FD Enable Enables the CAN FD protocol according to ISO specification (ISO 11898-1:2015) (see CAN FD ISO compliance). When disabled, FlexCAN operates using the non-ISO CAN FD protocol. You can only write to this field in Freeze mode. NOTE FlexCAN is able to transmit FD frame format according to CAN Protocol standard (ISO 11898-1:2015). 0b - Disable 1b - Enable
11 EDFLTDIS	Edge Filter Disable Disables the edge filter used during the Bus Integration state. When the Edge Filter is enabled, two consecutive nominal time quanta with dominant bus states are required to detect an edge that causes synchronization. When synchronization occurs, the counting of the sequence of 11 consecutive recessive bits is restarted. The edge filter prevents dominant pulses that are shorter than a nominal bit time (present during the data phase of an FD frame) from being mistaken for an idle condition.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	You can only write to this field in Freeze mode. NOTE See Bus Integration state in the CAN Protocol standard (ISO 11898-1:2015) for details. 0b - Enabled 1b - Disabled
10 —	Reserved
9-6 —	Reserved
5 —	Reserved
4-2 —	Reserved
1 ASD	ACK Suppression Disable Disables the ACK suppression logic. You can only write to this field in Freeze mode. 0b - Enabled 1b - Disabled
0 PES	Payload Byte and Bit Order Selection Selects the byte order for the payload of transmit and receive frames. NOTE You can only write to this field in Freeze mode. 0b - Big-endian 1b - Little-endian

37.6.2.13 Error and Status 2 (ESR2)


Offset

Register	Offset
ESR2	38h

Function

Reports general status information.

Diagram

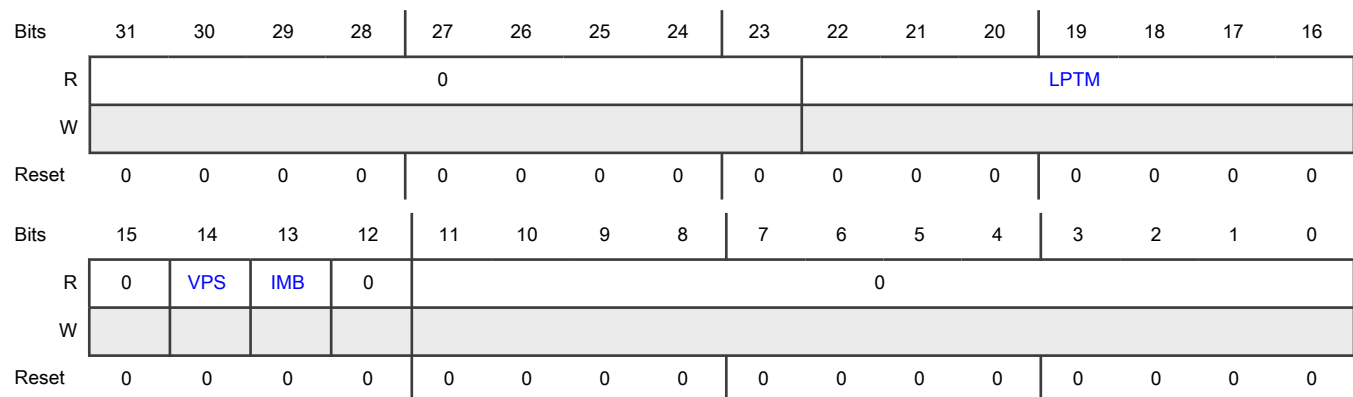

Fields

Field	Function
31-23 —	Reserved
22-16 LPTM	Lowest Priority TX Message Buffer Indicates the lowest number inactive message buffer when ESR2[VPS] = 1 (see ESR2[IMB]). If no message buffer is inactive, the message buffer indicated depends on the value of CTRL1[LBUF]. If CTRL1[LBUF] = 0, the message buffer indicated is the one with the greatest arbitration value (see Highest-priority message buffer first). If CTRL1[LBUF] = 1, the message buffer indicated is the active TX message buffer with the highest number. If a TX message buffer is being transmitted, it is not considered in the LPTM calculation. If ESR2[IMB] is not 0 and a frame is transmitted successfully, the value of LPTM is updated with its message buffer number.
15 —	Reserved
14 VPS	Valid Priority Status Indicates whether the contents of ESR2[IMB] and ESR2[LPTM] are valid. It becomes 1 upon every complete TX arbitration process, unless the CPU writes to the Control and Status word of a message buffer already scanned. In other words, it is behind the TX Arbitration Pointer, during the TX arbitration process. If there is no inactive message buffer and only one TX message buffer that is being transmitted, this field remains 0. This field becomes 0 upon the start of every TX arbitration process or upon a write to the Control and Status word of any message buffer. NOTE No CPU write to the Control and Status of a message buffer that the abort mechanism blocks affects this field. When MCR[AEN] = 1, the abort code write to the Control and Status of an MB being transmitted (pending abort) is blocked. Any write attempt to a TX MB with its IFLAG flag set is also blocked. 0b - Invalid 1b - Valid

Table continues on the next page...

Table continued from the previous page...

Field	Function
13 IMB	Inactive Message Buffer Indicates whether any message buffer is inactive (CODE field is either 1000b or 0b) when ESR2[VPS] = 1. This field becomes 1 when: • A lowest-priority TX message buffer (ESR2[LPTM]) is found and it is inactive during arbitration. • This field is not 1, and a frame is transmitted successfully. This field always becomes 0 at the start of arbitration (see Arbitration process). If a message buffer is successfully transmitted and this field is 0 (no inactive message buffer), ESR2[VPS] and this field both become 1. The index related to the MB transmitted is loaded into ESR2[LPTM]. In this case, the value of ESR2[LPTM] is the number of the first inactive message buffer. 0b - Message buffer indicated by ESR2[LPTM] is not inactive. 1b - At least one message buffer is inactive.
12 —	Reserved
11-0 —	Reserved

37.6.2.14 Cyclic Redundancy Check (CRCR)

Offset

Register	Offset
CRCR	44h


Function

Provides information about the CRC of transmitted messages for non-FD messages. This register only reports the 15 low-order bits of CRC calculations for messages in CAN FD format that require either 17 or 21 bits. For CAN FD format frames, you must use the [CAN FD CRC \(FDCRC\)](#). This register is updated at the same time that the TX interrupt flag is set.

NOTE

See CRC sequence calculation in the CAN Protocol standard (ISO 11898-1:2015) for details.

Diagram

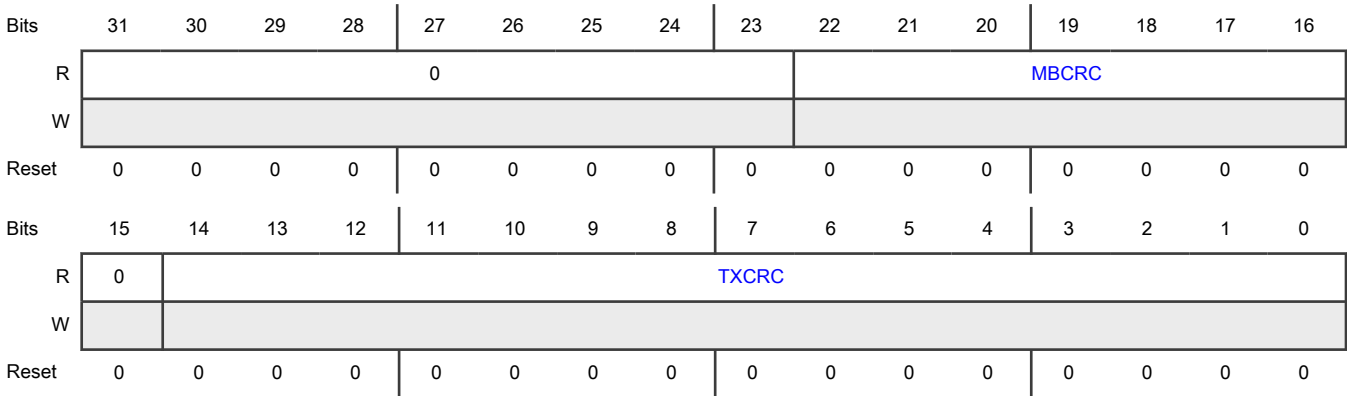

Fields

Field	Function
31-23 —	Reserved
22-16 MBCRC	CRC Message Buffer Indicates the number of the message buffer corresponding to the value in CRCR[TXCRC] .
15 —	Reserved
14-0 TXCRC	Transmitted CRC value Indicates the CRC value of the last transmitted message for non-FD frames. For FD frames, CRC value is reported in CAN FD CRC (FDCRC) .

37.6.2.15 Legacy RX FIFO Global Mask (RXFGMASK)

Offset

Register	Offset
RXFGMASK	48h

Function

Masks the Legacy RX FIFO ID filter table elements that do not have a corresponding RXIMR according to [CTRL2\[RFFN\]](#), when Legacy RX FIFO is enabled.

This register is located in RAM.

You can only write to this register in Freeze mode; the module blocks it in other modes.


The following table shows how the FGM bits correspond to each IDAF field.

Table 244. Correspondence of Legacy RX FIFO global mask bits to IDF fields

Legacy RX FIFO ID filter table elements format (MCR[IDAM])	Identifier acceptance filter fields					
	RTR	IDE	RXIDA	RXIDB ¹	RXIDC ²	Reserved
A	FGM[31]	FGM[30]	FGM[29:1]	—	—	FGM[0]
B	FGM[31], FGM[15]	FGM[30], FGM[14]	—	FGM[29:16], FGM[13:0]	FGM[31:24], FGM[23:16], FGM[15:8], FGM[7:0]	—
C	—	—		—		

1. If MCR[IDAM] is equivalent to format B, only the 14 most significant bits of the identifier of the incoming frame are compared with the Legacy RX FIFO filter.
2. If MCR[IDAM] is equivalent to format C, only the eight most significant bits of the identifier of the incoming frame are compared with the Legacy RX FIFO filter.

Diagram

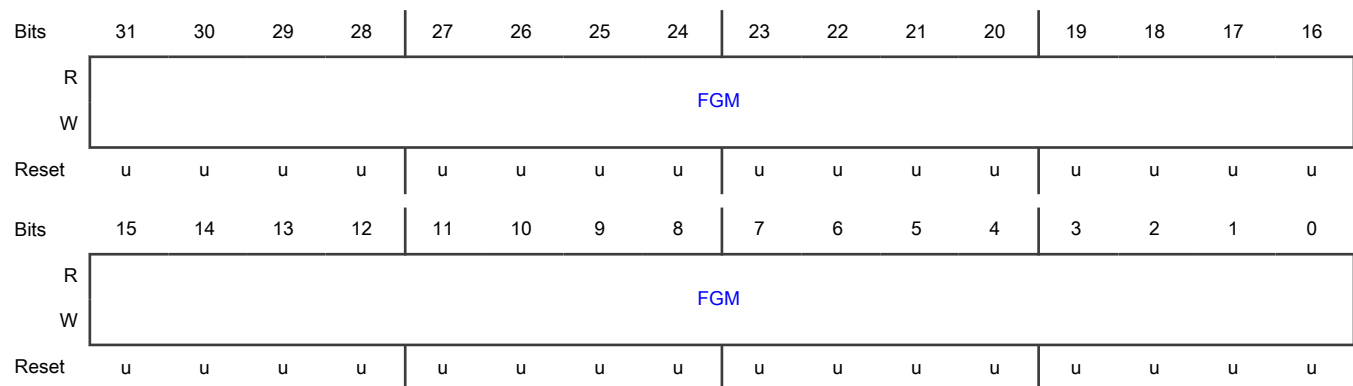

Fields

Field	Function
31-0	Legacy RX FIFO Global Mask Bits
FGM	Masks the ID filter table elements bits in a perfect alignment. 0b - The corresponding bit in the filter is "don't care." 1b - The corresponding bit in the filter is checked.

37.6.2.16 Legacy RX FIFO Information (RXFIR)

Offset


Register	Offset
RXFIR	4Ch

Function

Provides information about Legacy RX FIFO.

This register is the port through which the CPU accesses the output of the Legacy RXFIR FIFO located in RAM. FlexCAN writes to the Legacy RXFIR FIFO when a new message is moved into the Legacy RX FIFO. Also, its output is updated whenever the output of the Legacy RX FIFO is updated with the next message. See [Legacy RX FIFO](#) for instructions on reading this register.

Diagram

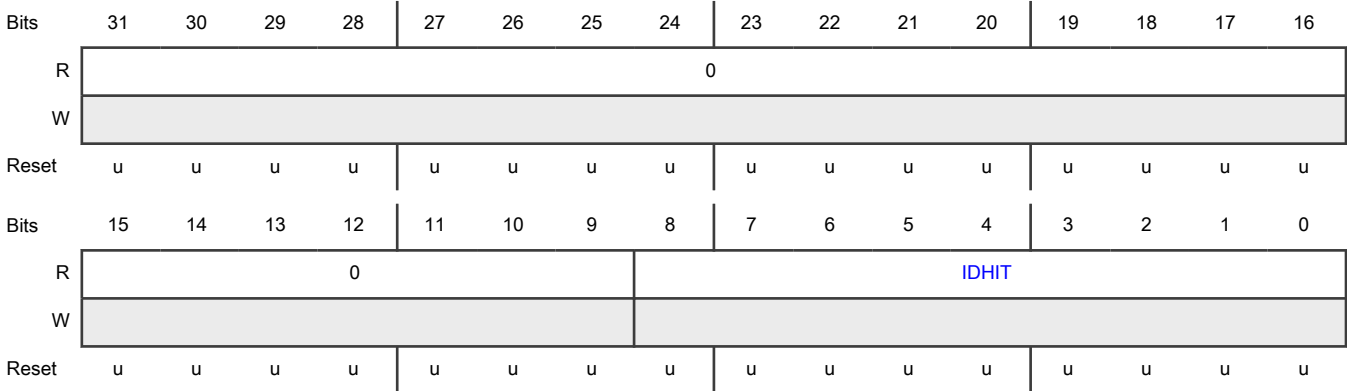

Fields

Field	Function
31-9 —	Reserved
8-0 IDHIT	Identifier Acceptance Filter Hit Indicator Indicates which Identifier Acceptance filter that the received message hit in the output of the Legacy RX FIFO. If multiple filters match the incoming message ID, the first matching IDAF found (lowest number) by the matching process is indicated. This field is valid only when IFLAG1[BUF5] is set.

37.6.2.17 CAN Bit Timing (CBT)

Offset

Register	Offset
CBT	50h

Function

Provides an alternative way to store the CAN bit timing variables described in [Control 1 \(CTRL1\)](#). EPRESDIV, EPROPSEG, EPSEG1, EPSEG2, and ERJW are extended versions of [CTRL1\[PRES DIV\]](#), [CTRL1\[PROPSEG\]](#), [CTRL1\[PSEG1\]](#), [CTRL1\[PSEG2\]](#), and [CTRL1\[RJW\]](#) respectively.

NOTE

The CAN bit variables in CTRL1 and in CBT are stored in the same register.

[CBT\[BTf\]](#) selects the use of the timing variables defined in this register.

When the CAN FD feature is enabled (MCR[FDEN] = 1), always write 1 to CBT[BTF].


Soft reset does not affect the contents of this register.

NOTE

Ensure that bit time settings and protocol engine tolerance are in compliance with the CAN Protocol standard (ISO 11898-1:2015).

NOTE

If CTRL2[BTE] = 1, EPRES DIV, ERJW, EPROPSEG, EPSEG1, and EPSEG2 are read as zero. A write operation to them has no effect.

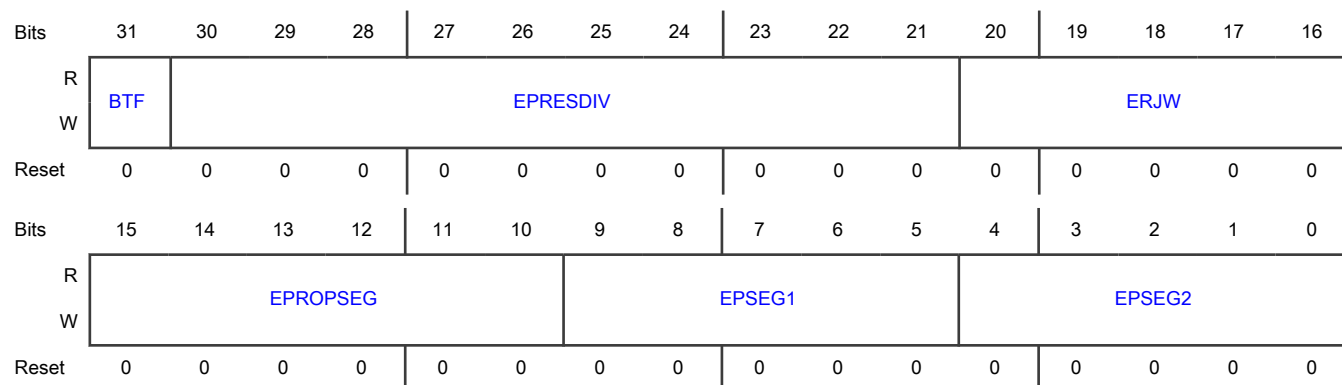Diagram**Fields**

Field	Function
31 BTF	Bit Timing Format Enable Enables the use of extended CAN bit timing fields EPRES DIV, EPROPSEG, EPSEG1, EPSEG2, and ERJW. These fields replace the CAN bit timing variables defined in Control 1 (CTRL1). This field can be written in Freeze mode only. 0b - Disable 1b - Enable
30-21 EPRES DIV	Extended Prescaler Division Factor Defines the ratio between the PE clock frequency and the serial clock (Sclock) frequency when CBT[BTF] = 1, otherwise it has no effect. It extends the CTRL1[PRES DIV] value range. The Sclock period defines the time quantum of the CAN protocol. For the reset value, the Sclock frequency is equal to the PE clock frequency (see Protocol timing). This field can be written only in Freeze mode; the module blocks it in other modes. Sclock frequency = PE clock frequency ÷ (EPRES DIV + 1)
20-16 ERJW	Extended Resync Jump Width Defines the maximum number of time quanta that one resynchronization can change a bit time when CBT[BTF] = 1. Otherwise, it has no effect. It extends the CTRL1[RJW] value range.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	This field can be written only in Freeze mode; the module blocks it in other modes. Resync Jump Width = ERJW + 1. One Time Quantum = one Sclck period.
15-10 EPROPSEG	Extended Propagation Segment Defines the length of the propagation segment in the bit time when CBT[BTF] = 1, otherwise it has no effect. It extends the CTRL1[PROPSEG] value range. This field can be written only in Freeze mode; the module blocks it in other modes. Propagation Segment Time = (EPROPSEG + 1) × Time Quanta. One Time Quantum = one Sclck period.
9-5 EPSEG1	Extended Phase Segment 1 Defines the length of phase segment 1 in the bit time when CBT[BTF] = 1, otherwise it has no effect. It extends the CTRL1[PSEG1] value range. This field can be written only in Freeze mode; the module blocks it in other modes. Phase Buffer Segment 1 = (EPSEG1 + 1) × Time Quanta. One Time Quantum = one Sclck period.
4-0 EPSEG2	Extended Phase Segment 2 Defines the length of phase segment 2 in the bit time when CBT[BTF] = 1, otherwise it has no effect. It extends the CTRL1[PSEG2] value range. This field can be written only in Freeze mode; the module blocks it in other modes. Phase Buffer Segment 1 = (EPSEG2 + 1) × Time Quanta. One Time Quantum = one Sclck period.

37.6.2.18 Receive Individual Mask (RXIMR0 - RXIMR31)

Offset

For n = 0 to 31:

Register	Offset
RXIMRn	880h + (n × 4h)

Function

Stores the acceptance masks for ID filtering in RX message buffers and the Legacy RX FIFO.


When the Legacy RX FIFO is disabled ([MCR\[RFEN\]](#) = 0), an individual mask is provided for each available RX message buffer on a one-to-one correspondence. When the Legacy RX FIFO is enabled ([MCR\[RFEN\]](#) = 1), an individual mask is provided for each Legacy RX FIFO ID filter table element on a one-to-one correspondence. This correspondence depends on the setting of [CTRL2\[RFFN\]](#) (see [Legacy RX FIFO](#)).

RXIMR0 stores the individual mask associated with either MB0 or ID filter table element 0. RXIMR1 stores the individual mask associated with either MB1 or ID filter table element 1, and so on.

The CPU can only access the RXIMR registers when the module is in Freeze mode; otherwise, the module blocks them. Reset does not affect these registers. They are located in RAM and must be explicitly initialized prior to any reception.

It is possible for the RXIMR memory region to be accessed as general-purpose memory. See [Bus interface](#) for more information.

Diagram

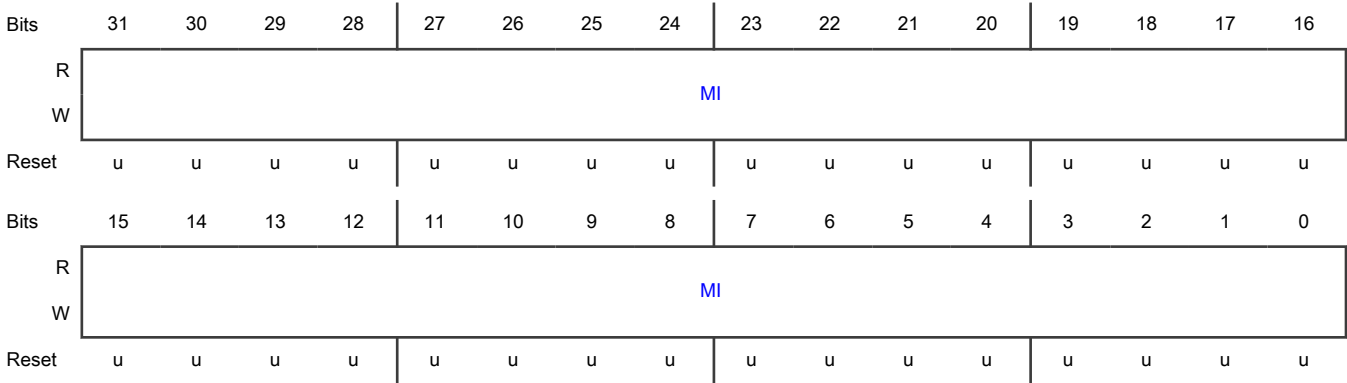

Fields

Field	Function
31-0	Individual Mask Bits
MI	Masks the corresponding bit in both the message buffer filter and Legacy RX FIFO ID filter table element in distinct ways. For message buffer filters, see RX Message Buffers Global Mask (RXMGMASK) . For Legacy RX FIFO ID filter table elements, see Legacy RX FIFO Global Mask (RXFGMASK) . 0b - The corresponding bit in the filter is "don't care." 1b - The corresponding bit in the filter is checked.


37.6.2.19 Pretended Networking Control 1 (CTRL1_PN)

Offset

Register	Offset
CTRL1_PN	B00h

Function

Contains control bits for Pretended Networking mode filtering selection. Configure this register with the filter criteria to be used to receive wake-up messages. Fields in this register can be written in Freeze mode only, except for [CTRL1_PN\[WTOF_MSK\]](#) and [CTRL1_PN\[WUMF_MSK\]](#).

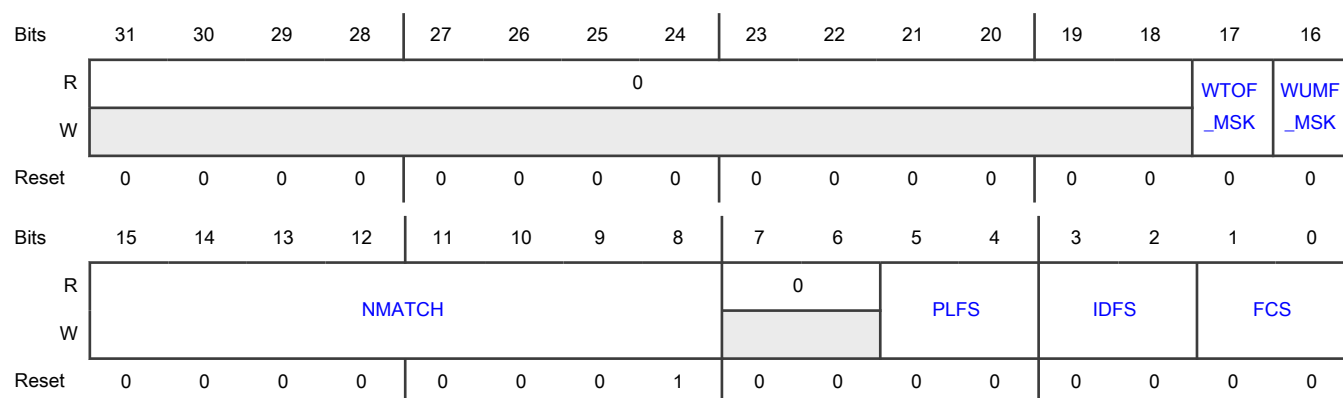Diagram**Fields**

Field	Function
31-18 —	Reserved
17 WTOF_MSK	Wake-up by Timeout Flag Mask Enables the generation of a wake-up event originated by a timeout. 0b - Disable 1b - Enable
16 WUMF_MSK	Wake-up by Matching Flag Mask Enables the generation of a wake-up event originated by a successful filtered RX message. 0b - Disable 1b - Enable
15-8 NMATCH	Number of Messages Matching the Same Filtering Criteria Defines the number of times a given message must match the predefined filtering criteria for ID or payload before generating a wake-up event. You can configure this quantity in the 1–255 range by using values 01h–FFh, respectively. 0000_0001b - Once 0000_0010b - Twice 1111_1111b - 255 times
7-6 —	Reserved
5-4 PLFS	Payload Filtering Selection Selects the level of payload filtering to be applied when FlexCAN is in Pretended Networking mode. When payload filtering is active, filtering does not accept remote messages (RTR = 1).

Table continues on the next page...

Table continued from the previous page...

Field	Function
	00b - Match payload contents to an exact target value 01b - Match a payload value greater than or equal to a specified target value 10b - Match a payload value smaller than or equal to a specified target value 11b - Match upon a payload value within a range of values, inclusive
3-2 IDFS	ID Filtering Selection Selects the level of ID filtering to be applied when FlexCAN is in Pretended Networking mode. In ID filtering, if <code>FLT_ID2_IDMASK[IDE_MSK]</code> = 1 and <code>FLT_ID2_IDMASK[RTR_MSK]</code> = 1, the IDE and RTR bits are considered part of the reception filter. 00b - Match ID contents to an exact target value 01b - Match an ID value greater than or equal to a specified target value 10b - Match an ID value smaller than or equal to a specified target value 11b - Match an ID value within a range of values, inclusive
1-0 FCS	Filtering Combination Selection Selects the filtering criteria to be applied when FlexCAN is in Pretended Networking mode. See Receive process in Pretended Networking mode for more details. 00b - Message ID filtering only 01b - Message ID filtering and payload filtering 10b - Message ID filtering occurring a specified number of times 11b - Message ID filtering and payload filtering a specified number of times

37.6.2.20 Pretended Networking Control 2 (CTRL2_PN)


Offset

Register	Offset
CTRL2_PN	B04h

Function

Contains the configuration for the timeout value in Pretended Networking mode. You can only write to this register in Freeze mode.

Diagram

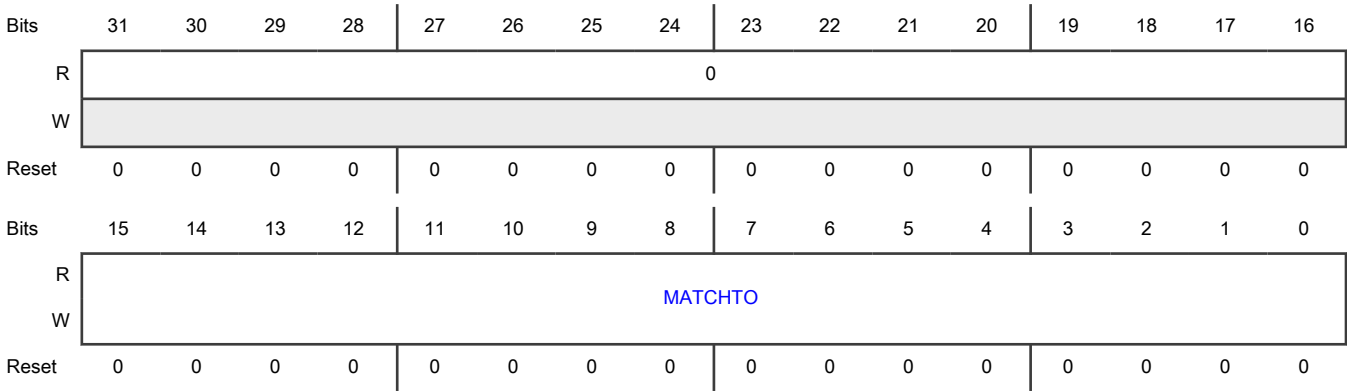

Fields

Field	Function
31-16 —	Reserved
15-0 MATCHTO	Timeout for No Message Matching the Filtering Criteria Defines a timeout value that generates a wake-up event if MCR[PNET_EN] = 1. If the timeout counter reaches the target value when FlexCAN is in Pretended Networking mode, a wake-up event is generated. The timeout limit can be configured from 1 to 65535 to control an internal 16-bit incrementing timer to produce a trigger upon reaching this configured value. The internal timer is incremented based on periodic time ticks, where the period is 64 times the CAN Bit Time unit. Writing 0000h to this field disables the timeout.

37.6.2.21 Pretended Networking Wake-Up Match (WU_MTC)


Offset

Register	Offset
WU_MTC	B08h

Function

Contains wake-up information related to the matching processes performed when FlexCAN receives frames in Pretended Networking mode.

Diagram

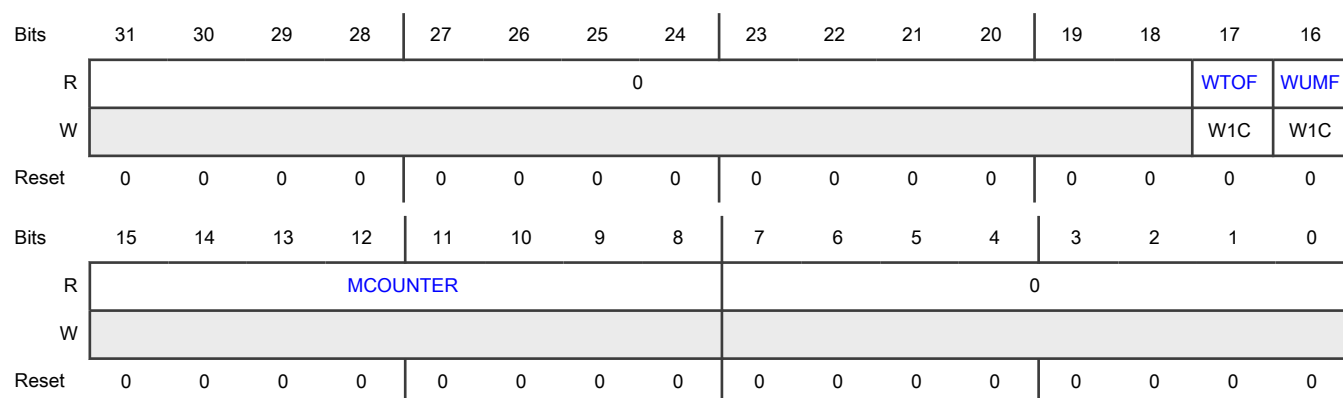

Fields

Field	Function
31-18 —	Reserved
17 WTOF	Wake-up by Timeout Flag Bit Identifies whether FlexCAN has detected a timeout event during a time interval defined by CTRL2_PN[MATCHTO]. If CTRL1_PN[WTOF_MSK] = 1, this flag generates a wake-up event. 0b - No event detected 1b - Event detected
16 WUMF	Wake-up by Match Flag Identifies whether FlexCAN has detected a matching RX incoming message that meets the filtering criteria specified in Pretended Networking Control 1 (CTRL1_PN). If CTRL1_PN[WUMF_MSK] = 1, this flag generates a wake-up event. 0b - No event detected 1b - Event detected
15-8 MCOUNTER	Number of Matches in Pretended Networking Contains the number of times a given message has matched the predefined filtering criteria for ID or payload before a wake-up event. When FlexCAN enters Pretended Networking mode, this register is reset; soft reset does not affect it.
7-0 —	Reserved

37.6.2.22 Pretended Networking ID Filter 1 (FLT_ID1)


Offset

Register	Offset
FLT_ID1	B0Ch

Function

Contains FLT_ID1 target value, as well as IDE and RTR target values used to filter an incoming message ID. The FLT_ID1 is used for comparisons or as the lower limit value in an ID range detection. It can be written in Freeze mode only.

Diagram

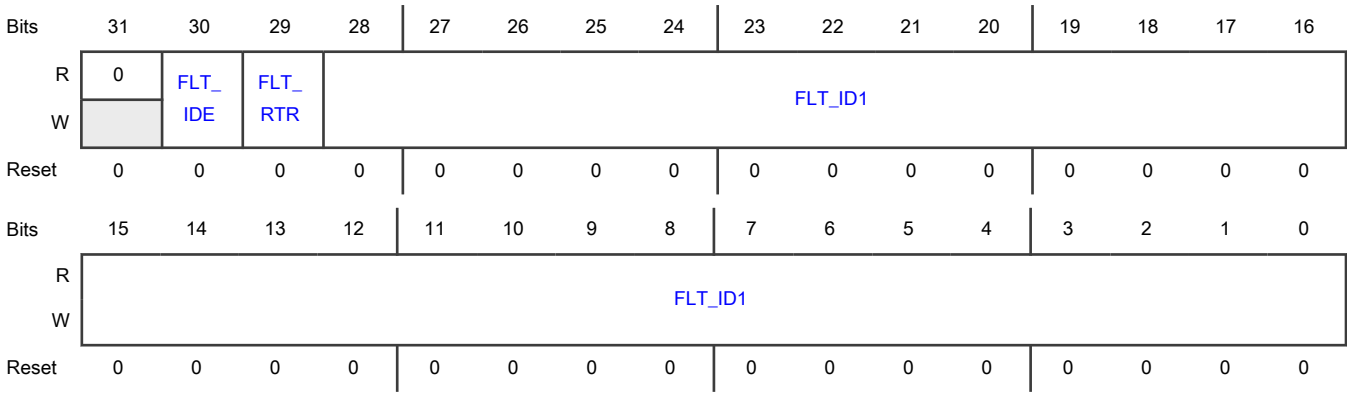

Fields

Field	Function
31 —	Reserved
30 FLT_IDE	ID Extended Filter Identifies whether the frame format is standard or extended. It is used as part of the ID reception filter. 0b - Standard 1b - Extended
29 FLT_RTR	Remote Transmission Request Filter Identifies whether the frame is remote. It is used as part of the ID reception filter. 0b - Reject remote frame (accept data frame) 1b - Accept remote frame
28-0 FLT_ID1	ID Filter 1 for Pretended Networking filtering Defines either the 29 bits of an extended frame format, considering all bits, or the 11 bits of a standard frame format, considering only the leftmost 11 bits.

37.6.2.23 Pretended Networking Data Length Code (DLC) Filter (FLT_DLC)

Offset


Register	Offset
FLT_DLC	B10h

Function

Contains the DLC inside a range of target values (FLT_DLC_LO and FLT_DLC_HI) used to filter an incoming message. The DLC range is used only for payload filtering. It can be written in Freeze mode only.

When a fixed quantity of data bytes is required, write the same value to [FLT_DLC\[FLT_DLC_LO\]](#) and [FLT_DLC\[FLT_DLC_HI\]](#). See [Receive process in Pretended Networking mode](#).

Diagram

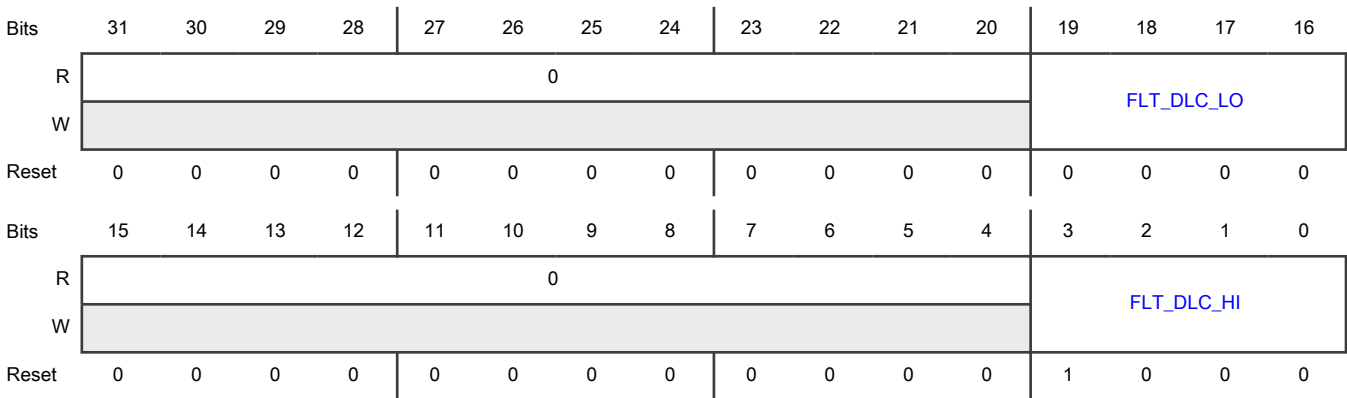

Fields

Field	Function
31-20 —	Reserved
19-16 FLT_DLC_LO	Lower Limit for Length of Data Bytes Filter Specifies the lower limit for the number of data bytes considered valid for payload comparison. It is used as part of payload reception filter.
15-4 —	Reserved
3-0 FLT_DLC_HI	Upper Limit for Length of Data Bytes Filter Specifies the upper limit for the number of data bytes considered valid for payload comparison. It is used as part of payload reception filter.

37.6.2.24 Pretended Networking Payload Low Filter 1 (PL1_LO)


Offset

Register	Offset
PL1_LO	B14h

Function

Contains the low-order bits of the target value used to filter incoming message payload for payload filter 1. It is used for comparisons or as the lower limit value in a payload range detection. It can be written in Freeze mode only.

Diagram

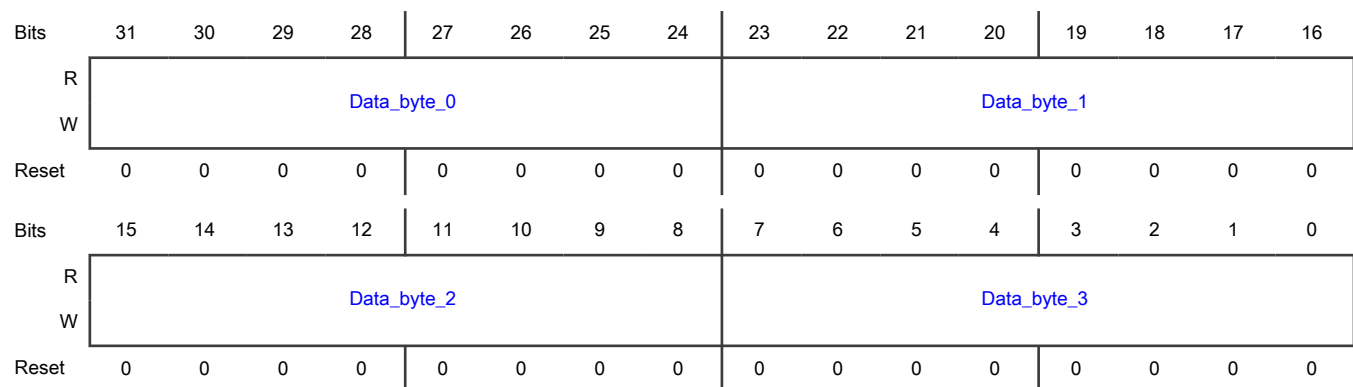

Fields

Field	Function
31-24 Data_byte_0	Data byte 0 Contains payload filter 1 low-order bits for PN payload filtering corresponding to data byte 0.
23-16 Data_byte_1	Data byte 1 Contains payload filter 1 low-order bits for PN payload filtering corresponding to data byte 1.
15-8 Data_byte_2	Data byte 2 Contains payload filter 1 low-order bits for PN payload filtering corresponding to data byte 2.
7-0 Data_byte_3	Data byte 3 Contains payload filter 1 low-order bits for PN payload filtering corresponding to data byte 3.

37.6.2.25 Pretended Networking Payload High Filter 1 (PL1_HI)


Offset

Register	Offset
PL1_HI	B18h

Function

Contains the high-order bits of the target value used to filter incoming message payload for payload filter 1. It is used either for comparisons or as the lower limit value in a payload range detection. It can be written in Freeze mode only.

Diagram

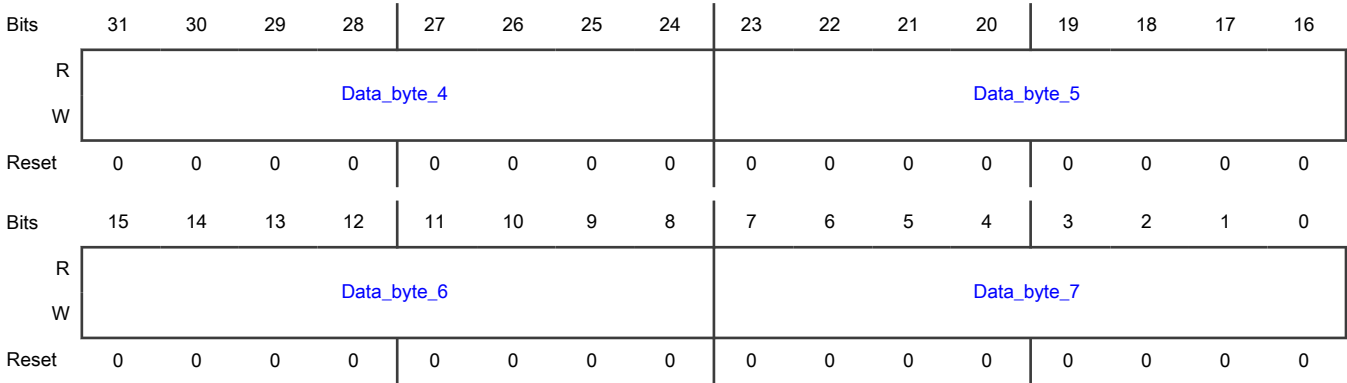

Fields

Field	Function
31-24 Data_byte_4	Data byte 4 Contains payload filter 1 high-order bits for PN payload filtering corresponding to data byte 4.
23-16 Data_byte_5	Data byte 5 Contains payload filter 1 high-order bits for PN payload filtering corresponding to data byte 5.
15-8 Data_byte_6	Data byte 6 Contains payload filter 1 high-order bits for PN payload filtering corresponding to data byte 6.
7-0 Data_byte_7	Data byte 7 Contains payload filter 1 high-order bits for PN payload filtering corresponding to data byte 7.

37.6.2.26 Pretended Networking ID Filter 2 or ID Mask (FLT_ID2_IDMASK)


Offset

Register	Offset
FLT_ID2_IDMASK	B1Ch

Function

Contains FLT_ID2 target value used only as the upper limit value in ID range detection. When an exact ID filtering criterion is selected, this register stores the ID mask. IDE_MSK and RTR_MSK are used in both types of ID filtering (exact and range). These fields enable FLT_ID1[FLT_IDE] and FLT_ID1[FLT_RTR] to be used as part of the ID reception filter. This register can be written in Freeze mode only.

Diagram

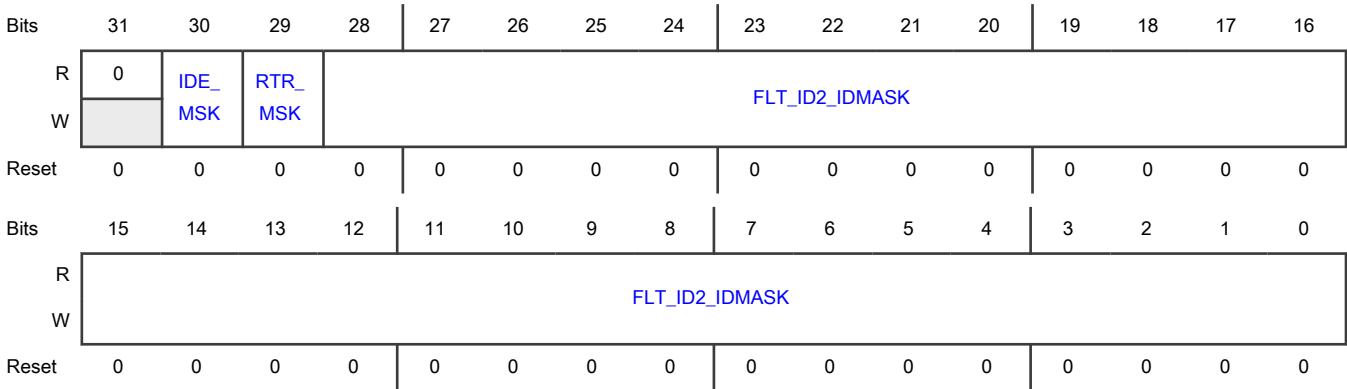

Fields

Field	Function
31 —	Reserved
30 IDE_MSK	ID Extended Mask Indicates whether the frame format (standard or extended) is used as part of the ID reception filter. 0b - The corresponding bit in the filter is "don't care." 1b - The corresponding bit in the filter is checked.
29 RTR_MSK	Remote Transmission Request Mask Indicates whether the frame type (data or remote) is part of the ID reception filter. 0b - The corresponding bit in the filter is "don't care." 1b - The corresponding bit in the filter is checked.
28-0 FLT_ID2_IDMASK	ID Filter 2 for Pretended Networking Filtering or ID Mask Bits for Pretended Networking ID Filtering Defines filter values in range ID filtering: - Value in extended frame format (29 bits), considering FLT_ID2[28:0] - Value in standard frame format (11 bits), considering the FLT_ID2[28:18]. In this case, bits [17:0] are meaningless. Or, defines the mask values in exact ID filtering: - Values for extended frame format (29 bits), considering IDMASK[28:0] - Values for standard frame format (11 bits), considering IDMASK[28:18]. In this case, bits [17:0] are meaningless.

37.6.2.27 Pretended Networking Payload Low Filter 2 and Payload Low Mask (PL2_PLMASK_LO)


Offset

Register	Offset
PL2_PLMASK_LO	B20h

Function

Contains the low-order bits for Payload Filter 2, used only as the upper limit value in a payload range detection. Also, when an exact payload filtering criterion is selected, this register is used as payload mask for the low-order bits. Otherwise, this register is unused. It can be written in Freeze mode only.

Diagram

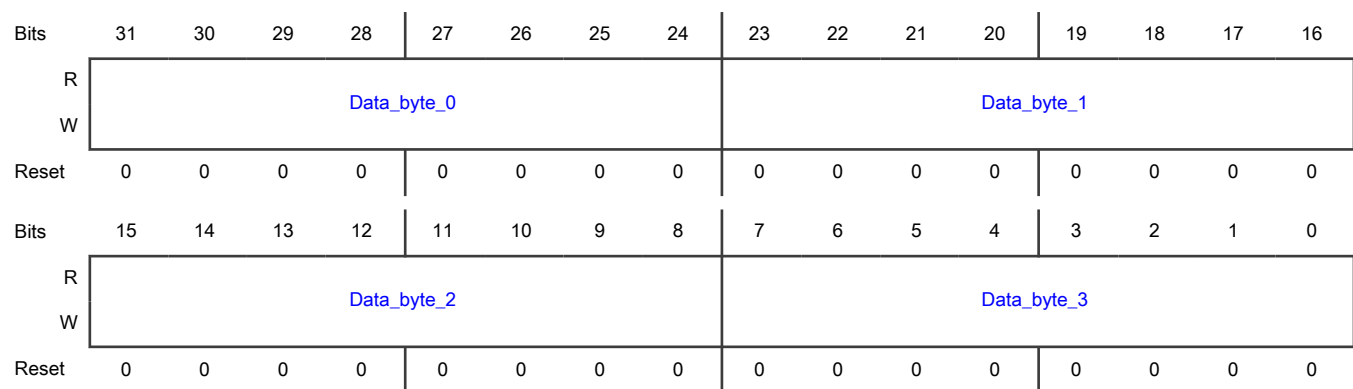

Fields

Field	Function
31-24 Data_byte_0	Data Byte 0 Contains payload filter 2 low-order bits, or Payload Mask low-order bits for PN payload filtering, corresponding to data byte 0
23-16 Data_byte_1	Data Byte 1 Contains payload filter 2 low-order bits, or Payload Mask low-order bits for PN payload filtering, corresponding to data byte 1
15-8 Data_byte_2	Data Byte 2 Contains payload filter 2 low-order bits, or Payload Mask low-order bits for PN payload filtering, corresponding to data byte 2
7-0 Data_byte_3	Data Byte 3 Contains payload filter 2 low-order bits, or Payload Mask low-order bits for PN payload filtering, corresponding to data byte 3

37.6.2.28 Pretended Networking Payload High Filter 2 and Payload High Mask (PL2_PLMASK_HI)

Offset

Register	Offset
PL2_PLMASK_HI	B24h

Function

Contains the high-order bits for the Payload Filter 2, used only as the upper limit value in a payload range detection. Also, when an exact payload filtering criterion is selected, this register is used as payload mask for the high-order bits. Otherwise, this register is unused. It can be written in Freeze mode only.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	Data_byte_4								Data_byte_5							
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Data_byte_6								Data_byte_7							
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-24 Data_byte_4	Data Byte 4 Contains payload filter 2 high-order bits, or Payload Mask high-order bits for PN payload filtering, corresponding to data byte 4.
23-16 Data_byte_5	Data Byte 5 Contains payload filter 2 high-order bits, or Payload Mask high-order bits for PN payload filtering, corresponding to data byte 5.
15-8 Data_byte_6	Data Byte 6 Contains payload filter 2 high-order bits, or Payload Mask high-order bits for PN payload filtering, corresponding to data byte 6.
7-0 Data_byte_7	Data Byte 7 Contains payload filter 2 high-order bits, or Payload Mask high-order bits for PN payload filtering, corresponding to data byte 7.

37.6.2.29 Wake-Up Message Buffer (WMB0_CS - WMB3_CS)


Offset

Register	Offset
WMB0_CS	B40h
WMB1_CS	B50h
WMB2_CS	B60h
WMB3_CS	B70h

Function

Stores the Control and Status information (IDE, RTR, and DLC fields) of an incoming RX message.

Diagram

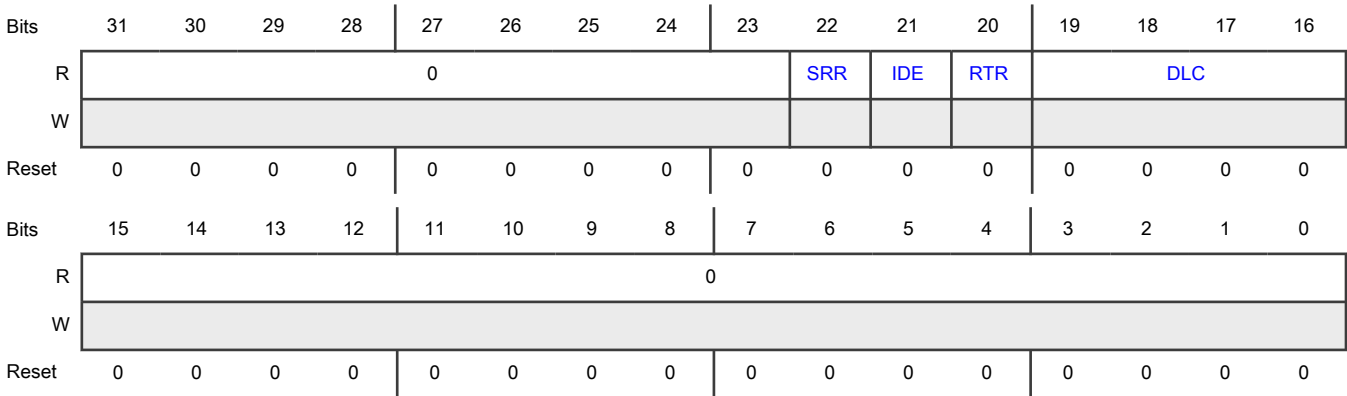

Fields

Field	Function
31-23 —	Reserved
22 SRR	Substitute Remote Request Identifies whether the request is dominant or recessive. This field is used only in extended format. You must write 1 to this field for transmission buffers. The value of this field is stored with the value received on the CAN bus for receiving buffers. If FlexCAN receives this field as dominant, it is interpreted as an arbitration loss. 0b - Dominant 1b - Recessive
21 IDE	ID Extended Bit Identifies whether the frame format is standard or extended.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - Standard 1b - Extended
20 RTR	Remote Transmission Request Identifies whether the frame is remote or data 0b - Data 1b - Remote
19-16 DLC	Length of Data in Bytes Contains the length (in bytes) of the RX data received when FlexCAN is in Pretended Networking mode. FlexCAN writes this field, copied from the DLC (Data Length Code) field of the received frame. The DLC field indicates which data bytes are valid.
15-0 —	Reserved

37.6.2.30 Wake-Up Message Buffer for ID (WMB0_ID - WMB3_ID)


Offset

Register	Offset
WMB0_ID	B44h
WMB1_ID	B54h
WMB2_ID	B64h
WMB3_ID	B74h

Function

Stores the ID information of an incoming RX message.

Diagram

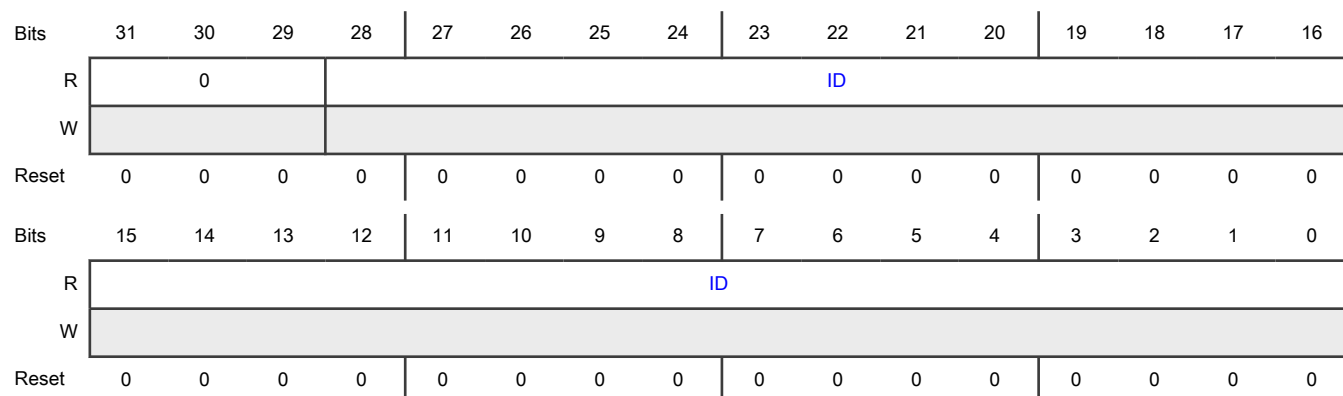

Fields

Field	Function
31-29 —	Reserved
28-0 ID	Received ID in Pretended Networking Mode Stores the received ID, which is: • The 29 bits of the extended frame format (considering ID[28:0]) • The 11 bits of the standard frame format (considering ID[28:18] only; the remaining bits in the ID[17:0] range are meaningless).

37.6.2.31 Wake-Up Message Buffer for Data 0–3 (WMB0_D03 - WMB3_D03)


Offset

Register	Offset
WMB0_D03	B48h
WMB1_D03	B58h
WMB2_D03	B68h
WMB3_D03	B78h

Function

Stores data bytes 0–3 of the payload information of an incoming RX message. The content of each register is cleared when the incoming matched message is either a remote frame (RTR = 1) or a data frame with DLC = 0.

Diagram

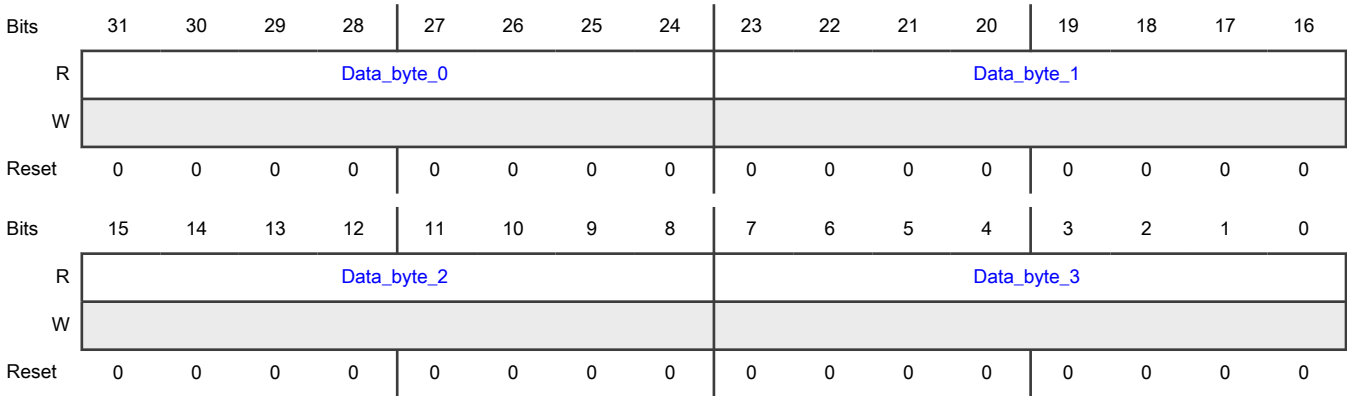

Fields

Field	Function
31-24 Data_byte_0	Data Byte 0 Contains received payload corresponding to data byte 0 in Pretended Networking mode
23-16 Data_byte_1	Data Byte 1 Contains received payload corresponding to data byte 1 in Pretended Networking mode
15-8 Data_byte_2	Data Byte 2 Contains received payload corresponding to data byte 2 in Pretended Networking mode
7-0 Data_byte_3	Data Byte 3 Contains received payload corresponding to data byte 3 in Pretended Networking mode

37.6.2.32 Wake-Up Message Buffer Register Data 4–7 (WMB0_D47 - WMB3_D47)


Offset

Register	Offset
WMB0_D47	B4Ch
WMB1_D47	B5Ch
WMB2_D47	B6Ch
WMB3_D47	B7Ch

Function

Stores the data bytes 4–7 of the payload information of an incoming RX message. The content of each register is cleared when the incoming matched message is either a remote frame (RTR = 1) or a data frame with DLC = 0.

Diagram

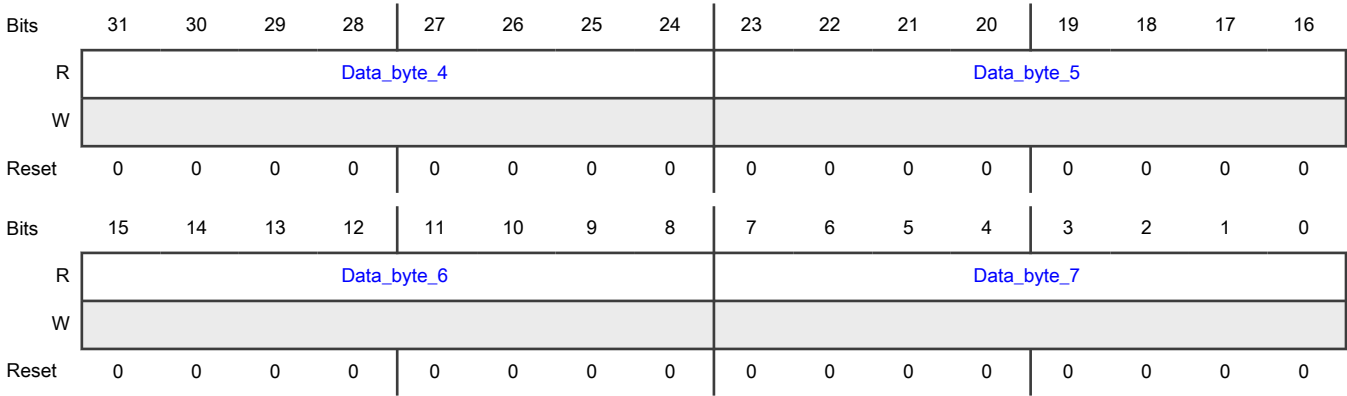

Fields

Field	Function
31-24 Data_byte_4	Data Byte 4 Contains received payload corresponding to data byte 4 in Pretended Networking mode
23-16 Data_byte_5	Data Byte 5 Contains received payload corresponding to data byte 5 in Pretended Networking mode
15-8 Data_byte_6	Data Byte 6 Contains received payload corresponding to data byte 6 in Pretended Networking mode
7-0 Data_byte_7	Data Byte 7 Contains received payload corresponding to data byte 7 in Pretended Networking mode

37.6.2.33 Enhanced CAN Bit Timing Prescalers (EPRS)

Offset

Register	Offset
EPRS	BF0h

Function


Defines the CAN bit timing prescalers for the nominal phase and data phase when CTRL2[BTE] = 1.

Used by the module only if CTRL2[BTE] = 1; otherwise, a write operation has no effect and all fields are read as zero.

This register can be written only in Freeze mode; the module blocks it in other modes.

Soft reset does not affect the contents of this register.

Diagram

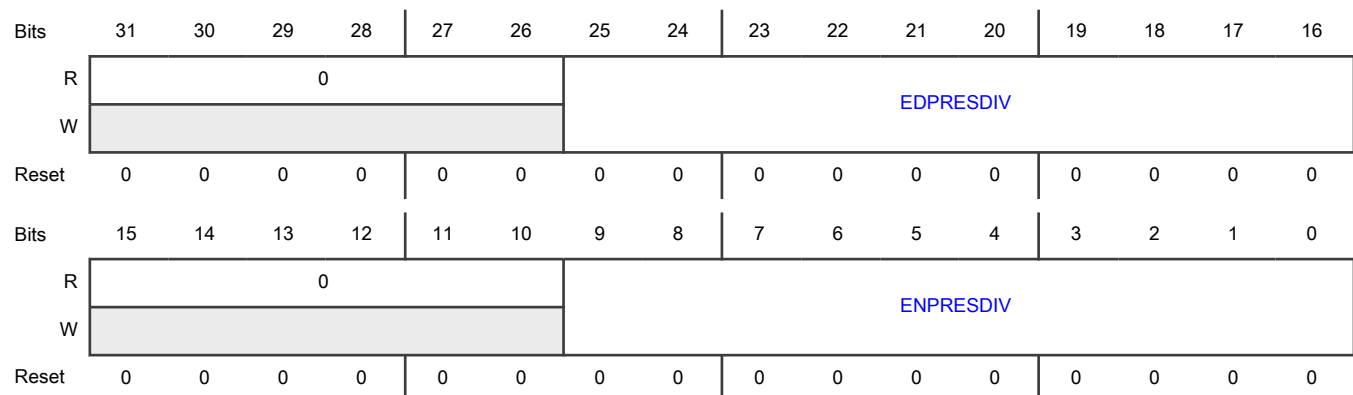

Fields

Field	Function
31-26 —	Reserved
25-16 EDPRESDIV	Extended Data Phase Prescaler Division Factor Defines the ratio between the PE clock frequency and the Sclock frequency in the data phase of a CAN FD message when CTRL2[BTE] = 1. The Sclock period defines the time quantum of the CAN FD protocol for the data bit rate. Sclock frequency = PE clock frequency ÷ (EDPRESDIV + 1) NOTE To minimize errors when processing FD frames, use the same value for this field and for EPRS[ENPRESDIV]. See the first note in CAN FD frames for details.
15-10 —	Reserved
9-0 ENPRESDIV	Extended Nominal Prescaler Division Factor Defines the ratio between the PE clock frequency and the Sclock frequency when CTRL2[BTE] = 1. Otherwise, it reads as 0 and a write operation has no effect. The Sclock period defines the time quantum of the CAN protocol in the nominal phase. For the reset value, the Sclock frequency is equal to the PE clock frequency (see Protocol timing). Sclock frequency = PE clock frequency ÷ (ENPRESDIV + 1)

37.6.2.34 Enhanced Nominal CAN Bit Timing (ENCBT)

Offset

Register	Offset
ENCBT	BF4h

Function


Provides an alternative way to store the CAN bit timing variables described in [Control 1 \(CTRL1\)](#) and [CAN Bit Timing \(CBT\)](#), to get higher CAN bit timing resolution.

This register is used by the module only if [CTRL2\[BTE\]](#) = 1. Otherwise, a write operation has no effect and all fields are read as zero.

Soft reset does not affect the contents of this register.

This register can be written only in Freeze mode; the module blocks it in other modes.

Diagram

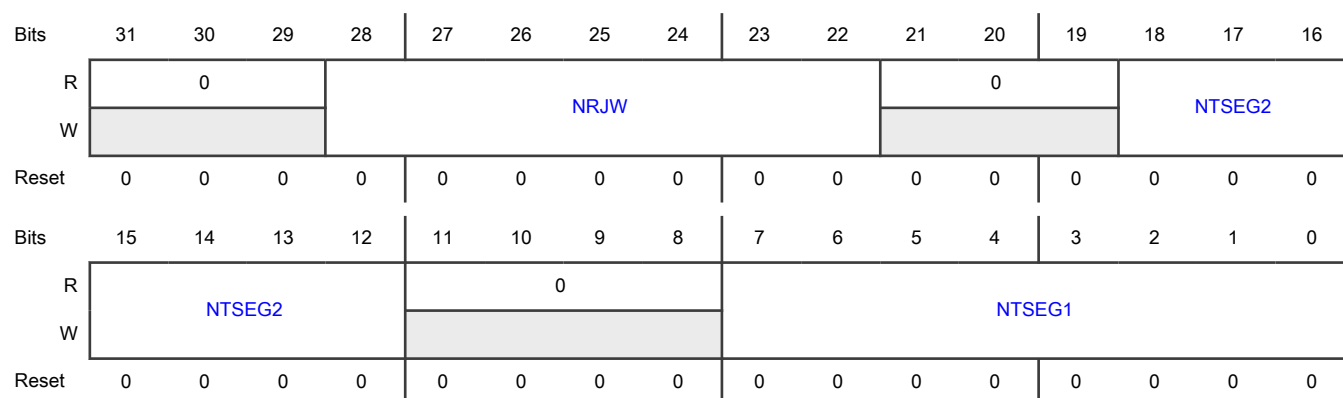

Fields

Field	Function
31-29 —	Reserved
28-22 NRJW	Nominal Resynchronization Jump Width Defines the maximum number of time quanta that one resynchronization can change a nominal bit time when CTRL2[BTE] = 1. Otherwise, it has no effect. One time quantum = one Sclock period Nominal Resync Jump Width = NRJW + 1
21-19 —	Reserved
18-12 NTSEG2	Nominal Time Segment 2 Defines the length of Time Segment 2 in the nominal bit time when CTRL2[BTE] = 1. Otherwise, it has no effect. Nominal Time Segment 2 = (NTSEG2 + 1) × Time Quanta One time quantum = one Sclock period
11-8 —	Reserved
7-0 NTSEG1	Nominal Time Segment 1 Defines the length of Time Segment 1 in the bit time when CTRL2[BTE] = 1. Otherwise, it has no effect. Nominal Time Segment 1 = (NTSEG1 + 1) × Time Quanta One time quantum = one Sclock period

37.6.2.35 Enhanced Data Phase CAN Bit Timing (EDCBT)

Offset

Register	Offset
EDCBT	BF8h

Function

Provides an alternative way to store the data phase CAN bit timing variables described in [CAN FD Bit Timing \(FDCBT\)](#) to achieve higher CAN bit timing resolution.

This register is used by the module only if [CTRL2\[BTE\]](#) = 1; otherwise, a write operation has no effect and all fields are read as zero.

Soft reset does not affect the contents of this register.

This register can be written only in Freeze mode; the module blocks it in other modes.


NOTE

Ensure that bit time settings and protocol engine tolerance are in compliance with the CAN Protocol standard (ISO 11898-1:2015).

NOTE

[DTSEG1](#) must be at least two time quanta.

Diagram

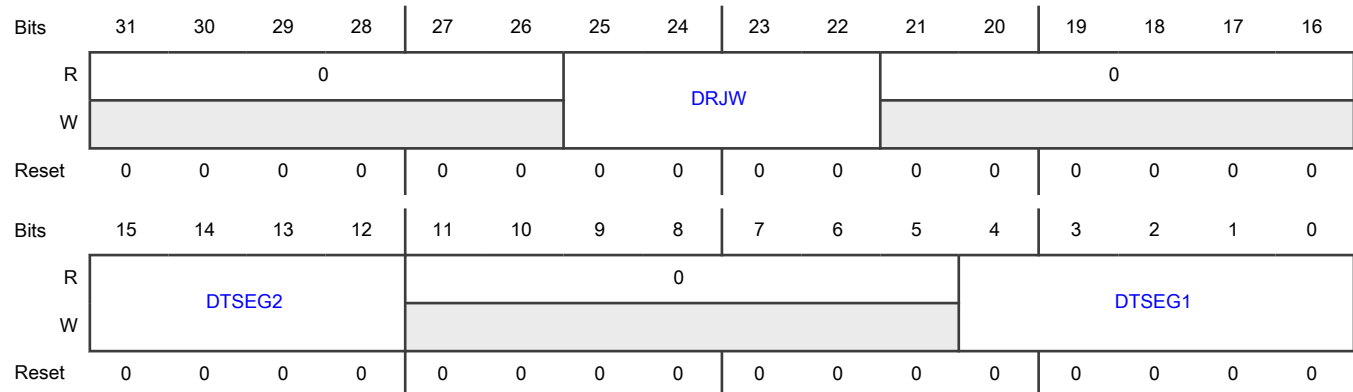

Fields

Field	Function
31-26 —	Reserved
25-22 DRJW	Data Phase Resynchronization Jump Width Defines the maximum number of time quanta that one resynchronization can change a data phase bit time when CTRL2[BTE] = 1. Otherwise, it has no effect.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	Data Phase Resync Jump Width = DRJW + 1.
21-16 —	Reserved
15-12 DTSEG2	Data Phase Time Segment 2 Defines the length of time segment 2 in the data phase bit time when CTRL2[BTE] = 1. Otherwise, it has no effect. Data Phase Time Segment 2 = (DTSEG2 + 1) × Time Quanta. One Time Quantum = one Sclock period.
11-5 —	Reserved
4-0 DTSEG1	Data Phase Segment 1 Defines the length of time segment 1 in the data phase bit time when CTRL2[BTE] = 1. Otherwise, it has no effect. Data Phase Time Segment 1 = (DTSEG1 + 1) × Time Quanta. One Time Quantum = one Sclock period.

37.6.2.36 Enhanced Transceiver Delay Compensation (ETDC)

Offset

Register	Offset
ETDC	BFCh


Function

Contains extended versions of [FDCTRL\[TDCOFF\]](#) and [FDCTRL\[TDCVAL\]](#). This register is used by the module only if [CTRL2\[BTE\]](#) = 1. Otherwise, a write operation has no effect and all fields are read as zero.

NOTE

See Transmitter delay compensation in the CAN Protocol standard (ISO 11898-1:2015) for details.

Diagram

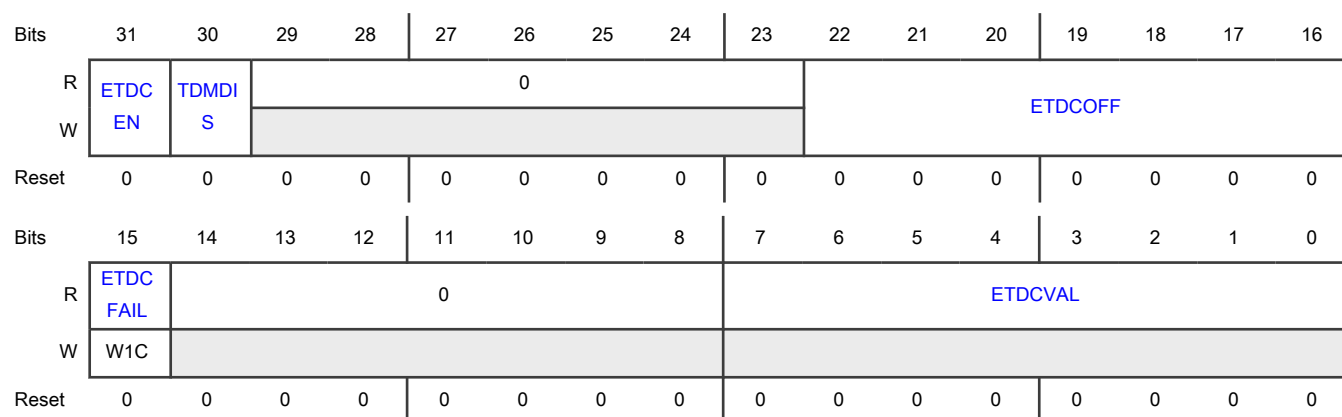

Fields

Field	Function
31 ETDCEN	Transceiver Delay Compensation Enable Enables the TDC feature. It can be written in Freeze mode only. NOTE See Transmitter delay compensation in the CAN Protocol standard (ISO 11898-1:2015) for details. NOTE TDC must be disabled when the Loop Back Mode is enabled. See CTRL1[LPB]. 0b - Disable 1b - Enable
30 TDMDIS	Transceiver Delay Measurement Disable Disables the transceiver delay measurement. When the TDC measurement is disabled, only ETDC[ETDCOFF] determines the secondary sample point position. If TCD measurement is enabled, the sum of the transceiver delay measurement plus the enhanced TDC offset determines the secondary sample point position. Soft reset does not affect this field. NOTE This bit can be enabled only if CTRL2[BTE] = 1. 0b - Enable 1b - Disable
29-23 —	Reserved
22-16	Enhanced Transceiver Delay Compensation Offset

Table continues on the next page...

Table continued from the previous page...

Field	Function
ETDCOFF	Contains the offset value to be added to the loop delay of the measured transceiver. This value defines the position of the delayed comparison point when bit rate switching is active. See Transceiver delay compensation for details on how the loop delay measurement is performed. This field can be written in Freeze mode only. Its value can be defined in protocol engine (PE) clock periods (CANCLK, see Protocol timing for more details). It must be smaller than the CAN bit duration in the data bit rate for proper operation. Do not write 0 to this field. NOTE If CTRL2[BTE] becomes 1 after a chip-level hard reset, this field is read as 1h.
15 ETDCFAL	Transceiver Delay Compensation Fail Indicates whether the transceiver delay compensation (TDC) mechanism is out of range. In this case, it is unable to compensate the loop delay of the transceiver and successfully compare the delayed received bits to the transmitted ones. (See Transceiver delay compensation.) This field becomes 0 the first time FlexCAN detects the out of range condition. 0b - In range 1b - Out of range
14-8 —	Reserved
7-0 ETDCVAL	Enhanced Transceiver Delay Compensation Value Contains ETDC[ETDCOFF] added to the measured value of the transceiver loop delay in the latest transmitted CAN FD frame, with BRS = 1. The module only updates this field when ETDC[ETDCEN] = 1. Soft reset affects this field. NOTE If ETDC[TDMDIS] = 1, this field stores ETDC[ETDCOFF] only.

37.6.2.37 CAN FD Control (FDCTRL)

Offset

Register	Offset
FDCTRL	C00h

Function

Contains control bits for CAN FD operation. It also defines the data size of message buffers allocated in different partitions of RAM (memory blocks) as described in [Table 245](#).

When an 8-byte payload is selected:

- Block R0 allocates MB0–MB31.
- Block R1 allocates MB32–MB63.

When a payload larger than eight bytes is selected, the maximum number of message buffers in a block is limited as described below.


Table 245. Number of message buffers

Payload size	Maximum number of message buffers per RAM block
8 bytes	32
16 bytes	21
32 bytes	12
64 bytes	7

One memory block fits exactly 32 message buffers with an 8-byte payload. For other possible payload sizes, empty memory may exist between the last message buffer in a block and the beginning of the next block. This empty memory corresponds to less than one message buffer, and must not be used.

Soft reset does not affect the contents of this register.

Diagram

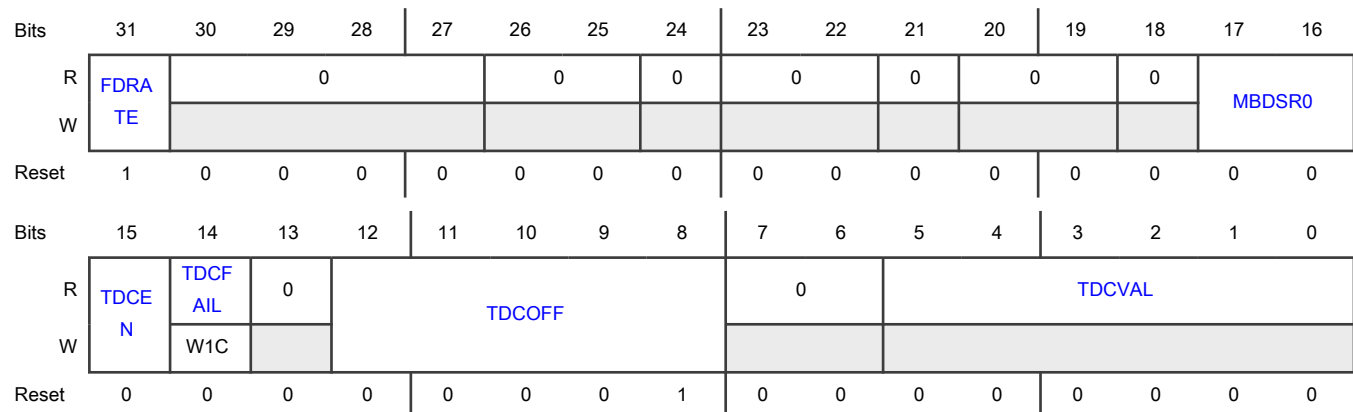

Fields

Field	Function
31 FDRATE	Bit Rate Switch Enable Enables the effect of the Bit Rate Switch (BRS bit) during the data phase of TX messages. When 1, if BRS = 1 in the TX message buffer, frames are transmitted with bit rate switching. When 0, frames are transmitted at a nominal rate, and the BRS bit in the TX MB has no effect. The CPU can write to this field at any time. However, its effect becomes active only under one of these conditions: • The CAN bus is in the Wait for Bus Idle state. • The CAN bus is in the Bus Idle state. • The CAN bus is in the Bus Off state.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	The current frame under reception or transmission reaches the interframe space. By writing 0 to FDCTRL[FDRATE], the CPU can force all bits in CAN FD messages to be transmitted at nominal bit rate. This transmission occurs regardless of the value in the BRS bit of the TX message buffers. 0b - Disable 1b - Enable
30-27 —	Reserved
26-25 —	Reserved
24 —	Reserved
23-22 —	Reserved
21 —	Reserved
20-19 —	Reserved
18 —	Reserved
17-16 MBDSR0	Message Buffer Data Size for Region 0 Selects the data size per message buffer for region R0 of message buffers allocated in RAM. This field can be written in Freeze mode only. 00b - 8 bytes 01b - 16 bytes 10b - 32 bytes 11b - 64 bytes
15 TDCEN	Transceiver Delay Compensation Enable Enables the TDC feature. It can be written in Freeze mode only. See Transmitter delay compensation in the CAN Protocol standard (ISO 11898-1:2015) for details. TDC must be disabled when Loopback mode is enabled (see CTRL1[LPB]).

Table continues on the next page...

Table continued from the previous page...

Field	Function
	NOTE If CTRL2[BTE] = 1, this field is read as 0 and a write operation has no effect. 0b - Disable 1b - Enable
14 TDCFAIL	Transceiver Delay Compensation Fail Indicates whether the Transceiver Delay Compensation (TDC) mechanism is out of range. In this case, the mechanism cannot compensate for the loop delay of the transceiver and successfully compare the delayed received bits to the transmitted ones (see Transceiver delay compensation). The first time that FlexCAN detects the out-of-range condition, this field becomes 1. NOTE If CTRL2[BTE] = 1, this field is read as 0 and a write operation has no effect. 0b - In range 1b - Out of range
13 —	Reserved
12-8 TDCOFF	Transceiver Delay Compensation Offset Contains the offset value to be added to the loop delay of the measured transceiver. This value defines the position of the delayed comparison point when bit rate switching is active. See Transceiver delay compensation for details about loop delay measurement. This field can be written in Freeze mode only. Its value can be defined in Protocol Engine Clock periods (CANCLK, see Protocol timing for more details). The value must be smaller than the CAN bit duration in the data bit rate for proper operation. NOTE If CTRL2[BTE] = 1, TDCOFF is read as 0 and a write operation has no effect. Do not write 0 to this field.
7-6 —	Reserved
5-0 TDCVAL	Transceiver Delay Compensation Value Contains the value of the transceiver loop delay measured from the transmitted EDL-to-R0 transition edge to the respective received one added to FDCTRL[TDCOFF]. This value is an integer multiple of the Protocol Engine Clock period (CANCLK). If CTRL2[BTE] = 1, this field is read as 0. See Protocol timing for details on the loop delay measurement.

37.6.2.38 CAN FD Bit Timing (FDCBT)

Offset

Register	Offset
FDCBT	C04h

Function

Stores the CAN bit timing variables used in the data phase of CAN FD messages when the [FDCTRL\[FDRATE\]](#) = 1, compatible with the CAN FD specification. Fields in this register define:

- The time quantum duration
- The number of time quanta per CAN bit
- The sample point position for the data bit rate portion of a CAN FD message with BRS = 1

Soft reset does not affect the contents of this register.

The sum of the Fast Propagation Segment (FPROPSEG) and Fast Phase Segment 1 (FPSEG1) must be at least two time quanta.

Ensure bit time settings and protocol engine tolerance are in compliance with the CAN Protocol standard (ISO 11898-1:2015).

NOTE

If [CTRL2\[BTE\]](#) = 1, this register is read as zero and a write operation has no effect.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0												0			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0							0					0			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-30 —	Reserved
29-20 FPRES DIV	Fast Prescaler Division Factor Defines the ratio between the PE clock frequency and the serial clock (Sclock) frequency in the data bit rate portion of a CAN FD message with BRS = 1.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	The Sclock period defines the time quantum of the CAN FD protocol for the data bit rate. This field can be written only in Freeze mode; the module blocks it in other modes. Sclock frequency = PE clock frequency ÷ (FPRES DIV + 1). NOTE To minimize errors when processing FD frames, use the same value for this field and for CTRL1[PRES DIV] or CBT[EPRES DIV]. See the first note in CAN FD frames for details.
19 —	Reserved
18-16 FRJW	Fast Resync Jump Width Defines the maximum number of time quanta that one resynchronization can change a bit time in the data bit rate portion of a CAN FD message with BRS = 1. This field can be written only in Freeze mode; the module blocks it in other modes. Resync Jump Width = FSJW + 1. One Time Quantum = one Sclock period.
15 —	Reserved
14-10 FPROPSEG	Fast Propagation Segment Defines the length of the propagation segment in the bit time in the data bit rate portion of a CAN FD message with BRS = 1. This field can be written only in Freeze mode; the module blocks it in other modes. Propagation Segment Time = FPROPSEG × Time Quanta. One Time Quantum = one Sclock period.
9-8 —	Reserved
7-5 FPSEG1	Fast Phase Segment 1 Defines the length of phase segment 1 in the bit time in the data bit rate portion of a CAN FD message with BRS = 1. This field can be written only in Freeze mode; the module blocks it in other modes. Phase Segment 1 = (FPSEG1 + 1) × Time Quanta. One Time Quantum = one Sclock period.
4-3 —	Reserved
2-0 FPSEG2	Fast Phase Segment 2 Defines the length of phase segment 2 in the data bit rate portion of a CAN FD message with BRS = 1. This field can be written only in Freeze mode; the module blocks it in other modes.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	Phase Segment 2 = (FPSEG2 + 1) × Time Quanta. One Time Quantum = one Sclck period.

37.6.2.39 CAN FD CRC (FDCRC)

Offset

Register	Offset
FDCRC	C08h

Function

Provides information about the cyclic redundancy check (CRC) of transmitted messages.

FlexCAN uses different CRC polynomials for different frame formats.

- The CRC_15 polynomial is used for all frames in CAN format.
- The CRC_17 polynomial is used for frames in CAN FD format with a DATA FIELD up to 16 bytes.
- The CRC_21 polynomial is used for frames in CAN FD format with a DATA FIELD longer than 16 bytes.

Each polynomial shown below results in a Hamming distance of 6. This register is updated at the same time that the TX Interrupt flag is set.

$$\text{CRC\_15} = \text{C599h: } (x^{15} + x^{14} + x^{10} + x^8 + x^7 + x^4 + x^3 + 1)$$

$$\text{CRC\_17} = \text{3685Bh: } (x^{17} + x^{16} + x^{14} + x^{13} + x^{11} + x^6 + x^4 + x^3 + x^1 + 1)$$


$$\text{CRC\_21} = \text{302899h: } (x^{21} + x^{20} + x^{13} + x^{11} + x^7 + x^4 + x^3 + 1)$$

Equation 36. CRC polynomial used on CAN frame

NOTE

See CRC sequence calculation in the CAN Protocol standard (ISO 11898-1:2015) for details.

Diagram

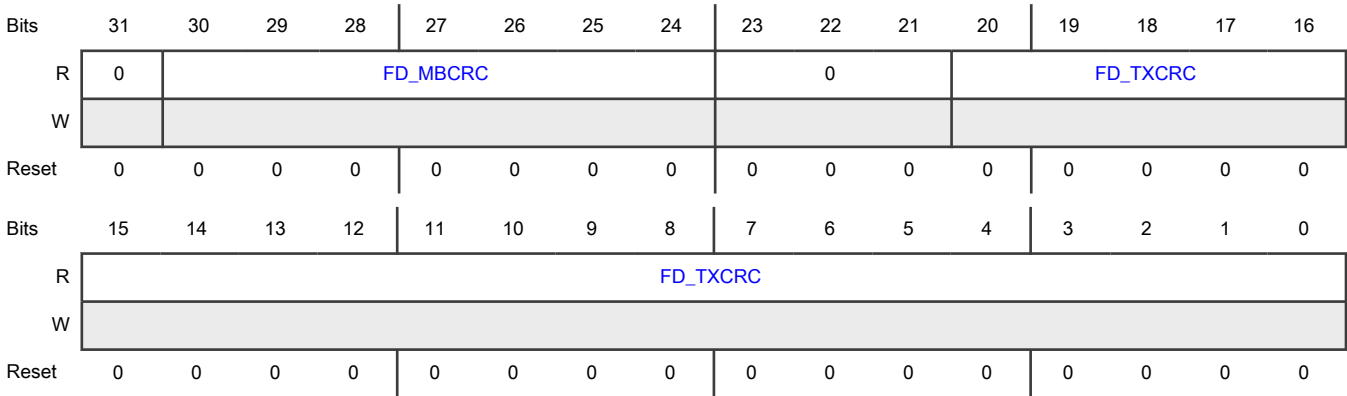

Fields

Field	Function
31 —	Reserved
30-24 FD_MBCRC	CRC Message Buffer Number for FD_TXCRC Indicates the number of the message buffer corresponding to the value in FDCRC[FD_TXCRC] , for both FD and non-FD frames. It reports the same information as in CRCR[MBCRC] .
23-21 —	Reserved
20-0 FD_TXCRC	Extended Transmitted CRC value Contains the CRC value calculated over the most recent transmitted message. Different CRC polynomials are used for different frame formats. For CRC_15 and CRC_17, the six most significant bits and the four most significant bits are reported as zeroes, respectively. For CRC_15, this field has the same content as Cyclic Redundancy Check (CRCR) .

37.6.2.40 Enhanced RX FIFO Control (ERFCR)

Offset

Register	Offset
ERFCR	C0Ch


Function

Defines the Enhanced RX FIFO configuration.

This register can be written only in Freeze mode.

Soft reset does not affect any of the contents of this register.

Diagram

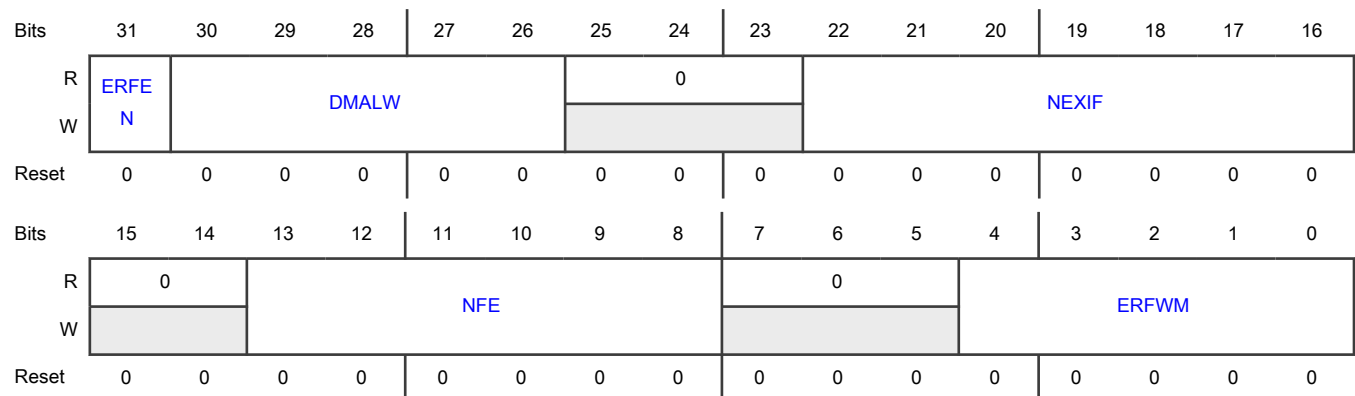

Fields

Field	Function																														
31 ERFEN	Enhanced RX FIFO enable Enables the Enhanced RX FIFO. NOTE If MCR[RFEN] = 1, do not write 1 to this field. 0b - Disable 1b - Enable																														
30-26 DMALW	DMA Last Word Defines the last DMA address for each Enhanced RX FIFO element. This table shows the number of elements and the last address for each Enhanced RX FIFO element according to the value of DMALW. <table><tr><th>DMALW</th><th>Number of 32-bit words transferred</th><th>Last FIFO address</th></tr><tr><td>0</td><td>1</td><td>2000h</td></tr><tr><td>1</td><td>2</td><td>2004h</td></tr><tr><td>2</td><td>3</td><td>2008h</td></tr><tr><td>3</td><td>4</td><td>200Ch</td></tr><tr><td>4</td><td>5</td><td>2010h</td></tr><tr><td>5</td><td>6</td><td>2014h</td></tr><tr><td>6</td><td>7</td><td>2018h</td></tr><tr><td>7</td><td>8</td><td>201Ch</td></tr><tr><td>8</td><td>9</td><td>2020h</td></tr></table>	DMALW	Number of 32-bit words transferred	Last FIFO address	0	1	2000h	1	2	2004h	2	3	2008h	3	4	200Ch	4	5	2010h	5	6	2014h	6	7	2018h	7	8	201Ch	8	9	2020h
DMALW	Number of 32-bit words transferred	Last FIFO address																													
0	1	2000h																													
1	2	2004h																													
2	3	2008h																													
3	4	200Ch																													
4	5	2010h																													
5	6	2014h																													
6	7	2018h																													
7	8	201Ch																													
8	9	2020h																													

Field	Function																																			
	DMALW		Number of 32-bit words transferred	Last FIFO address																																
	9		10	2024h																																
	10		11	2028h																																
	11		12	202Ch																																
	12		13	2030h																																
	13		14	2034h																																
	14		15	2038h																																
	15		16	203Ch																																
	16		17	2040h																																
	17		18	2044h																																
	18		19	2048h																																
NOTE Undefined DMALW values in the table are reserved and must not be used.																																				
25-23 —	Reserved																																			
22-16 NEXIF	Number of Extended ID Filter Elements Defines the number of extended ID filter elements used during the Enhanced RX FIFO matching process. The value of this field must be less than or equal to NFE + 1. The number of standard ID filter elements is 2 × (NFE - NEXIF + 1). This table shows the number of extended ID filters and standard ID filters available for Enhanced RX FIFO if all filter elements are used. <table><tr><td>NEXIF</td><td>NFE</td><td>Number of Extended ID filter elements</td><td>Number of Standard ID filter elements</td></tr><tr><td>0</td><td>15</td><td>0</td><td>32</td></tr><tr><td>1</td><td>15</td><td>1</td><td>30</td></tr><tr><td>2</td><td>15</td><td>2</td><td>28</td></tr><tr><td>3</td><td>15</td><td>3</td><td>26</td></tr><tr><td>4</td><td>15</td><td>4</td><td>24</td></tr><tr><td>5</td><td>15</td><td>5</td><td>22</td></tr><tr><td>6</td><td>15</td><td>6</td><td>20</td></tr></table>				NEXIF	NFE	Number of Extended ID filter elements	Number of Standard ID filter elements	0	15	0	32	1	15	1	30	2	15	2	28	3	15	3	26	4	15	4	24	5	15	5	22	6	15	6	20
NEXIF	NFE	Number of Extended ID filter elements	Number of Standard ID filter elements																																	
0	15	0	32																																	
1	15	1	30																																	
2	15	2	28																																	
3	15	3	26																																	
4	15	4	24																																	
5	15	5	22																																	
6	15	6	20																																	

Table continued from the previous page...

Field	Function			
	NEXIF	NFE	Number of Extended ID filter elements	Number of Standard ID filter elements
	7	15	7	18
	8	15	8	16
	9	15	9	14
	10	15	10	12
	11	15	11	10
	12	15	12	8
	13	15	13	6
	14	15	14	4
	15	15	15	2
	16	15	16	0
15-14 —	Reserved			
13-8 NFE	Number of Enhanced RX FIFO Filter Elements Defines the total number of filter elements used during the enhanced RX FIFO matching process according to the table.			
	NFE	Maximum number of extended ID filter elements (NEXIF = NFE + 1)	Maximum number of standard ID filter elements (NEXIF = 0)	
	0	1	2	
	1	2	4	
	2	3	6	
	3	4	8	
	4	5	10	
	5	6	12	
	6	7	14	
	7	8	16	
	8	9	18	
	9	10	20	
	10	11	22	

Table continues on the next page...

Table continued from the previous page...

Field	Function		
	NFE	Maximum number of extended ID filter elements (NEXIF = NFE + 1)	Maximum number of standard ID filter elements (NEXIF = 0)
	11	12	24
	12	13	26
	13	14	28
	14	15	30
	15	16	32
7-5 —	Reserved		
4-0 ERFWM	Enhanced RX FIFO Watermark Defines the minimum number of CAN messages stored in the Enhanced RX FIFO. When that number is reached, ERFSR[ERFWM] becomes 1. Minimum number of CAN messages = ERFWM + 1. NOTE If MCR[DMA] = 1, write 0h to this field.		

37.6.2.41 Enhanced RX FIFO Interrupt Enable (ERFIER)

Offset


Register	Offset
ERFIER	C10h

Function

Contains the interrupt enables for the Enhanced RX FIFO.

Soft reset does not affect this register.

Diagram

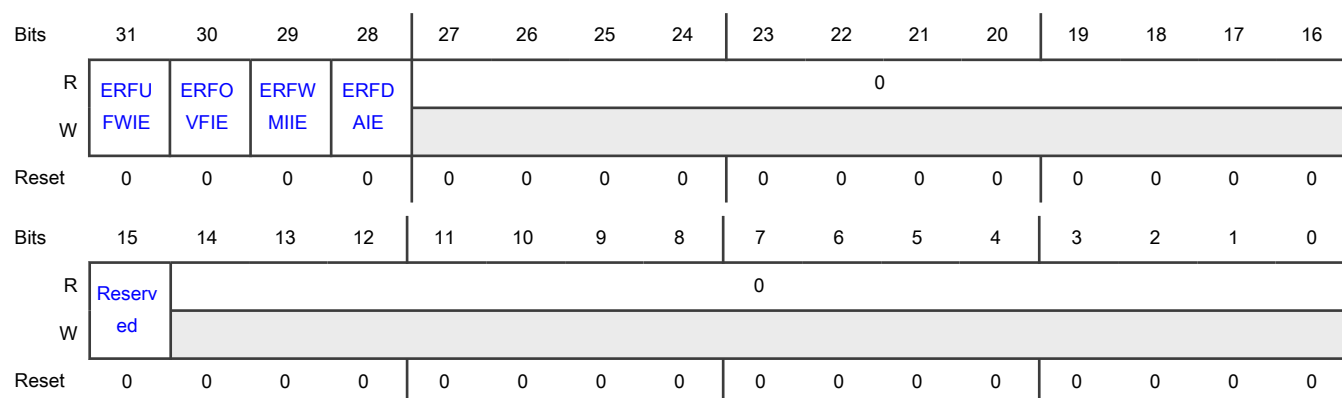

Fields

Field	Function
31 ERFUFWIE	Enhanced RX FIFO Underflow Interrupt Enable Enables interrupt for ERFSR[ERFUFW] . 0b - Disable 1b - Enable
30 ERFOVFIE	Enhanced RX FIFO Overflow Interrupt Enable Enables interrupt for ERFSR[ERFOVF] . 0b - Disable 1b - Enable
29 ERFWMIIE	Enhanced RX FIFO Watermark Indication Interrupt Enable Enables interrupt for ERFSR[ERFWMI] . 0b - Disable 1b - Enable
28 ERFDAIE	Enhanced RX FIFO Data Available Interrupt Enable Enables interrupt for ERFSR[ERFDA] . 0b - Disable 1b - Enable
27-16 —	Reserved
15 —	Reserved
14-0 —	Reserved

37.6.2.42 Enhanced RX FIFO Status (ERFSR)

Offset

Register	Offset
ERFSR	C14h

Function

Contains the status fields of the Enhanced RX FIFO including error indications and a clear FIFO field.

Soft reset does not affect this register.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	ERFU FW	ERFO VF	ERFW MI	ERFD A	0	0										ERFE ERFF
W	W1C	W1C	W1C	W1C	ERFC LR											
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserv ed	0										ERFEL				
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31 ERFUFW	Enhanced RX FIFO Underflow Flag Indicates whether an underflow condition occurred in the enhanced RX FIFO. If ERFIER[ERFUFWIE] = 1, this field generates an interrupt. 0b - No such occurrence 1b - Underflow
30 ERFOVF	Enhanced RX FIFO Overflow Flag Indicates whether an overflow condition occurred in the Enhanced RX FIFO. If ERFIER[ERFOVFIE] = 1, this field generates an interrupt. 0b - No such occurrence 1b - Overflow
29	Enhanced RX FIFO Watermark Indication Flag

Table continues on the next page...

Table continued from the previous page...

Field	Function
ERFWMI	Indicates whether the number of messages available in the Enhanced RX FIFO is greater than the watermark defined in ERFCR[ERFWM]. If ERFIER[ERFWMIE] = 1, this field generates an interrupt. 0b - No such occurrence 1b - Number of messages in FIFO is greater than the watermark
28 ERFDA	Enhanced RX FIFO Data Available Flag Indicates whether there is at least one message stored in the ERX FIFO. If ERFIER[ERFDAIE] = 1, this field generates an interrupt. 0b - No such occurrence 1b - At least one message stored in Enhanced RX FIFO
27 ERFCLR	Enhanced RX FIFO Clear Writing 1 to this field during Freeze mode resets the internal FIFO pointers, but the FIFO content stored in RAM is not changed. Writing to this field outside Freeze mode, or writing 0 to this field, has no effect. 0b - No effect 1b - Clear enhanced RX FIFO content
26-18 —	Reserved
17 ERFE	Enhanced RX FIFO Empty Flag Indicates whether Enhanced RX FIFO is empty. 0b - Not empty 1b - Empty
16 ERFF	Enhanced RX FIFO Full Flag Indicates whether enhanced RX FIFO is full. 0b - Not full 1b - Full
15 —	Reserved
14-6 —	Reserved
5-0	Enhanced RX FIFO Elements

Table continues on the next page...

Table continued from the previous page...

Field	Function
ERFEL	Indicates the number of CAN messages stored in the Enhanced RX FIFO.

37.6.2.43 Enhanced RX FIFO Filter Element (ERFFEL0 - ERFFEL31)

Offset

For n = 0 to 31:

Register	Offset
ERFFELn	3000h + (n × 4h)


Function

Stores the filter elements of the Enhanced RX FIFO.

For standard ID filtering, each ERFFEL register stores one filter element. For extended ID filtering, each pair of ERFFEL registers stores one filter element.

ERFFEL registers can be written only in Freeze mode; otherwise, the module blocks them. Reset does not affect these registers. They are located in RAM and must be explicitly initialized prior to any reception.

Diagram

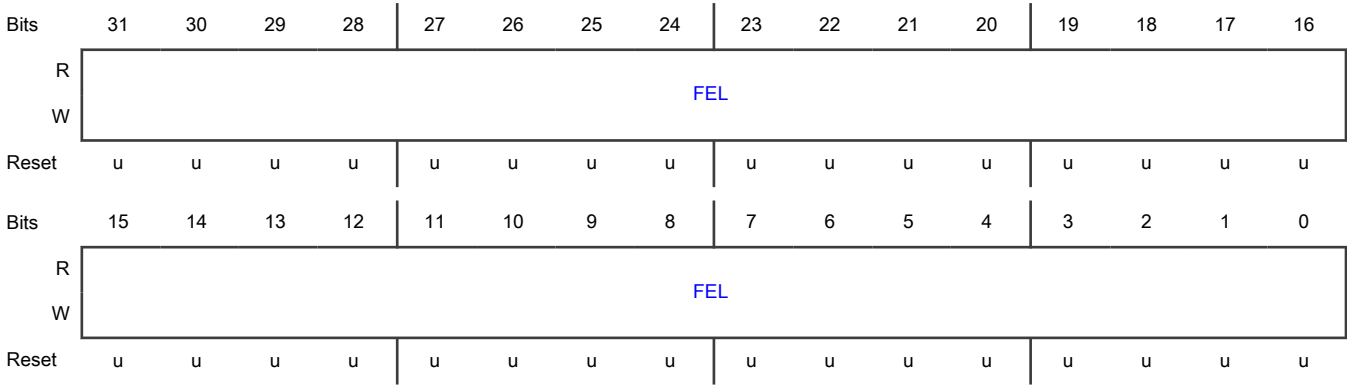

Fields

Field	Function
31-0	Filter Element Bits
FEL	Stores filter elements. Each filter element is used during the match process. If the matching criteria are met, a message is stored in the Enhanced RX FIFO.

37.6.3 Message buffer structure

The message buffer structure used by FlexCAN is represented in the following figure. Both extended (29-bit identifier) and standard (11-bit identifier) frames used in the CAN specification (Version 2.0 Part B) are represented. Each individual message

buffer is 16, 24, 40, or 72 bytes, depending on the quantity of data bytes allocated for the message payload: 8, 16, 32, or 64 data bytes, respectively.

The memory area 80h–27Fh is used by the message buffers. When CAN FD is enabled, the exact address for each message buffer depends on the size of its payload. See [FlexCAN memory partition for CAN FD](#).

Table 246. Message buffer structure example with 64-byte payload

31		30		29		28		27		24		23		22		21		20		19		18		17		16		15		8		7		0	
0h	EDL	BRS	ESI			CODE		SRR	IDE	RTR	DLC				TIMESTAMP																				
4h	PRIO			ID (standard/extended)										ID (extended)																					
8h	Data byte 0						Data byte 1						Data byte 2						Data byte 3																
Ch	Data byte 4						Data byte 5						Data byte 6						Data byte 7																
10h	Data byte 8						Data byte 9						Data byte 10						Data byte 11																
14h	Data byte 12						Data byte 13						Data byte 14						Data byte 15																
18h	Data byte 16						Data byte 17						Data byte 18						Data byte 19																
1Ch	Data byte 20						Data byte 21						Data byte 22						Data byte 23																
20h	Data byte 24						Data byte 25						Data byte 26						Data byte 27																
24h	Data byte 28						Data byte 29						Data byte 30						Data byte 31																
28h	Data byte 32						Data byte 33						Data byte 34						Data byte 35																
2Ch	Data byte 36						Data byte 37						Data byte 38						Data byte 39																
30h	Data byte 40						Data byte 41						Data byte 42						Data byte 43																
34h	Data byte 44						Data byte 45						Data byte 46						Data byte 47																
38h	Data byte 48						Data byte 49						Data byte 50						Data byte 51																
3Ch	Data byte 52						Data byte 53						Data byte 54						Data byte 55																
40h	Data byte 56						Data byte 57						Data byte 58						Data byte 59																
44h	Data byte 60						Data byte 61						Data byte 62						Data byte 63																
			= Unimplemented or reserved																																

Table 247. Field descriptions

Mnemonic	Field	Description
EDL	Extended Data Length	Distinguishes between CAN format and CAN FD format frames. EDL must not be 1 for message buffers configured to RANSWER with code field 1010b (see Table 248).
BRS	Bit Rate Switch	Defines whether the bit rate is switched inside a CAN FD format frame.
ESI	Error State Indicator	Indicates whether the transmitting node is error-active or error-passive.
CODE	Message Buffer Code	Can be accessed (read or write) by the CPU and by the FlexCAN module itself, as part of the message buffer matching and arbitration process. The encoding is shown in Table 248 and Table 249 . See Functional description .

Table 248. Message buffer code for RX buffers

CODE description	RX code BEFORE RX new frame	SRV ¹	RX code AFTER successful reception ²	RRS ³	Comment
0000b: INACTIVE. Message buffer is not active.	INACTIVE	—	—	—	Message buffer does not participate in the matching process.
0100b: EMPTY. Message buffer is active and empty.	EMPTY	—	FULL	—	When a frame is received successfully (after Move-in), CODE is automatically updated to FULL.
0010b: FULL. Message buffer is full.	FULL	Yes	FULL	—	The act of reading the Control and Status word followed by unlocking the message buffer (SRV) does not make CODE return to EMPTY. It remains FULL. If a new frame is moved to the message buffer after the message buffer is serviced, the code remains FULL. See Matching process for matching details related to FULL code.
		No	OVERRUN	—	If the message buffer is FULL and a new frame is moved to this message buffer before the CPU services it, CODE is automatically updated to OVERRUN. See Matching process for details about overrun behavior.
0110b: OVERRUN. Message buffer is being overwritten into a full buffer.	OVERRUN	Yes	FULL	—	If CODE indicates OVERRUN and the CPU has serviced the message buffer, when a new frame is moved to the message buffer, CODE returns to FULL.
		No	OVERRUN	—	If CODE already indicates OVERRUN, and another new frame must be moved, the message buffer is overwritten

Table continues on the next page...

Table 248. Message buffer code for RX buffers (continued)

CODE description	RX code BEFORE RX new frame	SRV ¹	RX code AFTER successful reception ²	RRS ³	Comment
					again, and CODE remains OVERRUN. See Matching process for details about overrun behavior.
1010b: RANSWER ⁴ . A frame was configured to recognize a Remote Request frame and transmit a Response frame in return. ⁵	RANSWER	—	TANSWER (1110b)	0	A Remote Answer was configured to recognize a Remote Request frame received. After that, a message buffer is set to transmit a response frame. CODE is automatically changed to TANSWER (1110b). See Matching process for details. If CTRL2[RRS] = 0, transmit a response frame when a remote request frame with the same ID is received.
		—	—	1	This code is ignored during matching and arbitration process. See Matching process for details.
CODE[0] = 1: BUSY. FlexCAN is updating the contents of the message buffer. The CPU must not access the message buffer.	BUSY ⁶	—	FULL	—	Indicates that the message buffer is being updated. It automatically becomes 0 and does not interfere with the next CODE.
		—	OVERRUN	—	

1. SRV: Serviced message buffer. Message buffer was read and unlocked by reading TIMER or another message buffer.

2. A frame is considered a successful reception after the frame is moved to a message buffer (move-in process). See [Move-in](#).

3. Remote Request Stored field. See [Control 2 \(CTRL2\)](#).

4. Code 1010b is not considered TX and a message buffer with this code should not be aborted.

5. Code 1010b must be used in message buffers configured in CAN FD format, with EDL = 1.

6. For TX message buffers, the BUSY bit should be ignored upon read, except when MCR[AEN] = 1. If this field is 1, the corresponding message buffer does not participate in the matching process.

Table 249. Message buffer code for TX buffers

CODE Description	TX Code BEFORE TX frame	MB RTR	TX Code AFTER successful transmission	Comment
1000b: INACTIVE. Message buffer is not active.	INACTIVE	—	—	Message buffer does not participate in arbitration process.
1001b: ABORT. Message buffer is aborted.	ABORT	—	—	Message buffer does not participate in arbitration process.
1100b: DATA. Message buffer is a TX data frame (MB RTR must be 0).	DATA	0	INACTIVE	Transmit data frame unconditionally once. After transmission, the message buffer automatically returns to the INACTIVE state.
1100b: REMOTE. Message buffer is a Transmit Remote Request frame (MB RTR must be 1).	REMOTE	1	EMPTY	Transmit remote request frame unconditionally once. After transmission, the message buffer automatically becomes an RX Empty message buffer with the same ID.
1110b: TANSWER. Message buffer is a Transmit Response frame from an incoming Remote Request frame.	TANSWER	—	RANSWER	This intermediate code is automatically written to the message buffer by the CHI as a result of a match to a Remote Request frame. The Remote Response frame is transmitted unconditionally once, then the code automatically returns to RANSWER (1010b). The CPU can also write this code with the same effect. The Remote Response frame can be a data frame or another remote request frame, depending on the value of RTR. See Matching process and Arbitration process for details.

Table 250. RX and TX message buffer field descriptions

Mnemonic	Field	Description
SRR	Substitute Remote Request	Fixed recessive bit, used only in extended format. Write 1 to SRR for transmission (TX Buffers). SRR is stored with the value received on the CAN

Table continues on the next page...

Table 250. RX and TX message buffer field descriptions (continued)

Mnemonic	Field	Description
		bus for RX receiving buffers. It can be received as either recessive or dominant. If FlexCAN receives this bit as dominant, it is interpreted as an arbitration loss. 1: Recessive value is compulsory for transmission in extended format frames. 0: Dominant is not a valid value for transmission in extended format frames.
IDE	ID Extended Bit	Identifies whether the frame format is standard or extended. 1: Frame format is extended 0: Frame format is standard
RTR	Remote Transmission Request	Affects the behavior of remote frames and is part of the reception filter. See Table 248 , Table 249 , and CTRL2[RRS] . If FlexCAN transmits this field as 1 (recessive) and receives it as 0 (dominant), it is interpreted as an arbitration loss. If this field is transmitted as 0 (dominant) and it is received as 1 (recessive), FlexCAN treats it as a bit error. If the value received matches the value transmitted, it is considered a successful bit transmission. 1: If message buffer is TX, indicates that the current message buffer may have a Remote Request frame to be transmitted. If the message buffer is RX, incoming remote request frames may be stored. 0: Indicates that the current message buffer has a Data frame to be transmitted. In an RX message buffer, it may be considered in matching processes. NOTE When configuring CAN FD frames, this field must be 0.
DLC	Data Length Code	Indicates the length (in bytes) of the RX or TX data, which is located in offset 8h–Fh of the message buffer space (see Table 246). In reception, this field is written by FlexCAN, copied from the DLC field of the received frame. In transmission, this field is written by the CPU and corresponds to the DLC field value of the frame to be transmitted. When RTR = 1, the frame to be transmitted is a remote frame and does not include the data field, regardless of the DLC field (see Table 251).
TIMESTAMP	Free-Running Counter Timestamp	Provides a copy of the Free-Running Timer, captured for TX and RX frames when the beginning of the Identifier field appears on the CAN bus.
PRIO	Local priority	Used only when MCR[LPRIOEN] = 1, and only makes sense for transmit message buffers. These bits are not transmitted. They are appended to the regular ID to define the transmission priority. See Arbitration process .
ID	Frame Identifier	In standard frame format, only the 11 most significant bits (28 to 18) are used for frame identification in both receive and transmit cases. The 18 least significant bits are ignored. In extended frame format, all bits are used for frame identification in both receive and transmit cases.

Table continues on the next page...

Table 250. RX and TX message buffer field descriptions (continued)

Mnemonic	Field	Description
DATA BYTE 0–63	Data Field	Up to 64 bytes can be used for a data frame, depending on the size of payload selected for the message buffers. For RX frames, the data is stored as it is received from the CAN bus. DATA BYTE (n) is valid only if n is less than DLC, as shown in Table 251 .

Table 251. DATA BYTE validity

DLC	Valid data bytes
0	None
1	DATA BYTE 0
2	DATA BYTE 0–1
3	DATA BYTE 0–2
4	DATA BYTE 0–3
5	DATA BYTE 0–4
6	DATA BYTE 0–5
7	DATA BYTE 0–6
8	DATA BYTE 0–7
9	DATA BYTE 0–11
10	DATA BYTE 0–15
11	DATA BYTE 0–19
12	DATA BYTE 0–23
13	DATA BYTE 0–31
14	DATA BYTE 0–47
15	DATA BYTE 0–63

37.6.4 FlexCAN memory partition for CAN FD

When CAN FD is enabled, FlexCAN RAM can be partitioned into blocks of 512 bytes each. Each block can accommodate a number of message buffers depending on the configuration provided by [FDCTRL\[MBDSR \$n\$ \]](#) as shown in [Table 252](#).

Table 252. RAM partition

RAM block	Number of MBs with 8 bytes (default range)	Size control field in FDCTRL	Number of MBs of different sizes, per block
0	0 to 31	MBDSR0	MBDSR0 = 00, 32 MBs with 8-byte payload MBDSR0 = 01, 21 MBs with 16-byte payload MBDSR0 = 10, 12 MBs with 32-byte payload MBDSR0 = 11, 7 MBs with 64-byte payload

Payload sizes of 16, 32, or 64 bytes may be configured in some or all of RAM blocks. In those cases, the total number of MBs and their respective number order may differ from the default configuration of 8 bytes. Consider an example where:

- Block0 is configured to an 8-byte payload
- Block1 is configured to a 16-byte payload

In this case, [Table 253](#) indicates how the message buffers are arranged in RAM.

Table 253. RAM partition example

RAM block	Payload size	Number of MBs in the RAM block	Message buffer range
0	FDCTRL[MBDSR0] = 00, 8-byte payload	32	0 to 31

37.6.5 FlexCAN message buffer memory map

The FlexCAN memory buffers are allocated in memory according to the tables below.

Table 254. 8-byte message buffers

Address offset (hex)	MBDSR = b00 8-byte payload
0080	MB0
0090	MB1
00A0	MB2
00B0	MB3
00C0	MB4
00D0	MB5
00E0	MB6
00F0	MB7
0100	MB8
0110	MB9
0120	MB10
0130	MB11
0140	MB12
0150	MB13
0160	MB14
0170	MB15
0180	MB16
0190	MB17
01A0	MB18

Table continues on the next page...

Table 254. 8-byte message buffers (continued)

Address offset (hex)	MBDSR = b00 8-byte payload
01B0	MB19
01C0	MB20
01D0	MB21
01E0	MB22
01F0	MB23
0200	MB24
0210	MB25
0220	MB26
0230	MB27
0240	MB28
0250	MB29
0260	MB30
0270	MB31

Table 255. 16-byte message buffers

Address offset (hex)	MBDSR = b01 16-byte payload
0080	MB0
0098	MB1
00B0	MB2
00C8	MB3
00E0	MB4
00F8	MB5
0110	MB6
0128	MB7
0140	MB8
0158	MB9
0170	MB10
0188	MB11
01A0	MB12
01B8	MB13

Table continues on the next page...

Table 255. 16-byte message buffers (continued)

Address offset (hex)	MBDSR = b01 16-byte payload
01D0	MB14
01E8	MB15
0200	MB16
0218	MB17
0230	MB18
0248	MB19
0260	MB20

Table 256. 32-byte message buffers

Address offset (hex)	MBDSR = b10 32-byte payload
0080	MB0
00A8	MB1
00D0	MB2
00F8	MB3
0120	MB4
0148	MB5
0170	MB6
0198	MB7
01C0	MB8
01E8	MB9
0210	MB10
0238	MB11

Table 257. 64-byte message buffers

Address offset (hex)	MBDSR = b11 64-byte payload
0080	MB0
00C8	MB1
0110	MB2
0158	MB3

Table continues on the next page...

Table 257. 64-byte message buffers (continued)

Address offset (hex)	MBDSR = b11 64-byte payload
01A0	MB4
01E8	MB5
0230	MB6

37.6.6 Legacy RX FIFO structure

When **MCR[RFEN]** = 1, the memory area 80h–DCh (which is normally occupied by MBs 0–5) is used by the reception Legacy RX FIFO engine.

The region 80h–8Ch contains the output of the Legacy RX FIFO, which the CPU must read as a message buffer. This output contains the oldest message that has been received but not yet read. The region 90h–DCh is reserved for internal use of the Legacy RX FIFO engine.

An additional memory area, which starts at E0h and may extend up to 2DCh (normally occupied by MBs 6–37) depending on the value of **CTRL2[RFFN]**, contains the ID filter table (configurable from 8 to 128 table elements) that specifies filtering criteria for accepting frames into the Legacy RX FIFO.

Out of reset, the ID filter table flexible memory area defaults to E0h and extends only to FCh, which corresponds to MBs 6 to 7 for RFFN = 0, for backward compatibility with previous versions of FlexCAN.

The following shows the Legacy RX FIFO data structure.

Table 258. Legacy RX FIFO structure

31		28		24		23		22		21		20		19		18		17		16		15		8		7		0		
80h	IDHIT						SRR	IDE	RTR	DLC						TIMESTAMP														
84h		ID standard												ID extended																
88h	Data byte 0						Data byte 1												Data byte 2						Data byte 3					
8Ch	Data byte 4						Data byte 5												Data byte 6						Data byte 7					
90h–DCh	Reserved																													
E0h	ID filter table element 0																													
E4h	ID filter table element 1																													
E8h–2D4h	ID filter table elements 2 to 125																													
2D8h	ID filter table element 126																													
2DCh	ID filter table element 127																													
		= Unimplemented or reserved																												

NOTE

Due to the limitation of the maximum number of MBs, the additional memory area starting at E0h and depending on the value of **CTRL2[RFFN]** can only extend up to 270h (usually occupied by MB 6-31), which contains the ID filter table (configurable from 8 to 104 table elements).

Each ID filter table element occupies an entire 32-bit word. One, two, or four Identifier Acceptance Filters (IDAFs) can compound each element, depending on [MCR\[IDAM\]](#). The following tables show the IDAF indexing.

[Table 259](#) shows the three different formats of the ID table elements. All elements of the table must have the same format. See [Legacy RX FIFO](#) for more information.

Table 259. ID table structure

Format	31	30	29	24	23	16	15	14	13	8	7	1	0	
A	RTR	IDE	RXIDA (standard = 29–19, extended = 29–1)											
B	RTR	IDE	RXIDB_0 (standard = 29–19, extended = 29–16)					RTR	IDE	RXIDB_1 (standard = 13–3, extended = 13–0)				
C	RXIDC_0 (std and ext = 31–24)					RXIDC_1 (std and ext = 23–16)				RXIDC_2 (std and ext = 15–8)				RXIDC_3 (std and ext = 7–0)
			= Unimplemented or Reserved											

Table 260. Field descriptions

Mnemonic	Field	Description
RTR	Remote Frame	Specifies whether remote frames are accepted into the Legacy FIFO if they match the target ID. 1: Remote frames can be accepted and data frames are rejected. 0: Remote frames are rejected and data frames can be accepted.
IDE	Extended Frame	Specifies whether extended or standard frames are accepted into the Legacy FIFO if they match the target ID. 1: Extended frames can be accepted and standard frames are rejected. 0: Extended frames are rejected and standard frames can be accepted.
RXIDA	RX Frame Identifier (Format A)	Specifies an ID to be used as acceptance criteria for the Legacy FIFO. In the standard frame format, only the 11 most significant bits (29 to 19) are used for frame identification. In the extended frame format, all bits are used.
RXIDB_0, RXIDB_1	RX Frame Identifier (Format B)	Specifies an ID to be used as acceptance criteria for the Legacy FIFO. In the standard frame format, the 11 most significant bits (a full standard ID) (29 to 19 and 13 to 3) are used for frame identification. In the extended frame format, all 14 bits of the field are compared to the 14 most significant bits of the received ID.
RXIDC_0, RXIDC_1, RXIDC_2, RXIDC_3	RX Frame Identifier (Format C)	Specifies an ID to be used as acceptance criteria for the Legacy FIFO. In both standard and extended frame formats, all 8 bits of the field are compared to the 8 most significant bits of the received ID.
IDHIT	Identifier Acceptance Filter Hit Indicator	Indicates which identifier acceptance filter the received message in the output of the Legacy RX FIFO hit. See Legacy RX FIFO for more information.

37.6.7 Enhanced RX FIFO structure

When [ERFCR\[ERFEN\]](#) = 1, the Enhanced RX FIFO is enabled. The region 2000h–2048h contains the output of the Enhanced RX FIFO, which the CPU must read as a message buffer. This output contains the oldest message that has been received but not yet read.

Table 261. Enhanced RX FIFO structure

	31	30	29	28			24	23	22	21	20	19	18	17	16	15						8	7	6					0
2000h	EDL	BRS	ESI	Reserved				SRR	IDE	RTR	DLC					TIMESTAMP LEGACY													
2004h	Reserved			ID (standard/extended)										ID (extended)															
2008h	Data byte 0							Data byte 1							Data byte 2				Data byte 3										
200Ch	Data byte 4							Data byte 5							Data byte 6				Data byte 7										
2010h	Data byte 8							Data byte 9							Data byte 10				Data byte 11										
2014h	Data byte 12							Data byte 13							Data byte 14				Data byte 15										
2018h	Data byte 16							Data byte 17							Data byte 18				Data byte 19										
201Ch	Data byte 20							Data byte 21							Data byte 22				Data byte 23										
2020h	Data byte 24							Data byte 25							Data byte 26				Data byte 27										
2024h	Data byte 28							Data byte 29							Data byte 30				Data byte 31										
2028h	Data byte 32							Data byte 33							Data byte 34				Data byte 35										
202Ch	Data byte 36							Data byte 37							Data byte 38				Data byte 39										
2030h	Data byte 40							Data byte 41							Data byte 42				Data byte 43										
2034h	Data byte 44							Data byte 45							Data byte 46				Data byte 47										
2038h	Data byte 48							Data byte 49							Data byte 50				Data byte 51										
203Ch	Data byte 52							Data byte 53							Data byte 54				Data byte 55										
2040h	Data byte 56							Data byte 57							Data byte 58				Data byte 59										
2044h	Data byte 60							Data byte 61							Data byte 62				Data byte 63										
IH_OFF	Reserved																						ID HIT						
204Ch	11 Enhanced FIFO Elements (Reserved)																												
...																													
238Ch																													

NOTE

ID HIT offset change dynamically according to data length code (DLC) as shown in [Table 262](#).

Table 262. ID HIT offset

Data Length Code (DLC)	ID HIT offset (IH_OFF)
0	2008h
1–4	200Ch

Table continues on the next page...

Table 262. ID HIT offset (continued)

Data Length Code (DLC)	ID HIT offset (IH_OFF)
5–8	2010h
9	2014h
10	2018h
11	201Ch
12	2020h
13	2028h
14	2038h
15	2048h

Table 263. Field descriptions

Mnemonic	Field	Description
EDL	Extended Data Length	Distinguishes between classical CAN format and CAN FD format frames. 0: Classical CAN frame format 1: CAN FD frame format
BRS	Bit Rate Switch	Defines whether the bit rate is switched inside a CAN FD format frame. 0: Bit rate is not switched in a CAN FD frame. 1: Bit rate is switched in a CAN FD frame.
ESI	Error State Indicator	Indicates whether the transmitting node is error-active or error-passive. This field is meaningful only if EDL = 1. 0: Error-active 1: Error-passive
SRR	Substitute Remote Request	Fixed recessive bit, used only in extended format. Transmitting nodes always send it as recessive and receiving nodes can receive it as either recessive or dominant. If FlexCAN receives this bit as dominant, it is interpreted as an arbitration loss.
IDE	ID Extended Bit	Identifies whether the frame format is standard or extended. 0: Standard 1: Extended
RTR	Remote Frame	Identifies whether the current frame is a data frame or a remote request. 0: Data frame 1: Remote request
DLC	Data Length Code	Defines the number of bytes in the data field of a CAN frame (Data byte 0 to Data byte 63). When RTR = 1, the frame is a remote request and does

Table continues on the next page...

Table 263. Field descriptions (continued)

Mnemonic	Field	Description
		not include the data field, regardless of the DLC field. See Table 251 for more details.
TIMESTAMP	16-bit Timestamp	Provides a copy of the Free-Running Timer, captured during the CAN frame.
ID	Frame Identifier	In base frame format, only the 11 most significant bits are used for frame identification. The 18 least significant bits are ignored. In extended frame format, all bits are used for frame identification.
DATA BYTE 0–63	Data Field	Up to 64 bytes can be stored in the data field.
IDHIT	Identifier Acceptance Filter Hit Indicator	Indicates which Enhanced RX FIFO Filter Element (ERFFEL0 - ERFFEL31) the received message in the output of the Enhanced RX FIFO hit. For each filter region, standard-ID filter space, and extended-ID filter space, there is an independent index starting from zero. Table 264 shows how FlexCAN writes IDHIT according to each filter element.

Table 264. IDHIT for Enhanced RX FIFO

Enhanced RX FIFO filter element - ERFFEL	IDHIT value	Filter element type
ERFFEL0	0	Extended-ID
ERFFEL1	1	Extended-ID
.	.	Extended-ID
.	.	
.	.	
ERFFEL(m-1)	m-1	Extended-ID
ERFFEL(m)	0	Standard-ID
ERFFEL(m+1)	1	Standard-ID
.	.	Standard-ID
.	.	
.	.	
ERFFEL(2n-m+1)	2x(n-m)+1	Standard-ID

NOTE

Where m = NEXIF and n = NFE. If NEXIF = 0, only standard-ID filter elements exist. If NEXIF > NFE, only extended-ID filter elements exist.

Chapter 38

Low Power Inter-Integrated Circuit (LPI2C)

38.1 Chip-specific LPI2C information

Table 265. Reference links to related information

Topic	Related module	Reference
Full description	LPI2C	LPI2C
System memory map		Memory map
Clocking		Clock distribution
Power Management		Power Management
Signal multiplexing	Port control	Signal multiplexing

38.1.1 Module instances

This device supports four instances of LPI2C: LPI2C0, LPI2C1, LPI2C2 and LPI2C3.

38.2 Overview

LPI2C supports an efficient interface to an I2C bus as a controller and target:

- Implements logic support for Standard, Fast, Fast+, HS-mode (target only) and Ultra-Fast modes of operation
- Uses little CPU overhead, with DMA offloading of FIFO register accesses
- Continues operating in Deep Sleep modes if an appropriate clock is available

LPI2C also complies with the System Management Bus (SMBus) Specification, version 3. The SMBus is a single-ended simple two-wire bus, which is typically used for low-bandwidth communications.

The Inter-Integrated Circuit (I²C) serial bus is multi-controller, multi-target, packet-switched, and single-ended, and is often used to attach microcontroller ICs to lower-speed peripheral ICs.


NOTE

Terminology in this chapter has been updated to align with I²C-bus specification, Rev. 7.0, as shown in [Table 266](#).

Table 266. Updated terms

Updated term	Deprecated term
Controller	Master
Target	Slave

38.2.1 Block diagram

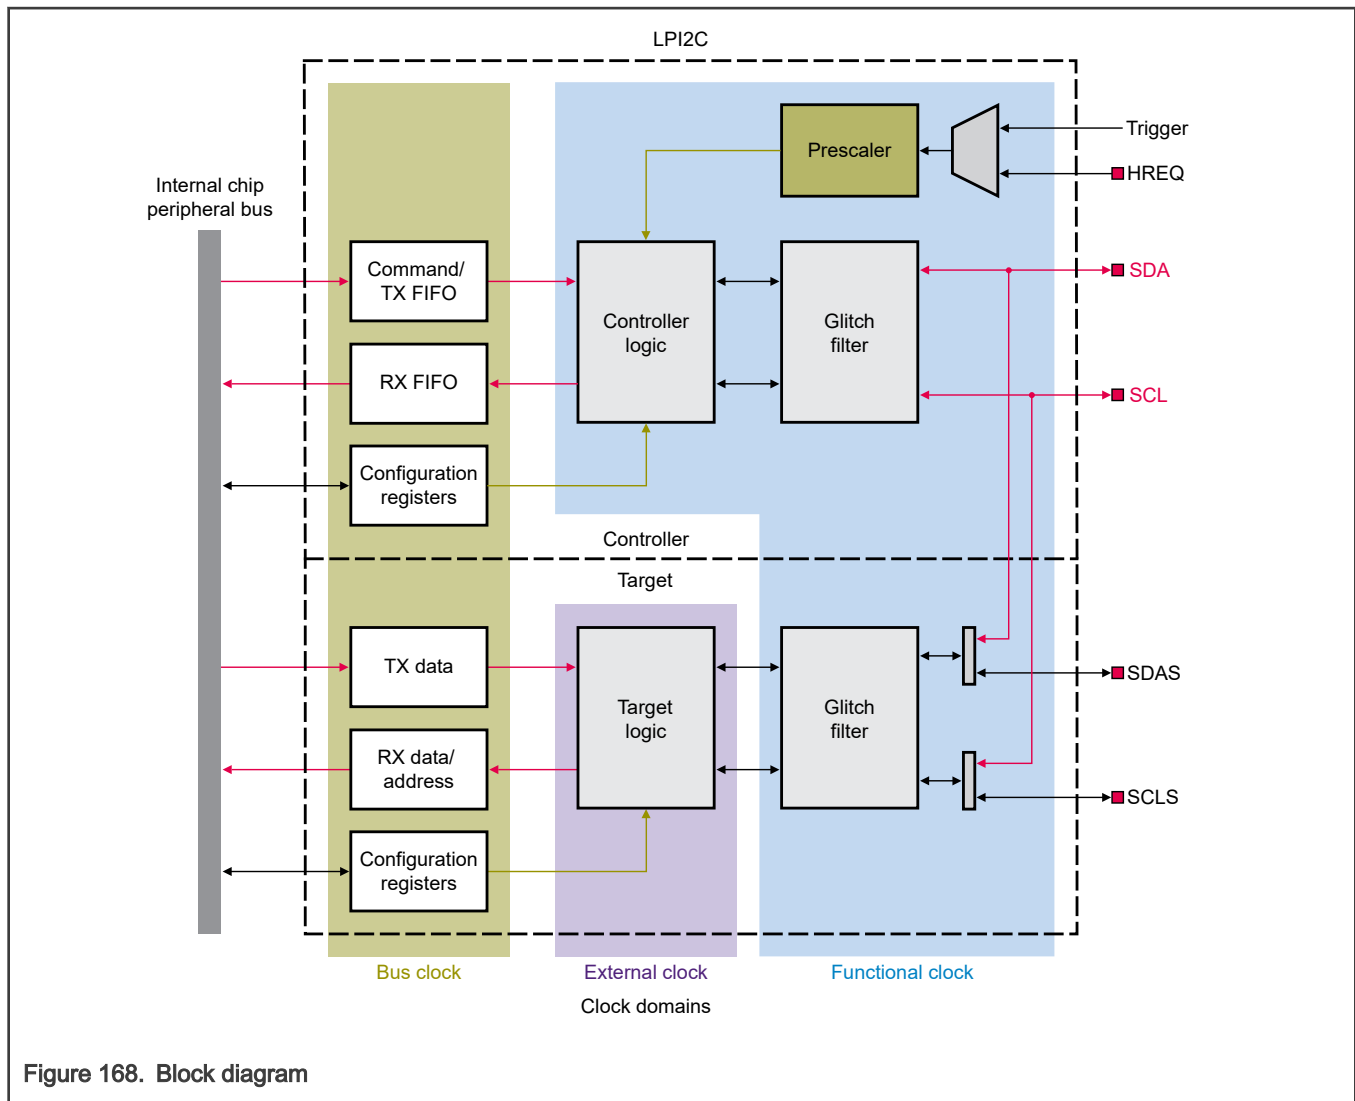

38.2.2 Features

LPI2C supports:

- Standard, Fast, Fast+ and Ultra Fast modes
- HS mode in target mode
- Multicontroller, including synchronization and arbitration, means that any number of controller nodes can be present. Also, controller and target roles can be changed between messages (after a Stop signal is sent).
- Clock stretching. Used on the SCL line, as an I2C flow control mechanism.
- Arbitration for when the system has more than one controller. When used on the SDA line, ensures that there is only one I2C transmitter at a time.
- General call, seven-bit addressing, and ten-bit addressing
- Software reset, Start byte, and device ID (also require software support)

The LPI2C controller supports:

- Command and transmit FIFO of 4 words (8-bit transmit data + 3-bit command)

- Receive FIFO of 4 words (8-bit receive data).
- Command FIFO waiting for an I2C idle bus before initiating a transfer
- Initiation of repeated Start and Stop conditions and one or more controller-receiver transfers by command FIFO
- Stop condition generation from command FIFO, or automatic generation of Stop condition when the transmit FIFO is empty
- Host request input to control the start time of an I2C bus transfer
- Interrupt generation on data match and unwanted data rejection, via flexible receive data match
- Flags and optional interrupt signals at repeated Start condition, Stop condition, loss of arbitration, unexpected NACK, and command word errors
- Configurable bus idle timeout and pin-stuck-low timeout

The LPI2C target supports:

- Separate I2C target registers to minimize software overhead because of controller or target switching
- 7-bit or 10-bit addressing, address range, SMBus alert, and general call address.
- Transmit data register that supports interrupt or DMA requests
- Receive data register that supports interrupt or DMA requests
- Software-controllable ACK or NACK, with optional clock stretching on ACK or NACK field
- Configurable clock stretching, to avoid transmit-FIFO-underrun and receive-FIFO-overflow errors
- Flags and optional interrupt at end of packet, Stop condition, or bit error detection

38.3 Functional description

38.3.1 Controller mode

The LPI2C controller logic operates independently from the target logic to perform all controller-mode transfers on the I2C bus.

38.3.1.1 Transmit and Command FIFO commands

The transmit FIFO stores command data to initiate various I2C operations. The following operations can be initiated through commands in the transmit FIFO:

- Start or repeated Start condition with address byte, expecting ACK or NACK.
- Transmit data. This operation is the default for zero-extended-byte writes to the transmit FIFO.
- Receive 1-256 bytes of data. You can configure this operation to discard received data and not to store it in the receive FIFO.
- Stop condition. You can configure this operation to send a Stop condition when the transmit FIFO is empty.

Multiple transmit and receive commands can be inserted between the Start and Stop conditions. To comply with the I2C specification, transmit and receive commands must not be interleaved. The receive data command and the receive data and discard commands can be interleaved. This interleaving ensures that only the desired received data is stored in the receive FIFO (or compared with the data match logic).

The LPI2C controller automatically transmits a NACK on the last byte of a receive data command. It transmits the NACK unless the next command in the FIFO is also a receive data command. If the transmit FIFO is empty when a receive data command completes, a NACK is also automatically transmitted.

The LPI2C controller supports 10-bit addressing via a (repeated) Start condition, followed by a transmit data byte containing the second address byte, followed by any number of data bytes with the controller transmit data.

A Start or repeated Start condition expecting a NACK (for example, HS mode controller code) must be followed by a Stop or (repeated) Start condition.

38.3.1.2 Controller operations

When LPI2C is enabled, it monitors the I2C bus to detect when the I2C is idle ([MSR\[BBF\]](#)). If either SCL or SDA are low, the I2C bus is no longer considered idle. The bus becomes idle if a Stop condition is detected or if a bus idle timeout is detected (as configured by [MCFGR2\[BUSIDLE\]](#)). After the bus is idle, if the transmit FIFO is not empty and the host request is asserted or disabled, the LPI2C controller initiates a transfer on the bus. This transfer involves the following steps:

1. Wait the bus idle time equal to ([MCCR0\[CLKLO\]](#) + 1) multiplied by the prescaler ([MCFGR1\[PRESALE\]](#)).
2. Transmit a Start condition and address byte using the timing configuration in [Controller Clock Configuration 0 \(MCCR0\)](#). If an HS mode transfer is configured, the timing configuration from [Controller Clock Configuration 1 \(MCCR1\)](#) is used instead.
3. Perform controller transmit or controller receive transfers, as configured by the transmit FIFO.
4. Transmit NACK on the last byte of a controller receive transfer. This action is performed unless the next command in the transmit FIFO is also a receive data command and the transmit FIFO is not empty.
5. Transmit a repeated Start or Stop condition as configured by the transmit FIFO or [MCFGR1\[AUTOSTOP\]](#). A repeated Start can change which timing configuration register is used.

When [MCFGR0\[RELAX\]](#) is 1, the LPI2C controller does not wait for the I2C bus to be idle before starting a transfer. It also relaxes some restrictions on the order of FIFO commands. For example, it allows a Stop command when it is idle to generate a Start condition, followed by one SCL clock pulse, and then a Stop condition.

When the LPI2C controller is disabled, LPI2C continues emptying the transmit FIFO until a Stop condition is transmitted. (The controller could be disabled due to [MCR\[MEN\]](#) being 0, or automatically due to mode entry.) However, LPI2C no longer stalls the I2C bus by waiting for the transmit or receive FIFO. After the transmit FIFO is empty, LPI2C generates a Stop condition automatically.

The LPI2C controller can stall the I2C bus under certain conditions. This stalling results in SCL pulled low continuously on the first bit of a byte, until these conditions change:

- The LPI2C controller is enabled and busy, the transmit FIFO is empty, and [MCFGR1\[AUTOSTOP\]](#) is 0. The LPI2C controller continues to stall the bus until the transmit FIFO is loaded with more data.
- The LPI2C controller is enabled and receiving data, receive data is not being discarded (due to command or receive data match), and the receive FIFO is full. The LPI2C controller continues to stall the I2C bus until the receive FIFO is emptied.

The LPI2C controller aborts the existing transfer when [MCFGR0\[ABORT\]](#) becomes 1. This action causes the LPI2C controller to complete the existing word and then transmit a Stop condition. If the receive FIFO is full when the receive operation is aborted, the last received data is discarded. A new transfer does not start while [MCFGR0\[ABORT\]](#) is 1.

38.3.1.3 Receive FIFO and data matching

The receive FIFO stores receive data during controller-receiver transfers. You can configure the LPI2C controller to discard received data instead of storing it in the receive FIFO. This option is configured via the command word in the transmit FIFO.

Received data supports a receive data match function that can match received data against one of two bytes, or against a masked data byte. You can configure the data match function to compare only the first one or two data words received since the last (repeated) Start condition. Received data that is already discarded due to the command word cannot cause a data match. It delays the match on the first data word received until after the discarded data is received.

You can configure the receiver match function to discard all received data until a data match is detected, using [MCFGR0\[RDMO\]](#). Following a data match, write 0 to [MCFGR0\[RDMO\]](#) before writing 0 to [MSR\[DMF\]](#) to allow all subsequent data to be received.

38.3.1.4 Timing parameters

The LPI2C controller can configure the following timing parameters. Parameters are configured separately for HS mode ([Controller Clock Configuration 1 \(MCCR1\)](#)) and other modes ([Controller Clock Configuration 0 \(MCCR0\)](#)). This separation allows the HS mode controller code to be sent using regular timing parameters. Then it allows a switch to HS mode timing (following a repeated Start) until the next STOP condition.

Configure the LPI2C controller timing parameters, measured in LPI2C functional clock cycles, as shown in [Table 267](#). You must configure these parameters to meet the I2C timing specification for the required mode.

Table 267. Timing parameters

I2C specification timing parameter	I2C specification timing symbol	LPI2C timing parameter (in LPI2C functional clock cycles)
SCL clock period	tSCL	$(CLKHI + CLKLO + 2 + SCL\_LATENCY) \times (2^{\wedge} PRESCALE)$
Hold time (repeated) Start condition	tHD:STA	$(SETHOLD + 1) \times (2^{\wedge} PRESCALE)$
Low period of the SCL clock	tLOW	$(CLKLO + 1) \times (2^{\wedge} PRESCALE)$
High period of the SCL clock	tHIGH	$(CLKHI + 1 + SCL\_LATENCY) \times (2^{\wedge} PRESCALE)$
Setup time for a repeated Start condition or Stop condition	tSU:STA, tSU:STO	$(SETHOLD + 1 + SCL\_LATENCY) \times (2^{\wedge} PRESCALE)$
Data hold time	tHD:DAT	$(DATAVD + 1) \times (2^{\wedge} PRESCALE)$
Data setup time	tSU:DAT	$(SDA\_LATENCY + 1) \times (2^{\wedge} PRESCALE)$
Bus free time between a Stop and Start condition	tBUF	$(CLKLO + 1 + SDA\_LATENCY) \times (2^{\wedge} PRESCALE)$
Data valid time, data valid acknowledge time	tVD:DAT, tVD:ACK	$(DATAVD + 1) \times (2^{\wedge} PRESCALE)$

[Table 268](#) defines the latency parameters. These parameters assume that the risetime is less than one LPI2C functional clock cycle. The risetime depends on a number of factors, including the I/O propagation delay, the I2C bus loading, and the external pullup resistor sizing. A larger risetime increases the number of cycles that the signal takes to propagate through the synchronizer (and glitch filter), which increases the latency.

Table 268. Synchronization latency

Timing parameter	Timing definition
SCL_LATENCY	$ROUNDDOWN((2 + FILTSCL + SCL\_RISETIME) \div (2^{\wedge} PRESCALE))$
SDA_LATENCY	$ROUNDDOWN((2 + FILTSDA + SDA\_RISETIME) \div (2^{\wedge} PRESCALE))$

The following timing restrictions must be enforced to avoid unexpected Start or Stop conditions on the I2C bus. These restrictions also avoid unexpected Start or Stop conditions detected by the LPI2C controller. The timing restrictions can be summarized as "SDA cannot change when SCL is high outside a transmitted (repeated) Start or Stop condition."

Table 269. LPI2C timing parameter restrictions

Timing parameter	Minimum	Maximum	Comment
CLKLO	03h	—	$CLKLO \times (2^{\wedge} PRESCALE) > SCL\_LATENCY$
CLKHI	01h	—	Configure CLKHI to meet the duty cycle requirements in the I2C specification
SETHOLD	02h	—	$SETHOLD \times (2^{\wedge} PRESCALE) > SDA\_LATENCY$

Table continues on the next page...

Table 269. LPI2C timing parameter restrictions (continued)

Timing parameter	Minimum	Maximum	Comment
DATAVD	01h	$\text{CLKLO} - \text{SDA\_LATENCY} - 1$	Configure DATAVD to meet the data hold requirement in the I2C specification
FILTSCl	00h	$[\text{CLKLO} \times (2^{\wedge} \text{PRESCALE})] - 3$	FILTSCl and FILTSDA are the only parameters not multiplied by $(2^{\wedge} \text{PRESCALE})$
FILTSDA	FILTSCl	$[\text{CLKLO} \times (2^{\wedge} \text{PRESCALE})] - 3$	Configuring FILTSDA greater than FILTSCl can delay the SDA input to compensate for board level skew
BUSIDLE	$(\text{CLKLO} + \text{SETHOLD} + 2) \times 2$	—	Must also be greater than $(\text{CLKHI} + 1)$

See the UM10204, *I2C-bus specification and user manual*.

See [Application information](#) for example LPI2C timing configurations.

38.3.1.5 Error conditions

The LPI2C controller monitors errors while it is active. The following conditions generate an error flag and block a new Start condition from being sent, until the flag is cleared by software:

- A Start or Stop condition is detected and is not generated by the LPI2C controller ([MSR\[ALF\]](#) becomes 1).
- Transmitting data on SDA and different values are received ([MSR\[ALF\]](#) becomes 1). LPI2C controller stops driving SDA immediately, but continues to drive SCL for the remainder of the byte.
- NACK is detected when transmitting data, and [MCFGR1\[IGNACK\]](#) is 0 ([MSR\[NDF\]](#) becomes 1).
- NACK is detected and is expecting ACK for the address byte, and [MCFGR1\[IGNACK\]](#) is 0 ([MSR\[NDF\]](#) becomes 1).
- ACK is detected and is expecting NACK for the address byte, and [MCFGR1\[IGNACK\]](#) is 0 ([MSR\[NDF\]](#) becomes 1).
- Transmit FIFO is requesting to transmit or receive data without a Start condition ([MSR\[FEF\]](#) becomes 1). This restriction is ignored when [MCFGR0\[RELAX\]](#) is 1.
- SCL (or SDA if [MCFGR1\[TIMECFG\]](#) is 1) is low for $(\text{MCFGR2[TIMELOW]} \times 256)$ prescaler cycles without a pin transition ([MSR\[PLTF\]](#) becomes 1).

You must respond to [MSR\[PLTF\]](#) to terminate the existing command. You can terminate the command cleanly by writing 0 to [MCR\[MEN\]](#), or you can terminate it abruptly by writing 1 to [MCR\[RST\]](#).

You can use [MCFGR0\[RELAX\]](#) to attempt to recover a target with SDA stuck low. If [MCFGR0\[RELAX\]](#) is 1, the LPI2C controller does not wait for the I2C bus to be idle before starting a transfer. Initiating a Start command with address FFh, then the Stop condition, should generate sufficient SCL clock edges to cause the target to release SDA.

You can use [MCFGR2\[BUSIDLE\]](#) to force the I2C bus to be considered idle when SCL and SDA remain high for $(\text{BUSIDLE} + 1)$ prescaler cycles. The bus is considered idle when the LPI2C controller is first enabled. When BUSIDLE is configured greater than zero, then SCL or SDA must be high for $(\text{BUSIDLE} + 1)$ prescaler cycles before the I2C bus is considered idle.

38.3.1.6 Pin configuration

Configuration	Description
Open-drain support	The LPI2C controller defaults to open-drain configuration of the SDA and SCL pins. Support for true open drain depends on the specific device, and requires the pins where LPI2C pins are muxed to support true open drain.
HS mode support	Support for HS mode depends on the specific device. This mode requires the SCL pin to support the current source pullup required in the I2C specification.
Ultra-Fast mode support	The LPI2C controller supports the output-only push-pull function required for I2C Ultra-Fast mode using the SDA and SCL pins. Support for Ultra-Fast mode also requires MCFGR1[IGNACK] to be 1.
Push-pull two-wire support	A push-pull two-wire configuration is available to the LPI2C controller. If LPI2C is the only controller and all I2C pins on the bus are at the same voltage, this configuration may support a partial HS mode. A partial HS mode, not a full HS mode, because this configuration actively drives high rather than enabling a current service pull-up. This configuration sets the SCL pin as push-pull for every clock except the first clock pulse, to allow HS-mode-compatible targets to perform clock stretching. In this mode, the SDA pin is tristated for controller-receive data bits and controller-transmit ACK/NACK bits, and is configured as push-pull at other times. To avoid the risk of contention when SDA is push-pull, configure the pin for open-drain operation, as part of the device-specific configuration.
Push-pull four-wire support	The push-pull four-wire configuration separates the SCL input data and output data into separate pins. It also separates the SDA input data and output data into separate pins. The SCL/SDA pins are used for input data; the SCLS/SDAS pins are used for output data, with configurable polarity. This configuration simplifies external connections when connecting the LPI2C to the I2C bus through external level shifters or discrete components. When using this four-wire configuration, the LPI2C controller logic and LPI2C target logic cannot connect to separate I2C buses.

38.3.2 Target mode

To perform all target mode transfers on the I2C bus, the LPI2C target logic operates independently from the LPI2C controller logic.

38.3.2.1 Address matching

You can configure the LPI2C target:

- To match one of two addresses, using either 7-bit or 10-bit addressing modes for each address.
- To match a range of addresses in either 7-bit or 10-bit addressing modes.
- To match the general call address and generate appropriate flags.
- To match the SMBus alert address and generate appropriate flags.
- To detect the HS mode controller code address, and to disable the digital filters and output valid delay time until the next Stop condition is detected.

After a valid address is matched, the LPI2C target automatically performs target-transmit or target-receive transfers until:

- A NACK is detected (unless [SCFGR1\[IGNACK\]](#) becomes 1).
- A bit error is detected (the LPI2C target is driving SDA, but a different value is sampled).
- A (repeated) Start or Stop condition is detected.

When [SCFGR1\[RXALL\]](#) is 1, the LPI2C target receives all addresses and data on the I2C bus. Unless the address is matched, it never drives the SDA pin. Configure the LPI2C target to match only on 7-bit address mode when this feature is enabled. Software can support 10-bit address mode. This option is intended for debugging the contents of an I2C transfer between another controller

and target. Likewise, [SCFGR1\[SDCFG\]](#) and [SCFGR1\[RSCFG\]](#) configure the Stop or repeated Start flags to assert on all Stop or repeated Start conditions, even when there is no address match.

38.3.2.2 Transmit and receive data

[Target Transmit Data \(STDR\)](#) and [Target Receive Data \(SRDR\)](#) are double-buffered and only update during a target-transmit and target-receive transfer, respectively.

You can configure the target address that was received to be read from SRDR (for example, when using DMA to transfer data) or from [Target Address Status \(SASR\)](#).

You can configure STDR to request data only after a target-transmit transfer is detected. You can also configure it to request new data whenever STDR is empty.

Write to STDR only when [SSR\[TDF\]](#) is set.

Read SRDR only when [SSR\[RDF\]](#) is set, or when [SSR\[AVF\]](#) is set and [SCFGR1\[RXCFG\]](#) = 1.

Read SASR only when [SSR\[AVF\]](#) is set.

38.3.2.3 Read request

The LPI2C target generates a read request when the I2C bus is idle and you write 1 to [SCFGR0\[RDREQ\]](#). This occurrence causes the LPI2C target to pull the SDA pin low until either the first SCL falling edge or [SCFGR0\[RDREQ\]](#) becomes 0. Following the next Stop condition or a software timeout, you can proceed as follows:

- If the LPI2C target is accessed at the correct address, the read request is acknowledged, and you must write 0 to [SCFGR0\[RDREQ\]](#).
- If [SCFGR0\[RDACK\]](#) is 1, the read request is acknowledged by a Start followed by one SCL pulse followed by a STOP condition. You must write 0 to [SCFGR0\[RDREQ\]](#).
- If neither of the first two cases occurred, the read request is not acknowledged. You must write 0 and then 1 to [SCFGR0\[RDREQ\]](#) after an appropriate delay, provided the I2C bus is idle.
- If a software timeout occurs, the read request is not acknowledged, and you should write 0 to [SCFGR0\[RDREQ\]](#). Another request can be generated after an appropriate delay.

Writing to [SCFGR0\[RDREQ\]](#) when the I2C bus is busy results in a logic 0 being written. Write 1 to [SCFGR0\[RDREQ\]](#), then confirm that the register is written to correctly. If the register does not update correctly, the I2C bus is no longer idle and the read request must be attempted later.

38.3.2.4 Clock stretching

The LPI2C target supports many configurable options for clock stretching. You can configure these conditions to perform clock stretching:

- [SSR\[AVF\]](#) is set during the ninth clock pulse of the address byte.
- [SSR\[TDF\]](#) is set during the ninth clock pulse of a target-transmit transfer.
- [SSR\[RDF\]](#) is set during the ninth clock pulse of a target-receive transfer.
- [SSR\[TAF\]](#) is set during the eighth clock pulse of an address byte or a target-receive transfer. In HS mode, this option is disabled.
- Clock stretching can be extended for a number of cycles equal to the value of [SCFGR2\[CLKHOLD\]](#) cycles. This stretching allows additional setup time to sample the SDA pin externally. In HS mode, this option is disabled.

When clock stretching is enabled, clock stretching extends for one peripheral bus clock cycle after SDA updates, unless extended by the [SCFGR2\[CLKHOLD\]](#) configuration.

38.3.2.5 Timing parameters

The LPI2C target can configure the following timing parameters:

- SDA data valid time from SCL negation to SDA update
- SCL hold time when clock stretching is enabled to increase setup time when sampling SDA externally
- SCL glitch filter time
- SDA glitch filter time

These parameters are disabled when [SCR\[FILTEN\]](#) is 0, when [SCR\[FILTDZ\]](#) is 1 in Doze mode, and when LPI2C target detects HS mode. When disabled, the LPI2C target is clocked directly from the I2C bus. In this case, the target may not satisfy all timing requirements of the I2C specification (such as SDA minimum hold time in Standard/Fast mode).

The LPI2C target places the following restrictions on the timing parameters:

- You must configure [SCFGR2\[FILTSDA\]](#) to be greater than or equal to [SCFGR2\[FILTSCL\]](#) (unless compensating for board level skew between SDA and SCL).
- You must configure [SCFGR2\[DATAVD\]](#) to be less than the minimum SCL low period.

38.3.2.6 Error conditions

The LPI2C target can flag the following error conditions:

- [SSR\[BEF\]](#) is set when the LPI2C target is driving SDA but it samples a different value than what is expected.
- [SSR\[FEF\]](#) is set due to a transmit data underrun or a receive data overrun. To eliminate the possibility of underrun and overrun, enable clock stretching. When [SCFGR1\[RXNACK\]](#) is 1, the LPI2C target generates a NACK on a receive data overrun.
- [SSR\[FEF\]](#) is also set due to an address overrun, but only when [SCFGR1\[RXCFCG\]](#) is 1. To eliminate the possibility of overrun, enable clock stretching. When [SCFGR1\[RXNACK\]](#) is 1, the LPI2C target generates a NACK on an address overrun regardless of the value of [SCFGR1\[RXCFCG\]](#).

The LPI2C target does not implement a timeout due to SCL or SDA being stuck low. If this detection is required, use the LPI2C controller logic so you can reset the LPI2C target when this condition is detected.

38.3.3 Low-power modes

LPI2C remains functional during low-power modes, if [MCR\[DOZEN\]](#) = 0 and LPI2C uses an external or internal clock source that remains enabled. LPI2C can generate an interrupt or DMA request to cause a wake-up from low-power modes.

You can configure LPI2C to be disabled in low-power modes when [MCR\[DOZEN\]](#) = 1. In this case, LPI2C waits for the current transfer to complete any pending operation.

NOTE

See the chip-specific information for low-power modes available on your chip.

38.3.4 Debug mode

Table 270. Debug mode

Mode	LPI2C operation
Debug	If MCR[DBGEN] = 1, can continue operating in Debug mode.

38.3.5 Peripheral triggers

The connection of the LPI2C peripheral triggers to other peripherals depends upon the specific device being used.

Table 271. LPI2C triggers

Trigger	Description
Controller output trigger	Generates an output trigger that can be connected to other peripherals on the device. The controller output trigger asserts on either a repeated Start or a Stop condition. The trigger remains asserted for one cycle of the LPI2C functional clock divided by MCFGR1[PRESALE] .
Target output trigger	Generates an output trigger that can be connected to other peripherals on the device. The target output trigger asserts on either a repeated Start or a Stop condition that occurs after a target address match. The target output trigger remains asserted until the next target SCL pin negation.
Input trigger	To control the start of a LPI2C bus transfer, the LPI2C input trigger can be selected instead of the HREQ input. The input trigger is synchronized. To be detected, the input trigger must assert for at least two cycles of the LPI2C functional clock divided by the value of MCFGR1[PRESALE] . When LPI2C is busy, the HREQ input (and therefore the input trigger) is ignored.

38.3.6 Clocking

Table 272. LPI2C clocks

Clock	Description
LPI2C functional clock	The LPI2C functional clock is asynchronous to the bus clock. It can remain enabled in low-power modes to support I2C bus transfers by the LPI2C controller. The functional clock is also used by the LPI2C target to support digital filter and data hold time configurations. The LPI2C controller divides the functional clock by a prescaler (MCFGR1[PRESALE]) and the resulting frequency must be at least eight times faster than the I2C bus bandwidth.
External clock	The LPI2C target logic is clocked directly from the external pins. These pins are SCL and SDA, or SCLS and SDAS if the controller and target are implemented on separate pins). This clocking allows the LPI2C target to remain operational, even when the LPI2C functional clock is disabled. NOTE If the LPI2C functional clock is disabled, the LPI2C target digital filter must be disabled. This condition can affect compliance with some timing parameters of the I2C specification, such as data hold time.
Bus clock	The bus clock is only used for bus accesses to the control and configuration registers. The bus clock frequency must be sufficient to support the data bandwidth requirements of the LPI2C controller and target registers.

For chip-specific clocking information, see the Clocking chapter.

38.3.7 Reset

Table 273. LPI2C resets

Reset	Description
Chip reset	The logic and registers for the LPI2C controller and target are reset to their default states after a chip reset.
Software reset	The LPI2C controller implements a software reset field in its control register. MCR[RST] resets all controller logic and registers to their default states, except for Controller Control (MCR) itself.

Table continues on the next page...

Table 273. LPI2C resets (continued)

Reset	Description
	The LPI2C target implements a software reset field in its control register. SCR[RST] resets all target logic and registers to their default states, except for Target Control (SCR) itself.
FIFO reset	The LPI2C controller implements write-only control fields that reset the transmit FIFO (MCR[RTF]) and receive FIFO (MCR[RRF]). After a FIFO is reset, that FIFO is empty. The LPI2C target implements write-only control fields that reset the transmit data register (SCR[RTF]) and receive data register (SCR[RRF]). After a data register is reset, that data register is empty.

38.3.8 Interrupts and DMA requests

Depending on the configuration, interrupts and DMA requests can be combined:

- LPI2C controller and target interrupts
- LPI2C controller and target transmit DMA requests
- LPI2C controller and target receive DMA requests

38.3.8.1 Controller mode

[Table 274](#) lists the Controller mode sources that can generate LPI2C controller interrupts and LPI2C controller transmit and receive DMA requests.

Table 274. Controller interrupts and DMA requests

Status flag	Description	Can generate		
		Interrupt?	DMA request?	Low-power wake-up?
Transmit Data Flag (MSR[TDF])	Data can be written to transmit FIFO, as configured by MFCR[TXWATER] .	Y	TX	Y
Receive Data Flag (MSR[RDF])	Data can be read from the receive FIFO, as configured by MFCR[RXWATER] .	Y	RX	Y
End Packet Flag (MSR[EPF])	Controller has transmitted a repeated Start or Stop condition.	Y	N	Y
Stop Detect Flag (MSR[SDF])	Controller has transmitted a Stop condition (and the LPI2C controller is idle, if MCFGR1[STOPCFG] = 1).	Y	N	Y
NACK Detect Flag (MSR[NDF])	During an address byte, the controller expects an ACK but detects a NACK. During an address byte, the controller expects a NACK but detects an ACK. During a controller-transmitter data byte, the controller detects a NACK.	Y	N	Y
Arbitration Lost Flag (MSR[ALF])	The controller lost arbitration due to a Start or Stop condition detected at the wrong time, or the controller was transmitting data	Y	N	Y

Table continues on the next page...

Table 274. Controller interrupts and DMA requests (continued)

Status flag	Description	Can generate		
		Interrupt?	DMA request?	Low-power wake-up?
	but received data different from the data that was transmitted.			
FIFO Error Flag (MSR[FEE])	The controller expects a Start condition in the command FIFO, but the next entry in the command FIFO is not a Start condition.	Y	N	Y
Pin Low Timeout Flag (MSR[PLTF])	Pin low timeout is enabled and SCL (or SDA, if configured) is low for longer than the configured timeout.	Y	N	Y
Data Match Flag (MSR[DMF])	The received data matches the configured data match, but the received data is not discarded due to a command FIFO entry.	Y	N	Y
Start Detect Flag (MSR[STF])	A Start condition is detected on the I2C bus (and the LPI2C controller is idle, if MCFGR1[STARTCFG] = 1).	Y	N	Y
Controller Busy Flag (MSR[MBF])	LPI2C controller is busy transmitting or receiving data.	N	N	N
Bus Busy Flag (MSR[BBF])	LPI2C controller is enabled and activity is detected on the I2C bus, but no Stop condition is detected and no bus idle timeout (if enabled) occurred.	N	N	N

38.3.8.2 Target mode

Table 275 lists the target mode sources that can generate LPI2C target interrupts and LPI2C target transmit and receive DMA requests.

Table 275. Target interrupts and DMA requests

Status flag	Description	Can generate		
		Interrupt?	DMA request?	Low-power wake-up?
Transmit Data Flag (SSR[TDF])	Data can be written to Target Transmit Data (STDR) .	Y	TX	Y
Receive Data Flag (SSR[RDF])	Data can be read from Target Receive Data (SRDR) .	Y	RX	Y
Address Valid Flag (SSR[AVF])	Address can be read from Target Address Status (SASR) .	Y	RX	Y
Transmit ACK Flag (SSR[TAF])	ACK or NACK can be written to Target Transmit ACK (STAR) .	Y	N	Y
Repeated Start Flag (SSR[RSF])	Target has detected an address match followed by a repeated Start condition.	Y	RX	Y

Table continues on the next page...

Table 275. Target interrupts and DMA requests (continued)

Status flag	Description	Can generate		
		Interrupt?	DMA request?	Low-power wake-up?
Stop Detect Flag (SSR[SDF])	Target has detected an address match followed by a Stop condition.	Y	RX	Y
Bit Error Flag (SSR[BEF])	Target was transmitting data, but received data is different from what was transmitted.	Y	N	Y
FIFO Error Flag (SSR[FEF])	This flag is set by: - Transmit data underrun - Receive data overrun - Address status overrun when SCFGR1[RXCFG] = 1 This flag can only be set when clock stretching is disabled.	Y	N	Y
Address Match 0 Flag (SSR[AM0F])	Target detected an address match SAMR[ADDR0].	Y	N	N
Address Match 1 Flag (SSR[AM1F])	Target detected an address match with SAMR[ADDR1] or using an address range.	Y	N	N
General Call Flag (SSR[GCF])	Target detected an address match with the general call address.	Y	N	N
SMBus Alert Response Flag (SSR[SARF])	Target detected an address match with the SMBus alert address.	Y	N	N
Target Busy Flag (SSR[SBF])	LPI2C target is busy receiving an address byte or is transmitting or receiving data.	N	N	N
Bus Busy Flag (SSR[BBF])	LPI2C target is enabled and a Start condition is detected on I2C bus, but no Stop condition detected.	N	N	N

38.3.8.3 End-of-packet DMA transfer

End-of-packet functionality serves serial interfaces where the transfer size may not be known in advance and the data is pushed by an external device. Examples include UART receive, I2C Target mode, and SPI Target mode. End-of-packet processing is intended to ensure that data does not become stranded in either the receive FIFO or DMA receive buffer. Support for end-of-packet processing must be implemented in both the serial interfaces and DMA controller.

The condition that signals the end of packet differs for each serial interface but is processed by the serial peripheral and DMA in the same way. For example:

- UART end of packet is signaled by an idle line condition.
- I2C end of packet is signaled by Stop or repeated Start condition.
- SPI end of packet is signaled by PCS negation.

When the serial peripheral is configured to signal an end-of-packet condition to the DMA and the serial interface detects an end-of-packet condition, it asserts the DMA request for the receive FIFO regardless of the watermark configuration. For larger watermark configurations, this behavior ensures that the last few words of the transfer are first flushed from the receive FIFO.

The DMA then reads the contents of the receive FIFO, depending on the first word in the FIFO:

- If the receive FIFO is empty, the serial interface signals an end-of-packet condition to the DMA controller.
- If the receive FIFO is not empty, but the first word in the FIFO starts a new packet, data is not pulled from the receive FIFO. Also, the serial interface signals an end-of-packet condition to the DMA controller.
- If the receive FIFO is not empty, and the first word in the FIFO does not start a new packet, the DMA transfers data as normal.

Because the DMA may transfer multiple words per request, the end-of-packet condition persists until the DMA minor loop finishes and no additional data is pulled from the FIFO. The status flag that triggered the end-of-packet condition is cleared when the minor loop completes after the end of packet is signaled to the DMA controller.

When the DMA detects the end-of-packet condition, it writes all received words up to the end of packet into system memory. It also saves the destination address for the word after the last valid data. The DMA then terminates the channel as if the major loop completed, including final offsets and optional interrupts, channel linking, and scatter-gather. The final destination address can be saved to system memory or is available in the destination address register.

Because the DMA terminates the major loop, the receive FIFO is not serviced until the DMA is reconfigured. You can perform this reconfiguration through software or hardware (for example, channel linking or scatter-gather). Minimize this delay to avoid receiver FIFO overrun. Automatic DMA end-of-packet processing is not recommended when there are only a few words transferred between end-of-packet conditions. In this case, the DMA spends more time processing the end of packet than transferring the data. For example, to avoid an excessive number of idle conditions, increase the UART idle line length as needed.

38.4 External signals

Table 276. External signals

Signal	Name	Two-wire scheme	Four-wire scheme	Direction
SCL	LPI2C clock line	SCL	In Four-Wire mode, this pin is the SCL input pin.	Input or output
SDA	LPI2C data line	SDA	In Four-Wire mode, this pin is the SDA input pin.	Input or output
SCLS	Secondary I2C clock line	Not used	In Four-Wire mode, this pin is the SCLS output pin. If LPI2C controller/target are configured to use separate pins, then this pin is the LPI2C target SCL pin.	Input or output
SDAS	Secondary I2C data line	Not used	In Four-Wire mode, this pin is the SDAS output pin. If LPI2C controller/target are configured to use separate pins, then this pin is the LPI2C target SDA pin.	Input or output
HREQ	Host request	When configured for controller (input), if host request is asserted and the I2C bus is idle, it initiates a transfer. When configured for target (output), it asserts while valid data is present in Target Transmit Data (STDR) . HREQ is an additional pin separate from the two-wire or four-wire scheme.		Input or output

[Figure 169](#) shows the two-signal connection.

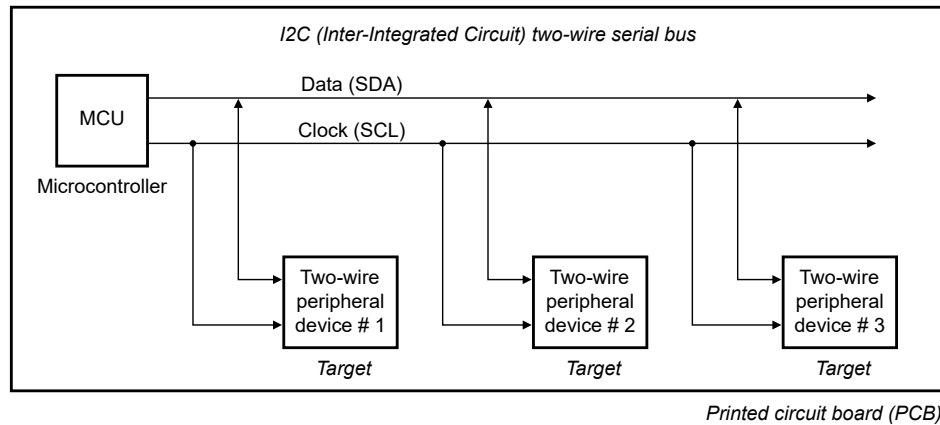


Figure 169. I²C two-wire serial bus

Figure 170 shows a possible four-signal connection.

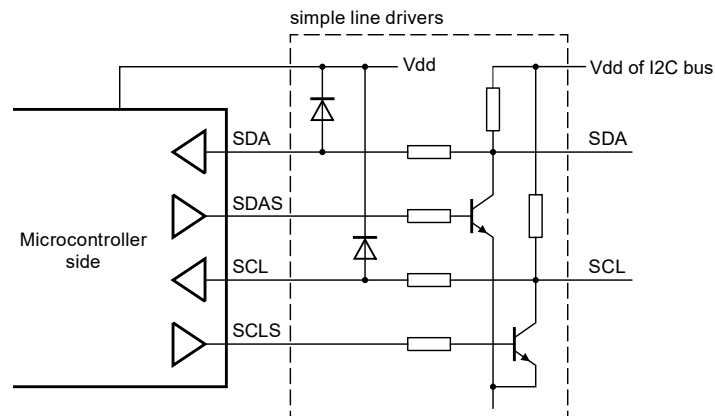


Figure 170. I²C four-wire serial bus

38.5 Initialization

To initialize the LPI2C controller:

1. Configure [Controller Configuration 0 \(MCFGR0\)](#)–[Controller Configuration 3 \(MCFGR3\)](#) as required by the application.
2. Configure [Controller Clock Configuration 0 \(MCCR0\)](#) and [Controller Clock Configuration 1 \(MCCR1\)](#) to satisfy the timing requirements of the I2C mode supported by the application.
3. Enable controller interrupts and DMA requests as required by the application.
4. Enable the LPI2C controller by writing 1 to [MCR\[MEN\]](#).

To initialize the LPI2C target:

1. Configure [Target Address Match \(SAMR\)](#) with the I2C address of the target location on the I2C bus.
2. Configure [Target Configuration 0 \(SCFGR0\)](#) and [Target Configuration 1 \(SCFGR1\)](#) as required by the application.
3. Configure [Target Configuration 2 \(SCFGR2\)](#) to satisfy the timing requirements of the I2C mode supported by the application.
4. Enable target interrupts and DMA requests as required by the application.
5. Enable the LPI2C target by writing 1 to [SCR\[SEN\]](#).

38.6 Application information

Configure the I2C timing parameters to meet the requirements of the I2C specification. This configuration depends on the supported mode and LPI2C functional clock frequency. When switching between two modes using different clock configuration registers (for example, Fast mode and HS mode), [MCFGR1\[PRESCALE\]](#) must remain constant between the modes.

Table 277. Example timing configurations

I2C mode	Clock frequency	Baud rate	PRESCALE	FILTSCS / FILTSDA	SETHOLD	CLKLO	CLKHI	DATAVD
Standard	8 MHz	100 kbit/s	0h	0h/0h	24h	28h	24h	02h
Standard	48 MHz	100 kbit/s	2h	1h/1h	37h	3Fh	37h	03h
Standard	60 MHz	100 kbit/s	2h	1h/1h	45h	50h	44h	04h
Fast	8 MHz	400 kbit/s	0h	0h/0h	04h	0Bh	05h	02h
Fast+	8 MHz	1 Mbit/s	0h	0h/0h	02h	03h	01h	01h
Fast	48 MHz	400 kbit/s	0h	1h/1h	1Dh	3Eh	35h	0Fh
Fast	48 MHz	400 kbit/s	2h	1h/1h	07h	11h	0Bh	03h
Fast+	48 MHz	1 Mbit/s	2h	1h/1h	03h	06h	04h	04h
HS	48 MHz	3.2 Mbit/s	0h	0h/0h	07h	08h	03h	01h
Fast	60 MHz	400 kbit/s	1h	2h/2h	11h	28h	1Fh	08h
Fast+	60 MHz	1 Mbit/s	1h	2h/2h	07h	0Fh	0Bh	01h
HS	60 MHz	3.33 Mbit/s	1h	0h/0h	04h	04h	02h	01h

38.7 Memory map and registers

38.7.1 LPI2C register descriptions

Writing to a read-only register or reading from a write-only register can cause bus errors. This module does not check whether programmed values in the registers are correct; you must ensure that valid programmed values are written to the registers.

38.7.1.1 LPI2C memory map

LPI2C0 base address: 4009_A000h

LPI2C1 base address: 4009_B000h

LPI2C2 base address: 400D_4000h

LPI2C3 base address: 400D_5000h

Offset	Register	Width (In bits)	Access	Reset value
0h	Version ID (VERID)	32	R	0103_0003h
4h	Parameter (PARAM)	32	R	0000_0202h
10h	Controller Control (MCR)	32	RW	0000_0000h
14h	Controller Status (MSR)	32	RW	0000_0001h

Table continues on the next page...

Table continued from the previous page...

Offset	Register	Width (In bits)	Access	Reset value
18h	Controller Interrupt Enable (MIER)	32	RW	0000_0000h
1Ch	Controller DMA Enable (MDER)	32	RW	0000_0000h
20h	Controller Configuration 0 (MCFGR0)	32	RW	0000_0000h
24h	Controller Configuration 1 (MCFGR1)	32	RW	0000_0000h
28h	Controller Configuration 2 (MCFGR2)	32	RW	0000_0000h
2Ch	Controller Configuration 3 (MCFGR3)	32	RW	0000_0000h
40h	Controller Data Match (MDMR)	32	RW	0000_0000h
48h	Controller Clock Configuration 0 (MCCR0)	32	RW	0000_0000h
50h	Controller Clock Configuration 1 (MCCR1)	32	RW	0000_0000h
58h	Controller FIFO Control (MFCR)	32	RW	0000_0000h
5Ch	Controller FIFO Status (MFSR)	32	R	0000_0000h
60h	Controller Transmit Data (MTDR)	32	W	0000_0000h
70h	Controller Receive Data (MRDR)	32	R	0000_4000h
78h	Controller Receive Data Read Only (MRDROR)	32	R	0000_4000h
110h	Target Control (SCR)	32	RW	0000_0000h
114h	Target Status (SSR)	32	RW	0000_0000h
118h	Target Interrupt Enable (SIER)	32	RW	0000_0000h
11Ch	Target DMA Enable (SDER)	32	RW	0000_0000h
120h	Target Configuration 0 (SCFGR0)	32	RW	0000_0000h
124h	Target Configuration 1 (SCFGR1)	32	RW	0000_0000h
128h	Target Configuration 2 (SCFGR2)	32	RW	0000_0000h
140h	Target Address Match (SAMR)	32	RW	0000_0000h
150h	Target Address Status (SASR)	32	R	0000_4000h
154h	Target Transmit ACK (STAR)	32	RW	0000_0000h
160h	Target Transmit Data (STDR)	32	W	0000_0000h
170h	Target Receive Data (SRDR)	32	R	0000_4000h
178h	Target Receive Data Read Only (SRDROR)	32	R	0000_4000h

38.7.1.2 Version ID (VERID)

Offset

Register	Offset
VERID	0h

Function

Contains version numbers for the module design and feature set.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	MAJOR								MINOR							
W																
Reset	0	0	0	0	0	0	0	1	0	0	0	0	0	0	1	1
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	FEATURE															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1

Fields

Field	Function
31-24 MAJOR	Major Version Number Returns the major version number for the module design specification.
23-16 MINOR	Minor Version Number Returns the minor version number for the module design specification.
15-0 FEATURE	Feature Specification Number Returns the feature set number. 0000_0000_0000_0010b - Controller only, with standard feature set 0000_0000_0000_0011b - Controller and target, with standard feature set


38.7.1.3 Parameter (PARAM)

Offset

Register	Offset
PARAM	4h

Function
Contains parameter values implemented in the module.

Diagram

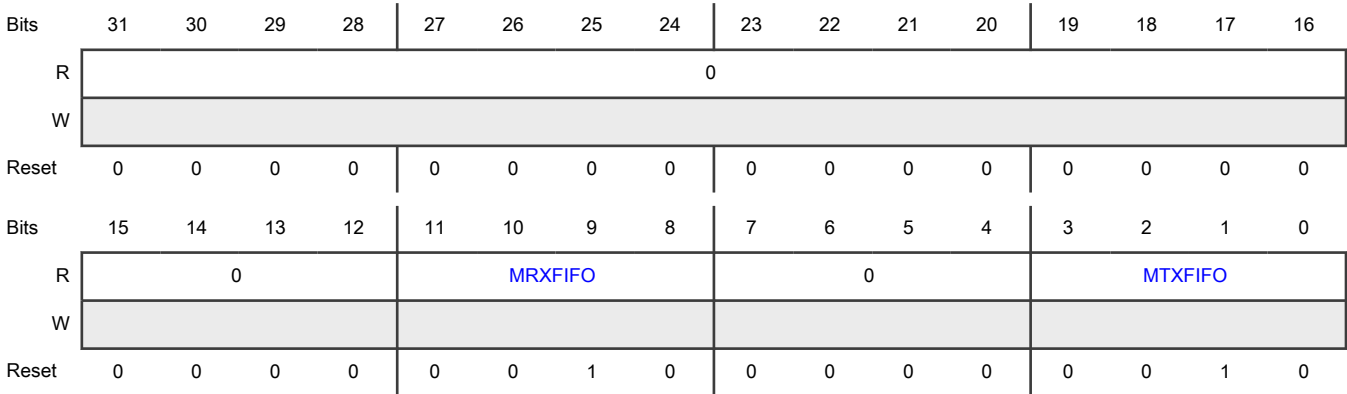

Fields


Field	Function
31-16 —	Reserved
15-12 —	Reserved
11-8 MRXFIFO	Controller Receive FIFO Size Configures the number of words in the controller receive FIFO to $2^{MRXFIFO}$.
7-4 —	Reserved
3-0 MTXFIFO	Controller Transmit FIFO Size Configures the number of words in the controller transmit FIFO to $2^{MTXFIFO}$.

38.7.1.4 Controller Control (MCR)

Offset

Register	Offset
MCR	10h

Function
Contains resets, debug enable, and other controller control settings.

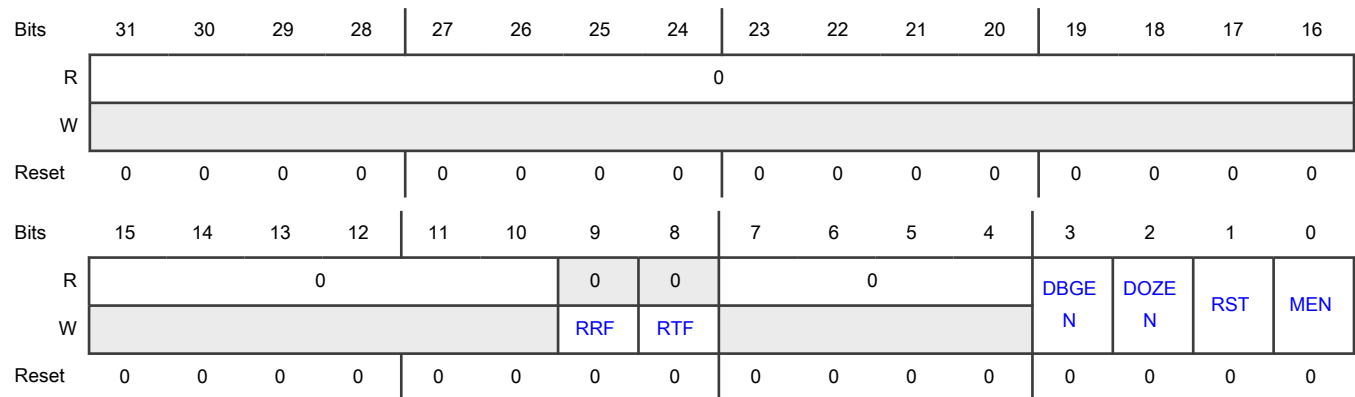Diagram**Fields**

Field	Function
31-10 —	Reserved
9 RRF	Reset Receive FIFO Resets the receive FIFO in Controller Receive Data (MRDR) . 0b - No effect 1b - Reset receive FIFO
8 RTF	Reset Transmit FIFO Resets the transmit FIFO in Controller Transmit Data (MTDR) . 0b - No effect 1b - Reset transmit FIFO
7-4 —	Reserved
3 DBGEN	Debug Enable Enables the controller in Debug mode. 0b - Disable 1b - Enable
2 DOZEN	Doze Mode Enable Enables the controller in Doze mode. 0b - Enable 1b - Disable
1	Software Reset

Table continues on the next page...

Table continued from the previous page...

Field	Function
RST	Resets all internal controller logic and registers except Controller Control (MCR) . This field remains 1 (enabled) until you write 0 to it. The reset takes effect immediately and remains asserted until negated by software. There is no minimum delay required before clearing the software reset. 0b - No effect 1b - Reset
0 MEN	Controller Enable Enables the controller logic. 0b - Disable 1b - Enable

38.7.1.5 Controller Status (MSR)

Offset

Register	Offset
MSR	14h

Function

Contains status flags for transmit and receive data, for start and stop conditions, and for bus and controller busy or idle status.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0						BBF	MBF	0							
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	STF	DMF	PLTF	FEF	ALF	NDF	SDF	EPF	0				RDF		TDF	
W	W1C	W1C	W1C	W1C	W1C	W1C	W1C	W1C								
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1

Fields

Field	Function
31-26 —	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
25 BBF	Bus Busy Flag Specifies whether the I2C bus is busy. 0b - Idle 1b - Busy
24 MBF	Controller Busy Flag Specifies whether the I2C controller is busy. 0b - Idle 1b - Busy
23-16 —	Reserved
15 STF	Start Flag Specifies whether a Start condition is detected on the bus when the bus is idle. When MCFGR1[STARTCFG] is 0, this field becomes 1 only if the LPI2C controller is also idle. When MCFGR1[STARTCFG] is 1, STF becomes 1 for any Start condition when the I2C bus is idle. NOTE This field behaves differently for register reads and writes. When reading 0b - Start condition not detected 1b - Start condition detected When writing 0b - No effect 1b - Clear the flag
14 DMF	Data Match Flag Indicates whether the received data matches MDMR[MATCH0] or MDMR[MATCH1] (as configured by MCFGR1[MATCFG]). Received data discarded due to MTDR[CMD] does not cause this flag to set. NOTE This field behaves differently for register reads and writes. When reading 0b - Matching data not received 1b - Matching data received When writing 0b - No effect 1b - Clear the flag

Table continues on the next page...

Table continued from the previous page...

Field	Function
13 PLTF	Pin Low Timeout Flag Indicates whether pin low timeout has occurred. Sets when the SCL or SDA input is low for more than the number of PINLOW cycles defined by MCFGR3[PINLOW], even when the LPI2C controller is idle. You must resolve the pin low condition via software. PLTF cannot be cleared as long as the pin low timeout continues. Before LPI2C can initiate a Start condition, you must clear this flag. See MCFGR1[TIMECFG] for the SCL and/or SDA timeout settings. NOTE This field behaves differently for register reads and writes. When reading 0b - Pin low timeout did not occur 1b - Pin low timeout occurred When writing 0b - No effect 1b - Clear the flag
12 FEF	FIFO Error Flag Detects the LPI2C controller's attempt to send or receive data without first generating a (repeated) Start condition. This error can occur when the transmit FIFO underflows when MCFGR1[AUTOSTOP] = 1. When this flag is set, the LPI2C controller sends a Stop condition (if busy). The controller does not initiate a new Start condition until the flag is cleared. NOTE This field behaves differently for register reads and writes. When reading 0b - No FIFO error 1b - FIFO error When writing 0b - No effect 1b - Clear the flag
11 ALF	Arbitration Lost Flag Indicates whether arbitration is lost. Either of these conditions sets this flag: • The LPI2C controller transmits a logic 1 and detects a logic 0 on the I2C bus. • The LPI2C controller detects a Start or Stop condition when the LPI2C controller is transmitting data. When ALF is set, the LPI2C controller releases the I2C bus (goes idle), and the LPI2C controller does not initiate a new Start condition until the ALF is cleared.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	NOTE This field behaves differently for register reads and writes. When reading 0b - Controller did not lose arbitration 1b - Controller lost arbitration When writing 0b - No effect 1b - Clear the flag
10 NDF	NACK Detect Flag Indicates whether an unexpected NACK has been detected. This flag is set when the LPI2C controller detects a NACK it was not expecting when transmitting an address or data. When set, the controller does not initiate a new Start condition until this flag is cleared. If a NACK is expected for a given address (as configured by the command word), this flag is set if a NACK is not generated. When this flag is set, the LPI2C controller automatically transmits a Stop condition if MCFGR1[AUTOSTOP] = 1, or if the transmit FIFO is not empty. NOTE This field behaves differently for register reads and writes. When reading 0b - No unexpected NACK detected 1b - Unexpected NACK detected When writing 0b - No effect 1b - Clear the flag
9 SDF	Stop Detect Flag Indicates whether the LPI2C controller has generated a Stop condition. When MCFGR1[STOPCFG] = 0, this flag is set for any Stop condition. When MCFGR1[STOPCFG] = 1, this flag is set only when the LPI2C controller is also idle (transmit FIFO is empty). NOTE This field behaves differently for register reads and writes. When reading 0b - No Stop condition generated 1b - Stop condition generated When writing 0b - No effect

Table continues on the next page...

Table continued from the previous page...

Field	Function
	1b - Clear the flag
8 EPF	End Packet Flag Indicates whether the LPI2C controller has generated a repeated Start condition or a Stop condition. When the controller first generates a Start condition, this flag is not set. NOTE This field behaves differently for register reads and writes. When reading 0b - No Stop or repeated Start generated 1b - Stop or repeated Start generated When writing 0b - No effect 1b - Clear the flag
7-2 —	Reserved
1 RDF	Receive Data Flag Indicates whether the receive data is ready. This flag is set when the number of words in the receive FIFO is greater than MFCR[RXWATER]. 0b - Receive data not ready 1b - Receive data ready
0 TDF	Transmit Data Flag Indicates whether transmit data is requested. This flag is set when the number of words in the transmit FIFO is equal or less than MFCR[TXWATER]. 0b - Transmit data not requested 1b - Transmit data requested

38.7.1.6 Controller Interrupt Enable (MIER)

Offset

Register	Offset
MIER	18h


Function

Contains enables for:

- Transmit and receive data interrupts

- Start, Stop, and NACK detection interrupts
- DMA interrupts

Diagram

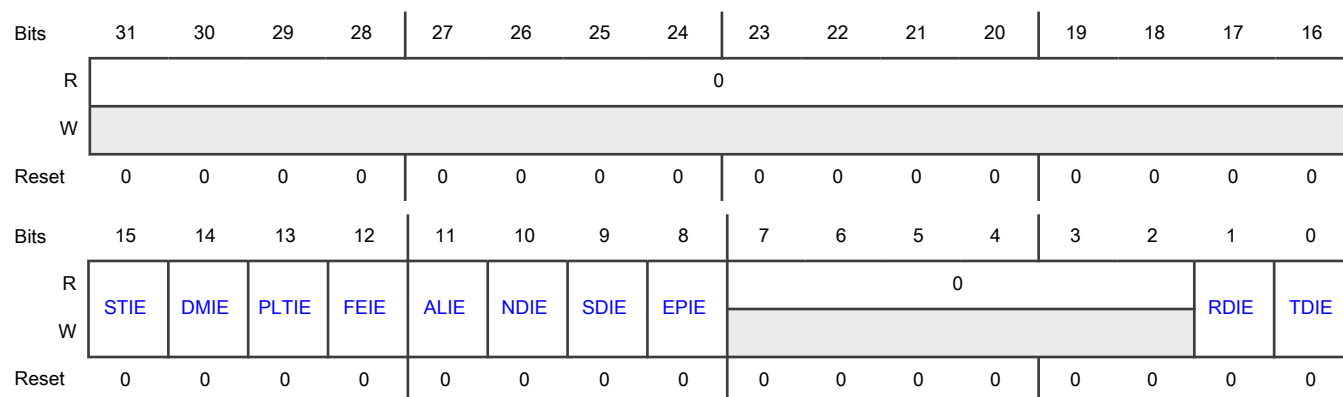

Fields

Field	Function
31-16 —	Reserved
15 STIE	Start Interrupt Enable Enables interrupt for Start condition. 0b - Disable 1b - Enable
14 DMIE	Data Match Interrupt Enable Enables interrupt for data match. 0b - Disable 1b - Enable
13 PLTIE	Pin Low Timeout Interrupt Enable Enables interrupt for pin-low timeout. 0b - Disable 1b - Enable
12 FEIE	FIFO Error Interrupt Enable Enables interrupt for FIFO error. 0b - Disable 1b - Enable
11	Arbitration Lost Interrupt Enable

Table continues on the next page...

Table continued from the previous page...

Field	Function
ALIE	Enables interrupt for arbitration lost. 0b - Disable 1b - Enable
10 NDIE	NACK Detect Interrupt Enable Enables interrupt for NACK detection. 0b - Disable 1b - Enable
9 SDIE	Stop Detect Interrupt Enable Enables interrupt for Stop detection. 0b - Disable 1b - Enable
8 EPIE	End Packet Interrupt Enable Enables interrupt for end packet. 0b - Disable 1b - Enable
7-2 —	Reserved
1 RDIE	Receive Data Interrupt Enable Enables interrupt for receive data. 0b - Disable 1b - Enable
0 TDIE	Transmit Data Interrupt Enable Enables interrupt for transmit data. 0b - Disable 1b - Enable


38.7.1.7 Controller DMA Enable (MDER)

Offset

Register	Offset
MDER	1Ch

Function
Contains DMA transmit, request, and receive enables.

Diagram

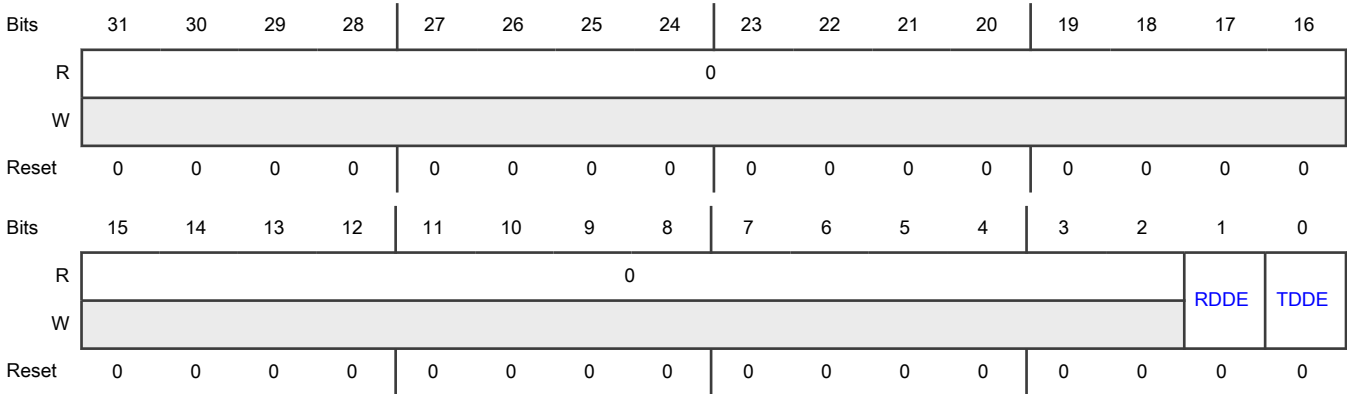

Fields

Field	Function
31-2 —	Reserved
1 RDDE	Receive Data DMA Enable Enables DMA receive data. 0b - Disable 1b - Enable
0 TDDE	Transmit Data DMA Enable Enables DMA transmit data. 0b - Disable 1b - Enable


38.7.1.8 Controller Configuration 0 (MCFGR0)

Offset

Register	Offset
MCFGR0	20h

Function
Contains host settings and other receive and transfer settings.

Diagram

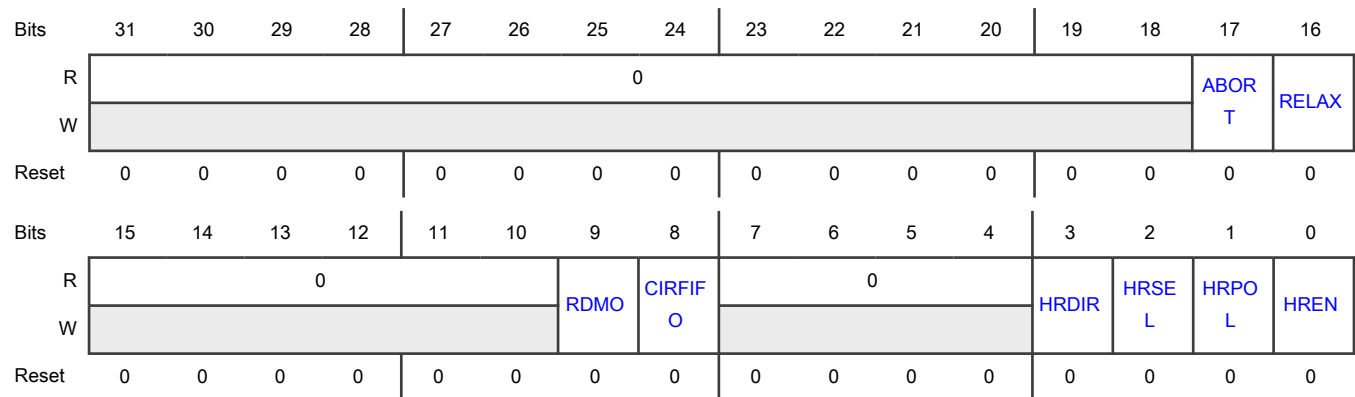

Fields

Field	Function
31-18 —	Reserved
17 ABORT	Abort Transfer Determines whether the LPI2C controller completes the existing byte and then sends a Stop condition. A new transfer does not start while this field is 1. 0b - Normal transfer 1b - Abort existing transfer and do not start a new one
16 RELAX	Relaxed Mode Specifies the type of transfer. If this field is 1, the LPI2C controller relaxes several transfer restrictions. Transfers start when the bus is busy and FIFO commands are not checked for errors. You can use this mode to attempt recovery of a stuck I2C target by toggling the SCL pin. 0b - Normal transfer 1b - Relaxed transfer
15-10 —	Reserved
9 RDMO	Receive Data Match Only Determines whether all received data that does not set MSR[DMF] is discarded. After MSR[DMF] is set, the RDMO configuration is ignored. When disabling RDMO, write 0 to this field before writing 0 to MSR[DMF] to ensure that no receive data is lost. 0b - Received data is stored in the receive FIFO 1b - Received data is discarded unless MSR[DMF] is set
8 CIRFIFO	Circular FIFO Enable Enables the transmit FIFO read pointer to be saved to a temporary register. The transmit FIFO empties as normal. After the LPI2C controller is idle and the transmit FIFO is empty, the read pointer value is

Table continues on the next page...

Table continued from the previous page...

Field	Function
	restored from the temporary register. This setting causes the contents of the transmit FIFO to be cycled through repeatedly. If MCFGR1[AUTOSTOP] is 1, then a Stop condition is sent whenever the transmit FIFO is empty and the read pointer is restored. 0b - Disable 1b - Enable
7-4 —	Reserved
3 HRDIR	Host Request Direction Configures the direction of the HREQ pin. When this field is 1, the LPI2C target drives the HREQ output pin and the pin becomes 1 when there is data in the target transmit data register. For proper operation when this field is 1, write 1 to SCFGR1[TXCFG]. 0b - HREQ pin is input (for LPI2C controller) 1b - HREQ pin is output (for LPI2C target)
2 HRSEL	Host Request Select Selects the source of the host request input. When host request is enabled, this field must not change. 0b - Host request input is pin HREQ 1b - Host request input is input trigger
1 HRPOL	Host Request Polarity Configures the polarity of the host request input. When host request is enabled, this field must not change. HRPOL sets the polarity for both the HREQ pin and the input trigger. - When HRPOL=0, the polarity is configured for active low, so host request is asserted if the HREQ pin or input trigger are logic 0. - When HRPOL=1, the polarity is configured for active high, so host request is asserted if the HREQ pin or input trigger are logic 1. 0b - Active low 1b - Active high
0 HREN	Host Request Enable Enables host request. When enabled, the LPI2C controller only initiates a Start condition if the host request input is asserted and the bus is idle. A repeated Start condition is not affected by the host request. 0b - Disable 1b - Enable

38.7.1.9 Controller Configuration 1 (MCFGR1)

Offset

Register	Offset
MCFGR1	24h

Function

Contains controls for pin configuration, clock prescaler, and various other control settings.

Write to this register only when the I2C controller is disabled.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0				Reserved	PINCFG			0				MATCFG			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0			STARTCFG	STOPCFG	TIMECFG	IGNACK	AUTOSTOP	0				PRESCALE			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-28 —	Reserved
27 —	Reserved
26-24 PINCFG	Pin Configuration Configures the pin mode for LPI2C. 000b - Two-pin open drain mode. SCL/SDA pins: Bidirectional open drain for controller and target. SCLS/SDAS pins: Not used. 001b - Two-pin output only mode (Ultra-Fast mode). SCL/SDA pins: Output-only (Ultra-Fast mode) open drain for controller and target. SCLS/SDAS pins: Not used. 010b - Two-pin push-pull mode. SCL/SDA pins: Bidirectional push-pull for controller and target. SCLS/SDAS pins: Not used. 011b - Four-pin push-pull mode. SCL/SDA pins: Input only for controller and target. SCLS/SDAS pins: Output-only push-pull for controller and target.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	100b - Two-pin open-drain mode with separate LPI2C target. SCL/SDA pins: Bidirectional open drain for controller. SCLS/SDAS pins: Bidirectional open drain for target. 101b - Two-pin output only mode (Ultra-Fast mode) with separate LPI2C target. SCL/SDA pins: Output-only (Ultra-Fast mode) open drain for controller. SCLS/SDAS pins: Output-only open drain for target. 110b - Two-pin push-pull mode with separate LPI2C target. SCL/SDA pins: Bidirectional push-pull for controller. SCLS/SDAS pins: Bidirectional push-pull for target. 111b - Four-pin push-pull mode (inverted outputs). SCL/SDA pins: Input only for controller and target. SCLS/SDAS pins: Inverted output-only push-pull for controller and target.
23-19 —	Reserved
18-16 MATCFG	Match Configuration Configures the condition that sets MSR[DMF]. See Controller Data Match (MDMR). 000b - Match is disabled 001b - Reserved 010b - Match is enabled: first data word equals MDMR[MATCH0] OR MDMR[MATCH1] 011b - Match is enabled: any data word equals MDMR[MATCH0] OR MDMR[MATCH1] 100b - Match is enabled: (first data word equals MDMR[MATCH0]) AND (second data word equals MDMR[MATCH1]) 101b - Match is enabled: (any data word equals MDMR[MATCH0]) AND (next data word equals MDMR[MATCH1]) 110b - Match is enabled: (first data word AND MDMR[MATCH1]) equals (MDMR[MATCH0] AND MDMR[MATCH1]) 111b - Match is enabled: (any data word AND MDMR[MATCH1]) equals (MDMR[MATCH0] AND MDMR[MATCH1])
15-13 —	Reserved
12 STARTCFG	Start Configuration Configures the conditions that set MSR[STF] when a Start condition occurs. When this field is 0, MSR[STF] is set on a Start condition when both the I2C bus and LPI2C are idle. In other words, any nonrepeated Start condition is initiated by any controller on the bus except the LPI2C controller. When this field is 1, MSR[STF] is set on a Start condition when the I2C bus is idle. In other words, any nonrepeated Start condition is initiated by any controller on the bus including the LPI2C controller. 0b - Sets when both I2C bus and LPI2C controller are idle 1b - Sets when I2C bus is idle

Table continues on the next page...

Table continued from the previous page...

Field	Function
11 STOPCFG	Stop Configuration Configures the conditions that set MSR[SDF]. When this field is 0, any Stop condition generated by the LPI2C controller sets SDF. When this field is 1, the last Stop condition before the LPI2C controller is idle sets SDF. In this case, the transmit FIFO is empty at the time of the Stop condition. 0b - Any Stop condition 1b - Last Stop condition
10 TIMECFG	Timeout Configuration Configures which signals must be low for longer than the configured timeout to set MSR[PLTF]. When this field is 0, MSR[PLTF] is set when SCL is low for longer than the configured timeout. 0b - SCL 1b - SCL or SDA
9 IGNACK	Ignore NACK Determines whether the LPI2C controller ignores a received NACK and treats it as an ACK. In this case, MSR[NDF] is never set. This field must be 1 in Ultra-Fast mode. 0b - No effect 1b - Treat a received NACK as an ACK
8 AUTOSTOP	Automatic Stop Generation Determines whether a Stop condition is generated when the LPI2C controller is busy and the transmit FIFO is empty. A Stop condition can also be generated using a transmit FIFO command. When this field is 1, a Stop condition is automatically generated when the transmit FIFO is empty and the LPI2C controller is busy. 0b - No effect 1b - Stop automatically generated
7-3 —	Reserved
2-0 PRESCALE	Prescaler Configures the clock prescaler used for all LPI2C controller logic except the digital glitch filters. 000b - Divide by 1 001b - Divide by 2 010b - Divide by 4 011b - Divide by 8 100b - Divide by 16

Table continues on the next page...

Table continued from the previous page...

Field	Function
	101b - Divide by 32 110b - Divide by 64 111b - Divide by 128

38.7.1.10 Controller Configuration 2 (MCFGR2)

Offset

Register	Offset
MCFGR2	28h

Function

Contains the configuration for the bus idle timeout and glitch filters for SDA and SCL.

Write to this register only when the I2C controller is disabled.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0				FILTSDA				0				FILTSCS			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0				BUSIDLE											
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-28 —	Reserved
27-24 FILTSDA	Glitch Filter SDA Configures the I2C controller digital glitch filters for the SDA input. The latency through the glitch filter is equal to the number of cycles defined by this field. The value of this field must be less than the minimum SCL low or high period.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	Glitches equal to or less than the number of cycles defined by this field are filtered out and ignored. Writing 0 to this field disables the glitch filter. MCFGR1[PRESALE] does not affect the glitch filter cycle count. It is automatically bypassed in HS mode.
23-20 —	Reserved
19-16 FILTSC	Glitch Filter SCL Configures the I2C controller digital glitch filters for SCL input. The latency through the glitch filter is equal to the number of cycles defined by this field. The value of this field must be less than the minimum SCL low or high period. Glitches equal to or less than the number of cycles defined by this field are filtered out and ignored. These cycles are based on the functional clock. Writing 0 to this field disables the glitch filter. MCFGR1[PRESALE] does not affect the glitch filter cycle count. It is automatically bypassed in HS mode.
15-12 —	Reserved
11-0 BUSIDLE	Bus Idle Timeout Configures the bus idle timeout period, in clock cycles. If both SCL and SDA are high for longer than the number of cycles defined by this field, the I2C bus is assumed to be idle and the controller can generate a Start condition. Writing 0 to this field disables the bus idle timeout.

38.7.1.11 Controller Configuration 3 (MCFGR3)

Offset


Register	Offset
MCFGR3	2Ch

Function

Configures the threshold value for the pin low timeout flag.

Write to this register only when the I2C controller is disabled.

Diagram

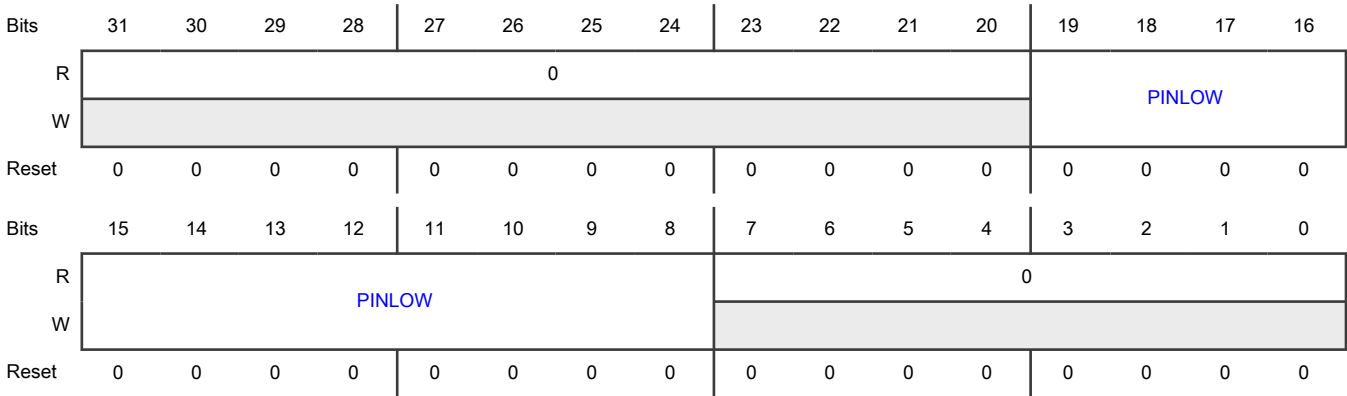

Fields

Field	Function
31-20 —	Reserved
19-8 PINLOW	Pin Low Timeout Configures the threshold value, in clock cycles, that sets MSR[PLTF] . If SCL or SDA (selected by MCFGR1[TIMECFG]) is low for longer than (PINLOW × 256) cycles, MSR[PLTF] is set. When this field is 0, the pin low timeout feature is disabled.
7-0 —	Reserved

38.7.1.12 Controller Data Match (MDMR)

Offset


Register	Offset
MDMR	40h

Function

Contains data match values.

Write to this register only when the I2C controller is disabled or idle.

Diagram

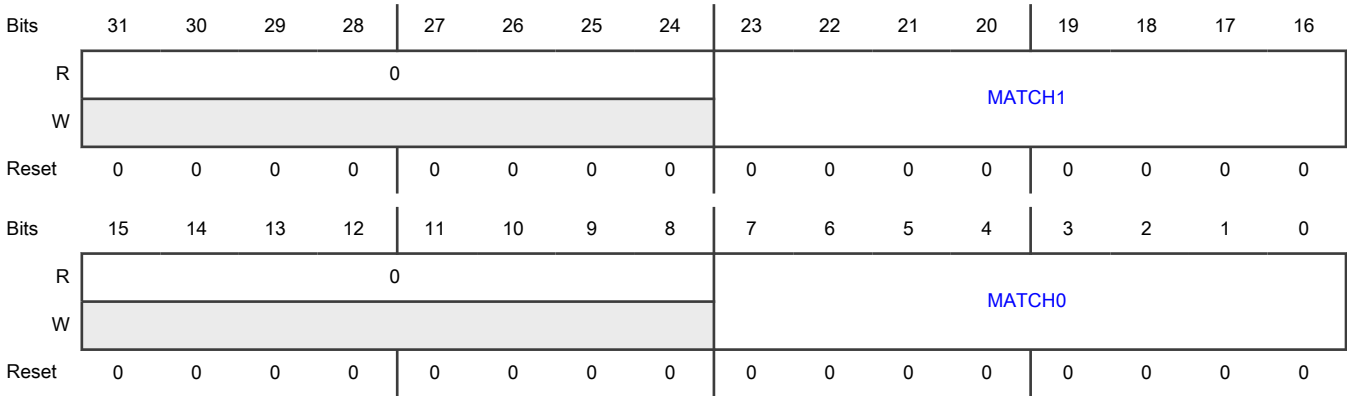

Fields

Field	Function
31-24 —	Reserved
23-16 MATCH1	Match 1 Value Specifies match 1 value that is compared to the received data when receive data match is enabled.
15-8 —	Reserved
7-0 MATCH0	Match 0 Value Specifies match 0 value that is compared to the received data when receive data match is enabled.

38.7.1.13 Controller Clock Configuration 0 (MCCR0)


Offset

Register	Offset
MCCR0	48h

Function

Configures various clock controls.

You cannot make changes to this register when the I2C controller is enabled and is used for standard, fast, fast-mode plus, and ultra-fast transfers.

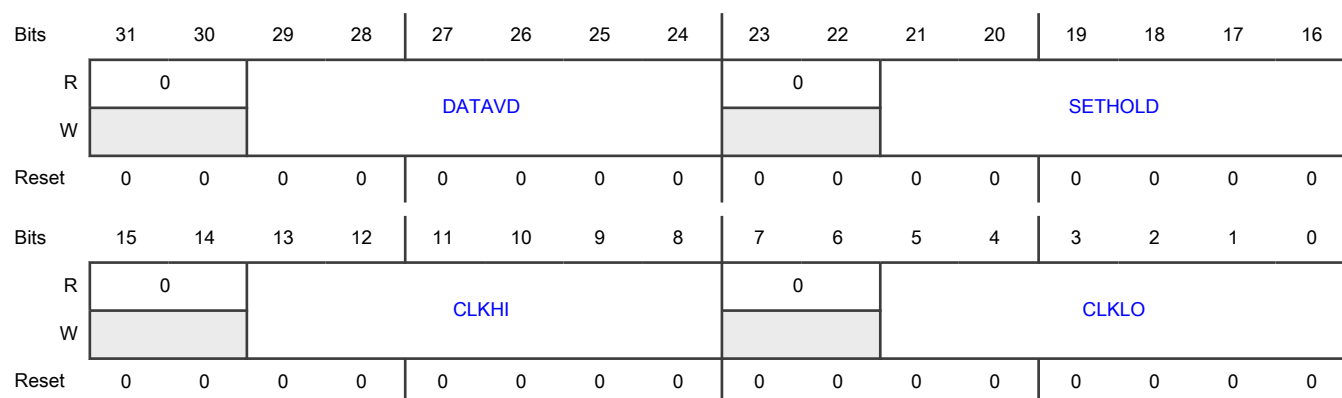Diagram**Fields**

Field	Function
31-30 —	Reserved
29-24 DATAVD	Data Valid Delay Specifies the minimum number of cycles (minus one) used as the data hold time for SDA. This value must be less than the minimum SCL low period.
23-22 —	Reserved
21-16 SETHOLD	Setup Hold Delay Specifies the minimum number of cycles (minus one) used by the controller for these conditions: • Hold time for a Start • Setup and hold time for a repeated Start • Setup time for a Stop The setup time is extended by the time it takes to detect a rising edge on the external SCL pin. Ignoring any additional board delay due to external loading, this time is equal to $(2 + \text{FILTSCl}) \div 2^{\text{PRESCALE}}$ cycles.
15-14 —	Reserved
13-8 CLKHI	Clock High Period Specifies the minimum number of cycles (minus one) that the controller drives the SCL clock high. The SCL high time is extended by the time needed to detect a rising edge on the external SCL pin. Ignoring any additional board delay due to external loading, this time is equal to $(2 + \text{FILTSCl}) \div 2^{\text{PRESCALE}}$ cycles.
7-6 —	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
5-0 CLKLO	Clock Low Period Specifies the minimum number of cycles (minus one) that the controller drives the SCL clock low. This value is also used for the minimum bus free time between a Stop and a Start condition. This period is extended by the time needed to detect a rising edge on the external SCL pin. Ignoring any additional board delay due to external loading, this time is equal to $(2 + \text{FILTSCl}) \div 2^{\text{PRESCALE}}$ cycles.

38.7.1.14 Controller Clock Configuration 1 (MCCR1)

Offset


Register	Offset
MCCR1	50h

Function

Configures various clock controls.

You cannot make changes to this register when the I2C controller is enabled and is used for HS mode transfers. The separate clock configuration for HS mode allows arbitration to take place in Fast mode (with timing configured by [Controller Clock Configuration 0 \(MCCR0\)](#)), before switching to HS mode (with timing configured by MCCR1).

Diagram

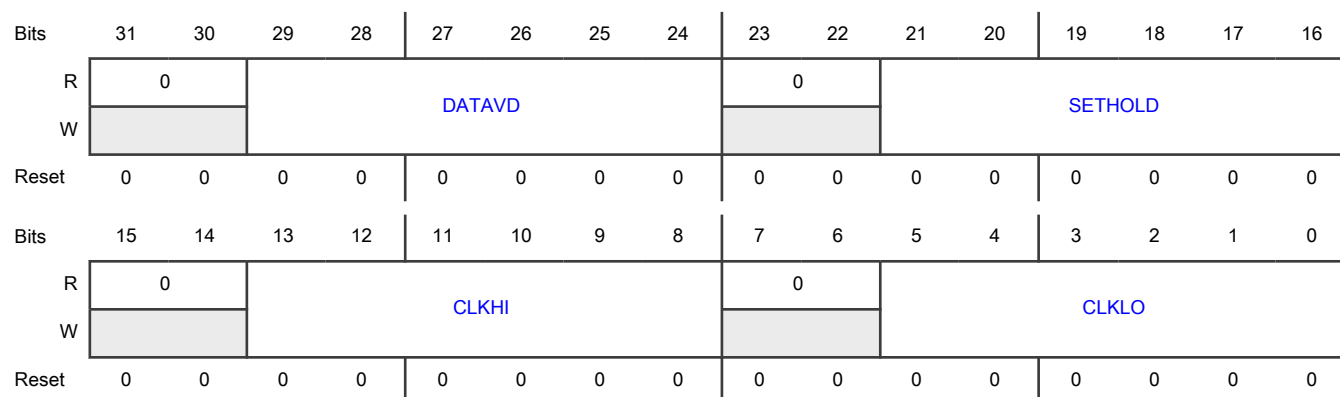

Fields

Field	Function
31-30 —	Reserved
29-24 DATAVD	Data Valid Delay

Table continues on the next page...

Table continued from the previous page...

Field	Function
	Specifies the minimum number of cycles (minus one) used as the data hold time for SDA. This value must be less than the minimum SCL low period.
23-22 —	Reserved
21-16 SETHOLD	Setup Hold Delay Specifies the minimum number of cycles (minus one) used by the controller for these conditions: • Hold time for a Start condition • Setup and hold time for a repeated Start condition • Setup time for a Stop condition The setup time is extended by the time needed to detect a rising edge on the external SCL pin. Ignoring any additional board delay due to external loading, this time is equal to $(2 + \text{FILTSCl}) \div 2^{\text{PRESCALE}}$ cycles.
15-14 —	Reserved
13-8 CLKHI	Clock High Period Specifies the minimum number of cycles (minus one) that the controller drives the SCL clock high. The SCL high time is extended by the time needed to detect a rising edge on the external SCL pin. Ignoring any additional board delay due to external loading, this time is equal to $(2 + \text{FILTSCl}) \div 2^{\text{PRESCALE}}$ cycles.
7-6 —	Reserved
5-0 CLKLO	Clock Low Period Specifies the minimum number of cycles (minus one) that the controller drives the SCL clock low. This value is also used for the minimum bus free time between a Stop and a Start condition. This period is extended by the time needed to detect a rising edge on the external SCL pin. Ignoring any additional board delay due to external loading, this time is equal to $(2 + \text{FILTSCl}) \div 2^{\text{PRESCALE}}$ cycles.

38.7.1.15 Controller FIFO Control (MFCR)


Offset

Register	Offset
MFCR	58h

Function

Controls the receive and transmit FIFO watermark values.

Diagram

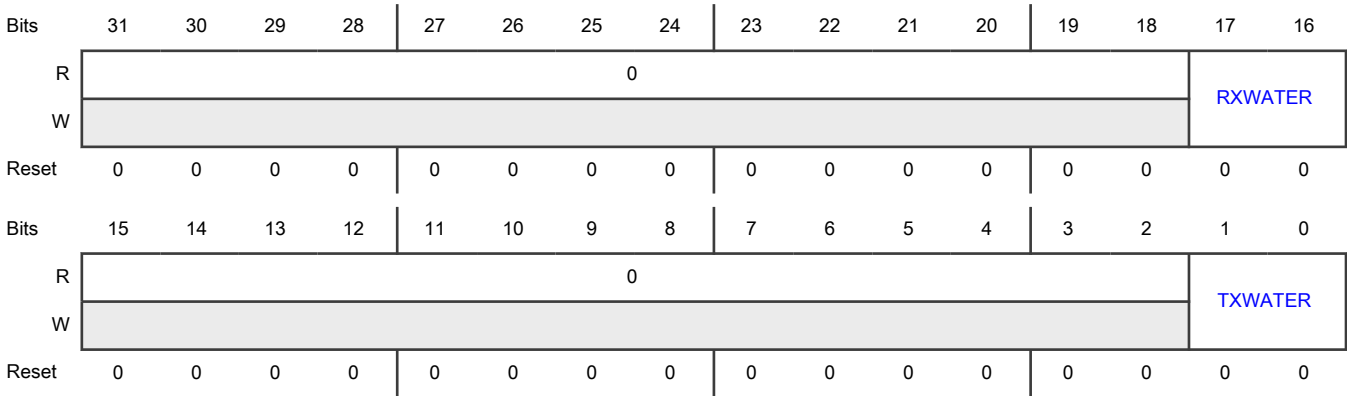

Fields

Field	Function
31-18 —	Reserved
17-16 RXWATER	Receive FIFO Watermark Determines the watermark for setting SSR[RDF] . That flag is set when the number of words in the receive FIFO is greater than the value of this field. Writing a value equal to or greater than the FIFO size truncates the value.
15-2 —	Reserved
1-0 TXWATER	Transmit FIFO Watermark Determines the watermark for setting SSR[TDF] . That flag is set when the number of words in the transmit FIFO is equal or less than the value of this field. Writing a value equal to or greater than the FIFO size truncates the value.

38.7.1.16 Controller FIFO Status (MFSR)


Offset

Register	Offset
MFSR	5Ch

Function

Specifies the number of words in the transmit and receive FIFOs.

Diagram

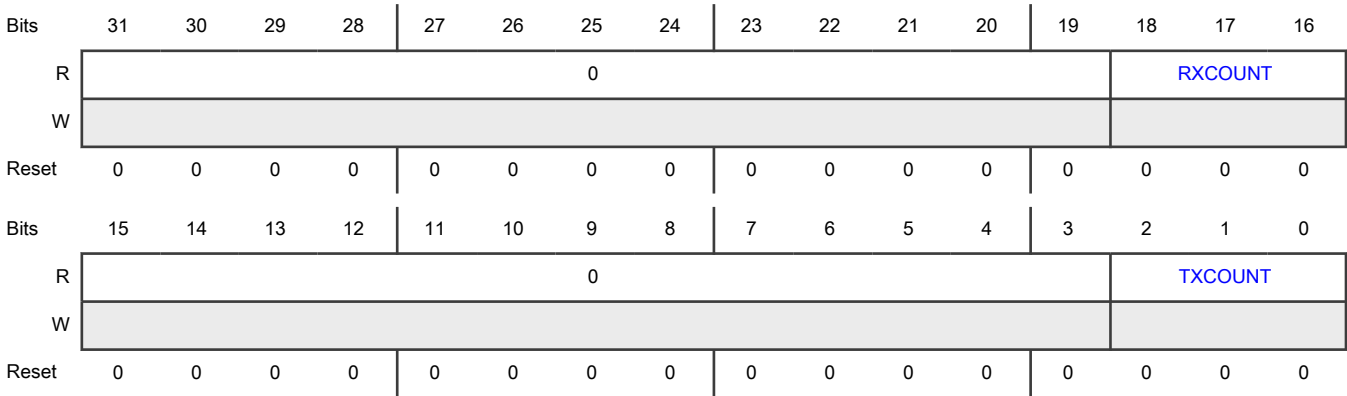

Fields

Field	Function
31-19 —	Reserved
18-16 RXCOUNT	Receive FIFO Count Specifies the number of words in the receive FIFO.
15-3 —	Reserved
2-0 TXCOUNT	Transmit FIFO Count Specifies the number of words in the transmit FIFO.

38.7.1.17 Controller Transmit Data (MTDR)

Offset


Register	Offset
MTDR	60h

Function

Configures transmit data:

- An 8-bit write to [MTDR\[CMD\]](#) is ignored and does not increment the FIFO write pointer.
- An 8-bit write to [MTDR\[DATA\]](#) zero-extends the value of MTDR[CMD] and increments the FIFO write pointer.
- A 16-bit or 32-bit write operation writes to both MTDR[CMD] and MTDR[DATA] and increments the FIFO write pointer.

Diagram

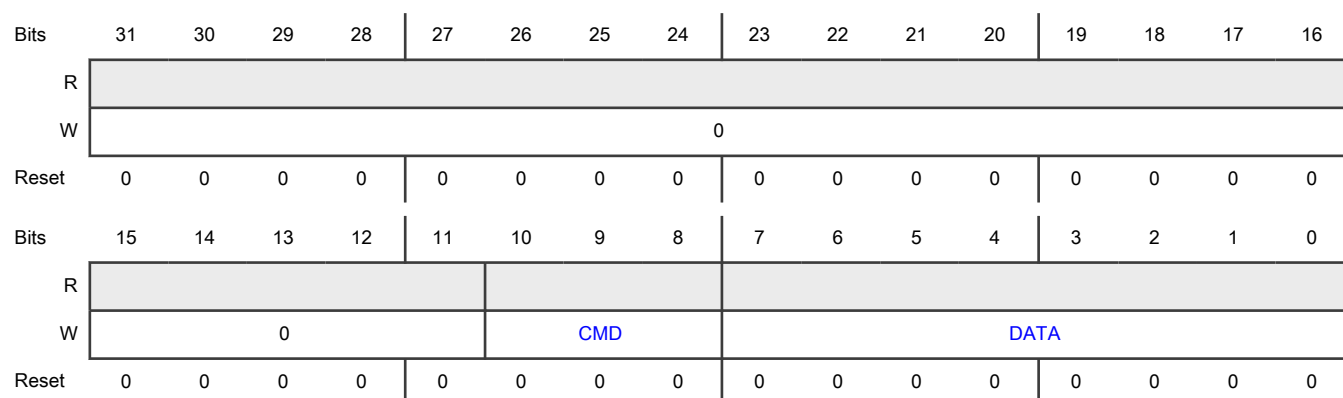

Fields

Field	Function
31-11 —	Reserved
10-8 CMD	Command Data Selects command transmitted by controller. 000b - Transmit the value in DATA[7:0] 001b - Receive (DATA[7:0] + 1) bytes. DATA[7:0] is used as a byte counter. Receive that many bytes and check each for a data match (if configured) before storing the received data in the receive FIFO. 010b - Generate Stop condition on I2C bus 011b - Receive and discard (DATA[7:0] + 1) bytes. DATA[7:0] is used as a byte counter. Receive that many bytes but do not check for a data match or store those bytes in the receive FIFO. 100b - Generate (repeated) Start on the I2C bus and transmit the address in DATA[7:0] 101b - Generate (repeated) Start on the I2C bus and transmit the address in DATA[7:0] (this transfer expects a NACK to be returned) 110b - Generate (repeated) Start on the I2C bus and transmit the address in DATA[7:0] using HS mode 111b - Generate (repeated) Start on the I2C bus and transmit the address in DATA[7:0] using HS mode (this transfer expects a NACK to be returned)
7-0 DATA	Transmit Data Contains data used by the commands listed in MTDR[CMD]. Performing an 8-bit write to this field zero-extends the value of MTDR[CMD] .

38.7.1.18 Controller Receive Data (MRDR)

Offset

Register	Offset
MRDR	70h

Function

Contains the status of the receive FIFO and the data received by the I2C controller that has not been discarded.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0	RXEMPTY	0						DATA							
W																
Reset	0	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-15 —	Reserved
14 RXEMPTY	Receive Empty Indicates whether the controller receive data FIFO is empty. 0b - Not empty 1b - Empty
13-8 —	Reserved
7-0 DATA	Receive Data Contains data received by the I2C controller that has not been discarded. Received data can be discarded due to the command in MTDR[CMD] , or the controller can be configured to discard nonmatching data.

38.7.1.19 Controller Receive Data Read Only (MRDROR)


Offset

Register	Offset
MRDROR	78h

Function

Contains the status of the receive FIFO and returns the data received by the I2C controller, but does not pull the data from the FIFO.

Diagram

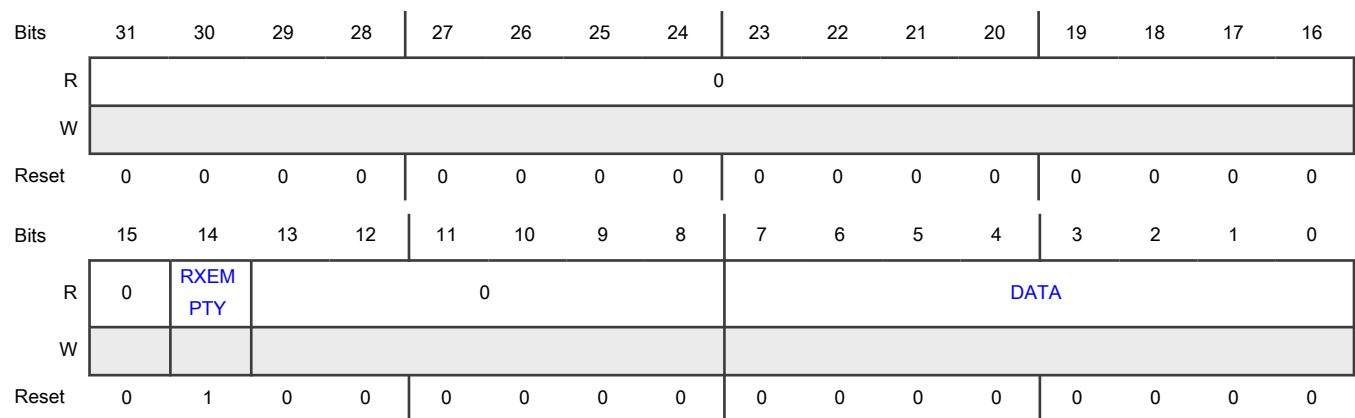

Fields

Field	Function
31-15 —	Reserved
14 RXEMPTY	RX Empty Indicates whether the receive data FIFO is empty. 0b - Not empty 1b - Empty
13-8 —	Reserved
7-0 DATA	Receive Data

38.7.1.20 Target Control (SCR)


Offset

Register	Offset
SCR	110h

Function

Contains resets and other target control settings.

Diagram

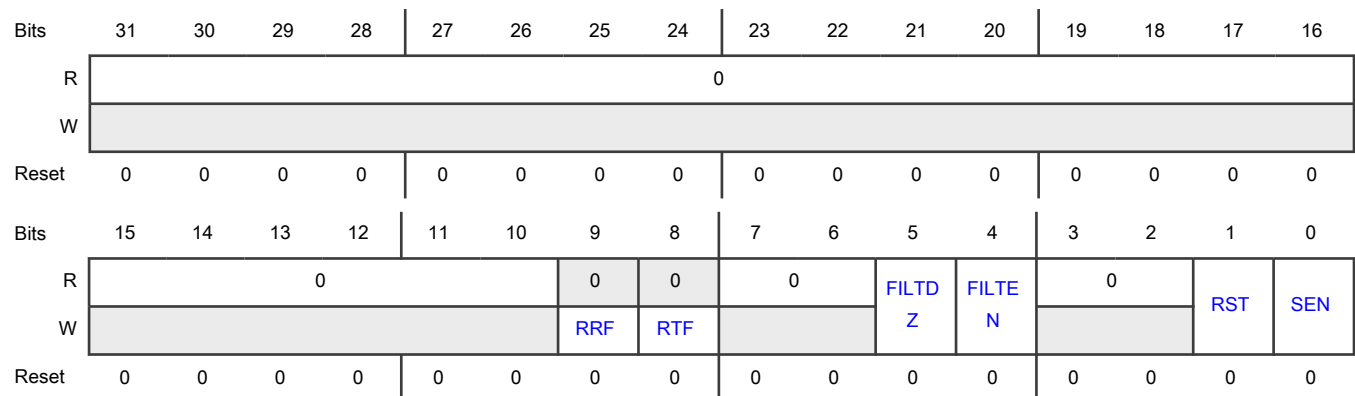

Fields

Field	Function
31-10 —	Reserved
9 RRF	Reset Receive FIFO Empties the receive FIFO in Target Receive Data (SRDR) . 0b - No effect 1b - SRDR is now empty
8 RTF	Reset Transmit FIFO Empties the transmit FIFO in Target Transmit Data (STDR) . 0b - No effect 1b - STDR is now empty
7-6 —	Reserved
5	Filter Doze Enable

Table continues on the next page...

Table continued from the previous page...

Field	Function
FILTDZ	Enables filter in Doze mode. Update this field only when the I2C target is disabled. 0b - Enable 1b - Disable
4 FILTEN	Filter Enable Enables digital filter and output delay counter for target mode. Update this field only when the I2C target is disabled. 0b - Disable 1b - Enable
3-2 —	Reserved
1 RST	Software Reset Resets target mode logic. The reset takes effect immediately. The value of this field remains 1 until you write 0 to it. There is no minimum delay required before clearing the software reset. 0b - Not reset 1b - Reset
0 SEN	Target Enable Enables I2C Target mode. 0b - Disable 1b - Enable

38.7.1.21 Target Status (SSR)


Offset

Register	Offset
SSR	114h

Function

Contains status flags for transmit and receive data, for error conditions, and for bus and target busy or idle status.

Diagram

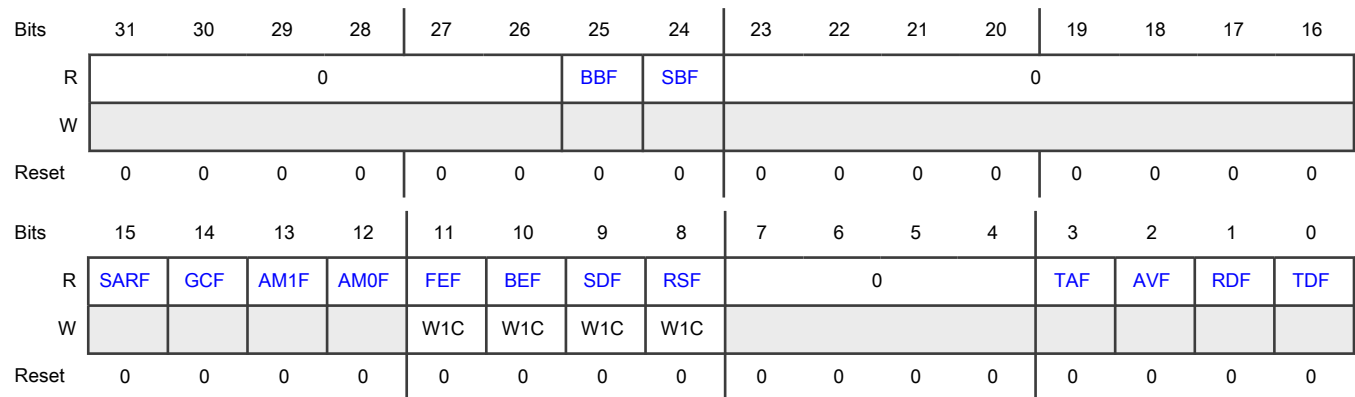

Fields

Field	Function
31-26 —	Reserved
25 BBF	Bus Busy Flag Indicates whether an I2C bus is idle or busy. 0b - Idle 1b - Busy
24 SBF	Target Busy Flag Indicates whether an I2C target is idle or busy. 0b - Idle 1b - Busy
23-16 —	Reserved
15 SARF	SMBus Alert Response Flag Indicates whether an SMBus alert response has been detected. You can clear this flag by reading Target Address Status (SASR) . This flag cannot generate an asynchronous wakeup. 0b - Disabled or not detected 1b - Enabled and detected
14 GCF	General Call Flag Indicates whether a target has detected the general call address. You can clear this flag by reading Target Address Status (SASR) . This flag cannot generate an asynchronous wakeup.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - General call address disabled or not detected 1b - General call address detected
13 AM1F	Address Match 1 Flag Indicates whether the received address matches the value in ADDR1, or it falls within the ADDR0 to ADDR1 range as configured by SCFGR1[ADDRCFG] . This flag is cleared by reading Target Address Status (SASR) . This flag cannot generate an asynchronous wakeup. 0b - Matching address not received 1b - Matching address received
12 AM0F	Address Match 0 Flag Indicates whether the received address matches the ADDR0 field, as configured by SCFGR1[ADDRCFG] . This flag is cleared by reading Target Address Status (SASR) . This flag cannot generate an asynchronous wakeup. 0b - ADDR0 matching address not received 1b - ADDR0 matching address received
11 FEF	FIFO Error Flag Indicates whether there is a FIFO error. This flag can only be set when clock stretching is disabled. NOTE This field behaves differently for register reads and writes. When reading 0b - No FIFO error 1b - FIFO error When writing 0b - No effect 1b - Clear the flag
10 BEF	Bit Error Flag Indicates whether the LPI2C target has transmitted a logic 1 and detects a logic 0 on the I2C bus. The target ignores the rest of the transfer until the next (repeated) Start condition. NOTE This field behaves differently for register reads and writes. When reading 0b - No bit error occurred

Table continues on the next page...

Table continued from the previous page...

Field	Function
	1b - Bit error occurred When writing 0b - No effect 1b - Clear the flag
9 SDF	Stop Detect Flag Indicates whether the LPI2C target detects a Stop condition, and if the LPI2C target matched the last address byte. When SCFGR1[SDFG] = 1, this flag is set on any Stop condition. NOTE This field behaves differently for register reads and writes. When reading 0b - No Stop detected 1b - Stop detected When writing 0b - No effect 1b - Clear the flag
8 RSF	Repeated Start Flag Indicates whether the LPI2C target detects a repeated Start condition and if the LPI2C target matched the last address byte. When SCFGR1[RSFG] = 1, this flag is set on any repeated Start condition. This flag is not set when the target first detects a Start condition. NOTE This field behaves differently for register reads and writes. When reading 0b - No repeated Start detected 1b - Repeated Start detected When writing 0b - No effect 1b - Clear the flag
7-4 —	Reserved
3 TAF	Transmit ACK Flag Indicates whether a transmit ACK or NACK is required. You can clear this flag by writing to Target Transmit ACK (STAR). 0b - Not required

Table continues on the next page...

Table continued from the previous page...

Field	Function
	1b - Required
2 AVF	Address Valid Flag Indicates whether the contents of Target Address Status (SASR) are valid. You can clear this flag by reading SASR. When SCFGR1[RXCFCG] = 1, this flag is also cleared by reading Target Receive Data (SRDR). 0b - Not valid 1b - Valid
1 RDF	Receive Data Flag Indicates whether receive data is ready. You can clear this flag by reading Target Receive Data (SRDR). When SCFGR1[RXCFCG] = 1, this flag is not cleared when reading Target Receive Data (SRDR) if SSR[AVF] = 1. 0b - Not ready 1b - Ready
0 TDF	Transmit Data Flag Indicates whether transmit data has been requested. This flag is cleared by writing to Target Transmit Data (STDR). When SCFGR1[TXCFCG] = 0, if a NACK, repeated Start, or Stop condition is detected, this flag is also cleared. 0b - Transmit data not requested 1b - Transmit data is requested


38.7.1.22 Target Interrupt Enable (SIER)

Offset

Register	Offset
SIER	118h

Function

Contains transmit and receive data interrupt enables, start and stop detect interrupt enables, and other target interrupt enables.

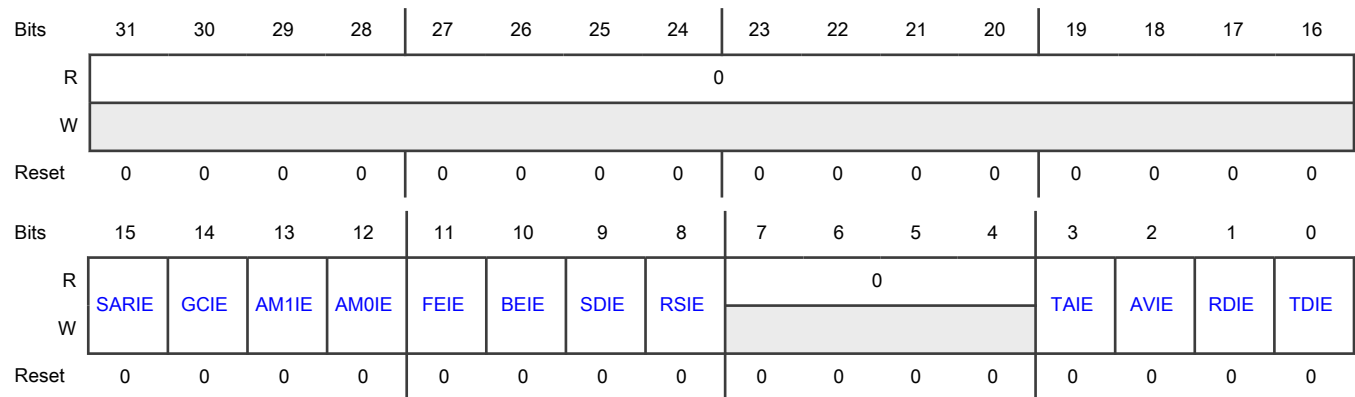Diagram**Fields**

Field	Function
31-16 —	Reserved
15 SARIE	SMBus Alert Response Interrupt Enable Enables interrupt for SMBus alert response. 0b - Disable 1b - Enable
14 GCIE	General Call Interrupt Enable Enables interrupt for general call. 0b - Disabled 1b - Enabled
13 AM1IE	Address Match 1 Interrupt Enable Enables interrupt for address match 1. 0b - Disable 1b - Enable
12 AM0IE	Address Match 0 Interrupt Enable Enables interrupt for address match 0. 0b - Disable 1b - Enable
11 FEIE	FIFO Error Interrupt Enable Enables interrupt for FIFO error. 0b - Disable 1b - Enable

Table continues on the next page...

Table continued from the previous page...

Field	Function
10 BEIE	Bit Error Interrupt Enable Enables interrupt for bit error. 0b - Disable 1b - Enable
9 SDIE	Stop Detect Interrupt Enable Enables interrupt for Stop detection. 0b - Disable 1b - Enable
8 RSIE	Repeated Start Interrupt Enable Enables interrupt for repeated start. 0b - Disable 1b - Enable
7-4 —	Reserved
3 TAIE	Transmit ACK Interrupt Enable Enables interrupt for transmit ACK. 0b - Disable 1b - Enable
2 AVIE	Address Valid Interrupt Enable Enables interrupt for valid address. 0b - Disable 1b - Enable
1 RDIE	Receive Data Interrupt Enable Enables interrupt for receive data. 0b - Disable 1b - Enable
0 TDIE	Transmit Data Interrupt Enable Enables interrupt for transmit data. 0b - Disable 1b - Enable

38.7.1.23 Target DMA Enable (SDER)


Offset

Register	Offset
SDER	11Ch

Function

Contains the transmit, request, and receive enables for DMA.

Diagram

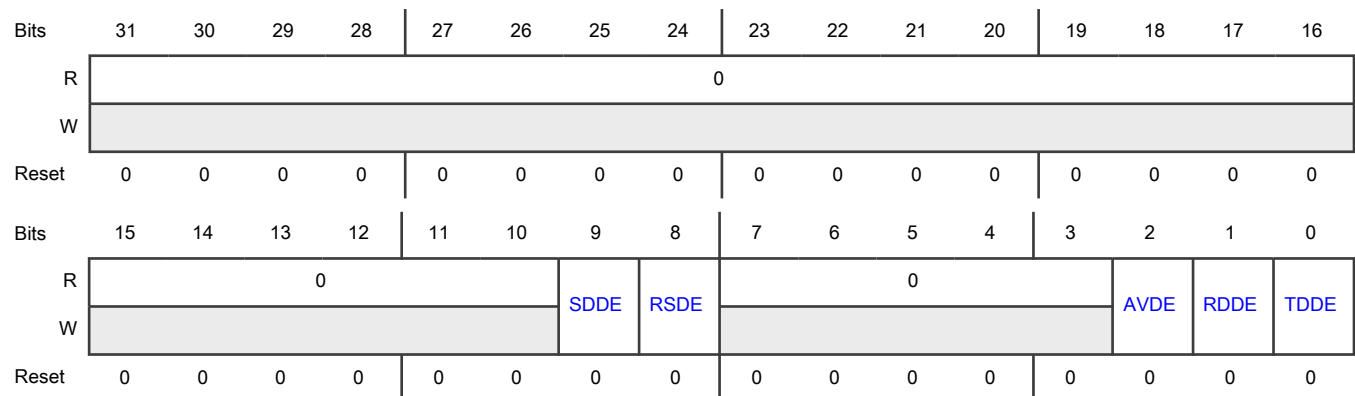

Fields

Field	Function
31-10 —	Reserved
9 SDDE	Stop Detect DMA Enable Enables DMA end-of-packet processing on stop detection. Reading Target Receive Data (SRDR) when it is empty: - Generates a DMA end-of-packet response. - Returns 0000_40FFh. - Writes 0 to SSR[SDF]. 0b - Disable 1b - Enable
8 RSDE	Repeated Start DMA Enable Enables DMA end-of-packet processing on repeated start. Reading Target Receive Data (SRDR) when it is empty: Generates a DMA end-of-packet response.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	- Returns 0000_40FFh. - Writes 0 to SSR[RDF]. 0b - Disable 1b - Enable
7-3 —	Reserved
2 AVDE	Address Valid DMA Enable Enables address valid DMA request. The address valid DMA request is shared with the receive data DMA request. If both are enabled, write 1 to SCFGR1[RXCFG] to allow the DMA to read the address from Target Receive Data (SRDR) . 0b - Disable 1b - Enable
1 RDDE	Receive Data DMA Enable Enables receive data for DMA. 0b - Disable DMA request 1b - Enable DMA request
0 TDDE	Transmit Data DMA Enable Enables transmit data for DMA. 0b - Disable 1b - Enable

38.7.1.24 Target Configuration 0 (SCFGR0)


Offset

Register	Offset
SCFGR0	120h

Function

Configures the read request feature.

Diagram

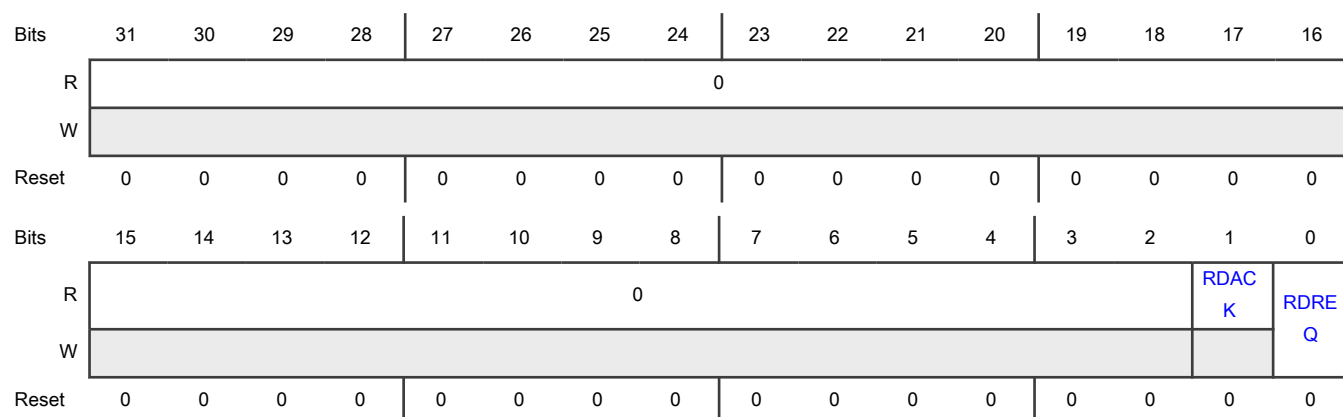

Fields

Field	Function
31-2 —	Reserved
1 RDACK	Read Acknowledge Flag Indicates whether a Start then Stop sequence with one SCL pulse between them acknowledged the read request while SCFGR0[RDREQ] = 1. You can clear this flag by writing 0 to SCFGR0[RDREQ]. 0b - Read Request not acknowledged 1b - Read Request acknowledged
0 RDREQ	Read Request Enables read request. When the I2C bus is idle, writing 1 to this field causes the LPI2C target to drive SDA low, triggering a Start condition. The LPI2C target releases SDA on the next falling edge of SCL or when you write 0 to this field. To initiate a second read request (for example, following I2C bus activity that did not acknowledge the request), write 0 then 1 to this field. When the I2C bus is busy, writing to this register always writes 0 to this field. 0b - Disable 1b - Enable

38.7.1.25 Target Configuration 1 (SCFGR1)

Offset

Register	Offset
SCFGR1	124h

Function

Configures various aspects of the target.

Write to this register only when the I2C target is disabled.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0				SDCF G	RSCF G	RXALL	0				ADDRCFG				
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0	HSME N	IGNAC K	RXCF G	TXCF G	SAEN	GCEN	0		RXNA CK	ACKS TALL	TXDS TALL	RXST ALL	ADRS TALL		
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-27 —	Reserved
26 SDCFG	Stop Detect Configuration Configures the conditions that set SSR[SDF] . 0b - Any Stop condition following an address match 1b - Any Stop condition
25 RSCFG	Repeated Start Configuration Configures the conditions that set SSR[RSF] . 0b - Any repeated Start condition following an address match 1b - Any repeated Start condition
24 RXALL	Receive All Enables receive-all functionality. When enabled, the LPI2C target stores all addresses on the I2C bus in Target Address Status (SASR) and all data on the I2C bus in Target Receive Data (SRDR) . However, the LPI2C target does not drive SDA (for ACK or target-transmit transfer) unless there is an address match. The LPI2C target can drive SCL if clock stretching is enabled. When this field is 1, the LPI2C target only supports 7-bit addressing modes (you must configure SCFGR1[ADDRCFG] for 7-bit address match). Software can support 10-bit addresses, however. The first byte of a 10-bit address is saved to Target Address Match (SAMR) . The second byte is saved as the first data byte in Target Receive Data (SRDR) .

Table continues on the next page...

Table continued from the previous page...

Field	Function
	Use this field to aid debugging of the I2C bus by saving all data on the bus without altering the state of the bus. When this field is 1, it is recommended to also write 1 to SCFGR1[RSCFG] and SCFGR1[SDCFG] so you can track the full state of the I2C bus. 0b - Disable 1b - Enable
23-19 —	Reserved
18-16 ADDRCFG	Address Configuration Configures the condition that causes an address to match. 000b - Address match 0 (7-bit) 001b - Address match 0 (10-bit) 010b - Address match 0 (7-bit) or address match 1 (7-bit) 011b - Address match 0 (10-bit) or address match 1 (10-bit) 100b - Address match 0 (7-bit) or address match 1 (10-bit) 101b - Address match 0 (10-bit) or address match 1 (7-bit) 110b - From address match 0 (7-bit) to address match 1 (7-bit) 111b - From address match 0 (10-bit) to address match 1 (10-bit)
15-14 —	Reserved
13 HSMEN	HS Mode Enable Enables detection of the HS mode controller code of target address 0000_1XX, but does not cause an address match on this code. When this field is 1 and any HS mode controller code is detected, SCR[FILTEN] and SCFGR1[ACKSTALL] are ignored until the next Stop condition is detected. 0b - Disable 1b - Enable
12 IGNACK	Ignore NACK Determines whether the target ends transfer when a NACK condition is detected. When this field is 1, the LPI2C target continues transfers after a NACK is detected. This field is required to be 1 in Ultra-Fast mode. 0b - End transfer on NACK 1b - Do not end transfer on NACK
11 RXCFG	Receive Data Configuration Configures which data is returned and which flags are cleared when reading Target Receive Data (SRDR).

Table continues on the next page...

Table continued from the previous page...

Field	Function
	When this field is 0, reading SRDR returns received data and clears SSR[RDF]. When this field is 1, reading SRDR: • Returns the value of Target Address Status (SASR) and clears SSR[AVF] when SSR[AVF] is set. • Returns received data and clears SSR[RDF] when SSR[AVF] is not set. 0b - Return received data, clear SSR[RDF] 1b - Return SASR and clear SSR[AVF] when SSR[AVF] is set, return received data and clear SSR[RDF] when SSR[AVF] is not set
10 TXCFG	Transmit Flag Configuration Determines which conditions set SSR[TDF]. This field always becomes 1 before a NACK is detected at the end of a target-transmit transfer. This change can cause an extra word to be written to the transmit data FIFO. When this field is 0, Target Transmit Data (STDR) is automatically emptied when a target-transmit transfer is detected. SSR[TDF] is set when a target-transmit transfer is detected, and SSR[TDF] is cleared at the end of the target-transmit transfer. When this field is 1, SSR[TDF] is set when STDR is empty, and SSR[TDF] is cleared when STDR is full. This setting allows STDR to be filled before a target-transmit transfer is detected. However, it can cause STDR to be written before a NACK is detected on the last byte of a target-transmit transfer. 0b - SSR[TDF] is set only during a target-transmit transfer when STDR is empty 1b - SSR[TDF] is set whenever STDR is empty
9 SAEN	SMBus Alert Enable Enables a match on an SMBus alert. 0b - Disable 1b - Enable
8 GCEN	General Call Enable Enables a general call address. 0b - Disable 1b - Enable
7-5 —	Reserved
4 RXNACK	Receive NACK Determines whether to override the setting of STAR[TXNACK] when the LPI2C receives a matching address during an overrun. When this field is 1, the LPI2C target responds with a NACK under the following conditions:

Table continues on the next page...

Table continued from the previous page...

Field	Function
	• SSR[AVF] would be set due to matching an address, but that flag is already 1 (address overrun). • SSR[RDF] would be set due to receiving data, but that flag is already 1 (receive data overrun). 0b - ACK or NACK always determined by STAR[TXNACK] 1b - NACK always generated on address overrun or receive data overrun, otherwise ACK or NACK is determined by STAR[TXNACK]
3 ACKSTALL	ACK SCL Stall Enables SCL clock stretching during target-transmit address bytes and target-receiver address and data bytes, so you can write to Target Transmit ACK (STAR) before the ACK or NACK is transmitted. Clock stretching occurs when transmitting the ninth bit, and is therefore not compatible with HS mode. If this field is 1: • You do not need to write 1 to SCFGR1[RXSTALL] or SCFGR1[ADRSTALL]. • When there is an address match on the first byte of a 10-bit address, SSR[AVF] is set, allowing you to read the received address before writing to Target Transmit ACK (STAR). 0b - Disable 1b - Enable
2 TXDSTALL	Transmit Data SCL Stall Enables SCL clock stretching when SSR[TDF] = 1 during a target-transmit transfer. Clock stretching occurs following the ninth bit, and is therefore compatible with HS mode. 0b - Disable 1b - Enable
1 RXSTALL	RX SCL Stall Enables SCL clock stretching when SSR[RDF] = 1 during a target-receive transfer. Clock stretching occurs following the ninth bit, and is therefore compatible with HS mode. 0b - Disable 1b - Enable
0 ADRSTALL	Address SCL Stall Enables SCL clock stretching when SSR[AVF] = 1. Clock stretching only occurs following the ninth bit, and is therefore compatible with HS mode. 0b - Disable 1b - Enable

38.7.1.26 Target Configuration 2 (SCFGR2)

Offset

Register	Offset
SCFGR2	128h

Function

Configures data valid delay, clock hold time, and glitch filters for SDA and SCL.

Write to this register only when the I2C target is disabled.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0				FILTSDA				0				FILTSCS			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0		DATAVD						0				CLKHOLD			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-28 —	Reserved
27-24 FILTSDA	Glitch Filter SDA Configures the I2C target digital glitch filters for SDA input. Writing 0 to this field disables the glitch filter. Glitches equal to or less than the number of cycles defined by this field are filtered out and ignored. The latency through the glitch filter is equal to the number of cycles defined by this field + 3. The latency must be configured to be less than the minimum SCL low or high period. MCFGR1[PRESCALE] does not affect the glitch filter cycle count, and the glitch filter cycle count is disabled in HS mode.
23-20 —	Reserved
19-16	Glitch Filter SCL

Table continues on the next page...

Table continued from the previous page...

Field	Function
FILTSC	Configures the I2C target digital glitch filters for SCL input. Writing 0 to this field disables the glitch filter. Glitches equal to or less than the number of cycles defined by this field are filtered out and ignored. The latency through the glitch filter is equal to the number of cycles defined by this field + 3. The latency must be configured to be less than the minimum SCL low or high period. MCFGR1[PRESALE] does not affect the glitch filter cycle count, and the glitch filter cycle count is disabled in HS mode.
15-14 —	Reserved
13-8 DATAVD	Data Valid Delay Configures the SDA data valid delay time for the I2C target, which is equal to $FILTSC + DATAVD + 3$ cycles. The data valid delay must be configured to be less than the minimum SCL low period. MCFGR1[PRESALE] does not affect the I2C target data valid delay time, and the I2C target data valid delay time is disabled in HS mode.
7-4 —	Reserved
3-0 CLKHOLD	Clock Hold Time Configures the minimum clock hold time for the I2C target, when clock stretching is enabled. The minimum hold time is equal to the number of cycles defined by this field + 3. MCFGR1[PRESALE] does not affect the I2C target clock hold time, and the I2C target clock hold time is disabled in HS mode.

38.7.1.27 Target Address Match (SAMR)


Offset

Register	Offset
SAMR	140h

Function

Contains address values for received target match comparison.

Write to this register only when the I2C target is disabled.

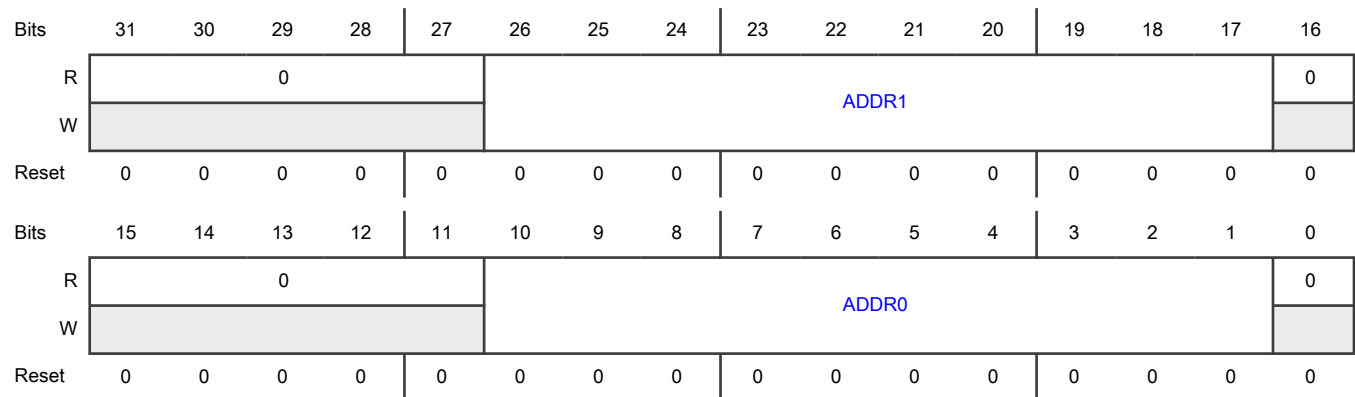Diagram**Fields**

Field	Function
31-27 —	Reserved
26-17 ADDR1	Address 1 Value Contains the value of address 1, which is compared to the received address to detect the target address. In 10-bit mode, the first address byte is compared to {11110, ADDR1[26:25]} and the second address byte is compared to ADDR1[24:17]. In 7-bit mode, the address is compared to ADDR1[23:17].
16-11 —	Reserved
10-1 ADDR0	Address 0 Value Contains the value of address 0, which is compared to the received address to detect the target address. In 10-bit mode, the first address byte is compared to {11110, ADDR0[10:9]} and the second address byte is compared to ADDR0[8:1]. In 7-bit mode, the address is compared to ADDR0[7:1].
0 —	Reserved


38.7.1.28 Target Address Status (SASR)**Offset**

Register	Offset
SASR	150h

Function

Contains the received address and its validity.

Diagram

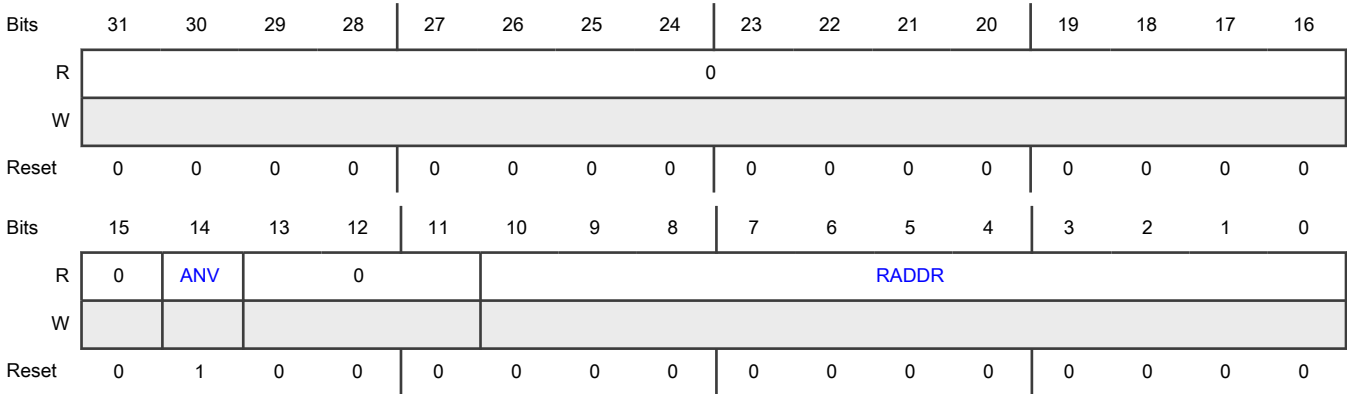

Fields

Field	Function
31-15 —	Reserved
14 ANV	Address Not Valid Indicates whether SASR[RADDR] is valid. 0b - Valid 1b - Not valid
13-11 —	Reserved
10-0 RADDR	Received Address Contains the received address. Updates whenever SSR[AM0F] or SSR[AM1F] is set. Reading Target Address Status (SASR) clears SSR[AM0F] and SSR[AM1F] . In 7-bit mode, the address byte is stored in RADDR[7:0] . In 10-bit mode, the first address byte is {11110, RADDR[10:9] , RADDR[0] } and the second address byte is RADDR[8:1] . The Read-or-Write bit is therefore always stored in RADDR[0] . When SCFGR1[ACKSTALL] = 1, if the first address byte matches in 10-bit mode, the first address byte is stored in RADDR[7:0] so you can read this field before writing the Transmit ACK. If the second address byte matches, this field is then updated with the full 10-bit address.

38.7.1.29 Target Transmit ACK (STAR)

Offset

Register	Offset
STAR	154h

Function

Configures choice of ACK or NACK on each received word.


You can write to this register only when [SCFGR1\[ACKSTALL\]](#) = 1.

[SCFGR1\[ACKSTALL\]](#) enables clock stretching during the ACK-or-NACK bit slot. During this time, you can write to this register.

The logic ensures that the clock stretching continues for at least one bus clock cycle after this register is updated.

This clock stretching time can be extended via [SCFGR2\[CLKHOLD\]](#).

Diagram

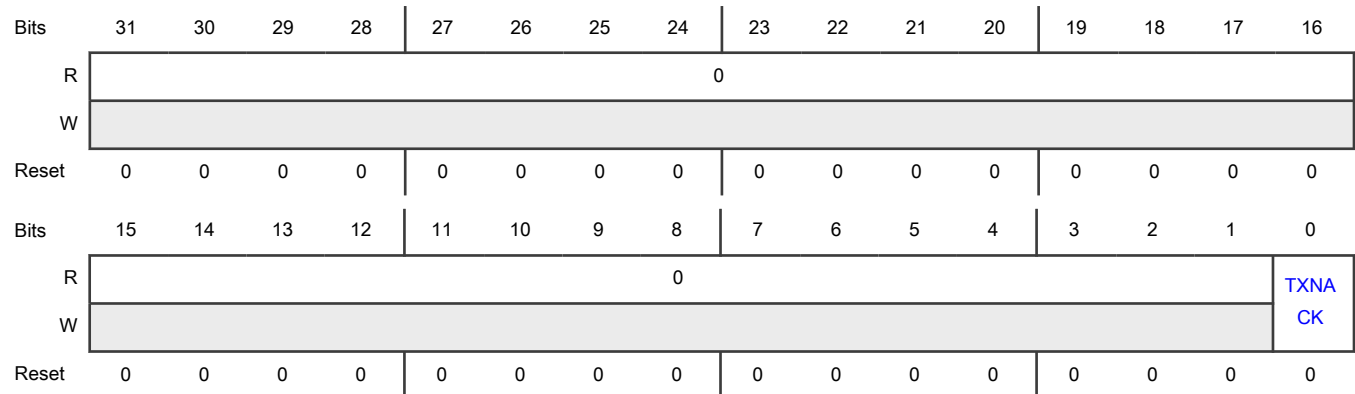

Fields

Field	Function
31-1 —	Reserved
0 TXNACK	Transmit NACK Selects whether transmit ACK (logic 0) or NACK (logic 1) is returned on the bus by the I2C target after receiving each word. - When SCFGR1[ACKSTALL] = 1, a transmit NACK signal must be written once for each matching address byte and each received word. SCFGR1[ACKSTALL] must be 1, because that setting stalls the data transfer until software reads the received word (and determines whether to respond with an ACK or NACK). - To configure the default (ACK or NACK), you can write to this field when LPI2C target is disabled or idle. 0b - Transmit ACK 1b - Transmit NACK

38.7.1.30 Target Transmit Data (STDR)

Offset

Register	Offset
STDR	160h

Function

Contains the I2C target data to transmit.

Clock stretching (enabled or disabled) affects when the transmit data is transferred. [SCFGR1\[TXDSTALL\]](#) enables clock stretching during the first data bit of a target-transmit transfer.

If clock stretching is enabled ([SCFGR1\[TXDSTALL\]](#) = 1), the transmit data transfer is stalled until this register is updated. Clock stretching is extended by at least 1 bus clock cycle after this register is updated. Clock stretching can be delayed further by using [SCFGR2\[CLKHOLD\]](#).

If clock stretching is disabled ([SCFGR1\[TXDSTALL\]](#) = 0), the transmit data must be written before the start of the target-transmit transfer, otherwise [SSR\[FEF\]](#) is set.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R																
W	0															
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R																
W	0								DATA							
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-8 —	Reserved
7-0 DATA	Transmit Data Contains the I2C target data to transmit. Writing data to this register stores I2C target transmit data in this register.

38.7.1.31 Target Receive Data (SRDR)


Offset

Register	Offset
SRDR	170h

Function

Contains status of target receive data transfer.

Diagram

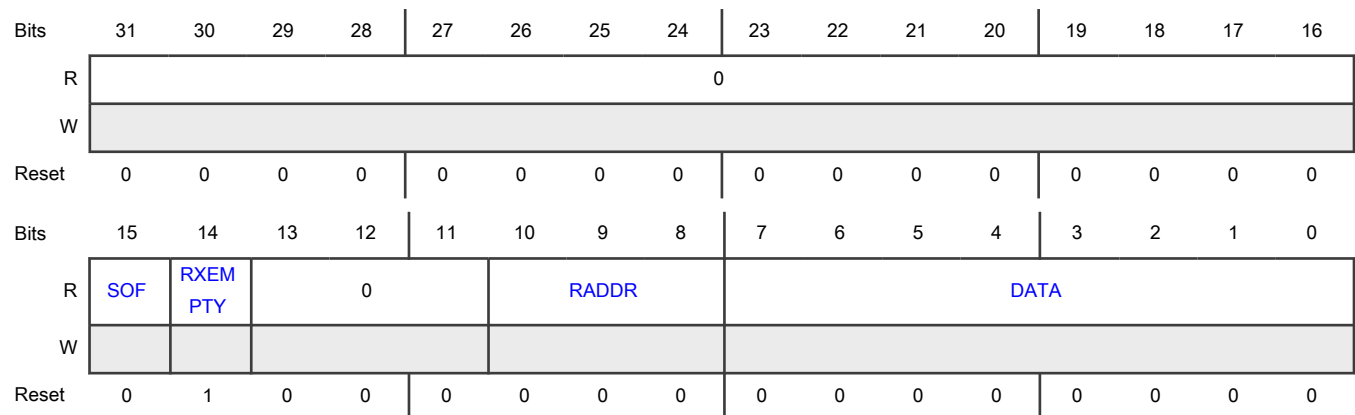

Fields

Field	Function
31-16 —	Reserved
15 SOF	Start of Frame Indicates whether this data word is the first data word since a (repeated) Start or Stop condition. 0b - Not first 1b - First
14 RXEMPTY	Receive Empty Indicates whether this register is empty. 0b - Not empty 1b - Empty
13-11 —	Reserved
10-8	Received Address

Table continues on the next page...

Table continued from the previous page...

Field	Function
RADDR	Contains the address received by the IC2 target. When both SCFGR1[RXCFCG] and SSR[AVF] are 1, bits [10:8] of SASR[RADDR] are returned. Otherwise, this field returns zero.
7-0 DATA	Received Data Contains the data received by the I2C target. When both SCFGR1[RXCFCG] and SSR[AVF] are 1, bits [7:0] of SASR[RADDR] are returned.

38.7.1.32 Target Receive Data Read Only (SRDROR)

Offset


Register	Offset
SRDROR	178h

Function

Contains the data received by the I2C target.

Reading this register returns the data received by the I2C target, but does not pull the data from the register.

Diagram

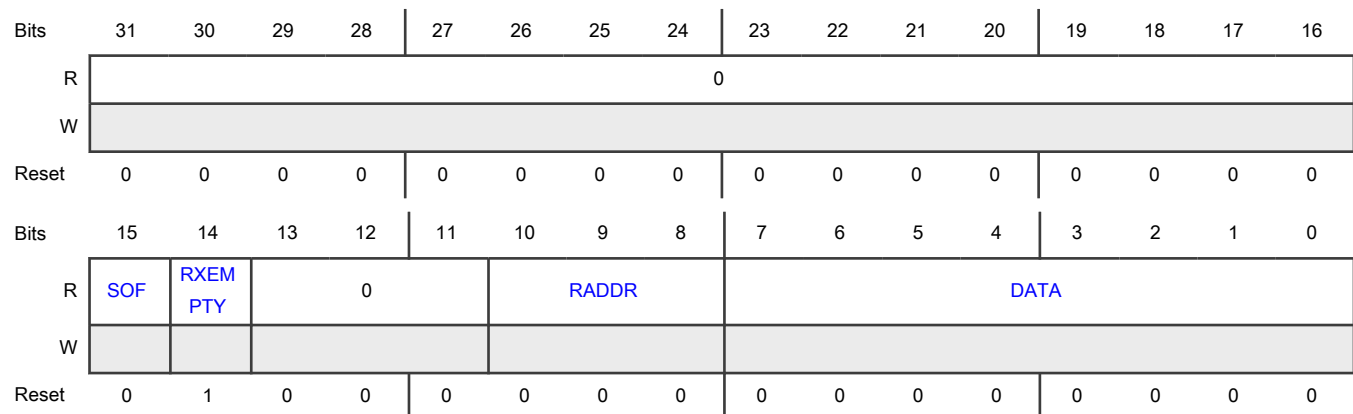

Fields

Field	Function
31-16 —	Reserved
15 SOF	Start of Frame Indicates whether this data word is the first data word since a (repeated) Start or Stop condition.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - Not the first 1b - First
14 RXEMPTY	Receive Empty Indicates whether Target Receive Data (SRDR) is empty. 0b - Not empty 1b - Empty
13-11 —	Reserved
10-8 RADDR	Received Address Contains address received by the LPI2C target. When both SCFGR1[RXCFCG] and SSR[AVF] are 1, bits [10:8] of SASR[RADDR] are returned. Otherwise, this field returns zero.
7-0 DATA	Receive Data Contains data received by the LPI2C target. When both SCFGR1[RXCFCG] and SSR[AVF] are 1, bits [7:0] of SASR[RADDR] are returned.

Chapter 39

Low Power Universal Asynchronous Receiver/Transmitter (LPUART)

39.1 Chip-specific LPUART information

Table 278. Reference links to related information

Topic	Related module	Reference
Full description	LPUART	LPUART
System memory map		Memory map
Clocking		Clock distribution
Power Management		Power Management
Signal multiplexing	Port control	Signal multiplexing

39.1.1 Module instances

This device supports six instances of LPUART: LPUART0, LPUART1, LPUART2, LPUART3, LPUART4 and LPUART5.

39.2 Overview

LPUART provides asynchronous, serial communication capabilities with external devices. It supports the non-return-to-zero (NRZ) encoding format and infrared data association (IrDA)-compatible, low-speed serial infrared (SIR) protocol. LPUART can continue operating when the processor is in Low-Power mode, if an appropriate peripheral clock is available.

39.2.1 Block diagram

[Figure 171](#) shows the transmitter portion of LPUART.

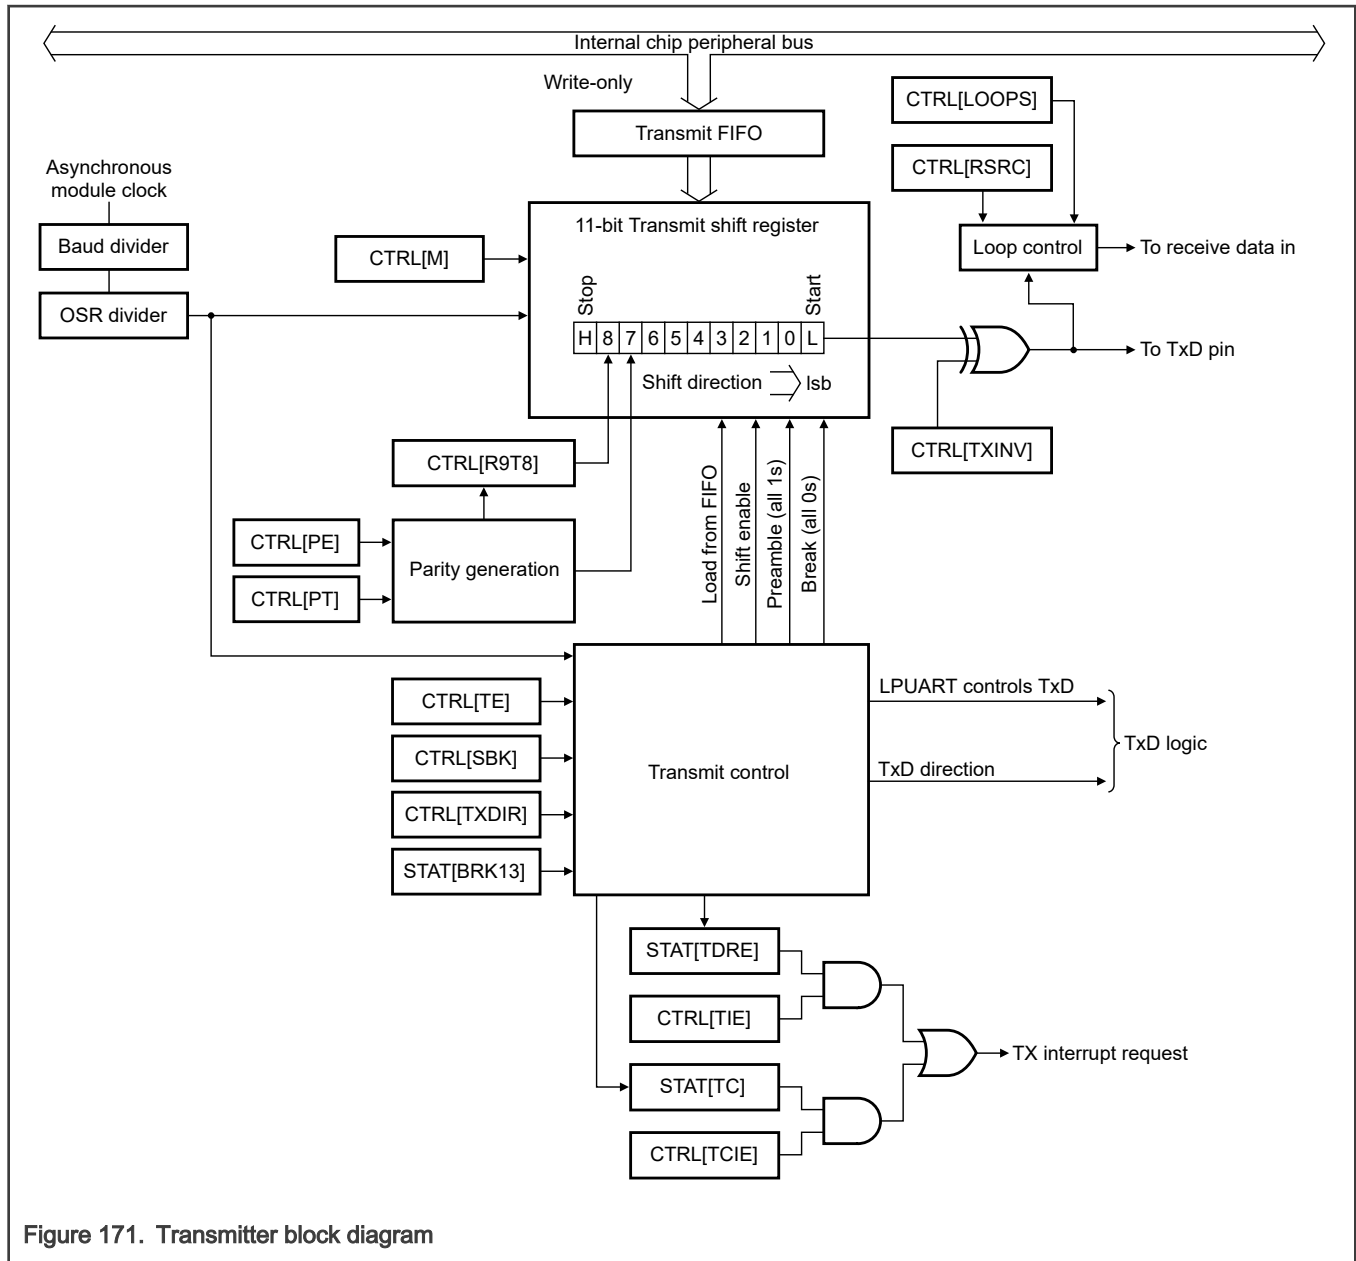


Figure 171. Transmitter block diagram

Figure 172 shows the receiver portion of LPUART.

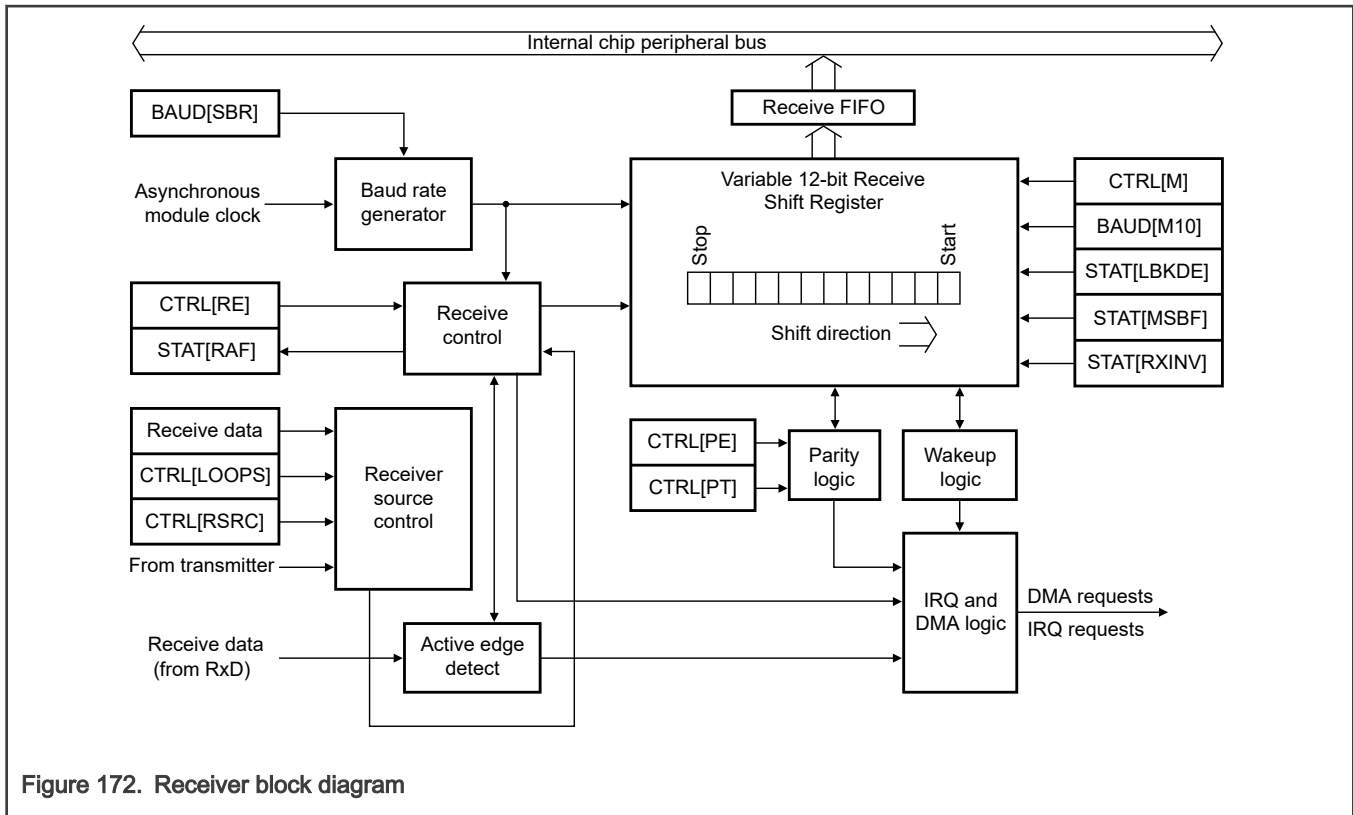


Figure 172. Receiver block diagram

39.2.2 Features

- Full-duplex, standard NRZ format
- Programmable baud rates (13-bit modulo divider) with a configurable oversampling ratio (OSR) from 4× to 32×
- Asynchronous operation of transmit and receive baud rates with respect to the bus clock:
 - Baud rate can be configured independently of the bus clock frequency.
 - Operation in Low-Power modes is supported.
- Interrupt, DMA, or polled operations:
 - Transmit data empty and transmission complete
 - Receive data full
 - Receive overrun, parity error, framing error, and noise error
 - Idle receiver detect
 - Active edge on receive pin
 - Break detect supporting LIN
 - Receive data match
- Hardware parity generation and checking
- Programmable 7-bit, 8-bit, 9-bit, or 10-bit character length
- Programmable 1-bit or 2-bit stop bits
- Support for three receiver wake-up methods:
 - Idle line wake-up


- Address mark wake-up
- Receive data match
- Automatic address matching to reduce ISR overhead:
 - Address mark matching
 - Idle line address matching
 - Address match start, address match end
- Optional 13-bit and 11-bit break character generation
- Configurable idle length detection supporting 1, 2, 4, 8, 16, 32, 64, or 128 idle characters
- Selectable transmitter output and receiver input polarity
- Hardware flow control support for request to send (RTS) and clear to send (CTS) signals
- Selectable IrDA 1.4 return-to-zero-inverted (RZI) format with a programmable pulse width
- Independent FIFO structure for transmit and receive functions:
 - Separate configurable watermarks for receive and transmit requests
 - Option for receiver to assert request after a configurable number of idle characters, if receive FIFO is not empty
- Support swapping of TXD and RXD

39.3 Functional description

LPUART supports full-duplex, asynchronous, NRZ serial communication and comprises a baud rate generator, transmitter, and receiver block. The transmitter and receiver operate independently, although they use the same baud rate generator. The following sections describe all LPUART blocks.

39.3.1 Baud rate generation

A 13-bit modulus counter in the baud rate generator derives the baud rate for both the receiver and transmitter. The value, ranging from 1 to 8191, written to **BAUD[SBR]** determines the baud clock divisor for the asynchronous LPUART baud clock. The baud rate clock drives the receiver, while a bit clock, generated from the baud rate clock divided by the OSR, drives the transmitter. Depending on the OSR, the receiver has an acquisition rate of 4 to 32 samples per bit time. LPUART requires **BAUD[SBR]** and **BAUD[OSR]** to accurately match the baud rate requirement. There is a relationship between the required baud rate and the input clock frequency, SBR, and OSR. See the below figure for details.

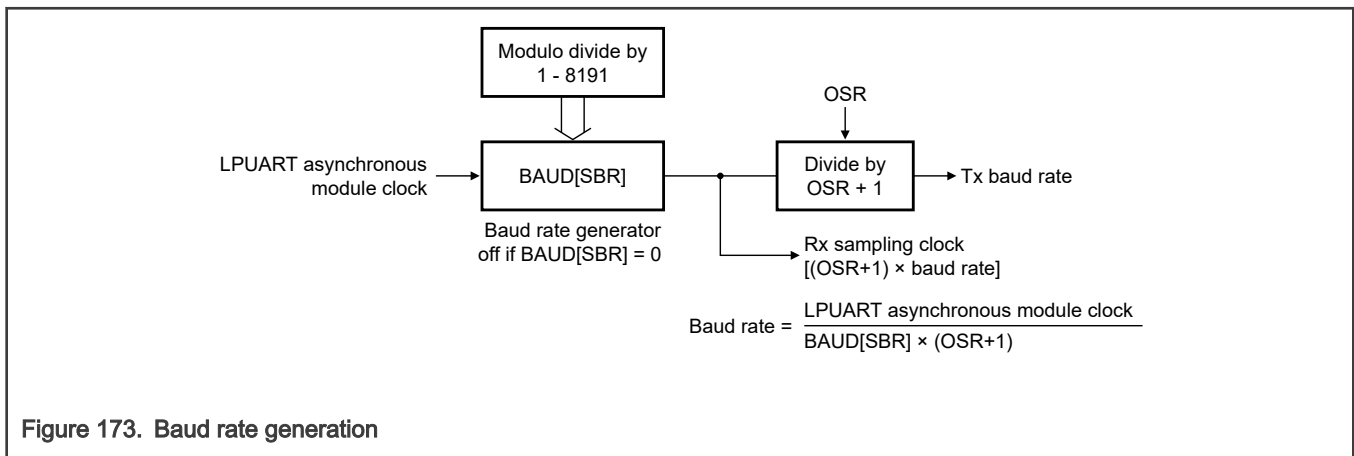

Baud rate generation is subject to these sources of error:

- Integer division of the asynchronous LPUART baud clock may not give the exact target frequency.
- Synchronization with the asynchronous LPUART baud clock can lead to a phase shift.

Baud rate generation is a free-running counter that continues whenever the transmitter or receiver is enabled. The transmitter bit clock continues whenever the transmitter is enabled; each transmitted character aligns to the next edge of the transmit bit clock.

In general, configuring OSR for a higher ratio and/or sampling on both edges of the clock slightly improves LPUART's tolerance to baud rate mismatch between the received data and LPUART configured baud rate. However, the three data samples in each bit (see [Data sampling technique](#)) are also closer together, which may impact noise sensitivity.

39.3.2 Baud rate tolerance

A transmitting device may operate at a baud rate below or above that of the receiver.

Accumulated bit time misalignment can cause one of the three stop bit data samples to fall outside the actual stop bit. A noise error will occur if the three samples are not all the same logical values. A framing error will occur if the receiver clock is misaligned in such a way that the majority of the three stop bit samples are a logic zero.

As the receiver samples an incoming frame, it may resynchronize the oversampling clock on any valid falling edge within the frame. Resynchronization within frames will correct a misalignment between transmitter bit times and receiver bit times.

In general, increasing the number of samples per bit will increase the baud rate tolerance and decreasing the number of samples per bit will reduce the baud rate tolerance. Note that since LPUART implements triple voting on consecutive receive data samples, increasing the number of samples per bit will move those samples closer together which would reduce the width of noise that can be filtered by the triple voting logic.

39.3.3 Calculating baud rate tolerance

Using the following definitions:

- SAM is the number of sample points per bit (valid range from 8 to 32; equal to $(OSR + 1) \times (BOTHEDGE + 1)$).
- BIT is the number of bits in a character including start, data and stop bits (valid range from 9 to 13).

The ideal baud rate tolerance can be calculated as follows:

- Slow data rate tolerance = $((SAM \div 2) - 1) \div ((SAM \times BIT) - (SAM \div 2) + 2)$
- Fast data rate tolerance = $((SAM \div 2) - 2) \div (SAM \times BIT)$

As an example, if configured for 8-bit data, 1 stop bit (BIT = 10) and with OSR=0x7 and BOTHEDGE = 1 (SAM = 16):

- Slow data rate tolerance = $(8 - 1) \div (160 - 8 + 2) = 7 \div 154 = 4.54\%$
- Fast data rate tolerance = $(8 - 2) \div 160 = 6 \div 160 = 3.75\%$

If configured for 9-bit data with 1 stop bit (BIT = 11) with same oversampling configuration, then:

- Slow data rate tolerance = $(8 - 1) \div (176 - 8 + 2) = 7 \div 170 = 4.12\%$
- Fast data rate tolerance = $(8 - 2) \div 176 = 6 \div 176 = 3.41\%$

NOTE

Additional factors can contribute to a lower baud rate tolerance than the ideal. These include clock uncertainty or jitter on the LPUART functional clock source, differences in rise and fall times on the transmitter output and synchronization of the external receive pin to the local LPUART functional clock.

39.3.4 Transmitter functional description

This section describes the functioning of the LPUART transmitter, as shown in the transmitter portion of [Block diagram](#), as well as specialized functions for sending break and idle characters.

The transmitter output (TXD) idle state defaults to logic high; the transmitter output is inverted when you write 1 to [CTRL\[TXINV\]](#), which becomes 0 following reset. You can enable the transmitter by writing 1 to [CTRL\[TE\]](#). This queues a preamble character that is one full character frame of the Idle state. The transmitter then remains idle until data is available in the transmit FIFO and programs store data in the transmit FIFO by writing to [Data \(DATA\)](#).

The central element of the LPUART transmitter is the transmit shift register that is 9-bit to 13-bit long depending on the settings of [CTRL\[M\]](#), [CTRL\[M7\]](#), [BAUD\[M10\]](#), and [BAUD\[SBNS\]](#). Going forward in this discussion, assume that [CTRL\[M\]](#), [CTRL\[M7\]](#), [BAUD\[M10\]](#), and [BAUD\[SBNS\]](#) are 0, selecting the normal 8-bit Data mode, in which the shift register holds a start bit, eight data bits, and a stop bit. When the transmit shift register is available for a new character, the value waiting in transmit FIFO is transferred to the transmit shift register, synchronized with the baud rate clock, and [STAT\[TDRE\]](#) becomes 1 to indicate that another character may be written to the transmit FIFO at [Data \(DATA\)](#).

If no new character is waiting in the transmit FIFO after a stop bit is shifted out of the TXD pin, the transmitter sets the transmit complete flag and enters an idle mode, with TXD high, waiting for more characters to transmit.

Writing 0 to [CTRL\[TE\]](#) does not immediately disable the transmitter. The current transmit activity in progress must first be completed (that could include a data character, idle character, or break character), although the transmitter does not start transmitting another character.

39.3.4.1 Break character length

[CTRL\[SBK\]](#) sends break characters, originally used to gain the attention of old teletype receivers. Break characters are a full character time of logic 0, 9-bit to 12-bit times, including the start and stop bits. You can enable a longer break of 13-bit times by writing 1 to [STAT\[BRK13\]](#). Normally, a program waits for [STAT\[TDRE\]](#) to become 1 to indicate that the last character of a message has moved to the transmit shifter. Next, the program writes 1 and then writes 0 to [CTRL\[SBK\]](#). This action queues a break character to be sent as soon as the shifter is available. If [CTRL\[SBK\]](#) remains 1 when the queued break moves into the shifter, synchronized with the baud rate clock, an additional break character is queued. When LPUART is the receiving module, it receives a break character as 0s in all data bits and a framing error ([STAT\[FE\]](#) = 1) is detected.

You can also transmit a break character by writing to [Data \(DATA\)](#) with [DATA\[FRETSC\]](#) = 1 and the data bits clear. This supports transmitting the break character as part of the normal data stream and also allows DMA to transmit a break character.

When idle line wake-up is used, a full character time of idle (logic 1) is needed between messages to wake up any sleeping receivers. Normally, a program waits for [STAT\[TDRE\]](#) to become 1 to indicate that the last character of a message has moved to the transmit shifter. Next, write 0 and then write 1 to [CTRL\[TE\]](#). This action queues an idle character to be sent as soon as the shifter is available. As long as the character in the shifter does not finish while [CTRL\[TE\]](#) becomes 0, the LPUART transmitter does not release control of the TXD pin.

You can also write to [Data \(DATA\)](#) to transmit an idle character, with [DATA\[FRETSC\]](#) and [DATA\[R9T9\]](#) = 1 and the values of all the other fields = 0. This supports transmitting the idle character as part of the normal data stream and also allows DMA to transmit an idle character.

As shown in the following table, [STAT\[BRK13\]](#), [CTRL\[M\]](#), [CTRL\[M7\]](#), [BAUD\[M10\]](#), and [BAUD\[SBNS\]](#) affect the length of the break character.

Table 279. Break character length

STAT[BRK13]	CTRL[M]	BAUD[M10]	CTRL[M7]	BAUD[SBNS]	Break character length (in bit times)
0	0	0	0	0	10
0	0	0	0	1	11
0	0	0	1	0	9
0	0	0	1	1	10
0	1	0	—	0	11
0	1	0	—	1	12
0	—	1	—	0	12
0	—	1	—	1	13
1	0	0	0	0	13

Table continues on the next page...

Table 279. Break character length (continued)

STAT[BRK13]	CTRL[M]	BAUD[M10]	CTRL[M7]	BAUD[SBNS]	Break character length (in bit times)
1	0	0	0	1	13
1	0	0	1	0	12
1	0	0	1	1	12
1	1	0	—	0	14
1	1	0	—	1	14
1	—	1	—	0	15
1	—	1	—	1	15

39.3.4.2 Hardware flow control

The transmitter supports hardware flow control by gating the transmission with the value of CTS_B. If the CTS operation is enabled, the character is transmitted when CTS_B is asserted. If CTS_B is deasserted in the middle of a transmission with characters remaining in the transmitter FIFO, the character in the transmit shift register is complete. Any characters in the FIFO wait for CTS_B to assert again, and TXD remains in the mark state (idle state) until CTS_B is reasserted. The CTS_B pin must assert for longer than one bit period to guarantee that a new transmission is started when the transmitter is idle with CTS.

If the CTS operation is disabled, the transmitter ignores the state of CTS_B.

The transmitter's CTS_B signal can be enabled even if the same LPUART receiver's RTS_B signal is disabled.

In case of sending break characters, if the CTS operation is enabled, you can send break characters (CTRL[SBK] = 1), irrespective of the state of the CTS_B signal.

39.3.4.3 Transceiver driver enable

The transmitter can use RTS_B as an enable signal for the driver of an external transceiver. See [Transceiver driver enable using RTS_B](#) for details. If the RTS operation is enabled, when a character is placed into an empty transmit shift register, RTS_B asserts 1-bit time before the start bit is transmitted. RTS_B remains asserted for the whole time that the transmit shift register has any characters. RTS_B deasserts 1-bit time after all characters in the transmit FIFO and shift register are completely sent, including the last stop bit. In other words, when RTS_B is used as a transceiver enable, RTS_B asserts 1-bit time before the transmitter starts transmitting and negates 1-bit time after the transmitter goes idle.

Transmitting a break character also asserts RTS_B, with the same assertion and deassertion timing as having a character in the transmit shift register.

The transmitter's RTS_B signal asserts only when the transmitter is enabled. However, the transmitter's RTS_B signal is unaffected by its CTS_B signal. RTS_B remains asserted until the transfer is complete, even if the transmitter is disabled mid-way through a data transfer.

39.3.4.4 Transceiver driver enable using RTS_B

RS-485 is a multiple drop communication protocol in which the LPUART transceiver's driver is three-stated unless LPUART is driving. The transmitter can use the RTS_B signal to enable the driver of a transceiver. The polarity of RTS_B can be matched to the polarity of the transceiver's driver enable signal.

The following figure shows the receiver enable signal asserted. This connection can also connect RTS_B to both DE and RE_B. The transceiver's receiver is disabled when driving. A pullup can pull RXD to a nonfloating value during this time. You can refine this option further by operating LPUART in Single-Wire mode, freeing the RXD pin for other uses.

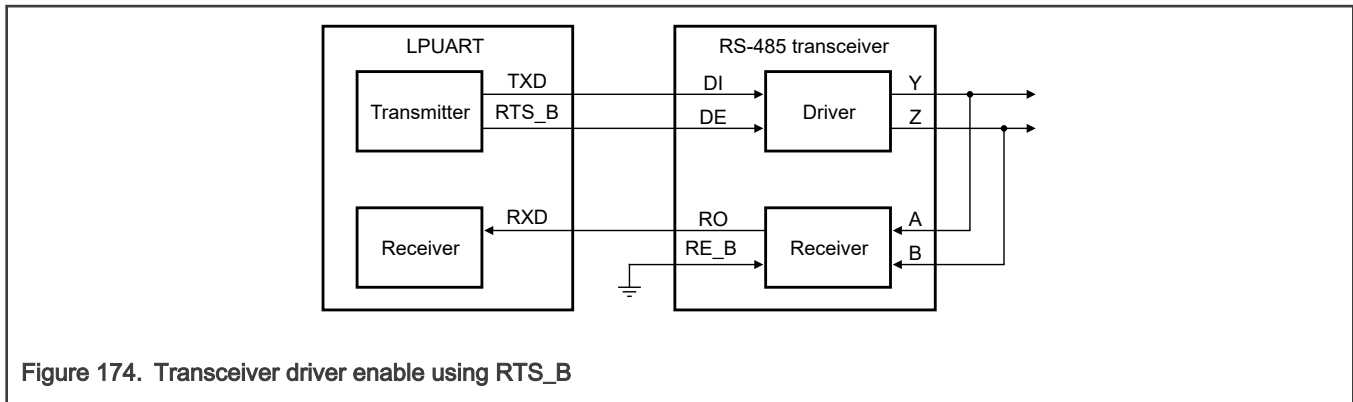


Figure 174. Transceiver driver enable using RTS_B

39.3.5 Receiver functional description

This section discusses the functioning of the LPUART receiver, as shown in the receiver portion of [Block diagram](#). The section also discusses:

- The data sampling technique used to reconstruct receiver data.
- Different variations of the receiver wake-up function.

You can invert the receiver input by writing 1 to [STAT\[RXINV\]](#) and enable the receiver by writing 1 to [CTRL\[RE\]](#). Character frames consist of a start bit of logic 0, along with N (7, 8, 9, 10) bits (MSB or LSB first), and one or two stop bits of logic 1. For information about 7-bit, 9-bit, or 10-bit Data mode, see [Data modes](#). Going forward in this discussion, assume that LPUART is configured for a normal 8-bit Data mode.

After receiving the stop bit into the receive shifter, and provided the receive data register is not already full ([STAT\[RDRF\]](#) = 0), the data character is transferred to the receive FIFO, resulting in [STAT\[RDRF\]](#) becoming 1. However, if [STAT\[RDRF\]](#) is already 1, indicating that the receive data buffer is already full, [STAT\[OR\]](#) becomes 1 and the new data is lost.

Because the LPUART receiver is separate from the receive FIFO, the receive shift register can receive the next word when the receive FIFO is full, and it is only at the end of the character that the next data is written into the receive FIFO, potentially triggering the overrun flag if the FIFO is full.

When a program detects that the receive data register is full ([STAT\[RDRF\]](#) = 1), it gets the data from the FIFO by reading [Data \(DATA\)](#). See [Interrupts](#) for details about flag clearing.

39.3.5.1 Data sampling technique

The LPUART receiver supports a configurable oversampling rate of between 4× and 32× of the baud rate clock for sampling. The receiver starts by considering logic level samples at the oversampling rate times the baud rate to search for a falling edge on the RXD serial data input pin. A falling edge is defined as a logic 0 sample after three consecutive logic 1 samples. The oversampling baud rate clock divides the bit time into 4 to 32 segments from 1 to OSR (where OSR is the configured oversampling ratio). When a falling edge is located, three more samples are taken at $(OSR \div 2)$, $(OSR \div 2) + 1$, and $(OSR \div 2) + 2$ to ensure that this is a real start bit and not merely noise. If at least two of these three samples are 0, the receiver assumes they are synchronized to a received character. If another falling edge is detected before the receiver is considered synchronized, the receiver restarts sampling from the first segment.

The receiver then samples each bit time, including the start and stop bits, at $(OSR \div 2)$, $(OSR \div 2) + 1$, and $(OSR \div 2) + 2$, to determine the logic level for that bit. The logic level is interpreted to be that of the majority of the samples taken during the bit time. If any sample in any bit time, including the start and stop bits, in a character frame fails to agree with the logic level for that bit, noise flag ([STAT\[NF\]](#)) becomes 1 when the received character is transferred to the receive FIFO.

When the LPUART receiver is configured to sample on both edges of the baud rate clock (that is, when [BAUD\[BOTHEDGE\]](#) = 1), the number of segments in each received bit is effectively doubled (from 1 to $OSR \times 2$). The start and data bits are then sampled at OSR, OSR + 1, and OSR + 2. You must enable sampling on both edges of the clock for oversampling rates of 4× to 7×. This sampling is optional for higher oversampling rates.

The synchronization feature of LPUART synchronizes the internal oversampling counter with a detected falling edge on the receive signal, and to adjust the data sampling window. The falling edge detection needs three consecutive 1s prior to the "1->0" (one to zero) transition. After the initial falling edge detection for the start bit, the circuit continuously monitors the next falling edge, and resets the counter after another falling edge is detected. This synchronization to the start bit is termed as resynchronization.


When `BAUD[RESYNCDIS]` is 0, you perform this falling edge detection and resynchronization not only for the start bit but also for the rest of the character reception after the start bit.

When `BAUD[RESYNCDIS]` is 1, you perform the falling edge detection and resynchronization only for the start bit. The use case for disabling the resynchronization is protocols that require this (for example, LIN 2.1 prohibits resynchronization within a byte).

The following table and figure explain LPUART resynchronization.

Table 280. LPUART resynchronization settings

Resynchronization	<code>BAUD[RESYNCDIS] = 0</code>	<code>BAUD[RESYNCDIS] = 1</code>
For the starting bit falling edge	Yes	Yes
For all falling edges after the start bit	Yes	No

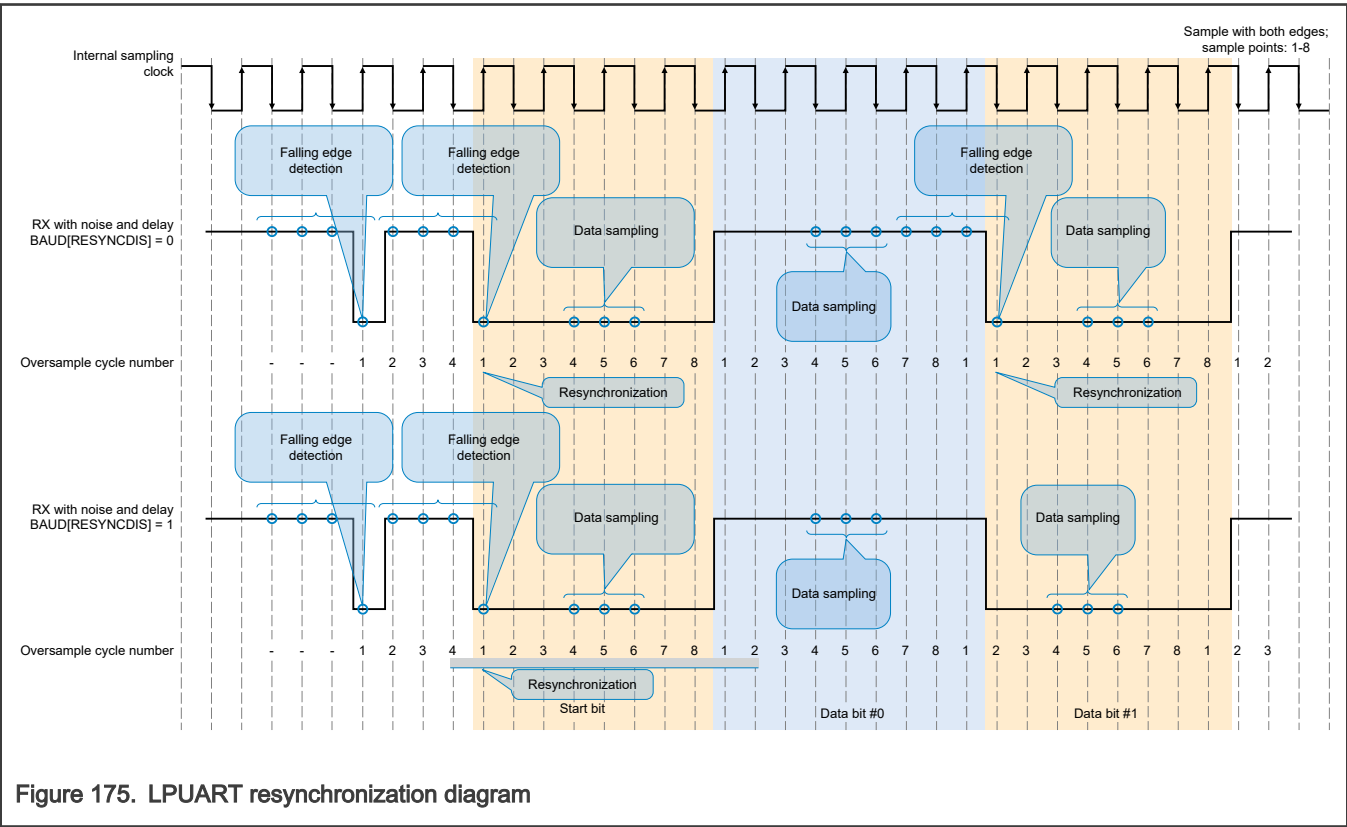

39.3.5.2 Receiver wake-up operation

Receiver wake-up and receiver address matching are hardware mechanisms that allow an LPUART receiver to ignore the characters in a message intended for a different receiver.

During receiver wake-up, all receivers evaluate the first character(s) of each message, and as soon as they determine the message is intended for a different receiver, they write 1 to `CTRL[RWU]`.

When **CTRL[RWU]** and **STAT[RWUID]** are 1, the status fields associated with the receiver, with the exception of **STAT[IDLE]**, are inhibited from becoming 1, thus eliminating the software overhead for handling the unimportant message characters. At the end of a message, all receivers automatically force **CTRL[RWU]** to become 0. This results in all receivers waking up in time to look at the first character(s) of the next message.

During receiver address matching, the address matching is performed in hardware and the LPUART receiver ignores all characters that do not meet the address match requirements.

Table 281. Receiver wake-up options

CTRL[RWU]	BAUD[MAEN1] BAUD[MAEN2]	BAUD[MATCFG]	CTRL[WAKE]: STAT[RWUID]	Receiver wake-up
0	0	X	X	Normal operation
1	0	00	00	Receiver wake-up on idle line; STAT[IDLE] = 0
1	0	00	01	Receiver wake-up on idle line; STAT[IDLE] = 1
1	0	00	10	Receiver wake-up on address mark
1	1	11	10	Receiver wake-up on data match
0	1	00	X0	Address mark address match; STAT[IDLE] = 0 for discarded characters
0	1	00	X1	Address mark address match; STAT[IDLE] = 1 for discarded characters
0	1	01	X0	Idle line address match
0	1	10	X0	Match on and match off; STAT[IDLE] = 0 for discarded characters
0	1	10	X1	Match on and match off; STAT[IDLE] = 1 for discarded characters

39.3.5.2.1 Idle line wake-up

When **CTRL[WAKE]** is 0, you can configure the receiver for an idle line wake-up. In this mode, **CTRL[RWU]** becomes 0 automatically when the receiver detects a full character time of the idle-line level.

When **CTRL[RWU]** is set the receiver ignores everything until an idle condition is detected. After the idle condition is detected the **CTRL[RWU]** is cleared by hardware and the receiver starts receiving data.

The **STAT[RWUID]** indicates that whether the **STAT[IDLE]** flag is set or not as a result of the idle condition detection which clears **CTRL[RWU]**.

The **STAT[RWUID]** says that if the **STAT[IDLE]** flag is to be set as a result of the idle condition which clears **CTRL[RWU]**.

CTRL[M], **CTRL[M7]**, and **BAUD[M10]** select 7-bit to 10-bit Data mode and **BAUD[SBNS]** selects a 1-bit or 2-bit stop bit number that determines how many bit times of idle are needed to constitute a full character time, 9 to 13 bit times because of the start and stop bits.

When **CTRL[RWU]** is 1 and **STAT[RWUID]** is 0, the idle condition that wakes up the receiver does not lead to **STAT[IDLE]** becoming 1. The receiver wakes up and waits for the first data character of the next message that leads to **STAT[RDRF]** becoming 1 and generates an interrupt if enabled. When **STAT[RWUID]** is 1, any idle condition leads to **STAT[IDLE]** becoming 1 and generates an interrupt if enabled, regardless of whether **CTRL[RWU]** is 0 or 1.

These are the ways to detect an idle line:

- When **CTRL[ILT]** is 0, the idle bit counter starts after the start bit so that the stop bit and any logic 1s at the end of a character count to calculate the full character time of idle.
- When **CTRL[ILT]** is 1, the idle bit counter does not start until after the stop bit time so that the data in the last character of the previous message does not impact the idle detection.

39.3.5.2.2 Address mark wake-up

When **CTRL[WAKE]** is 1, you can configure the receiver for an address mark wake-up. In this mode, **CTRL[RWU]** becomes 0 automatically when the receiver detects a logic 1 in the most significant bit of the received character. When parity is enabled, the second most significant bit is used for address mark wake-up.

Address mark wake-up allows messages to contain idle characters, but requires one bit to be reserved for use in address frames. The logic 1 in the most significant bit (or second most significant bit when parity is enabled) of an address frame writes 0 to **CTRL[RWU]** and writes 1 to **STAT[RDRF]**. In this case, the character with the address mark bit is received even if the receiver is sleeping during most of this character time.

39.3.5.2.3 Data match wake-up

When **CTRL[RWU]** and **CTRL[WAKE]** are 1, and **BAUD[MATCFG]** equals 11, the receiver is configured for a data match wake-up. In this mode, **CTRL[RWU]** becomes 0 automatically when the receiver detects a character that matches **MATCH[MA1]** when **BAUD[MAEN1]** is 1, or that matches **MATCH[MA2]** when **BAUD[MAEN2]** is 1.

39.3.5.2.4 Address match operation

You can enable the address match operation when either **BAUD[MAEN1]** or **BAUD[MAEN2]** is 1 and **BAUD[MATCFG]** is 0. In this function, a character that the RXD pin receives with a logic 1 in the most significant bit (or the second most significant bit when parity is enabled) is considered an address and is compared to the associated **MATCH[MA1]** or **MATCH[MA2]**. The character is only transferred to the receive buffer, and **STAT[RDRF]** becomes 1 if the comparison matches. All subsequent characters received with a logic 0 in the most significant bit (or the second most significant bit when parity is enabled) are considered to be data associated with the address and are transferred to the receive FIFO. If no marked address match occurs, no transfer is made to the receive FIFO, and all the characters that follow, with logic 0 in the most significant bit (or second most significant bit when parity is enabled), are also discarded. If both **BAUD[MAEN1]** and **BAUD[MAEN2]** are 0, the receiver operates normally, and all the received data is transferred to the receive FIFO.

The address match operation functions in the same way for both **MATCH[MA1]** and **MATCH[MA2]**:

- If either **BAUD[MAEN1]** or **BAUD[MAEN2]** is 1, a marked address is compared only to the associated Match Address (**MATCH**) and data is transferred to the receive FIFO only on a match.
- If both **BAUD[MAEN1]** and **BAUD[MAEN2]** are 1, a marked address is compared to both **MATCH[MA1]** and **MATCH[MA2]** and data is transferred only on a match with either of these fields.

39.3.5.2.5 Idle match operation

You can enable the idle match operation when either **BAUD[MAEN1]** or **BAUD[MAEN2]** is 1 and **BAUD[MATCFG]** is 1. In this function, the first character that the RXD pin receives after an idle line condition is considered an address and is compared to the associated **MATCH[MA1]** or **MATCH[MA2]**. The character is transferred only to the receive buffer, and **STAT[RDRF]** becomes 1, if the comparison matches. All subsequent characters are considered to be data associated with the address and are transferred

to the receive FIFO until the next idle line condition is detected. If no address match occurs, no transfer is made to the receive FIFO, and all the frames that follow, until the next idle condition, are also discarded. If both [BAUD\[MAEN1\]](#) and [BAUD\[MAEN2\]](#) are 0, the receiver operates normally, and all the received data is transferred to the receive FIFO.

An idle match operation functions in the same way for both [MATCH\[MA1\]](#) and [MATCH\[MA2\]](#):

- If either [BAUD\[MAEN1\]](#) or [BAUD\[MAEN2\]](#) is 1, the first character after an idle line is compared only to the associated [Data \(DATA\)](#) and data is transferred to the receive FIFO only on a match.
- If both [BAUD\[MAEN1\]](#) and [BAUD\[MAEN2\]](#) are 1, the first character after an idle line is compared to both [MATCH\[MA1\]](#) and [MATCH\[MA2\]](#) and data is transferred only on a match with either of these fields.

39.3.5.2.6 Match on, match off operation

The match on, match off operation is enabled when both [BAUD\[MAEN1\]](#) and [BAUD\[MAEN2\]](#) are 1 and [BAUD\[MATCFG\] = 10](#). In this function, a character that the RXD pin receives matches [MATCH\[MA1\]](#) and is transferred to the receive buffer, and [STAT\[RDRF\]](#) becomes 1. All subsequent characters are considered to be data and are also transferred to the receive FIFO, until a character that matches [MATCH\[MA2\]](#) is received. The character that matches [MATCH\[MA2\]](#), along with all subsequent characters, is discarded; and this continues until another character that matches [MATCH\[MA1\]](#) is received. If both [BAUD\[MAEN1\]](#) and [BAUD\[MAEN2\]](#) are 0, the receiver operates normally, and all the received data is transferred to the receive FIFO.

NOTE

The match on, match off operation requires both [BAUD\[MAEN1\]](#) and [BAUD\[MAEN2\]](#) to be 1.

39.3.5.3 Hardware flow control

To support hardware flow control, you can program the receiver to automatically assert and deassert RTS_B:

- RTS_B remains asserted until the transfer is complete, even if the transmitter is disabled midway through a data transfer. See [Transceiver driver enable using RTS_B](#) for more information.
- If the receiver RTS functionality is enabled, the receiver automatically deasserts RTS_B if [STAT\[RDRF\]](#) is 1 or a start bit is detected that causes [STAT\[RDRF\]](#) to become 1.
- The receiver asserts RTS_B when [STAT\[RDRF\]](#) is 0 and has not detected a start bit that causes [STAT\[RDRF\]](#) to become 1. There is no impact if [STAT\[RDRF\]](#) is 1 already.
- Even if RTS_B is deasserted, the receiver continues to receive characters until the receive FIFO is overrun.
- If the receiver RTS functionality is disabled, the receiver's RTS_B remains deasserted.
- When RTS is driven by receiver, it will be negated when the receiver is disabled irrespective of the FIFO level.

39.3.6 Additional LPUART functions

39.3.6.1 Data modes

You can configure the LPUART transmitter and receiver to operate in 7-bit Data mode by writing 1 to [CTRL\[M7\]](#), 9-bit Data mode by writing 1 to [CTRL\[M\]](#), or 10-bit Data mode by writing 1 to [BAUD\[M10\]](#). In 9-bit Data mode, there exists a ninth data bit and in 10-bit mode, there exists a tenth data bit.

When performing 8-bit writes to the transmit FIFO, the ninth and tenth bits are pushed into the FIFO from [CTRL\[T8\]](#) and [CTRL\[T9\]](#). For coherent 8-bit writes, you must write to [CTRL\[T8\]](#) and [CTRL\[T9\]](#) before writing to [Data \(DATA\)\[7:0\]](#). However, if the values in [CTRL\[T8\]](#) or [CTRL\[T9\]](#) do not need to change, it is not necessary to update [CTRL\[T8\]](#) and [CTRL\[T9\]](#) before every 8-bit write to [Data \(DATA\)](#).

When performing 16-bit or 32-bit writes to the transmit FIFO, all 10 bits are pushed into the transmit FIFO from the write data.

When performing 8-bit reads of the receive FIFO, the ninth and tenth bits are held in [CTRL\[R8\]](#) and [CTRL\[R9\]](#) but you must read them before reading [Data \(DATA\)](#). A 16-bit or 32-bit read of the receive FIFO returns all 10 bits in [Data \(DATA\)](#).

The 9-bit Data mode is typically used with parity to allow eight bits of data plus the parity in the ninth bit, or it is used with the address mark wake-up so that the ninth data bit can serve as the wake-up bit. The 10-bit Data mode is typically used with parity and address mark wake-up so that the ninth data bit can serve as the wake-up bit and the tenth bit can serve as the parity bit. In custom protocols, the ninth and/or tenth bits can also serve as software-controlled markers.

39.3.6.2 Idle length

An idle character is one where the start bit, all data bits, and stop bits are in the mark position (idle state, generally logic 1). You can configure [CTRL\[ILT\]](#) to start detecting an idle character from the previous start bit (any data bits and stop bits count for idle character detection) or from the previous stop bit.

You can also use [CTRL\[IDLECFG\]](#) to configure the number of idle characters that must be received before an idle line condition is detected. This field configures the number of idle characters that must be received before [STAT\[IDLE\]](#) becomes 1, [STAT\[RAF\]](#) becomes 0, and [DATA\[IDLINE\]](#) becomes 1 with the next received character.

[CTRL\[IDLECFG\]](#) also affects the idle line wake-up and idle match operations. When either the address match or match on/off operation is enabled, writing 1 to [STAT\[RWUID\]](#) causes any discarded characters to be treated as idle characters.

39.3.6.3 Loop mode

Enable Loop mode by setting [CTRL\[LOOPS\] = 1](#) and [CTRL\[RSRC\] = 0](#). You, sometimes, use Loop mode to check software, independent of connections in the external system, to help isolate system problems. In this mode, the transmitter output is internally connected to the receiver input and LPUART does not use the RXD pin.

Loop mode also internally connects the RTS_B output to the CTS_B input.

39.3.6.4 Single-Wire mode

Enable Single-Wire mode by setting [CTRL\[LOOPS\] = 1](#) and [CTRL\[RSRC\] = 1](#). Single-Wire mode implements a half-duplex serial connection. The receiver is internally connected to the transmitter output and TXD pin (the RXD pin is not used).

In Single-Wire mode, [CTRL\[TXDIR\]](#) controls the direction of serial data on the TXD pin. When [CTRL\[TXDIR\]](#) becomes 0, the TXD pin is an input to the receiver and the transmitter is temporarily disconnected from the TXD pin so that an external device can send serial data to the receiver. When [CTRL\[TXDIR\] = 1](#), the TXD pin is an output that the transmitter drives. The internal loop back connection is disabled, and as a result, the receiver is unable to receive characters that the transmitter sends out.

39.3.7 Peripheral triggers

The connection of the LPUART peripheral triggers with other peripherals is chip-specific.

39.3.7.1 Output triggers

LPUART generates the following output triggers that can be connected to other peripherals on the chip:

- The transmit word trigger asserts at the end of each transmitted word and negates after 1-bit period.
- The transmit data trigger is identical to the TXD pin output, but without support for input trigger modulation.
- The receive word trigger asserts at the end of each received word that is written to the receive FIFO, for one oversampling clock period.
- The receive idle trigger asserts when [STAT\[IDLE\]](#) becomes 1, and negates when the next valid start bit is detected.

39.3.7.2 Input trigger

LPUART supports a peripheral input trigger that you can configure in one of the following ways:

- By enabling the CTS function: You can connect the input trigger (active high) instead of the CTS_B (active low) pin input. The input trigger must assert for longer than 1-bit clock period when the transmitter is idle, with data to send, to guarantee a new transmission.

- By making the input trigger modulate the transmit data output (trigger is logically ANDed with the TXD output): The input trigger is expected to be a free-running clock (carrier signal) that generates from a timer or PWM source with a frequency that is greater than the bit-clock frequency. The carrier signal must not toggle faster than the maximum supported bit time.
- By connecting the input trigger instead of the RXD pin input: The input trigger is expected to be generated from a receive data source, such as an analog comparator or external pin.

39.3.8 Infrared (IR) interface

LPUART provides the capability of transmitting narrow pulses to an IR LED and receiving narrow pulses, transforming them to serial bits, which are then sent to LPUART. The IrDA physical layer specification defines a half-duplex IR communication link for exchanging data. The full standard includes data rates up to 16 Mbit/s. The LPUART IrDA support is limited to SIR mode that supports data rates only between 2.4 kbit/s and 115.2 kbit/s.

LPUART has an infrared transmit encoder and a receive decoder. The infrared decoder converts the received character from the IrDA format to the NRZ format, which the receiver uses. It also has an OSR oversampling baud rate clock counter that filters noise and indicates when a 1 is received. LPUART transmits serial bits of data, which the infrared submodule encodes, to transmit a narrow pulse for every zero bit. No pulse is transmitted for every single bit. When receiving data, an IR photo diode (external to LPUART) detects the IR pulses. The IR receive decoder transforms them to CMOS levels. The infrared receive decoder then stretches the narrow pulses to get back to a serial bit stream that LPUART receives. You can invert the polarity of transmitted pulses and expected receive pulses so that a direct connection can be made to external IrDA transceiver modules that use active-high pulses.

The IR submodule receives its clock sources from LPUART. The submodule selects one of these clocks to generate either $1 \div \text{OSR}$, $2 \div \text{OSR}$, $3 \div \text{OSR}$, or $4 \div \text{OSR}$ narrow pulses during transmission.

39.3.8.1 Infrared transmit encoder

The infrared transmit encoder converts serial bits of data from the transmit shift register to the TXD signal. A narrow pulse is transmitted for a 0 bit and no pulse is transmitted for a 1 bit. The narrow pulse is sent at the start of the bit with a duration of $1 \div \text{OSR}$, $2 \div \text{OSR}$, $3 \div \text{OSR}$, or $4 \div \text{OSR}$ of a bit time. A narrow low pulse is transmitted for a 0 bit when `CTRL[TXINV]` is 0, while a narrow high pulse is transmitted for a 0 bit when `CTRL[TXINV]` is 1.

39.3.8.2 Infrared receive decoder

The infrared receive block converts data from the RXD signal to the receive shift register. A narrow pulse is expected for each 0 received and no pulse is expected for each 1 received. A narrow low pulse is expected for a 0 bit when `STAT[RXINV]` is 0, while a narrow high pulse is expected for a 0 bit when `STAT[RXINV]` is 1. This receive decoder meets the edge jitter requirement as defined by the IrDA serial infrared physical layer specification.

39.3.8.3 Start-bit detection

When `STAT[RXINV]` is 0, the first falling edge of the received character corresponds to the start bit. The infrared decoder resets its counter. At this time, the receiver also begins its start bit detection process. After the start bit is detected, the receiver synchronizes its bit times to this start bit time. For the rest of the character reception, the infrared decoder's counter and the receiver's bit time counter count independently of each other.

39.3.8.4 Noise filtering

The decoder ignores any rising edges detected during the first half of the infrared decoder counter, and can leave any pulses less than one oversampling baud clock as undetected. This is regardless of whether the pulse is seen in the first or second half of the count.

39.3.8.5 Low-bit detection

During the second half of the decoder count, a rising edge is decoded as 0, which is sent to the receiver. The decoder counter is also reset.

39.3.8.6 High-bit detection

At OSR oversampling baud rate clocks after the previous rising edge, if a rising edge is not seen, the decoder sends a 1 to the receiver.

If the next bit is 0, which arrives late, a low bit is detected according to [Low-bit detection](#). The value sent to the receiver is changed from 1 to 0. Then, if a noise pulse occurs outside the receiver's bit time sampling period, the delay of a 0 is not recorded as noise.

39.3.9 Modes of operation

39.3.9.1 Low-Power modes

LPUART remains functional during low-power modes, provided [CTRL\[DOZEEN\]](#) is 0 and the LPUART functional clock is enabled. LPUART can generate an interrupt or DMA request to cause a wake-up from low-power modes.

You can configure LPUART to be disabled in low-power modes, when [CTRL\[DOZEEN\]](#) is 1. In this case, the transmitter and receiver finish transmitting and receiving the current word.

If LPUART is disabled in low-power modes, it can generate a wake-up via [STAT\[RXEDGIF\]](#) if the receiver detects an active edge.

NOTE

See the chip-specific information for specific low-power modes available on your chip.

39.3.9.2 Debug mode

LPUART remains functional in Debug mode.

39.3.10 Clocking

Table 282. Types of clocks

Clock	Description
Functional	Is asynchronous to the bus clock and can remain enabled in Low-Power modes to support transmit and/or receive functions, including low-power wake-up.
Bus	Is only used for bus accesses to the control and configuration registers. The bus clock frequency must be sufficient to support the data bandwidth requirements of the LPUART transmit and receive registers, including the FIFOs.

39.3.11 Reset

Table 283. Types of resets

Reset	Description
Chip	Enables the logic and registers for the LPUART transmitter and receiver to reset to their default states.
Software	Resets the LPUART logic and registers to their default states, except for Global (GLOBAL) . GLOBAL[RST] controls the LPUART software reset.
FIFO	Implements write-only control fields that reset the transmit FIFO (FIFO[TXFLUSH]) and receive FIFO (FIFO[RXFLUSH]). After a FIFO is reset, that FIFO becomes empty.

39.3.12 Interrupts

The LPUART transmitter has two status fields that can optionally generate hardware interrupt requests. If `STAT[TDRE]` is 1, it indicates that there is room in the transmit FIFO to write another transmit character to `Data (DATA)`. If `CTRL[TIE]` is 1, a hardware interrupt is requested when `STAT[TDRE]` is 1.

`STAT[TC]` indicates that the transmitter is finished transmitting all data, preamble, and break characters and is idle with TXD at the inactive level. This field is often used in systems with modems to determine when it is safe to turn off the modem. If `CTRL[TCIE]` is 1, a hardware interrupt is requested when `STAT[TC]` is 1. Instead of hardware interrupts, software polling may be used to monitor `STAT[TDRE]` and `STAT[TC]` if the corresponding `CTRL[TIE]` or `CTRL[TCIE]` field is 0.

When a program detects that `STAT[RDRF]` is 1, it gets the data from this field by reading `Data (DATA)`. The field becomes 0 by reading `Data (DATA)`.

`STAT[IDLE]` includes logic that prevents it from becoming 1 repeatedly when the RXD line remains idle for an extended period of time. `STAT[IDLE]` becomes 0 when you write 1 to it, and cannot become 1 again until the receiver has received at least one new character and has 1 as the value of `STAT[RDRF]`.

If the associated error is detected in the received character that caused `STAT[RDRF]` to become 1, `STAT[NF]`, `STAT[FE]`, and `STAT[PF]` become 1 at the same time `STAT[RDRF]` becomes 1. These flags do not become 1 in overrun cases.

If `STAT[RDRF]` is already 1 when a new character is ready to be transferred from the receive shifter to the receive FIFO, `STAT[OR]` becomes 1, instead of the data along with any associated `STAT[NF]`, `STAT[FE]`, or `STAT[PF]` condition getting lost.

If the received character matches the contents of `MATCH[MA1]` and/or `MATCH[MA2]`, then `STAT[MA1F]` and/or `STAT[MA2F]` become 1 at the same time that `STAT[RDRF]` becomes 1.

At any time, an active edge on the RXD serial data input pin causes `STAT[RXEDGIF]` to become 1. `STAT[RXEDGIF]` becomes 0 when you write 1 to it. This function depends on the receiver being enabled (the value of `CTRL[RE]` being 1).

39.3.13 DMA

39.3.13.1 End-of-packet DMA transfers

The end-of-packet functionality is designed for serial interfaces where you may not know the size of the transfer in advance and the data is being pushed by an external device. The end-of-packet processing ensures that data does not become stranded in either the receive FIFO or the DMA receive buffer. Support for end-of-packet processing must be implemented in both the serial interfaces and DMA controller.

The condition that signals the end of packet is different for each serial interface, but the serial peripheral and DMA process it in the same way. For example, an idle line condition signals the UART end of packet, the Stop and/or Repeated Start condition signals the I2C end of packet, and PCS negation signals the SPI end of packet.

When the serial peripheral is configured to signal the end-of-packet condition to the DMA and the serial interface detects an end-of-packet condition, it asserts the DMA request for the receive FIFO irrespective of the watermark configuration. For larger watermark configurations, this ensures that the last few words of the transfer are first flushed from the receive FIFO.

The DMA then reads the contents of the receive FIFO, depending on the first word in the FIFO:

- If the receive FIFO is empty, the serial interface signals an end of packet condition to the DMA controller.
- If the receive FIFO is not empty, but the first word in the FIFO is the start of a new packet, data is not pulled from the receive FIFO and the serial interface signals an end-of-packet condition to the DMA controller.
- If the receive FIFO is not empty, and the first word in the FIFO is not the start of a new packet, the DMA transfers the receive data as normal.

Because the DMA may be transferring multiple words on each request, the end-of-packet condition persists until the DMA minor loop has completed and no additional data is pulled from the receive FIFO. The field that triggered the end-of-packet condition becomes 0 when the minor loop completes following the end of packet being signaled to the DMA controller.

When the DMA detects the end-of-packet condition, it writes all received words up to the end of packet into the system memory and saves the destination address for the word after the last valid data. The DMA then terminates the channel as if the major loop

completed, including final offsets and optional interrupts, channel linking, and scatter-gather. You can, optionally, save the final destination address to the system memory. The final destination address is also available in the destination address register.

Because the DMA terminates the major loop, no servicing of the receive FIFO occurs until you or the hardware reconfigures the DMA (for example, channel linking or scatter-gather). You must minimize this delay to avoid receiver FIFO overrun. The automatic DMA end-of-packet processing is not recommended when there are only a few words transferred between end-of-packet conditions. This is because the DMA spends more time processing the end of packet than transferring the data. For example, the UART idle line length must be increased as needed to avoid an excessive number of idle conditions.

39.4 External signals

Table 284. External signals

Signal	Description	I/O
TXD	Transmit data: This pin is normally an output, but is an input (tristated) in Single-Wire mode whenever the transmitter is disabled or the transmit direction is configured for receive data.	I/O
RXD	Receive data	I
CTS_B	Clear-to-send	I
RTS_B	Request-to-send	O

39.5 Initialization

This module does not require initialization.

39.6 LPUART register descriptions

LPUART includes registers to control baud rate, select options, report status, and store transmit and receive data. Access to an address outside the valid memory map generates a bus error.

NOTE

Writing to a read-only (RO) register or reading a write-only (WO) register can cause bus errors. LPUART does not verify whether programmed values in the registers are correct; you must write valid values to them.

39.6.1 LPUART memory map

LPUART0 base address: 4009_F000h

LPUART1 base address: 400A_0000h

LPUART2 base address: 400A_1000h

LPUART3 base address: 400A_2000h

LPUART4 base address: 400A_3000h

LPUART5 base address: 400D_A000h

Offset	Register	Width (In bits)	Access	Reset value
0h	Version ID (VERID)	32	R	0405_0003h

Table continues on the next page...

Table continued from the previous page...

Offset	Register	Width (In bits)	Access	Reset value
4h	Parameter (PARAM)	32	R	0000_0202h
8h	Global (GLOBAL)	32	RW	0000_0000h
Ch	Pin Configuration (PINCFG)	32	RW	0000_0000h
10h	Baud Rate (BAUD)	32	RW	0F00_0004h
14h	Status (STAT)	32	RW	00C0_0000h
18h	Control (CTRL)	32	RW	0000_0000h
1Ch	Data (DATA)	32	RW	0000_1000h
20h	Match Address (MATCH)	32	RW	0000_0000h
24h	MODEM IrDA (MODIR)	32	RW	0000_0000h
28h	FIFO (FIFO)	32	RW	00C0_0011h
2Ch	Watermark (WATER)	32	RW	0000_0000h
30h	Data Read-Only (DATARO)	32	R	0000_1000h

39.6.2 Version ID (VERID)


Offset

Register	Offset
VERID	0h

Function

Indicates the version integrated for this instance on the chip and also specifies the inclusion and exclusion of several optional features.

Diagram

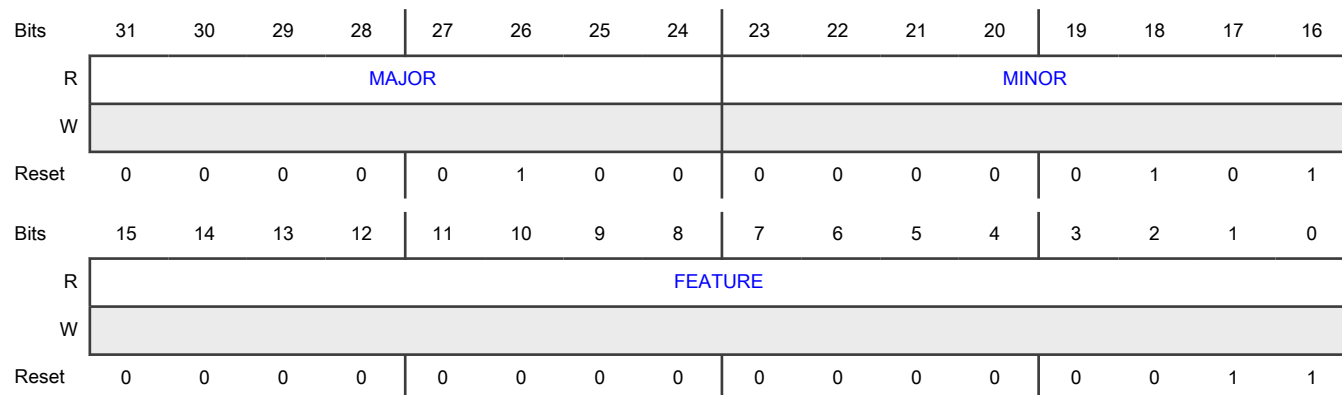

Fields

Field	Function
31-24 MAJOR	Major Version Number Indicates the major version number for the module specification.
23-16 MINOR	Minor Version Number Indicates the minor version number for the module specification.
15-0 FEATURE	Feature Identification Number Indicates the feature set number. 0000_0000_0000_0001b - Standard feature set 0000_0000_0000_0011b - Standard feature set with MODEM and IrDA support

39.6.3 Parameter (PARAM)


Offset

Register	Offset
PARAM	4h

Function

Indicates the parameter configuration for this instance on the chip.

Diagram

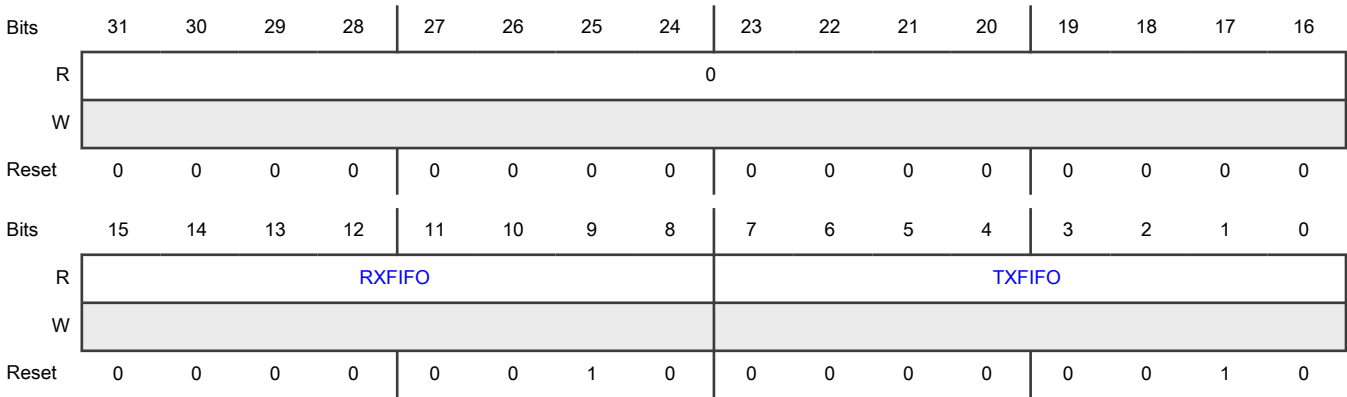

Fields

Field	Function
31-16 —	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
15-8 RXFIFO	Receive FIFO Size Indicates the number of characters in the receive FIFO, which is 2^{RXFIFO} .
7-0 TXFIFO	Transmit FIFO Size Indicates the number of characters in the transmit FIFO, which is 2^{TXFIFO} .

39.6.4 Global (GLOBAL)


Offset

Register	Offset
GLOBAL	8h

Function

Performs global functions.

Diagram

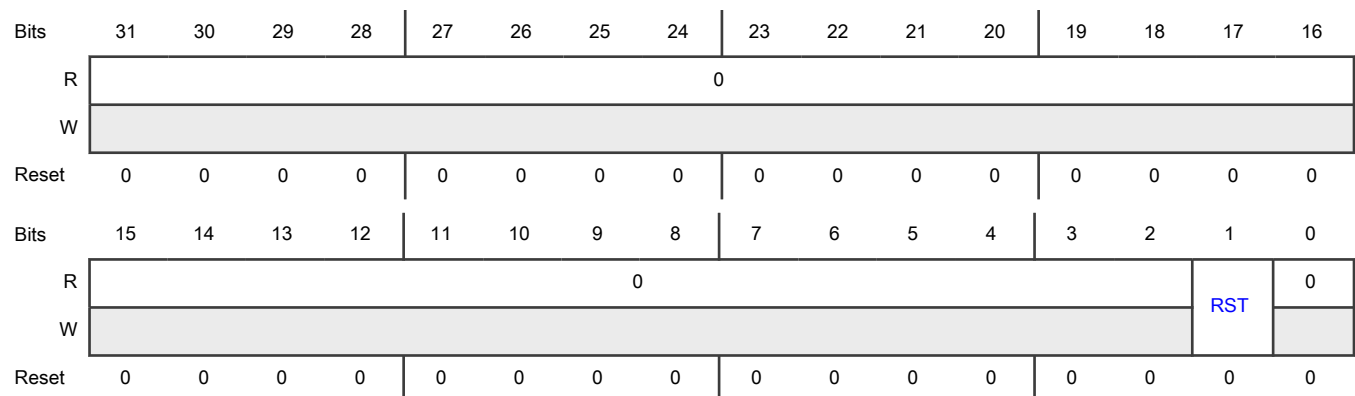

Fields

Field	Function
31-2 —	Reserved
1 RST	Software Reset Specifies whether the module is reset. This field resets all internal logic and registers, except Global (GLOBAL) . The reset takes effect immediately and remains asserted until you negate it. There is no minimum delay required before clearing the software reset.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - Not reset 1b - Reset
0 —	Reserved

39.6.5 Pin Configuration (PINCFG)


Offset

Register	Offset
PINCFG	Ch

Function

Enables the selection of input pins.

Diagram

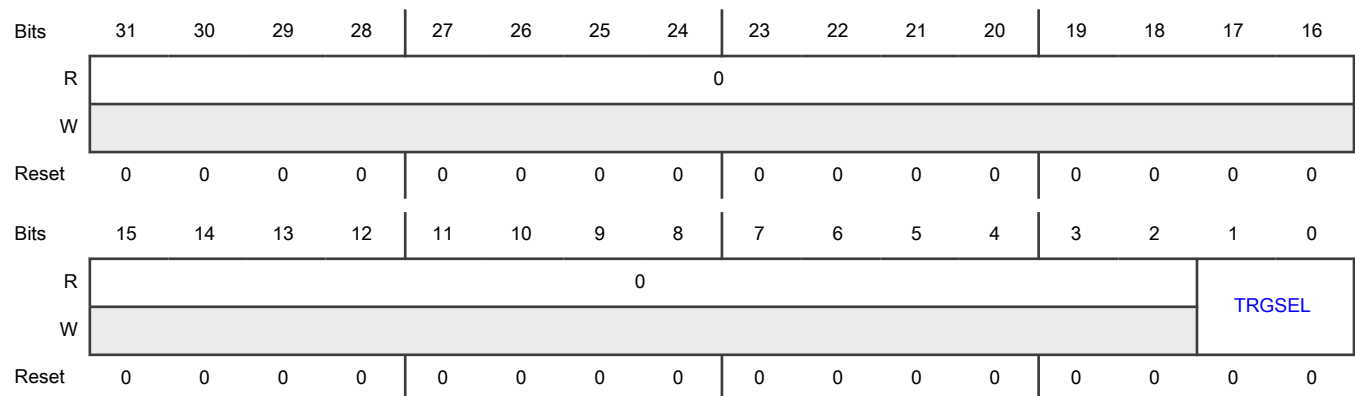

Fields

Field	Function
31-2 —	Reserved
1-0 TRGSEL	Trigger Select Configures the input trigger usage. You must change the value of this field only when both the transmitter and receiver are disabled. 00b - Input trigger disabled

Table continues on the next page...

Table continued from the previous page...

Field	Function
	01b - Input trigger used instead of the RXD pin input 10b - Input trigger used instead of the CTS_B pin input 11b - Input trigger used to modulate the TXD pin output, which (after TXINV configuration) is internally ANDed with the input trigger

39.6.6 Baud Rate (BAUD)

Offset

Register	Offset
BAUD	10h

Function

Configures the baud rate.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	MAEN	MAEN	M10	OSR					TDMA	0	RDMA	RIDMA	MATCFG		BOTH	RESY
W	1	2							E		E	E			EDGE	NCD...
Reset	0	0	0	0	1	1	1	1	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	LBKDI	RXED	SBNS	SBR												
W	E	GIE														
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	1	0	0

Fields

Field	Function
31 MAEN1	Match Address Mode Enable 1 Enables automatic address matching or data matching mode for MATCH[MA1] . If this field is 0, normal operation takes place. 0b - Disable 1b - Enable
30 MAEN2	Match Address Mode Enable 2 Enables automatic address matching or data matching mode for MATCH[MA2] . If this field is 0, normal operation takes place.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - Disable 1b - Enable
29 M10	10-Bit Mode Select Causes the tenth bit to be a part of the serial transmission. You must change the value of this field only when both the transmitter and receiver are disabled. 0b - Receiver and transmitter use 7-bit to 9-bit data characters 1b - Receiver and transmitter use 10-bit data characters
28-24 OSR	Oversampling Ratio Configures the OSR of the receiver. You must change the value of this field only when both the transmitter and receiver are disabled. NOTE BAUD[OSR] results in an OSR of BAUD[OSR] + 1, for example, BAUD[OSR] = 0_0101b results in a final division by 6. 0_0000b - Results in an OSR of 16 0_0001b - Reserved 0_0010b - Reserved 0_0011b - Results in an OSR of 4 (requires BAUD[BOTHEDGE] to be 1) 0_0100b - Results in an OSR of 5 (requires BAUD[BOTHEDGE] to be 1) 0_0101b - Results in an OSR of 6 (requires BAUD[BOTHEDGE] to be 1) 0_0110b - Results in an OSR of 7 (requires BAUD[BOTHEDGE] to be 1) 0_0111b - Results in an OSR of 8 0_1000b - Results in an OSR of 9 0_1001b - Results in an OSR of 10 0_1010b - Results in an OSR of 11 0_1011b - Results in an OSR of 12 0_1100b - Results in an OSR of 13 0_1101b - Results in an OSR of 14 0_1110b - Results in an OSR of 15 0_1111b - Results in an OSR of 16 1_0000b - Results in an OSR of 17 1_0001b - Results in an OSR of 18 1_0010b - Results in an OSR of 19

Table continues on the next page...

Table continued from the previous page...

Field	Function
	1_0011b - Results in an OSR of 20 1_0100b - Results in an OSR of 21 1_0101b - Results in an OSR of 22 1_0110b - Results in an OSR of 23 1_0111b - Results in an OSR of 24 1_1000b - Results in an OSR of 25 1_1001b - Results in an OSR of 26 1_1010b - Results in an OSR of 27 1_1011b - Results in an OSR of 28 1_1100b - Results in an OSR of 29 1_1101b - Results in an OSR of 30 1_1110b - Results in an OSR of 31 1_1111b - Results in an OSR of 32
23 TDMAE	Transmitter DMA Enable Enables STAT[TDRE] to generate a DMA request. 0b - Disable 1b - Enable
22 —	Reserved
21 RDMAE	Receiver Full DMA Enable Enables STAT[RDRF] to generate a DMA request. 0b - Disable 1b - Enable
20 RIDMAE	Receiver Idle DMA Enable Enables STAT[IDLE] to generate a DMA request. If this field is 1, reading Data (DATA) when either DATA[RXEMPTY] or DATA[IDLINE] is 1 generates an end-of-packet response until the completion of the DMA minor loop. During an end-of-packet response, reading Data (DATA) returns 0000_33FFh and does not pull data from the receive FIFO. STAT[IDLE] becomes 0 on completion of the minor loop, provided an end-of-packet response is generated and either the receive FIFO is empty or the receiver is active. 0b - Disable 1b - Enable
19-18	Match Configuration

Table continues on the next page...

Table continued from the previous page...

Field	Function
MATCFG	Configures the match addressing mode used. You must change the value of this field only when both the transmitter and receiver are disabled. 00b - Address match wake-up 01b - Idle match wake-up 10b - Match on and match off 11b - Enables RWU on data match and match on or off for the transmitter CTS input
17 BOTHEDGE	Both Edge Sampling Enables sampling of the received data on both edges of the baud rate clock, effectively doubling the number of times the receiver samples the input data for a given OSR. This field must be 1 for OSRs between x4 and x7 and is optional for higher OSRs. You must change the value of this field only when the receiver is disabled. If this field is 0, the receiver samples input data using the rising edge of the baud rate clock. If this field is 1, the receiver samples input data using the rising and falling edges of the baud rate clock. 0b - Rising edge 1b - Both rising and falling edges
16 RESYNCDIS	Resynchronization Disable Disables resynchronization of the received data word when a data one followed by data zero transition is detected. You must change the value of this field only when the receiver is disabled. 0b - Enable 1b - Disable
15 LBKDIE	LIN Break Detect Interrupt Enable Enables STAT[LBKDIF] to generate hardware interrupt requests. If this field is 0, hardware interrupts from STAT[LBKDIF] (uses polling) are disabled. If this field is 1, hardware interrupts are requested when STAT[LBKDIF] is 1. 0b - Disable 1b - Enable
14 RXEDGIE	RX Input Active Edge Interrupt Enable Enables STAT[RXEDGIF] to generate interrupt requests. If this field is 0, hardware interrupts from STAT[RXEDGIF] are disabled. If this field is 1, hardware interrupts are requested when STAT[RXEDGIF] is 1. Changing the value of CTRL[LOOPS] or CTRL[RSRC] when this field (RXEDGIE) is 1 can cause STAT[RXEDGIF] to become 1. 0b - Disable 1b - Enable

Table continues on the next page...

Table continued from the previous page...

Field	Function
13 SBNS	Stop Bit Number Select Determines whether data characters include one or two stop bits. You must change the value of this field only when both the transmitter and receiver are disabled. 0b - One stop bit 1b - Two stop bits
12-0 SBR	Baud Rate Modulo Divisor Sets the modulo divide rate for the baud rate generator. - If SBR is 0, baud rate generator is disabled. - If SBR is 1–8191, baud rate = baud clock ÷ ((OSR + 1) × SBR). You must update the 13-bit baud rate setting [SBR12:SBR0] only when both the transmitter and receiver are disabled (both CTRL[RE] and CTRL[TE] are 0).

39.6.7 Status (STAT)

Offset

Register	Offset
STAT	14h

Function

Provides the module status.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	LBKDI F	RXED GIF	MSBF	RXINV	RWUI D	BRK13	LBKD E	RAF	TDRE	TC	RDRF	IDLE	OR	NF	FE	PF
W	W1C	W1C										W1C	W1C	W1C	W1C	W1C
Reset	0	0	0	0	0	0	0	0	1	1	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	MA1F	MA2F	0				0		0						AME	LBKFE
W	W1C	W1C														
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31 LBKDIF	LIN Break Detect Interrupt Flag Indicates whether a LIN break character is detected. This field becomes 1 when the LIN break detect circuitry is enabled and a LIN break character is detected. NOTE This field behaves differently for register reads and writes. When reading 0b - Not detected 1b - Detected When writing 0b - No effect 1b - Clear the flag
30 RXEDGIF	RXD Pin Active Edge Interrupt Flag Indicates whether an active edge on the receive pin has occurred. This field becomes 1 whenever the receiver is enabled and an active edge (falling if STAT[RXINV] is 0; rising if STAT[RXINV] is 1) on the RXD pin occurs. NOTE This field behaves differently for register reads and writes. When reading 0b - Not occurred 1b - Occurred When writing 0b - No effect 1b - Clear the flag
29 MSBF	MSB First Specifies the first bit that is transmitted after the start bit. If this field is 0, LSB (bit 0) is the first bit transmitted after the start bit (which means, the first bit received after the start bit is identified as bit 0). If this field is 1, MSB (identified as bit 9, bit 8, bit 7, or bit 6) is the first bit that is transmitted, after the start bit, depending on the settings of CTRL[M], CTRL[PE], and BAUD[M10]. Writing 1 to this field reverses the order of the bits that are transmitted and received on the wire. This field does not affect the polarity of the bits, the location of the parity bit, or the location of the start or stop bits. You must change the value of this field only when both the transmitter and receiver are disabled. 0b - LSB 1b - MSB

Table continues on the next page...

Table continued from the previous page...

Field	Function
28 RXINV	Receive Data Inversion Specifies whether receive data is inverted. Writing 1 to this field reverses the polarity of the received data input. You must change the value of this field only when the receiver is disabled. NOTE Writing 1 to this field inverts the RXD input for all cases: data bits, start and stop bits, break, and idle. 0b - Inverted 1b - Not inverted
27 RWUID	Receive Wake Up Idle Detect Controls, for CTRL[RWU] on idle character detection, whether the idle character that wakes up the receiver writes 1 to STAT[IDLE]. For address match wake-up, this field controls whether STAT[IDLE] = 1 when the address does not match. You must change the value of this field only when the receiver is disabled. If this field is 0, during the Receive Standby state (CTRL[RWU] = 1), STAT[IDLE] does not become 1 upon detection of an idle character. During address match wake-up, STAT[IDLE] does not become 1 when an address does not match. If this field is 1, during the Receive Standby state (CTRL[RWU] = 1), STAT[IDLE] becomes 1 upon detection of an idle character. During address match wake-up, STAT[IDLE] becomes 1 when an address does not match. 0b - STAT[IDLE] does not become 1 1b - STAT[IDLE] becomes 1
26 BRK13	Break Character Generation Length Selects the longer transmitted break character length. The state of this field does not affect the detection of a framing error. You must change the value of this field only when the transmitter is disabled. You can send a break character by writing 1 to CTRL[SBK], or by writing the transmit FIFO when DATA[FRETSC] is 1 and DATA[R9T9] is 0. 0b - 9 to 13 bit times 1b - 12 to 15 bit times
25 LBKDE	LIN Break Detection Enable Enables LIN break detection. If this field is 0, LIN break detect is disabled, and only a normal break character can be detected. If this field is 1, LIN break detect is enabled and the LIN break character is detected at a length of 11 bit times (if CTRL[M] is 0), 12 bit times (if CTRL[M] is 1), or 13 bit times (if BAUD[M10] is 1). This field selects a longer break character detection length. When the field is 1, receive data is not stored in the receive FIFO.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	NOTE This field enables the LIN break detect circuit and disables writing receive data to FIFO. Therefore, it ignores all characters except a LIN break. 0b - Disable 1b - Enable
24 RAF	Receiver Active Flag Indicates whether the LPUART receiver is idle or active. This field becomes 1 when the receiver detects the beginning of a valid start bit, and the field becomes 0 automatically when the receiver detects an idle line. 0b - Idle, waiting for a start bit 1b - Receiver active (RXD pin input not idle)
23 TDRE	Transmit Data Register Empty Flag Indicates whether the transmit FIFO level is greater than, equal to, or less than the watermark. After the transmit FIFO is enabled, this field becomes 1 when the number of datawords in the transmit FIFO is equal to, or less than the number that WATER[TXWATER] indicates. To make the value of this field 0, write to it until the number of words in the transmit FIFO is greater than the number that WATER[TXWATER] indicates. After the transmit FIFO is disabled, this field becomes 1 to indicate that the FIFO level is less than the watermark. To make the value of this field 0 again, write to Data (DATA). This register is not affected by a character that is in the process of being transmitted; it is updated at the start of each transmitted character. 0b - Greater than watermark 1b - Equal to or less than watermark
22 TC	Transmission Complete Flag Indicates whether the transmitter is active. This field becomes 0 when a transmission is in progress or a preamble or break character is loaded; in other words, when the transmitter is active (sending data, a preamble, or a break). The field becomes 1 when the transmit buffer is empty and no data, preamble, or break character is being transmitted; in other words, when the transmission activity is complete. When this happens, the transmit data output signal becomes idle (logic 1). This field becomes 0 after you write to Data (DATA) to transmit new data, queuing a preamble by first writing 0 and then writing 1 to CTRL[TE], queuing a break character by writing 1 to CTRL[SBK]. 0b - Transmitter active 1b - Transmitter idle
21 RDRF	Receive Data Register Full Flag Indicates whether the receive FIFO level is less than, equal to, or greater than the watermark. This field becomes 1 when the number of datawords in the receive buffer is greater than the number that WATER[RXWATER] indicates and the receive FIFO is enabled. To write 0 to this field, read Data

Table continues on the next page...

Table continued from the previous page...

Field	Function
	(DATA) until the number of datawords in the receive FIFO is equal to, or less than the number that WATER[RXWATER] indicates. When the receive FIFO is disabled, this field (RDRF) becomes 1 if the receive buffer (Data (DATA)) is full. To make this field 0, read Data (DATA). A character that is in the process of being received does not cause a change in this field until the entire character is received. Even if this field is 1, the character continues to be received until an overrun condition occurs after the entire character is received. 0b - Equal to or less than watermark 1b - Greater than watermark
20 IDLE	Idle Line Flag Indicates whether an idle line is detected. This field becomes 1 when the LPUART receive line becomes idle for a full character time after a period of activity. When CTRL[ILT] is 0, the receiver starts counting idle bit times after the start bit. If the receive character is all 1s, these bit times and the stop bit time count towards the full character time of logic high, 10 to 13 bit times, needed for the receiver to detect an idle line. After CTRL[ILT] becomes 1, the receiver does not start counting idle bit times until after the stop bits. The stop bits and any logic high bit times at the end of the previous character do not count towards the full character time of logic high needed for the receiver to detect an idle line. For this field to become 0, write 1 to it. After the field becomes 0, you cannot write 1 to it again until after a new character is stored in the receive buffer or a LIN break character writes 1 to STAT[LBKDIF]. This field becomes 1 only once, even if the receive line remains idle for an extended period. NOTE This field behaves differently for register reads and writes. When reading 0b - Idle line detected 1b - Idle line not detected When writing 0b - No effect 1b - Clear the flag
19 OR	Receiver Overrun Flag Indicates whether there is receive overrun. This field becomes 1 when you cannot prevent STAT[RDRF] from overflowing with data. The field becomes 1 immediately after the stop bit is completely received for the dataword that overflows the buffer and all the other error fields (STAT[FE], STAT[NF], and STAT[PF]) are prevented from becoming 1. The data in the shift register is lost, but the data already in the LPUART data registers is not affected. If STAT[LBKDE] is enabled and a LIN break is detected, this field becomes 1 if STAT[LBKDIF] is not 0 before the next data character is received. When this field is 1, no additional data is stored in the receive FIFO even if sufficient room exists.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	NOTE This field behaves differently for register reads and writes. When reading 0b - No overrun 1b - Receive overrun (new LPUART data is lost) When writing 0b - No effect 1b - Clear the flag
18 NF	Noise Flag Indicates whether noise is detected in the received character of Data (DATA). The advanced sampling technique used in the receiver takes three samples in each of the received bits. If some of these samples disagree with the rest of the samples within any bit time in the frame, then noise is detected for that character. This field becomes 1 whenever the next character to be read from Data (DATA) is received with noise detected within the character. NOTE This field behaves differently for register reads and writes. When reading 0b - No noise detected 1b - Noise detected When writing 0b - No effect 1b - Clear the flag
17 FE	Framing Error Flag Indicates whether a framing error is detected. This field becomes 1 whenever the next character to be read from Data (DATA) is received with logic 0 detected where a stop bit was expected. NOTE This field behaves differently for register reads and writes. When reading 0b - No framing error detected (this does not guarantee that the framing is correct) 1b - Framing error detected When writing 0b - No effect 1b - Clear the flag

Table continues on the next page...

Table continued from the previous page...

Field	Function
16 PF	Parity Error Flag Indicates whether a parity error is detected. This field becomes 1 whenever the next character to be read from Data (DATA) is received when parity is enabled (CTRL[PE] is 1) and the parity bit in the received character does not agree with the expected parity value. NOTE This field behaves differently for register reads and writes. When reading 0b - No parity error detected 1b - Parity error detected When writing 0b - No effect 1b - Clear the flag
15 MA1F	Match 1 Flag Indicates whether the received data is equal to MATCH[MA1]. This field becomes 1 whenever the next character to be read from Data (DATA) matches the value of MATCH[MA1]. NOTE This field behaves differently for register reads and writes. When reading 0b - Not equal to MA1 1b - Equal to MA1 When writing 0b - No effect 1b - Clear the flag
14 MA2F	Match 2 Flag Indicates whether the received data is equal to MATCH[MA2]. This field becomes 1 whenever the next character to be read from Data (DATA) matches the value of MATCH[MA2]. NOTE This field behaves differently for register reads and writes. When reading 0b - Not equal to MA2

Table continues on the next page...

Table continued from the previous page...

Field	Function
	1b - Equal to MA2 When writing 0b - No effect 1b - Clear the flag
13-10 —	Reserved
9-8 —	Reserved
7-2 —	Reserved
1 AME	Address Mark Enable Configures the location of the address mark when configured for MSB first transfers. This field has no effect when configured for LSB first and you must change the value of this field only when both the transmitter and receiver are disabled. If this field is 0, address mark in character is MSB. If this field is 1, the address mark is stored in Data (DATA) at MSB (or MSB-1 when the parity bit is enabled). In other words, the address mark in character is the last bit before the stop bit (or parity bit when enabled). 0b - Disable 1b - Enable
0 LBKFE	LIN Break Flag Enable Enables the LIN break flag to assert whenever a LIN break character is detected. Unlike STAT[LBKDE], this does not impact data being stored in the receive data buffer, but does cause STAT[LBKDIF] to become 1 whenever a LIN break is detected. Because a LIN break is longer than a normal character, the LIN break triggers a write to STAT[RDRF] with the data fields as 0 and STAT[FE] as 1. The character following the LIN break has DATA[LINBRK] as 1 to indicate that the previous character was a LIN break. You must change the value of this field only when both the transmitter and receiver are disabled. If this field is 1, the LIN break character is detected at a length of 11-bit times (if CTRL[M] is 0), 12 (if CTRL[M] is 1), or 13 (if BAUD[M10] is 1). 0b - Disable 1b - Enable

39.6.8 Control (CTRL)

Offset

Register	Offset
CTRL	18h

Function

Controls various optional features of the LPUART system.

You must write to the fields of this register only when both the transmitter and receiver are disabled.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	R8T9	R9T8	TXDIR	TXINV	ORIE	NEIE	FEIE	PEIE	TIE	TCIE	RIE	ILIE	TE	RE	RWU	SBK
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	MA1IE	MA2IE	0	SWAP	M7	IDLECFG			LOOP S	DOZE EN	RSRC	M	WAKE	ILT	PE	PT
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31 R8T9	Receive Bit 8 Transmit Bit 9 Contains R8 and T9 that correspond to different functions. R8 is the ninth data bit received after you configure LPUART for 9-bit or 10-bit data formats. When reading 9-bit or 10-bit data, read R8 before reading Data (DATA). T9 is the tenth data bit transmitted after you configure LPUART for 10-bit data formats. When writing 10-bit data, write T9 before writing to Data (DATA). If T9 does not need to change from its previous value, such as when it is used to generate address mark or parity, then you need not write to it each time you write to Data (DATA). NOTE R8 is a read-only bit and T9 is a write-only bit; the value read is different from the value written.
30 R9T8	Receive Bit 9 Transmit Bit 8 Contains R9 and T8 that correspond to different functions. R9 is the tenth data bit received after you configure LPUART for 10-bit data formats. When reading 10-bit data, read R9 before reading Data (DATA).

Table continues on the next page...

Table continued from the previous page...

Field	Function
	T8 is the ninth data bit transmitted after you configure LPUART for 9-bit or 10-bit data formats. When writing 9-bit or 10-bit data, write T8 before writing to Data (DATA). If T8 does not need to change from its previous value, such as when it is used to generate address mark or parity, then you need not write to it each time you write to Data (DATA). NOTE R9 is a read-only field and T8 is a write-only field; the value read is different from the value written.
29 TXDIR	TXD Pin Direction in Single-Wire Mode Determines the direction of data at the TXD pin, in Single-Wire mode, when LPUART is configured for a single-wire half-duplex operation (CTRL[LOOPS] and CTRL[RSRC] are 1). When writing 0 to this field, the transmitter finishes transmitting the current character (if any) before the receiver starts receiving data from the TXD pin. 0b - Input 1b - Output
28 TXINV	Transmit Data Inversion Specifies whether transmit data is inverted. Writing 1 to this field reverses the polarity of the transmitted data output. This action inverts the TXD output for all cases: data bits, start and stop bits, break, and idle. 0b - Not inverted 1b - Inverted
27 ORIE	Overrun Interrupt Enable Enables STAT[OR] to generate hardware interrupt requests. When this field is 1, a hardware interrupt is requested. Use polling when OR interrupts are disabled. 0b - Disable 1b - Enable
26 NEIE	Noise Error Interrupt Enable Enables STAT[NF] to generate hardware interrupt requests. When this field is 1, a hardware interrupt is requested. Use polling when NF interrupts are disabled. 0b - Disable 1b - Enable
25 FEIE	Framing Error Interrupt Enable Enables STAT[FE] to generate hardware interrupt requests. When this field is 1, a hardware interrupt is requested. Use polling when FE interrupts are disabled. 0b - Disable 1b - Enable

Table continues on the next page...

Table continued from the previous page...

Field	Function
24 PEIE	Parity Error Interrupt Enable Enables STAT[PF] to generate hardware interrupt requests. When this field is 1, a hardware interrupt is requested. Use polling when PF interrupts are disabled. 0b - Disable 1b - Enable
23 TIE	Transmit Interrupt Enable Enables STAT[TDRE] to generate interrupt requests if STAT[TDRE] is 1. 0b - Disable 1b - Enable
22 TCIE	Transmission Complete Interrupt Enable Enables STAT[TC] to generate interrupt requests if STAT[TC] is 1. 0b - Disable 1b - Enable
21 RIE	Receiver Interrupt Enable Enables STAT[RDRF] to generate hardware interrupt requests if STAT[RDRF] is 1. 0b - Disable 1b - Enable
20 ILIE	Idle Line Interrupt Enable Enables hardware interrupts. This field enables STAT[IDLE] to generate interrupt requests. If this field is 0, hardware interrupts from STAT[IDLE] are disabled and polling is used, and if this field is 1, hardware interrupts are enabled when STAT[IDLE] is 1. 0b - Disable 1b - Enable
19 TE	Transmitter Enable Enables the LPUART transmitter. Using this field, you can also queue an idle preamble by first writing 0 and then writing 1 to this field. After this field becomes 0, the field reads 1 until the transmitter has completed the current character and the TXD pin is tristated. You can also queue a single idle character by writing to the transmit FIFO with DATA[FRETSC] and DATA[R9T9] = 1. 0b - Disable 1b - Enable

Table continues on the next page...

Table continued from the previous page...

Field	Function
18 RE	Receiver Enable Enables the LPUART receiver. After you write 0 to this field, this field remains 1 until the receiver finishes receiving the current character (if any). 0b - Disable 1b - Enable
17 RWU	Receiver Wake-Up Control Specifies whether the LPUART receiver in standby is waiting for a wake-up condition. You can write 1 to this field to place the LPUART receiver in a Standby state. The field becomes 0 automatically when an RWU event occurs, that is, in case of an idle event when CTRL[WAKE] is 0 or an address match when CTRL[WAKE] is 1 and STAT[RWUID] is 0. NOTE You must write 1 to this field only when CTRL[WAKE] is 0 (wake-up on idle), if the channel is currently not idle. You can determine this by the value of STAT[RAF]. If the field is 1 to wake up an idle event and the channel is already idle, LPUART, possibly, discards the data. This is because the data must be received or a LIN break is detected after an Idle condition is detected before the IDLE flag is allowed to be reasserted. 0b - Normal receiver operation 1b - LPUART receiver in standby, waiting for a wake-up condition
16 SBK	Send Break Specifies whether queue break character(s) are to be sent. Writing 1 and then 0 to this field queues a break character in the transmit data stream. Additional break characters of 9 to 13 bits, or 12 to 15 bits if STAT[BRK13] is 1, and bit times of logic 0 are queued as long as this field is 1. Depending on the timing when this field is 1 and 0, relative to the character currently being transmitted, a second break character may be queued before you write 0 to this field. If the time taken to write 0 to this field is too long, for example, if the field does not become 0 by the end of the first break character, a second break character is sent. This is compared to queuing a break character through the transmit FIFO that guarantees only one break character is sent. You can also queue a single break character by writing to the transmit FIFO when DATA[FRETSC] is 1 and DATA[R9T9] is 0. 0b - Normal transmitter operation 1b - Queue break character(s) to be sent
15 MA1IE	Match 1 (MA1F) Interrupt Enable Enables the MA1F interrupt. 0b - Disable 1b - Enable

Table continues on the next page...

Table continued from the previous page...

Field	Function
14 MA2IE	Match 2 (MA2F) Interrupt Enable Enables the MA2F interrupt. 0b - Disable 1b - Enable
13 —	Reserved
12 SWAP	TXD and RXD Pin Swap Swaps TXD and RXD pins (set and cleared by software). If this field is 0, TX and RX are used in the standard way. If this field is 1, TX and RX are swapped, enabling an external UART module to work in a crossed-wired fashion. 0b - Use the standard way 1b - Swap
11 M7	7-Bit Mode Select Specifies the data characters that the receiver and transmitter use. You must change the value of this field only after both the transmitter and receiver are disabled. 0b - 8-bit to 10-bit 1b - 7-bit
10-8 IDLECFG	Idle Configuration Configures the number of idle characters that must be received before you write 1 to STAT[IDLE] . 000b - 1 001b - 2 010b - 4 011b - 8 100b - 16 101b - 32 110b - 64 111b - 128
7 LOOPS	Loop Mode Select Selects Loop mode. After this field becomes 1, the RXD pin is disconnected from LPUART and the transmitter output is internally connected to the receiver input. The transmitter and receiver must be enabled to use the loop function. In Loop mode or Single-Wire mode, the transmitter outputs are internally connected to the receiver input (see CTRL[RSRC]).

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - Normal operation: RXD and TXD use separate pins 1b - Loop mode or Single-Wire mode
6 DOZEEN	Doze Mode Enables LPUART in Doze mode. If this field is 1, LPUART remains active when not in Doze mode. 0b - Enable 1b - Disable
5 RSRC	Receiver Source Select Determines the source of the receiver shift register input if CTRL[LOOPS] is 1. This field has no effect unless CTRL[LOOPS] is 1. If this field is 0, internal Loopback mode is selected. LPUART does not use the RXD pin. Additionally, the CTS_B pin is not used and internally driven by the RTS_B output. If this field is 1, single-wire LPUART mode is selected where the TXD pin is connected to the transmitter output and receiver input. 0b - Internal Loopback mode 1b - Single-wire mode
4 M	9-Bit Or 8-Bit Mode Select Specifies the data characters that the receiver and transmitter use. 0b - 8-bit 1b - 9-bit
3 WAKE	Receiver Wake-Up Method Select Determines which condition wakes up LPUART when CTRL[RWU] = 1 and BAUD[MATCFG] = 0 (this field must be 1 when BAUD[MATCFG] = 11): • Address mark in the bit preceding the stop bit (or bit preceding the parity bit when parity is enabled) of the received data character • An idle condition on the receive pin input signal If this field is 0, CTRL[RWU] is configured for idle line wake-up, and if this field is 1, CTRL[RWU] is configured with address mark wake-up. 0b - Idle 1b - Mark
2 ILT	Idle Line Type Select Determines when the receiver starts counting logic 1s as idle character bits.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	The count begins either after a valid start bit or the stop bit. If the count begins after the start bit, a string of logic 1s preceding the stop bit can cause false recognition of an idle character. Beginning the count after the stop bit avoids false idle character recognition, but requires properly synchronized transmissions. NOTE In case you write 1 to this field, a logic 0 is automatically shifted after a received stop bit, therefore resetting the idle count. 0b - After the start bit 1b - After the stop bit
1 PE	Parity Enable Enables hardware parity generation and checking. If parity is enabled, the bit immediately before the stop bit is treated as the parity bit. 0b - Disable 1b - Enable
0 PT	Parity Type Selects the type of parity, even or odd, if parity is enabled (CTRL[PE] = 1): • Odd parity means that the total number of logic 1 bits in the data character, including the parity bit, is odd. • Even parity means that the total number of 1s in the data character, including the parity bit, is even. 0b - Even parity 1b - Odd parity

39.6.9 Data (DATA)

Offset

Register	Offset
DATA	1Ch

Function


Supports 8-bit, 16-bit, or 32-bit writes, each type of write performing a separate function. An 8-bit write to DATA[7:0] pushes [{CTRL\[R8T9\], CTRL\[R9T8\], DATA\[7:0\]}](#) the transmit FIFO with TSC clear. A 16-bit or 32-bit write pushes the data written into the FIFO and does not update the value of [CTRL\[R8T9\]](#) or [CTRL\[R9T8\]](#).

Reads and writes of this register are also involved in the automatic flag clearing mechanisms for some of the LPUART status fields.

NOTE

Reads return the contents of the read-only receive FIFO and writes go to the write-only transmit FIFO, making this register work as a set of two separate registers.

Diagram

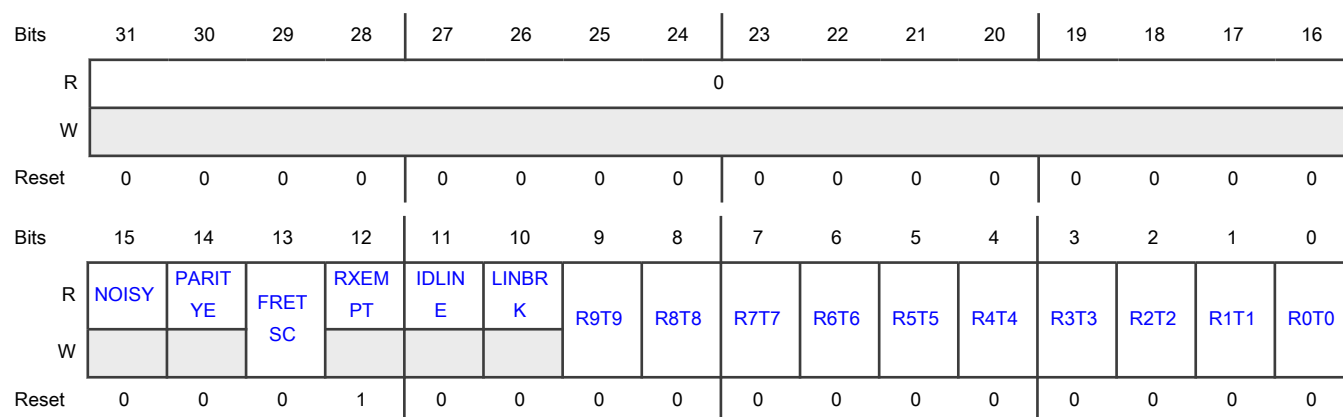

Fields

Field	Function
31-16 —	Reserved
15 NOISY	Noisy Data Received Indicates whether the current received dataword contained in DATA[R9:R0] is received with noise. 0b - Received without noise 1b - Received with noise
14 PARITYE	Parity Error Indicates whether the current received dataword contained in DATA[R9:R0] is received with a parity error. 0b - Received without a parity error 1b - Received with a parity error
13 FRETSC	Frame Error Transmit Special Character Specifies the way the dataword is received. For reads, this field indicates that the current received dataword contained in DATA[R9:R0] is received with a frame error. For writes, the field indicates that a break or idle character is to be transmitted instead of the contents in DATA[T9:T0]. T9 indicates a break character when it is 0 and indicates an idle character when it is 1. The contents of DATA[T8:T0] must be 0. 0b - Received without a frame error on reads or transmits a normal character on writes 1b - Received with a frame error on reads or transmits an idle or break character on writes
12 RXEMPT	Receive Buffer Empty Indicates whether the receive buffer contains valid data. This field becomes 1 when there is no data in the receive buffer. The field does not consider data in the receive shift register.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - Valid data 1b - Invalid data and empty
11 IDLINE	Idle Line Indicates whether the receiver line was idle before receiving the character in DATA[9:0]. It can be read as "1" on the first character when the receiver is first enabled. The difference between this field and STAT[IDLE] is that, STAT[IDLE] flag does not set on an idle line after the receiver is first enabled, it needs to receive a character before it can become set, whereas this field does not have this limitation and can be set on the first character received if an idle line is detected beforehand. 0b - Not idle 1b - Idle
10 LINBRK	LIN Break Indicates whether the receiver line detected a LIN break before receiving the character in DATA[9:0]. This field requires the value of STAT[LBKDIF] to be 1. If this field is 0, the LIN break detect circuitry is disabled. 0b - Not detected 1b - Detected
9 R9T9	Read receive FIFO bit 9 or write transmit FIFO bit 9
8 R8T8	Read receive FIFO bit 8 or write transmit FIFO bit 8
7 R7T7	Read receive FIFO bit 7 or write transmit FIFO bit 7
6 R6T6	Read receive FIFO bit 6 or write transmit FIFO bit 6
5 R5T5	Read receive FIFO bit 5 or write transmit FIFO bit 5
4 R4T4	Read receive FIFO bit 4 or write transmit FIFO bit 4
3 R3T3	Read receive FIFO bit 3 or write transmit FIFO bit 3
2 R2T2	Read receive FIFO bit 2 or write transmit FIFO bit 2

Table continues on the next page...

Table continued from the previous page...

Field	Function
1 R1T1	Read receive FIFO bit 1 or write transmit FIFO bit 1
0 R0T0	Read receive FIFO bit 0 or write transmit FIFO bit 0

39.6.10 Match Address (MATCH)


Offset

Register	Offset
MATCH	20h

Function

Provides addresses for address matching during the receiver operation.

Diagram

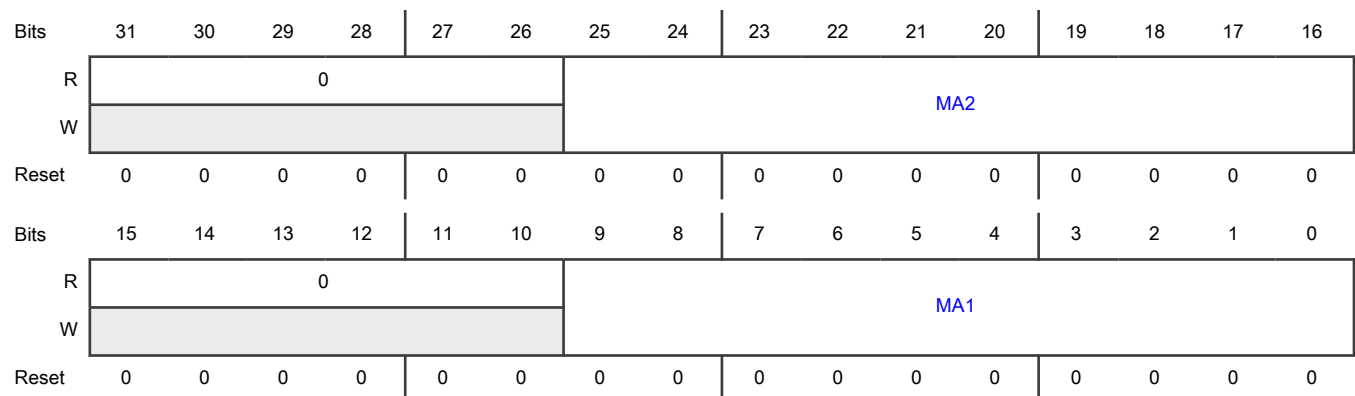

Fields

Field	Function
31-26 —	Reserved
25-16 MA2	Match Address 2 Is compared to input data addresses when the most significant bit is 1 and the associated Baud Rate (BAUD) field is 1.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	If a match occurs, the data that follows is transferred to Data (DATA) . If a match fails, the data that follows is discarded. You must write to MATCH[MA1] and MATCH[MA2] only when the associated Baud Rate (BAUD) field is 0.
15-10 —	Reserved
9-0 MA1	Match Address 1 Is compared to input data addresses when the most significant bit is 1 and the associated Baud Rate (BAUD) field is 1. If a match occurs, the data that follows is transferred to Data (DATA) . If a match fails, the data that follows is discarded. You must write to MATCH[MA1] and MATCH[MA2] fields only when the associated field in Baud Rate (BAUD) is 0.

39.6.11 MODEM IrDA (MODIR)


Offset

Register	Offset
MODIR	24h

Function

Controls options for setting the MODEM configuration.

Diagram

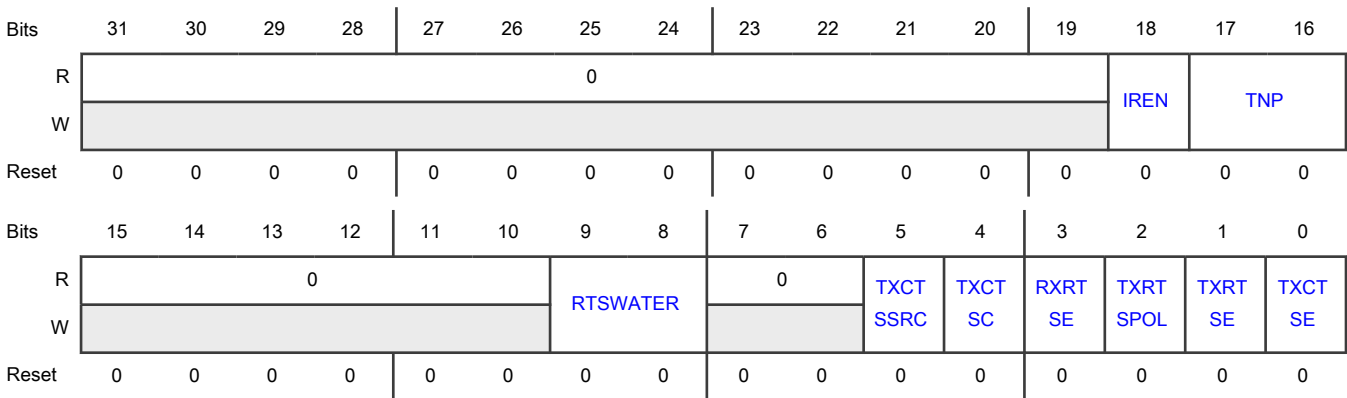

Fields

Field	Function
31-19	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
—	
18 IREN	IR Enable Enables IR modulation and demodulation. You must change the value of this field only when both the transmitter and receiver are disabled. 0b - Disable 1b - Enable
17-16 TNP	Transmitter Narrow Pulse Specifies whether LPUART transmits a $1 \div \text{OSR}$, $2 \div \text{OSR}$, $3 \div \text{OSR}$, or $4 \div \text{OSR}$ narrow pulse when the IR pulse is enabled. You must change the value of this field only when both the transmitter and receiver are disabled. The IR pulse width must be configured to less than half of the OSR. Common pulse widths are $3 \div 16$, $1 \div 16$, $1 \div 32$, or $1 \div 4$ of the bit length. You can configure these by selecting the appropriate OSR and pulse width. 00b - $1 \div \text{OSR}$ 01b - $2 \div \text{OSR}$ 10b - $3 \div \text{OSR}$ 11b - $4 \div \text{OSR}$
15-10 —	Reserved
9-8 RTSWATER	Receive RTS Configuration Configures the assertion and negation of the receiver's RTS_B output. The receiver's RTS_B output negates when the number of empty words in the receive FIFO is greater or equal to the value of this field. If this field is 0, the RTS_B pin negates when the receive FIFO is full. For the purpose of receive RTS_B generation, the number of words in the receive FIFO updates when a start bit is detected. This supports additional latency between RTS_B negation and the external transmitter ceasing transmission. If both receive RTS_B and address or data matching is enabled, RTS_B could assert at the end of a character if there exists no match. You must change the value of this field only when the receiver is disabled.
7-6 —	Reserved
5 TXCTSSRC	Transmit CTS Source Configures the source of the CTS input. 0b - The CTS_B pin 1b - An internal connection to the receiver address match result

Table continues on the next page...

Table continued from the previous page...

Field	Function
4 TXCTSC	Transmit CTS Configuration Configures whether the CTS state or input is checked or sampled at the start of each character or only when the transmitter is idle. 0b - Sampled at the start of each character 1b - Sampled when the transmitter is idle
3 RXRTSE	Receiver RTS Enable Allows the RTS output to control the CTS input of the transmitting device to prevent receiver overrun. You must change the value of this field only when the receiver is disabled. If this field is 0, the receiver has no effect on RTS. If this field is 1, RTS is deasserted if STAT[RDRF] is 1 or a start bit is detected that causes STAT[RDRF] to become 1. RTS is asserted if STAT[RDRF] is 0 and has not detected a start bit that causes STAT[RDRF] to become 1. NOTE Do not write 1 to both MODIR[RXRTSE] and MODIR[TXRTSE]. 0b - Disable 1b - Enable
2 TXRTSPOL	Transmitter RTS Polarity Controls the polarity of the transmitter RTS. This field does not affect the polarity of the receiver RTS that remains negated in the active-low state unless MODIR[TXRTSE] is 1. You must change the value of this field only when the transmitter is disabled. 0b - Active low 1b - Active high
1 TXRTSE	Transmitter RTS Enable Controls the operation of RTS before and after a transmission. You must change the value of this field only when the transmitter is disabled. If this field is 0, the transmitter has no effect on RTS, and if this field is 1, a character is placed into an empty transmit shift register. RTS asserts 1-bit time before the start bit is transmitted and deasserts 1-bit time after all characters in the transmitter FIFO and shift register are completely sent, including the last stop bit. 0b - Disable 1b - Enable
0 TXCTSE	Transmitter CTS Enable Enables the operation of the transmitter. You can write 1 to this field irrespective of the states of MODIR[TXRTSE] and MODIR[RXRTSE]. If this field is 1, the transmitter checks the state of the CTS signal each time it is ready to send a character. If CTS is asserted, the character is sent. If CTS is deasserted, the TXD signal remains in the mark state and

Table continues on the next page...

Table continued from the previous page...

Field	Function
	transmission is delayed until CTS is asserted. Changes in CTS, when a character is being sent, do not affect its transmission. 0b - Disable 1b - Enable

39.6.12 FIFO (FIFO)

Offset


Register	Offset
FIFO	28h

Function

Provides you the ability to turn on and turn off the FIFO functionality.

This register also provides you the size of the FIFO that has been implemented. You can read this register at any time and must write to it only when [CTRL\[RE\]](#) and [CTRL\[TE\]](#) are 0 and the FIFO is empty.

Diagram

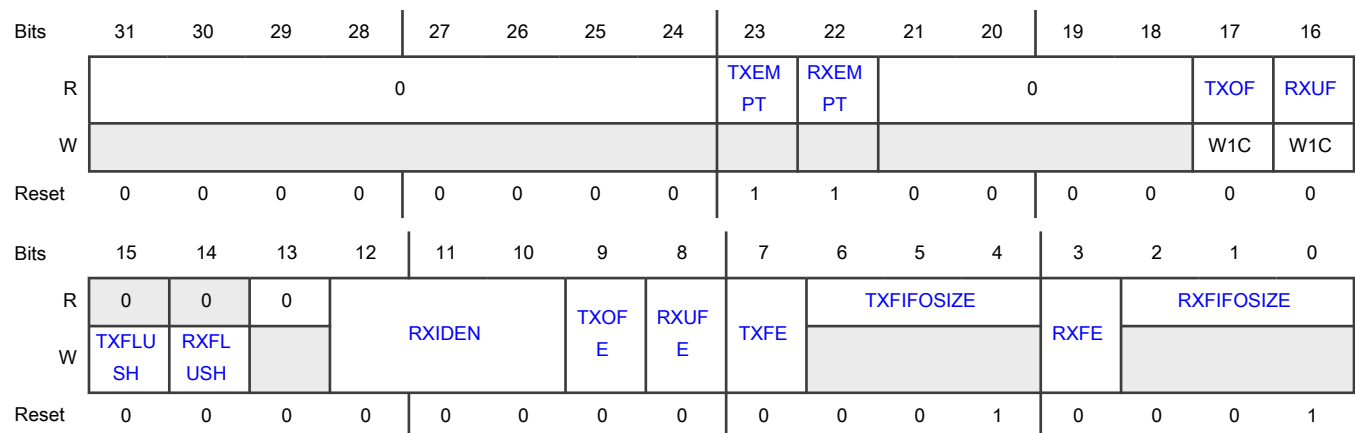

Fields

Field	Function
31-24 —	Reserved
23 TXEMPT	Transmit FIFO Or Buffer Empty Indicates whether the transmit buffer is empty.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	This field becomes 1 when there is no data in the transmit FIFO or buffer. The field does not consider data in the transmit shift register. 0b - Not empty 1b - Empty
22 RXEMPTY	Receive FIFO Or Buffer Empty Indicates whether the receive buffer is empty. This field becomes 1 when there is no data in the receive FIFO or buffer. The field does not consider data in the receive shift register. 0b - Not empty 1b - Empty
21-18 —	Reserved
17 TXOF	Transmitter FIFO Overflow Flag Indicates whether more data has been written to the transmit FIFO than it can hold. If this field is 0, no transmit FIFO overflow has occurred since the last time the field was cleared, and if this field is 1, at least one transmit FIFO overflow has occurred since the last time the field was cleared. This field becomes 1 regardless of the value of FIFO[TXOFE]. However, an interrupt is issued to the host only if FIFO[TXOFE] is 1. NOTE This field behaves differently for register reads and writes. When reading 0b - No overflow 1b - Overflow When writing 0b - No effect 1b - Clear the flag
16 RXUF	Receiver FIFO Underflow Flag Indicates whether more data has been read from the receive FIFO than was present. If this field is 0, no receive FIFO underflow has occurred since the last time the field was cleared, and if this field is 1, at least one receive FIFO underflow has occurred since the last time the field was cleared. This field becomes 1 regardless of the value of FIFO[RXUFE]. However, an interrupt is issued to the host only if FIFO[RXUFE] is 1. NOTE This field behaves differently for register reads and writes.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	When reading 0b - No underflow 1b - Underflow When writing 0b - No effect 1b - Clear the flag
15 TXFLUSH	Transmit FIFO Flush Causes all data that is stored in the transmit FIFO to be flushed. If you write 0 to this field, no flush operation occurs, and if you write 1 to this field, all data in the transmit FIFO or buffer clears out. This does not affect data in the transmit shift register. 0b - No effect 1b - All data flushed out
14 RXFLUSH	Receive FIFO Flush Causes all data that is stored in the receive FIFO to be flushed. If you write 0 to this field, no flush operation occurs, and if you write 1 to this field, all data in the receive FIFO or buffer clears out. This does not affect data in the receive shift register. 0b - No effect 1b - All data flushed out
13 —	Reserved
12-10 RXIDEN	Receiver Idle Empty Enable Enables STAT[RDRF] to become 1 when the receiver is idle for a number of idle characters and the FIFO is not empty. 000b - Disable STAT[RDRF] to become 1 because of partially filled FIFO when the receiver is idle 001b - Enable STAT[RDRF] to become 1 because of partially filled FIFO when the receiver is idle for one character 010b - Enable STAT[RDRF] to become 1 because of partially filled FIFO when the receiver is idle for two characters 011b - Enable STAT[RDRF] to become 1 because of partially filled FIFO when the receiver is idle for four characters 100b - Enable STAT[RDRF] to become 1 because of partially filled FIFO when the receiver is idle for eight characters

Table continues on the next page...

Table continued from the previous page...

Field	Function
	101b - Enable STAT[RDRF] to become 1 because of partially filled FIFO when the receiver is idle for 16 characters 110b - Enable STAT[RDRF] to become 1 because of partially filled FIFO when the receiver is idle for 32 characters 111b - Enable STAT[RDRF] to become 1 because of partially filled FIFO when the receiver is idle for 64 characters
9 TXOFE	Transmit FIFO Overflow Interrupt Enable Enables FIFO[TXOF] to generate an interrupt to the host. 0b - Disable 1b - Enable
8 RXUFE	Receive FIFO Underflow Interrupt Enable Enables FIFO[RXUF] to generate an interrupt to the host. 0b - Disable 1b - Enable
7 TXFE	Transmit FIFO Enable Enables the transmit FIFO. If this field is 0, the transmit buffer operates as a FIFO of depth equal to 1 dataword, regardless of the value in FIFO[TXFIFOSIZE]. Both CTRL[TE] and CTRL[RE] must be 0 before you change the value of this field. If this field is 1, the built-in FIFO structure for the transmit buffer is enabled. FIFO[TXFIFOSIZE] indicates the size of the FIFO structure. 0b - Disable 1b - Enable
6-4 TXFIFOSIZE	Transmit FIFO Buffer Depth Indicates the maximum number of transmit datawords (transmit FIFO buffer depth) that can be stored in the transmit buffer. 000b - 1 001b - 4 010b - 8 011b - 16 100b - 32 101b - 64 110b - 128 111b - 256
3	Receive FIFO Enable

Table continues on the next page...

Table continued from the previous page...

Field	Function
RXFE	Enables the receive FIFO. If this field is 0, the receive buffer operates as a FIFO of depth equal to 1 dataword, regardless of the value in FIFO[RXFIFOSIZE]. Both CTRL[RE] and CTRL[TE] must be 0 before you change the value of this field. If this field is 1, the built-in FIFO structure for the receive buffer is enabled. FIFO[RXFIFOSIZE] indicates the size of the FIFO structure. 0b - Disable 1b - Enable
2-0 RXFIFOSIZE	Receive FIFO Buffer Depth Indicates the maximum number of receive datawords (receive FIFO buffer depth) that can be stored in the receive buffer before an overrun occurs. 000b - 1 001b - 4 010b - 8 011b - 16 100b - 32 101b - 64 110b - 128 111b - 256

39.6.13 Watermark (WATER)


Offset

Register	Offset
WATER	2Ch

Function

Provides the ability to set a programmable threshold for notification, or sets the programmable thresholds to indicate that transmit data can be written or receive data can be read.

You may read this register at any time but must write to it only when [CTRL\[TE\]](#) is 0.

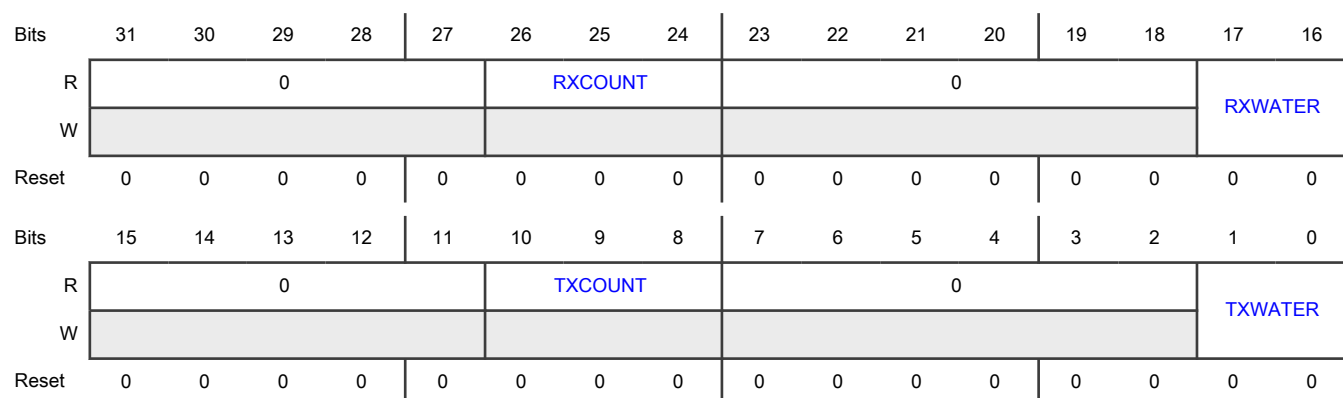Diagram**Fields**

Field	Function
31-27 —	Reserved
26-24 RXCOUNT	Receive Counter Indicates the number of datawords in the receive FIFO or buffer. If a dataword is being received in the receive shift register, it is not included in the count. This value may be used in conjunction with FIFO[RXFIFOSIZE] to calculate the room left in the receive FIFO or buffer.
23-18 —	Reserved
17-16 RXWATER	Receive Watermark Generates an interrupt or a DMA request if the number of datawords in the receive FIFO or buffer is greater than the value of this field. For proper operation, the value of this field must be less than the size of the receive FIFO or buffer, as indicated by FIFO[RXFIFOSIZE] and FIFO[RXFE] .
15-11 —	Reserved
10-8 TXCOUNT	Transmit Counter Indicates the number of datawords in the transmit FIFO or buffer. If a dataword is being transmitted to the transmit shift register, it is not included in the count. This value may be used in conjunction with the value of FIFO[TXFIFOSIZE] to calculate the room left in the transmit FIFO or buffer.
7-2 —	Reserved
1-0	Transmit Watermark

Table continues on the next page...

Table continued from the previous page...

Field	Function
TXWATER	Generates an interrupt or a DMA request when the number of datawords in the transmit FIFO or buffer is equal to or less than the value of this field. For proper operation, the value of this field must be less than the size of the transmit buffer or FIFO, as indicated by FIFO[TXFIFOSIZE] and FIFO[TXFE] .

39.6.14 Data Read-Only (DATARO)


Offset

Register	Offset
DATARO	30h

Function

Indicates the first entry in the receive FIFO, but does not pull data from the FIFO.

Diagram

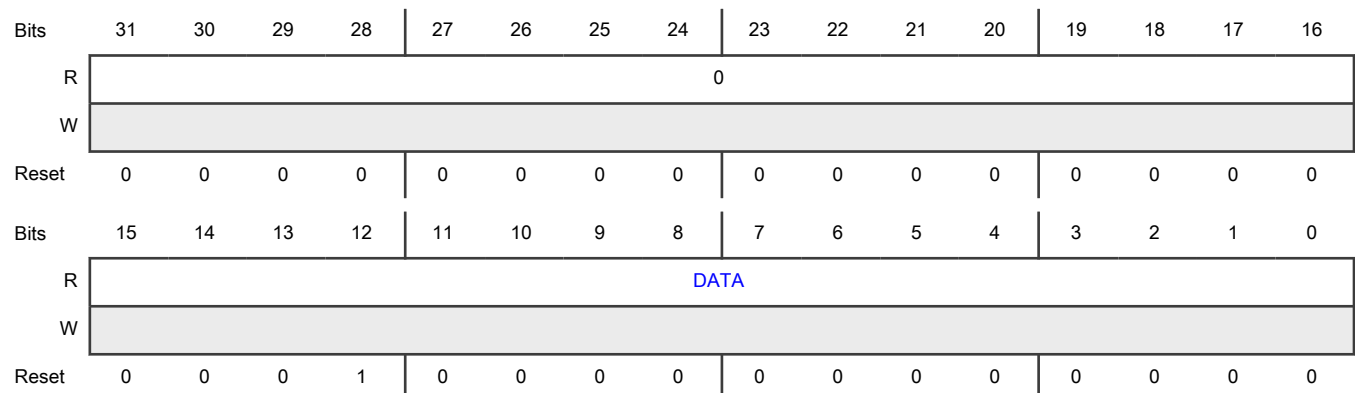

Fields

Field	Function
31-16 —	Reserved
15-0 DATA	Receive Data Indicates the first entry from the receive FIFO. This register has the same functionality as that of Data (DATA) .

Chapter 40

Smart DMA Controller (SmartDMA)

40.1 Chip-specific SmartDMA information

Table 285. Reference links to related information

Topic	Related module	Reference
Full description	SmartDMA	SmartDMA
System memory map		Memory map
Clocking		Clock distribution
Power Management		Power Management
Signal multiplexing	Port control	Signal multiplexing

40.1.1 Module instances

This device support one instance of SmartDMA.

40.2 Overview

EZH is a core that supports unique, reduced instruction sets. It works in a similar way to the Arm core. Being the controller of AHB matrix, EZH can access:

- All its targets.
- The GPIO peripheral control and data registers.

The purpose of EZH is to perform event- and I/O-driven handling to offload the Arm processor in the system.

40.2.1 Block diagram

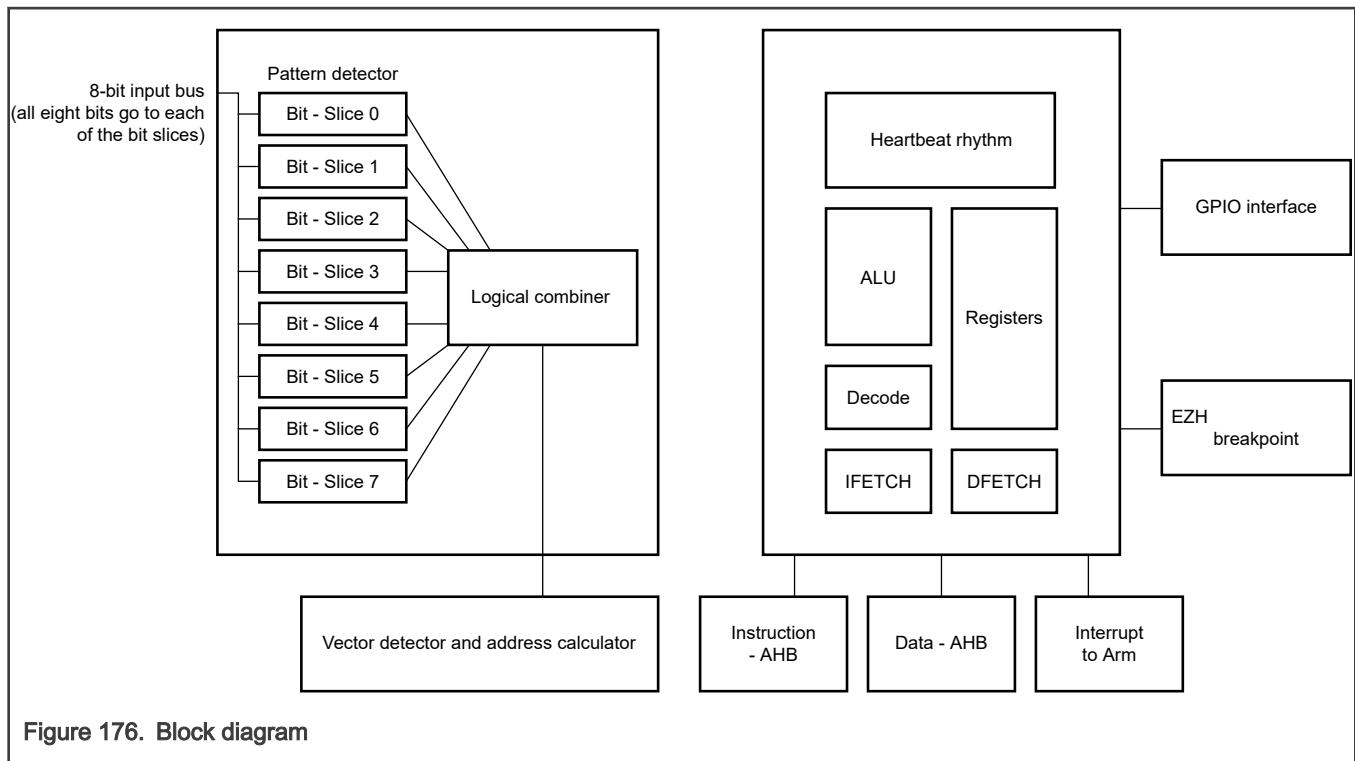


Figure 176. Block diagram

40.2.2 Features

EZH is designed to deliver an optimal performance for the following purposes:

- State machine control
- Boolean detection
- Tedious or repetitive simple tasks
- DMA function
- Interrupt load reduction on Arm
- Streaming GPIO
- General I/O handling
- Protocol emulation over I/O, such as parallel camera and LCD interfaces
- Shift-based algorithm calculation
- Large-scale data manipulation

40.3 Functional description

40.3.1 Clocking

EZH uses the same system clock as the Arm core does. You can enable or disable the EZH clock by configuring the appropriate register field (see the chip-specific section for details). However, you must enable the clock for EZH before setting the EZH controller and EZH program execution.

40.3.2 Reset

You can reset the EZH module by configuring the corresponding register field. See the chip-specific section for details.

40.3.3 Interrupts

You can enable the Arm interrupt for EZH via nested vectored interrupt controller (NVIC). See the chip-specific section for details.

40.3.4 Pin description

EZH can access and manipulate a maximum of 32 I/O pins that are selected as “EZH function”. You can configure “EZH function” by using signal multiplexing.

EZH includes dedicated GPIO control registers through which it can quickly access I/O ports. See the chip-specific section for details.

40.3.5 Requests and triggers

In general, EZH requests set the pace of execution to match what the peripheral (including its FIFO if it has one) could do. For example,

- USART issues a transmit EZH request when its transmit FIFO is not full, and a receive EZH request when its receive FIFO is not empty.
- The GPIO pin issues a data storage EZH request when its rising edge is detected.
- The timer event issues a PWM output EZH request when the counter reaches zero.
- ADC issues a result reading EZH request after the conversion is complete.

EZH includes a number of channels connected to external input sources. See the chip-specific section for details.

40.3.6 Setting and power consumption in different modes

In Sleep mode, SmartDMA:

- Is active.
- Can operate and access all enabled peripherals and memories.
- Can wake up the Arm core from Sleep mode.

In Power-Down and Deep Power-Down modes, SmartDMA:

- Is inactive.
- Is configurable for low-power consumption by:
 - Disabling the EZH clock when not in use.
 - Placing EZH into the reset state.
 - Holding the EZH core by using some opcodes.
 - Slowing down the frequency of EZH execution.

40.4 SmartDMA register descriptions

40.4.1 SmartDMA Register memory map

SmartDMA0 base address: 4000_E000h


Offset	Register	Width (In bits)	Access	Reset value
20h	Boot Address (BOOTADR)	32	RW	0000_0000h
24h	Control (CTRL)	32	RW	0000_0000h
28h	Program Counter (PC)	32	R	0000_0000h
2Ch	Stack Pointer (SP)	32	R	0000_0000h
40h	ARM to EZH Interrupt Control (ARM2EZH)	32	RW	0000_0000h
44h	EZH to ARM Trigger (EZH2ARM)	32	RW	0000_0000h
48h	Pending Trap Control (PENDTRAP)	32	RW	0000_0000h

40.4.2 Boot Address (BOOTADR)

Offset

Register	Offset
BOOTADR	20h

Diagram

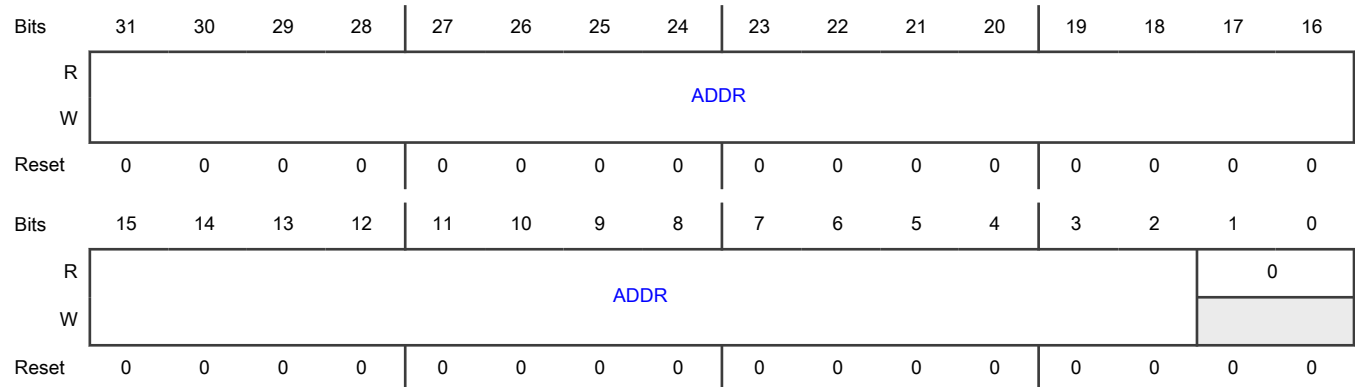

Fields

Field	Function
31-2 ADDR	32-bit boot address, the boot address should be 4-byte aligned.
1-0 —	Reserved

40.4.3 Control (CTRL)

Offset

Register	Offset
CTRL	24h

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0															
W	WKEY															
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0												SYNC	BUFE	ERRDI	STAR
W													EN	N	S	T
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields


Field	Function
31-16 WKEY	Write Key This field must be written with the value 0xC0DE to enable AHB writes to this register to take effect.
15-5 —	Reserved
4 SYNCEN	Sync Enable Must be 1 for AHB synchronization
3 BUFEN	Buffer Enable Buffer able or non-buffer able for AHB write if AHB buffer is available.
2 ERRDIS	Error Disable Ignore error AHB bus, if 0, AHB Bus will call emergency(EZHB_EMER_VECT).
1 EXF	External Flag Impact on EX/NEX Flags. 1: EX condition is met 0: NEX condition is met in EZH condition check
0 START	Start Bit Ignition

40.4.4 Program Counter (PC)

Offset

Register	Offset
PC	28h

Diagram

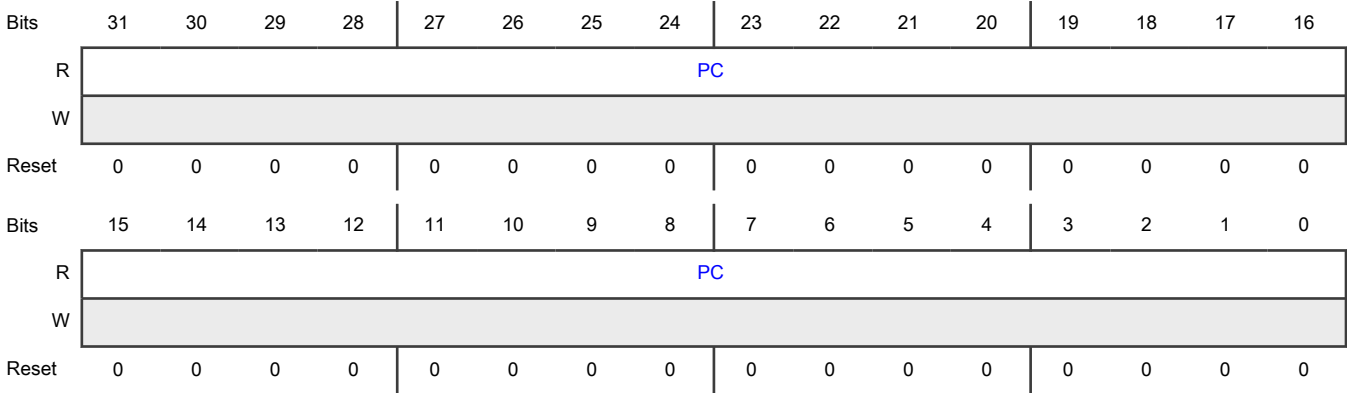

Fields


Field	Function
31-0 PC	Program Counter

40.4.5 Stack Pointer (SP)

Offset

Register	Offset
SP	2Ch

Diagram

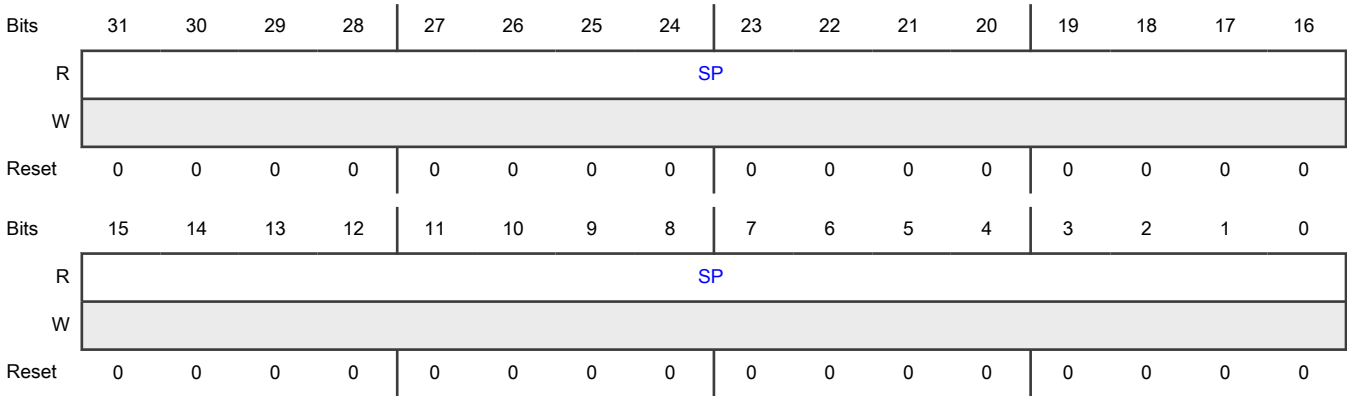

Fields


Field	Function
31-0 SP	Stack Pointer

40.4.6 ARM to EZH Interrupt Control (ARM2EZH)

Offset

Register	Offset
ARM2EZH	40h

Diagram

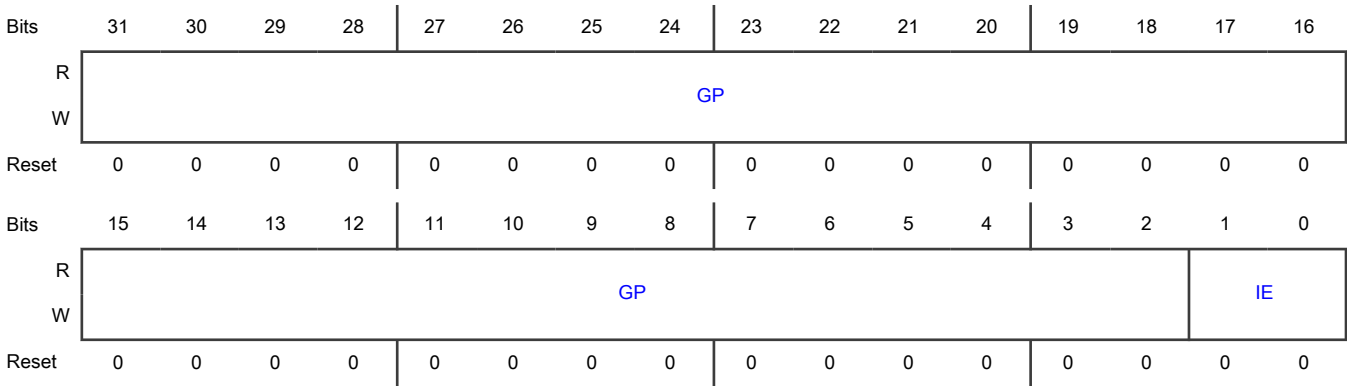

Fields

Field	Function
31-2	General purpose register bits

Table continues on the next page...

Table continued from the previous page...


Field	Function
GP	
1-0 IE	Interrupt Enable 00- Reserved 01- Reserved 10- EZH write to EZH2ARM triggers an interrupt to Arm. 11- Reserved

40.4.7 EZH to ARM Trigger (EZH2ARM)

Offset

Register	Offset
EZH2ARM	44h

Diagram

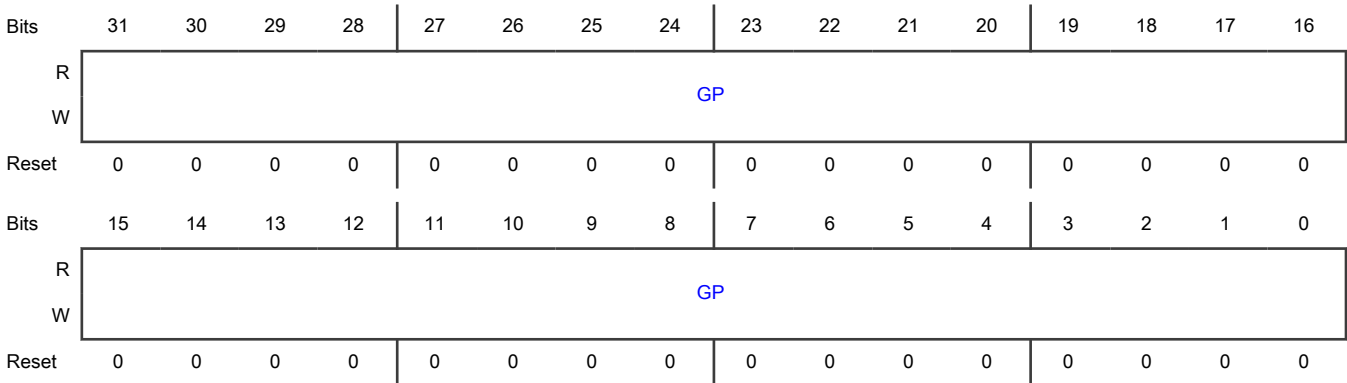

Fields


Field	Function
31-0 GP	General purpose register bits Writing to EZH2ARM triggers the ARM interrupt when ARM2EZH [1:0] == 2h

40.4.8 Pending Trap Control (PENDTRAP)

Offset

Register	Offset
PENDTRAP	48h

Diagram

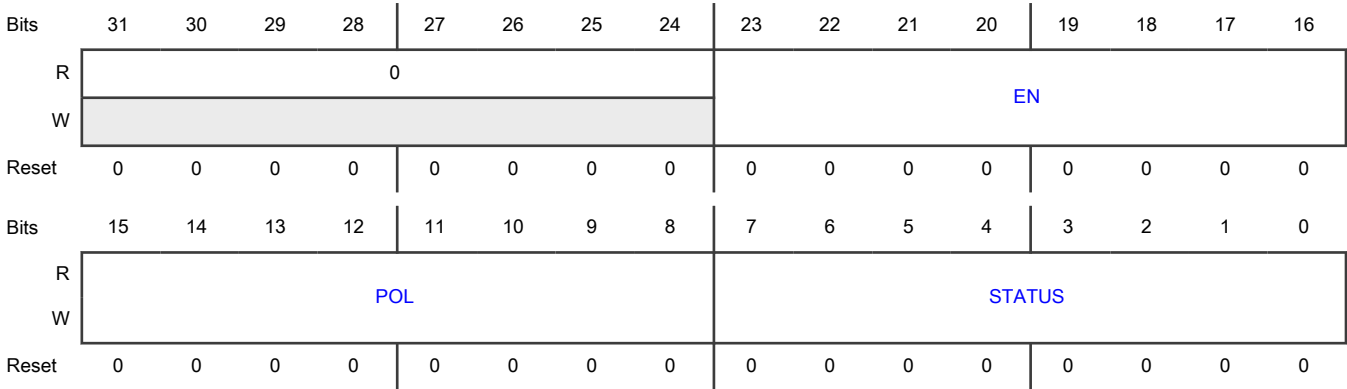

Fields

Field	Function
31-24 —	Reserved
23-16 EN	Enable Pending Trap
15-8 POL	Polarity Pending Trap Status Polarity
7-0 STATUS	Status Flag or Pending Trap Request Arm can have a “short-cut” to control bit-slices’ result using pending trap registers. By default, pending trap is disabled. e.g. PENDTRAP = (1 << 16) (1 << 0); set the bit-slice 0 result to 1

40.5 Memory map

EZH includes two AHB bus master interfaces. You can adjust the priority of AHB bus masters to achieve the desired system performance. See the chip-specific section for details.

Chapter 41

Low Power Serial Peripheral Interface (LPSPI)

41.1 Chip-specific LPSPI information

Table 286. Reference links to related information

Topic	Related module	Reference
Full description	LPSPI	LPSPI
System memory map		Memory map
Clocking		Clock distribution
Power Management		Power Management
Signal multiplexing	Port control	Signal multiplexing

41.1.1 Module instances

This device supports two instances of LPSPI: LPSPI0 and LPSPI1.

41.2 Overview

LPSPI provides an efficient interface (either as a controller or peripheral) to an SPI bus, which is a synchronous serial communication interface used in embedded systems. It is typically used to perform short distance communications between microcontrollers and peripheral devices, on printed circuit boards. Typical applications include interfacing with secure digital cards and LCD displays.

NOTE

The terminology in this chapter has been updated to align with NXP's inclusive language standards, as shown in the table below.

Table 287. Updated terms

Updated term	Deprecated term
Controller	Master
Peripheral	Slave

41.2.1 Block diagram

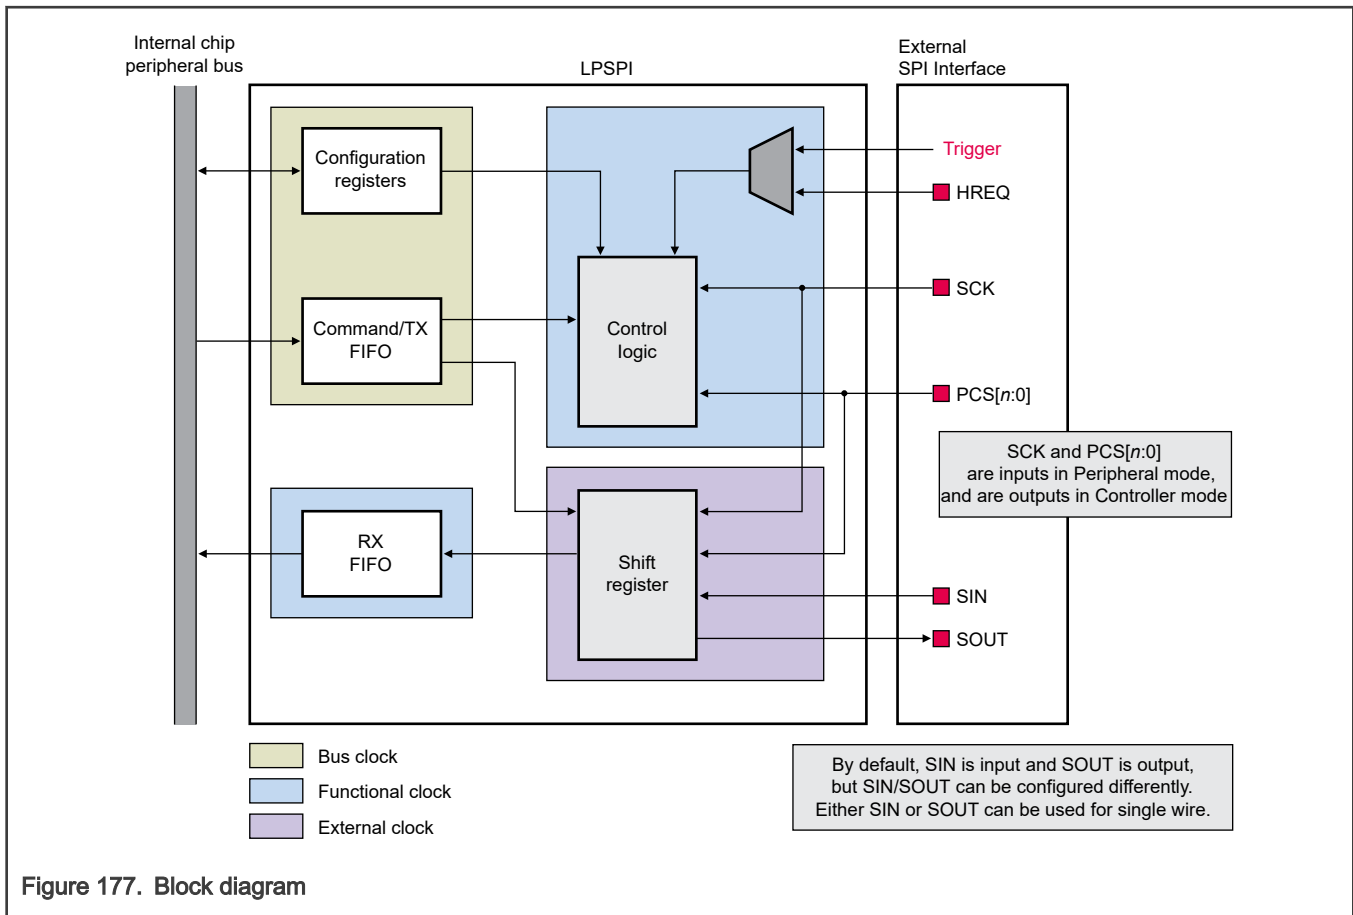


Figure 177. Block diagram

41.2.2 Features

- Minimal CPU overhead, with DMA transmit and receive requests supporting FIFO register accesses
- Operation continues in Deep Sleep mode, if configured to do so and an appropriate clock is available
- Support available for 32-bit word size
- Configurable clock polarity and phase
- Support available for 4 peripheral chip selects in Controller mode
- Support available for Peripheral mode
- 4-word transmit and command FIFO
- 4-word receive FIFO
- Flexible timing parameters in Controller mode, including SCK frequency and duty cycle, and delays between PCS and SCK edges
- Continuous transfer option to keep PCS asserted across multiple frames
- Full-duplex transfers that support 1-bit transmit and receive on each clock edge
- Half-duplex transfers that support:
 - 1-bit transmit or receive on each clock edge
 - 2-bit transmit or receive on each clock edge
 - 4-bit transmit or receive on each clock edge

- Option to use host request to control the start of an SPI bus transfer
- Receive data match logic that discards nonmatching data and interrupt on data match

41.3 Functional description

41.3.1 Controller mode

41.3.1.1 Transmit and command FIFO commands

The transmit and command FIFO is a combined FIFO that includes both transmit data words and command words. You store:

- Transmit data words in the transmit and command FIFO, by writing to [Transmit Data \(TDR\)](#).
- Command words in the transmit and command FIFO, by writing to [Transmit Command \(TCR\)](#).

When a command word is at the top of the transmit and command FIFO, the actions that can occur depend on whether LPSPI is busy or between frames (see [TCR\[CONT\]](#) and [TCR\[CONTC\]](#)). See [Table 288](#) for conditions and possible corresponding actions when a command word is at the top of the transmit and command FIFO.

Table 288. Possible actions when a command word is at the top of the transmit and command FIFO

Condition	Action
LPSPI is enabled and idle.	The command word is pulled from the FIFO, and this command word controls all subsequent transfers.
LPSPI is busy and TCR[CONTC] is 0.	The SPI frame completes at the end of the existing word, ignoring TCR[FRAMESZ] . The command word is then pulled from the FIFO and that command word controls all subsequent transfers (or until the next update to the command word). Note that a command word with TCR[CONTC] = 0 always terminates the existing transfer regardless of the previous TCR[CONT] value.
LPSPI is busy; the existing TCR[CONT] value is 1 and the new TCR[CONTC] value is 1.	The command word must be updated at the frame boundary. The command word is pulled from the FIFO during the last SCK pulse of the existing frame (based on the value of FRAMESZ), and the frame continues using the new command value for the rest of the frame (or until the next update to the command word). When TCR[CONTC] = 1, only the lower 24 bits of the command word are updated. If the command word is updated at a word boundary, then the transfer halts (stops) after that word. TCR[CONTC] is ignored when not at a frame boundary, so the frame ends prematurely.

[TCR\[CONT\]](#) = 1 keeps PCS asserted at end of frame, allowing the transfer to continue.

[TCR\[CONTC\]](#) = 1 specifies that this command word must not terminate the existing frame, and the transfer can continue using the new command word.

[TCR\[CONTC\]](#) = 1 is restricted in the sense that the new command must load on a frame boundary, and the only way for a transfer to continue from a frame boundary is when the previous command has [TCR\[CONT\]](#) = 1.

You can read the current state of the existing command word from [Transmit Command \(TCR\)](#). It requires at least three LPSPI functional clock cycles for [Transmit Command \(TCR\)](#) to update after you write to it (assuming an empty FIFO), and LPSPI must be enabled ([CR\[MEN\]](#) = 1).

Writing to [Transmit Command \(TCR\)](#) does not initiate an SPI bus transfer, unless [TCR\[TXMSK\]](#) = 1. When [TCR\[TXMSK\]](#) = 1, a new command word is not loaded until the end of the existing frame (based on the value of [TCR\[FRAMESZ\]](#)); at the end of the transfer, [TCR\[TXMSK\]](#) transitions to 0.

In Controller mode, the LPSPI command word in [Transmit Command \(TCR\)](#) controls SPI attributes based on the selections in register fields. See [Table 289](#) for TCR fields and associated functionality related to data transfer.

Table 289. Command word in Controller mode

Transmit Command (TCR)		Description	Can this field be modified during a data transfer?
Field	Name		
CPOL	Clock polarity	Specifies the polarity of the SCK pin. Any change of CPOL value causes a transition on the SCK pin.	N
CPHA	Clock phase	Specifies the clock phase of the transfer.	N
PRESCALE	Prescaler value	Specifies a prescaler used to divide the LPSPI functional clock, to generate the timing parameters of the SPI bus transfer. Changing PRESCALE in conjunction with PCS enables LPSPI to connect to different peripheral devices at different frequencies.	N
PCS	Peripheral chip select	Specifies which PCS pin asserts for the transfer; the polarity of PCS is static and specified by CFGR1[PCSPOL] . If CFGR1[PCSCFG] = 1, do not select PCS[3:2].	N
LSBF	LSB first	Specifies whether LSB (bit 0) or MSB (bit 31 for a 32-bit word) is transmitted or received first.	Y
BYSW	Byte swap	Enables byte swap on each 32-bit word when transmitting and receiving data. Byte swapping can be useful when interfacing with devices that organize data as big-endian.	Y
CONT	Continuous transfer	Configures LPSPI for a continuous transfer that keeps PCS asserted between frames (as specified by FRAMESZ). You must write a new command word to cause PCS to negate. Also, this field supports changing the command word at frame size boundaries.	Y
CONTC	Continuing command	Indicates that this is a new command word for the existing continuous transfer. When CONTC = 1, the command word must only be written to the transmit and command FIFO on a frame boundary.	Y
RXMSK	Receive data mask	Masks the receive data and does not store the masked receive data in the receive FIFO or perform receive data matching. This option is useful for half-duplex transfers or to specify which fields are compared during receive data matching.	Y
TXMSK	Transmit data mask	Masks the transmit data; masked transmit data is not pulled from the transmit FIFO, and the output data pin is 3-stated (unless otherwise configured by CFGR1[OUTCFG]). This option is useful for half-duplex transfers.	Y
WIDTH	Transfer width	Specifies the number of bits shifted on each SCK pulse: 1-bit transfers support traditional SPI bus transfers in either half-duplex or full-duplex data formats. 2-bit and 4-bit half-duplex transfers are useful for interfacing with QuadSPI memory devices, and either TXMSK or RXMSK must also be 1.	Y
FRAMESZ	Frame size	Configures the frame size in number of bits equal to (FRAMESZ + 1):	Y

Table continues on the next page...

Table 289. Command word in Controller mode (continued)

Transmit Command (TCR)		Description	Can this field be modified during a data transfer?
Field	Name		
		- The minimum frame size is 8 bits. - If the frame size is larger than 32 bits, then the frame is divided into multiple words of 32 bits; each word is loaded from the transmit FIFO and stored in the receive FIFO separately. - If the size of the frame is not divisible by 32, then the last load of the transmit FIFO and store of the receive FIFO contains the remaining bits. For example, a 72-bit transfer consists of three words: the first and second words are 32 bits, and the third word is 8 bits.	

41.3.1.1.1 SPI bus transfers

LPSPI initiates an SPI bus transfer when all these conditions are true:

- Data is written to the transmit FIFO.
- The HREQ pin is asserted (or the HREQ function is disabled).
- LPSPI is enabled.

To perform the SPI bus transfer, LPSPI uses the attributes configured in [Transmit Command \(TCR\)](#) and the timing parameters defined in [Clock Configuration \(CCR\)](#).

The SPI bus transfer ends after the number of bits indicated by the value of [FRAMESZ](#) have been transferred (provided [CONT](#) = 0), or at the end of a word when a new transmit command word is at the top of the transmit and command FIFO. When LPSPI is disabled, the SPI bus transfers end after the transmit FIFO is empty and LPSPI is idle.

The HREQ input is only checked when PCS is negated.

41.3.1.1.2 Circular FIFO

The transmit and command FIFO supports a circular FIFO feature. This feature enables the LPSPI controller to (periodically) repeat a short data transfer that fits within the transmit and command FIFO, without requiring additional FIFO accesses. When the circular FIFO is enabled ([CFGR0\[CIRFIFO\]](#) = 1), the current state of the FIFO read pointer is saved and the status flags are not updated. After the FIFO is empty and LPSPI is idle, the FIFO read pointer is restored with the saved version, so the contents of the transmit and command FIFO are not permanently pulled from the FIFO when Circular FIFO mode is enabled.

41.3.1.2 Receive FIFO and data match

The receive FIFO stores received data during SPI bus transfers. When [TCR\[RXMSK\]](#) = 1, the received data is discarded instead of being stored in the receive FIFO:

- Received data is written to the receive FIFO when the last bit of the word is sampled.
- If the transmit FIFO is empty during a multiple-word or continuous transfer, then the receive data is written to the receive FIFO before the transfer stalls (assuming [CFGR1\[NOSTALL\]](#) = 0) while waiting for new transmit data or for a command word to be written.

LPSPI provides a receive data match function that can match received data against one of the two words in [DMR0](#) and [DMR1](#), or against a masked data word. You can also configure the received data match function to compare only the first one or two received data words since the start of the frame:

- Received data that is already discarded because of [TCR\[RXMSK\]](#) cannot cause the data match flag to set, and delays the receive data match on the first received data word, until all discarded data is received.

- You can configure the receive data match function to discard all received data until a data match is detected, using [CFGR0\[RDMO\]](#).
- After a receive data match, to allow all subsequent data to be received, write 0 to [CFGR0\[RDMO\]](#), and then write 0 to [SR\[DMF\]](#).

41.3.1.3 Timing parameters

The timing parameters that are used for all SPI bus transfers are relative to the LPSPI functional clock divided by the selection specified in [TCR\[PRESCALE\]](#). Although you can only change [Clock Configuration \(CCR\)](#) when LPSPI is disabled ([CR\[MEN\] = 0](#)), to support interfacing with different peripheral devices at different frequencies, you can change the [TCR\[PRESCALE\]](#) selection between SPI bus transfers by using [Transmit Command \(TCR\)](#).

NOTE

The minimum value shown in [Table 290](#) is the minimum counter value, but the values of [Clock Configuration \(CCR\)](#) must also satisfy the data sheet specs based on the LPSPI functional clock frequency and prescaler value.

Table 290. Timing parameters

Clock Configuration (CCR) Clock Configuration 1 (CCR1)		Description	Minimum value	Maximum value
Field	Name			
SCKSET	SCK setup phase	Configures the SCK setup phase to (SCKSET + 1) cycles. The setup phase is the SCK high period when either CPHA = 0 and CPOL = 1, or CPHA = 1 and CPOL = 0. Otherwise, it is the SCK low period. The SCK period is defined as (SCKSET + SCKHLD + 2) and the duty cycle is the difference between SCKSET and SCKHLD.	0 (1 cycle)	255 (256 cycles)
SCKHLD	SCK hold phase	Configures the SCK hold phase to (SCKHLD + 1) cycles. The hold phase is the SCK low period when either CPHA = 0 and CPOL = 1, or CPHA = 1 and CPOL = 0. Otherwise, it is the SCK high period. The SCK period is defined as (SCKSET + SCKHLD + 2) and the duty cycle is the difference between SCKSET and SCKHLD.	0 (1 cycle)	255 (256 cycles)
PCSPCS	PCS-to-PCS delay	Configures the minimum delay between PCS negation and the next PCS assertion to (PCSPCS + PCSPCS + 2) cycles. When the command word is updated between transfers, there is a minimum of (PCSPCS + 1) cycles between the command word update and any change on PCS pins.	0 (2 cycles)	255 (512 cycles)
SCKSCK	SCK-to-SCK delay	Configures the delay during a continuous transfer between the last SCK edge of a frame and the first SCK edge of the continuing frame to (SCKSCK + 1) cycles. This is useful when the external peripheral requires a large delay between different words of an SPI bus transfer.	0 (1 cycle)	255 (256 cycles)

Table continues on the next page...

Table 290. Timing parameters (continued)

Clock Configuration (CCR) Clock Configuration 1 (CCR1)		Description	Minimum value	Maximum value
Field	Name			
PCSSCK	PCS-to-SCK delay	Configures the minimum delay between PCS assertion and the first SCK edge to (PCSSCK + 1) cycles.	0 (1 cycle)	255 (256 cycles)
SCKPCS	SCK-to-PCS delay	Configures the minimum delay between the last SCK edge and the PCS negation to (SCKPCS + 1) cycles.	0 (1 cycle)	255 (256 cycles)

Figure 178 shows the timing settings controlled by:

- TCR[CPHA]
- TCR[CPOL]
- CCR[SCKPCS]
- CCR[PCSSCK]
- CCR1[SCKSET]
- CCR1[SCKHLD]

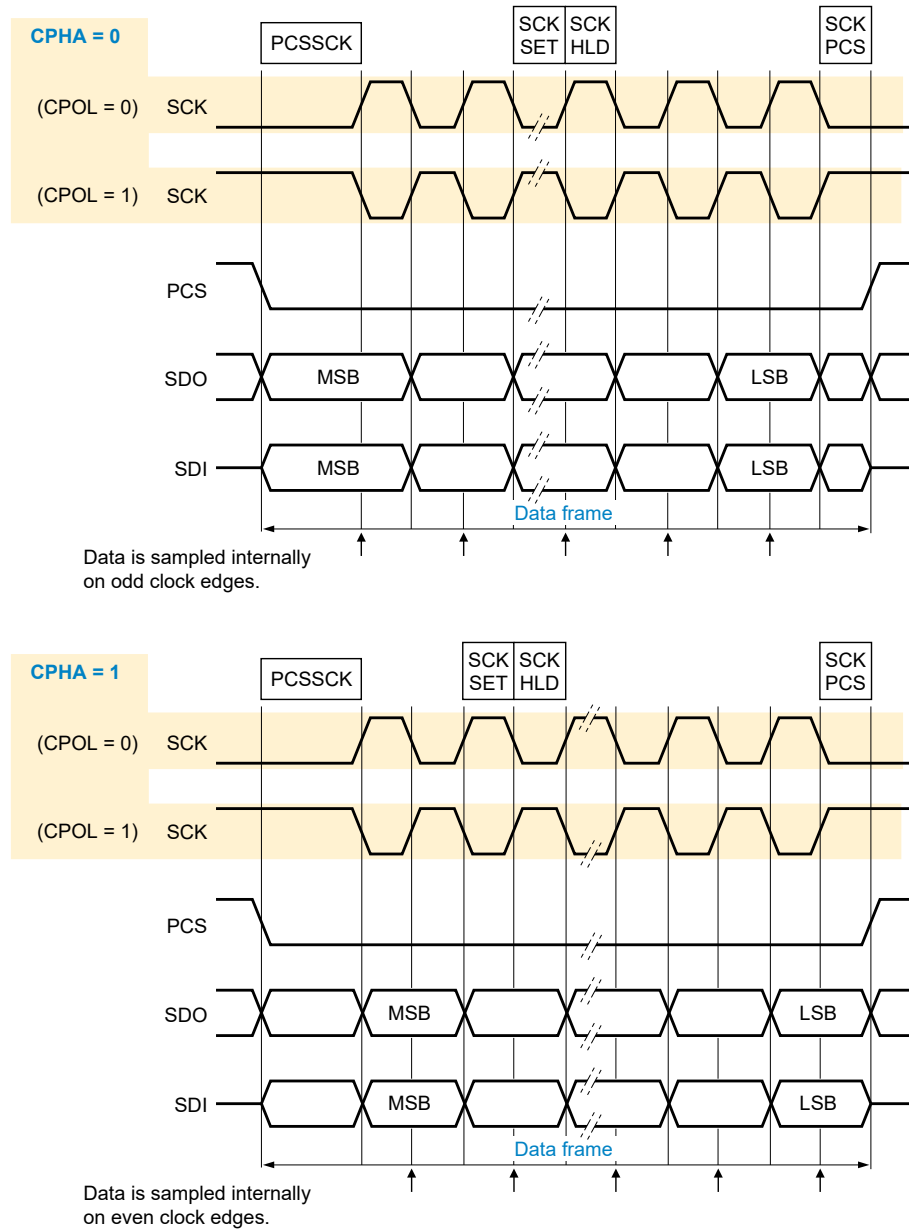


Figure 178. Clock phase (TCR[CPHA]) timing diagram example

To configure for a baud rate of 10 MHz with 50/50 duty cycle and with a functional clock frequency of 100 MHz, use the following settings:

- CCR1[SCKSET] = 0x4 (5 cycles)
- CCR1[SCKHLD] = 0x4 (5 cycles)
- CCR1[PCSPCS] = 0x8 (10 cycles)
- CCR1[SCKSCK] = 0x4 (5 cycles)
- CRR[PCSSCK] = 0x4 (5 cycles)
- CRR[SCKPCS] = 0x4 (5 cycles)
- TCR[PRESCALE] = 0x0 (divide by 1)

41.3.1.4 Pin configuration

Following are the pin configuration settings for half-duplex transfers:

- To swap directions or to support half-duplex transfers on the same pin, you can configure the SIN and SOUT pins using [CFGR1\[PINCFG\]](#).
- To specify whether an output data pin (SOUT, for example) 3-states when PCS is negated, or if the output data pin retains the last value, use [CFGR1\[OUTCFG\]](#).
- When configuring half-duplex transfers, you must configure the output data pins to 3-state when PCS is negated ([CFGR1\[OUTCFG\]](#) = 1).
- When performing half-duplex 2-bit transfers, you can write any value to [CFGR1\[PCSCFG\]](#).
- When performing half-duplex 4-bit transfers, you must write 1h to [CFGR1\[PCSCFG\]](#).

41.3.1.5 Clock loopback

Configure the LPSPI controller to use one of the following clocks to sample the input data:

- The SCK output clock
- A delayed version of the SCK output clock

The delayed version of the SCK is chosen by the SCK pin output delay, plus the SCK pin input delay, and is selected by writing 1 to [CFGR1\[SAMPLE\]](#). Enabling the loopback version of the SCK pin can improve the setup time of the input data from the peripheral.

See the chip data sheet for the specific input setup time in Controller Loopback mode.

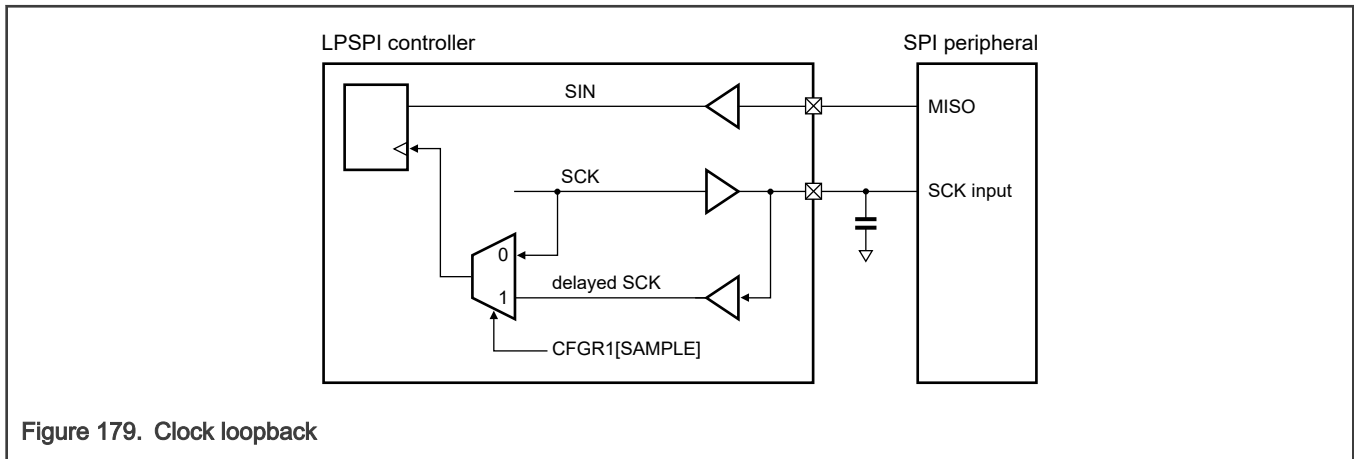


Figure 179. Clock loopback

41.3.2 Peripheral mode

LPSPI Peripheral mode:

- Uses the same shift register and logic that Controller mode uses.
- Does not use [Clock Configuration \(CCR\)](#).
- Requires [Transmit Command \(TCR\)](#) to remain static (unchanged) during SPI bus transfers.

41.3.2.1 Transmit and command FIFO commands

You must initialize [Transmit Command \(TCR\)](#) before enabling LPSPI in Peripheral mode, although this register is not updated until after LPSPI is enabled. After LPSPI is enabled, you must make changes to this register only when LPSPI is idle. In Peripheral mode, the LPSPI command word in this register controls SPI attributes. Before the PCS input asserts, the transmit FIFO must be filled with transmit data, or the transmit error flag sets.

Table 291. Command word in Peripheral mode

Transmit Command (TCR)		Description
Field	Name	
CPOL	Clock polarity	Specifies the polarity of the external SCK input.
CPHA	Clock phase	Specifies the clock phase of transfer.
PRESCALE	Prescaler value	Specifies the LPSPI functional clock prescaler.
PCS	Peripheral chip select	Specifies which PCS is used. The polarity of PCS is static and configured by CFGR1[PCSPOL] . If CFGR1[PCSCFG] is not equal to zero, then do not select the PCS[3:2] pins.
LSBF	LSB first	Specifies whether LSB (bit 0) or MSB (bit 31 for a 32-bit word) is transmitted or received first.
BYSW	Byte swap	Enables byte swap on each 32-bit word when transmitting and receiving data. Byte swapping can be useful when interfacing with devices that organize data as big-endian.
CONT	Continuous transfer	When continuous transfer is selected in Peripheral mode, after the number of bits indicated by FRAMESZ are transferred, LPSPI passes through and transmits the received data until the next PCS negation. Whatever is shifted in on the receive data is shifted out as transmit data considering that there is a 32-bit shift register.
CONTC	Continuing command	When the continuing command is enabled in Peripheral mode, after the number of bits indicated by FRAMESZ are transferred, RXMSK is considered equal to 1 and TXMSK is considered equal to 0 until the next PCS negation. CONTC can be used to change the direction of a transfer after the number of bits indicated by FRAMESZ.
RXMSK	Receive data mask	Masks the receive data; LPSPI does not store masked receive data in the receive FIFO or perform receive data matching. This option is useful for half-duplex transfers or to specify which fields are compared during receive data matching.
TXMSK	Transmit data mask	Masks the transmit data so that the masked transmit data is not pulled from transmit FIFO, and the output data pin is 3-stated (unless otherwise specified in CFGR1[OUTCFG]). This option is useful for half-duplex transfers.
WIDTH	Transfer width	Specifies the number of bits shifted on each SCK pulse: 1-bit transfers support traditional SPI bus transfers in either half-duplex or full-duplex data formats. 2-bit and 4-bit half-duplex transfers are useful for interfacing with QuadSPI memory devices, and at least either TCR[TXMSK] or TCR[RXMSK] must be 1.
FRAMESZ	Frame size	Specifies the frame size in number of bits equal to (FRAMESZ + 1): - The minimum frame size is 8 bits. - If the frame size is larger than 32 bits, then the frame is divided into multiple words of 32 bits; each word is loaded from the transmit FIFO and stored in the receive FIFO separately. - If the size of the frame is not divisible by 32, then the last load of the transmit FIFO and store of the receive FIFO contain the remainder bits. For example, a 72-bit transfer consists of three words: the first and second words are 32 bits, and the third word is 8 bits.

41.3.2.2 Receive FIFO and data match

The receive FIFO stores receive data during SPI bus transfers. When [TCR\[RXMSK\]](#) = 1, the received data is discarded instead of storing the received data in the receive FIFO.

Receive data supports a receive data match function that can match received data against one of the two words in [DMR0](#) and [DMR1](#) or against a masked data word. You can also configure the data match function to compare only the first one or two received data words since the start of the frame.

- Received data that is already discarded because [TCR\[RXMSK\]](#) = 1 cannot cause the data match to set, and delays the match on the first received data word, until all discarded data is received.
- By using [CFGR0\[RDMO\]](#), you can also configure the receiver match function to discard all received data until a data match is detected.
- After a receive data match, to allow all subsequent data to be received, first write 0 to [CFGR0\[RDMO\]](#), then clear [SR\[DMF\]](#).

41.3.2.3 Partial received word

When the PCS pin deasserts and the receive shift register shifts in a partial word, you can configure the receive shift register to either discard the partial word or to store it in the receive FIFO. You must specify this using [CFGR1\[PARTIAL\]](#).

A partial word is defined as less than [TCR\[FRAMESZ\]](#) bits (when [TCR\[FRAMESZ\]](#) is equal or less than 32 bits, or it is the last word in a multi-word frame) or less than 32 bits (when [TCR\[FRAMESZ\]](#) is greater than 32 bits and not the last word in a multi-word frame).

A single-bit frame is not supported. A partial received word of 1 bit is supported, but a partial received frame of 1 bit is not supported.

41.3.2.4 Clocked interface

LPSPI supports interfacing with external controllers that provide only clock and data pins (PCS is not required). This interface requires:

- Writing 1 to [TCR\[CPHA\]](#) (data is changed on the leading edge of SCK and captured on the following edge).
- Configuring the PCS input to be always asserted ([CFGR1\[PCSPOL \$\overline{n}\$ \]](#) = 1). For example, to configure [PCS\[0\]](#) to be always asserted, write 1 to [PCSPOL\[0\]](#), and do not configure [PCS\[0\]](#) in the pin muxing. The chip-level drives PCS to a certain value (ideally 1); you could use [CFGR1\[PCSPOL \$\overline{n}\$ \]](#) to invert that value.
- Writing 1 to [CFGR1\[AUTOPCS\]](#) to enable automatic PCS generation. When [CFGR1\[AUTOPCS\]](#) = 1, a minimum of four LPSPI functional clock cycles (divided by the selection specified in [TCR\[PRESCALE\]](#)) is required between the last SCK edge of one word and the first SCK edge of the next word.

41.3.3 Debug mode

Table 292. Debug mode

Chip mode	LPSPI operation
Debug (the core is in Debug or Halted mode)	Can continue operating in Debug mode, if CR[DBGEN] = 1

41.3.4 Clocking

Table 293. LPSPI clocks

Type of clock	Description
Functional	- Asynchronous to the bus clock. - If the LPSPI functional clock remains enabled in low-power modes, then LPSPI can perform SPI bus transfers and low-power wakeups in both Controller and Peripheral modes. - LPSPI divides the functional clock by a prescaler; the resulting frequency must be at least two times faster than the SPI external clock frequency (SCK).
External	- The LPSPI shift register is clocked directly by the SCK clock. - How the SCK clock is generated or supplied depends on the mode (Controller or Peripheral): - In Controller mode, the SCK clock is generated internally. - In Peripheral mode, the SCK clock is supplied externally.
Bus	The bus clock is only used for bus accesses to the LPSPI control and configuration registers. The bus clock frequency must be high enough to support the data bandwidth requirements of the LPSPI registers, including the FIFOs.

See the chip-specific LPSPI information for more.

41.3.5 Reset

Table 294. LPSPI resets

Type of reset	Description
Chip	Resets the LPSPI logic and registers to their default states.
Software	- Resets the LPSPI logic and registers to their default states, except for the Control register. - The LPSPI software reset is controlled using CR[RST].
FIFO	- Resets the transmit and command FIFO and the receive FIFO. CR[RTF] and CR[RRF] are write-only. - After being reset, FIFO is empty.

41.3.6 Interrupts and DMA requests

The following table lists sources (status flags) that can generate LPSPI interrupts and LPSPI transmit and receive DMA requests.

Table 295. Interrupts and DMA requests

Status (SR)		Description	Can generate		
Status flag	Name		Interrupt?	DMA request?	Low-power wake-up?
TDF	Transmit data flag	Indicates that data can be written to transmit FIFO, as configured by the transmit FIFO watermark, FCR[TXWATER] .	Y	TX	Y

Table continues on the next page...

Table 295. Interrupts and DMA requests (continued)

Status (SR)		Description	Can generate		
Status flag	Name		Interrupt?	DMA request?	Low-power wake-up?
RDF	Receive data flag	Indicates that data can be read from the receive FIFO, as configured by the receive FIFO watermark, FCR[RXWATER] .	Y	RX	Y
WCF	Word complete flag	Indicates that the word is complete and the last bit of the word has been sampled.	Y	N	Y
FCF	Frame complete flag	Indicates that the frame is complete and PCS is deasserted.	Y	RX	Y
TCF	Transfer complete flag	Indicates that transfer is complete, PCS is deasserted, and the transmit and command FIFO is empty.	Y	N	Y
TEF	Transmit error flag	Indicates a transmit and command FIFO underrun. In Controller mode, when CFGR1[NOSTALL] = 0 (transfers stall when transmit FIFO is empty), TEF cannot be set.	Y	N	Y
REF	Receive error flag	Indicates a receive FIFO overflow. In Controller mode, when CFGR1[NOSTALL] = 0 (transfers stall when receive FIFO is full), REF cannot be set.	Y	N	Y
DMF	Data match flag	Indicates that the received data matches the configured data match value.	Y	N	Y
MBF	Module busy flag	Indicates that LPSPI is busy performing an SPI bus transfer.	N	N	N

41.3.6.1 End-of-packet DMA transfer

The end-of-packet functionality is designed for serial interfaces where you may not be aware of the size of the transfer in advance and the data is pushed by an external device. Examples include UART receive, I2C Peripheral mode, and SPI Peripheral mode. The end-of-packet processing is intended to ensure that data is not stranded in either the receive FIFO or the DMA receive buffer. Support for end-of-packet processing must be implemented in both the serial interfaces and the DMA controller.

The condition that signals the end of packet is different for each serial interface but the serial peripheral and DMA process it in the same way. For example, UART end of packet is signaled by an idle line condition, I2C end of packet by a stop and/or repeated start condition, and SPI end of packet by PCS negation.

If you configure the serial peripheral to signal the end-of-packet condition to the DMA and the serial interface detects an end-of-packet condition, it asserts the DMA request for the receive FIFO irrespective of the watermark configuration. For larger watermark configurations, this ensures that the last few words of the transfer are first flushed from the receive FIFO.

The DMA then reads the contents of the receive FIFO, depending on the first word in the FIFO:

- If the receive FIFO is empty, the serial interface signals an end-of-packet condition to the DMA controller.
- If the receive FIFO is not empty, but the first word in the FIFO is the start of a new packet, then data is not pulled from the receive FIFO and the serial interface signals an end-of-packet condition to the DMA controller.
- If the receive FIFO is not empty, and the first word in the FIFO is not the start of a new packet, the DMA transfers the receive data as normal.

Because the DMA may be transferring multiple words on each request, the end-of-packet condition persists until the DMA minor loop is complete and no additional data is pulled from the receive FIFO. The status flag that triggered the end-of-packet condition is cleared when the minor loop completes following end of packet being signaled to the DMA controller.

When the DMA detects the end-of-packet condition, it writes all received words up to the end of the packet into the system memory and saves the destination address for the word after the last valid data. The DMA then terminates the channel as if the major loop is complete, including final offsets and optional interrupts, channel linking and scatter/gather. The final destination address can optionally be saved in the system memory or is available in the destination address register.

After the DMA terminates the major loop, no servicing of the receive FIFO occurs until either software or hardware reconfigures the DMA (for example, channel linking or scatter/gather). This delay must be minimized to avoid receiver FIFO overrun. NXP does not recommend automatic DMA end-of-packet processing when there are only a few words transferred between end-of-packet conditions. That is because the DMA spends more time processing the end of packet than transferring the data. For example, the UART idle line length must be increased as needed to avoid an excessive number of idle conditions.

41.3.6.2 DMA support registers

To support efficient DMA transfers to the transmit and control FIFO, an alias register supports 32-bit write access to the [Transmit Command \(TCR\)](#) and an alias region supports incrementing 32-bit write accesses to the [Transmit Data \(TDR\)](#).

- [Transmit Command Burst \(TCBR\)](#) is a 32-bit alias register for writing to TCR.
- [Transmit Data Burst \(TDBR0 - TDBR127\)](#) is a 512-byte alias region that supports writing to the TDR.

The burst alias locations are contiguous. A DMA transfer can start by writing to the TCBR register to initialize the transfer and then increment into the TDBR region without changing the DMA transfer size. The alias registers can also be used by the DMA to perform burst transfers when accessing the transmit FIFO.

The transmit FIFO prevents writes that overflow the FIFO, but this prevention does not signal an error. Do not perform writes to the TDBR unless there is sufficient room in the transmit FIFO.

[Receive Data Burst \(RDBR0 - RDBR127\)](#) is a 512-byte alias region that supports reading the Receive Data. This can be used by the DMA to perform burst transfers when accessing the receive FIFO.

41.3.7 Peripheral triggers

The connection of the LPSPI peripheral triggers with other peripherals depends on the device that is used.

Table 296. Peripheral triggers

Type of trigger	Description	Additional information
Frame output	The frame output trigger: • Asserts at the end of each frame (when PCS deasserts). • Remains asserted for one cycle of the LPSPI functional clock divided by the configuration defined in TCR[PRESCALE].	LPSPI generates two output triggers that can be connected to other peripherals on the chip.
Word output	The word output trigger: • Asserts at the end of each received word. • Remains asserted for one cycle of the LPSPI functional clock divided by the configuration defined in TCR[PRESCALE].	
Input	To control the start of an LPSPI bus transfer, the LPSPI input trigger can be selected instead of the HREQ input:	

Table continues on the next page...

Table 296. Peripheral triggers (continued)

Type of trigger	Description	Additional information
	- The LPSPI input trigger is synchronized, and must assert for at least two cycles of the LPSPI functional clock divided by the configuration defined in TCR[PRESALE] so that the input trigger can be detected. - When LPSPI is busy, the HREQ input (and therefore the LPSPI input trigger) is ignored. - When LPSPI is busy, both the HREQ and LPSPI input triggers are ignored. They are used to start a new transfer when LPSPI is idle.	

41.4 External signals

Table 297. External signals

Signal	Name	Description	I/O
SCK	Serial clock	- Input in Peripheral mode - Output in Controller mode	I/O
PCS[0]	Peripheral chip select	- Input in Peripheral mode - Output in Controller mode	I/O
PCS[1]/HREQ	Peripheral chip select or host request	Host request pin is selected when CFGR0[HREN] = 1 and CFGR0[HRSEL] = 0: - Input in either Peripheral mode or when used as controller host request - Output in either Controller mode or when used as peripheral host request	I/O
PCS[2]/DATA[2]	Peripheral chip select or data pin 2 during parallel data transfers	When CFGR1[PCSCFG] = 0: - Input in Peripheral mode - Output in Controller mode When CFGR1[PCSCFG] = 1: - Input in half-duplex parallel data receive transfers - Output in half-duplex parallel data transmit transfers	I/O
PCS[3]/DATA[3]	Peripheral chip select or data pin 3 during parallel data transfers	When CFGR1[PCSCFG] = 0: - Input in Peripheral mode - Output in Controller mode When CFGR1[PCSCFG] = 1: - Input in half-duplex parallel data receive transfers	I/O

Table continues on the next page...

Table 297. External signals (continued)

Signal	Name	Description	I/O
		Output in half-duplex parallel data transmit transfers	
SOUT/DATA[0]	Serial data output	Can be configured as serial data input signal (used as data pin 0 in half-duplex parallel data transfers)	I/O
SIN/DATA[1]	Serial data input	Can be configured as serial data output signal (used as data pin 1 in half-duplex parallel data transfers)	I/O

41.5 Initialization

This module does not require initialization.

41.6 Memory map and registers

NOTE

- Writing to a read-only register or reading a write-only register can cause bus errors.
- LPSPI does not check values programmed in registers for validity, so you must take care to write valid values only.

41.6.1 LPSPI register descriptions

41.6.1.1 LPSPI memory map

LPSPI0 base address: 4009_C000h

LPSPI1 base address: 4009_D000h

Offset	Register	Width (In bits)	Access	Reset value
0h	Version ID (VERID)	32	R	0200_0004h
4h	Parameter (PARAM)	32	R	0004_0202h
10h	Control (CR)	32	RW	0000_0000h
14h	Status (SR)	32	RW	0000_0001h
18h	Interrupt Enable (IER)	32	RW	0000_0000h
1Ch	DMA Enable (DER)	32	RW	0000_0000h
20h	Configuration 0 (CFGR0)	32	RW	0000_0000h
24h	Configuration 1 (CFGR1)	32	RW	0000_0000h
30h	Data Match 0 (DMR0)	32	RW	0000_0000h
34h	Data Match 1 (DMR1)	32	RW	0000_0000h
40h	Clock Configuration (CCR)	32	RW	0000_0000h
44h	Clock Configuration 1 (CCR1)	32	RW	0000_0000h

Table continues on the next page...

Table continued from the previous page...

Offset	Register	Width (In bits)	Access	Reset value
58h	FIFO Control (FCR)	32	RW	0000_0000h
5Ch	FIFO Status (FSR)	32	R	0000_0000h
60h	Transmit Command (TCR)	32	RW	0000_001Fh
64h	Transmit Data (TDR)	32	W	0000_0000h
70h	Receive Status (RSR)	32	R	0000_0002h
74h	Receive Data (RDR)	32	R	0000_0000h
78h	Receive Data Read Only (RDROR)	32	R	0000_0000h
3FCh	Transmit Command Burst (TCBR)	32	W	0000_0000h
400h - 5FCh	Transmit Data Burst (TDBR0 - TDBR127)	32	W	0000_0000h
600h - 7FCh	Receive Data Burst (RDBR0 - RDBR127)	32	R	0000_0000h

41.6.1.2 Version ID (VERID)


Offset

Register	Offset
VERID	0h

Function

Contains version numbers for the module design and feature set.

Diagram

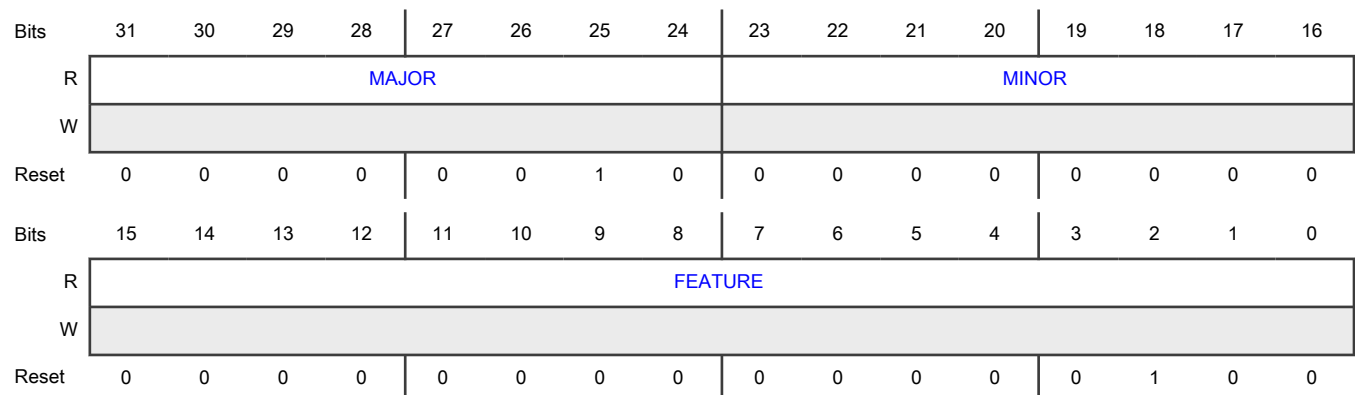

Fields

Field	Function
31-24 MAJOR	Major Version Number Indicates the major version number of the module specification.
23-16 MINOR	Minor Version Number Indicates the minor version number of the module specification.
15-0 FEATURE	Module Identification Number Indicates the feature set number 0000_0000_0000_0100b - Standard feature set supporting a 32-bit shift register. All other values are reserved.

41.6.1.3 Parameter (PARAM)

Offset


Register	Offset
PARAM	4h

Function

Contains:

- Number of PCS pins.
- Receive FIFO size.
- Transmit FIFO size.

Diagram

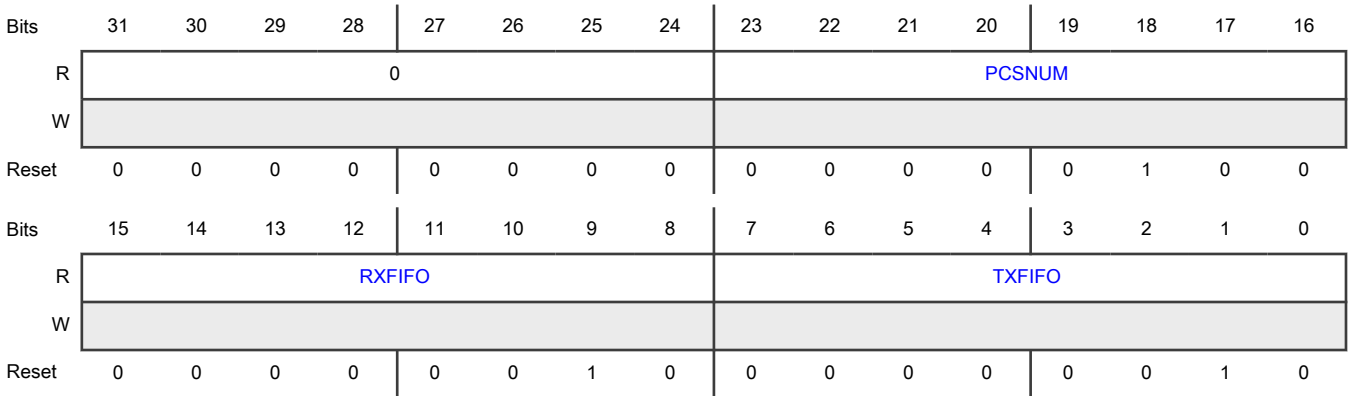

Fields


Field	Function
31-24 —	Reserved
23-16 PCSNUM	PCS Number Indicates the number of PCS pins supported.
15-8 RXFIFO	Receive FIFO Size Indicates the maximum number of words in the receive FIFO. The maximum number of words is 2^{RXFIFO} .
7-0 TXFIFO	Transmit FIFO Size Indicates the maximum number of words in the transmit FIFO. The maximum number of words is 2^{TXFIFO} .

41.6.1.4 Control (CR)**Offset**

Register	Offset
CR	10h

Function

Contains fields that control the module operation.

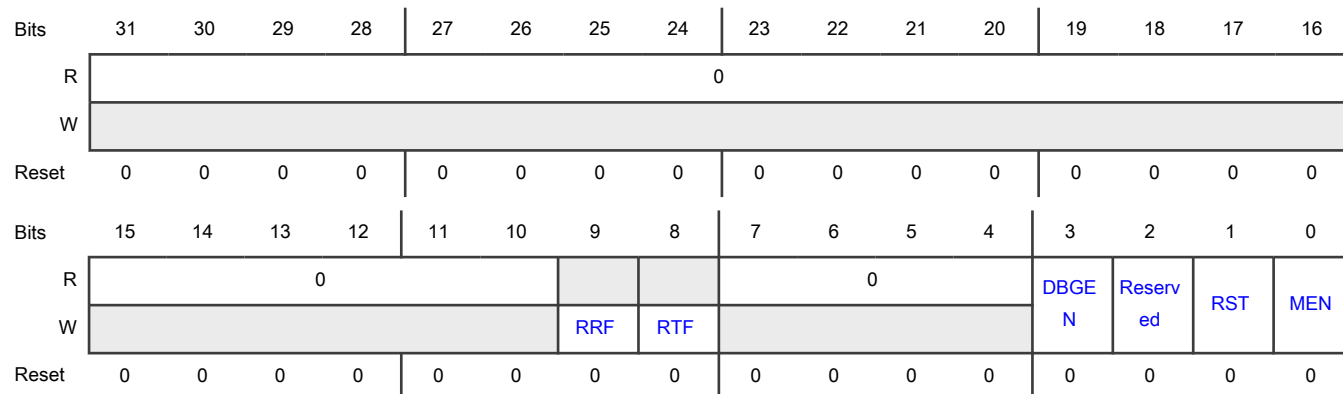Diagram**Fields**

Field	Function
31-10	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
—	
9 RRF	Reset Receive FIFO Deletes all entries in the receive FIFO. This field always reads 0. 0b - No effect 1b - Reset
8 RTF	Reset Transmit FIFO Deletes all entries in the transmit FIFO. This field always reads 0. 0b - No effect 1b - Reset
7-4 —	Reserved
3 DBGEN	Debug Enable Enables LPSPI when the CPU is in Debug mode. If this field is 0, LPSPI is disabled when the CPU is halted; the PCS pin is deasserted after the transmit FIFO is empty regardless of the state of Transmit Command (TCR) . You must update this field only when LPSPI is disabled (MEN = 0). 0b - Disable 1b - Enable
2 —	Reserved
1 RST	Software Reset Resets all internal logic and registers, except Control (CR) . The reset takes effect immediately and remains asserted until you write 0 to it. There is no minimum delay required before clearing the software reset by writing 0. 0b - Not reset 1b - Reset
0 MEN	Module Enable Enables the module. After writing 0, MEN remains set until LPSPI has completed the current transfer and is idle. 0b - Disable 1b - Enable

41.6.1.5 Status (SR)

Offset

Register	Offset
SR	14h

Function

Contains data flow status.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	
R	0								MBF	0							
W																	
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	
R	0		DMF	REF	TEF	TCF	FCF	WCF	0						RDF	TDF	
W			W1C	W1C	W1C	W1C	W1C	W1C									
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	

Fields

Field	Function
31-25 —	Reserved
24 MBF	Module Busy Flag Indicates, in Controller mode, whether there is data to transmit and LPSPI is able to transmit (for example, the HREQ pin is asserted). The HREQ pin deasserts after the PCS pin deasserts and the LPSPI controller has waited for half the time specified in CCR[DBT] with no new data to transmit. Peripheral mode sets this flag when LPSPI is enabled and PCS is asserted. 0b - LPSPI is idle 1b - LPSPI is busy
23-14 —	Reserved
13 DMF	Data Match Flag Indicates whether the received data matches DMR0[MATCH0] and/or DMR1[MATCH1] (as configured by CFGR1[MATCFG]).

Table continues on the next page...

Table continued from the previous page...

Field	Function
	NOTE This field behaves differently for register reads and writes. When reading 0b - No match 1b - Match When writing 0b - No effect 1b - Clear the flag
12 REF	Receive Error Flag Indicates a receive FIFO overflow error. When this flag is set: 1. End the transfer. 2. Empty the receive FIFO. 3. Clear this flag. 4. Restart the transfer from the beginning. NOTE This field behaves differently for register reads and writes. When reading 0b - No overflow 1b - Overflow When writing 0b - No effect 1b - Clear the flag
11 TEF	Transmit Error Flag Indicates a transmit FIFO underrun error. When this flag is set: 1. End the transfer. 2. Clear this flag. 3. Restart the transfer from the beginning. NOTE This field behaves differently for register reads and writes. When reading 0b - No underrun 1b - Underrun

Table continues on the next page...

Table continued from the previous page...

Field	Function
	When writing 0b - No effect 1b - Clear the flag
10 TCF	Transfer Complete Flag Indicates, in Controller mode, whether all transfers are complete and LPSPI has returned to the Idle state and the transmit FIFO is empty. NOTE This field behaves differently for register reads and writes. When reading 0b - Not complete 1b - Complete When writing 0b - No effect 1b - Clear the flag
9 FCF	Frame Complete Flag Indicates whether a frame transfer is complete after PCS deasserts. NOTE This field behaves differently for register reads and writes. When reading 0b - Not complete 1b - Complete When writing 0b - No effect 1b - Clear the flag
8 WCF	Word Complete Flag Indicates whether the last bit of a received word is sampled. NOTE This field behaves differently for register reads and writes. When reading 0b - Not complete 1b - Complete When writing

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - No effect 1b - Clear the flag
7-2 —	Reserved
1 RDF	Receive Data Flag Indicates whether the number of words in the receive FIFO is greater than the value in FCR[RXWATER] . 0b - Receive data not ready 1b - Receive data ready
0 TDF	Transmit Data Flag Indicates whether the number of words in the transmit FIFO is equal to or less than the value in FCR[TXWATER] . 0b - Transmit data not requested 1b - Transmit data requested

41.6.1.6 Interrupt Enable (IER)

Offset

Register	Offset
IER	18h

Function

Enables interrupts based on data flow and errors.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0								0							
W			DMIE	REIE	TEIE	TCIE	FCIE	WCIE							RDIE	TDIE
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-14 —	Reserved
13 DMIE	Data Match Interrupt Enable Enables the data match interrupt. 0b - Disable 1b - Enable
12 REIE	Receive Error Interrupt Enable Enables the receive error interrupt. 0b - Disable 1b - Enable
11 TEIE	Transmit Error Interrupt Enable Enables the transmit error interrupt. 0b - Disable 1b - Enable
10 TCIE	Transfer Complete Interrupt Enable Enables the transfer complete interrupt. 0b - Disable 1b - Enable
9 FCIE	Frame Complete Interrupt Enable Enables the frame complete interrupt. 0b - Disable 1b - Enable
8 WCIE	Word Complete Interrupt Enable Enables the word complete interrupt. 0b - Disable 1b - Enable
7-2 —	Reserved
1 RDIE	Receive Data Interrupt Enable Enables the receive data interrupt.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - Disable 1b - Enable
0 TDIE	Transmit Data Interrupt Enable Enables the transmit data interrupt. 0b - Disable 1b - Enable

41.6.1.7 DMA Enable (DER)


Offset

Register	Offset
DER	1Ch

Function

Enables the DMA data flow.

Diagram

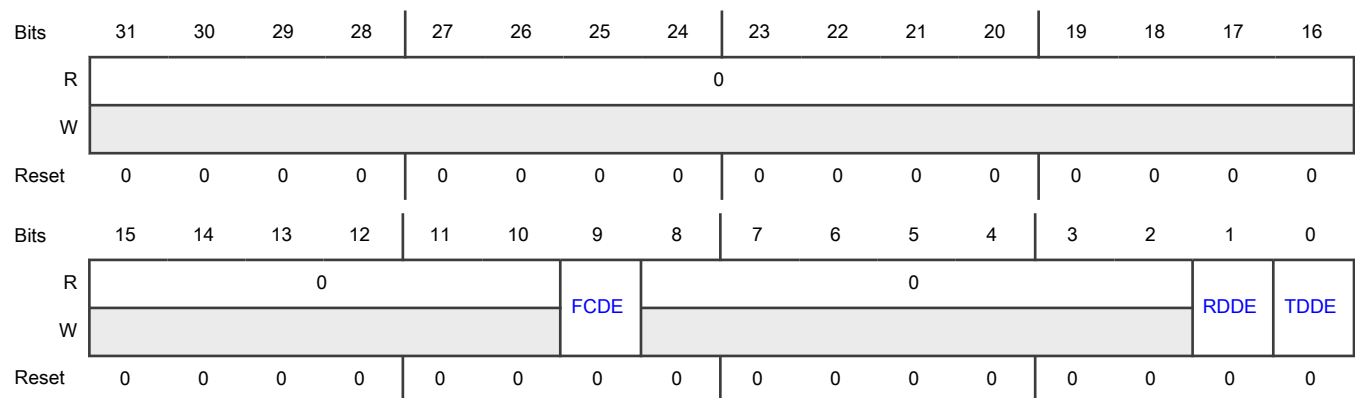

Fields

Field	Function
31-10 —	Reserved
9 FCDE	Frame Complete DMA Enable

Table continues on the next page...

Table continued from the previous page...

Field	Function
	Enables DMA end-of-packet processing. After the last word of a frame is read from the receive data FIFO, reading the receive data FIFO returns an end-of-packet signal with the receive data forced to FFFF_FFFFh. This continues until the DMA minor loop completes, and then SR[FCF] deasserts if the receive FIFO is empty or if LPSPI is busy (SR[MBF] = 1). 0b - Disable 1b - Enable
8-2 —	Reserved
1 RDDE	Receive Data DMA Enable Enables the receive data DMA. 0b - Disable 1b - Enable
0 TDDE	Transmit Data DMA Enable Enables the transmit data DMA. 0b - Disable 1b - Enable

41.6.1.8 Configuration 0 (CFGR0)


Offset

Register	Offset
CFGR0	20h

Function

Includes fields to configure LPSPI.

Diagram

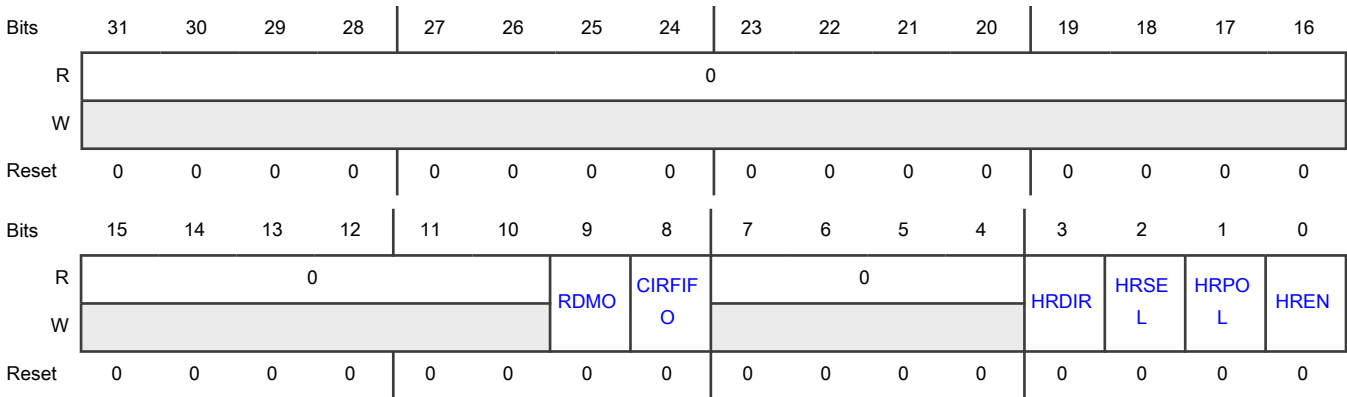

Fields

Field	Function
31-10 —	Reserved
9 RDMO	Receive Data Match Only Enables receive data match. When enabled, all received data that does not cause SR[DMF] to assert is discarded: • Write 1 to this field when LPSPI is idle and SR[DMF] = 0. • After SR[DMF] = 1, this field is ignored. • To ensure that no receive data is lost when disabling RDMO, write 0 to this field before clearing SR[DMF]. See CFGR1[MATCFG] for the received data matching options. When disabled, all received data is stored in the receive FIFO. 0b - Disable 1b - Enable
8 CIRFIFO	Circular FIFO Enable Enables circular FIFO. When enabled, the transmit FIFO read pointer is saved to a temporary register. The transmit FIFO is emptied as in normal operation, but when LPSPI is idle and the transmit FIFO is empty, the read pointer value is restored from the temporary register. This restoring of the read pointer causes the contents of the transmit FIFO to be cycled through repeatedly. NOTE The read pointer is restored for as long as this field is 1. Writing additional words to the FIFO when this field is 1 adds them to the end of the FIFO, up to the size of the transmit FIFO. 0b - Disable 1b - Enable
7-4 —	Reserved
3 HRDIR	Host Request Direction Specifies the direction of the HREQ pin. You must configure the HREQ pin only as an output when LPSPI is in Peripheral mode. The HREQ pin direction must be an input for Controller mode. 0b - Input 1b - Output
2 HRSEL	Host Request Select Specifies the source of the host request input. When the host request function is enabled with the HREQ pin, the PCS[1] function is disabled.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - HREQ pin 1b - Input trigger
1 HRPOL	Host Request Polarity Specifies the polarity of the HREQ pin or input trigger. 0b - Active high 1b - Active low
0 HREN	Host Request Enable Enables LPSPI, in Controller mode, to start a new SPI bus transfer only if the host request input is asserted. When LPSPI is busy, the host request input is ignored. In Peripheral mode, causes the HREQ output pin to assert when data is available to be transmitted. 0b - Disable 1b - Enable

41.6.1.9 Configuration 1 (CFGR1)

Offset

Register	Offset
CFGR1	24h

Function

Includes fields to configure LPSPI. You must write to this register only when LPSPI is disabled.

In addition to pin and output configurations, this register contains match configuration details; the following table shows match conditions specified in [MATCHCFG](#).


Table 298. Match conditions for CFGR1[MATCHCFG]

Condition	Description
Match first data word with compare word	Match if first data word equals MATCH0 logically ORed with MATCH1 <code>first_data_word == (MATCH0 MATCH1)</code>
Match any data word with compare word	Match if any data word equals MATCH0 logically ORed with MATCH1 <code>any_data_word == (MATCH0 MATCH1)</code>
Sequential match, first data word	Match if first data word equals MATCH0 , and second data word equals MATCH1 <code>(first_data_word == MATCH0) && (second_data_word == MATCH1)</code>
Sequential match, any data word	Match if any data word equals MATCH0 , and the next data word equals MATCH1

Table continues on the next page...

Table 298. Match conditions for CFGR1[MATCFG] (continued)

Condition	Description
	(any_data_word == MATCH0) && (next_data_word == MATCH1)
Match first data word (masked) with compare word (masked)	Match if first data word logically ANDed with MATCH1 equals MATCH0 logically ANDed with MATCH1 (first_data_word && MATCH1) == (MATCH0 && MATCH1)
Match any data word (masked) with compare word (masked)	Match if any data word logically ANDed with MATCH1 equals MATCH0 logically ANDed with MATCH1 (any_data_word && MATCH1) == (MATCH0 && MATCH1)

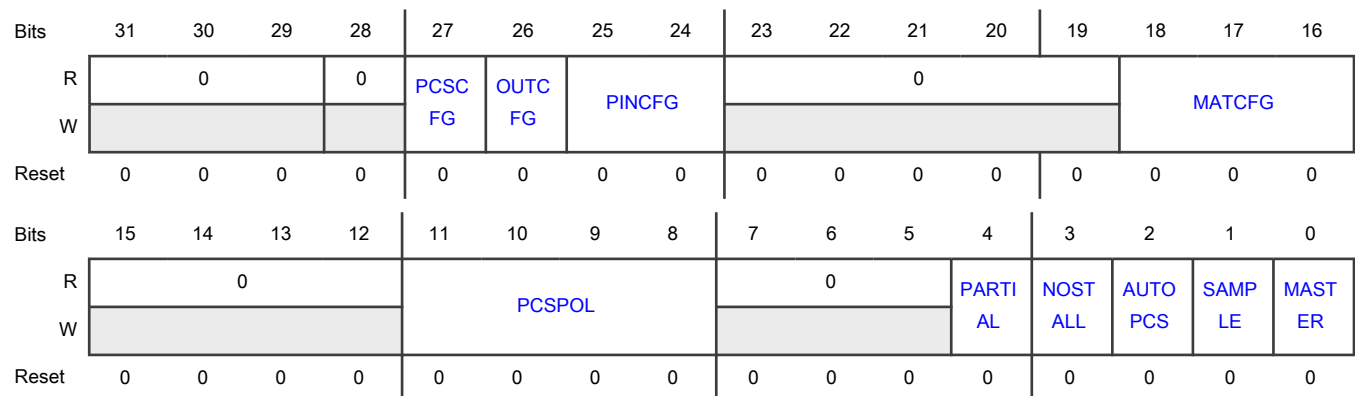Diagram**Fields**

Field	Function
31-29 —	Reserved
28 —	Reserved
27 PCSCFG	Peripheral Chip Select Configuration Specifies PCS pin configuration. When performing parallel transfers, you must configure this field to enable the desired transfer. 0b - PCS[3:2] configured for chip select function 1b - PCS[3:2] configured for half-duplex 4-bit transfers (PCS[3:2] = DATA[3:2])
26 OUTCFG	Output Configuration Specifies whether the output data is 3-stated between accesses (when PCS is deasserted). When performing half-duplex transfers, this field must be 1.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - Retain last value 1b - 3-stated
25-24 PINCFG	Pin Configuration Specifies the pins used for input and output data during serial transfers. NOTE When performing parallel transfers, this field must be 00b or 10b. 00b - SIN is used for input data; SOUT is used for output data 01b - SIN is used for both input and output data; only half-duplex serial transfers are supported 10b - SOUT is used for both input and output data; only half-duplex serial transfers are supported 11b - SOUT is used for input data; SIN is used for output data
23-19 —	Reserved
18-16 MATCFG	Match Configuration Specifies the condition that causes SR[DMF] to assert. See the match conditions listed in Table 1 for more information. NOTE When writing to this field, either the old value or new value must be in the disabled state (0). You cannot transition from a nonzero value to another nonzero value. 000b - Match is disabled 001b - Reserved 010b - Match first data word with compare word 011b - Match any data word with compare word 100b - Sequential match, first data word 101b - Sequential match, any data word 110b - Match first data word (masked) with compare word (masked) 111b - Match any data word (masked) with compare word (masked)
15-12 —	Reserved
11-8 PCSPOL	Peripheral Chip Select Polarity Specifies the polarity of each PCS pin. Bit <i>n</i> in this field (the least-significant bit is bit 0) corresponds to PCS[<i>n</i>]. 0000b - Active low

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0001b - Active high
7-5 —	Reserved
4 PARTIAL	Partial Enable Specifies whether LPSPI, when in Peripheral mode, stores a partial received word in the receive FIFO, or discards it, when PCS deasserts. See Partial received word for more information. 0b - Discard 1b - Store
3 NOSTALL	No Stall Disables a normal operating feature that causes LPSPI, when in Controller mode, to stall transfers when the transmit FIFO is empty or when the receive FIFO is full. This feature prevents transmit FIFO underruns and receive FIFO overruns. Writing 1 to this field disables this functionality. 0b - Disable 1b - Enable
2 AUTOPCS	Automatic PCS Enables automatic PCS generation. For correct operation in Peripheral mode, LPSPI requires the PCS signal to deassert between frames. Writing 1 to this field generates an internal PCS signal at the end of each transfer word when TCR[CPHA] = 1. When this field is 1, SCK must remain idle for at least four LPSPI functional clock cycles, divided by the prescaler (see TCR[PRESCALE]) selected between each word to ensure correct operation. This field is ignored in Controller mode. 0b - Disable 1b - Enable
1 SAMPLE	Sample Point Specifies the SCK clock edge on which LPSPI, when in Controller mode, samples input data. Writing 1 to this field causes LPSPI to sample input data on a delayed loopback SCK clock edge, which improves the setup time when sampling data (see Clock loopback). In this configuration, the input data setup time in Controller mode is equal to the input data setup time in Peripheral mode. In Peripheral mode, this field is ignored. NOTE When SAMPLE = 1, both the input and output buffers must be enabled for the SCK pin. Buffers are configured at the chip level. 0b - SCK edge 1b - Delayed SCK edge

Table continues on the next page...

Table continued from the previous page...

Field	Function
0 MASTER	Controller Mode Specifies the LPSPI operating mode, Controller or Peripheral. This field directly controls the direction of the SCK and PCS pins. 0b - Peripheral mode 1b - Controller mode

41.6.1.10 Data Match 0 (DMR0)

Offset

Register	Offset
DMR0	30h


Function

Specifies the match data to be used when data matching is enabled. See [CFGR1\[MATCFG\]](#) for the received data matching options.

NOTE

Do not change the value in this register when [CFGR1\[MATCFG\]](#) > 0.

Diagram

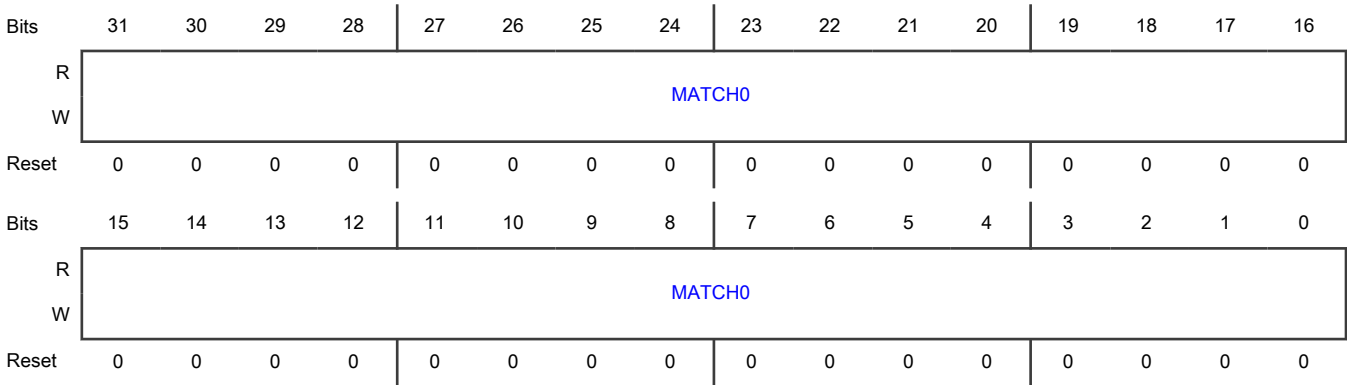

Fields

Field	Function
31-0 MATCH0	Match 0 Value Specifies the MATCH0 value to be compared against received data.

41.6.1.11 Data Match 1 (DMR1)

Offset

Register	Offset
DMR1	34h


Function

Specifies the match data to be used when data matching is enabled. See [CFGR1\[MATCFG\]](#) for the received data matching options.

NOTE

Do not change the value in this register while [CFGR1\[MATCFG\]](#) > 0.

Diagram

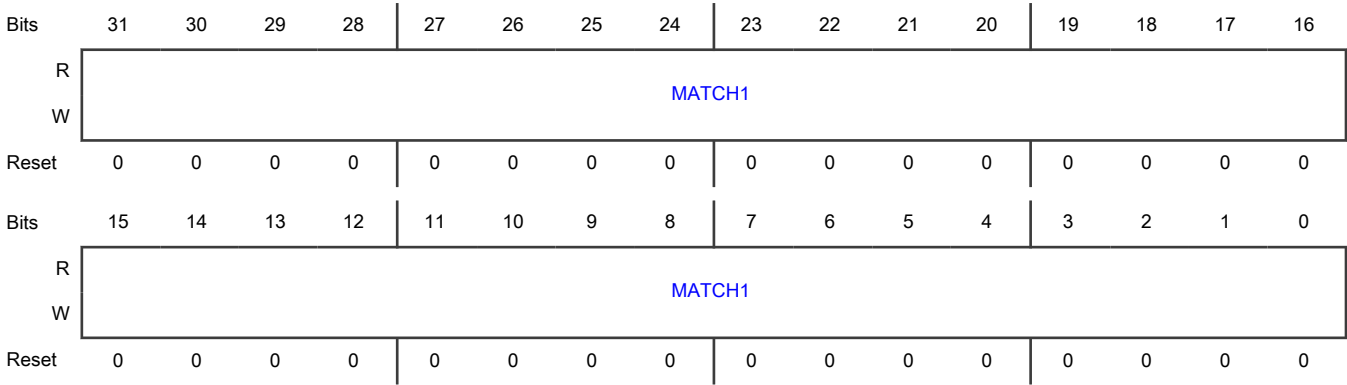

Fields

Field	Function
31-0	Match 1 Value
MATCH1	Specifies the MATCH1 value to be compared against received data.

41.6.1.12 Clock Configuration (CCR)

Offset

Register	Offset
CCR	40h

Function

Contains clock configuration fields that are used only in Controller mode; you can only change them when LPSPI is disabled ([CR\[MEN\]](#) = 0).

Warning

Writing a 32-bit value to this register overwrites [Clock Configuration 1 \(CCR1\)](#); [DBT](#) and [SCKDIV](#) always read 0.

To avoid overwriting CCR1, do one of the following:

- Write to all four fields in [Clock Configuration \(CCR\)](#) simultaneously and only once in a 32-bit data.
- Modify the values of [CCR\[SCKPCS\]](#) and/or [CCR\[PCSSCK\]](#); write only these two upper bytes in a 16-bit data or one of them in an 8-bit data.
- Modify [CCR1\[PCSPCS\]](#) and [CCR1\[SCKSCK\]](#) only or [CCR1\[SCKSET\]](#) and [CCR1\[SCKHLD\]](#) only, write respectively to [CCR\[DBT\]](#) or [CCR\[SCKDIV\]](#) in 8-bit data.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	SCKPCS								PCSSCK							
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0								0							
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	DBT								SCKDIV							

Fields

Field	Function
31-24 SCKPCS	SCK-to-PCS Delay Configures SCK-to-PCS delay. In Controller mode, this field helps you configure the delay from the last SCK edge to PCS negation: • The delay is equal to (SCKPCS + 1) cycles of the LPSPI functional clock divided by the selected prescaler (see TCR[PRESCALE]). • The minimum delay is one cycle. See Figure 178 for more information.
23-16 PCSSCK	PCS-to-SCK Delay Configures PCS-to-SCK delay. In Controller mode, this field helps you configure the delay from PCS assertion to the first SCK edge: • The delay is equal to (PCSSCK + 1) cycles of the LPSPI functional clock divided by the selected prescaler (see TCR[PRESCALE]). • The minimum delay is one cycle. See Figure 178 for more information.
15-8 DBT	Delay Between Transfers Configures the delay between transfers. Writing to this field updates the contents of CCR1[PCSPCS] and CCR1[SCKSCK].

Table continues on the next page...

Table continued from the previous page...

Field	Function
7-0 SCKDIV	SCK Divider Updates the contents of CCR1[SCKSET] and CCR1[SCKHLD] . Baud rate = function clock ÷ (2 ^{PRESCALE} × (SCKSET + SCKHLD + 2))

41.6.1.13 Clock Configuration 1 (CCR1)


Offset

Register	Offset
CCR1	44h

Function

Contains clock configuration fields, which are used only in Controller mode. You can change them only when LPSPI is disabled ([CR\[MEN\]](#) = 0).

Diagram

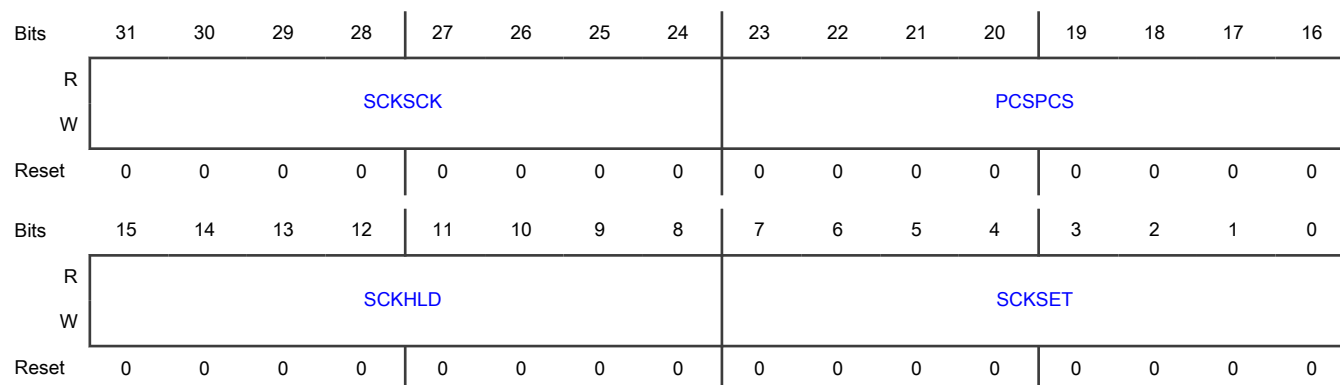

Fields

Field	Function
31-24 SCKSCK	SCK Inter-Frame Delay Configures SCK inter-frame delay in Controller mode: - This field helps you configure the delay from the last SCK pulse of a frame and the first SCK pulse of the following frame, in a continuous transfer. - The delay is equal to (SCKSCK + 1) cycles of the LPSPI functional clock divided by the selected prescaler (see TCR[PRESCALE]). - The minimum delay is one cycle.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	NOTE For backward compatibility, writing to CCR[DBT] updates this field with the value written.
23-16 PCSPCS	PCS to PCS Delay Configures PCS to PCS delay in Controller mode: • This field helps you configure the delay from the PCS negation to the next PCS assertion. • The delay is equal to (PCSPCS + PCSPCS + 2) cycles of the LPSPI functional clock divided by the selected prescaler (see TCR[PRESCALE]). • The minimum delay is two cycles. • Half of the delay (PCSPCS + 1) occurs before PCS assertion and the other half of the delay (PCSPCS + 1) occurs after PCS negation. If the command word is updated between two transfers, then the command word is updated halfway between the PCS negation of the last transfer and PCS assertion of the next transfer. • The command word specifies which PCS signal is used, the polarity and phase of the SCK signal, and the selected prescaler. NOTE For backward compatibility, writing to CCR[DBT] updates this field with (DBT+2) rounded up.
15-8 SCKHLD	SCK Hold Configures the hold phase of the SCK pin in Controller mode: • The hold phase is the delay between the SCK edge that samples the receive data and the SCK edge that drives the transmit data. • It is the SCK low period when CPHA = 0 and CPOL = 1, or CPHA = 1 and CPOL = 0. It is the SCK high period when CPHA = 0, CPOL = 0 and CPHA = 1, CPOL = 1. • The SCK hold phase delay is equal to (SCKHLD + 1) cycles of the LPSPI functional clock divided by the selected prescaler (see TCR[PRESCALE]). • The minimum delay is one cycle. • The SCK period is equal to (SCKSET + SCKHLD + 2) cycles of the LPSPI functional clock divided by the selected prescaler (see TCR[PRESCALE]). • The SCK duty cycle is based on the difference between SCKSET and SCKHLD. You must configure both these fields to the same value for a 50/50 duty cycle. See Figure 178 for more information. NOTE For backward compatibility, writing to CCR[SCKDIV] updates this field with (SCKDIV ÷ 2) rounded down.
7-0 SCKSET	SCK Setup Configures the setup phase of the SCK pin in Controller mode:

Table continues on the next page...

Table continued from the previous page...

Field	Function
	• The setup phase is the delay between the SCK edge that drives the transmit data and the SCK edge that samples the receive data. • It is the SCK high period when CPHA = 0 and CPOL = 1, or CPHA = 1 and CPOL = 0. It is the SCK low period when CPHA = 0 and CPOL = 0, or CPHA = 1 and CPOL = 1. • The SCK setup phase delay is equal to (SCKSET + 1) cycles of the LPSPI functional clock divided by the selected prescaler (see TCR[PRESCALE]). • The minimum delay is one cycle. • The SCK period is equal to (SCKSET + SCKHLD + 2) cycles of the LPSPI functional clock divided by the selected prescaler (see TCR[PRESCALE]). • The SCK duty cycle is based on the difference between SCKSET and SCKHLD. You must configure both these fields to the same value for a 50/50 duty cycle. See Figure 178 for more information. NOTE For backward compatibility, writing to CCR[SCKDIV] updates this field with (SCKDIV ÷ 2) rounded up.

41.6.1.14 FIFO Control (FCR)


Offset

Register	Offset
FCR	58h

Function

Contains the receive FIFO and transmit FIFO watermark values.

Diagram

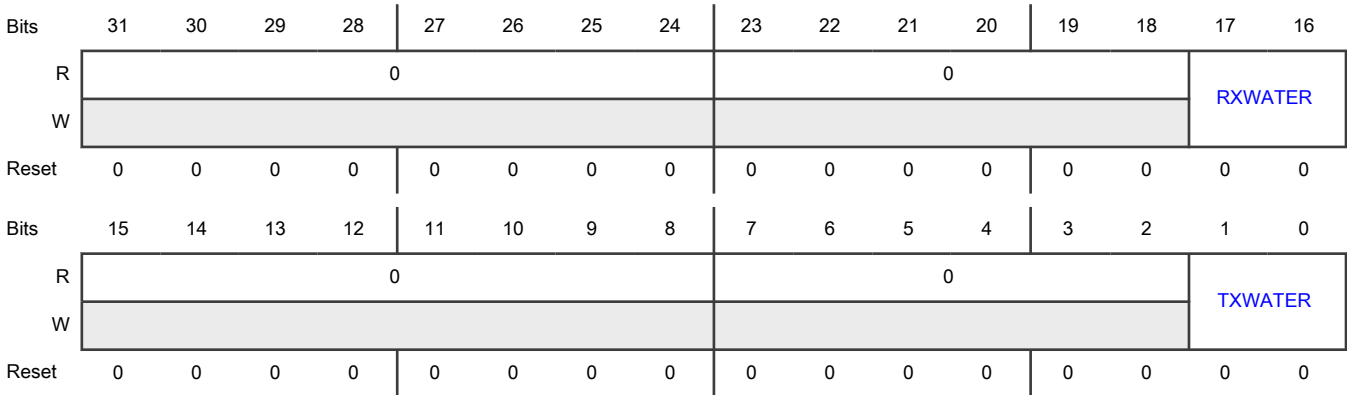

Fields

Field	Function
31-24 —	Reserved
23-18 —	Reserved
17-16 RXWATER	Receive FIFO Watermark Causes LPSPI to set SR[RDF] when the number of words in the receive FIFO is greater than RXWATER. Writing a value equal to or greater than the FIFO size truncates the written value.
15-8 —	Reserved
7-2 —	Reserved
1-0 TXWATER	Transmit FIFO Watermark Causes LPSPI to set SR[TDF] when the number of words in the transmit FIFO is equal to or less than TXWATER. Writing a value equal to or greater than the FIFO size truncates the written value.

41.6.1.15 FIFO Status (FSR)


Offset

Register	Offset
FSR	5Ch

Function

Contains fields that indicate the number of words currently stored in the receive and transmit FIFOs.

Diagram

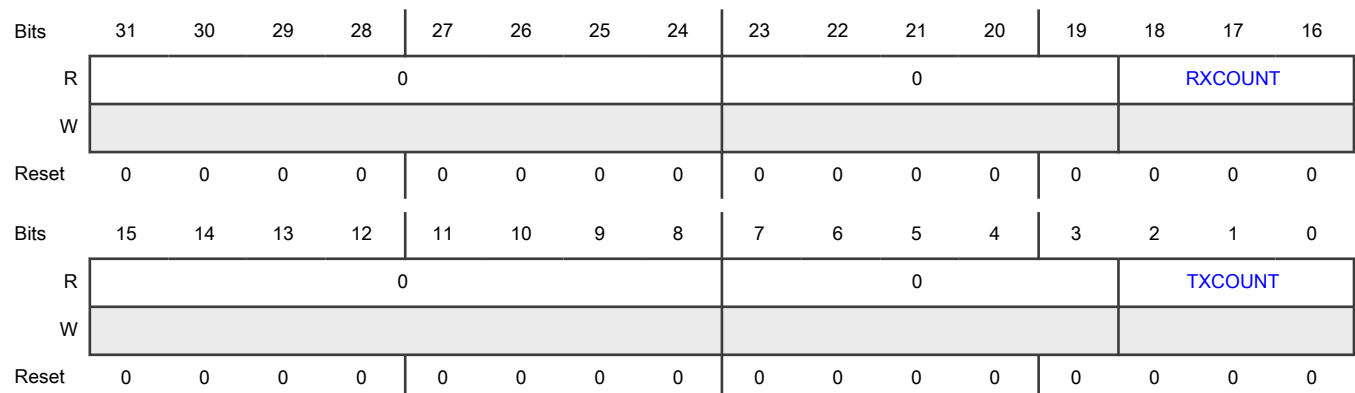

Fields

Field	Function
31-24 —	Reserved
23-19 —	Reserved
18-16 RXCOUNT	Receive FIFO Count Indicates the number of words currently stored in the receive FIFO.
15-8 —	Reserved
7-3 —	Reserved
2-0 TXCOUNT	Transmit FIFO Count Indicates the number of words currently stored in the transmit FIFO.

41.6.1.16 Transmit Command (TCR)**Offset**

Register	Offset
TCR	60h

Function

Pushes the data into the transmit FIFO, in the same order as written.

When you write to either this register or to [Transmit Data \(TDR\)](#), each write pushes data into the transmit FIFO. You must write to this register only using 32-bit writes, which are tagged and cause the command register to update; after that the entry reaches the top of the FIFO and LPSPI is enabled. This allows changes to the command word and the transmit data itself to be interleaved. That is, writes to the two registers can be interleaved (write command word, then data word, then command word, and so on). Changing the command word causes all subsequent SPI bus transfers to be performed using the new command word:

- In Controller mode, writing a new command word does not initiate a new transfer, unless [TXMSK](#) is 1. Transfers are initiated by transmit data in the transmit FIFO, or by a new command word (with TXMSK = 1). Hardware writes 0 to TXMSK when PCS deasserts.
- In Controller mode, if the command word is changed before an existing frame has completed, then the existing frame terminates and the command word updates. The command word can be changed during a continuous transfer, if CONTC of the new command word is 1 and the command word is written on a frame size boundary.
- In Peripheral mode, the command word must be changed only when LPSPI is idle and there is no SPI bus transfer.

Avoid resetting the transmit FIFO after writing to this register; wait for the command register to update from the FIFO first.

Avoid register reading problems: Reading this register returns the current state of the register. Reading this register at the same time that it is loaded from the transmit FIFO can return an incorrect register value. It is recommended to:

- Read this register when the transmit FIFO is empty.
- Read this register more than once and then compare the returned values.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R																
W	CPOL	CPHA	PRESCALE			Reserved	PCS		LSBF	BYSW	CONT	CONT C	RXMSK	TXMSK	WIDTH	
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserved				FRAMESZ											
W	0															
Reset	0	0	0	0	0	0	0	0	0	0	0	1	1	1	1	1

Fields

Field	Function
31 CPOL	Clock Polarity Specifies the value of SCK when it is idle. You can update this field only when PCS is deasserted. See Figure 178 for more information. 0b - Inactive low 1b - Inactive high
30 CPHA	Clock Phase Indicates whether data is captured or changed on the leading edge of SCK and captured or changed on the following edge of SCK. You can update this field only when PCS is deasserted. See Figure 178 for more information. 0b - Captured 1b - Changed
29-27 PRESCALE	Prescaler Value Specifies the division of the LPSPI functional clock. For all SPI bus transfers, this value is applied to Clock Configuration (CCR). You can update this field only when PCS is deasserted. 000b - Divide by 1 001b - Divide by 2 010b - Divide by 4 011b - Divide by 8 100b - Divide by 16 101b - Divide by 32

Table continues on the next page...

Table continued from the previous page...

Field	Function
	110b - Divide by 64 111b - Divide by 128
26 —	Reserved
25-24 PCS	Peripheral Chip Select Configures the peripheral chip select used for the transfer. This field is updated only when PCS is deasserted. NOTE This entire field is not fully supported in every LPSPI module instance. See the chip-specific LPSPI information. 00b - Transfer using PCS[0] 01b - Transfer using PCS[1] 10b - Transfer using PCS[2] 11b - Transfer using PCS[3]
23 LSBF	LSB First Indicates whether data is transferred with MSB first or LSB first. 0b - MSB first 1b - LSB first
22 BYSW	Byte Swap Swaps the contents of [31:24] with [7:0] and [23:16] with [15:8] for each transmit data word read from the FIFO and for each received data word stored to the FIFO (or compared with match registers). 0b - Disable byte swap 1b - Enable byte swap
21 CONT	Continuous Transfer Enables continuous transfer: • In Controller mode, this field keeps PCS asserted at the end of the frame size until a command word is received that starts a new frame. • In Peripheral mode, when this field is enabled, LPSPI only transmits the first FRAMESZ bits, after which LPSPI transmits received data (assuming a 32-bit shift register) until the next PCS negation. 0b - Disable 1b - Enable
20 CONTC	Continuing Command Enables the command word to be changed within a continuous transfer in Controller mode:

Table continues on the next page...

Table continued from the previous page...

Field	Function
	- The initial command word must enable continuous transfer (CONT = 1). - The continuing command must have CONTC = 1. - The continuing command word must be loaded on a frame size boundary. For example, if the continuous transfer has a frame size of 64 bits, then a continuing command word must be loaded on a 64-bit boundary. In Peripheral mode, this field modifies the internal RXMSK and TXMSK configuration after the first FRAMESZ bits and until PCS negation: - Receive data is discarded after the first FRAMESZ bits. If CONT is also 1, this does not block the transmission of received data. - Transmit data is not masked after the first FRAMESZ bits. This allows the first FRAMESZ bits to be received and a response transmitted. 0b - Command word for start of new transfer 1b - Command word for continuing transfer
19 RXMSK	Receive Data Mask Masks receive data (receive data is not stored in the receive FIFO). 0b - Normal transfer 1b - Mask receive data
18 TXMSK	Transmit Data Mask Masks transmit data (no data is loaded from the transmit FIFO and the output pin is 3-stated). In Controller mode, TXMSK initiates a new transfer that cannot be aborted by another command word. TXMSK automatically transitions to 0 at the end of the transfer. 0b - Normal transfer 1b - Mask transmit data
17-16 WIDTH	Transfer Width Configures serial (1-bit) or parallel transfers. For half-duplex parallel transfers, either RXMSK or TXMSK must be 1. 00b - 1-bit transfer 01b - 2-bit transfer 10b - 4-bit transfer 11b - Reserved
15-12 —	Reserved
11-0 FRAMESZ	Frame Size Configures the frame size in number of bits equal to (FRAMESZ + 1):

Table continues on the next page...

Table continued from the previous page...

Field	Function
	- The minimum frame size is 8 bits. - If the frame size is larger than 32 bits, then the frame is divided into multiple words of 32 bits; each word is loaded from the transmit FIFO and stored in the receive FIFO separately. - If the size of the frame is not divisible by 32, then the last load of the transmit FIFO and store of the receive FIFO contains the remainder bits. For example, a 72-bit transfer consists of three words: the first and second words are 32 bits, and the third word is 8 bits.

41.6.1.17 Transmit Data (TDR)

Offset


Register	Offset
TDR	64h

Function

Pushes the data into the transmit FIFO, in the same order that the data is written. You can write to this register using 32-, 16-, or 8-bit writes.

When you write to this register or to [Transmit Command \(TCR\)](#), each write pushes data into the FIFO with zero pushed in unwritten bytes.

Diagram

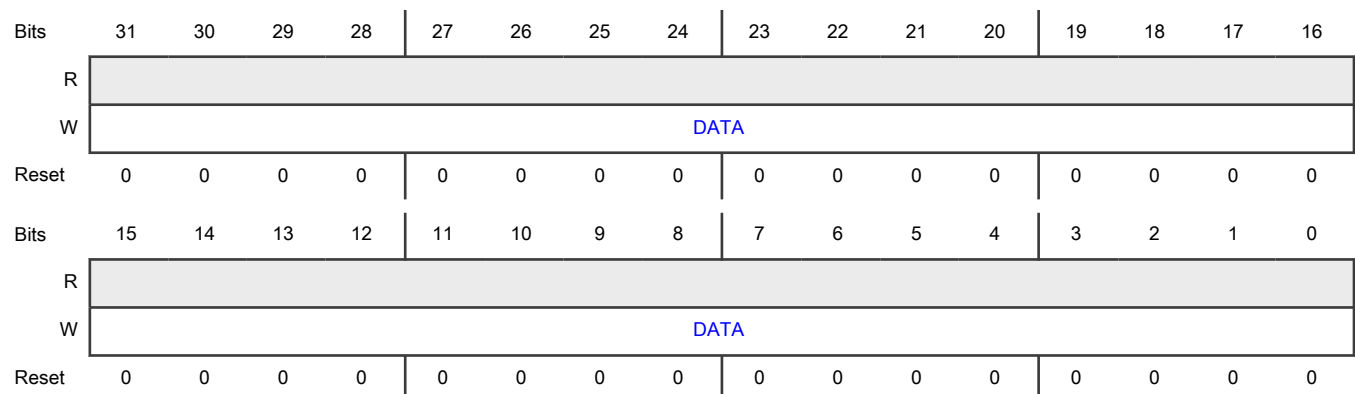

Fields

Field	Function
31-0	Transmit Data
DATA	Indicates transmit data. Both 8-bit and 16-bit writes of transmit data zero-extend the data written and push the data into the transmit FIFO. To zero-extend 8-bit and 16-bit writes (to 32 bits) means that the higher order (most significant) empty parts of the 8-bit and 16-bit writes are filled with zeroes.

41.6.1.18 Receive Status (RSR)


Offset

Register	Offset
RSR	70h

Function

Contains data flow status fields for receive FIFO.

Diagram

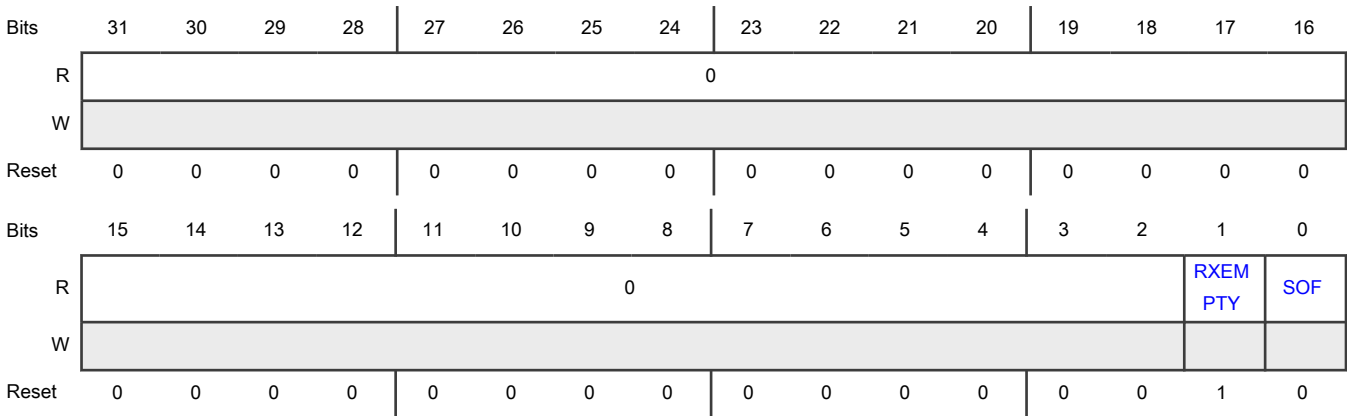

Fields

Field	Function
31-2 —	Reserved
1 RXEMPTY	RX FIFO Empty Indicates whether the receive FIFO is empty. 0b - Not empty 1b - Empty
0 SOF	Start of Frame Indicates whether this is the first data word received after PCS assertion. 0b - Subsequent data word or RX FIFO is empty (RXEMPTY=1). 1b - First data word

41.6.1.19 Receive Data (RDR)


Offset

Register	Offset
RDR	74h

Function

Pulls the first entry from the receive FIFO.

Diagram

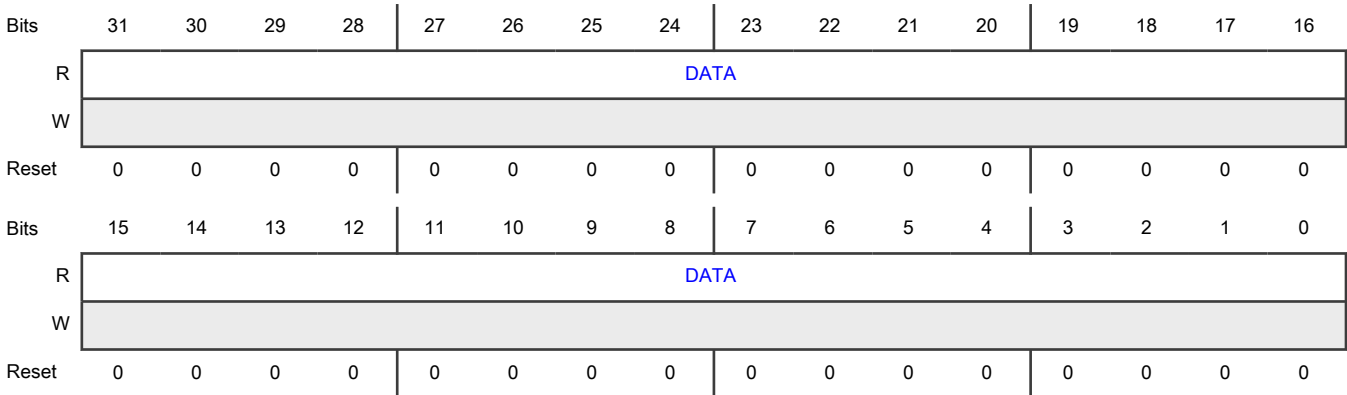

Fields

Field	Function
31-0 DATA	Receive Data

41.6.1.20 Receive Data Read Only (RDROR)


Offset

Register	Offset
RDROR	78h

Function

Returns the first entry in the receive FIFO but does not remove the data from the FIFO.

Diagram

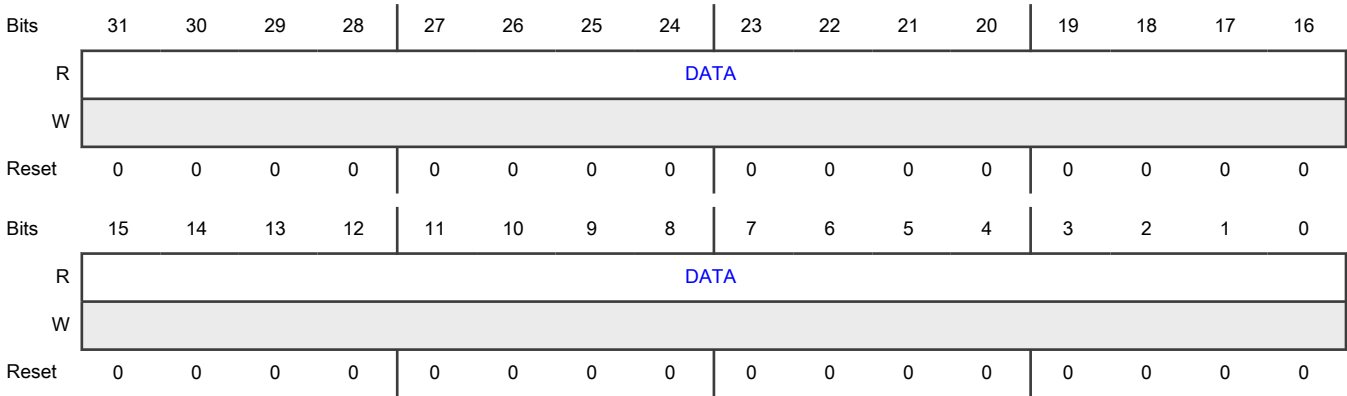

Fields

Field	Function
31-0 DATA	Receive Data

41.6.1.21 Transmit Command Burst (TCBR)

Offset


Register	Offset
TCBR	3FCh

Function

Supports burst transfers of command data to the transmit FIFO for use with the DMA controller.

See [DMA support registers](#).

Diagram

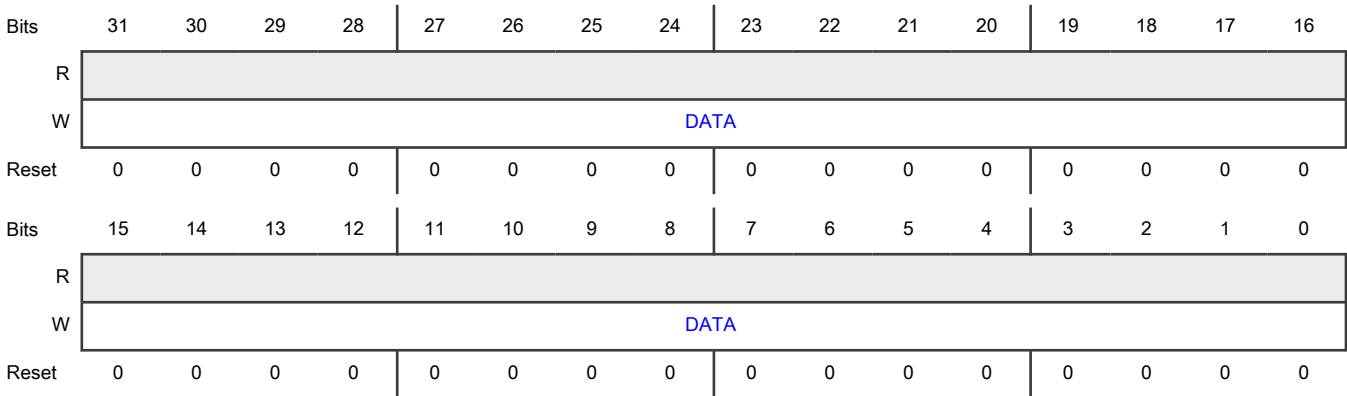

Fields

Field	Function
31-0 DATA	Command Data Writes data to Transmit Command (TCR) .

41.6.1.22 Transmit Data Burst (TDBR0 - TDBR127)**Offset**


For n = 0 to 127:

Register	Offset
TDBRn	400h + (n × 4h)

Function

Supports burst transfers of data to the transmit FIFO for use with the DMA controller. The size of this register is 512 bytes.

See [DMA support registers](#).

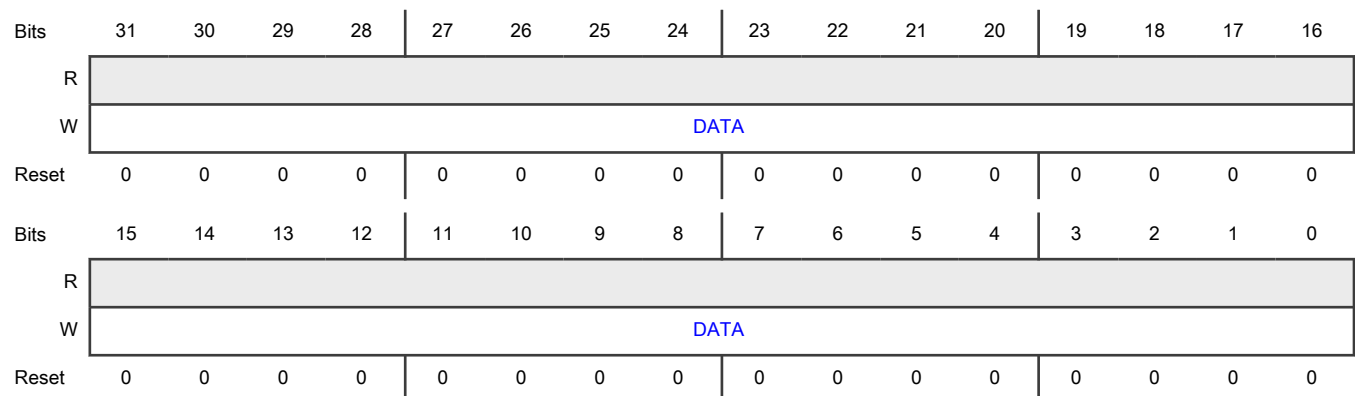Diagram**Fields**

Field	Function
31-0 DATA	Data Writes data to Transmit Data (TDR) .

41.6.1.23 Receive Data Burst (RDBR0 - RDBR127)**Offset**


For n = 0 to 127:

Register	Offset
RDBRn	600h + (n × 4h)

Function

Supports burst transfers of data from the receive FIFO. The size of this register is 512 bytes.
See [DMA support registers](#).

Diagram

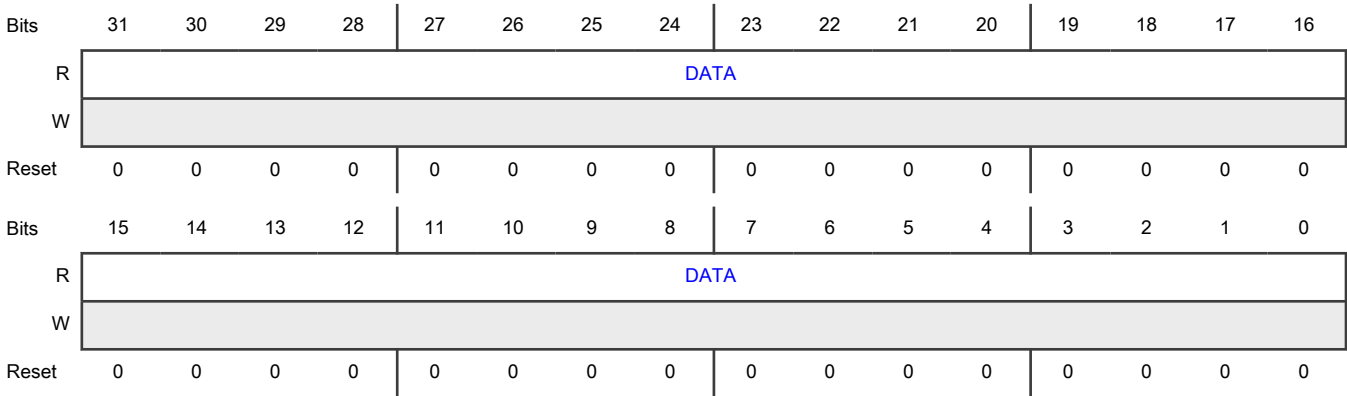

Fields

Field	Function
31-0	Data
DATA	Reads data from Receive Data (RDR) .

Chapter 42

Analog-to-Digital Converter (ADC)

42.1 Chip-specific ADC information

Table 299. Reference links to related information

Topic	Related module	Reference
Full description	ADC	ADC
System memory map		Memory map
Clocking		Clock distribution
Power Management		Power Management
Signal multiplexing	Port control	Signal multiplexing

42.1.1 Module instances

This device has four instances of 16-bit ADC: ADC0, ADC1, ADC2 and ADC3

42.1.2 ADC input connections

Table 300. ADC analog channel input connections

ADC Channel (CMDLn[ADC H])	ADC0 A Connection	ADC1 A Connection	ADC2 A Conne- ction	ADC3 A Conne- ction	Description
0	ADC0_A0/OpAMP2_INP (P2_0)	ADC1_A0 (P2_1)	ADC2_ A0 (P2_4)	ADC3_ A0 (P2_5)	VDD domain, 40 Ohm
1	ADC0_A1 (P2_4)	ADC1_A1 (P2_5)	ADC2_ A1 (P2_10)	ADC3_ A1 (P2_11)	VDD domain, 40 Ohm
2	ADC0_A2/OpAMP0_Out (P2_15)	ADC1_A2/OpAMP1_Out (P2_19)	ADC2_ A2/ OpAMP 2_Out (P4_4)	ADC3_ A2/ OpAMP 3_Out (P2_23)	VDD domain, 40 Ohm
3	ADC0_A3 (P2_3)	ADC1_A3 (P2_6)	ADC2_ A3	ADC3_ A3	VDD domain, 40 Ohm
4	ADC0_A4 (P2_2)	ADC1_A4 (P2_3)	ADC2_ A4/ OpAMP 1_INP (P2_16)	ADC3_ A4/ OpAMP 1_INN (P2_17)	VDD domain, 40 Ohm

Table continues on the next page...

Table 300. ADC analog channel input connections (continued)

5	ADC0_A5/OpAMP0_INP (P2_12)	ADC1_A5/OpAMP0_INN (P2_13)	ADC2_A5/ OpAMP0_INP (P2_12)	ADC3_A5/ OpAMP0_INN (P2_13)	VDD domain, 40 Ohm
6	ADC0_A6/OpAMP1_INP (P2_16)	ADC1_A6/OpAMP1_INN (P2_17)	ADC2_A6/ OpAMP3_INP (P2_20)	ADC3_A6/ OpAMP3_INN (P2_21)	VDD domain, 40 Ohm
7	ADC0_A7/VREFI (P2_7)	ADC1_A7/VREFI (P2_7)	ADC2_A7/ VREFI (P2_7)	ADC3_A7/ VREFI (P2_7)	VDD domain, 40 Ohm
8	ADC0_A8 (P0_18)	ADC1_A8 (P1_10)	ADC2_A8 (P0_2)	ADC3_A8	VDD domain, analog mux
9	ADC0_A9 (P0_19)	ADC1_A9 (P1_11)	ADC2_A9	ADC3_A9	VDD domain, analog mux
10	ADC0_A10 (P0_20)	ADC1_A10 (P1_12)	ADC2_A10	ADC3_A10	VDD domain, analog mux
11	ADC0_A11 (P0_21)	ADC1_A11 (P1_13)	ADC2_A11	ADC3_A11	VDD domain, analog mux
12	ADC0_A12 (P0_22)	ADC1_A12 (P1_14)	ADC2_A12	ADC3_A12 (P3_6)	VDD domain, analog mux
13	ADC0_A13 (P0_23)	ADC1_A13 (P1_15)	ADC2_A13	ADC3_A13 (P3_7)	VDD domain, analog mux
14	ADC0_A14 (P0_3)	ADC1_A14	ADC2_A14 (P0_14)	ADC3_A14 (P3_12)	VDD domain, analog mux
15	ADC0_A15 (P0_6)	ADC1_A15	ADC2_A15 (P0_15)	ADC3_A15 (P3_13)	VDD domain, analog mux
16	ADC0_A16 (P1_0)	ADC1_A16	ADC2_A16	ADC3_A16	VDD domain, analog mux

Table continues on the next page...

Table 300. ADC analog channel input connections (continued)

				(P3_14)	
17	ADC0_A17 (P1_1)	ADC1_A17	ADC2_A17	ADC3_A17 (P3_15)	VDD domain, analog mux
18	ADC0_A18 (P1_2)	Reserved	ADC2_A18 (P4_2)	ADC3_A18 (P3_20)	VDD domain, analog mux
19	ADC0_A19 (P1_3)	Reserved	ADC2_A19 (P4_3)	ADC3_A19 (P3_21)	VDD domain, analog mux
20	ADC0_A20 (P1_4)	ADC1_A20 (P3_31)	ADC2_A20 (P4_4)	ADC3_A20 (P3_22)	VDD domain, analog mux
21	ADC0_A21 (P1_5)	ADC1_A21 (P3_30)	ADC2_A21 (P4_5)	ADC3_A21	VDD domain, analog mux
22	ADC0_A22 (P1_6)	ADC1_A22 (P3_29)	ADC2_A22 (P4_6)	ADC3_A22	VDD domain, analog mux
23	ADC0_A23 (P1_7)	Reserved	ADC2_A23 (P4_7)	ADC3_A23	VDD domain, analog mux
24	VSSA	VSSA	VSSA	VSSA	-
25	Reserved	Reserved	Reserved	Reserved	-
26	Temperature+	Temperature+	Temperature+	Temperature+	-
27	PMC BG+	PMC BG+	PMC BG+	PMC BG+	ADC Internal PMC Bandgap, pmc_1vbuf_ana_1p8v
28	Reserved	ADC1_A20~A22 (P3_31)	Reserved	Reserved	
29	VDDA/4	VDDA/4	VDDA/4	VDDA/4	PMC resistive dividers

42.1.3 ADC voltage reference options

The ADC voltage references can be selected by CFG[REFSEL] as follows:

- CFG[REFSEL]=00, VREFH reference pin
- CFG[REFSEL]=01, VREFI

- CFG[REFSEL]=10, VDDA_ANA supply pin

42.1.4 ADC trigger inputs

ADC trigger sources get routed through the Input Multiplexing (INPUTMUX). See the [INPUTMUX](#) chapter for available trigger sources.

42.1.5 ADC Synchronized Trigger

For this device, it supports 3 synchronized trigger configuration

1. ADC0 trigger all other ADCs. 4 ADCs can sample same time.
2. ADC0 trigger ADC1. ADC0 and ADC1 sample same time.
3. ADC2 trigger ADC3. ADC2 and ADC3 sample same time.

ADC Synchronize trigger connection:

1. ADC0 Sync Trigger Input Connection
 - ADC0_Sync_Trigger_Output[0] -> ADC0_Sync_Trigger_Input[0]
 - ADC0_Sync_Trigger_Output[1] -> ADC0_Sync_Trigger_Input[1]
 - ADC0_Sync_Trigger_Output[2] -> ADC0_Sync_Trigger_Input[2]
 - ADC0_Sync_Trigger_Output[3] -> ADC0_Sync_Trigger_Input[3]
2. ADC1 Sync Trigger Input Connection
 - ADC0_Sync_Trigger_Output[0] -> ADC1_Sync_Trigger_Input[0]
 - ADC0_Sync_Trigger_Output[1] -> ADC1_Sync_Trigger_Input[1]
 - ADC0_Sync_Trigger_Output[2] -> ADC1_Sync_Trigger_Input[2]
 - ADC0_Sync_Trigger_Output[3] -> ADC1_Sync_Trigger_Input[3]
3. ADC2 Sync Trigger Input Connection
 - ADC0_Sync_Trigger_Output[0] -> ADC2_Sync_Trigger_Input[0]
 - ADC0_Sync_Trigger_Output[1] -> ADC2_Sync_Trigger_Input[1]
 - ADC2_Sync_Trigger_Output[2] -> ADC2_Sync_Trigger_Input[2]
 - ADC2_Sync_Trigger_Output[3] -> ADC2_Sync_Trigger_Input[3]
4. ADC3 Sync Trigger Input Connection
 - ADC0_Sync_Trigger_Output[0] -> ADC3_Sync_Trigger_Input[0]
 - ADC0_Sync_Trigger_Output[1] -> ADC3_Sync_Trigger_Input[1]
 - ADC2_Sync_Trigger_Output[2] -> ADC3_Sync_Trigger_Input[2]
 - ADC2_Sync_Trigger_Output[3] -> ADC3_Sync_Trigger_Input[3]

42.2 Overview


16-bit ADC is a successive approximation ADC designed for operation within an integrated microcontroller system-on-chip.

NOTE

For the chip specific modes of operation, see the power management information of the device.

42.2.1 Block diagram

The following figure is the ADC module block diagram.

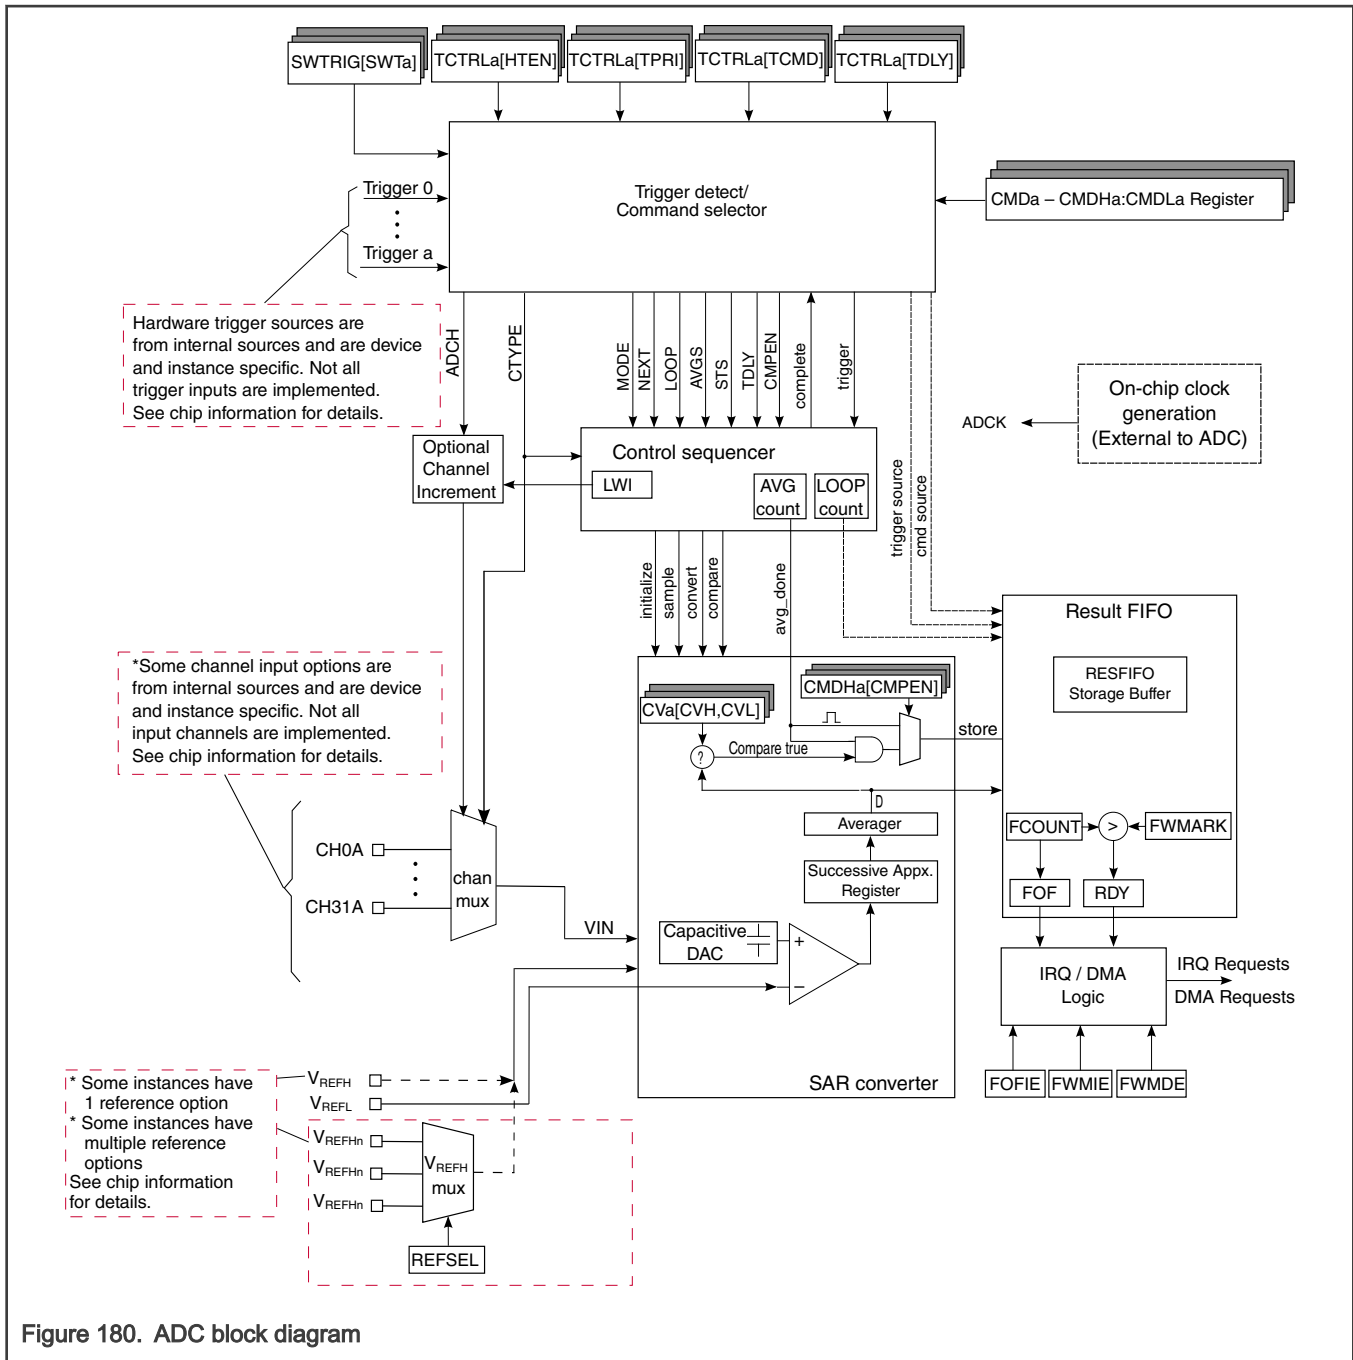

42.2.2 Features

Following are the features of the ADC module.

- Linear successive approximation algorithm
 - single-ended operation with 12-bit resolution or reduced bandwidth 16-bit resolution.
- Configurable analog input sample time
- Configurable speed options to accommodate operation in low power modes of SoC
- Trigger detect with up to 4 trigger sources with priority level configuration. Software or hardware trigger option for each.
- 7 command buffers allow independent options selection and channel sequence scanning.

- Automatic compare for less-than, greater-than, within range, or out-of-range with "store on true" and "repeat until true" options
- 8-entry conversion result data FIFO with configurable watermark and overflow detection
- Interrupt, DMA or polled operation
- Linearity and gain adjustment calibration logic

42.3 Functional description

The ADC module performs analog-to-digital conversions on any of the software selectable analog input channels by a successive approximation algorithm. The module initializes to its lowest power state during reset. The ADC analog circuits can optionally be pre-enabled for faster starts to conversions at the expense of higher idle currents. Conversions are initiated by selectable trigger events from software or hardware sources. The trigger detect logic includes a configurable enable and priority scheme for the available trigger sources. The module includes multiple command buffers that provide configurable flexibility for channel scanning and independent channel selections for different trigger sources. Multiple command buffers also allow variable option selection such as sample time and averaging on a per-channel basis.


The ADC module optionally averages the result of multiple conversions on a channel before storing the calculated result. The hardware average function is enabled by setting CMDH_A[AVGS] bitfield to a non-zero value and operates in any of the conversion modes and configurations.

When the conversion and averaging loops are completed, the resulting data is placed in a FIFO data buffer along with other tag information associated with the result. A configurable watermark level supports interrupt or DMA requests when the number of stored datawords exceeds the setting. Interrupts can also be enabled to indicate when FIFO overflow errors occur.

The ADC module optionally compares the result of a conversion with the contents of two value registers for less-than, greater-than, inside-range or outside-range detection. The compare function operates in any of the conversion modes and configurations.

The ADC module includes offset and linearity calibration logic. A request for calibration should be made any time upon reset or power up. Each SAR conversion utilizes calibration data calculated during the calibration routine.

The sequencing of a ADC command is summarized in the flow diagram shown below.

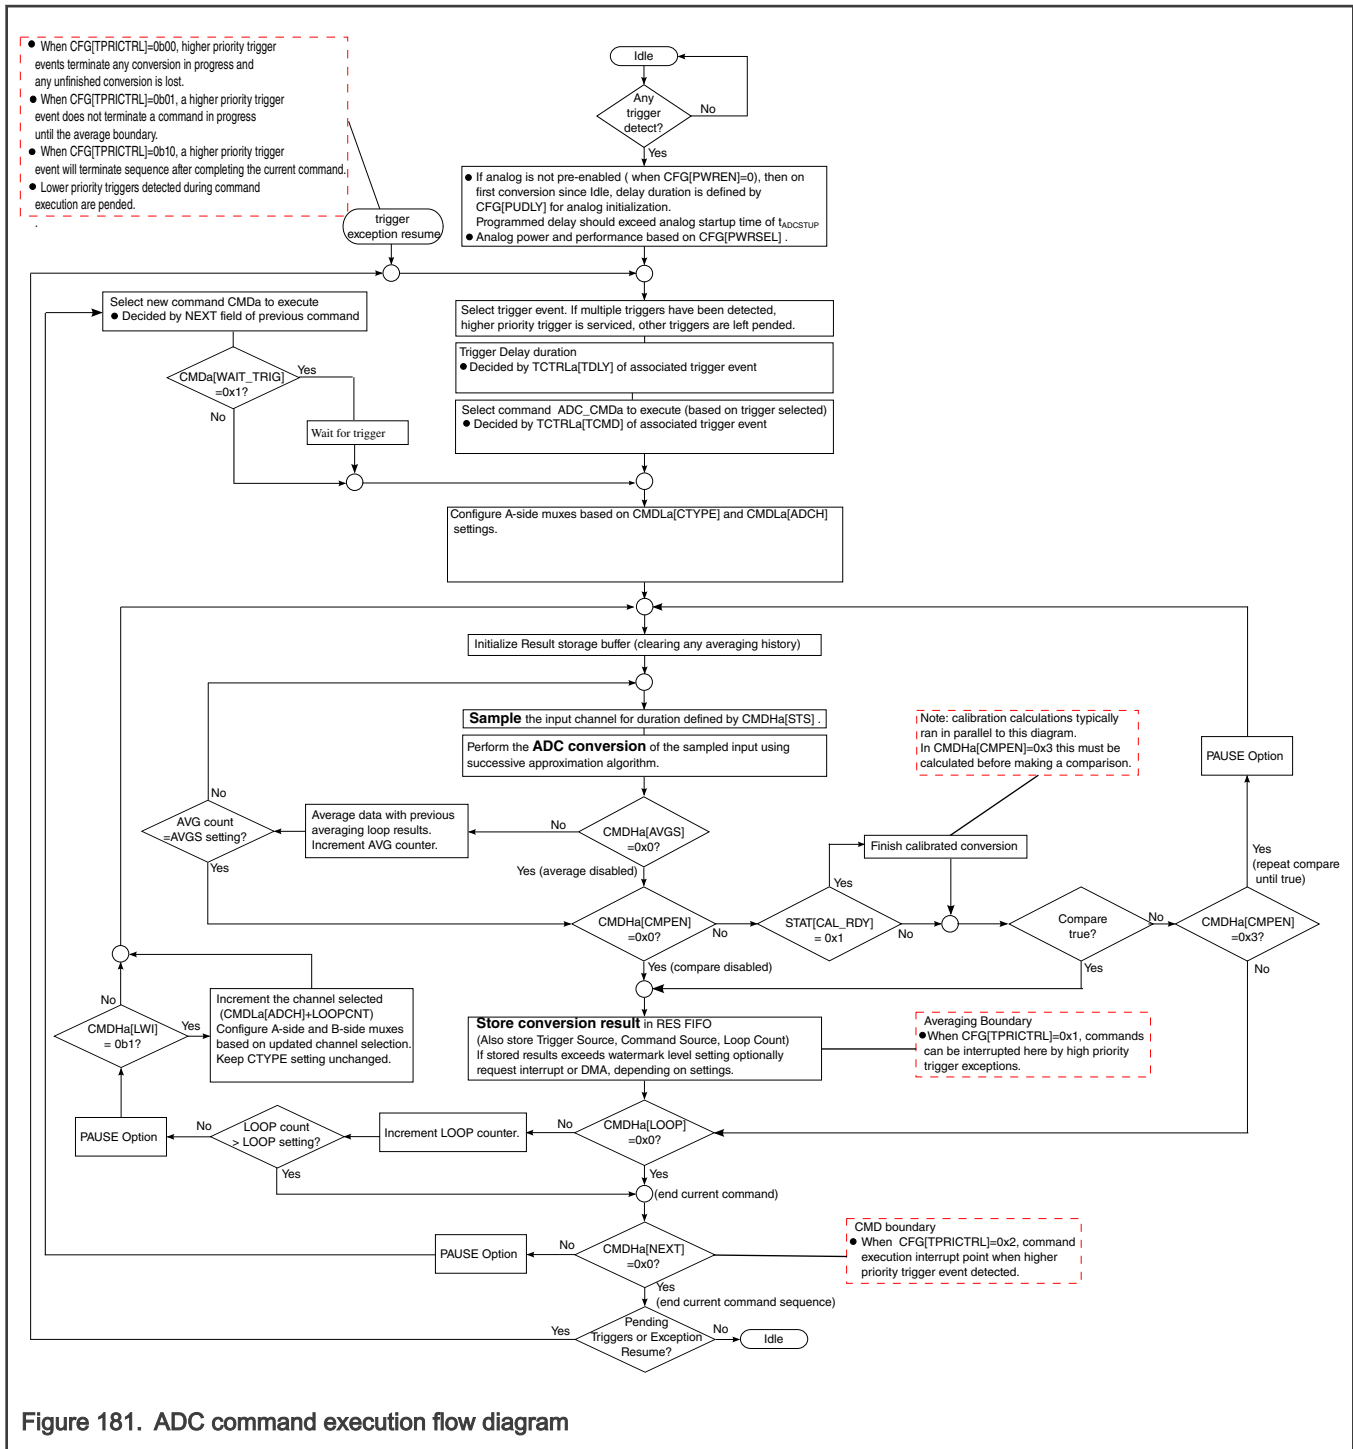

42.3.1 Power control mode

By default, the ADC analog circuits are disabled while ADC is in its idle state. When a trigger is detected and ADC command processing is initiated, the analog circuits are enabled. These circuits require a period of initialization before the first conversion cycle.

The value of CFG[PUDLY] should be set to incur a delay longer than $t_{ADCSTUP}$. The accuracy of initial conversions after activation is degraded if the value of CFG[PUDLY] is too low.

You can achieve faster conversion startup times by setting [CFG\[PWREN\]](#) to pre-enable the analog circuits of ADC. This faster conversion consumes extra power, even while ADC is in an idle state. When CFG[PWREN] is 1, the Power Enable timer is activated. The timer enforces the minimum time required (configured by CFG[PUDLY]) before detected triggers can initiate ADC conversions.

ADC also has options for controlling power and performance summarized in the table below. See the device data sheet for specification of the available power modes.

Table 301. Power option settings

CFG[PWRSEL]	Description
0b (Default)	Slow speed and low power
1b	Fast speed and high power

42.3.2 ADC behavior in low power mode

The ADC module supports system level low power modes. In system low power modes where the ADC can remain functional, the CTRL[DOZEN] bit controls ADC behavior.

With the CTRL[DOZEN] bit clear, if the ADC was configured and enabled before low power mode entry, ADC is allowed to continue operation while the system is transitioned to the low power state. Any conversion in progress is not disrupted. External hardware trigger detect and active conversions are operational.

With the CTRL[DOZEN] bit set the ADC waits for the current averaging iteration/FIFO storage to complete before acknowledging low power entry request. After system entry to the low power state, the ADC is kept in inactive state until the system exits the low power state.

When entering a low power mode where the ADC cannot remain functional, the CTRL[DOZEN] bit is ignored and the ADC always waits for the current averaging iteration/FIFO storage to complete before acknowledging the low power entry request. After entry to the low power state, the ADC is kept in an inactive state until the system exits the low power state. The CFG[PWREN] bit setting is ignored and the ADC analog is forced to its lowest power state. Upon wakeup from the low power state, if the analog was pre-enabled before stop mode entry (i.e., the CFG[PWREN] bit is set) and the control registers have retained state in the low power mode, the analog is automatically re-enabled and the power up delay timer begins. Any triggered conversion is stalled until the power up delay associated with the CFG[PUDLY] control field has finished.

42.3.3 Voltage reference

The voltage reference high (V_{REFH}) used by the ADC is supplied from either an on-chip voltage reference source or from an off-chip source supplied through external pins. V_{REFL} is always from an external pin and must be at the same voltage potential as V_{SSA} . See the chip configuration information on the voltage reference options specific to this packaged device.

This block supports a programmable selection of the Voltage Reference High used for ADC conversions (via the CFG[REFSEL] field). See the chip configuration information on the voltage reference options specific to this packaged device.

42.3.4 Trigger detect and command execution

See [Figure 181](#) for a flow diagram of command execution sequencing.

ADC command execution is initiated from up to 4 trigger sources. Each trigger can be software generated by writing 0b1 to the corresponding SWTRIG[SWT n] bitfield. Alternatively, hardware triggers can be generated from asynchronous input sources at the periphery of the module. The number and sources of hardware triggers implemented is device specific. Refer to chip configuration information for description of available hardware trigger sources for this device.

Each hardware trigger source is enabled by setting the associated enable bit (TCTRL a [HTEN]). Each trigger source is assigned a priority via the associated priority control field (TCTRL a [TPRI]). Each of the trigger sources is associated with a command buffer via the associated command select field (TCTRL a [TCMD]).

When a hardware trigger input is enabled, hardware trigger events are detected on the rising-edge of the associated hardware trigger source.

When the ADC is inactive, achieving the minimum startup time to begin an initial conversion after a software or hardware generated trigger requires that the ADC be pre-enabled (by setting `CFG[PWREN]` during ADC initialization and allowing enough time for ADC power-up delay to timeout before allowing any triggers to be generated). In the case of a pre-enabled ADC, it takes 9 ADCK cycles for the trigger to be recognized and begin sampling on the associated analog channel.

In the case that the ADC is not pre-enabled, an initial conversion is delayed further as determined by the power-up delay (`CFG[PUDLY]`). Conversion startup can also be delayed on a trigger source basis (`TCTRLn[TDLY]`).

Each trigger source has an associated priority field `TCTRLa[TPRI]` which allows for arbitration between trigger sources. Arbitration is in control of two things: selecting which trigger sequence to execute next, and selecting how to handle a trigger exception. Trigger exceptions are defined as allowing a higher priority trigger sequence to interrupt operation of a lower priority sequence. When a trigger exception occurs, programmable arbitration allows the configurable stop and resume points for low priority sequences. The fields affecting arbitration are `CFG[HPT_EXDI]`, `CFG[TCMDRES]`, `CFG[TRES]`, and `CFG[TPRCTRL]`.

1. If `CFG[HPT_EXDI]` is set to 1'b1 then trigger exceptions are disabled and any higher priority triggers are left pending until the current sequence completes. Note that new triggers are accepted based on priority.
2. If `CFG[HPT_EXDI]` is set to 1'b0 (default), then exceptions are enabled and the higher priority sequence begins executing at a user specified breakpoint.

Breakpoint locations are determined by the register `CFG[TPRCTRL]`. `CFG[TPRCTRL]` has an affect on latency for accepting a trigger exception.

1. When `CFG[TPRCTRL]=0x0`, a higher priority trigger causes an immediate command abort and the new command specified by the trigger is immediately started. It takes 9 ADCK cycles for the higher priority trigger to be recognized, terminate the conversion in progress, and complete a switch to the new associated ADC command. 9 ADCK cycles after the trigger is driven to the ADC, the ADC begins sampling on the associated new analog channel.
2. When `CFG[TPRCTRL]=0x1`, the current conversion is allowed to complete (including averaging) before the higher priority exception is initiated. In this mode, if the command is running through a series of averages, this series completes. However, there is no requirement to finish the entire command before being interrupted. For example, if the command consists of 4 loop iterations, there is no requirement to complete all 4 iterations before the interrupt occurs.
3. When `CFG[TPRCTRL]=0x2`, a higher priority trigger begins once the current command is completed. If a command consists of 5 loop iterations each containing 8 averages, then all 5x8 conversions must be completed before accepting the trigger exception.

`CFG[TCMDRES]` and `CFG[TRES]` determine what the ADC does after accepting a trigger exception. The module can be programmed to resume commands after returning from a trigger exception.

1. If `CFG[TRES] = 0x0` then commands are not automatically resumed after being stopped by an exception. However, an interrupt is set to indicate this case has occurred. The flag `TSTAT[TEXC_NUM]` can be used to resolve which trigger was stopped by the exception.
2. If `CFG[TRES] = 0x1` the ADC automatically resumes commands after they were stopped by an exception.

By utilizing `CFG[TRES]` in conjunction with `CFG[TCMDRES]`, the module can be programmed to resume commands at one of two possible locations.

1. If `CFG[TCMDRES] = 0x0` then the trigger which was stopped by an exception is resumed from the beginning of its associated command sequence. Note, triggers which are waiting to be resumed take the same priority programmed to `TCTRLa[TPRI]`.
2. If `CFG[TCMDRES] = 0x1` then the trigger is resumed from the command that it was executing before being interrupted by an exception.

If a lower priority trigger occurs (i.e., a trigger event occurs that is configured for a lower priority than the trigger source associated with the currently executing command), the trigger detect is left pending until completion of the current command sequence. Lower priority trigger events cannot be serviced until a higher priority triggered command (or command sequence) completes.

When a conversion is completed (including hardware averaging when `CMDHa[AVGS]` is non-zero), the result is placed in a `RESFIFO` buffer. When an ADC command selects looping (when `CMDHa[LOOP]` is non-zero) a command stores multiple conversion results to the FIFO during execution of that command.

At the end of command execution, the CMDHa[NEXT] field of the command selects the next command to be executed. Multiple commands can be executed sequentially by configuration of each commands CMDHa[NEXT] field. Setting the next command to 0x0 causes conversions to terminate at the completion of the command. Unending circular command execution is allowed by setting the CMDHa[NEXT] field in the last command in a sequence to the first command in the sequence.

By default, command sequences executes automatically in the order that CMDHa[NEXT] fields are programmed. However, by utilizing the CMDHa[WAIT_TRIG], command execution can be stalled and launched based on trigger inputs. For example, if TRIGGER2 is programmed to start the command sequence CMD1, CMD2, CMD3, then receiving TRIGGER 2 one time unconditionally runs this sequence to completion. If CMDH2[WAIT_TRIG] is set to 0x1, however, then the sequence pauses after CMD1 until TRIGGER2 is received again. Therefore, sequences can be stalled until receiving a trigger assertion.

Disabling the ADC by writing 0b0 to the CTRL[ADCEN] bitfield terminates any active ADC command processing. Writing 0b0 to the CTRL[ADCEN] bitfield causes the current command (or command sequence) to terminate, clears any pending triggers and sends the ADC module to an IDLE state.

42.3.5 Pause option

When the maximum conversion rate is not required by an application the effective conversion rate can be reduced by implementing periodic trigger events to initiate ADC conversions or by selecting a reduced frequency clock as the ADACK source. Both of these options are chip specific and are dependent on ADC triggering and clocking options external to the ADC module. The latency associated with ADC analog power up delays results in a limit on the maximum conversion rate when using periodic triggering.

Another means of reducing conversion rates is by inserting a pause of a programmable duration between LOOP iterations, between commands in a sequence, and between conversions when command is executing in the "Compare Until True" configuration. When PAUSE[PAUSEEN] is set, the PAUSE[PAUSEDLY] field controls the duration of pausing during command execution sequencing. The pause delay is a count of (PAUSE[PAUSEDLY]*4) ADCK cycles. Note, the PAUSE register should not be changed while the CTRL[ADCEN] bit is set. Writes to the PAUSE register while CTRL[ADCEN] is set can lead to metastable operation.

See [Figure 181](#) for the places during command execution sequencing where the pause is optionally inserted.

42.3.6 Resync functionality


Any trigger source (SW or HW) can be configured to act as a resync trigger. Trigger based resync functionality is used to interrupt a running trigger (resync target) and clear the FIFO it's writing to. This can either be used to abort a running sequence, or restart a running sequence depending on the configuration of CFG[TRES]. If CFG[TRES] = 0b1 then the target sequence is aborted, the FIFO cleared, and the sequence restarted after the resync occurs. If CFG[TRES] = 0b0 then the target sequence is aborted and the FIFO is cleared after the RESYNC occurs.

A resync trigger needs to have a specific target. The resync only occurs if the resync target is running at the time of the trigger. For the following description, let n be the resync trigger number, let m be the resync target number. According to these variables, trigger n should resync trigger m. To enable a trigger source to act as a resync trigger, the following conditions must be satisfied:

1. The resync trigger TCTRLn[RSYNC] must be set to 0b1.
2. The resync trigger must have higher priority than the resync target (TCTRLn[TPRI] must be less than TCTRLm[TPRI]).
3. The resync target is specified using TCTRLn[TCMD]. In this case the resync target, m, must be equal to TCTRLn[TCMD].
4. The resync target, m, must be executing commands when the resync trigger, n, is asserted.
5. Trigger m must have at least one conversion left to begin when trigger n is received.

If a trigger source n has TCTRLn[RSYNC] set to 0b1, but some of the above conditions are not met then the trigger source n is ignored.

The following figure illustrates a resync trigger sequence executing. Note, in this example, trigger source 1 is configured to resync trigger source 0.

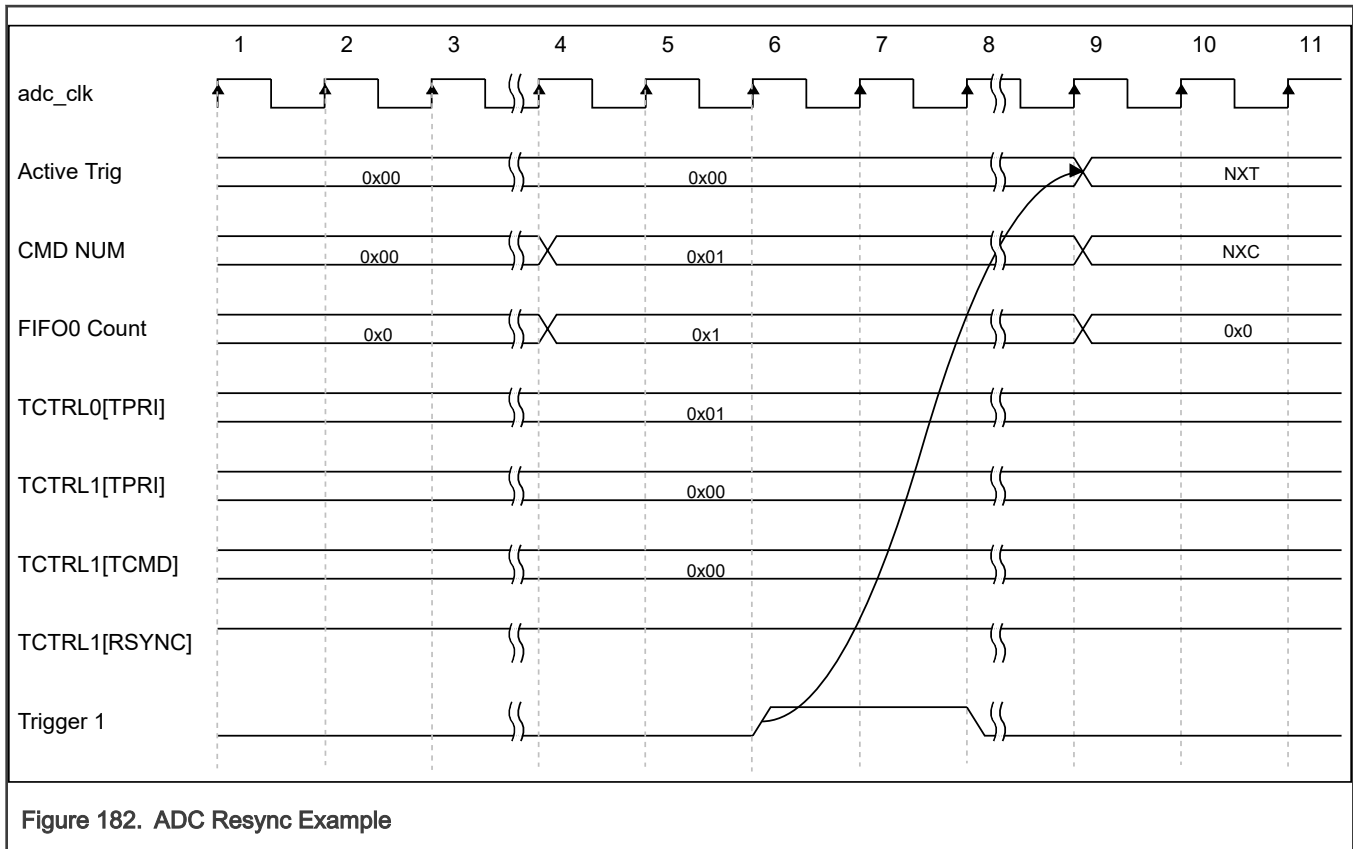

In this figure, trigger source 0 was executing a sequence of commands when trigger source 1 was asserted. Notice that trigger source 0 is stopped when trigger source 1 is asserted (after some synchronization delay). In addition, the FIFO being written to by trigger source 0 is cleared (FIFO0 in this example). After the trigger 0 sequence is stopped, the ADC runs the next trigger pending with the highest priority. This is marked as NXT, for next trigger. If resume functionality is enabled, and trigger source 0 had the highest priority pending, then NXT = 0x00.

42.3.7 Temperature sensor

The ADC module has a dedicated input channel for an on-chip temperature sensor. Refer to the chip specific channel definition to determine which channel is connected to the on-chip temperature sensor.

To calculate the temperature, application software must first execute a conversion of the temperature sensor channel with some configuration requirements. This sequence for converting the temperature sensor channel is outlined below:

1. Refer to chip specific channel definition to determine which channel corresponds to the temperature sensor.
2. Configure a command buffer register to convert the temperature sensor channel. CMDLa[ADCH] = Temperature Sensor Channel.
3. The command buffer must also be programmed with the following parameters:
 - 16b mode (CMDLa[MODE] = 0x1)
 - Max averaging (CMDHa[AVGS] = 0xA)
 - Max sample time (CMDHa[STS] = 0x7)
 - LOOP set to 1 (CMDHa[LOOP] = 0x1)
 - Loop with increment disabled (CMDHa[LWI] = 0x0)
 - Compare function disabled (CMDHa[COMPEN] = 0x0)
4. Configure a trigger control register TCTRLa with the following parameters:

- TCTRLa[TCMD] = command buffer used in steps 2 and 3.
5. Trigger a conversion of the temperature sensor channel. Software triggers the conversion by writing "1" to the associated bit in SWTRIG register (i.e., the trigger configured in step 4).

After completion of the conversion of the temperature sensor channel, two results are stored in the FIFO. Each result corresponds to a component of the overall temperature value. Application software reads these values from the FIFO and uses the equation below to calculate the ambient temperature.

$$\text{Temp} = A \left[\frac{\alpha(V_{be8} - V_{be1})}{V_{be8} + (\alpha(V_{be8} - V_{be1}))} \right] - B$$

Equation 37. Temperature sensor function

Where:

- Vbe1 is the first value stored to the FIFO as a result of the temperature sensor channel conversion
- Vbe8 is the second value stored to the FIFO as a result of the temperature sensor channel conversion
- A is the slope factor
- B is the offset factor
- α is the bandgap coefficient

A, B, and α are specified constant values from the ADC Electrical information in the device datasheet.

42.3.8 Result FIFO operation

The ADC includes 1 8-entry FIFO in which the result of ADC conversions are stored. In addition, a valid indicator bit, the trigger source, the source command and the loop count are also stored along with the data. FCTRLa[FCOUNT] indicates how many valid datawords are stored in each RESFIFO.

A programmable watermark threshold supports configurable notification of data availability. When FCTRLa[FCOUNT] is greater than FCTRLa[FWMARK], the associated RDY flag is asserted. When IE[FWMIE] is set, a watermark interrupt request is issued. When DE[FWMDE] is set, a DMA request is issued. Reading RESFIFO provides the oldest unread dataword entry in the FIFO and decrements FCTRLa[FCOUNT]. When FCTRLa[FCOUNT] falls equal to or below FCTRLa[FWMARK], the RDY flag is cleared.

Each FIFO can be emptied by successive reads of RESFIFOa. When the RESFIFOa[VALID] bit is 1 the associated FIFO entry is valid. Reading RESFIFOa when the FIFO is empty (when RESFIFOa[VALID] is clear and FCTRLa[FCOUNT]=0x0) provides an undefined dataword. All FIFOs are reset by writing 0b1 to the CTRL[RSTFIFO] bit.

If the ADC attempts to store a dataword to the FIFO when the FIFO is full the FIFO overflow flag (FCTRLa[FOF]) is set. When IE[FOFIE] is set, a overflow interrupt request is issued. The FOF flag is cleared by writing 1 to STAT[FOF]. On overflow events no new data is stored and the data associated with the store that triggered the overflow is lost.

42.3.9 Compare function

After the input is sampled and converted and any averaging iterations are performed, the CMDHa[COMPEN] field guides operation of the automatic compare function to optionally only store when the compare operation is true. There are multiple options on command sequencing related to the compare function as summarized in the table below.

NOTE

Latency is added to the end of a compare until true conversion to resolve the next command or loop in a sequence. This latency is necessary to calibrate the SAR data before resolving the result of a comparison. Delay for this feature is only added when resolving the result of a conversion. This means that intermediate samples during averaging do not include extra latency. Only loop and command boundaries experience this delay. The latency is always less than or equal to 5 ADC clock cycles.

NOTE

Not all Command Buffers have an associated Compare Value register. The compare function is only available on Command Buffers that have a corresponding Compare Value register.

Table 302. Compare modes

CMDH a [CMPEN]	Compare Function	Description
0b00	Compare disabled	Do not perform compare operation. Always store the conversion result to the FIFO.
0b01	Reserved	
0b10	Store on true	Perform compare operation. Store conversion result to FIFO at end of averaging only if compare is true. If compare is false do not store the result to the FIFO. In either the true or false condition, the LOOP setting is considered and increments the LOOP counter before deciding whether the current command has completed or additional LOOP iterations are required.
0b11	Repeat compare until true	Perform compare operation. Store conversion result to FIFO at end of averaging only if compare is true. Once the true condition is found the LOOP setting is considered and increments the LOOP counter before deciding whether the current command has completed or additional LOOP iterations are required. If the compare is false do not store the result to the FIFO. The conversion is repeated without consideration of LOOP setting and does not increment the LOOP counter.

Depending on CV a [CVL] and CV a [CVH] values programmed, the compare operation checks whether the result is less than, greater than, or if the result falls within or outside a range determined by two compare values. The compare values are used as described in the following table.

Table 303. Compare operations

CV a [CVL] vs. CV a [CVH]	Operation	Description
set CV a [CVL] < CV a [CVH]	Outside range (General form)	Compare true if the result is less than CV a [CVL] value OR greater than CV a [CVH] value.
set CV a [CVH] to max value set CV a [CVL] to compare point	Less than	Compare true if the result is less than CV a [CVL] value.
set CV a [CVL] to min value set CV a [CVH] to compare point	Greater than	Compare true if the result is greater than CV a [CVH] value.
set CV a [CVL] > CV a [CVH]	Inside range	Compare true if the result is less than CV a [CVL] value AND greater than CV a [CVH] value.

NOTE

In low power modes where the ADC continues to operate, the compare function can monitor the voltage and only wake the device when the compare condition is met.

42.3.10 Cycles per conversion

The number of ADCK cycles needed to complete a conversion varies based on the selected resolution (CMDLa[MODE]), the sample time configured, and several other configuration options discussed below.

To calculate the cycle count, first, determine the Base Cycles Count from Table 304. Next, add the Sample Time Adder based on CMDHa[STS] setting as summarized in Table 305. If averaging is enabled (CMDHa[AVGS] does not equal to 0), then the total cycles (Base Cycles Count + Sample Time Adder) should be multiplied by the number of averages configured as summarized in Table 306.

$$\text{CycleCount} / \text{Conversion} = [(\text{BaseCycleCount} + \text{SampleTimeAdder}) * \text{AverageMultiplier}]$$

Equation 38. Cycle Count/Conversion

Note that there is latency associated with trigger detection and starting an initial conversion. There is additional latency associated with offset and gain error adjustment of a raw conversion result and storage of a final result to the FIFO. Due to pipe-lining of conversions when looping or command chaining is configured, the next conversion is immediately started while a raw conversion result is being adjusted and stored and thus the conversion rate is maximized.

The base cycles per conversion is variable depending on CMDLa[MODE], CFG2[HS], CFG2[HSEXTRA], and CFG2[TUNE] settings as summarized in the following table.

Table 304. Base cycles per conversion

CFG2[HS] (default 0)	CFG2[HSEXTRA] (default 0)	CFG2[TUNE] (default 01)	Base ADCK cycles/conversion ¹		Description
			16-bit CMDLa[MODE] = 1	12-bit CMDLa[MODE] = 0	
0	X	00	24	20	
0	X	01	23	19	Reset default
0	X	10	22	18 ²	
1	0	00	21	17	
1	0	01	20	16	
1	0	10	19	15 ²	
1	1	00	22	18	
1	1	01	21	17	
1	1	10	20	16 ²	

1. This cycle count includes min sample time of 3.5 ADCK cycles.
2. Setting CFG2[TUNE] to 10 in 12-bit mode can result in missing codes (i.e., some result codes may not be produced).

In addition to the base cycles per conversion, the configured sample time needs to be considered. The sample time adder is variable depending on CMDHa[STS] setting and is summarized in the following table:

Table 305. Sample time cycle adder

CMDHa[STS] (default 000)	Add ADCK cycles/conversion
000	0
001	2

Table continues on the next page...

Table 305. Sample time cycle adder (continued)

CMDHa[STS] (default 000)	Add ADCK cycles/conversion
010	4
011	8
100	16
101	32
110	64
111	128

Table 306. Averaging multiplier

CMDHa[AVGS] (default 0000)	Averaging multiplier
0000	1
0001	2
0010	4
0011	8
0100	16
0101	32
0110	64
0111	128
1000	256
1001	512
1010	1024

42.3.11 Clocking

ADC uses the ADCK clock input provided by an on-chip clock select block. It is used by the SAR conversion-control sequencing logic and the FIFO storage buffer. The ADCK frequency must be within the specified frequency range for ADCK, and varies based on [CFG\[PWRSEL\]](#). See the device data sheet for supported frequency ranges.

ADC continues operating in low-power mode as long as [CTRL\[DOZEN\]](#) = 0 and the on-chip clock select block supplies an ADCK clock source.

NOTE

When in low-power mode with [CTRL\[DOZEN\]](#) = 0, the bus clock can be shut off, and asynchronous interrupts and DMA requests can be configured. ADC continues processing commands and writing data to the internal FIFO.

ADC has four sources for asynchronous interrupts during low-power mode: watermark, FIFO overflow, TCOMP, and TEXTC. To enable them, configure [IE\[FWMIE\]](#), [IE\[FOFIE\]](#), [IE\[TCOMP_IE\]](#), and [IE\[TEXTC_IE\]](#) before entering low-power mode.

When [CTRL\[DOZEN\]](#) = 1 in low-power mode, ADC waits for the current averaging iteration or FIFO storage to complete before acknowledging the low-power mode entry. Any pending triggers are dropped when a low-power mode request is made in this mode. ADC is forced into its lowest-power setting after acknowledging the low-power mode request.

42.3.12 Resets

Table 307. ADC Resets

Reset source	Description
Chip reset	The logic and registers for the ADC are reset to their default state on a chip reset.
Software reset	The ADC implements a software reset bit in its Control Register. The CTRL[RST] bit resets all logic and registers to their default state, except for the CTRL, GCRn and CAL_GARn registers.
FIFO reset	The ADC implements write-only control that reset the FIFO0 (CTRL[RSTFIFO0]). After a FIFO is reset, that FIFO is empty.

42.3.13 Interrupts and DMA requests

The ADC includes several sources for interrupts and/or DMA requests. The table below summarizes these sources.

A programmable watermark threshold supports configurable notification of data availability and can generate either an interrupt exception or a DMA request. When [FCTRLn\[COUNT\]](#) is greater than [FCTRLn\[FWMARK\]](#), the associated RDYn flag is asserted. Masking for this exception is controlled by the [IE\[FWMIEn\]](#) and [DE\[FWMDEn\]](#) control bits. When RDYn is asserted and mask control bit [IE\[FWMIEn\]](#) is set, a watermark interrupt request is issued. When RDYn is asserted and mask control bit [DE\[FWMDEn\]](#) is set, a DMA request is issued.

The other exception sources can only generate interrupts and do not have a DMA request option. Each of these sources has a mask control bit in the IE register and no corresponding bit in the DE register.

Table 308. ADC Interrupts and DMA Requests

Status Register (STAT)		Description	Can generate		
Flag	Name		Interrupt?	DMA Request?	Low Power Wakeup?
RDYn	Result FIFO n Ready Flag	Conversion result data is written to Result FIFO and has a watermark configurable trigger level to generate an exception request as controlled by FCTRLn[FWMARK] .	Y	Y	Y
FOFn	Result FIFO n Overflow Flag	Attempts to store data to the FIFO when the FIFO is full is an error condition.	Y	N	Y
TCOMP_INT	Trigger Completion Flag	A trigger sequence has been completed (all associated commands have been run).	Y	N	Y
TEXC_INT	High Priority Trigger Flag	A high priority trigger exception has occurred.	Y	N	Y

42.4 External signals

The ADC module supports analog channel inputs. ADC requires supply and ground connections.

Table 309. ADC signal descriptions

Signal	Description	I/O
V _{DDA}	Analog Power Supply	I
V _{SSA}	Analog Ground	I
CH0A - CHnA ¹	A-side Analog Channel Inputs	I

1. where n is the maximum channel number supported in the chip. See the chip-specific information for the number of channels supported on your device.

42.4.1 Analog channel inputs (CHnA)

[CMDLn\[ADCH\]](#) and [CMDLn\[CTYPE\]](#) control selection of individual input channels. Each ADC command independently makes a channel and conversion type selection.

NOTE

Some input channels from on-chip sources, such as temperature sensors and reference voltage sources, may only be connected to individual instances of ADC. Some input channel options in the field-setting descriptions may not be available for your device. See chip-specific information for the channels supported on this device.

42.5 Initialization

42.5.1 Calibration

The ADC module has multiple calibration functions that must be executed as part of ADC setup to achieve the specified accuracy. Calibration must be run after any reset and before a conversion is initiated. Prior to offset calibration or calibration, the user must configure the clock source and frequency of ADC for the clock source availability and needs of the application. ADC must be enabled ([CTRL\[ADCEN\]](#) = 1h) before a calibration function runs. If calibration is requested while the ADC is actively converting, that sequence completes before starting calibration.

Averaging multiple conversions can achieve improved accuracy during the calibration routines. It is recommended to set [CTRL\[CAL_AVGS\]](#) for minimum of 256 averaging during calibration steps. If the application uses ADC in a wide variety of configurations, the configuration for which the highest accuracy is required should be selected. Alternatively, multiple calibrations can be done for the different configurations.

42.5.1.1 Offset calibration

The [Offset Trim Register \(OFSTRIM\)](#) register is used to trim for ADC comparator offset voltage. The ADC supports an offset calibration function in which the OFSTRIM register is automatically updated. Below are the steps for executing the function.

1. Configure for the desired averaging via [CTRL\[CAL_AVGS\]](#). The minimum recommended setting is for 256 averaging ([CTRL\[CAL_AVGS\]](#) set to 0x8 or greater).
2. Initiate Offset Calibration by setting [CTRL\[CALOFS\]](#).
3. Poll the [STAT\[CAL_RDY\]](#) flag. When [STAT\[CAL_RDY\]](#) is asserted, the offset calibration function has completed and the OFSTRIM register has updated.

42.5.1.2 ADC Calibration

ADC includes hardware calibration logic in which the converter is calibrated for gain error and linearity error correction of the raw conversion result. The [GCR0\[GICALR\]](#) and [CAL_GAR](#) registers control calibration for the A-side converter. The ADC supports a calibration function in which the [CAL_GAR](#) registers are automatically updated. The calibration function also updates [GCC0\[GAIN_CAL\]](#) (associated with A-side calibration). For A-side calibration, a software calculation is required to derive [GCR0\[GICALR\]](#) from [GCC0\[GAIN_CAL\]](#). Below are the steps for completing calibration setup.

1. Execute [Offset calibration](#) steps. The [Offset Trim Register \(OFSTRIM\)](#) is used during calibration to trim for comparator offset voltage.
2. Configure for the desired averaging via [CTRL\[CAL_AVGS\]](#). The minimum recommended setting is for 256 averaging ([CTRL\[CAL_AVGS\]](#) set to 0x8 or greater).
3. Initiate the calibration routine by writing 1 to [CTRL\[CAL_REQ\]](#). [CTRL\[CAL_REQ\]](#) remains 1 until the CAL routine has been accepted by the ADC. After acceptance, [CTRL\[CAL_REQ\]](#) automatically becomes 0.
4. Poll [GCC0\[RDY\]](#) flag. When it is asserted, the hardware controlled A-side calibration operation is complete and [CAL_GAR](#) and [GCC0\[GAIN_CAL\]](#) registers are updated. The updated value in [GCC0\[GAIN_CAL\]](#) is needed for further software processing described in the following steps.

5. Read [GCC0\[GAIN_CAL\]](#) and store for use in the gain_adjustment calculation.
6. Calculate the A-side gain_adjustment = $(131072)/(131072 - \text{GCC0[GAIN\_CAL]})$. GCC0[GAIN_CAL] is a 16-bit signed value. This results in a floating point value between 0 and 2.
7. Convert the floating point value to its integer component (0 or 1) and its fractional component rounded to 16-bits. The integer value is stored to GCR0[GCALR[16]] and the fractional component is stored to GCR0[GCALR[15:0]]. Write this value to the [GCR0\[GCALR\]](#) register.
8. Once GCR0[GCALR] contains the result from the gain_adjustment calculation, set the GCR0[RDY] flag to indicate it is valid.

After completing the steps above, the calibration sequence is complete and the [STAT\[CAL_RDY\]](#) flag is set. The STAT[CAL_RDY] flag remains set until the user resets the system or requests a new calibration sequence.

When STAT[CAL_RDY] is set, the ADC is configured to run in calibrated mode. Each conversion uses a combination of linearity and gain calibration results to correct SAR data. Calibration conversion latency is required to process each sample. However, due to the pipelined nature of data and control sequences, each conversion can still be initiated without experiencing this calibration delay.

42.5.1.3 Calibration General A-Side Register valid ranges

The general calibration value registers CAL_GARa have 34 registers in each array. The data in each register is a signed 16-bit value but has a variable range of possible values. The following table defines the valid range each register supports.

Table 310. Calibration General Registers Valid Values

Element CAL_GxR[N]	Valid Range
N = 0x00, 0x20	–1024 to +1023
N = 0x01	–2048 to +2047
N = 0x02–0x03	–4096 to +4095
N = 0x04–0x07	–8192 to +8191
N = 0x08–0x0F	–16384 to +16383
N = 0x10–0x1F, 0x21	–32768 to +32767

These registers are typically updated automatically during the self calibration sequence. To reduce the latency associated with ADC setup, the CAL_GxR values from a calibration sequence can be stored in non-volatile memory after an initial calibration and written to the CAL_GxR registers via software prior to the first ADC conversion. If these registers are set to values not generated by the calibration function, the linearity error specifications may not be met. Note, these values can only be written in a single access, byte accesses are not supported.

42.5.1.4 High speed calibration

The [High Speed Trim Register \(HSTRIM\)](#) register is used to trim for high speed mode conversions (when CFG2[HS] is set). The ADC supports a high speed calibration function in which the HSTRIM register is automatically updated. Below are the steps for executing the function.

1. Configure for the desired averaging via [CTRL\[CAL_AVGS\]](#). The minimum recommended setting is for 256 averaging (CTRL[CAL_AVGS] set to 0x8 or greater).
2. Initiate High speed calibration by setting [CTRL\[CALHS\]](#).
3. Poll the [STAT\[CAL_RDY\]](#) flag. When STAT[CAL_RDY] is asserted, the high speed calibration function has completed and the HSTRIM register has updated.

42.6 ADC register descriptions

This section describes the ADC registers.

NOTE

Writing to a read-only (RO) register can cause bus errors.

42.6.1 ADC memory map

HSADC0 base address: 400A_F000h

HSADC1 base address: 400B_0000h

HSADC2 base address: 400F_0000h

HSADC3 base address: 400F_1000h

Offset	Register	Width (In bits)	Access	Reset value
0h	Version ID Register (VERID)	32	R	0200_1409h
4h	Parameter Register (PARAM)	32	R	0707_0804h
10h	Control Register (CTRL)	32	RW	0000_0000h
14h	Status Register (STAT)	32	RW	0000_0000h
18h	Interrupt Enable Register (IE)	32	RW	0000_0000h
1Ch	DMA Enable Register (DE)	32	RW	0000_0000h
20h	Configuration Register (CFG)	32	RW	0080_0000h
24h	Pause Register (PAUSE)	32	RW	0000_0000h
34h	Software Trigger Register (SWTRIG)	32	RW	0000_0000h
38h	Trigger Status Register (TSTAT)	32	RW	0000_0000h
40h	Offset Trim Register (OFSTRIM)	32	RW	0000_0000h
48h	High Speed Trim Register (HSTRIM)	32	RW	0000_0000h
A0h - ACh	Trigger Control Register (TCTRL0 - TCTRL3)	32	RW	0000_0000h
E0h	FIFO Control Register (FCTRL0)	32	RW	0000_0000h
F0h	Gain Calibration Control (GCC0)	32	R	0000_0000h
F8h	Gain Calculation Result (GCR0)	32	RW	0001_0000h
100h	Command Low Buffer Register (CMDL1)	32	RW	0000_0000h
104h	Command High Buffer Register (CMDH1)	32	RW	0000_0000h
108h	Command Low Buffer Register (CMDL2)	32	RW	0000_0000h
10Ch	Command High Buffer Register (CMDH2)	32	RW	0000_0000h
110h	Command Low Buffer Register (CMDL3)	32	RW	0000_0000h
114h	Command High Buffer Register (CMDH3)	32	RW	0000_0000h

Table continues on the next page...

Table continued from the previous page...

Offset	Register	Width (In bits)	Access	Reset value
118h	Command Low Buffer Register (CMDL4)	32	RW	0000_0000h
11Ch	Command High Buffer Register (CMDH4)	32	RW	0000_0000h
120h	Command Low Buffer Register (CMDL5)	32	RW	0000_0000h
124h	Command High Buffer Register (CMDH5)	32	RW	0000_0000h
128h	Command Low Buffer Register (CMDL6)	32	RW	0000_0000h
12Ch	Command High Buffer Register (CMDH6)	32	RW	0000_0000h
130h	Command Low Buffer Register (CMDL7)	32	RW	0000_0000h
134h	Command High Buffer Register (CMDH7)	32	RW	0000_0000h
200h - 218h	Compare Value Register (CV1 - CV7)	32	RW	0000_0000h
300h	Data Result FIFO Register (RESFIFO0)	32	R	0000_0000h
400h - 484h	Calibration General A-Side Registers (CAL_GAR0 - CAL_GAR33)	32	RW	0000_0000h
FF8h	Configuration 2 Register (CFG2)	32	RW	0000_1000h

42.6.2 Version ID Register (VERID)

Offset

Register	Offset
VERID	0h

Function

The Version ID register indicates the version integrated for this instance on the device and also indicates inclusion/exclusion of several optional features.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	MAJOR								MINOR							
W																
Reset	0	0	0	0	0	0	1	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0	NUM_FIFO			NUM_SEC	CALO_FSI	IADCK_I	VR1R_NGI	0	CSW			MVI	0	DIFFE_N	RES
W																
Reset	0	0	0	1	0	1	0	0	0	0	0	0	1	0	0	1

Fields

Field	Function
31-24 MAJOR	Major Version Number This read-only field returns the major version number for the module specification.
23-16 MINOR	Minor Version Number This read-only field returns the minor version number for the module specification.
15 —	Reserved This read-only field is reserved and always has the value 0.
14-12 NUM_FIFO	Number of FIFOs This read-only field indicates the number of result FIFOs implemented in the design. 000b - N/A 001b - This design supports one result FIFO. 010b - This design supports two result FIFOs. 011b - This design supports three result FIFOs. 100b - This design supports four result FIFOs.
11 NUM_SEC	Number of Single Ended Outputs Supported This read-only field indicates the number of single ended channels which can be processed simultaneously. 0b - This design supports one single ended conversion at a time. 1b - This design supports two simultaneous single ended conversions.
10 CALOFSI	Calibration Function Implemented This read-only field indicates if the ADC contains hardware calibration functions. When supported, CTRL[CALOFS] and CTRL[CAL_REQ] can be used to request the calibration routines to run. 0b - Calibration Not Implemented. 1b - Calibration Implemented.
9 IADCKI	Internal ADC Clock Implemented This read-only field indicates if this implementation of the ADC block includes an internal clock source. When supported, the CFG[ADCKEN] field is available and documented for enabling the clock source. When available, this clock source is used in clock selection logic external to the module for use within the system. 0b - Internal clock source not implemented. 1b - Internal clock source (and CFG[ADCKEN]) implemented.
8 VR1RNGI	Voltage Reference 1 Range Control Bit Implemented

Table continues on the next page...

Table continued from the previous page...

Field	Function
	This read-only field indicates if a control bit is implemented for selecting the input voltage range on Voltage Reference Option 1. When range control is required, the CFG[VREF1RNG] field is available and documented for controlling the Voltage Reference Option 1. 0b - Range control not required. CFG[VREF1RNG] is not implemented. 1b - Range control required. CFG[VREF1RNG] is implemented.
7 —	Reserved This read-only field is reserved and always has the value 0.
6-4 CSW	Channel Scale Width This read-only field indicates if channel scaling is supported by this implementation. When supported, each command buffer has a control field (CMDLa[CSCALE]) for setting input scaling. 000b - Channel scaling not supported. 001b - Channel scaling supported. 1-bit CSCALE control field. 110b - Channel scaling supported. 6-bit CSCALE control field.
3 MVI	Multi Vref Implemented This read-only field indicates if multiple Voltage Reference High inputs are supported by this implementation. When multiple voltage references are supported, the CFG[REFSEL] field is available and documented for selecting the Voltage Reference High options. 0b - Single voltage reference high (VREFH) input supported. 1b - Multiple voltage reference high (VREFH) inputs supported.
2 —	Reserved This read-only field is reserved and always has the value 0.
1 DIFFEN	Differential Supported This read-only field indicates if differential operation is supported by this implementation. When supported, CMDLa[CTYPE] in each command buffer is used for configuring for differential operation. 0b - Differential operation not supported. 1b - Differential operation supported.
0 RES	Resolution This read-only field indicates the maximum accuracy supported by this implementation. When RES=1, each command buffer has a control field (CMDLa[MODE]) for selecting resolution of conversions for the associated command. 0b - Up to 12-bit single ended resolution supported (and 13-bit differential resolution if VERID[DIFFEN] = 1b). 1b - Up to 16-bit single ended resolution supported (and 16-bit differential resolution if VERID[DIFFEN] = 1b).

42.6.3 Parameter Register (PARAM)

Offset

Register	Offset
PARAM	4h

Function

The Parameter register indicates the size of several variable integration options for this instance on the device.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	CMD_NUM								CV_NUM							
W																
Reset	0	0	0	0	0	1	1	1	0	0	0	0	0	1	1	1
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	FIFOSIZE								TRIG_NUM							
W																
Reset	0	0	0	0	1	0	0	0	0	0	0	0	0	1	0	0

Fields

Field	Function
31-24 CMD_NUM	Command Buffer Number Number of command buffers implemented.
23-16 CV_NUM	Compare Value Number Number of compare value registers implemented.
15-8 FIFOSIZE	Result FIFO Depth The maximum number of conversion datawords that can be stored in the result FIFO before an overflow occurs. This field is read-only. 0000_0001b - Result FIFO depth = 2 dataword. 0000_0100b - Result FIFO depth = 4 datawords. 0000_1000b - Result FIFO depth = 8 datawords. 0001_0000b - Result FIFO depth = 16 datawords. 0010_0000b - Result FIFO depth = 32 datawords. 0100_0000b - Result FIFO depth = 64 datawords.
7-0 TRIG_NUM	Trigger Number Number of Triggers implemented.

42.6.4 Control Register (CTRL)

Offset

Register	Offset
CTRL	10h

Function

Control Register includes primary control bits.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0								0				CAL_AVGS			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0							0	0	CALH	0	CALO	CAL_	DOZE	RST	ADCE
W								RSTFI		S		FS	REQ	N		N
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-25 —	Reserved This read-only field is reserved and always has the value 0.
24-20 —	Reserved This read-only field is reserved and always has the value 0.
19-16 CAL_AVGS	Auto-Calibration Averages Selects how many ADC conversions are averaged to calculate each calibration value. Selecting a higher number of averages will lead to more accurate conversions after completing calibration. The recommended minimum setting is for 256 averaging (CAL_AVGS set to 0x8 or greater). The CAL_AVGS bit field applies to CALOFS, CAL_REQ and CALHS calibration functions. CAL_AVGS should be fixed when requesting and running calibration with CTRL[CAL_REQ], CTRL[CALOFS], or CTRL[CALHS]. . 0000b - Single conversion. 0001b - 2 conversions averaged. 0010b - 4 conversions averaged. 0011b - 8 conversions averaged.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0100b - 16 conversions averaged. 0101b - 32 conversions averaged. 0110b - 64 conversions averaged. 0111b - 128 conversions averaged. 1000b - 256 conversions averaged. 1001b - 512 conversions averaged. 1010b - 1024 conversions averaged.
15-9 —	Reserved This read-only field is reserved and always has the value 0.
8 RSTFIFO0	Reset FIFO 0 0b - No effect. 1b - FIFO 0 is reset.
7 —	Reserved This read-only field is reserved and always has the value 0.
6 CALHS	High Speed Mode Trim Request Setting CALHS to 1 initiates a high speed mode trim calculation. Any conversions in progress are completed before launching the high speed mode calibration function. After being accepted, the ADC calculates the trim value and updates the HSTRIM register automatically. The CALHS bit is cleared by hardware upon completion of the high speed mode trim calculation. The STAT[CAL_RDY] bit indicates when the high speed mode calibration routine has completed. 0b - No request for high speed mode trim has been made 1b - Request for high speed mode trim has been made
5 —	Reserved This read-only field is reserved and always has the value 0.
4 CALOFS	Offset Calibration Request Setting CALOFS to 1 initiates a hardware offset calibration calculation. Any conversions in progress are completed before launching the offset calibration function. After being accepted, the ADC calculates the offset value and updates either the OFSTRIM register automatically. The CALOFS bit is cleared by hardware upon completion of the offset calibration calculation. The STAT[CAL_RDY] bit indicates when the offset calibration routine has completed. 0b - No request for offset calibration has been made 1b - Request for offset calibration function
3 CAL_REQ	Auto-Calibration Request

Table continues on the next page...

Table continued from the previous page...

Field	Function
	Request the hardware calibration routine to run. This bit is automatically cleared when the system accepts the hardware calibration request. Note, the status flag STAT[<i>CAL_RDY</i>] will indicate when this calibration routine has been completed. 0b - No request for hardware calibration has been made 1b - A request for hardware calibration has been made
2 DOZEN	Doze Enable Controls system transition to low power modes while ADC is converting. When DOZEN is clear, immediate entries to low power modes are allowed. Note that the selected clock source provided from the on-chip clock source must be able to continue operating. When the DOZEN bit is set, the ADC waits for the current averaging iteration/FIFO storage to complete. When the system is entering a low power mode in which ADC operation is not supported, the DOZEN bit is ignored and the ADC waits for the current transfer to complete any pending operation. 0b - ADC is enabled in low power mode. 1b - ADC is disabled in low power mode.
1 RST	Software Reset Resets all internal logic and registers, except ADC_CTRL, ADC_GCRn and ADC_CAL_GARn. Remains set until cleared by software. 0b - ADC logic is not reset. 1b - ADC logic is reset.
0 ADCEN	ADC Enable 0b - ADC is disabled. 1b - ADC is enabled.

42.6.5 Status Register (STAT)


Offset

Register	Offset
STAT	14h

Function

The Status Register provides the current status of the ADC module.

Diagram

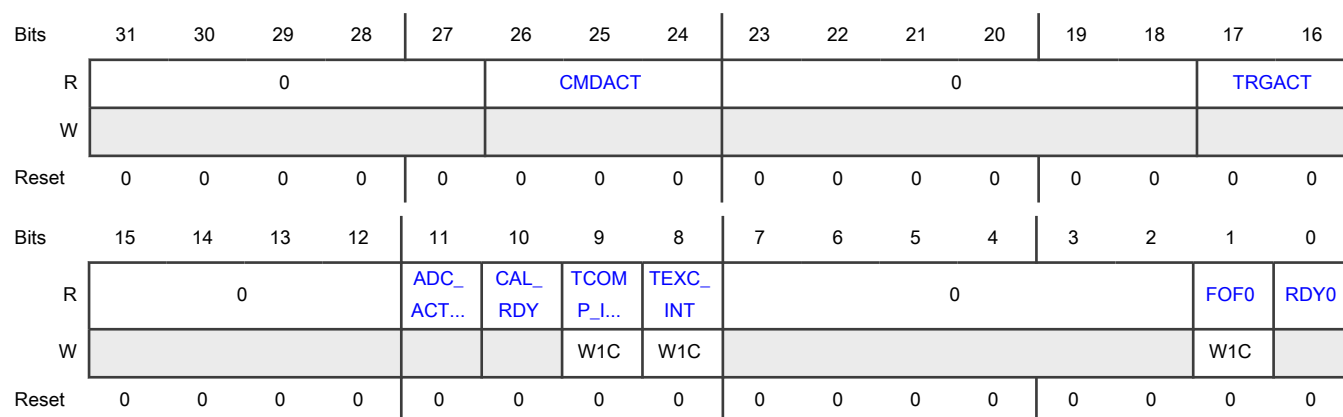

Fields

Field	Function
31-27 —	Reserved This read-only field is reserved and always has the value 0.
26-24 CMDACT	Command Active CMDACT is a read-only status field indicating the command that is actively being processed. Note, commands are only shown here when they are actively being processed by the SAR routine. Use CMDACT in conjunction with ADC_ACTIVE to determine which conversion is running. 000b - No command is currently in progress. 001b - Command 1 currently being executed. 010b - Command 2 currently being executed. 011b-111b - Associated command number is currently being executed.
23-18 —	Reserved This read-only field is reserved and always has the value 0.
17-16 TRGACT	Trigger Active TRGACT is a read-only status field indicating the trigger actively being processed. This can be used to determine which trigger is running through a trigger delay or being converted by the SAR routine. The command associated with TRGACT will be running through a conversion when CMDACT is non-zero. 00b - Command (sequence) associated with Trigger 0 currently being executed. 01b - Command (sequence) associated with Trigger 1 currently being executed. 10b - Command (sequence) associated with Trigger 2 currently being executed. 11b - Command (sequence) associated with Trigger 3 currently being executed.
15-12 —	Reserved This read-only field is reserved and always has the value 0.
11	ADC Active

Table continues on the next page...

Table continued from the previous page...

Field	Function
ADC_ACTIVE	This flag shows if the module is currently processing a conversion, or has pending triggers to service. When the ADC is IDLE, this bit is set to 0b0. 0b - The ADC is IDLE. There are no pending triggers to service and no active commands are being processed. 1b - The ADC is processing a conversion, running through the power up delay, or servicing a trigger.
10 CAL_RDY	Calibration Ready This flag shows if the ADC CTRL[CAL_REQ] or CTRL[CALOFS] request for calibration has been completed and the results are ready. This flag is automatically cleared when a new hardware calibration or OFSTRIM request is made. 0b - Calibration is incomplete or hasn't been ran. 1b - The ADC is calibrated.
9 TCOMP_INT	Interrupt Flag For Trigger Completion When a trigger sequence has been completed (all associated commands have been run) the TCOMP_INT flag is asserted. Note that IE[TCOMP_IE] must be set for the specific trigger source to flag an interrupt upon completion. 0b - Either IE[TCOMP_IE] is set to 0, or no trigger sequences have run to completion. 1b - Trigger sequence has been completed and all data is stored in the associated FIFO.
8 TEXC_INT	Interrupt Flag For High Priority Trigger Exception When a high priority trigger exception has occurred and CFG[TRES] = 0, this flag is asserted. This flag only asserts if trigger exception interrupts are enabled (IE[TEXC_IE] = 0x1). This flag can be used in conjunction with TSTAT[TEXC_NUM] to resolve which trigger source was interrupted. 0b - No trigger exceptions have occurred. 1b - A trigger exception has occurred and is pending acknowledgement.
7-2 —	Reserved This read-only field is reserved and always has the value 0.
1 FOF0	Result FIFO 0 Overflow Flag Indicates that more data has been written to the Result FIFO 0 than it can hold. The newer data is not stored and the FIFO remains holding the original contents. This flag asserts regardless of the value of IE[FOFIE0]. However, an interrupt request is issued only if IE[FOFIE0] is set. This flag is cleared by writing a 1. 0b - No result FIFO 0 overflow has occurred since the last time the flag was cleared. 1b - At least one result FIFO 0 overflow has occurred since the last time the flag was cleared.
0 RDY0	Result FIFO 0 Ready Flag Indicates when the number of valid datawords in the result FIFO 0 is greater than the watermark level set in the FCTRL[FWMARK] bitfield. This flag asserts regardless of the value of IE[FWMIE0]. However,

Table continues on the next page...

Table continued from the previous page...

Field	Function
	an interrupt request or DMA request occurs only when the associated control bit (IE[FWMIE0] and DE[FWMDE0]) is set. This flag is cleared when the FCTRLa[FCOUNT] (which decrements on each read of the RESFIFO register) is less than or equal to the watermark level set in the FCTRL[FWMARK] bitfield. 0b - Result FIFO 0 data level not above watermark level. 1b - Result FIFO 0 holding data above watermark level.

42.6.6 Interrupt Enable Register (IE)

Offset

Register	Offset
IE	18h

Function

Interrupt Enable Register includes system interrupt masking control bits.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0												TCOMP_IE			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0							TEXC_ IE	0					FOFIE 0		FWMI E0
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-20 —	Reserved This read-only field is reserved and always has the value 0.
19-16 TCOMP_IE	Trigger Completion Interrupt Enable Each bit in TCOMP_IE corresponds to a trigger source. (TCOMP_IE[0] corresponds to trigger 0, TCOMP_IE[1] corresponds to trigger 1, ...) A trigger completion interrupt is used to indicate when a complete trigger command sequence has been executed. All results will be stored in the FIFO when a sequence is considered complete.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0000b - Trigger completion interrupts are disabled. 0001b - Trigger completion interrupts are enabled for trigger source 0 only. 0010b - Trigger completion interrupts are enabled for trigger source 1 only. 0011b-1110b - Associated trigger completion interrupts are enabled. 1111b - Trigger completion interrupts are enabled for every trigger source.
15-9 —	Reserved This read-only field is reserved and always has the value 0.
8 TEXC_IE	Trigger Exception Interrupt Enable This register field enables the ADC to assert an interrupt request when a high priority trigger exception occurs. TSTAT[TEXC_NUM] will contain the value of the corresponding trigger which was affected by the exception. 0b - Trigger exception interrupts are disabled. 1b - Trigger exception interrupts are enabled.
7-2 —	Reserved This read-only field is reserved and always has the value 0.
1 FOFIE0	Result FIFO 0 Overflow Interrupt Enable Configures the module to generate overflow interrupt requests when FOF flag is asserted. 0b - FIFO 0 overflow interrupts are not enabled. 1b - FIFO 0 overflow interrupts are enabled.
0 FWMIE0	FIFO 0 Watermark Interrupt Enable Configures the module to generate watermark interrupt requests when STAT[RDY0] flag is asserted. 0b - FIFO 0 watermark interrupts are not enabled. 1b - FIFO 0 watermark interrupts are enabled.

42.6.7 DMA Enable Register (DE)


Offset

Register	Offset
DE	1Ch

Function

DMA Enable Register includes DMA request masking control bits.

Diagram

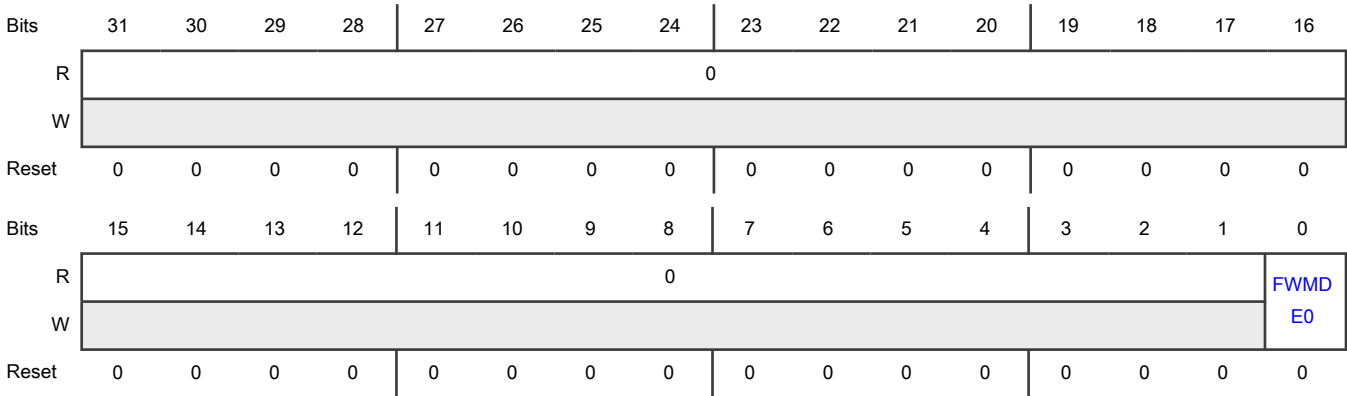

Fields

Field	Function
31-1	Reserved
—	This read-only field is reserved and always has the value 0.
0	FIFO 0 Watermark DMA Enable
FWMDE0	Configures the module to generate DMA requests when STAT[RDY0] flag is asserted. 0b - DMA request disabled. 1b - DMA request enabled.

42.6.8 Configuration Register (CFG)


Offset

Register	Offset
CFG	20h

Function

The Configuration Register controls ADC functions that are common to all commands. The CFG cannot be changed while the CTRL[ADCEN] bit is set. Writes to CFG while CTRL[ADCEN] is set are ignored.

Diagram

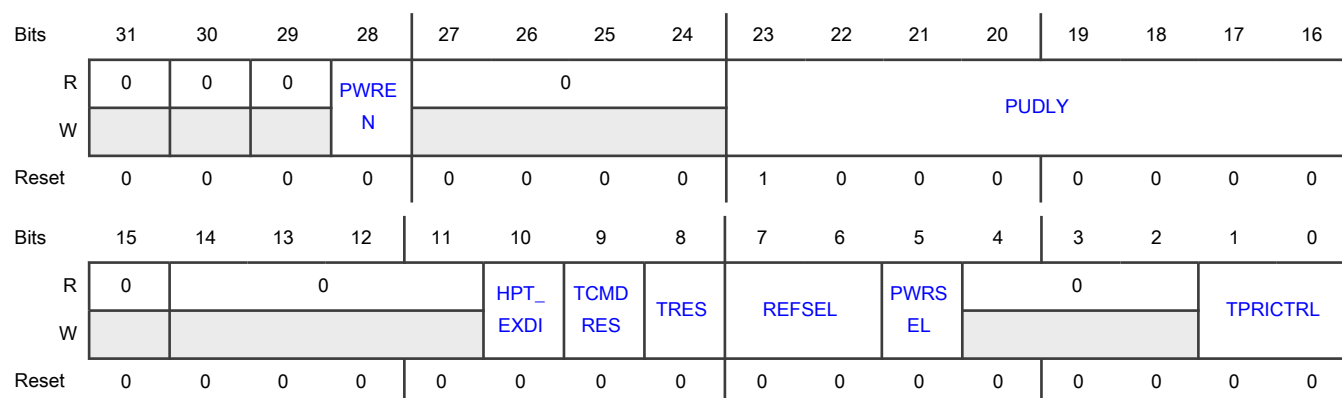

Fields

Field	Function
31 —	Reserved This read-only field is reserved and always has the value 0.
30 —	Reserved This read-only field is reserved and always has the value 0.
29 —	Reserved This read-only field is reserved and always has the value 0.
28 PWREN	ADC Analog Pre-Enable Enables the ADC analog circuits. When setting CFG[PWREN], user code should delay for a period exceeding the analog startup time of $t_{ADCSTUP}$ before enabling the ADC for operation. The module is still operational even when CFG[PWREN] is left clear but command execution start is delayed for a period defined by CFG[PUDLY]. Refer to the device datasheet for ADC idle and ADC active power consumption parameters. 0b - ADC analog circuits are only enabled while conversions are active. Performance is affected due to analog startup delays. 1b - ADC analog circuits are pre-enabled and ready to execute conversions without startup delays (at the cost of higher DC current consumption). Note that a single power up delay (CFG[PUDLY]) is executed immediately once PWREN is set, and any detected trigger does not begin ADC operation until the power up delay time has passed. After this initial delay expires the analog remains pre-enabled and no additional delays are executed.
27-24 —	Reserved This read-only field is reserved and always has the value 0.
23-16 PUDLY	Power Up Delay The PUDLY must be programmed to a non-zero value to enable the ADC. Note, the PUDLY is executed in one of two modes depending on the value configured in PWREN:

Table continues on the next page...

Table continued from the previous page...

Field	Function
	When CFG[PWREN]=0b0, the ADC analog circuits are only powered on while the module is active. The delay defined by CFG[PUDLY] is executed after an initial trigger transitions the ADC from its Idle state. This delay allows time for the analog circuits to stabilize after being powered on. The startup delay count of (PUDLY*4) ADCK cycles must result in a longer delay than the analog startup time of $t_{ADCSTUP}$. Accuracy of the initial conversion(s) after activation is degraded if CFG[PUDLY] is set to too small a value. At the end of active conversions, if there are no subsequent pending conversions, the ADC analog is automatically reverted back to its low power idle state and the PUDLY runs again after the ADC is awakened with a later trigger. When CFG[PWREN]=0b1 prior to ADC activation, the analog circuits are pre-enabled and the activation delay defined by CFG[PUDLY] is executed immediately. After the delay has been executed, the analog remains enabled regardless of ADC activity. This configuration has the benefit of beginning conversions immediately after trigger event detection at the cost of increased DC power consumption of the analog circuits. Note, the ADC does not begin an initial conversion until the PUDLY has been executed regardless of the PWREN setting.
15 —	Reserved This read-only field is reserved and always has the value 0.
14-11 —	Reserved This read-only field is reserved and always has the value 0.
10 HPT_EXDI	High Priority Trigger Exception Disable Determines if high priority trigger exceptions are disabled. See section Trigger detect and command execution for a detailed description on trigger exception handling. If HPT_EXDI = 1, then exceptions are disabled and fields CFG[TCMDRES], CFG[TRES], and CFG[TPRCTRL] are ignored. 0b - High priority trigger exceptions are enabled. 1b - High priority trigger exceptions are disabled.
9 TCMDRES	Trigger Command Resume Determines where to resume from a high priority trigger exception. CFG[TRES] must be asserted for TCMDRES to be used. If asserted, the interrupted trigger sequence is resumed from the command where it was interrupted. If de-asserted the trigger sequence is restarted from the beginning. 0b - Trigger sequences interrupted by a high priority trigger exception is automatically restarted. 1b - Trigger sequences interrupted by a high priority trigger exception is resumed from the command executing before the exception.
8 TRES	Trigger Resume Enable Determines what happens after completing a high priority trigger exception. If CFG[TRES] is asserted, the interrupted trigger sequence is resumed or restarted automatically. The sequence can be resumed along command boundaries or restarted from the beginning of a sequence. This is controlled by CFG[TCMDRES]. If CFG[TRES] is de-asserted an interrupted trigger sequence does not resume automatically. In this case, interrupted triggers can be resumed via software by monitoring STAT[TEXC_INT] bit (or ISR handling for a trigger exception interrupt when IE[TEXC_IE] is set). Software determines which trigger was

Table continues on the next page...

Table continued from the previous page...

Field	Function
	interrupted by reading TSTAT[TEXC_NUM] and re-starts the trigger with a write of 1 to the corresponding SWTRIG[SWTx] bit. 0b - Trigger sequences interrupted by a high priority trigger exception are not automatically resumed or restarted. 1b - Trigger sequences interrupted by a high priority trigger exception are automatically resumed or restarted.
7-6 REFSEL	Voltage Reference Selection Selects the voltage reference high used for conversions. NOTE See the chip-specific ADC information on the voltage reference options specific to this packaged device. 00b - (Default) Option 1 setting. 01b - Option 2 setting. 10b - Option 3 setting. 11b - Reserved
5 PWRSEL	Power Configuration Select Configures the module for power and performance. In the high-power setting, the highest conversion rates are possible. See the device data sheet for power and performance capabilities for each setting. 0b - Low power 1b - High power
4-2 —	Reserved
1-0 TPRCTRL	ADC Trigger Priority Control Controls how higher priority trigger exceptions are handled. See Trigger detect and command execution for a detailed explanation trigger event handling. 00b - If a higher priority trigger is detected during command processing, the current conversion is aborted and the new command specified by the trigger is started. 01b - If a higher priority trigger is received during command processing, the current command is stopped after completing the current conversion. If averaging is enabled, the averaging loop will be completed. However, CMDHa[LOOP] will be ignored and the higher priority trigger will be serviced. 10b - If a higher priority trigger is received during command processing, the current command will be completed (averaging, looping, compare) before servicing the higher priority trigger. 11b - Reserved

42.6.9 Pause Register (PAUSE)

Offset

Register	Offset
PAUSE	24h

Function

The Pause Register controls an optional inserted delay between conversions. Note, the PAUSE register should not be modified while the CTRL[ADCEN] bit is set.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	PAUSEEN	0														
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0								PAUSEDLY							
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31 PAUSEEN	PAUSE Option Enable Enables the ADC pausing function. When enabled, a programmable delay is inserted during command execution sequencing between LOOP iterations, between commands in a sequence, and between conversions when command is executing in for "Compare Until True" configuration. Note, CMDHa[WAIT_TRIG] and PAUSE are mutually exclusive. CMDHa[WAIT_TRIG] will take priority over PAUSE between commands when both are enabled. 0b - Pause operation disabled 1b - Pause operation enabled
30-9 —	Reserved This read-only field is reserved and always has the value 0.
8-0 PAUSEDLY	Pause Delay When PAUSEEN is set, the PAUSEDLY field controls the duration of pausing during command execution sequencing. The pause delay is a count of (PAUSEDLY*4) ADCK cycles.

42.6.10 Software Trigger Register (SWTRIG)

Offset

Register	Offset
SWTRIG	34h

Function

The Software Trigger Register (SWTRIG) is written to initiate software triggered conversions. Writes to SWTRIG register are ignored while CTRL[ADCEN] is clear. Note that there is an approximately 3 ADC Clock cycle synchronization delay between asserting CTRL[ADCEN] until SWTRIG can be accepted.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0												0	0	0	0
W													SWT3	SWT2	SWT1	SWT0
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-4 —	Reserved This read-only field is reserved and always has the value 0.
3 SWT3	Software Trigger 3 Event Write 1 to SWT3 generates a trigger 3 event. Writing 1 to SWT3 is ignored while the trigger 3 event is being serviced or is pending. 0b - No trigger 3 event generated. 1b - Trigger 3 event generated.
2 SWT2	Software Trigger 2 Event Write 1 to SWT2 generates a trigger 2 event. Writing 1 to SWT2 is ignored while the trigger 2 event is being serviced or is pending. 0b - No trigger 2 event generated. 1b - Trigger 2 event generated.
1	Software Trigger 1 Event

Table continues on the next page...

Table continued from the previous page...

Field	Function
SWT1	Write 1 to SWT1 generates a trigger 1 event. Writing 1 to SWT1 is ignored while the trigger 1 event is being serviced or is pending. 0b - No trigger 1 event generated. 1b - Trigger 1 event generated.
0 SWT0	Software Trigger 0 Event Write 1 to SWT0 generates a trigger 0 event. Writing 1 to SWT0 is ignored while the trigger 0 event is being serviced or is pending. 0b - No trigger 0 event generated. 1b - Trigger 0 event generated.

42.6.11 Trigger Status Register (TSTAT)

Offset

Register	Offset
TSTAT	38h

Function

This register contains status flags to indicate when trigger sequences have been completed or interrupted by a high priority trigger exception. Each bit in this register is set by hardware and cleared by software. To clear a bit in this register, write a 0b1 to the corresponding bit position.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0												TCOMP_FLAG			
W													W1C			
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0												TEXC_NUM			
W													W1C			
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-20	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
—	This read-only field is reserved and always has the value 0.
19-16 TCOMP_FLAG	Trigger Completion Flag Each bit corresponds to a trigger. When the corresponding trigger sequence has been completed a bit in TCOMP_FLAG will be set. For example, if trigger 3 has been completed, then bit 19 will be set in TSTAT. This register will only be active if the corresponding bit in IE[TCOMP_IE] = 1. Note, synchronization delay may be added to the end of the final conversion in a sequence prior to this flag being set. This delay can range from 2-4 ADC CLK cycles. 0000b - No triggers have been completed. Trigger completion interrupts are disabled. 0001b - Trigger 0 has been completed and trigger 0 has enabled completion interrupts. 0010b - Trigger 1 has been completed and trigger 1 has enabled completion interrupts. 0011b-1110b - Associated trigger sequence has completed and has enabled completion interrupts. 1111b - Every trigger sequence has been completed and every trigger has enabled completion interrupts.
15-4 —	Reserved This read-only field is reserved and always has the value 0.
3-0 TEXC_NUM	Trigger Exception Number Each bit corresponds to a trigger. When the corresponding trigger sequence has been interrupted by a high priority trigger exception a 1 will be set in its bit position. For example, if trigger 3 has been interrupted, then bit 3 will be set in TSTAT. This register will be active regardless of the value in IE[TEXC_IE]. 0000b - No triggers have been interrupted by a high priority exception. Or CFG[TRES] = 1. 0001b - Trigger 0 has been interrupted by a high priority exception. 0010b - Trigger 1 has been interrupted by a high priority exception. 0011b-1110b - Associated trigger sequence has interrupted by a high priority exception. 1111b - Every trigger sequence has been interrupted by a high priority exception.

42.6.12 Offset Trim Register (OFSTRIM)

Offset

Register	Offset
OFSTRIM	40h

Function


The Offset Trim register is used to trim for comparator offset. The ADC supports an offset calibration function in which the OFSTRIM register is automatically updated.

To trigger the automatic update of OFSTRIM, set the CTRL[CALOFS] bit. Upon completion of the offset calibration sequence, the STAT[CAL_RDY] bit is set to 0b1 and the OFSTRIM[OFSTRIM] bitfield is updated with a 10-bit signed value.

The OFSTRIM[OFSTRIM] value is used to minimize offset for normal conversions with a range of -512 to 511. For 16-bit conversions, each increment is 1/2 LSB resulting in a programmable offset range of -256 to +255.5 LSB. For 12-bit conversions, each increment is 1/32 LSB resulting in a programmable offset range of -16 to +15.96875 LSB.

The OFSTRIM[OFSTRIM] trim value is also used in the calibration function.

Diagram

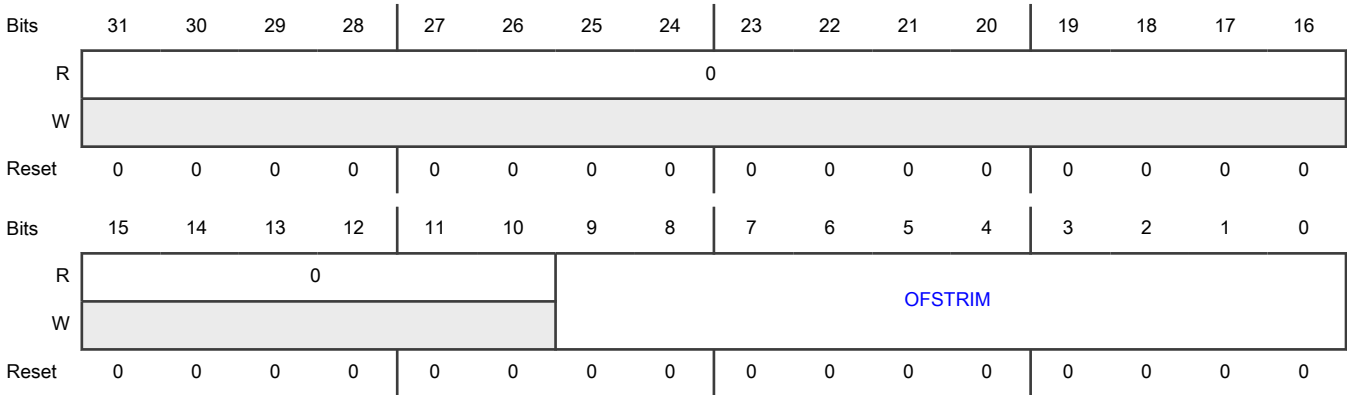

Fields

Field	Function
31-10	Reserved
—	This read-only field is reserved and always has the value 0.
9-0	Trim for Offset
OFSTRIM	OFSTRIM is a 10-bit signed value between -512 and 511. This value is subtracted from the raw ADC conversion result.

42.6.13 High Speed Trim Register (HSTRIM)

Offset

Register	Offset
HSTRIM	48h


Function

The High Speed Trim register is used to trim for high speed function. The ADC supports an additional offset calibration function for high speed mode in which the HSTRIM register is automatically updated.

To trigger the automatic update of HSTRIM, set the CTRL[CALHS] bit. Upon completion of the high speed calibration sequence, the STAT[CAL_RDY] bit is set to 0b1 and the HSTRIM[HSTRIM] bitfield is updated with a 5-bit signed value.

The HSTRIM[HSTRIM] value is used to minimize offset for high speed conversions (when CFG2[HS] is set). The HSTRIM register supports a range of -16 to 15.

Diagram

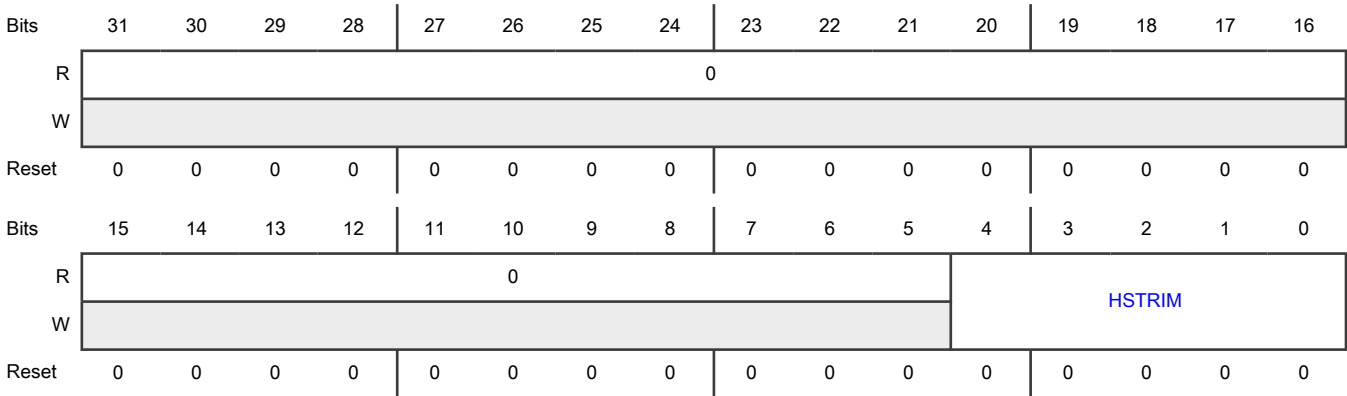

Fields

Field	Function
31-5	Reserved
—	This read-only field is reserved and always has the value 0.
4-0	Trim for High Speed Conversions
HSTRIM	HSTRIM is a 5-bit signed value between -16 and 15 that trims circuitry for high speed mode.

42.6.14 Trigger Control Register (TCTRL0 - TCTRL3)


Offset

Register	Offset
TCTRL0	A0h
TCTRL1	A4h
TCTRL2	A8h
TCTRL3	ACh

Function

The Trigger Control (TCTRL_a) register implements control fields associated with each implemented trigger source. When the ADC is actively executing commands, only one of the TCTRL_a registers is actively controlling ADC conversions. The actively controlling TCTRL_a register should not be updated while the ADC is active. A write to a TCTRL_a registers while that trigger control register is controlling the ADC operation may cause unpredictable behavior.

Diagram

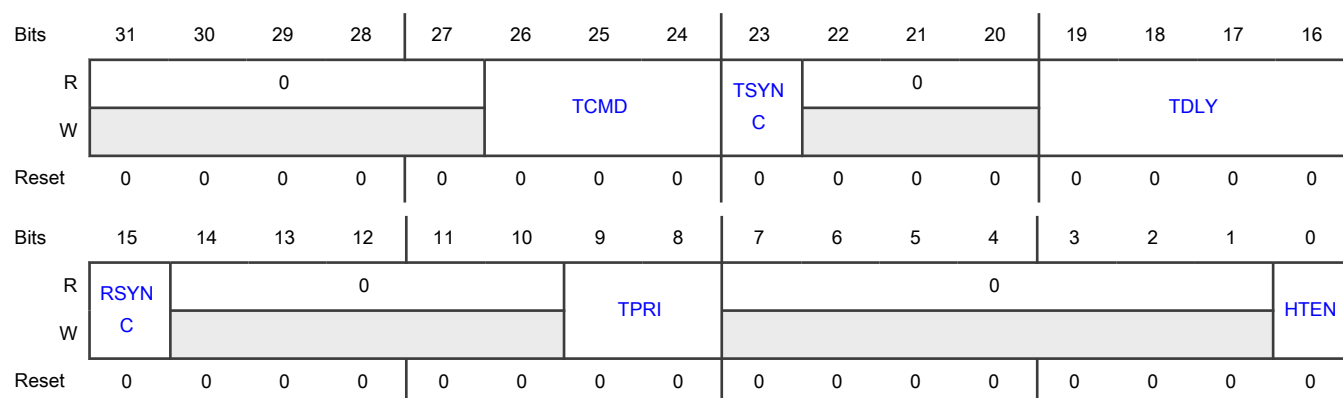

Fields

Field	Function
31-27 —	Reserved This read-only field is reserved and always has the value 0.
26-24 TCMD	Trigger Command Select Selects the command from command buffer to execute upon detection of the associated trigger event. When a trigger is received while the ADC is busy converting and the new trigger has higher priority than the trigger associated with the current command being executed, the command in this register, associated with the new trigger, is executed under control of CFG[TPRCTRL]. See section Trigger detect and command execution for a more detailed description on the relationship between CFG[TPRCTRL] and TCMD. 000b - Not a valid selection from the command buffer. Trigger event is ignored. 001b - CMD1 is executed 010b-110b - Corresponding CMD is executed 111b - CMD7 is executed
23 TSYNC	Trigger Synchronous Select When TSYNC is set it configures the Controller ADC and Target ADC's to support lock-step synchronous trigger conversions between the Controller ADC and Target ADC's. When TSYNC is enabled, ADC's should avoid asynchronous triggers (TSYNC==0) while the TSYNC trigger is enabled or active.
22-20 —	Reserved This read-only field is reserved and always has the value 0.
19-16 TDLY	Trigger Delay Select Selects the trigger delay duration to wait at the start of servicing a trigger event. Each trigger source has an associated programmable delay prior to beginning an initial conversion. When TDLY field is clear, then no delay is incurred. When TDLY is set to a non-zero value, the duration for the delay is 2^{TDLY} ADCK cycles.
15	Trigger Resync

Table continues on the next page...

Table continued from the previous page...

Field	Function
RSYNC	If RSYNC is set to 1, this trigger source will be used as a resync trigger. A resync trigger can be configured to restart or abort a running trigger sequence (the target). Each resync trigger is configured to have a resync target. When a resync trigger is asserted, the target sequence will be aborted, the target FIFO destination(s) will be cleared, and the target sequence can optionally be restarted depending on CFG[TRES]. Multiple conditions must be met for a resync trigger to execute properly. 1. The resync trigger must have higher priority than the resync target. 2. The resync trigger TCTRLa[RSYNC] must be set to 0b1. 3. The resync target, specified by TCTRLa[TCMD], must be executing when the resync trigger is asserted. Please see Resync functionality for more information.
14-10 —	Reserved This read-only field is reserved and always has the value 0.
9-8 TPRI	Trigger Priority Setting This bitfield sets the priority of the associated trigger source. If two or more triggers have the same priority level setting, the lower order trigger event has the higher priority (e. g., if Trigger 0 and Trigger 1 are both pending triggers and TCTRL0[TPRI] is configured the same as TCTRL1[TPRI], then the command associated with Trigger 0 is serviced first). 00b - Set to highest priority, Level 1 01b-10b - Set to corresponding priority level 11b - Set to lowest priority, Level 4
7-1 —	Reserved This read-only field is reserved and always has the value 0.
0 HTEN	Trigger Enable Enables hardware trigger source to initiate conversion on the rising-edge of the input trigger source. NOTE Enabling hardware trigger will not disable software triggers. 0b - Hardware trigger source disabled 1b - Hardware trigger source enabled

42.6.15 FIFO Control Register (FCTRL0)


Offset

Register	Offset
FCTRL0	E0h

Function

The FIFO Control (FCTRLa) registers contain control and status fields for each FIFO in the design. A programmable watermark can be set for each FIFO which can be used to trigger an interrupt. In addition, the number of entries stored in each FIFO can be monitored by reading FCTRLa[FCOUNT].

Diagram

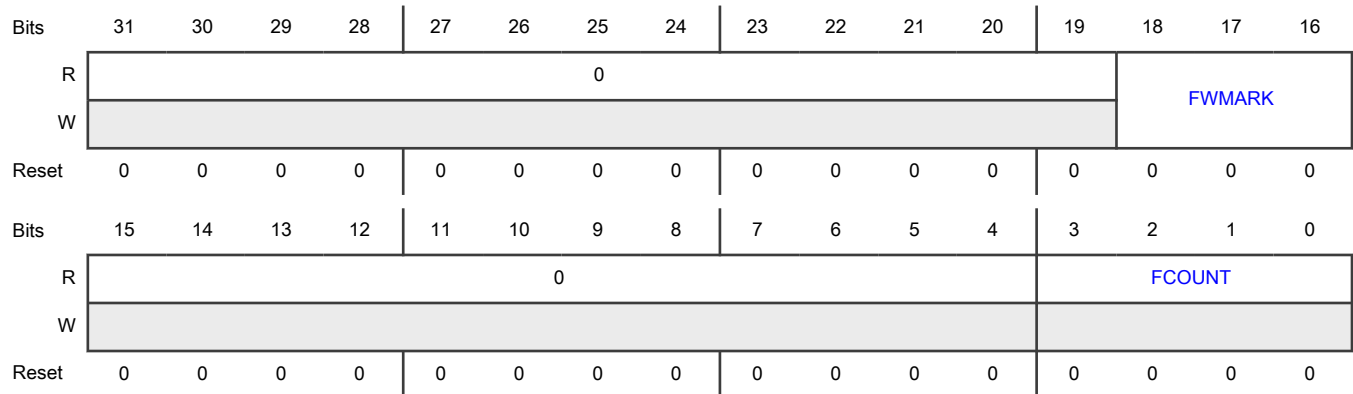

Fields

Field	Function
31-19 —	Reserved This read-only field is reserved and always has the value 0.
18-16 FWMARK	Watermark Level Selection FWMARK is a programmable threshold setting. When the number of datawords stored in the ADC Result FIFO is greater than the value in FWMARK, the STAT[RDY] flag is asserted to indicate stored data has reached the programmable threshold. When IE[FWMIE] is set, an interrupt request is generated. When DE[FWMDE] is set, a DMA request is generated.
15-4 —	Reserved This read-only field is reserved and always has the value 0.
3-0 FCOUNT	Result FIFO Counter This read-only field indicates the number of datawords that are stored in the result FIFO. This value may be used in conjunction with PARAM[FIFOSIZE] to calculate how much room is left in the result FIFO. FCOUNT is incremented with each store of new data to the result FIFO and decrements with each read of the result FIFO. The FIFO is reset by writing to the CTRL[RSTFIFO] bit, resulting in FCTRLa[FCOUNT] initialized to 0x0.

42.6.16 Gain Calibration Control (GCC0)


Offset

Register	Offset
GCC0	F0h

Function

The Gain Calibration Control register (GCC0) hold intermediate values that are utilized as part of the calibration steps. The GCCa[GAIN_CAL] field is calculated with hardware and auto updated during the calibration steps. Once the hardware calibration sequence has updated GCCa[GAIN_CAL] the GCCa[RDY] status flag is asserted automatically. Note that requesting a calibration routine automatically clears the GCCa[RDY] bit until the new GCCa[GAIN_CAL] value is calculated. For the calibration steps to be completed, further software processing is needed where the GCCa[GAIN_CAL] value is used to calculate the gain adjustment and the result is stored to GCRa[GCALR]. For more information see [Calibration](#) in the functional description.

Diagram

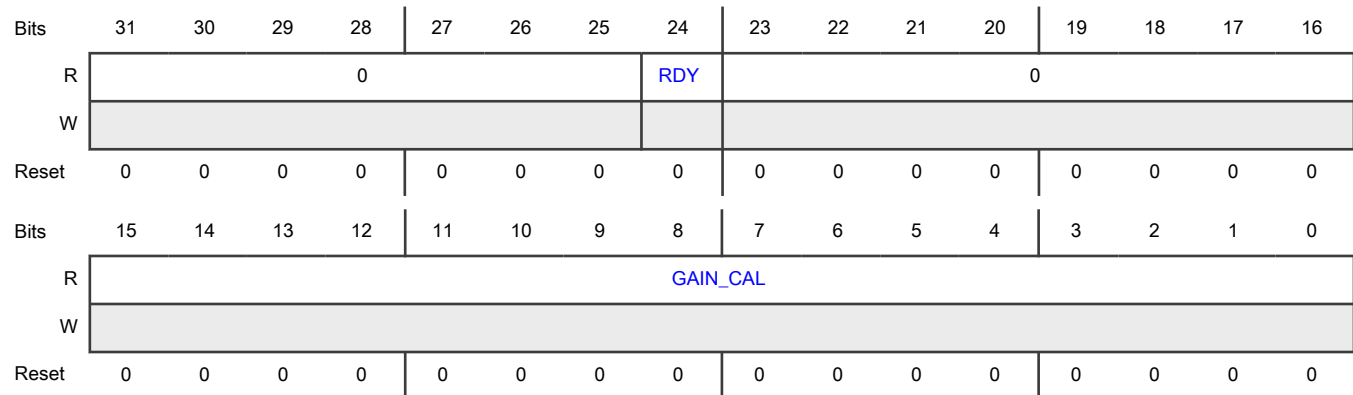

Fields

Field	Function
31-25 —	Reserved This read-only field is reserved and always has the value 0.
24 RDY	Gain Calibration Value Valid This status flag indicates when the data stored in GCCa[GAIN_CAL] is valid. 0b - The GAIN_CAL value is invalid. Run the hardware calibration routine for this value to be set. 1b - The GAIN_CAL value is valid. GAIN_CAL should be used by software to derive GCRa[GCALR].
23-16 —	Reserved This read-only field is reserved and always has the value 0.
15-0 GAIN_CAL	Gain Calibration Value GAIN_CAL is read-only. As part of the hardware calibration steps, GAIN_CAL is automatically updated with a 16-bit signed number and is used in the gain adjustment calculations to derive the value written to the GCRa[GCALR] register. For more information see Calibration in the functional description.

42.6.17 Gain Calculation Result (GCR0)

Offset


Register	Offset
GCR0	F8h

Function

The Gain Calculation Result register (GCR0) is used during ADC conversions for automated gain error adjustment. Determining the values to store to GCC0[GCALR] is the result of software calculations described in setup steps in [Calibration](#). There is a RDY status flag in the GCR register which indicates whether the value GCRa[GCALR] is valid. Upon writing the GCRa[GCALR] value, the user should also assert GCRa[RDY] to indicate that the gain adjustment result is valid.

After beginning a calibration sequence by asserting CTRL[CAL_REQ], the calibration sequence is not complete until GCRa[GCALR] is calculated and GCRa[RDY] is asserted. The gain adjustment calculation results in a floating point value between 0 and 2. GCRa[GCALR][16] holds the integer value (0 or 1) and GCRa[GCALR][15:0] holds the 16-bit fractional component of the gain adjustment calculation. To convert the GCRa[GCALR] value back into the gain adjustment value in decimal format, this would be calculated as: $1 * \text{GCRa}[16] + 0.5 * \text{GCRa}[15] + 0.25 * \text{GCRa}[14] + 0.125 * \text{GCRa}[13] + \dots$

Diagram

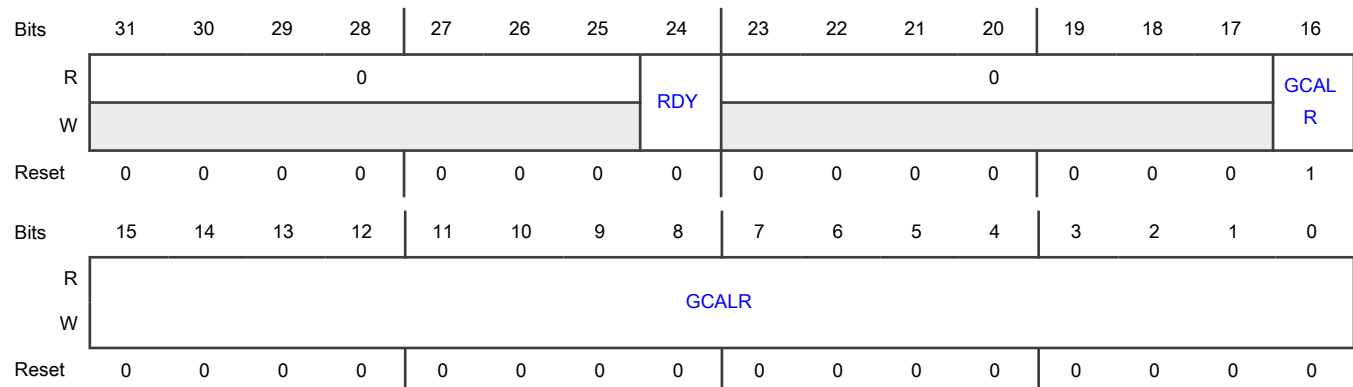

Fields

Field	Function
31-25	Reserved
—	This read-only field is reserved and always has the value 0.
24	Gain Calculation Ready
RDY	The RDY flag indicates to the ADC when the data stored in GCRa[GCALR] is valid and is used for gain adjustment. The GCRa[GCALR] must be written from memory or calculated each time the calibration routine is run. The RDY flag must be asserted by the user after writing valid data into the GCALR field. The RDY flag is cleared automatically when requesting a new calibration sequence. 0b - The GCALR value is invalid. 1b - The GCALR value is valid.

Table continues on the next page...

Table continued from the previous page...

Field	Function
23-17	Reserved
—	This read-only field is reserved and always has the value 0.
16-0	Gain Calculation Result
GCALR	This value holds the 17-bit value generated from the gain adjustment calculation during the calibration steps.

42.6.18 Command Low Buffer Register (CMDL1 - CMDL7)

Offset

Register	Offset
CMDL1	100h
CMDL2	108h
CMDL3	110h
CMDL4	118h
CMDL5	120h
CMDL6	128h
CMDL7	130h

Function

There are 7 command buffers (CMD a), each constructed from two 32-bit registers (CMDL a :CMDH a) that can be configured for different channel select and varying conversion options. Any of the command buffers is selected and used as the controlling command by association to a trigger event via configuration of the TCTRL a [TCMD] bitfield. When the ADC is actively executing commands, only one of the CMD buffers is actively controlling ADC conversions. The actively controlling CMD buffer should not be updated while the ADC is active. A write to a CMD buffer while that CMD buffer is controlling the ADC operation may cause unpredictable behavior.

NOTE

The 7 command buffers are numbered [CMDH1:CMDL1] through [CMDH7:CMDL7]. In NXP-supplied header files, these are likely to be defined as two 7-element arrays that are indexed from 0. I.e., the type declaration would be:

```
unsigned int CMDL[7];
```


```
unsigned int CMDH[7];
```

and software would access ADC0 CMDH1 as ADC0->CMDH[0] and ADC0 CMDL7 as ADC0->CMDL[6].

The CMDL a [ADCH] and CMDL a [CTYPE] bitfields control selection of input channels. Each ADC command independently makes a channel selection.

NOTE

Some of the input channels are from on-chip sources such as temperature sensors and reference voltage sources and may only be connected to individual instances of the ADC module. Some of the input channel options in the bitfield-setting descriptions may not be available for your device. Refer to chip-specific information for the channels supported on this device.

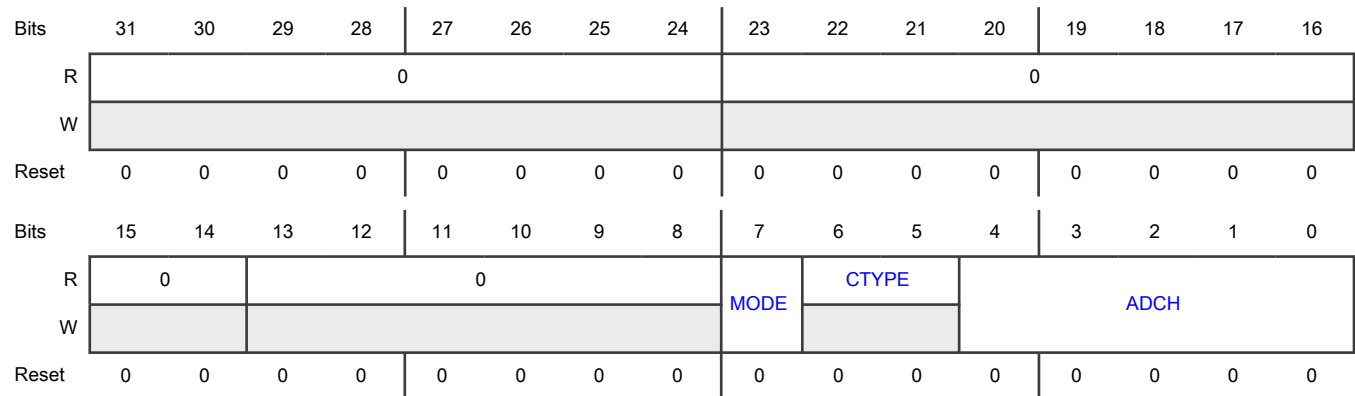Diagram**Fields**

Field	Function
31-24 —	Reserved This read-only field is reserved and always has the value 0.
23-16 —	Reserved This read-only field is reserved and always has the value 0.
15-14 —	Reserved This read-only field is reserved and always has the value 0.
13-8 —	Reserved This read-only field is reserved and always has the value 0.
7 MODE	Select Resolution of Conversions The MODE field, selects the ADC resolution. 0b - Standard resolution. Single-ended 12-bit conversion. 1b - High resolution. Single-ended 16-bit conversion.
6-5 CTYPE	Conversion Type Zero is the only valid program value and selects A-side channels for conversion. 00b - Single-Ended Mode. Only A side channel is converted. 01b-11b - Reserved.
4-0	Input Channel Select

Table continues on the next page...

Table continued from the previous page...

Field	Function
ADCH	NOTE Some of the input channels are from internal resources such as temperature sensors and bandgap voltage sources and may only be connected to individual instances of the ADC module. Some of the input channel options in the bitfield-setting descriptions might not be available for your device. For the ADC channel assignments for your device, see the chip-specific information. 0_0000b - Select CH0A. 0_0001b - Select CH1A. 0_0010b - Select CH2A. 0_0011b - Select CH3A. 0_0100b-1_1101b - Select corresponding channel CHnA. 1_1110b - Select CH30A. 1_1111b - Select CH31A.

42.6.19 Command High Buffer Register (CMDH1 - CMDH7)

Offset

Register	Offset
CMDH1	104h
CMDH2	10Ch
CMDH3	114h
CMDH4	11Ch
CMDH5	124h
CMDH6	12Ch
CMDH7	134h

Function

There are 7 command buffers (CMDa), each constructed from two 32-bit registers (CMDLa:CMDHa) that can be configured for different channel select and varying conversion options. Any of the command buffers is selected and used as the controlling command by association to a trigger event via configuration of the TCTRLa[TCMD] bitfield. When the ADC is actively executing commands, only one of the CMD buffers is actively controlling ADC conversions. The actively controlling CMD buffer should not be updated while the ADC is active. A write to a CMD buffer while that CMD buffer that is controlling ADC operation may result in unpredictable behavior.


NOTE

The 7 command buffers are numbered [CMDH1:CMDL1] through [CMDH7:CMDL7]. In NXP-supplied header files, these are likely to be defined as two 7-element arrays that are indexed from 0. I.e., the type declaration would be:

```
unsigned int CMDL[7];
```

```
unsigned int CMDH[7];
```

and software would access ADC0 CMDH1 as ADC0->CMDH[0] and ADC0 CMDL7 as ADC0->CMDL[6].

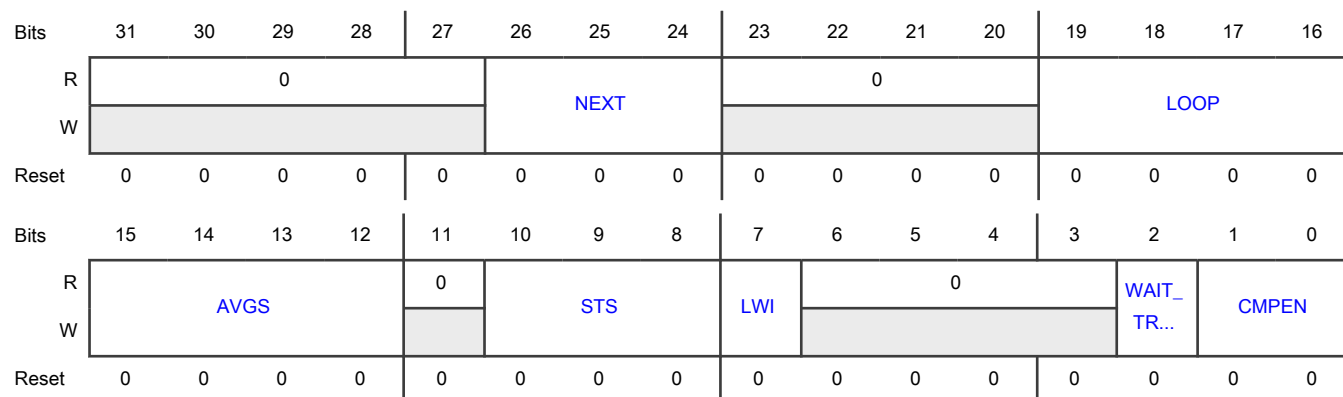Diagram**Fields**

Field	Function
31-27 —	Reserved This read-only field is reserved and always has the value 0.
26-24 NEXT	Next Command Select Selects the next command to be executed after this command completes. Multiple commands can be configured in a scan configuration by linking the next command in a daisy-chain sequence. The command buffer number is not indicative of any particular order and the order of execution is strictly controlled by the NEXT field (for example, a sequence of commands could be CMD2 to CMD1 to CMD3). Unending circular command execution is allowed by setting the NEXT field in the last command in a sequence to the first command in the sequence. It is also allowed for a command to set the next command to itself, resulting in a continuous conversion configuration. Setting the next command to 0x0 causes conversions to terminate at the completion of the command. Lower priority trigger events cannot be serviced until a higher priority triggered command (or sequence of commands) completes. 000b - No next command defined. Terminate conversions at completion of current command. If lower priority trigger pending, begin command associated with lower priority trigger. 001b - Select CMD1 command buffer register as next command. 010b-110b - Select corresponding CMD command buffer register as next command 111b - Select CMD7 command buffer register as next command.
23-20 —	Reserved This read-only field is reserved and always has the value 0.

Table continues on the next page...

Table continued from the previous page...

Field	Function
19-16 LOOP	Loop Count Select Selects how many times this command executes (and stores conversion result to RESFIFO) before finish and transition to the next command or Idle state. LWI field controls whether a single channel is converted on each iteration or auto channel increment results in channel scanning functionality. 0000b - Looping not enabled. Command executes 1 time. 0001b - Loop 1 time. Command executes 2 times. 0010b - Loop 2 times. Command executes 3 times. 0011b-1110b - Loop corresponding number of times. Command executes LOOP+1 times. 1111b - Loop 15 times. Command executes 16 times.
15-12 AVGS	Hardware Average Select Selects how many ADC conversions are averaged to create the ADC result (2^{AVGS}). An internal storage buffer is used to capture temporary results while the averaging iterations are executed. Hardware averaging is a nested loop control and does not extend across LOOP boundaries. See Functional description for more detailed description on usage of AVGS, LOOP, and NEXT bitfields in command execution sequencing. 0000b - Single conversion. 0001b - 2 conversions averaged. 0010b - 4 conversions averaged. 0011b - 8 conversions averaged. 0100b - 16 conversions averaged. 0101b - 32 conversions averaged. 0110b - 64 conversions averaged. 0111b - 128 conversions averaged. 1000b - 256 conversions averaged. 1001b - 512 conversions averaged. 1010b - 1024 conversions averaged.
11 —	Reserved This read-only field is reserved and always has the value 0.
10-8 STS	Sample Time Select When programmed to 0b000 the minimum sample time of 3.5 ADCK cycles is selected. When STS is programmed to a non-zero value the sample time is $(3.5 + 2^{STS})$ ADCK cycles. The shortest sample time maximizes conversion speed for lower impedance inputs. Extending sample time allows higher impedance inputs to be accurately sampled. Longer sample times can also be used to lower overall power consumption when command looping and sequencing is configured and high conversion rates are not required.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	000b - Minimum sample time of 3.5 ADCK cycles. 001b - $3.5 + 2^1$ ADCK cycles; 5.5 ADCK cycles total sample time. 010b - $3.5 + 2^2$ ADCK cycles; 7.5 ADCK cycles total sample time. 011b - $3.5 + 2^3$ ADCK cycles; 11.5 ADCK cycles total sample time. 100b - $3.5 + 2^4$ ADCK cycles; 19.5 ADCK cycles total sample time. 101b - $3.5 + 2^5$ ADCK cycles; 35.5 ADCK cycles total sample time. 110b - $3.5 + 2^6$ ADCK cycles; 67.5 ADCK cycles total sample time. 111b - $3.5 + 2^7$ ADCK cycles; 131.5 ADCK cycles total sample time.
7 LWI	Loop with Increment Enables automatic channel incrementing. When 0, the LOOP field selects the number of times the selected channel is converted consecutively. When 1, automatic channel incrementing is enabled and the LOOP field defines how many consecutive channels are converted as part of the command execution. Example 1: LOOP = 8h, LWI = 0b, CMDLn[CTYPE] = 0h, CMDLn[ADCH] = Dh. Convert on channel 13A 9 times. Example 2: LOOP = 8h, LWI = 1b, CMDLn[CTYPE] = 0h, CMDLn[ADCH] = Dh. Run channels 13A-21A each one time. Maximum channel scanning using a single command buffer is defined by the maximum value of the LOOP field (16). 0b - Auto channel increment disabled 1b - Auto channel increment enabled
6-3 —	Reserved This read-only field is reserved and always has the value 0.
2 WAIT_TRIG	Wait for Trigger Assertion before Execution. Controls if commands are automatically executed or if a trigger must be received before execution. If WAIT_TRIG is asserted, wait states will be added before the command until the active trigger is asserted again. When WAIT_TRIG is disabled, each command will be automatically executed when called. 0b - This command will be automatically executed. 1b - The active trigger must be asserted again before executing this command.
1-0 CMPEN	Compare Function Enable After an ADC channel input is sampled and converted and any averaging iterations are performed, the CMDHn[CMPEN] field guides operation of the automatic compare function to optionally only store when the compare operation is true. When compare is enabled, the conversion result is compared to the compare value registers (CVn[CVH] and CVn[CVL]). There are multiple options on command sequencing related to the compare function. See Compare function for a detailed explanation of the compare options.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	NOTE Not all Command Buffers have implemented the CMPEN field. The CMPEN field is only available in Command Buffers that have a corresponding Compare Value register. 00b - Compare disabled. 01b - Reserved 10b - Compare enabled. Store on true. 11b - Compare enabled. Repeat channel acquisition (sample/convert/compare) until true.

42.6.20 Compare Value Register (CV1 - CV7)

Offset

Register	Offset
CV1	200h
CV2	204h
CV3	208h
CV4	20Ch
CV5	210h
CV6	214h
CV7	218h

Function

The compare value registers (CV a) contain values used to compare the conversion result when the compare function is enabled. This register is formatted in the same way as the D field in the RESFIFO registers in different modes of operation for both bit position definition and value format using unsigned or signed 2's complement. There is a direct association of each compare value register to a specific command buffer register (i.e., CV1 is only used during execution of CMD1 command).

NOTE

Not all Command Buffers have an associated Compare Value register. The compare function is only available on Command Buffers that have a corresponding Compare Value register.

When the ADC is actively executing commands, the CV a register associated with the active command (CMD a) should not be updated. Writes to associated CV a register during this time may result in unpredictable behavior.


NOTE

The 7 compare value registers are numbered [CV1] through [CV7]. In NXP-supplied header files, this is likely to be defined as a 7-element array that is indexed from 0. I.e., the type declaration would be:

```
unsigned int CV[7];
```

and software would access ADC0 CV1 as ADC0->CV[0] and ADC0 CV7 as ADC0->CV[6].

Diagram

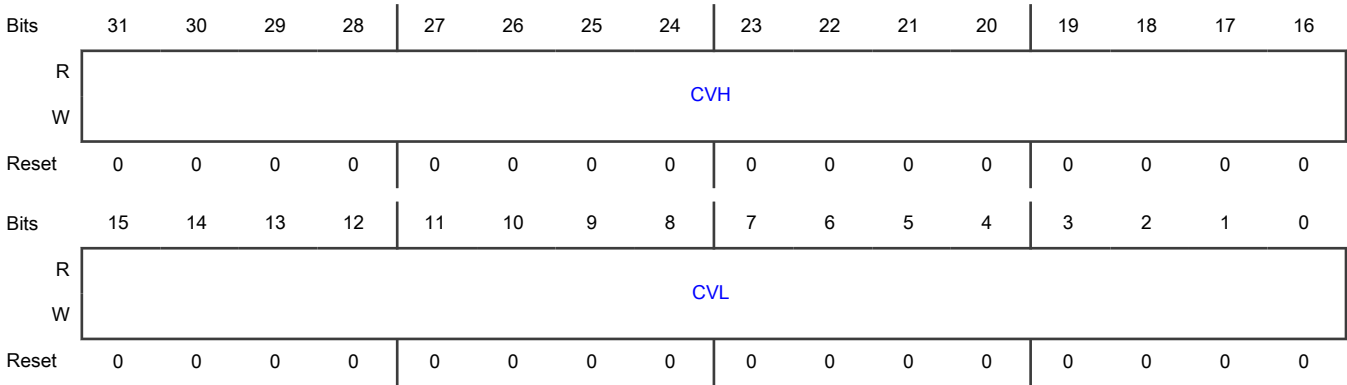

Fields

Field	Function
31-16 CVH	Compare Value High The compare function can be configured to check whether the result is less than, greater than, or if the result falls within or outside a range determined by two compare values. After the input is sampled and converted and any averaging iterations are performed, the compare values in CVL and CVH are optionally used in a compare operation on the result. See Compare function for a description on how CVH is used.
15-0 CVL	Compare Value Low The compare function can be configured to check whether the result is less than, greater than, or if the result falls within or outside a range determined by two compare values. After the input is sampled and converted and any averaging iterations are performed, the compare values in CVL and CVH are optionally used in a compare operation on the result. See Compare function for a description on how CVL is used.

42.6.21 Data Result FIFO Register (RESFIFO0)

Offset

Register	Offset
RESFIFO0	300h

Function

The data result FIFO register (RESFIFO) is a 8 entry FIFO that stores the data result of ADC conversions. In addition, several tag fields of source command and trigger information are stored along with the data. FCTRLa[FCOUNT] indicates how many valid datawords are stored in the RESFIFO. Reading RESFIFO provides the oldest unread dataword entry in the FIFO and decrements FCTRLa[FCOUNT]. The FIFO can be emptied by successive reads of RESFIFO. The FIFO is reset by writing 0b1 to the CTRL[RSTFIFOx] bit.

The following table describes the format of data in the result FIFO.


Table 311. Data result register format description

Conversion mode	D15	D14	D13	D12	D11	D10	D9	D8	D7	D6	D5	D4	D3	D2	D1	D0	Format
16-bit single-ended	D	D	D	D	D	D	D	D	D	D	D	D	D	D	D	D	Unsigned, 16-bit magnitude, JLEFT=X
12-bit single-ended	0	D	D	D	D	D	D	D	D	D	D	D	D	0	0	0	Unsigned, JLEFT=0, zero in D[15] and D[2:0]
12-bit single-ended	D	D	D	D	D	D	D	D	D	D	D	D	0	0	0	0	Unsigned, JLEFT=1, zero in D[3:0]

NOTE

D: Data

Diagram

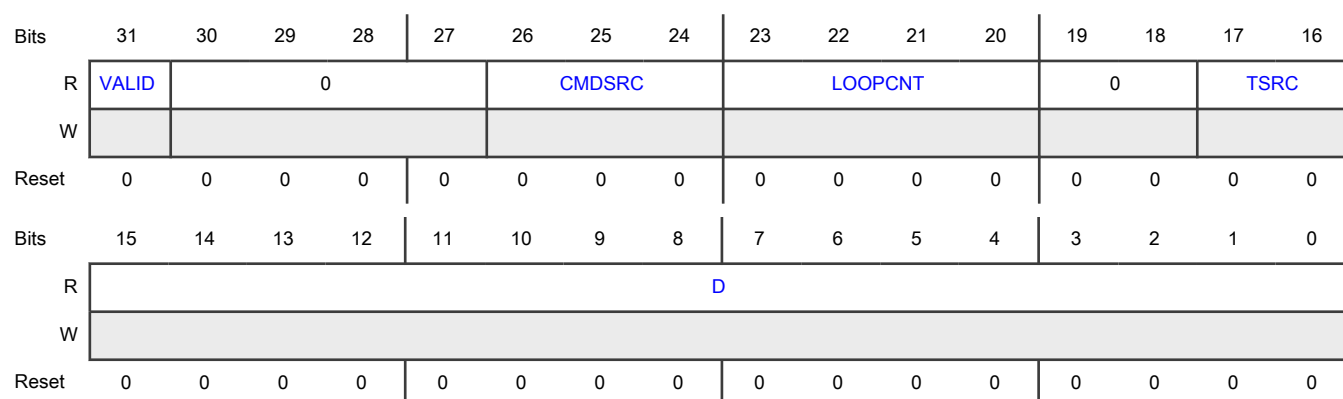

Fields

Field	Function
31 VALID	FIFO Entry is Valid Indicate the FIFO entry is valid. When the FIFO is holding data the VALID bit is set. When the FIFO is empty the VALID bit is clear. 0b - FIFO is empty. Discard any read from RESFIFO. 1b - FIFO record read from RESFIFO is valid.
30-27 —	Reserved This read-only field is reserved and always has the value 0.
26-24 CMDSRC	Command Buffer Source Indicate the command buffer being executed that generated this result. 000b - Not a valid value CMDSRC value for a dataword in RESFIFO. 0x0 is only found in initial FIFO state prior to an ADC conversion result dataword being stored to a RESFIFO buffer.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	001b - CMD1 buffer used as control settings for this conversion. 010b-110b - Corresponding command buffer used as control settings for this conversion. 111b - CMD7 buffer used as control settings for this conversion.
23-20 LOOPCNT	Loop Count Value Indicate the loop count value during command execution that generated this result. When CMDHa[LOOP] is non-zero, the command execution stores off a result multiple times during command execution (at the loop boundary). 0000b - Result is from initial conversion in command. 0001b - Result is from second conversion in command. 0010b-1110b - Result is from LOOPCNT+1 conversion in command. 1111b - Result is from 16 th conversion in command.
19-18 —	Reserved This read-only field is reserved and always has the value 0.
17-16 TSRC	Trigger Source Indicate the trigger source that initiated a conversion and generated this result. When multiple commands are chained together using the CMDHa[NEXT] field, the TSRC field for all datawords stored to the RESFIFO indicate the trigger source that started the sequence of commands. 00b - Trigger source 0 initiated this conversion. 01b - Trigger source 1 initiated this conversion. 10b - Trigger source 2 initiated this conversion. 11b - Trigger source 3 initiated this conversion.
15-0 D	Data Result The formatting for the data in D is summarized in Table 311 .

42.6.22 Calibration General A-Side Registers (CAL_GAR0 - CAL_GAR33)

Offset

For a = 0 to 33:

Register	Offset
CAL_GARa	400h + (a × 4h)

Function


The A-side general calibration value registers (CAL_GAR0 - CAL_GAR33) are used to correct for linearity errors of the A-side converter. All 34 CAL_GAR registers contain calibration information that is automatically updated during the self calibration sequence. See [Calibration](#) for more information on completing ADC calibration steps.

The calibration values in the CAL_GAR registers affect the end conversion result by conditionally being subtracted from the conversion before the end result is transferred into the FIFOs. Calibration must be run each time the ADC is powered down or a hard reset is issued. To reduce the latency required to run calibration, the CAL_GAR values can be stored in non-volatile memory after an initial calibration and recovered prior to the first ADC conversion. If these registers are set to values not generated by the calibration function, the linearity error specifications may not be met.

The CAL_GAR registers are only read write accessible when the ADC is disabled with CTRL[ADCEN] = 0b0. Note that access time when writing to these registers is larger than 3 ADC clock cycles. Wait states are inserted on the bus to meet synchronization timing to the associated CAL_GAR register.

Note that the values in each register is a 16-bit signed value but has non-uniform supported range of values. The valid range of each register is summarized in [Calibration General A-Side Register valid ranges](#).

Diagram

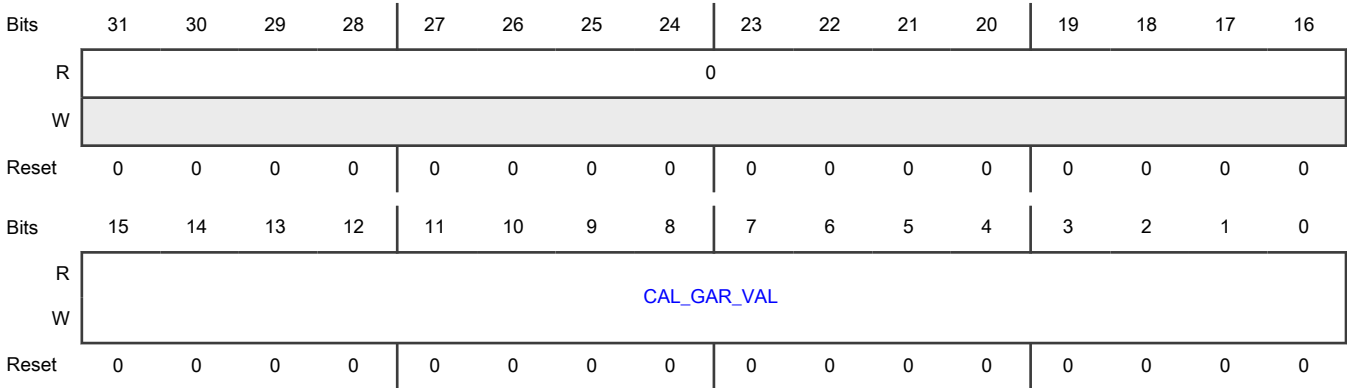

Fields

Field	Function
31-16	Reserved
—	This read-only field is reserved and always has the value 0.
15-0	Calibration General A Side Register Element
CAL_GAR_VAL	The CAL_GAR_VAL is a 16-bit signed value. The valid range for each register in this array is non-uniform and summarized in Calibration General A-Side Register valid ranges .

42.6.23 Configuration 2 Register (CFG2)


Offset

Register	Offset
CFG2	FF8h

Function

The Configuration 2 Register controls ADC functions that are common to all commands. The CFG2 cannot be changed while the CTRL[ADCEN] bit is set. Writes to CFG2 while CTRL[ADCEN] is set are ignored.

Diagram

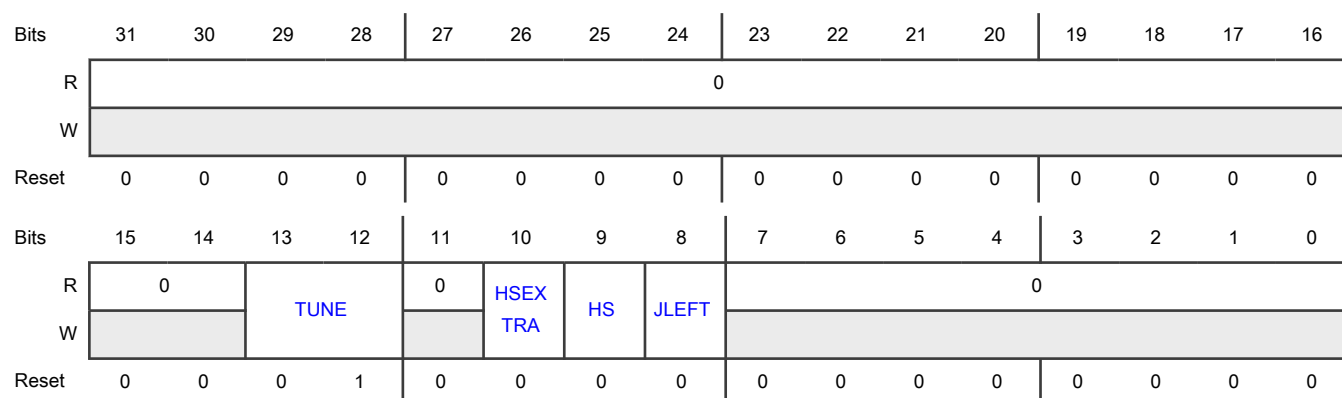

Fields

Field	Function
31-14 —	Reserved This read-only field is reserved and always has the value 0.
13-12 TUNE	Tune Mode register TUNE provides some variability in how many cycles are needed to complete a conversion. Conversions can be terminated early at the expense of conversion resolution. See Cycles per conversion for more information on TUNE affect on conversion duration.
11 —	Reserved This read-only field is reserved and always has the value 0.
10 HSEXTRA	High Speed Extra register In high speed conversions (when CFG2[HS] bit set to 1), HSEXTRA provides a secondary control to add an additional ADCK cycle to the conversion. Setting to 1 is needed in a specific corner of operation where VDDA < TBD V and ADCK > TBD Hz. See Cycles per conversion for more information on HSEXTRA affect on conversion duration. 0b - No extra cycle added 1b - Extra cycle added
9 HS	High Speed Enable register Configures ADC for high speed conversions at the expense of higher operating current. When HS is set, conversions complete 2 or 3 ADCK cycles sooner (depending on the CFG2[HSEXTRA] setting) compared to conversion cycle counts when HS is clear. See Cycles per conversion for more information on HS affect on conversion duration. 0b - High speed conversion mode disabled 1b - High speed conversion mode enabled
8 JLEFT	Justified Left Enable register

Table continues on the next page...

Table continued from the previous page...

Field	Function
	When JLEFT is set and the ADC is converting in 12-bit single-ended mode, conversion result stores to RESFIFOn[D] are in left-justify format. The formatting for the data in RESFIFOn[D] is summarized in Table 311. NOTE In JLEFT mode, CVL and CVH must be programmed in left-justify format to generate correct compare results.
7-0	Reserved
—	This read-only field is reserved and always has the value 0.

Chapter 43

Low Power Comparator (LPCMP)

43.1 Chip-specific CMP information

Table 312. Reference links to related information

Topic	Related module	Reference
Full description	CMP	CMP
System memory map		Memory map
Clocking		Clock distribution
Power management		Power management
Signal multiplexing	Port control	Signal multiplexing

43.1.1 Module instances

This device has three instances of the CMP module, CMP0, CMP1 and CMP2.

43.1.2 Input connections

Table 313. Input connections

Index	CMP0_P	CMP0_N	CMP1_P	CMP1_N	CMP2_P	CMP2_N	Description
0	CMP0_IN0	CMP0_IN0/ DAC0_OUT	CMP1_IN0	CMP1_IN0	CMP2_IN0	CMP1_IN0	VDD
1	CMP0_IN1	CMP0_IN1	CMP1_IN1	CMP1_IN1	CMP2_IN1	CMP1_IN1	VDD
2	CMP0_IN2	CMP0_IN2	CMP1_IN2	CMP1_IN2	CMP2_IN2	CMP1_IN2	VDD
3	CMP0_IN3	CMP0_IN3	CMP1_IN3	CMP1_IN3	CMP2_IN3	CMP1_IN3	VDD
4	OPAMP0_OUT	OPAMP3_OUT	OPAMP1_OUT	DAC0_OUT	OPAMP2_O UT	DAC0_OUT	VDDA
5	Reserved	Reserved	Reserved	Reserved	Reserved	Reserved	VDDA
6	Reserved	Reserved	Reserved	Reserved	Reserved	Reserved	Internal
7	CMP0 DAC	CMP0 DAC	CMP1 DAC	CMP1 DAC	CMP2 DAC	CMP2 DAC	VDD

43.1.3 Input references

In the DAC Control register, when:

- DCR[VRSEL]=0, VREFH0 is selected, which is VDD
- DCR[VRSEL]=1, VREFH1 is selected, which is VREFI

43.1.4 External trigger sources

RRCR0[RR_EXTTRG_SEL] controls the trigger source for the CMP. Note that only CMP1 and CMP2 support multiple options. RRCR0[RR_EXTTRG_SEL] is not writeable in CMP0 and only source '0' is available.

Table 314. Input connections

CMP instance	Source number	RR_EXTTRG_SEL trigger source
CMP0	0	LPTMR0
CMP1	0	Reserved
	1	CTimer0_MAT0
	2	CTimer0_MAT2
	3	CTimer1_MAT0
	4	CTimer1_MAT2
	5	CTimer2_MAT0
	6	CTimer2_MAT2
	7	LPTMR0
	8	Reserved (LPTMR1)
	9	PWM0_SM0_MUX_TRIG0
	10	PWM0_SM0_MUX_TRIG1
	11	PWM0_SM1_MUX_TRIG0
	12	PWM0_SM1_MUX_TRIG1
	13	PWM0_SM2_MUX_TRIG0
	14	PWM0_SM2_MUX_TRIG1
	15	Reserved
CMP2	0	Reserved
	1	CTimer0_MAT0
	2	CTimer0_MAT2
	3	CTimer1_MAT0
	4	CTimer1_MAT2
	5	CTimer2_MAT0
	6	CTimer2_MAT2
	7	LPTMR0
	8	Reserved (LPTMR1)
	9	PWM1_SM0_MUX_TRIG0
	10	PWM1_SM0_MUX_TRIG1
	11	PWM1_SM1_MUX_TRIG0
	12	PWM1_SM1_MUX_TRIG1
	13	PWM1_SM2_MUX_TRIG0
	14	PWM1_SM2_MUX_TRIG1
	15	Reserved

43.2 Overview

The LPCMP module provides a circuit to compare two analog input voltages. It includes the following:

- A low power comparator (CMP)
- A DAC
- An analog mux (ANMUX)

See [Block diagram](#) for more information.

LPCMP can operate across the full range of the supply voltage, known as rail-to-rail operation.

DAC is a 256-tap resistor ladder network that provides a selectable voltage reference for applications requiring a voltage reference. DAC divides the supply reference V_{in} into 256 voltage levels. An 8-bit digital signal input selects the output voltage level, which varies from V_{in} to $V_{in}/256$.

You can select V_{in} from the following voltage sources:

- VREFH0
- VREFH1

See the Chip-specific LPCMP information for more information on source of VREFH0 and VREFH1.

NOTE

The LPCMP's internal DAC output is available as an on-chip internal signal only and is not available for an external chip pin.

ANMUX allows you to select an analog input signal from among eight channel options. One channel option is the DAC output. Other chip resources are connected to the other channels. See the Chip-specific LPCMP information section for more information. ANMUX can operate across the full range of the supply voltage.

43.2.1 Block diagram

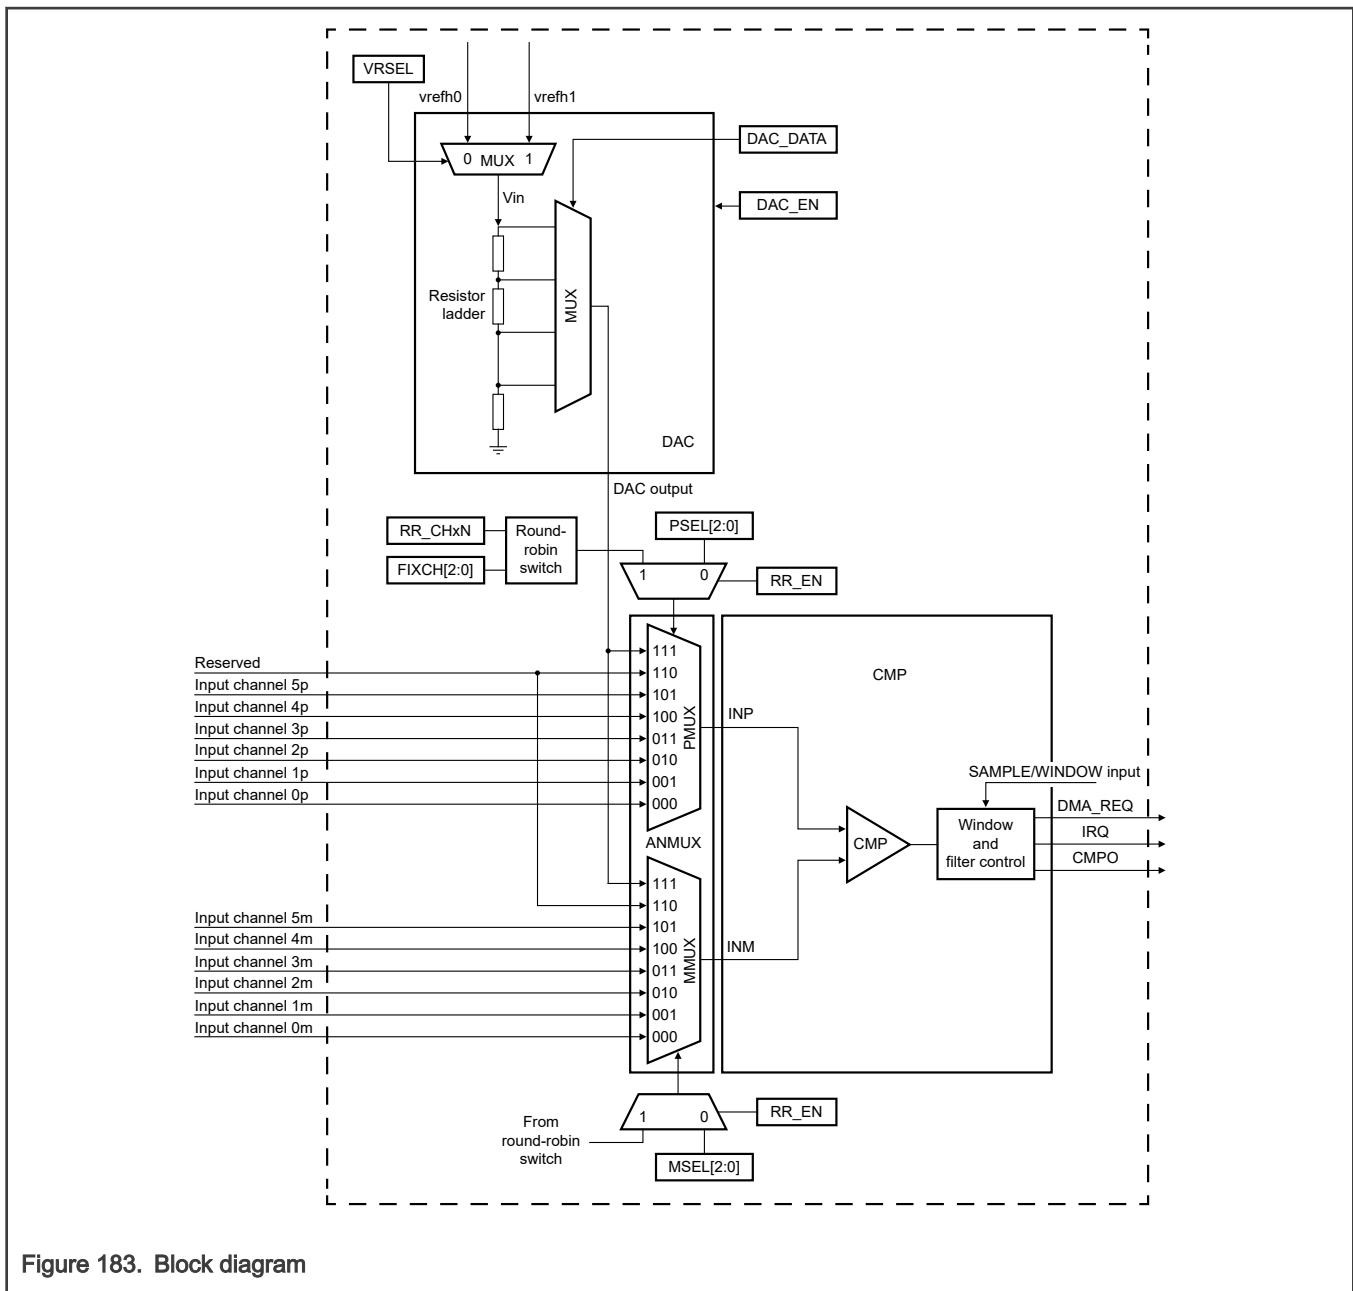


Figure 183. Block diagram

43.2.2 Features


The features of the LPCMP module include :

- Includes two 8-to-1 channel MUXes to select input signal from eight channels
- Supports multiple operation modes to produce a wide range of outputs such as:
 - Sampled
 - Windowed, which is ideal for certain PWM zero-crossing-detection applications
 - Digitally filtered
- Provides the following advance features for window and sample:

- Window and sample signals can be inverted.
- COUT (comparator output) rising, falling or both edges closes the window.
- COUT level can be defined when window is closed.
- Provides selectable performance levels:
 - Nano-Power mode
 - Low-Power (speed) mode
 - High-Power (speed) mode
- Supports programmable hysteresis control
- Provides a selectable inversion on comparator output
- Uses an external hysteresis at the same time the output filter is used for internal functions
- Provides interrupt and DMA support
- Supports Round Robin Trigger mode
- Includes an 8-bit resolution DAC
- Provides a selectable supply reference source for DAC
- Provides a configurable Low-Power (speed) mode or High-Power (speed) mode for DAC

43.3 Functional description

43.3.1 Functional block diagram

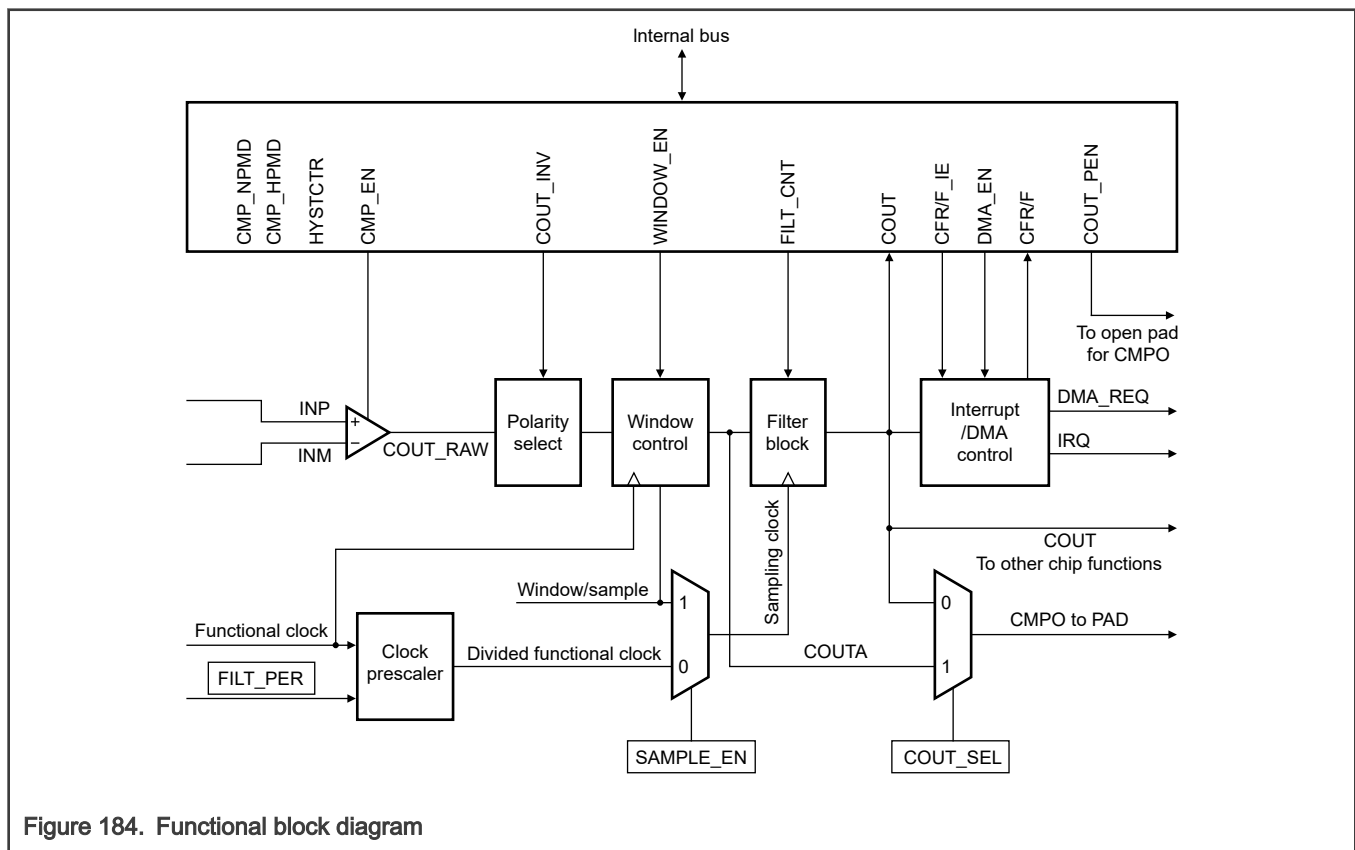

As shown in the block diagram, the functions are:

- Compared two analog input voltages applied to INP and INM, COUT_RAW is high when the INP input voltage is greater than the INM input voltage, and COUT_RAW is low when the INP input voltage is less than the INM input voltage.
- The COUT_RAW signal can be inverted by enabling [CCR1\[COUT_INV\]](#).
- The optionally inverted comparator output COUT_RAW is sampled on every functional clock when you enable the [CCR1\[WINDOW_EN\]](#) to generate COUTA. In this case, the comparator output is ignored during time periods when the input voltages are not valid. This is useful when you implement zero-crossing-detection for certain PWM applications.
- The window control block is bypassed when [CCR1\[WINDOW_EN\]](#) is disabled.
- The filter block acts as a simple sampler when [CCR1\[FILT_CNT\]](#) is set to 01h.
- The filter block acts as a filter based on multiple samples when [CCR1\[FILT_CNT\]](#) is set to be greater than 01h.
 - If [CCR1\[SAMPLE_EN\]](#) is set to 1, use the external SAMPLE input as the sampling clock.
 - If [CCR1\[SAMPLE_EN\]](#) is set to 0, use the divided functional clock as the sampling clock.
- Bypasses the filter block when it is not in use.

```
Bypass_Filter_Block = (FILT_CNT == 0x00) | (~SAMPLE_EN & (FILT_PER == 0x00))
```

- Both COUTA and COUT can be configured as module output CMPO by configuring [CCR1\[COUT_SEL\]](#), and are used for different purposes within the system.
- The optionally filtered COUT can be read directly in [CSR\[COUT\]](#).
- The SAMPLE/WINDOW signal can be inverted by setting [CCR1\[WINDOW_INV\]](#).
- The SAMPLE/WINDOW signal can be closed by COUT's falling edge and/or rising edge by setting [CCR1\[WINDOW_CLS\]](#) in Window mode.
- In Window mode, when window is closed, define the COUTA value as [CCR1\[COUTA_OW\]](#) by setting [CCR1\[COUTA_OWEN\]](#). If [CCR1\[COUTA_OWEN\]](#) is not set, COUTA holds the last sampled value.

NOTE

See the chip configuration section for the source of SAMPLE/WINDOW input.

43.3.2 Round-robin trigger mode

You can enable Round-Robin Trigger mode by setting [RRCR0\[RR_EN\]](#) to 1. A trigger event initiates a comparison sequence. The next trigger event should not occur before the current sequence completes.

[RRCR1\[FXP\]](#) and [RRCR1\[FXCH\]](#) select the reference channel for the plus side mux or the minus side mux. [RRCR1\[RR_CHnEN\]](#) selects active channels.

When a trigger comes, the analog comparator enables. After the comparison sequence completes, the analog comparator disables again. [RRCR0\[RR_INITMOD\]](#) controls the analog stabilization time.

NOTE

RR_INITMOD*round robin clock period must be longer than the initialization delay specified in the Comparator and 8-bit DAC electrical specifications section of LPCMP datasheet.

After the stabilization process completes, the round robin manner comparison sequence begins. Sample the comparison result for the selected active channel after [RRCR0\[RR_NSAM\]](#) defines the configurable number of operation clocks.

There are ([RR_SAMPLE_CNT](#) + 1) samples for each channel. With these samples, at least ([RR_SAMPLE_THRESHOLD](#) + 1) sampled "1" causes the channel's final sample result to be "1"; otherwise, it is "0". Compare the final result with the pre-programmed value.

After all the active channels are sampled/compared, if the comparison result changes from its pre-programmed state, the corresponding flag in [RRSR\[RR_CHnF\]](#) is set. Write to [RRCSR\[RR_CHnOUT\]](#) to configure the pre-programmed state for each channel. Update [RRCSR\[RR_CHnOUT\]](#) to store the last comparison result for each channel. If any flag in [RRSR\[RR_CHnF\]](#) sets,

CSR[RRF] also sets. If **IER[RRF_IE]** sets, an asynchronous interrupt asserts. Note that these flags do not support generating a DMA transfer event.

The following diagram shows the basic flow of this mode. In the diagram, **RRCR1[RR_CH1EN]**, **RRCR1[RR_CH3EN]**, and **RRCR1[RR_CH4EN]** are 1, so channels #1, #3, and #4 are selected for round-robin depending on their priority setting. **RRCR0[RR_NSAM]** sets to 2'b01, so you can sample one clock later the comparison result of the selected channel. After you compare the channel #4, the result is sampled, and round-robin ends. If any of the comparison results from channel #1, #3, or #4 changed from their programmed value (written to **RRCR[RR_CH1OUT]**, **RRCR[RR_CH3OUT]**, and **RRCR[RR_CH4OUT]**), generates an interrupt. Software can then poll **RRSR[RR_CHnF]** to see which channel input(s) changed value.

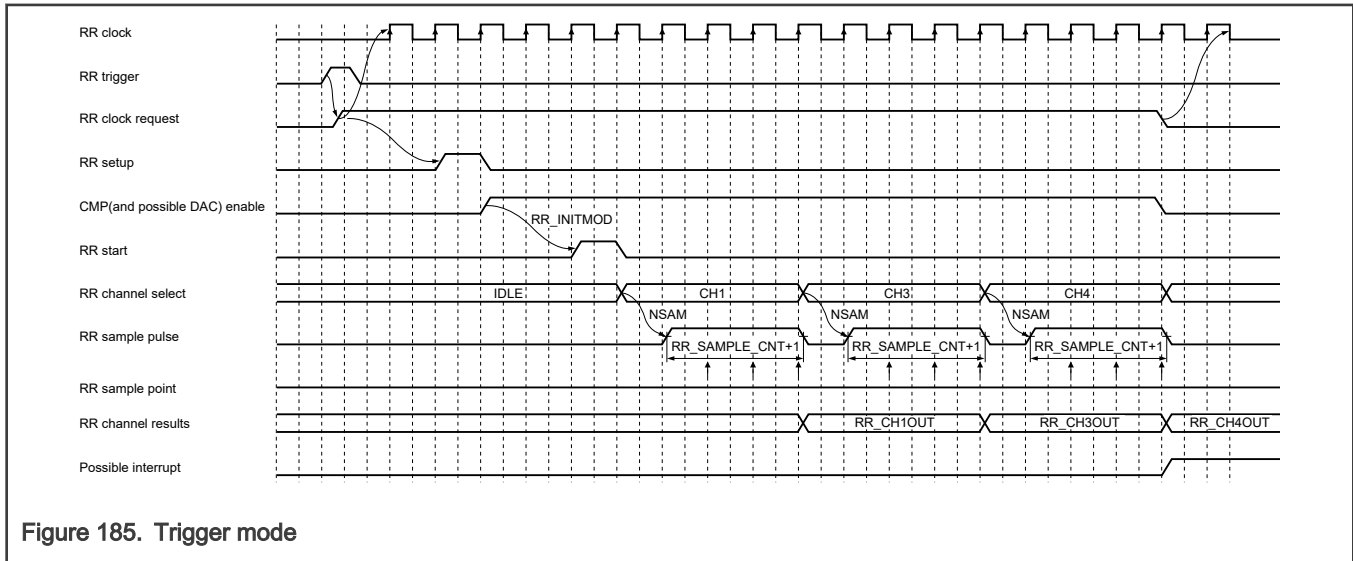


Figure 185. Trigger mode

The table below shows the channel decode in both Functional mode and Trigger mode. Other cases not in the table are illegal.

Table 315. CMP channel decode in functional mode and round-robin trigger mode

Mode	RR_EN	PSEL[2:0]	MSEL[2:0]	FIXP	FIXCH[2:0]	RR_CHxN	INP	INM	CMP Behavior
Functional mode	0	0 to 7	0 to 7	x ¹	x	x	Channel decoded from PSEL[2:0]	Channel decoded from MSEL[2:0]	Compare the channel 0 to 7 with channel 0 to 7 ²
Trigger mode	1	x	x	0	0 to 7	0 to 7	Channel fixed by FIXCH[2:0]	Channel sweep (RR_CHxN)	Sweep the channel 0 to 7 with a fixed channel (0 to 7)
		x	x	1	0 to 7	0 to 7	Channel sweep (RR_CHxN)	Channel fixed by FIXCH[2:0]	Sweep the channel 0 to 7 with a fixed channel (0 to 7)

1. "x" means "don't care"

2. PSEL should not be same as MSEL.

43.3.3 Low-pass filter mode

The low-pass filter mode operates on an unfiltered, optionally inverted comparator output COUTA, and generates the filtered and synchronized output COUT. You can configure both COUTA and COUT as module outputs and use for different purposes within the system.

Synchronization and edge detection determine the bit values of status register. They also apply to COUT for all sampling and windowed modes. You can perform filtering using an internal timebase defined by `CCR1[FILT_PER]`, or use an external sample input to determine sample time.

The need for digital filtering and the amount of filtering depends on your requirements. Filtering can become more useful in the absence of an external hysteresis circuit. Without external hysteresis, generate a high-frequency oscillations at COUTA when the selected INM and INP input voltages differ by less than the offset voltage of the differential comparator.

43.3.3.1 Enabling low-pass filter mode

You can enable low-pass filter mode by setting the following:

- `CCR1[FILT_CNT] > 01h`
- `CCR1[FILT_PER]` to a nonzero value or writing 1 to `CCR1[SAMPLE_EN]`.

If you use the divided functional clock to drive the low-pass filter, it samples COUTA every `CCR1[FILT_PER]` functional clock cycle.

If `CCR1[SAMPLE_EN]` is set to 1, the low-pass filter samples COUTA on each positive transition of the sample input. The output state of the filter changes when all the consecutive `CCR1[FILT_CNT]` samples agree that the output value has changed.

43.3.3.2 Latency issues

Program the value of `CCR1[FILT_PER]` or sample period such that the sampling period is longer than the period of the expected noise, ensuring that a given noise spike corrupts only one sample. You must choose the value of `CCR1[FILT_CNT]` to reduce the probability of noisy samples causing an incorrect transition to recognize. The probability of an incorrect transition is defined as the probability of an incorrect sample raised to the power of `CCR1[FILT_CNT]`.

You must trade off the values of `CCR1[FILT_PER]` or sample period and `CCR1[FILT_CNT]` against the need for minimal latency in recognizing actual comparator output transitions. The probability of detecting an actual output change within the nominal latency is the probability of a correct sample raised to the power of `CCR1[FILT_CNT]`.

Table 317 summarizes maximum latency values for the various modes of operation in the absence of noise. Filtering latency restarts each time the noise masks an actual output transition.

43.3.4 Low power mode operation

Below table introduces the mode of operation of lower power.

Table 316. Low power mode operation

Mode of operation	Description
Wait	LPCMP can operate normally with window and filter function.
Deep Sleep	LPCMP can operate only in Continuous mode or Round-robin trigger mode.

43.3.5 Functional modes

You can combine the comparator window and filter features as shown in the following table.

Table 317. Functional modes

Mode #	CMP_EN	WINDOW_EN	SAMPLE_EN	FILT_CNT	FILT_PER	Operation	Maximum latency ¹
1	0	X	X	X	X	See the Disabled mode (#1) .	N/A
2A	1	0	X	0x00	X	See the Continuous mode (#2A and #2B) .	T_{PD}
2B	1	0	0	X	0x00		
3A	1	0	1	0x01	X	See the Sampled, non-filtered mode (#3A and #3B) .	$T_{PD} + T_{SAMPLE} + T_{per}$
3B	1	0	0	0x01	> 0x00		$T_{PD} + (FILT\_PER * T_{per}) + T_{per}$
4A	1	0	1	> 0x01	X	See the Sampled, filtered mode (#4A and #4B) .	$T_{PD} + (FILT\_CNT * T_{SAMPLE}) + T_{SAMPLE}$
4B	1	0	0	> 0x01	> 0x00		$T_{PD} + (FILT\_CNT * FILT\_PER * T_{per}) + T_{per}$
5A	1	1	0	0x00	X	See the Windowed mode (#5A and #5B) .	$T_{PD} + 2T_{per}$
5B	1	1	0	X	0x00		
6	1	1	0	0x01	> 0x00	See the Windowed/Resampled mode (#6) .	$T_{PD} + (FILT\_PER * T_{per}) + 3T_{per}$
7	1	1	0	> 0x01	> 0x00	See the Windowed/Filtered mode (#7) .	$T_{PD} + (FILT\_CNT * FILT\_PER * T_{per}) + 3T_{per}$
All other combinations of CMP_EN, WINDOW_EN, SAMPLE_EN, FILT_CNT, and FILT_PER are illegal.							


1. T_{PD} represents the intrinsic delay of the analog component plus the polarity select logic. T_{SAMPLE} is the clock period of the external sample clock. T_{per} is the period of the functional clock.

43.3.5.1 Disabled mode (#1)

In this mode:

- The analog comparator is non-functional and consumes no power.
- [CSR\[COUT\]](#) and CMPO are the same as [CCR1\[COUT_INV\]](#).

43.3.5.2 Continuous mode (#2A and #2B)

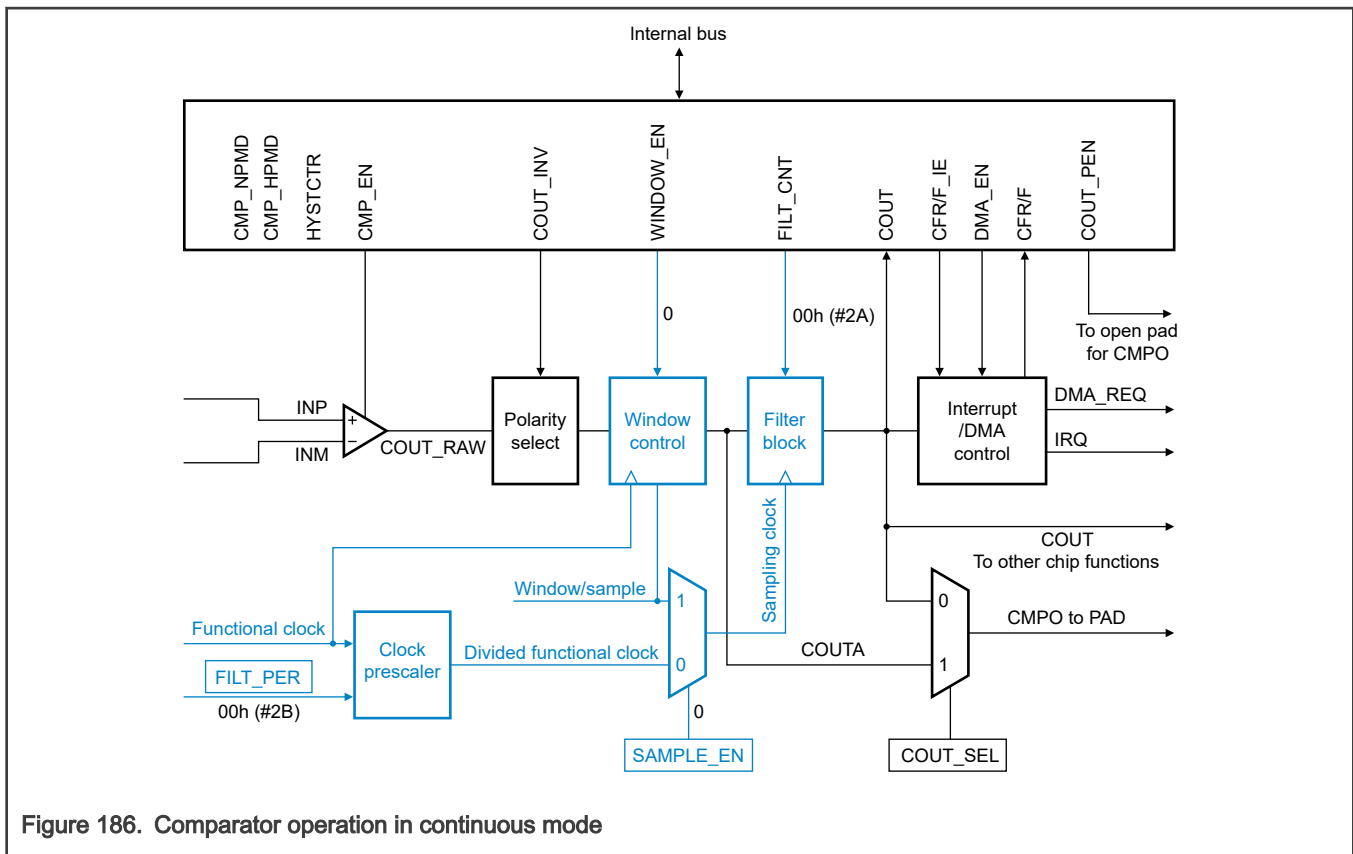

COUT_RAW is optionally inverted in this mode but is not subject to external sampling or filtering. Both window control and filter blocks bypass completely, and `CSR[COUT]` updates continuously. The path from comparator input pins to output pins operates in a combinational (unclocked) mode. COUT and COUTA are identical in this mode.

For cases where a comparator drives a fault input, you must configure it to operate in Continuous mode so that an external fault can immediately pass to the target fault circuitry through the comparator.

43.3.5.3 Sampled, non-filtered mode (#3A and #3B)

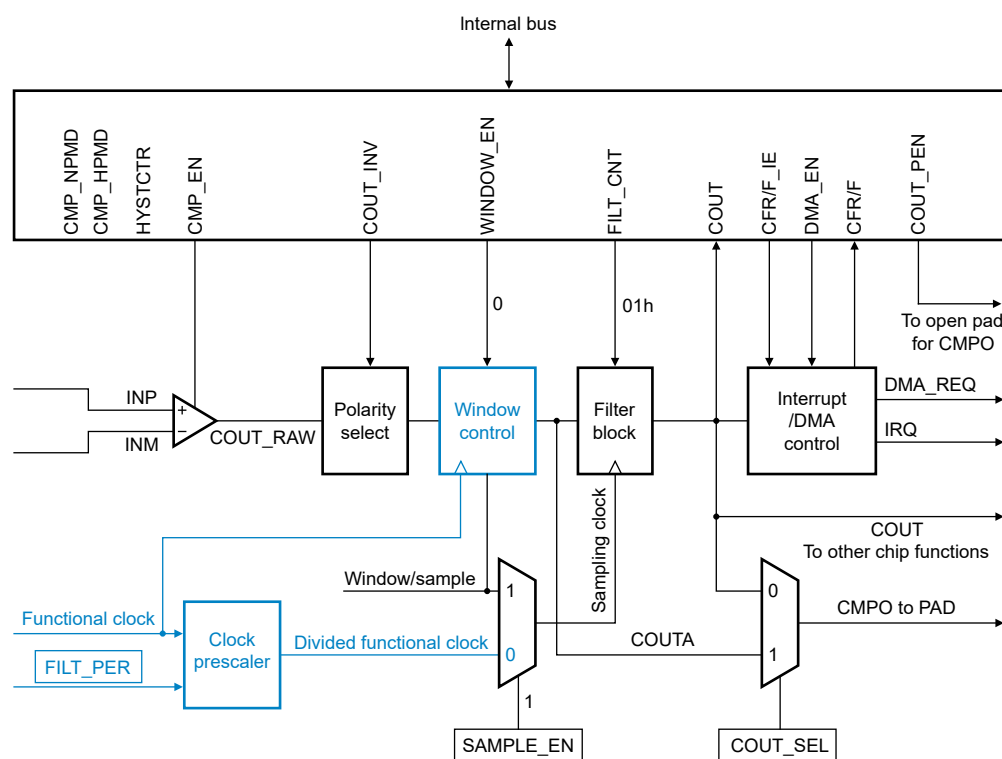


Figure 187. Sampled, non-filtered (#3A): sampling point externally driven

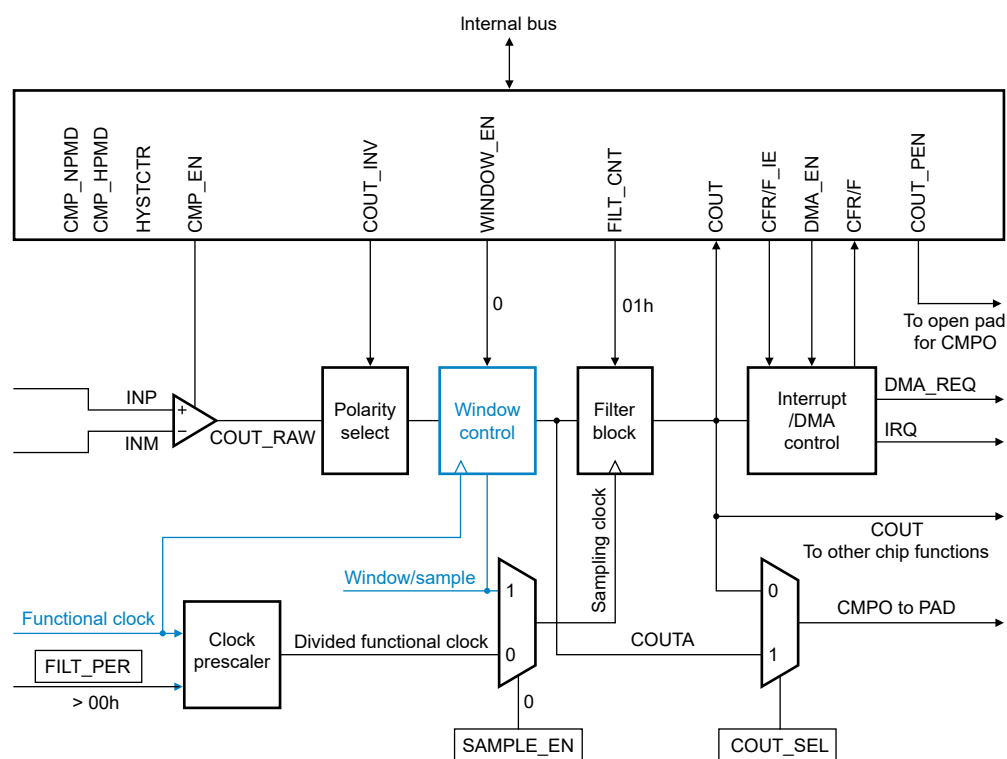



Figure 188. Sampled, Non-Filtered (#3B): sampling interval internally derived

In this mode, the path from analog inputs to COUTA is combinational (unclocked). Windowing control bypasses completely. You can sample COUTA whenever you detect a rising edge on the sampling clock.


The difference in two operation modes (#3A and #3B) of sampled, non-filtered mode is that how you drive the clock to the filter block. In #3A, the clock to filter block drives externally, and in #3B, the clock to filter block drives internally.


The filter block has no other function than sample or hold of the comparator output in this mode.

The following figure shows the comparator operation in this mode, assuming that the polarity select sets to a non-inverting state.

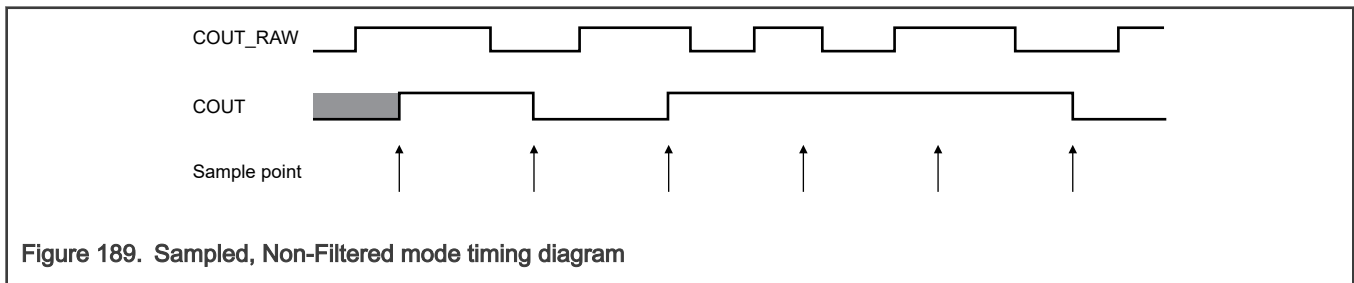

43.3.5.4 Sampled, filtered mode (#4A and #4B)

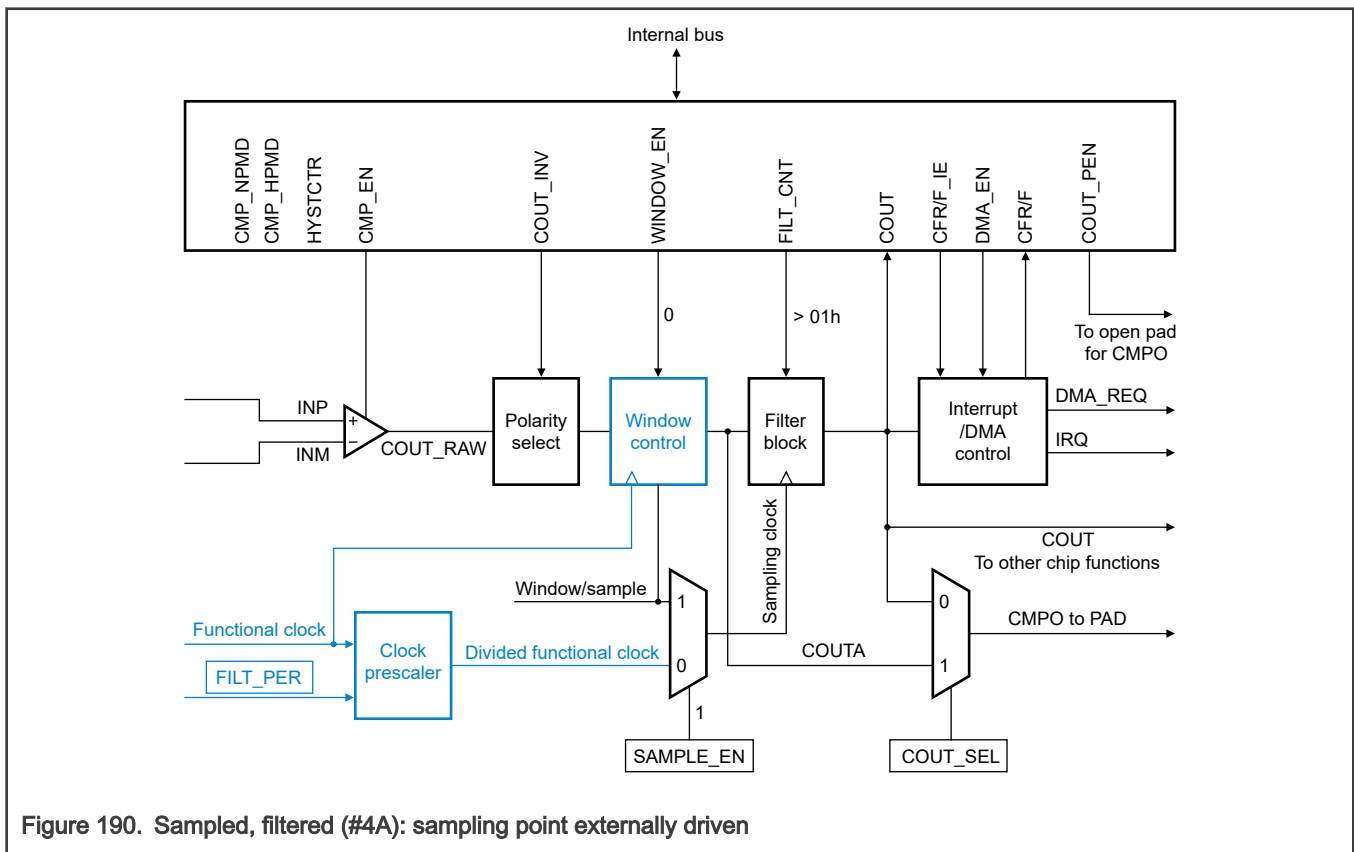

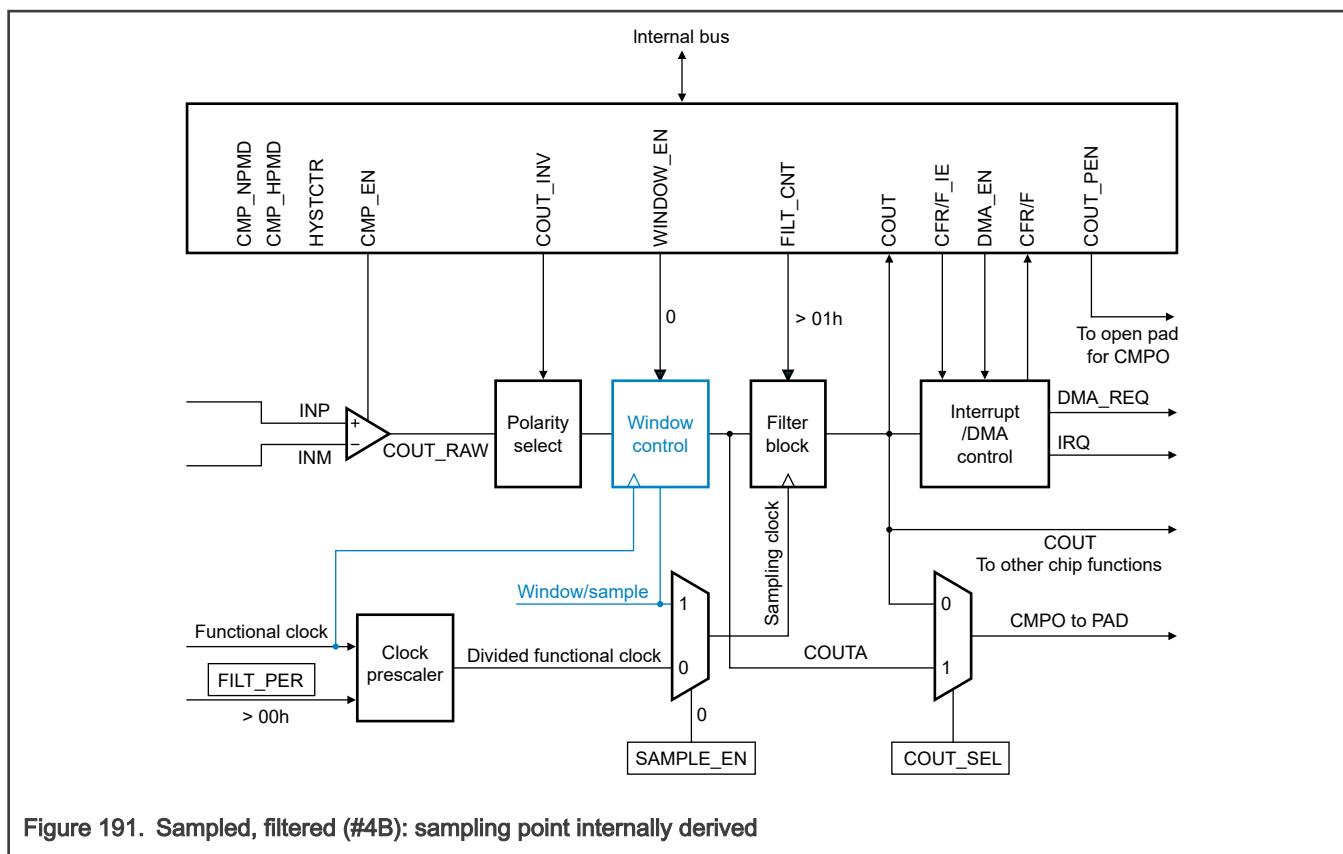


In this mode, the path from the analog inputs to COUTA is combinational(unclocked). Windowing control bypasses completely. You can sample COUTA whenever you detect a rising edge on the sampling clock.

The only difference in operation between sampled, non-filtered (#3A) mode and sampled, filtered (#4A) mode is that **CCR1[FILT_CNT]** is larger than 1, which activates filter operation.

The only difference in operation between sampled, non-filtered (#3B) mode and sampled, filtered (#4B) mode is that **CCR1[FILT_CNT]** is larger than 1, which activates filter operation.


43.3.5.5 Windowed mode (#5A and #5B)

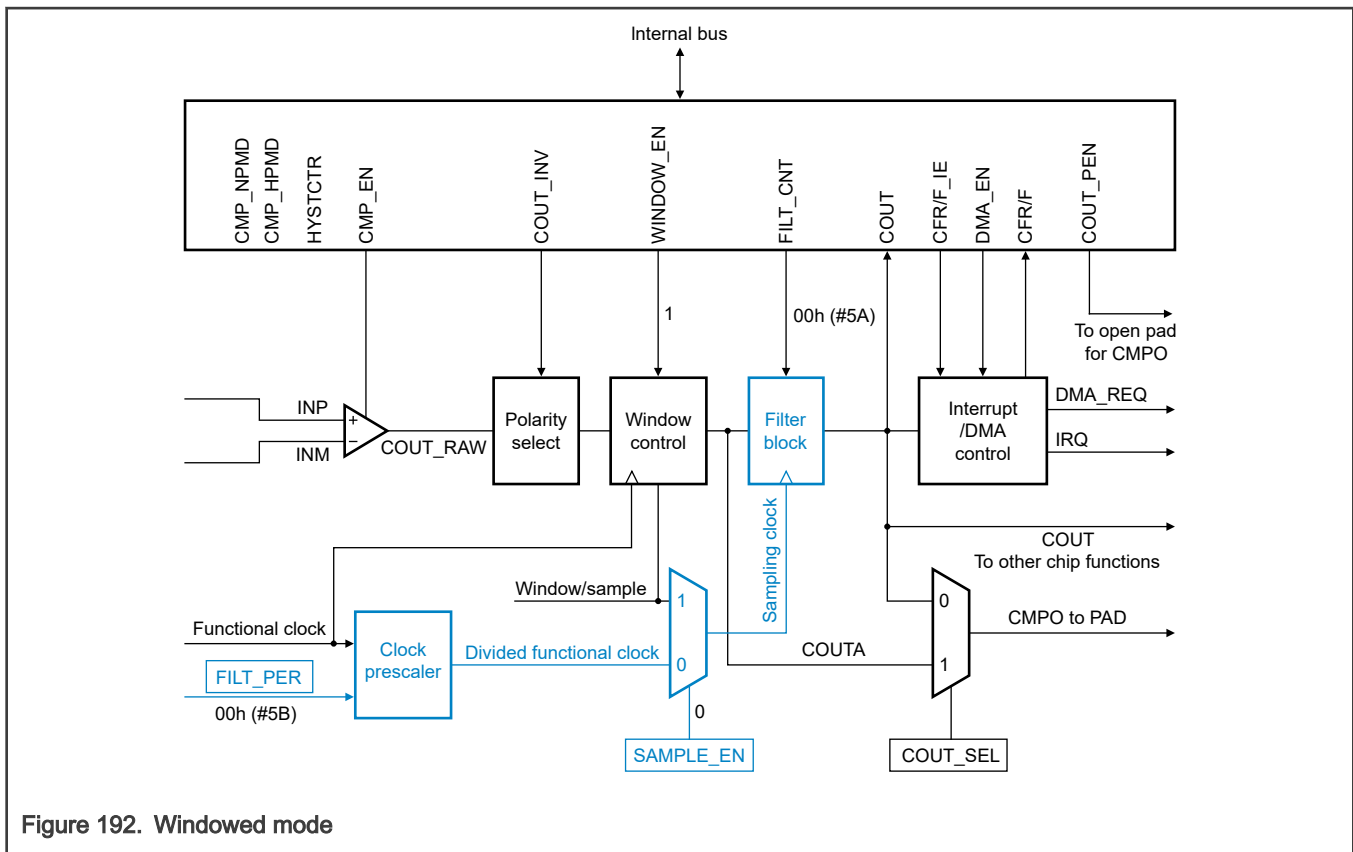

The functional clock clocks COUTA whenever you enable the window in this mode. The last latched value holds after you disable the window and the filter block is bypassed.

The following figure shows the comparator operation in this mode, ignoring the latency of the analog comparator, polarity select, and window control block. The polarity select sets to a non-inverting state.

COUTA may lag the analog inputs by up to two functional clock cycles plus the combinational path delay through the comparator and polarity select logic in the actual operation.

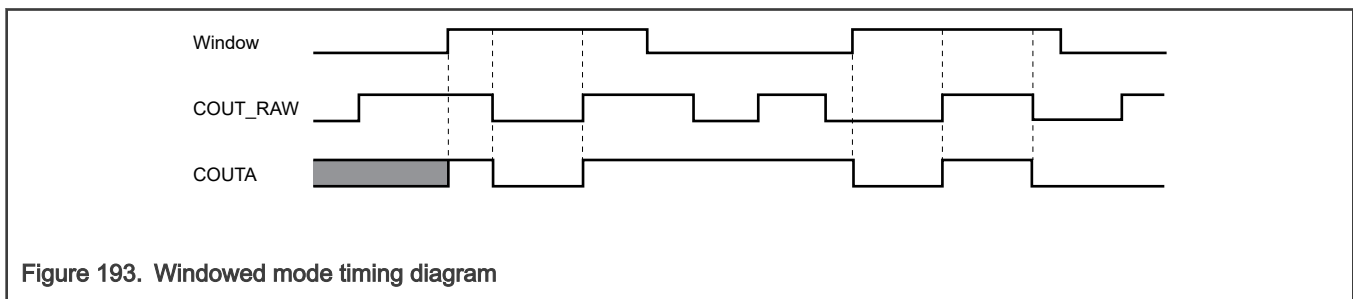

The following figure shows that if CCR1[COUTA_OWEN] becomes 1, you can define COUTA level as CCR1[COUTA_OW], after you closes the window.

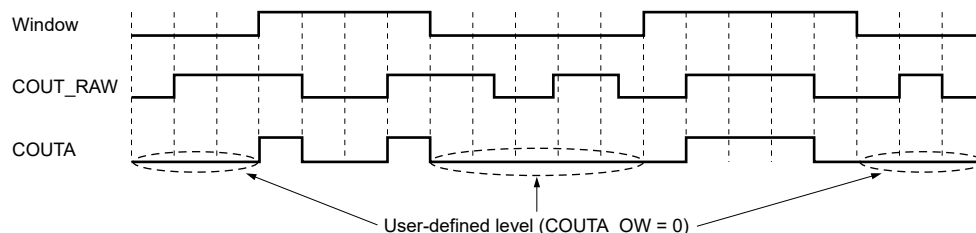


Figure 194. Windowed mode timing diagram with user defined value 0 outside window

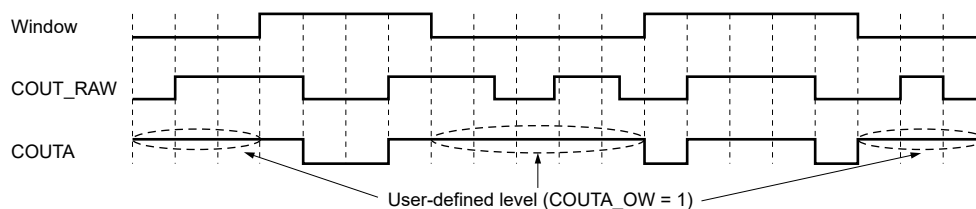


Figure 195. Windowed mode timing diagram with user defined value 1 outside window

If [CCR1\[WINDOW_CLS\]](#) becomes 1, you can define the COUT event (rising edge, falling edge or both edges that [CCR1\[EVT_SEL\]](#) selects) to close the window. The external window signal has to go to zero and back to one to enable the internal window again. The following figure shows an example that COUT rising edge closes the internal window.

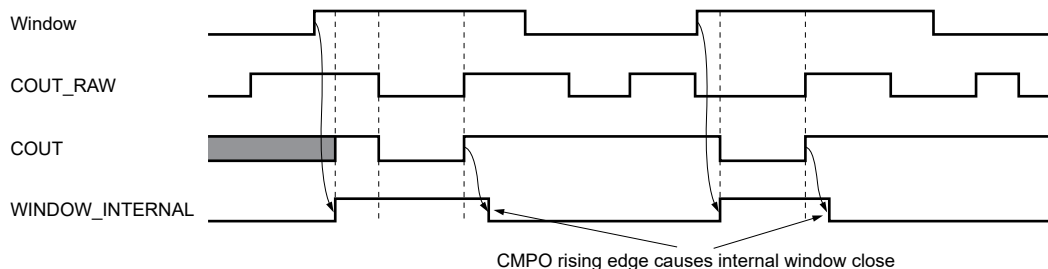


Figure 196. Windowed mode timing diagram with COUT rising edge close window

The following figure shows that if [CCR1\[WINDOW_INV\]](#) becomes 1, you can invert the window signal before you use it.

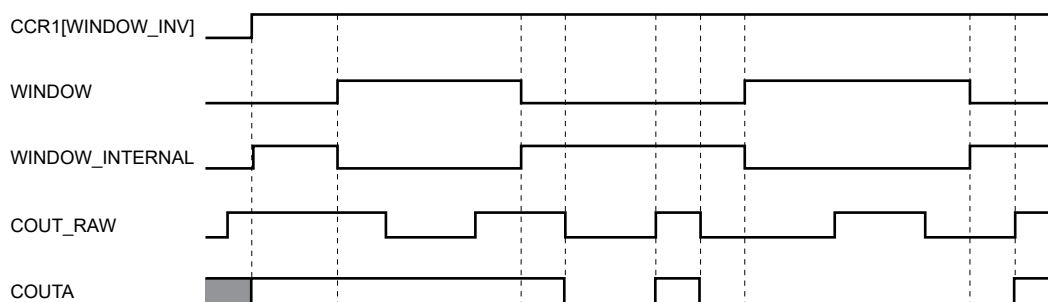


Figure 197. Windowed mode timing diagram with window signal inverted

43.3.5.6 Windowed/Resampled mode (#6)

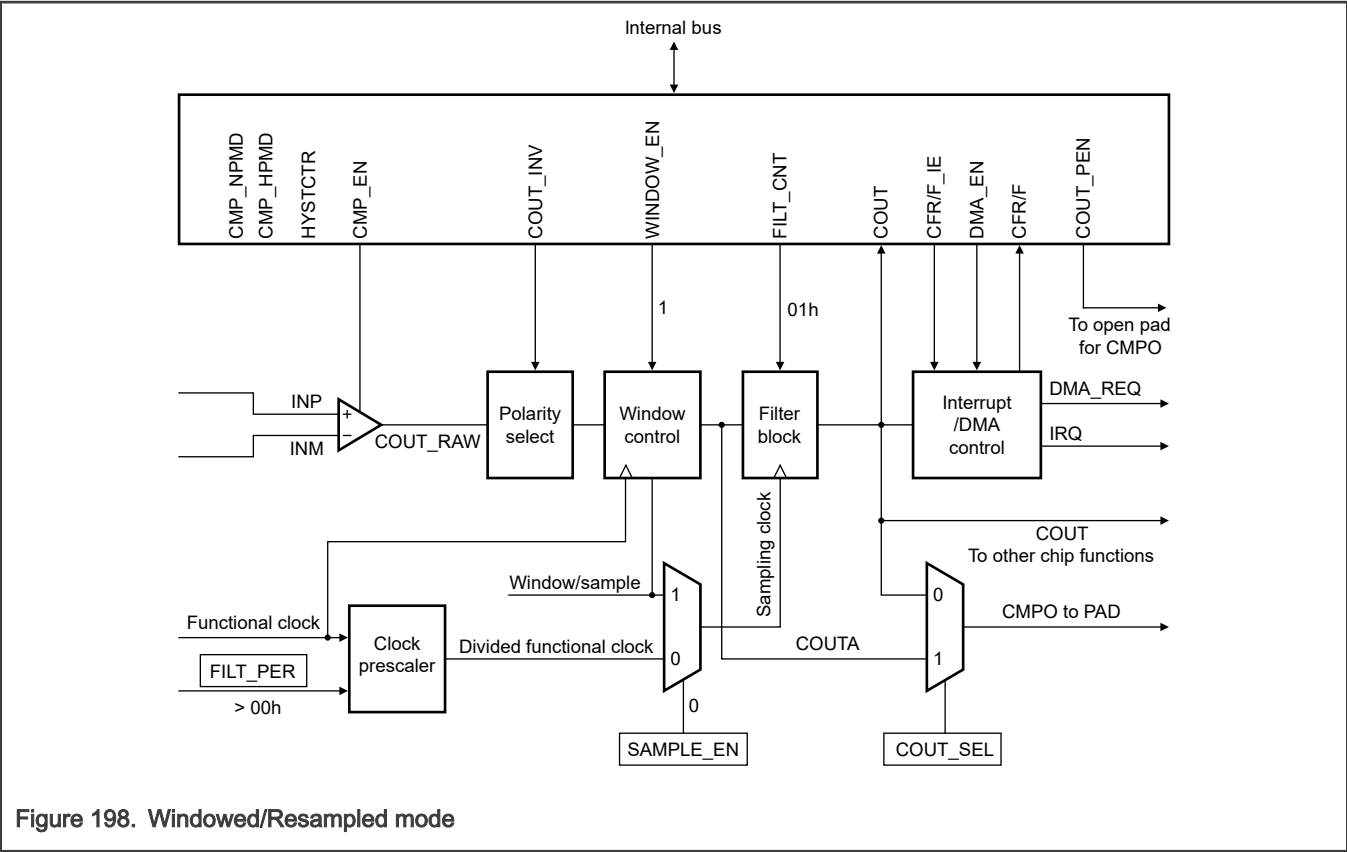


Figure 198. Windowed/Resampled mode

This mode of operation results in an unfiltered string of comparator samples where CCR1[FILT_PER] and the functional clock rate determines the interval between the samples. The following section shows that the configuration for this mode is virtually identical to that for the Windowed/Filtered mode. The only difference is that the value of CCR1[FILT_CNT] must be 1 in this mode.

The following figure uses the same input stimulus shown in Figure 193, and adds resampling of COUTA to generate COUT. The arrows in the figure indicate the time points at which the samples are taken. You can ignore prop delays and latency for clarity.


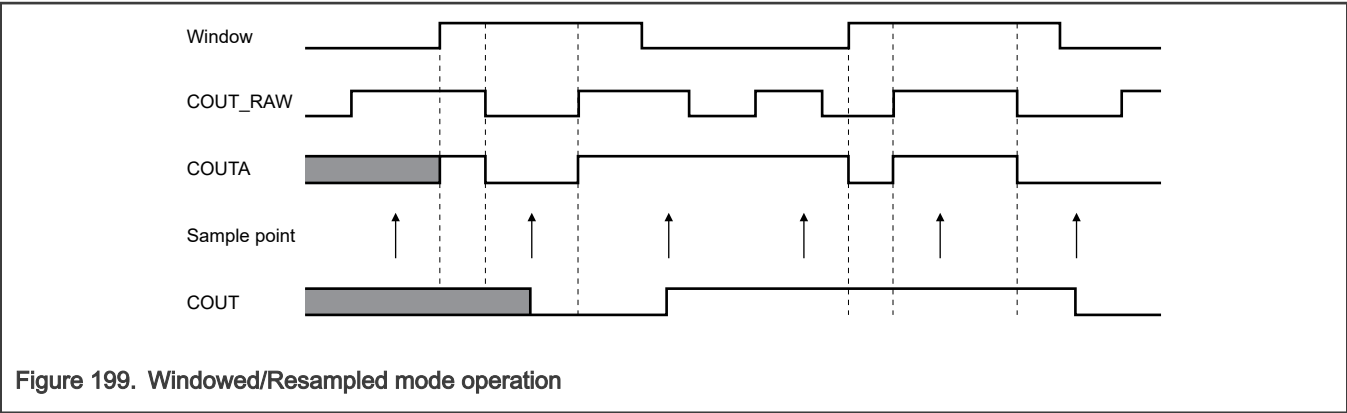


Figure 199. Windowed/Resampled mode operation

This example demonstrates the operation of the comparator in Windowed/Resampled mode, and does not reflect any specific application. Based on the sampling rate and window placement, COUT may not see zero-crossing events that the analog comparator detects. You must carefully consider the sampling period and/or window placement for a given application.

43.3.5.7 Windowed/Filtered mode (#7)

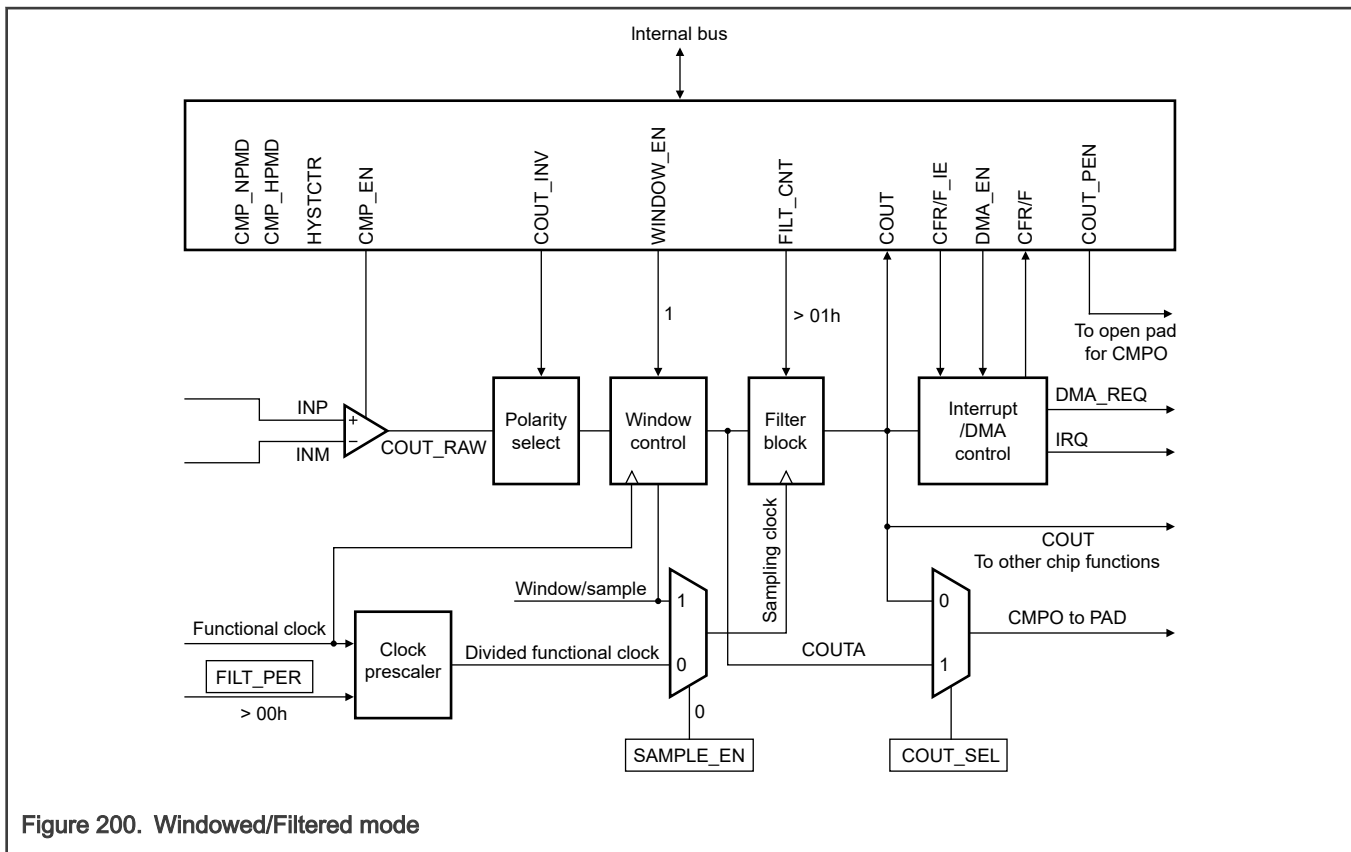

The only difference in operation between **Windowed/Resampled mode (#6)** and **Windowed/Filtered mode (#7)** is that **CCR1[FILT_CNT]** is >1, which activates filter operation.

This mode is the most complex mode of operation for the comparator block, as it utilizes both windowing and filtering features. It also has the highest latency of any of the modes. This is approximately: up to 2 peripheral clock synchronization in the window function + $((\text{CCR1[FILT\_CNT]} \times \text{CCR1[FILT\_PER]}) + 1) \times$ peripheral clock for the filter function.

43.3.6 DMA

After DMA is enabled by writing 1 to `CCR1[DMA_EN]` and interrupt is enabled by writing 1 to `IER[CFR_IE]`, `IER[CFF_IE]`, or both, the corresponding change on COUT forces a DMA transfer request rather than a CPU interrupt. After the DMA completes the transfer, it sends a transfer completing indicator signal that deasserts the DMA transfer request and clears the flags (both `CSR[CFR]` and `CSR[CFF]`) to allow a subsequent change on comparator output to occur and forces another DMA request.

The comparator can remain functional in Deep Sleep modes if `CCR0[CMP_STOP_EN]` becomes 1.

A DMA transfer request wakes up the system from Deep Sleep mode. After completing the data transfer, the system go back again to Deep Sleep mode. See the DMA chapters in this document for more information on the asynchronous DMA function.

43.3.7 Clocking

LPCMP requires the following clocks to operate:

Table 318. LPCMP clocks

Type of clock	Description
Bus	Controls the access to LPCMP registers.

Table continues on the next page...

Table 318. LPCMP clocks (continued)

Type of clock	Description
Functional	Controls window/filter function. LPCMP configures CCR1[FUNC_CLK_SEL] to select one from the four functional clock sources. See the Chip-specific LPCMP information for more on the functional clock source information.
Round-robin clock (RCLK)	Controls Round-robin trigger mode. LPCMP configures CCR1[RR_CLK_SEL] to select one from the four round-robin clock sources. See the Chip-specific LPCMP information for more on the round robin clock source information.

43.3.8 Resets

The global chip reset signal resets LPCMP.

43.3.9 Interrupts

After the corresponding [IER](#) becomes 1, [CSR\[CFR\]](#), [CSR\[CFF\]](#), and [CSR\[RRF\]](#) can generate an interrupt, assuming that [CCR1\[DMA_EN\]](#) is not 1. You can clear either the flag or [IER](#) to deassert the interrupt.

43.4 External signal descriptions

Below table introduces external signals.

Table 319. External signal descriptions

Signal	Description	I/O
CMPO	Filtered or unfiltered comparator output	O
Input_Analog_Channels	Analog input channels (see the chip-specific information for more on the connections).	I
VREFH_EXT	External reference voltage for the CMP-DAC (see the chip-specific information for more on the connections).	I
RR_ACTIVE	Round-robin trigger mode enabled.	O

43.5 Initialization

You can enable LPCMP by writing 1 to [CCR0\[CMP_EN\]](#), and then configuring the control registers ([CCR1](#), [CCR2](#), [DCR](#), and so on).

To disable LPCMP, write 0 to [CCR0\[CMP_EN\]](#). Switching operation modes or changing control register fields on-the-fly (when [CCR0\[CMP_EN\]](#) is set to 1) may cause noise on the COUT or COUTA signals. To avoid unwanted signal noise, you must ensure to disable the module before switching modes or changing control fields.

The time required to stabilize COUT is the power-on delay of the comparators plus the largest propagation delay from a selected analog source through the analog comparator, windowing function, and filter (see the Comparator and 8-bit DAC electrical specifications section of LPCMP datasheet for more information on propagation delay and power-up delay). [Table 317](#) specifies the delay that the windowing and filter function causes.

During operation, you must always consider the propagation delay of the selected data paths. It can take many functional clock cycles for COUT and [CSR\[CFR\]/CSR\[CFF\]](#) to reflect an input change or a configuration change to one of the components involved in the data path.

43.6 Application information

43.6.1 Round-robin trigger mode programming recommendation

Configure the Round-robin trigger mode as follows:

1. Configure [RRCR0\[RR_CLK_SEL\]](#) to select the RR clock source.
2. Configure the comparison cycles by [RRCR0\[RR_NSAM\]](#). Note: It is a mandatory request that the round robin cycling period must set longer than the time that all the active channels complete the specified comparison cycles set by [RRCR0\[RR_NSAM\]](#).
3. Configure CMP initialization delay by [RRCR0\[RR_INITMOD\]](#). Note: In programming [RRCR0\[RR_INITMOD\]](#), the $RR\_INITMOD \times \text{round robin clock period}$ must be longer than the initialization delay, see the LPCMP datasheet for more information.
4. Configure [RRCR0\[RR_SAMPLE_CNT\]](#) and [RRCR0\[RR_SAMPLE_THRESHOLD\]](#).
5. Configure [RRCR0\[RR_TRG_SEL\]](#) to select the trigger from internal or external.
6. Enable [RRCR2\[RR_TIMER_EN\]](#) and configure [RRCR2\[RR_TIMER_RELOAD\]](#) according to the round robin clock frequency, if using an internal trigger.
7. Configure [RRCR1\[FIXP\]](#) to select the fixed port of CMP and [RRCR1\[FIXCH\]](#) to select the fixed channel.
8. Configure channels for comparison by [RRCR1\[RR_CHnEN\]](#).
9. Write [RRCSR\[RR_CHnOUT\]](#) to define the pre-set state of channel n.
10. Clear channel flags [RRSR\[RR_CHnF\]](#).
11. Enable round robin interrupt by [IER\[RRF_IE\]](#) (disable [IER\[CFR_IE\]](#) and [IER\[CFF_IE\]](#)).
12. Enable round-robin trigger mode by setting [RRCR0\[RR_EN\]](#) to 1.

43.6.2 Round-robin clock (RCLK) frequency requirement

(1) RCLK high frequency limit

RCLK high frequency limit depends on two facts:

1. The analog CMP and DAC initialization time (see the chip data sheet for more information on the initialization time.)
 - [RRCR0\[RR_INITMOD\]](#) provides a maximum 63 RCLK cycles for the analog CMP and DAC initialization.
 - RCLK must be slow to assure: $63 * (1/f_{RCLK}) > T_{\text{initialization}}$, where f_{RCLK} is in MHz, and $T_{\text{initialization}}$ is in microsecond.
 - so $f_{RCLK} < 63 / T_{\text{initialization}}$
 - Example: $T_{\text{initialization}} = 40 \mu\text{s}$, then f_{RCLK} should be smaller than 1.575 MHz.
2. The analog CMP propagation delay (see the Comparator and 8-bit DAC electrical specifications section of LPCMP datasheet for more information on the CMP propagation delay.)
 - [RRCR0\[RR_NSAM\]](#) provides a maximum 4 RCLK cycles for the analog CMP propagation delay.
 - RCLK must be slow to assure: $4 * (1/f_{RCLK}) > T_{\text{propagation}}$, where f_{RCLK} is in MHz, and $T_{\text{propagation}}$ is in microsecond.
 - $f_{RCLK} < 4 / T_{\text{propagation}}$
 - Example: $T_{\text{propagation}} = 0.1 \mu\text{s}$, then f_{RCLK} must be smaller than 40 MHz.

(2) RCLK low frequency limit

In theory, RCLK frequency has no low limit. But the lower the RCLK frequency, the longer the scan time. Therefore, the lower limit of the RCLK frequency depends on the system application.

43.7 LPCMP register descriptions

The memory map comprises of 32-bit aligned registers, which you can access via 8-, 16- or 32-bit reads and 32-bit write. Attempted accesses using unsupported write data sizes, writes to read-only resources, or to reserved spaces terminate with an error. Read access to reserved address generates a transfer error and the read data bus shows all 0s.

43.7.1 LPCMP memory map

CMP0 base address: 400B_1000h

CMP1 base address: 400B_2000h

CMP2 base address: 400B_3000h

Offset	Register	Width (In bits)	Access	Reset value
0h	Version ID (VERID)	32	R	0100_0001h
4h	Parameter (PARAM)	32	R	0000_0002h
8h	Comparator Control Register 0 (CCR0)	32	RW	0000_0002h
Ch	Comparator Control Register 1 (CCR1)	32	RW	0000_0000h
10h	Comparator Control Register 2 (CCR2)	32	RW	0000_0000h
18h	DAC Control (DCR)	32	RW	0000_0000h
1Ch	Interrupt Enable (IER)	32	RW	0000_0000h
20h	Comparator Status (CSR)	32	RW	0000_0000h
24h	Round Robin Control Register 0 (RRCR0)	32	RW	0000_0000h
28h	Round Robin Control Register 1 (RRCR1)	32	RW	0000_0000h
2Ch	Round Robin Control and Status (RRCSR)	32	RW	0000_0000h
30h	Round Robin Status (RRSR)	32	RW	0000_0000h
38h	Round Robin Control Register 2 (RRCR2)	32	RW	0000_0000h

43.7.2 Version ID (VERID)


Offset

Register	Offset
VERID	0h

Function

Contains version numbers for the module design and feature set.

Diagram

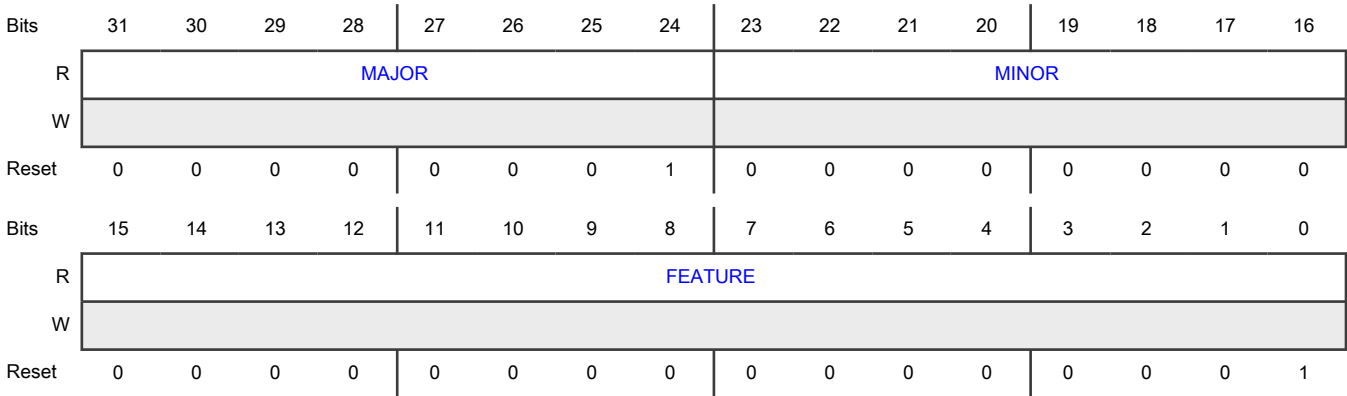

Fields

Field	Function
31-24 MAJOR	Major Version Number Returns the major version number for the module design.
23-16 MINOR	Minor Version Number Returns the minor version number for the module design.
15-0 FEATURE	Feature Specification Number Returns the feature set number. 0000_0000_0000_0001b - Round robin feature


43.7.3 Parameter (PARAM)

Offset

Register	Offset
PARAM	4h

Function

Contains parameter values that are implemented in the module.

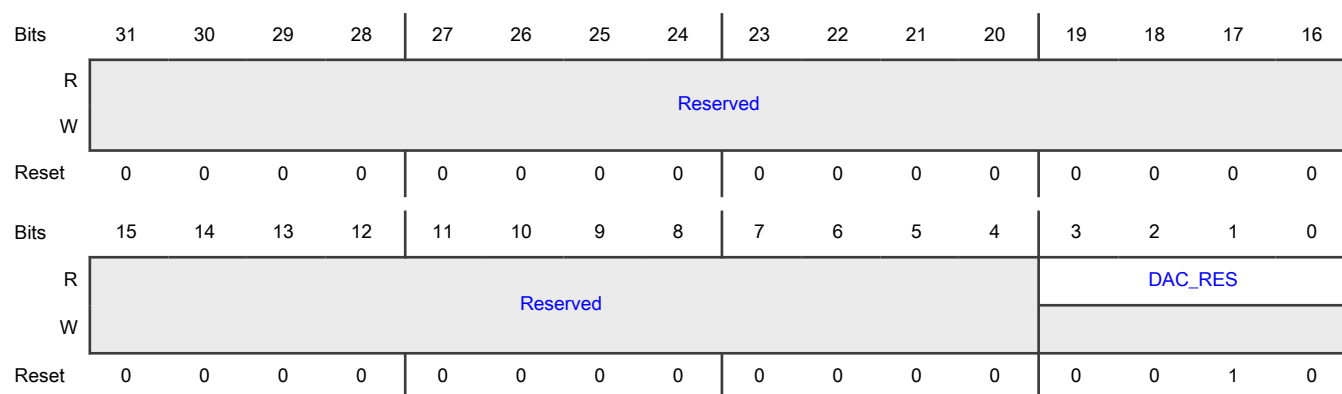Diagram**Fields**


Field	Function
31-4 —	Reserved
3-0 DAC_RES	DAC Resolution Indicates supported DAC resolutions. NOTE All other bit field values are reserved. 0000b - 4-bit DAC 0001b - 6-bit DAC 0010b - 8-bit DAC 0011b - 10-bit DAC 0100b - 12-bit DAC 0101b - 14-bit DAC 0110b - 16-bit DAC

43.7.4 Comparator Control Register 0 (CCR0)**Offset**

Register	Offset
CCR0	8h

Function

Contains configuration options for enabling the analog comparator.

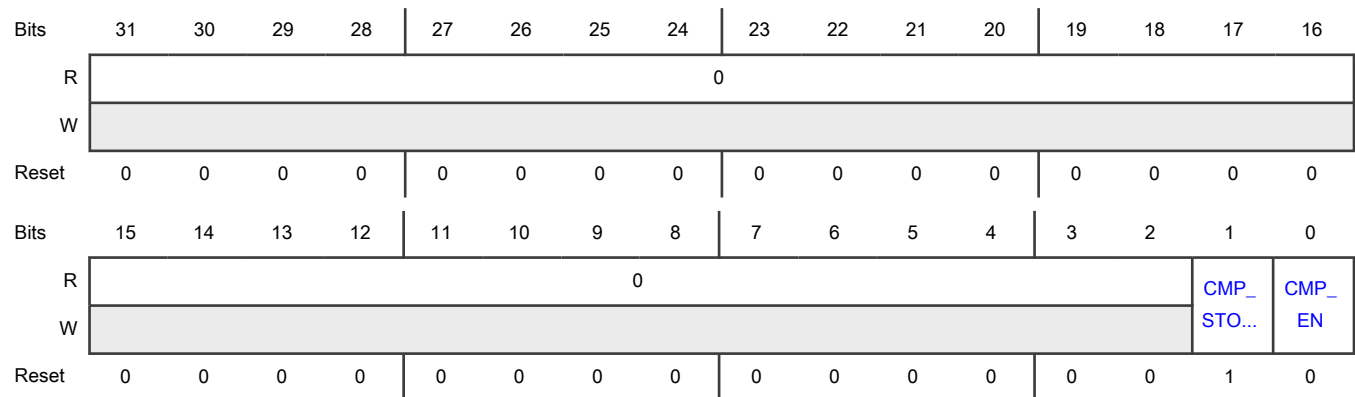Diagram**Fields**

Field	Function
31-2 —	Reserved
1 CMP_STOP_EN	Comparator Deep Sleep Mode Enable Enables the analog comparator or the DAC when the module is in Deep Sleep mode. NOTE This field has no effect in Round-robin Trigger mode. 0b - Disables the analog comparator regardless of CMP_EN. 1b - Allows CMP_EN to enable the analog comparator.
0 CMP_EN	Comparator Enable Enables the analog comparator. 0b - Disable (The analog logic remains off and consumes no power.) 1b - Enable

43.7.5 Comparator Control Register 1 (CCR1)**Offset**

Register	Offset
CCR1	Ch


Function

Contains configuration options for the comparator operation, such as enabling Sampling or Windowing mode.

NOTE

You cannot enable Sampling and Windowing modes both at the same time. Sampling mode takes precedence over Windowing mode. If you write 1 to both [SAMPLE_EN](#) and [WINDOW_EN](#), only [SAMPLE_EN](#) becomes 1.

Diagram

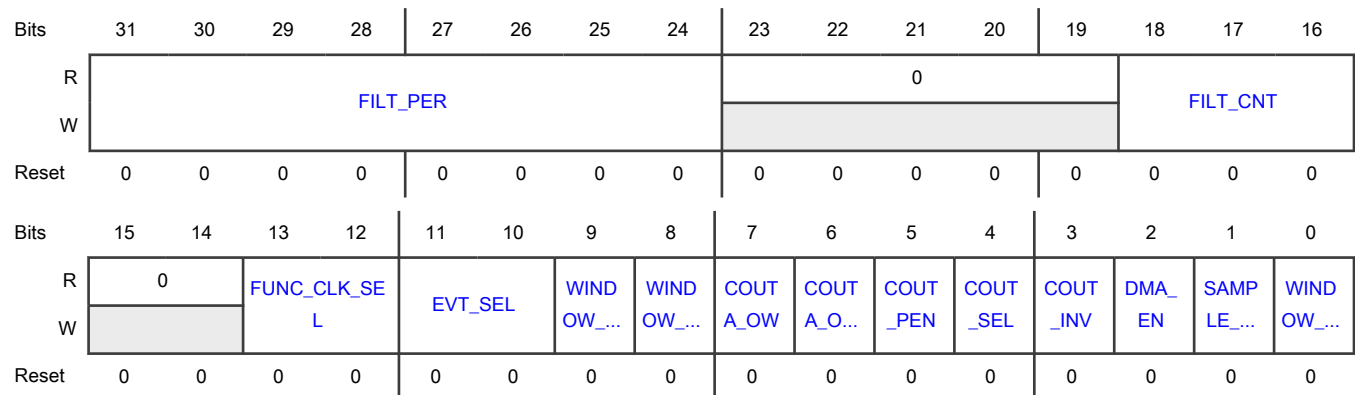

Fields

Field	Function
31-24 FILT_PER	Filter Sample Period Specifies the sampling period (in functional clock cycles) of the comparator output filter. Programming this field to 00h bypasses the filter. See Functional description for more information on filter programming and latency. NOTE FILT_PER has no effect in Sampling mode (CCR1[SAMPLE_EN] = 1).
23-19 —	Reserved
18-16 FILT_CNT	Filter Sample Count Specifies the number of consecutive samples that must agree before the comparator output filter accepts the sample as a new valid output state. See Functional description for more information on filter programming and latency. 000b - Filter is bypassed: COUT = COUTA 001b - 1 consecutive sample (Comparator output is simply sampled.) 010b - 2 consecutive samples 011b - 3 consecutive samples 100b - 4 consecutive samples 101b - 5 consecutive samples 110b - 6 consecutive samples 111b - 7 consecutive samples
15-14 —	Reserved
13-12	Functional Clock Source Select

Table continues on the next page...

Table continued from the previous page...

Field	Function
FUNC_CLK_SE L	Selects which clock source is used for the functional clock. See the Chip-specific LPCMP information for more on the functional clock source information. 00b - Select functional clock source 0 01b - Select functional clock source 1 10b - Select functional clock source 2 11b - Select functional clock source 3
11-10 EVT_SEL	COUT Event Select Selects which COUT signal edge (rising, falling, or both) defines a COUT event. NOTE Valid only in Windowing mode. 00b - Rising edge 01b - Falling edge 1xb - Both edges
9 WINDOW_CLS	COUT Event Window Close Enables a COUT event (defined as a COUT rising edge, falling edge, or both) to close an active window. See EVT_SEL to configure the COUT event. NOTE The WINDOW signal has to go to zero and back to one again to re-activate the window. Valid only in Windowing mode. 0b - COUT event cannot close the window 1b - COUT event can close the window
8 WINDOW_INV	WINDOW/SAMPLE Signal Invert Inverts the window/sample signal. 0b - Do not invert 1b - Invert
7 COUTA_OW	COUTA Output Level for Closed Window Defines the COUTA signal value when the window is closed. NOTE Valid only in Windowing mode and when COUTA_OWEN=1. 0b - COUTA is 0 1b - COUTA is 1
6	COUTA_OW Enable

Table continues on the next page...

Table continued from the previous page...

Field	Function
COUTA_OWEN	Enables the COUTA signal value to be defined by COUTA_OW when the window is closed. NOTE Valid only in Windowing mode. 0b - COUTA holds the last sampled value. 1b - Enables the COUTA signal value to be defined by COUTA_OW.
5 COUT_PEN	Comparator Output Pin Enable Enables the comparator output to become an available signal option for a selected package pin. 0b - Not available 1b - Available
4 COUT_SEL	Comparator Output Select Selects which comparator output option, COUT or COUTA, to use for CMPO. 0b - Use COUT (filtered) 1b - Use COUTA (unfiltered)
3 COUT_INV	Comparator Invert Selects the polarity of the analog comparator function, affecting the value driven to the COUT output (on both the chip pin and as CSR[COUT]) when CCR0[CMPE_N] is 0. NOTE COUT_INV has no effect in Trigger mode. 0b - Do not invert 1b - Invert
2 DMA_EN	DMA Enable Enables DMA transfers triggered from the LPCMP module. After this field and the corresponding interrupt enable field becomes 1, a DMA request is asserted when CFR or CFF becomes 1. 0b - Disable 1b - Enable
1 SAMPLE_EN	Sampling Enable Enables Sampling mode. 0b - Disable 1b - Enable
0 WINDOW_EN	Windowing Enable Enables Windowing mode.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	NOTE Valid only when SAMPLE_EN = 0. 0b - Disable 1b - Enable

43.7.6 Comparator Control Register 2 (CCR2)

Offset

Register	Offset
CCR2	10h

Function

Contains the configuration options for the comparator operation, such as selecting the plus and minus comparator inputs and the hysteresis levels.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0								MSEL				0	PSEL		
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0								HYSTCTR				0		CMP_ NPMD	CMP_ HPMD
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-23 —	Reserved
22-20 MSEL	Minus Input MUX Select Selects the input used for the negative mux. See the chip-specific LPCMP information for more on connections.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	NOTE MSEL has no effect in Trigger mode. 000b - Input 0m 001b - Input 1m 010b - Input 2m 011b - Input 3m 100b - Input 4m 101b - Input 5m 110b - Reserved 111b - Internal DAC output
19 —	Reserved
18-16 PSEL	Plus Input MUX Select Selects the input used for the positive mux. See the chip-specific LPCMP information for more on connections. NOTE PSEL has no effect in Trigger mode. 000b - Input 0p 001b - Input 1p 010b - Input 2p 011b - Input 3p 100b - Input 4p 101b - Input 5p 110b - Reserved 111b - Internal DAC output
15-6 —	Reserved
5-4 HYSTCTR	Comparator Hysteresis Control Selects the level of internally generated hysteresis for the comparator output. NOTE This applies to the comparator hard block.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	00b - Level 0: Analog comparator hysteresis 0 mV. 01b - Level 1: Analog comparator hysteresis 10 mV. 10b - Level 2: Analog comparator hysteresis 20 mV. 11b - Level 3: Analog comparator hysteresis 30 mV.
3-2 —	Reserved
1 CMP_NPMD	CMP Nano Power Mode Select Enables Nano Power mode for the comparator. 0b - Disables CMP Nano power mode. CCR2[CMP_HPMD] determines the mode for the comparator. 1b - Enables CMP Nano power mode.
0 CMP_HPMD	CMP High Power Mode Select Selects Low or High Power(Speed) mode for the comparator. NOTE Valid only when not in Nano Power mode (CMP_NPMD = 0). 0b - Low power (speed) comparison mode 1b - High power (speed) comparison mode

43.7.7 DAC Control (DCR)


Offset

Register	Offset
DCR	18h

Function

Contains the configuration options to enable the DAC.

Diagram

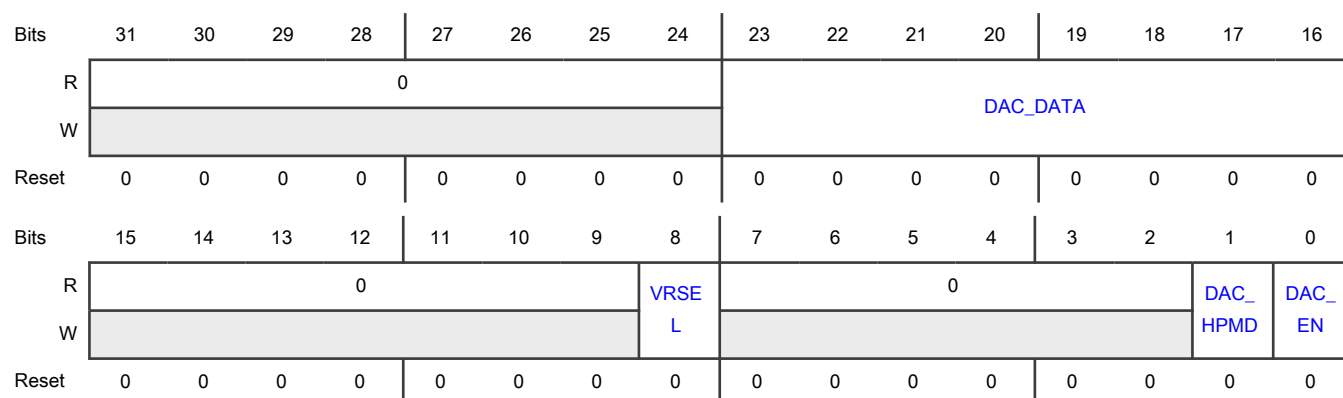

Fields

Field	Function
31-24 —	Reserved
23-16 DAC_DATA	DAC Output Voltage Select Selects the DAC output (DACO) voltage from one of 256 distinct levels by configuring the value of DAC_DATA. The DACO ranges from $V_{in}/256$ to V_{in} . NOTE $DACO = (V_{in}/256) * (DAC\_DATA + 1)$
15-9 —	Reserved
8 VRSEL	DAC Reference High Voltage Source Select Selects the high voltage reference source for the V_{in} supply of the DAC's resistor ladder network. See the chip-specific LPCMP information for the source of $vrefh0$ and $vrefh1$. 0b - VREFH0 1b - VREFH1
7-2 —	Reserved
1 DAC_HPMD	DAC High Power Mode Enables the DAC high power mode. 0b - Disable 1b - Enable
0 DAC_EN	DAC Enable Enables the DAC. When disabled, power-down the DAC to conserve power.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - Disable 1b - Enable

43.7.8 Interrupt Enable (IER)

Offset

Register	Offset
IER	1Ch

Function

Provides enable fields for the comparator and round-robin flag interrupts.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0												RRF_	CFF_	CFR_	
W													IE	IE	IE	
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-3 —	Reserved
2 RRF_IE	Round-Robin Flag Interrupt Enable Enables or disables the round-robin flag interrupt. 0b - Disables the round-robin flag interrupt. 1b - Enables the round-robin flag interrupt when the comparison result changes for a given channel.
1	Comparator Flag Falling Interrupt Enable

Table continues on the next page...

Table continued from the previous page...

Field	Function
CFF_IE	Enables or disables the comparator flag falling interrupt. 0b - Disables the comparator flag falling interrupt. 1b - Enables the comparator flag falling interrupt when CFF is set.
0 CFR_IE	Comparator Flag Rising Interrupt Enable Enables or disables the comparator flag rising interrupt. 0b - Disables the comparator flag rising interrupt. 1b - Enables the comparator flag rising interrupt when CFR is set.

43.7.9 Comparator Status (CSR)

Offset

Register	Offset
CSR	20h

Function

Indicates comparator status, including COUT, CFF, CFR, and RRF.

NOTE

LPCMP may output a glitch and affect the value of CSR[CFF] and CSR[CFR] at the moment of enabling CMP. In order to ensure correctness, it is recommended to write one to clear (W1C) CSR[CFF] and CSR[CFR] before further configuring CMP.

Diagram

[illegible]

Fields

Field	Function
31-9 —	Reserved
8 COUT	Analog Comparator Output Returns the current value of the analog comparator output when read. This field resets to 0 and reads as CCR1[COUT_INV] after the analog comparator module disables when CCR0[CMP_EN] = 0. Writing to this field is ignored.
7-3 —	Reserved
2 RRF	Round-Robin Flag Detects when any channel's last comparison result is different from the pre-set value in Trigger mode. Write 1 to clear this field. This field clears when CCR0[CMP_EN] or RRCR0[RR_EN] is not 1. 0b - Not detected 1b - Detected
1 CFF	Analog Comparator Flag Falling Detects when a falling edge on COUT occurs. Write 1 to clear this field when CCR1[DMA_EN] is disabled. If CCR1[DMA_EN] is enabled, the flag automatically clears after DMA is done. This field clears when CCR0[CMP_EN] is not 1. 0b - Not detected 1b - Detected
0 CFR	Analog Comparator Flag Rising Detects when a rising edge on COUT occurs. Write 1 to clear this field when CCR1[DMA_EN] is disabled. If CCR1[DMA_EN] is enabled, the flag automatically clears after DMA is done. This field clears when CCR0[CMP_EN] is not 1. 0b - Not detected 1b - Detected

43.7.10 Round Robin Control Register 0 (RRCR0)


Offset

Register	Offset
RRCR0	24h

Function

Contains configuration options for the round-robin operation, such as enabling it and specifying the initialization delay.

Diagram

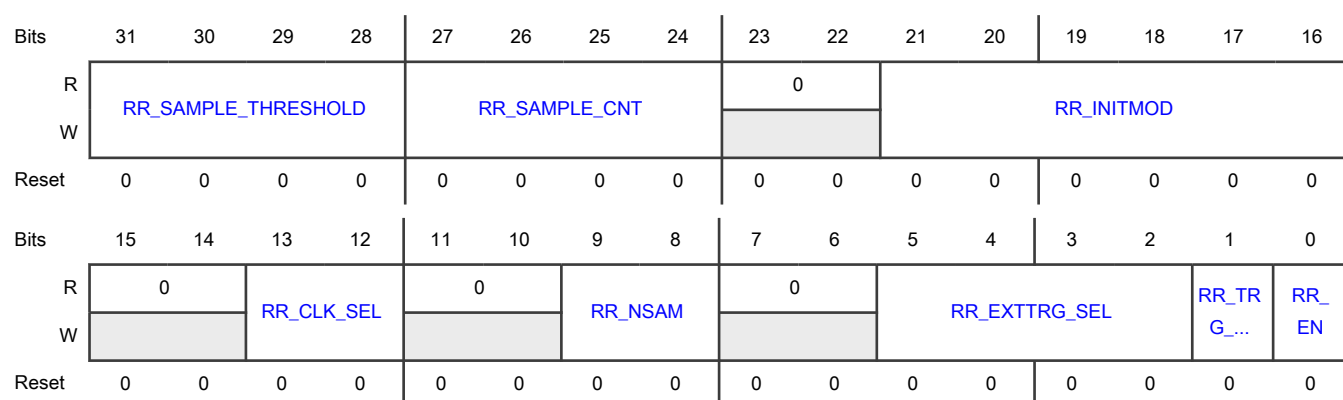

Fields

Field	Function
31-28 RR_SAMPLE_THRESHOLD	Sample Time Threshold Specifies that for one channel, when (RR_SAMPLE_THRESHOLD+1) sample results are "1", the final result is "1"; otherwise the final result is "0". NOTE This field must not be larger than RRCR0[RR_SAMPLE_CNT]. 0000b - At least 1 sampled "1", the final result is "1" 0001b - At least 2 sampled "1", the final result is "1" 0010b - At least 3 sampled "1", the final result is "1" 0011b - At least 4 sampled "1", the final result is "1" 0100b - At least 5 sampled "1", the final result is "1" 0101b - At least 6 sampled "1", the final result is "1" 0110b - At least 7 sampled "1", the final result is "1" 0111b - At least 8 sampled "1", the final result is "1" 1000b - At least 9 sampled "1", the final result is "1" 1001b - At least 10 sampled "1", the final result is "1" 1010b - At least 11 sampled "1", the final result is "1" 1011b - At least 12 sampled "1", the final result is "1" 1100b - At least 13 sampled "1", the final result is "1" 1101b - At least 14 sampled "1", the final result is "1" 1110b - At least 15 sampled "1", the final result is "1" 1111b - At least 16 sampled "1", the final result is "1"
27-24	Number of Sample for One Channel Specifies the number of samples for one channel.

Table continues on the next page...

Table continued from the previous page...

Field	Function
RR_SAMPLE_COUNT	0000b - 1 samples 0001b - 2 samples 0010b - 3 samples 0011b - 4 samples 0100b - 5 samples 0101b - 6 samples 0110b - 7 samples 0111b - 8 samples 1000b - 9 samples 1001b - 10 samples 1010b - 11 samples 1011b - 12 samples 1100b - 13 samples 1101b - 14 samples 1110b - 15 samples 1111b - 16 samples
23-22 —	Reserved
21-16 RR_INITMOD	Initialization Delay Modulus Specifies the number of round-robin clock cycles that determines the comparator and DAC initialization delay specified in the chip datasheet. Calculate the initialization delay as $RR\_INITMOD * (\text{round-robin clock period})$. For example, if the initialization delay is 80us and the round-robin clock is 100kHz, program RR_INITMOD to be $80\mu s / 10\mu s = 8$. 00_0000b - 63 cycles (same as 111111b) 00_0001b-11_1111b - 1 to 63 cycles
15-14 —	Reserved
13-12 RR_CLK_SEL	Round Robin Clock Source Select Selects which clock source is used for the Round Robin clock. See the chip-specific LPCMP information for more on the Round Robin clock source information. 00b - Select Round Robin clock Source 0 01b - Select Round Robin clock Source 1

Table continues on the next page...

Table continued from the previous page...

Field	Function												
	10b - Select Round Robin clock Source 2 11b - Select Round Robin clock Source 3												
11-10 —	Reserved												
9-8 RR_NSAM	Number of Sample Clocks Specifies the number of the round-robin clock cycles to wait after scanning the active channel before sampling the channel's comparison result. After the next cycle of the round-robin clock, the sampling takes place RR_NSAM clocks later. 00b - 0 clock 01b - 1 clock 10b - 2 clocks 11b - 3 clocks												
7-6 —	Reserved												
5-2 RR_EXTTRG_SEL	External Trigger Source Select Selects the external trigger from 16 trigger sources. See the chip-specific LPCMP information for more on the trigger source information. NOTE This field is not supported in every instance. The following table includes only supported registers. <table><tr><th>Instance</th><th>Field supported in</th><th>Field not supported in</th></tr><tr><td>CMP0</td><td>—</td><td>RRCR0</td></tr><tr><td>CMP1</td><td>RRCR0</td><td>—</td></tr><tr><td>CMP2</td><td>RRCR0</td><td>—</td></tr></table> 0000b - Select external trigger source 0 0001b - Select external trigger source 1 0010b - Select external trigger source 2 0011b - Select external trigger source 3 0100b - Select external trigger source 4 0101b - Select external trigger source 5	Instance	Field supported in	Field not supported in	CMP0	—	RRCR0	CMP1	RRCR0	—	CMP2	RRCR0	—
Instance	Field supported in	Field not supported in											
CMP0	—	RRCR0											
CMP1	RRCR0	—											
CMP2	RRCR0	—											

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0110b - Select external trigger source 6 0111b - Select external trigger source 7 1000b - Select external trigger source 8 1001b - Select external trigger source 9 1010b - Select external trigger source 10 1011b - Select external trigger source 11 1100b - Select external trigger source 12 1101b - Select external trigger source 13 1110b - Select external trigger source 14 1111b - Select external trigger source 15
1 RR_TRG_SEL	Round-Robin Trigger Select Selects the internal trigger or external trigger as the trigger source. 0b - External trigger 1b - Internal trigger
0 RR_EN	Round-Robin Enable Enables the round-robin operation. 0b - Disable 1b - Enable


43.7.11 Round Robin Control Register 1 (RRCR1)

Offset

Register	Offset
RRCR1	28h

Function

Contains configuration options for the round-robin operation, such as enabling individual channels to participate.

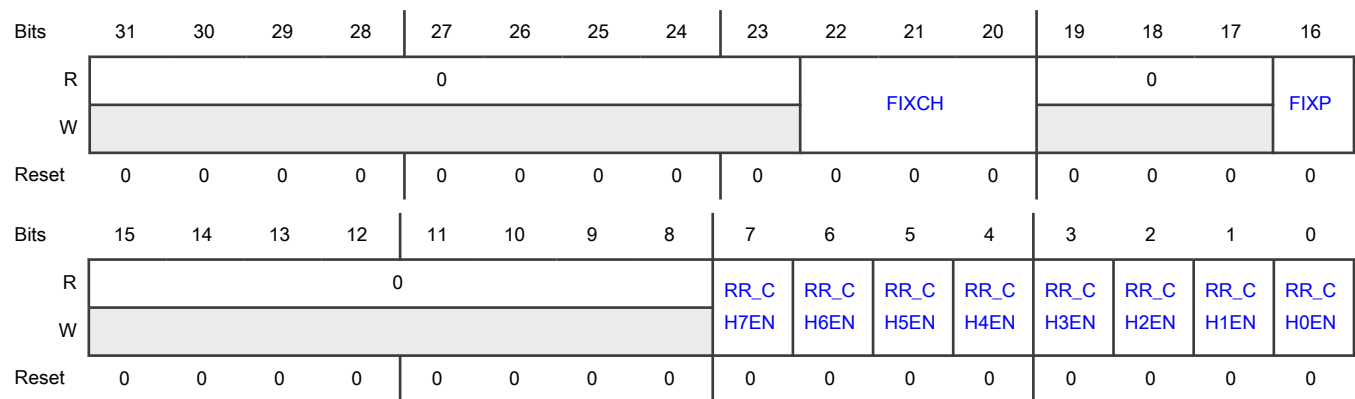Diagram**Fields**

Field	Function
31-23 —	Reserved
22-20 FIXCH	Fixed Channel Select Selects which channel in the mux port to fix for a given round-robin trigger mode application. 000b - Channel 0 001b - Channel 1 010b - Channel 2 011b - Channel 3 100b - Channel 4 101b - Channel 5 110b - Channel 6 111b - Channel 7
19-17 —	Reserved
16 FIXP	Fixed Port Fixes an analog mux port (plus or minus) for round-robin trigger mode. The inputs to the non-fixed port sweep during each round. 0b - Fix the plus port. Sweep only the inputs to the minus port. 1b - Fix the minus port. Sweep only the inputs to the plus port.
15-8 —	Reserved
7-0	Channel n Input Enable in Trigger Mode

Table continues on the next page...

Table continued from the previous page...

Field	Function
RR_CHnEN	Enables channel n of the non-fixed mux port to check its voltage value when in Trigger mode. 0b - Disable 1b - Enable

43.7.12 Round Robin Control and Status (RRCSR)


Offset

Register	Offset
RRCSR	2Ch

Function

Contains the latest comparison results of the individual channels with the fixed mux port. It also allows you to define the pre-set state for each channel.

Diagram

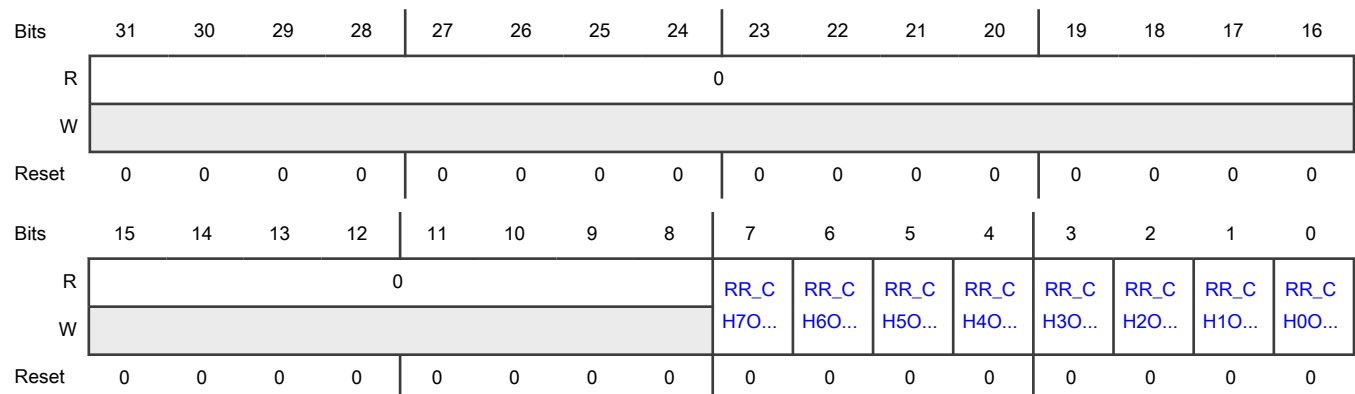

Fields

Field	Function
31-8 —	Reserved
7-0 RR_CHnOUT	Comparison Result for Channel n Returns the latest comparison result for channel n when read and defines the pre-set state for channel n when written to.

43.7.13 Round Robin Status (RRSR)

Offset

Register	Offset
RRSR	30h

Function

Contains individual channel flags that indicates when a channel's last comparison result is different from its pre-set value.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0								RR_ CH7F	RR_ CH6F	RR_ CH5F	RR_ CH4F	RR_ CH3F	RR_ CH2F	RR_ CH1F	RR_ CH0F
W									W1C	W1C	W1C	W1C	W1C	W1C	W1C	W1C
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-8 —	Reserved
7-0 RR_CHnF	Channel n Input Changed Flag Indicates when the corresponding channel's last comparison result is different from its pre-set value. NOTE To clear a flag, write a 1 to it. 0b - No different 1b - Different


43.7.14 Round Robin Control Register 2 (RRCR2)

Offset

Register	Offset
RRCR2	38h

Function
Provides the controls for the round-robin internal trigger generation.

Diagram

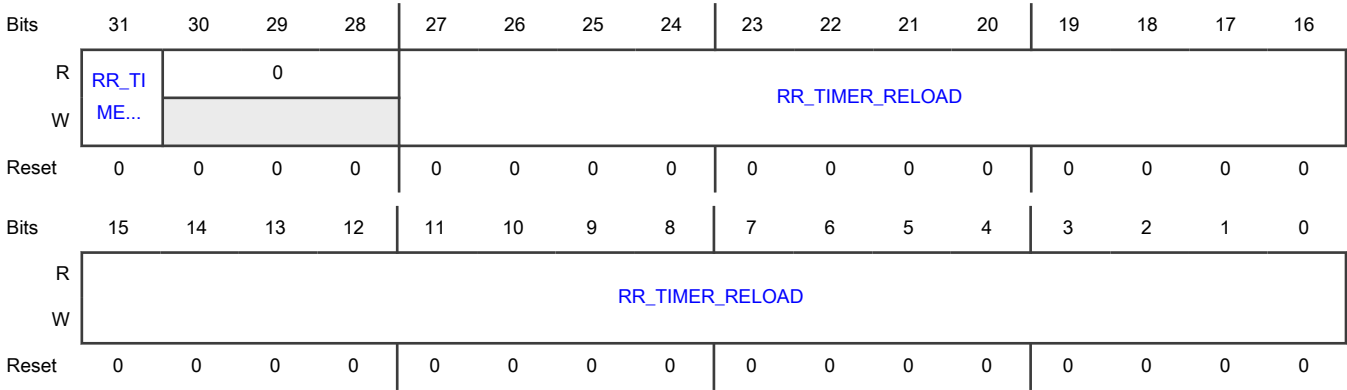

Fields

Field	Function
31 RR_TIMER_EN	Round-Robin Internal Timer Enable Enables round-robin internal timer. 0b - Disables 1b - Enables
30-28 —	Reserved
27-0 RR_TIMER_RELOAD	Number of Sample Clocks Establishes the repetitive count rate for the round-robin internal timer. Each time the timer counts zero it is reloaded with this value. The round-robin trigger signal generates at a rate of (RR_TIMER_RELOAD + 1) times the round-robin clock period.

Chapter 44

Digital-to-Analog Converter (DAC)

44.1 Chip-specific 12-bit DAC information

Table 320. Reference links to related information

Topic	Related module	Reference
Full description	12-bit DAC	12-bit Digital-to-Analog Converter (DAC)
System memory map		Memory map
Clocking		Clock distribution
Power Management		Power Management
Signal multiplexing	Port control	Signal multiplexing
Peripheral Input Mux	INPUTMUX	Peripheral Input multiplexing

44.1.1 Module instances

This device has one instance of the 12-bit 1 Msps DAC module, DAC0, with compatible DAC Controller. Set controller FIFO size to 4 (16 words).

44.1.2 12-bit DAC references

- VREFH0=VDDA
- VREFH1=VREFI (P2_7 pin)
- VREFH2=VREFH

44.1.3 12-bit DAC chip-specific initialization

To initialize the 12-bit DAC module:

1. Set the clock divider for DAC in SYSCON registers.
2. Enable the clock to DAC in SYSCON. This enables the register interface and the peripheral function clock.
3. Power up the DAC with ACTIVE_CFG1 and LP_CFG1 registers in SPC. See [SOC_CNTRL fields](#).
4. Reset and release the DAC peripheral reset.
5. Reset the DAC logic by setting and clearing bit RCR[SWRST]. See RCR register [Reset Control \(RCR\)](#).
6. Reset the DAC FIFO by setting and clearing bit RCR[FIFORST].
7. If needed, initialize the DAC reference source before selecting the DAC reference with GCR[DACRFS]. See GCR register [Global Control \(GCR\)](#).
8. Configure DAC as described in section [Initialization](#).


44.1.4 12-bit DAC trigger inputs

12-bit DAC trigger sources get routed through the [INPUTMUX](#). See the DAC0_TRIG register in the INPUTMUX chapter for available trigger sources.

44.2 Overview

The 12-bit general-purpose digital-to-analog converter is a Low-power DAC. The output of the DAC can be placed on an external pin or set as one of the inputs to the analog comparator or ADC.

44.2.1 Block diagram

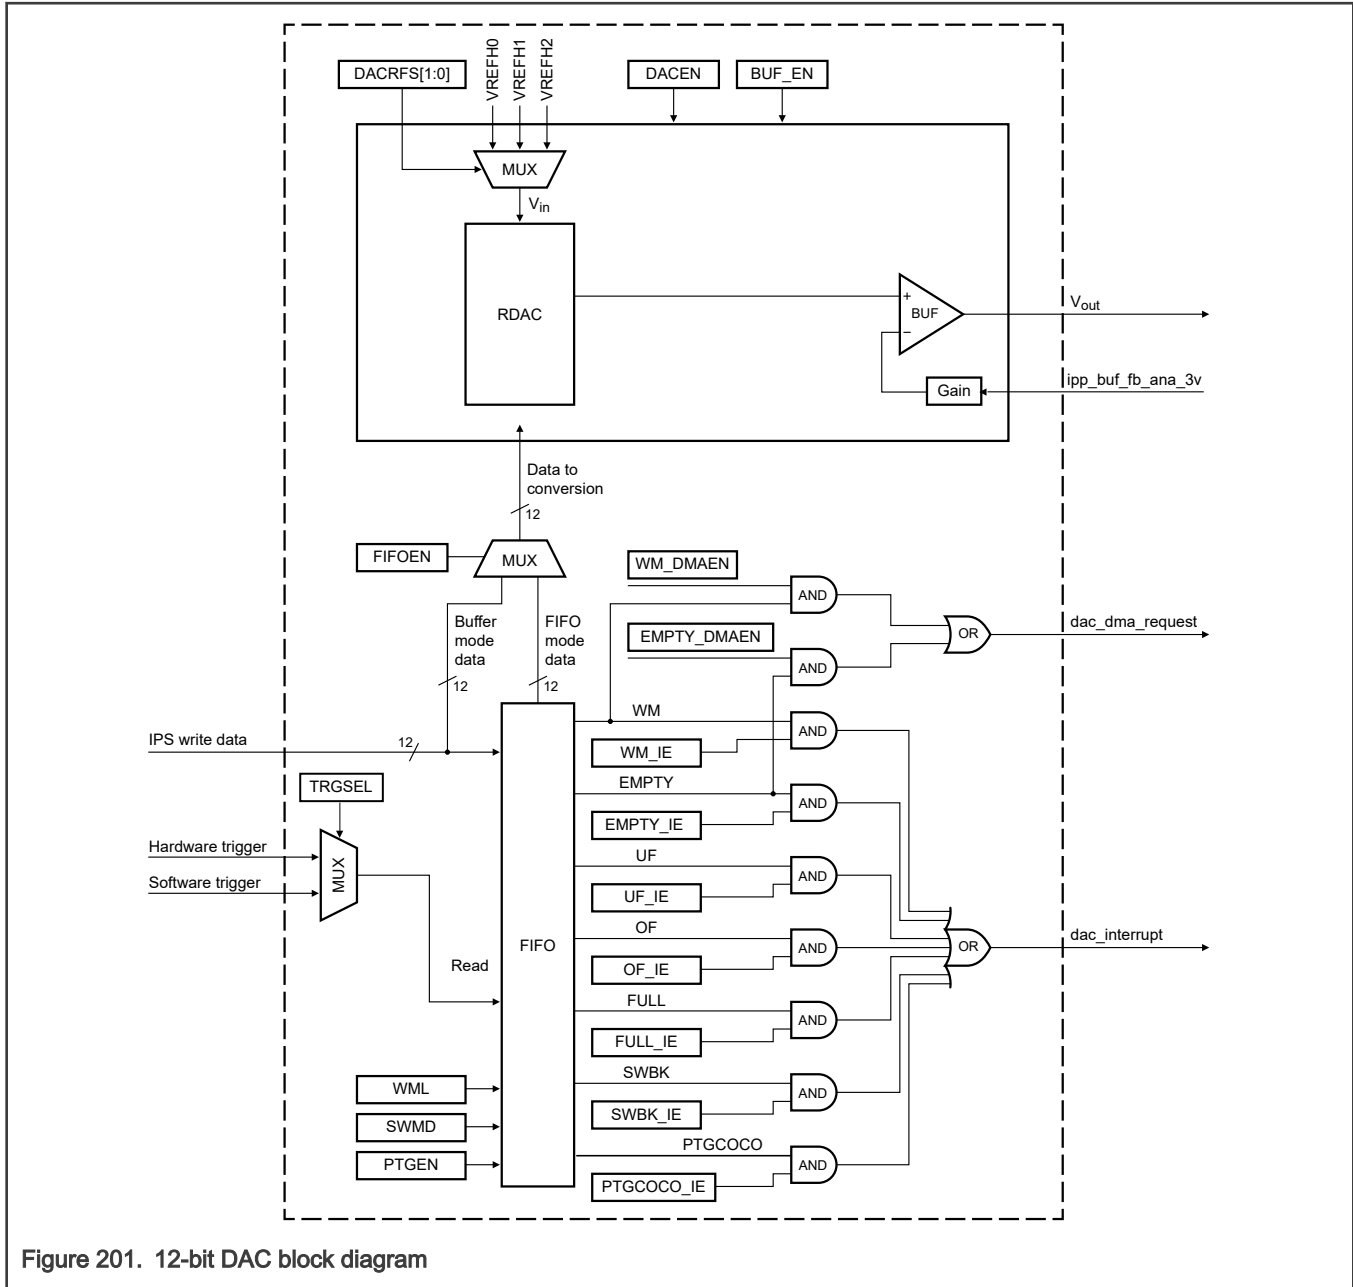

44.2.2 Features

- Includes an on-chip programmable reference generator output. The voltage output ranges from $1/4096 V_{in}$ to V_{in} , and the step is $1/4096 V_{in}$, where V_{in} is the input reference voltage.
- Selects V_{in} from three reference sources.
- Supports 16-word depth FIFO with the configurable watermark.

- Uses multiple operation modes.
 - Buffer mode
 - FIFO mode
 - Swing Back mode
 - Periodic Trigger mode
- Supports software trigger and hardware trigger.
- Provides selectable performance levels: Low-Power mode(LP) and Lower Low-Power mode(LLP).
- Provides interrupt and DMA support.

44.3 Functional description

12-bit DAC can select one of the three reference inputs: VREFH0, VREFH1, and VREFH2 as the reference voltage, by [DACRFS](#). See the chip-specific 12-bit DAC information to determine the source options for VREFH0, VREFH1, and VREFH2.

12-bit DAC converts a 12-bit data to a stepped analog output voltage when enabled. The output voltage range is from V_{in} to $V_{in}/4096$, and the step is $V_{in}/4096$.

You can configure the 12-bit DAC to Buffer mode, FIFO mode, Swing Back mode, or Periodic Trigger mode.

NOTE

You must configure 12-bit DAC before any conversion. During conversion or FIFO write operation, you must not change the configuration or disable [DACEN](#). If you switch to another mode, you must first write a 1 to [SWRST](#) to reset 12-bit DAC or write 0 to [DACEN](#).

44.3.1 Buffer mode

You can enable Buffer mode with [DACEN](#).

In Buffer mode, any write to [DATA](#) pushes the data to the analog conversion without trigger support.

NOTE

The data write speed must not be higher than the analog conversion speed.

44.3.2 FIFO mode

You can enable FIFO mode with [FIFOEN](#) and [DACEN](#).

In FIFO mode, for a 32-/16-bit write to [DATA](#), put the data into the FIFO and the write pointer increments automatically. For an 8-bit write, only if you write both the bytes, the write pointer increases. You must ensure that an 8-bit write is done in pair and write both the upper and lower bytes. There is no priority, which byte to write first.

When a software or hardware trigger comes, the read pointer pointed data in FIFO pushes to the analog conversion, and the read pointer increments automatically. If the trigger comes when FIFO is empty, the data to analog remains unchanged, and an underflow error flag sets.

44.3.3 Swing Back mode

You can enable Swing Back mode with [FIFOEN](#), [SWMD](#), and [DACEN](#).

The read pointer swings between the writer pointer and zero in Swing Back mode. The trigger increases the read pointer till the writer pointer and decreases the read pointer till zero, and so on. [EMPTY](#), [FULL](#), and [WM](#) have no meaning and you should ignore them during Swing Back mode.

NOTE

In Swing Back mode, the FIFO should first write at least two data; otherwise, this mode will not work correctly. You should not write the FIFO when Swing Back mode is in progress.

44.3.4 Periodic Trigger mode

You can enable Periodic Trigger mode with **FIFOEN**, **PTGEN**, and **DACEN**.

Due to the trigger (hardware or software) synchronization logic, there is a delay time variation between each conversion. If there is a need to trigger DAC periodically, NXP recommends you to use Periodic Trigger mode.

In Periodic Trigger mode, you only send the first trigger. Then after every [PTG_PERIOD+1] read clock (RCLK) cycle, an internal trigger automatically triggers the DAC. There are [PTG_NUM] internal triggers, therefore, in total [PTG_NUM+1] conversions, including the first trigger that you send. Write 0 to **PTGEN** to terminate the current conversion queue. Then, after the current conversion completes, the conversion terminates, and the **PTGCOCO** sets. If **PTG_NUM** becomes zero, the infinite triggers follow the first hardware/software trigger until you write 0 to **PTGEN**. In any case, **FIFORST** or **SWRST** can terminate the conversion.

During the periodic trigger mode conversion, you can ignore the additional hardware/software triggers. You can start another queue after **PTGCOCO** becomes 1.

During Periodic Trigger Mode, **WM** feeds data to FIFO to avoid underflow.

You can combine Periodic Trigger mode with **SWMD** to periodically trigger DAC and swing back.

44.3.5 Low-power mode operation

If the RCLK remains enabled, 12-bit DAC can be functional with FIFO mode or Swing Back mode or Periodic Trigger mode during Stop and Wait modes, using the hardware trigger initiating the conversion.

44.3.6 DMA

After the corresponding DMA enable register field becomes 1, you can automatically generate DMA requests when **WM** or **EMPTY** becomes 1. When you enable DMA, the error flags can only generate an interrupt.

44.3.7 Clocks

12-bit DAC block requires the following clock(s):

- Bus clock for register access and writing data to FIFO or Buffer.
- Read clock to push data from FIFO or Buffer to the analog DAC.

44.3.8 Resets

The following are the 12-bit DAC resets:

1. Global reset fed into the block. This global reset resets everything.
2. **SWRST**: resets all 12-bit DAC registers and internal logic.
3. **FIFORST**: resets the FIFO pointers in **DAC FIFO Pointer (FPR)** and flags in **FIFO Status (FSR)**.

44.3.9 Interrupts

After the corresponding interrupt enable register field becomes 1, warning flags and error flags can generate interrupt. The warning flags are **EMPTY**, **FULL**, **WM**, **SWBK**, and **PTGCOCO**. The error flags are **OF** and **UF**.

44.4 DAC external signal descriptions

Table 321. DAC external signal descriptions

Signal	Description	I/O
VREFH0	DAC reference high voltage 0	I
VREFH1	DAC reference high voltage 1	I
VREFH2	DAC reference high voltage 2	I
Vout	DAC output	O

44.5 Initialization

To initialize 12-bit DAC:

1. Configure the read clock at chip level.
2. Configure Work mode and GCR enables 12-bit DAC.
3. Configure [Interrupt Enable \(IER\)](#) if required.
4. Configure [DMA Enable \(DER\)](#) if required.
5. Configure [Periodic Trigger Control \(PCR\)](#) if required.
6. Write data to [DATA](#) to fill the FIFO, if FIFO mode.
7. Wait analog start-up time
8. Use hardware or software trigger to push data to the analog DAC to convert, if FIFO mode.
9. Write data directly to [DATA](#) to push data to the analog DAC to convert, if Buffer mode.

44.6 Application Information

Digital delay

Due to the resynchronization and data latch process, there is a delay between the trigger posedge and analog voltage settling. The delay is $(2 + \text{LATCH\_CYC}) \cdot T$ to $(3 + \text{LATCH\_CYC}) \cdot T$, where T is the RCLK period, and $\text{LATCH\_CYC} \cdot T$ should not be smaller than 40 ns. So the delay has one T uncertainty. The fast RCLK can achieve a small delay.

RCLK frequency

For discrete conversion, the RCLK frequency has no low limit. But slow RCLK involves large digital delay and uncertainty.

For continuous conversion, the RCLK frequency should be at least 5 times the trigger speed.

For continuous conversion, due to the one cycle uncertainty RCLK, the trigger period should not less than $(1000\text{ns} + T)$. Where 1000 ns period means the maximum analog conversion speed 1 Msps.

To achieve the full speed of DAC analog, you must configure to the internal periodic trigger mode.

For Internal Periodic Trigger mode, RCLK frequency should be at least two times the conversion speed. For example, to achieve 1 Msps conversion speed, at least 2 MHz RCLK requires in Periodic Trigger mode.

44.7 Memory map and register definition

All registers are accessible in 8-, 16-, or 32-bit accesses. For efficiency, 32-bit accesses are recommended. Access to an address outside the valid memory map generates a bus error.

44.7.1 DAC register descriptions

Access to an address outside the valid memory map generates a bus error.

44.7.1.1 DAC memory map

DAC0 base address: 400B_4000h

Offset	Register	Width (In bits)	Access	Reset value
0h	Version Identifier (VERID)	32	R	0100_0000h
4h	Parameter (PARAM)	32	R	0000_0003h
8h	Data (DATA)	32	RW	0000_0000h
Ch	Global Control (GCR)	32	RW	0000_0100h
10h	DAC FIFO Control (FCR)	32	RW	0000_0000h
14h	DAC FIFO Pointer (FPR)	32	R	0000_0000h
18h	FIFO Status (FSR)	32	RW	0000_0002h
1Ch	Interrupt Enable (IER)	32	RW	0000_0000h
20h	DMA Enable (DER)	32	RW	0000_0000h
24h	Reset Control (RCR)	32	RW	0000_0000h
28h	Trigger Control (TCR)	32	RW	0000_0000h
2Ch	Periodic Trigger Control (PCR)	32	RW	0000_0000h

44.7.1.2 Version Identifier (VERID)


Offset

Register	Offset
VERID	0h

Function

Indicates the version integrated for this instance on the chip.

Diagram

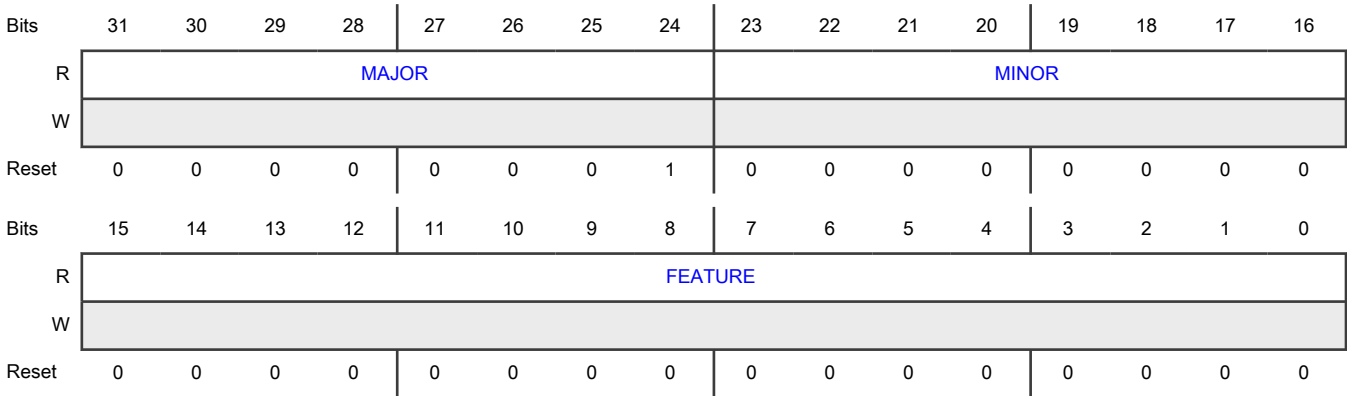

Fields

Field	Function
31-24 MAJOR	Major Version Number Returns the major version number for the module specification.
23-16 MINOR	Minor Version Number Returns the minor version number for the module specification.
15-0 FEATURE	Feature Identification Number Returns the feature set number.


44.7.1.3 Parameter (PARAM)

Offset

Register	Offset
PARAM	4h

Function

Indicates the feature parameters for this instance on the chip.

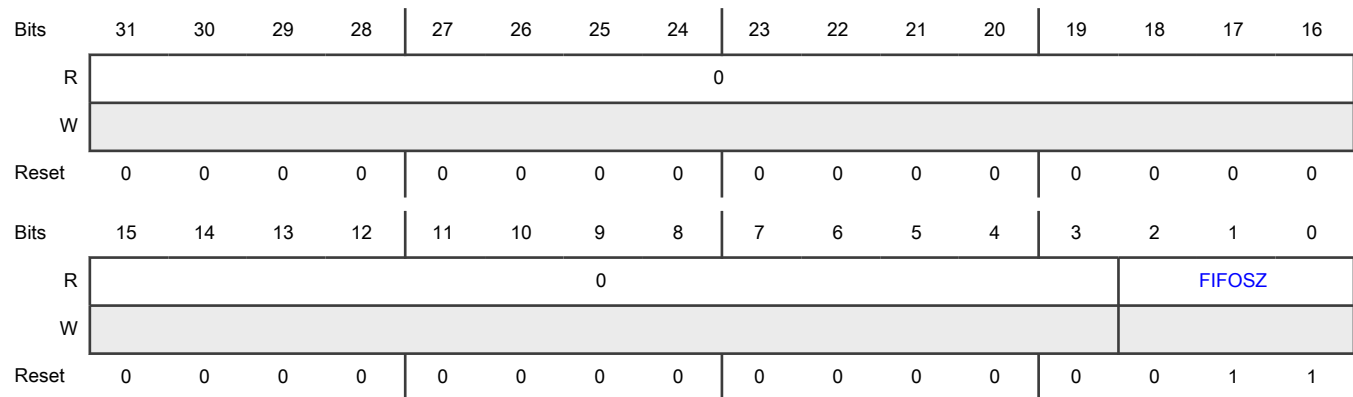Diagram**Fields**

Field	Function
31-3 —	Reserved
2-0 FIFOSZ	FIFO Size Indicates that the FIFO depth is $2^{(FIFOSZ+1)}$ words. 000b - Reserved 001b - FIFO depth is 4 010b - FIFO depth is 8 011b - FIFO depth is 16 100b - FIFO depth is 32 101b - FIFO depth is 64 110b - FIFO depth is 128 111b - FIFO depth is 256

44.7.1.4 Data (DATA)**Offset**

Register	Offset
DATA	8h

Function

Holds the FIFO entry in FIFO mode and serves as the buffer in Buffer mode.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0				0											
W					DATA											
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-12 —	Reserved
11-0 DATA	FIFO Entry or Buffer Entry Specifies that in FIFO mode, Swing Back mode, or Periodic Trigger mode, this is the FIFO data entry. In Buffer mode, write to this field pushes the data to analog without trigger support.

44.7.1.5 Global Control (GCR)**Offset**

Register	Offset
GCR	Ch

Function

Contains configuration options for DAC function, such as mode select, trigger select, and so on. It also includes the reference current select for the analog DAC.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0								BUF_S	0	IREF_ZT...	IREF_PT...	0		BUF_EN	0
W									PD...							
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0				LATCH_CYC				0	PTGE	TRGS	SWMD	FIFOE	DACRFS		DACE
W										N	EL		N			N
Reset	0	0	0	0	0	0	0	1	0	0	0	0	0	0	0	0

Fields

Field	Function
31-24 —	Reserved
23 BUF_SPD_CTR L	OPAMP as Buffer, Speed Control Signal NOTE See the DAC electrical characteristics of the chip datasheet for more information on the impact of the modes below. 0b - Lower Low-Power mode 1b - Low-Power mode
22 —	Reserved
21 IREF_ZTC_EXT _SEL	External On-Chip ZTC Current Reference Select Selects the external ZTC current reference, which is from the VREF module. See the Chip-specific section for more information. 0b - Not selected 1b - Selected
20 IREF_PTAT_EX T_SEL	External On-Chip PTAT Current Reference Select Selects the external PTAT current reference, which is from the VREF module. See the Chip-specific section for more information. 0b - Not selected 1b - Selected
19-18 —	Reserved
17 BUF_EN	Buffer Enable Uses OPAMP as the DAC analog buffer. 0b - Not used 1b - Used
16-12 —	Reserved
11-8 LATCH_CYC	RCLK Cycles Before Data Latch Configures the DAC sync cycles, which reduces the glitch on the output. The sync time is (LATCH_CYC+1) RCLK cycles. You must configure this register per the RCLK frequency. The recommended sync time is at least 40 ns.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	The recommended LATCH_CYC configuration is: Sync time is (LATCH_CYC+1) RCLK cycles, when $(25 \times \text{LATCH\_CYC}) \text{ MHz} < \text{RCLK} \leq (25 \times \text{LATCH\_CYC} + 25) \text{ MHz}$. Example 1, if f_{RCLK} is 48 MHz (period is 20.8 ns), you can configure LATCH_CYC to 0x1 to generate a 41.6 ns sync time. Example 2, if f_{RCLK} is 6 MHz (period is 166.7 ns), you can configure LATCH_CYC to 0x0 to generate a 166.7 ns sync time. See the "Clocking" chapter or chip-specific DAC information for more on the RCLK frequency. NOTE 12-bit DAC adds (LATCH_CYC+1) RCLK cycles before the analog starts to set up the output. Therefore, when you write to this field, NXP recommends using the smallest possible value that still meets the requirement of 40 ns sync time.
7 —	Reserved
6 PTGEN	DAC Periodic Trigger Mode Enable Enables Periodic Trigger Mode when FIFOEN becomes 1. 0b - Disables 1b - Enables
5 TRGSEL	DAC Trigger Select Selects the trigger source for FIFO mode. 0b - Hardware trigger 1b - Software trigger
4 SWMD	Swing Back Mode Specifies whether Swing Back mode is enabled. Selects the Swing Back mode when FIFOEN becomes 1. 0b - Disables 1b - Enables
3 FIFOEN	FIFO Enable Selects the FIFO mode or Buffer mode. 0b - Disables FIFO mode and enables Buffer mode. Any data written to DATA[DATA] goes to buffer then goes to conversion. 1b - Enables FIFO mode. Data will be first read from FIFO to buffer and then goes to conversion.
2-1 DACRFS	DAC Reference Select Selects the source of reference voltage high.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	00b - Selects VREFH0 as the reference voltage. 01b - Selects VREFH1 as the reference voltage. 10b - Selects VREFH2 as the reference voltage. 11b - Reserved.
0 DACEN	DAC Enable Enables the DAC system. Starts the programmable reference generator operation. NOTE For an 8-bit or 16-bit register write, enable this field after configuring other bytes of GCR. You must configure Periodic Trigger Control (PCR) and DAC FIFO Control (FCR) before enabling this field. 0b - Disables 1b - Enables

44.7.1.6 DAC FIFO Control (FCR)


Offset

Register	Offset
FCR	10h

Function

Contains watermark level control for the FIFO.

Diagram

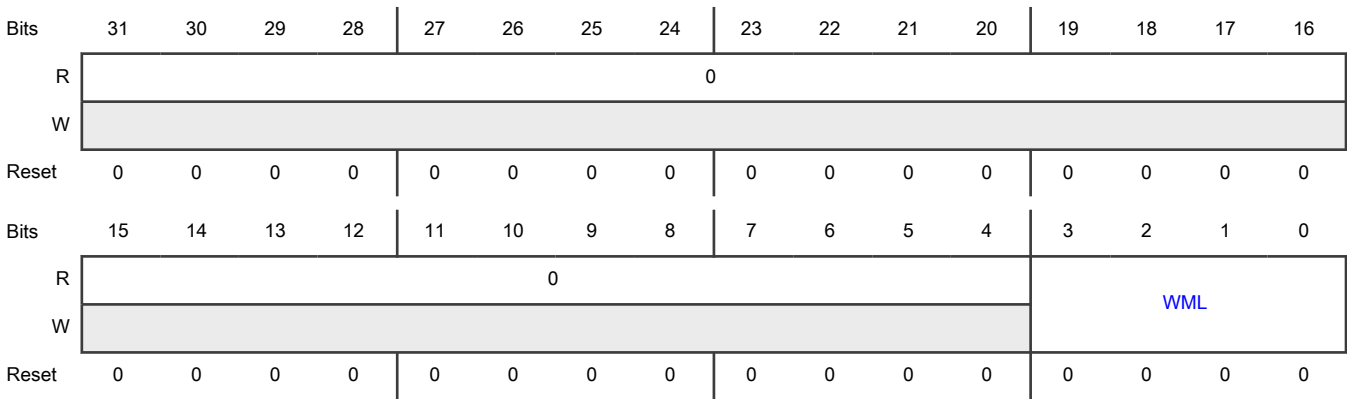

Fields

Field	Function
31-4 —	Reserved
3-0 WML	Watermark Level Specifies that when the number of data that remains in FIFO is equal to or less than this level, WM becomes 1.
NOTE To enable the watermark feature, do not write 0 to this field.	

44.7.1.7 DAC FIFO Pointer (FPR)

Offset

Register	Offset
FPR	14h

Function

Contains the read pointer and write pointer of the FIFO.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0												FIFO_WPT			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0												FIFO_RPT			
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31-20 —	Reserved
19-16	FIFO Write Pointer

Table continues on the next page...

Table continued from the previous page...

Field	Function
FIFO_WPT	Shows the current write pointer of the FIFO.
15-4 —	Reserved
3-0 FIFO_RPT	FIFO Read Pointer Shows the current read pointer of the FIFO.

44.7.1.8 FIFO Status (FSR)

Offset

Register	Offset
FSR	18h

Function

Contains the status flags of the FIFO.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	0															
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0								PTGC OCO	UF	OF	0	SWBK	WM	EMPTY	FULL
W									W1C	W1C	W1C		W1C			
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	0

Fields

Field	Function
31-9 —	Reserved
8 PTGCOCO	Period Trigger Mode Conversion Complete Flag Indicates that PTG mode conversion is completed. This flag becomes 0 by writing a 1 to it.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - Not completed or not started 1b - Completed
7 UF	FIFO Underflow Flag Specifies that there is a new trigger after EMPTY becomes 1. The FIFO read pointer do not increase in this case and the data sent to DAC analog conversion will not changed. This flag becomes 0 by writing a 1 to it. 0b - No underflow has occurred since the last time the flag was cleared 1b - At least one trigger underflow has occurred since the last time the flag was cleared
6 OF	FIFO Overflow Flag Indicates that data is intended to write into FIFO after FULL becomes 1. The writer pointer do not increase in this case. Do not write the extra data into the FIFO. This flag clears by writing a 1 to it. 0b - No overflow has occurred since the last time the flag was cleared 1b - At least one FIFO overflow has occurred since the last time the flag was cleared
5-4 —	Reserved
3 SWBK	Swing Back One Cycle Complete Flag Indicates that the DAC has completed one period of conversion in Swing Back mode. The read pointer increases to the top (write pointer) once and then decreases to zero. For example, after writing three data to FIFO, the writer pointer is now 3. Then, if continually triggered, the read pointer will swing like: 0-1-2-1-0-1-2-, and so on. After the fourth trigger, the flag sets. Write a 1 to clear this flag. 0b - No swing back cycle has completed since the last time the flag was cleared 1b - At least one swing back cycle has occurred since the last time the flag was cleared
2 WM	FIFO Watermark Status Flag Write 1 to this field if the remaining data in FIFO is less than or equal to WML . By writing data into FIFO by DMA or CPU, this flag clears automatically when the data in FIFO is more than WML . 0b - Data in FIFO is more than watermark level 1b - Data in FIFO is less than or equal to watermark level
1 EMPTY	FIFO Empty Flag Indicates whether the FIFO is empty or not. 12-bit DAC automatically clears this flag when CPU or DMA writes data to the FIFO. 0b - Not empty 1b - Empty
0	FIFO Full Flag

Table continues on the next page...

Table continued from the previous page...

Field	Function
FULL	Indicates whether the FIFO is full or not. FIFO read with software trigger or hardware trigger automatically clears this flag. 0b - Not full 1b - Full

44.7.1.9 Interrupt Enable (IER)


Offset

Register	Offset
IER	1Ch

Function

Contains the interrupt enable fields.

Diagram

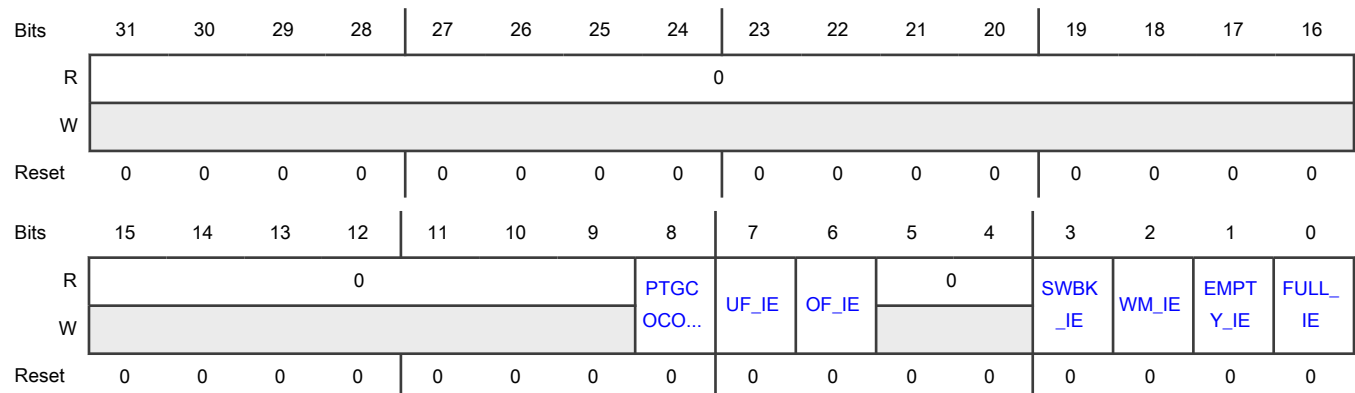

Fields

Field	Function
31-9 —	Reserved
8 PTGCOCO_IE	PTG Mode Conversion Complete Interrupt Enable Enables interrupt after the PTG mode conversion completes. 0b - Disables 1b - Enables

Table continues on the next page...

Table continued from the previous page...

Field	Function
7 UF_IE	FIFO Underflow Interrupt Enable Enables interrupt when FIFO underflows. 0b - Disables 1b - Enables
6 OF_IE	FIFO Overflow Interrupt Enable Enables interrupt when FIFO overflows. 0b - Disables 1b - Enables
5-4 —	Reserved
3 SWBK_IE	Swing Back One Cycle Complete Interrupt Enable Enables interrupt after the swing back one cycle completes. 0b - Disables 1b - Enables
2 WM_IE	FIFO Watermark Interrupt Enable Enables interrupt when data in FIFO is less than or equal to watermark level. 0b - Disables 1b - Enables
1 EMPTY_IE	FIFO Empty Interrupt Enable Enables interrupt when FIFO is empty. 0b - Disables 1b - Enables
0 FULL_IE	FIFO Full Interrupt Enable Enables interrupt when FIFO is full. 0b - Disables 1b - Enables


44.7.1.10 DMA Enable (DER)

Offset

Register	Offset
DER	20h

Function
Contains the DMA enable fields.

Diagram

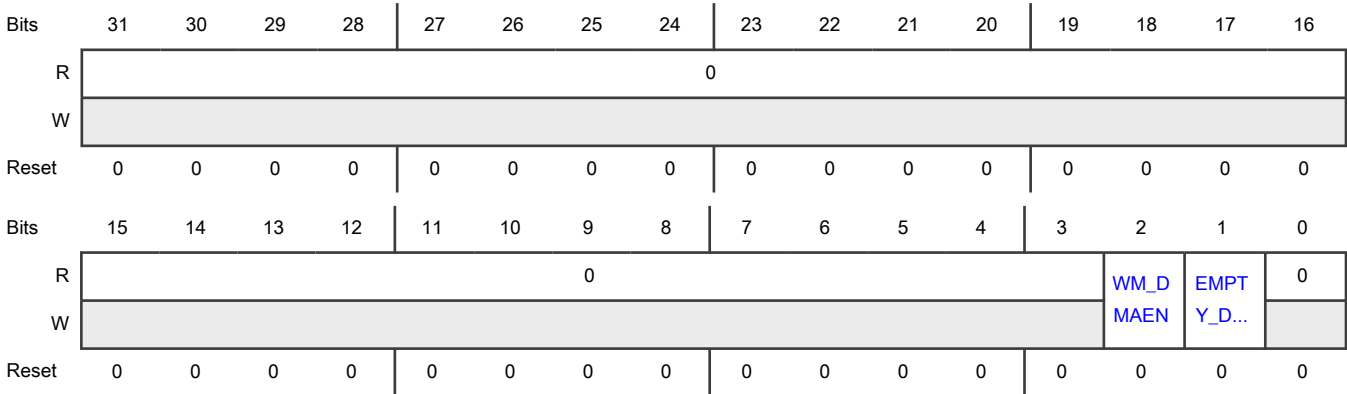

Fields

Field	Function
31-3 —	Reserved
2 WM_DMAEN	FIFO Watermark DMA Enable Enables DMA request when data in FIFO is less than or equal to watermark level. 0b - Disables 1b - Enables
1 EMPTY_DMAEN	FIFO Empty DMA Enable Enables DMA request when FIFO is empty. 0b - Disables 1b - Enables
0 —	Reserved


44.7.1.11 Reset Control (RCR)

Offset

Register	Offset
RCR	24h

Function
Contains the software reset and FIFO reset fields.

Diagram

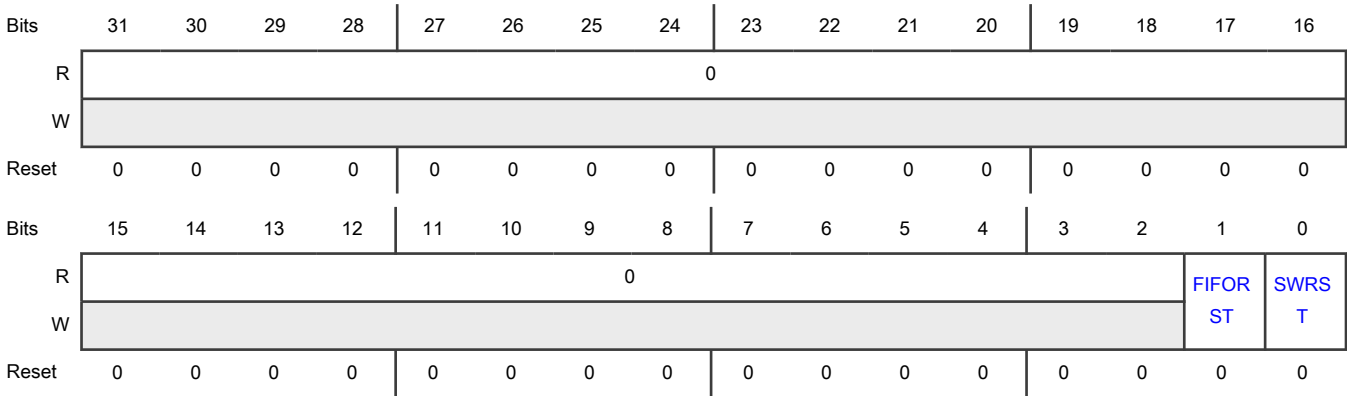

Fields

Field	Function
31-2 —	Reserved
1 FIFORST	FIFO Reset Resets the FIFO pointers and flags in FIFO Status (FSR) . Remains 1 until you write 0 to it. 0b - No effect 1b - FIFO reset
0 SWRST	Software Reset Resets all DAC registers and internal logic. Remains 1 until you write 0 to it. 0b - No effect 1b - Software reset

44.7.1.12 Trigger Control (TCR)


Offset

Register	Offset
TCR	28h

Function

Contains the software trigger field.

Diagram

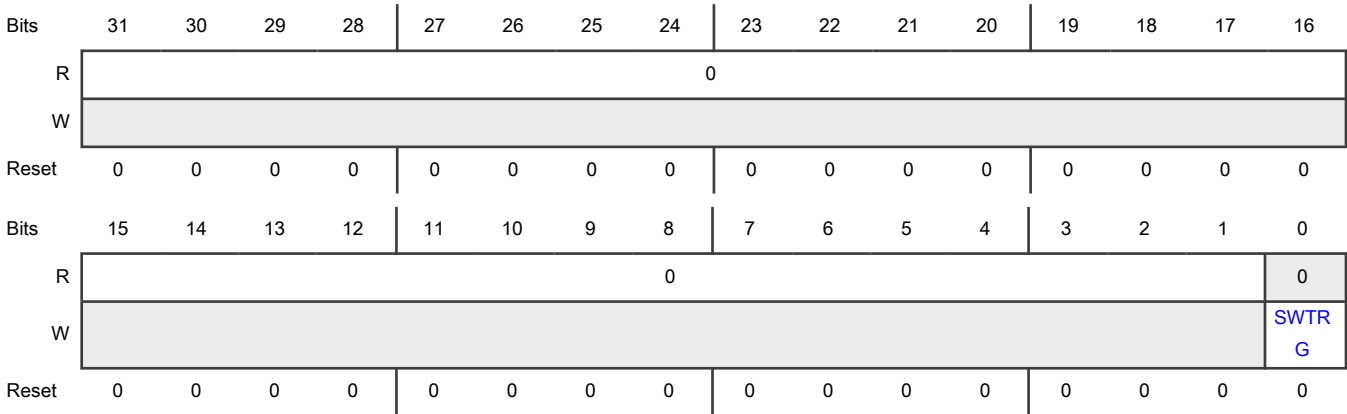

Fields

Field	Function
31-1 —	Reserved
0 SWTRG	Software Trigger Indicates whether the DAC soft trigger is valid. Active high. This is a write-only field, which always reads 0. If TRGSEL is 1 and FIFO is enabled and not empty, writing 1 to this field advances the FIFO read pointer once. NOTE During continuous conversions, do not adopt hardware trigger and software trigger in a mixed use. 0b - Not valid 1b - Valid

44.7.1.13 Periodic Trigger Control (PCR)


Offset

Register	Offset
PCR	2Ch

Function

Contains the periodic trigger period and periodic trigger number fields.

Diagram

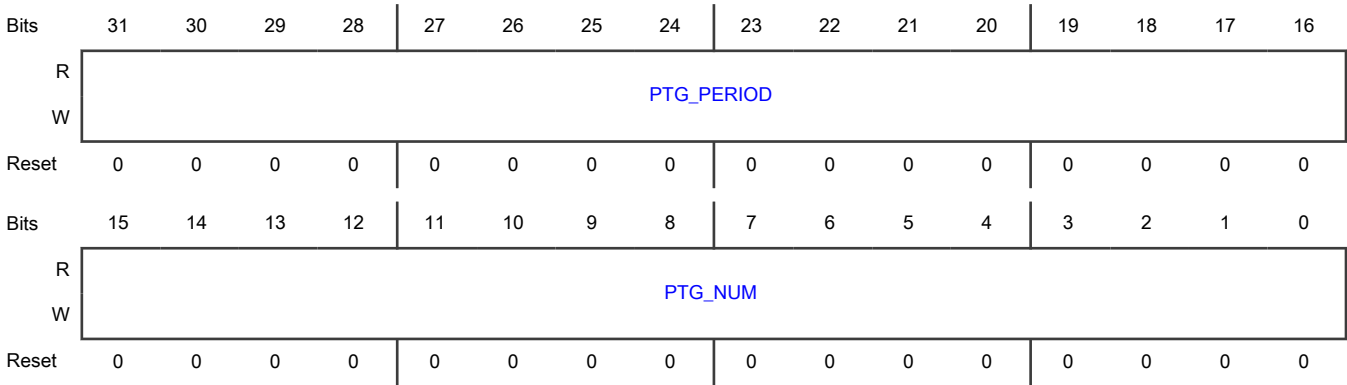

Fields

Field	Function
31-16 PTG_PERIOD	Periodic Trigger Period Width Uses only in Periodic Trigger mode. It controls the periodic trigger frequency. There are [PTG_PERIOD+1] RCLK cycles between each periodic trigger. See the chip-specific DAC information for more on the RCLK frequency. Example 1, if f_{RCLK} is 48 MHz and the conversion speed is 0.5 MHz, there should be 96 RCLK cycles between each periodic trigger. So you must configure the PTG_PERIOD as 0x5F(95). Example 2, if f_{RCLK} is 6 MHz and the conversion speed is 0.5 MHz, there should be 12 RCLK cycles between each periodic trigger. So you must configure the PTG_PERIOD as 0xB(11). NOTE The PTG_PERIOD should not be less than 0x1. NOTE The periodic trigger frequency should not be larger than the analog conversion speed.
15-0 PTG_NUM	Periodic Trigger Number Uses only in Periodic Trigger mode. There are [PTG_NUM] internal triggers following the first hardware/software trigger. So, there are [PTG_NUM+1] conversions in total. NOTE If you write 0 to it, there will be infinite triggers following the first hardware/software trigger, until PTGEN becomes 0.

Chapter 45

Operational Amplifier (OPAMP)

45.1 Chip-specific OPAMP information

Table 322. Reference links to related information

Topic	Related module	Reference
Full description	OPAMP	OPAMP
System memory map		Memory map
Clocking		Clock distribution
Power management		Power management
Signal multiplexing	Port control	Signal multiplexing


45.1.1 Module instances

This device has four instances of the OPAMP module, OPAMP0, OPAMP1, OPAMP2 and OPAMP3.

45.2 Overview

OPAMP supports using external resistor and capacitor to build feedback loop. Positive and negative inputs of amplifier connect to external channels. Different external resistance net determines different gain.

45.2.1 Block diagram

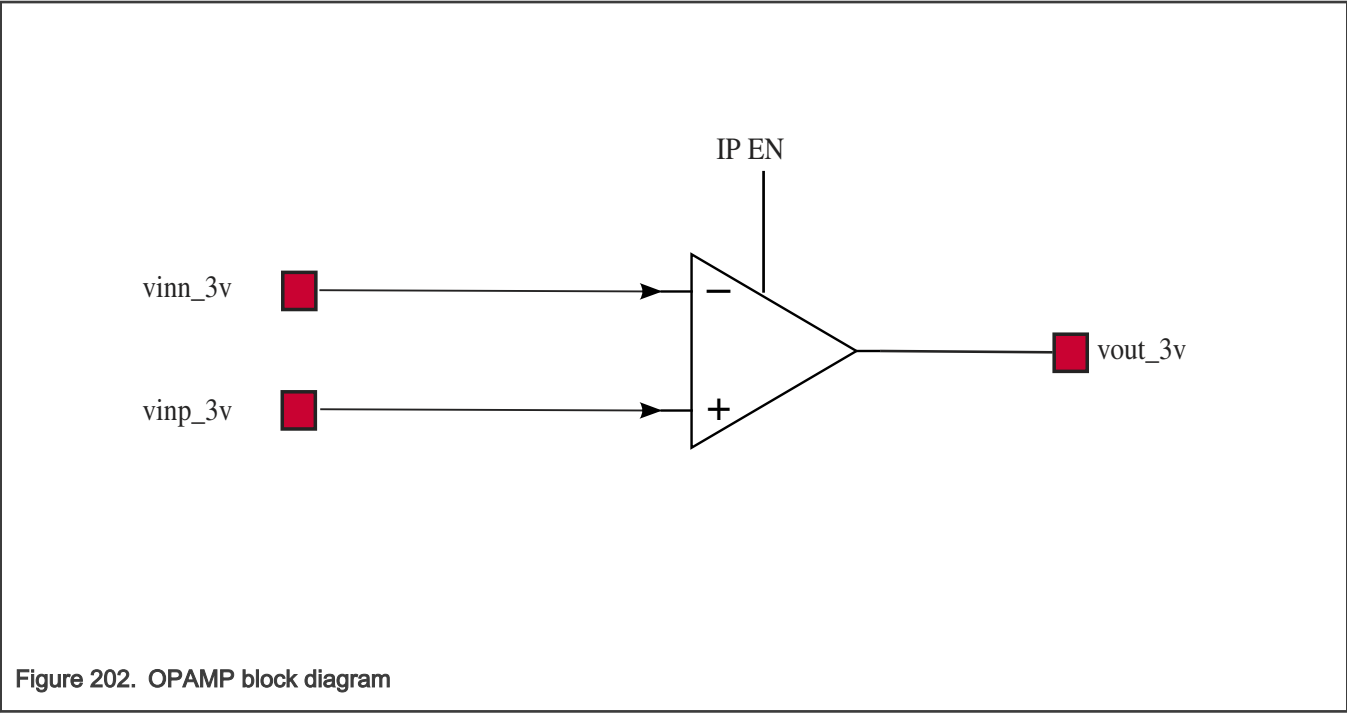

45.2.2 Features

- High slew rate
- Fast settling time
- Support external feedback loop

45.3 Functional description

The OPAMP supports using external resistor and capacitor to build feedback loop. Positive and negative inputs of amplifier connect to external channels. Different external resistance net determines different gain.

45.3.1 Clock

The global clock is used for OPAMP.

45.3.2 Reset

OPAMP is reset by the global chip reset signal.

45.3.3 Interrupts

This module has no interrupts.

45.4 External Signals

Table 323. External Signal Description

Signal	Description	I/O
vinn_3v	Analog input channels(Amplifier negative input channel)	I
vinp_3v	Analog input channels(Amplifier positive input channel)	I
vout_3v	Output of the amplifier	O

45.5 Initialization

This module does not require initialization.

45.6 Memory map/register definitions

45.6.1 OPAMP register descriptions

45.6.1.1 OPAMP memory map

OPAMP0 base address: 400B_7000h

OPAMP1 base address: 400B_8000h

OPAMP2 base address: 400B_9000h

OPAMP3 base address: 400B_A000h

Offset	Register	Width (In bits)	Access	Reset value
0h	Version ID (VERID)	32	R	0000_0000h
4h	Parameter (PARAM)	32	R	0000_0000h
8h	OPAMP Control (OPAMP_CTRL)	32	RW	0000_0000h

45.6.1.2 Version ID (VERID)


Offset

Register	Offset
VERID	0h

Function

Version ID indicates the version integrated for this instance on the chip. It also indicates inclusion/exclusion of several optional features.

Diagram

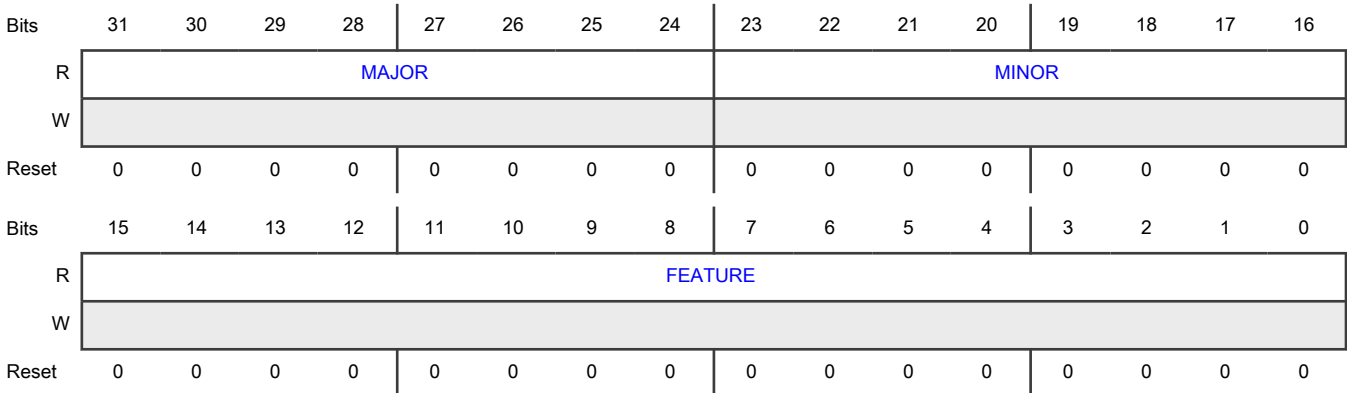

Fields

Field	Function
31-24 MAJOR	Major Version Number Returns the major version number for the specification.
23-16 MINOR	Minor Version Number Returns the minor version number for the specification.
15-0 FEATURE	Feature Specification Number Returns the feature set number.

45.6.1.3 Parameter (PARAM)


Offset

Register	Offset
PARAM	4h

Function

Indicates the feature parameter.

Diagram

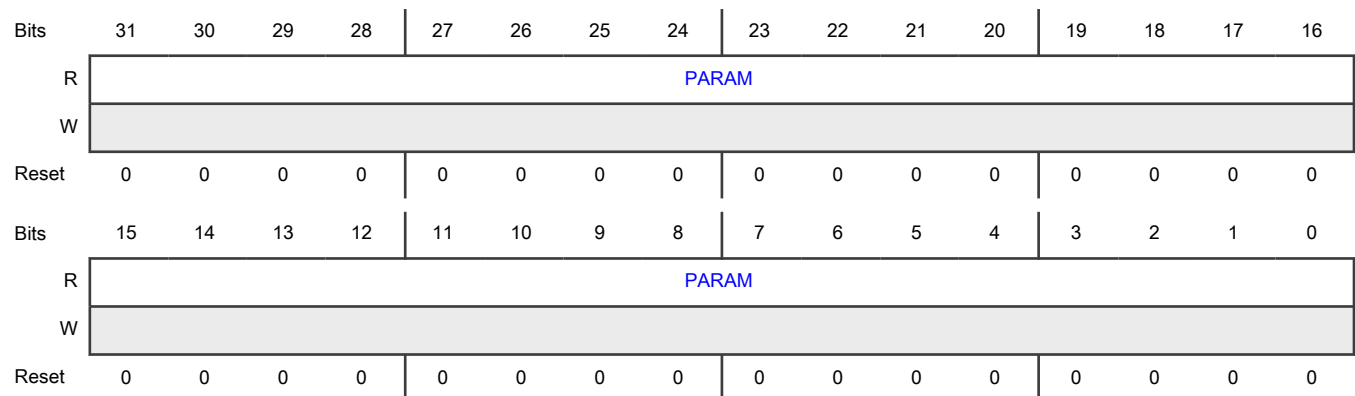

Fields

Field	Function
31-0	Parameters
PARAM	Indicates the feature parameters implemented along with Version ID (VERID) .

45.6.1.4 OPAMP Control (OPAMP_CTRL)


Offset

Register	Offset
OPAMP_CTRL	8h

Function

OPAMP_CTRL is used to configure the OPAMP module.

Diagram

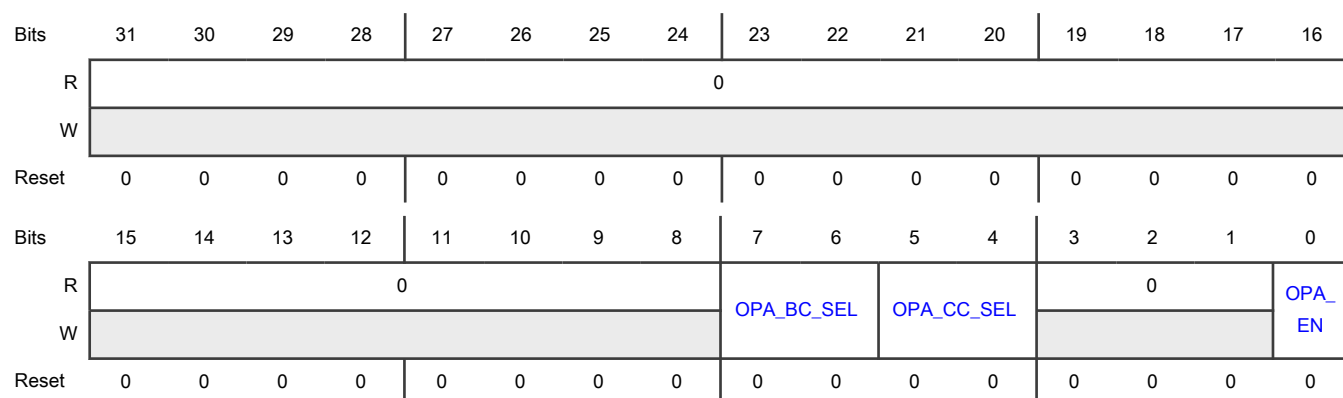

Fields

Field	Function
31-8 —	Reserved
7-6 OPA_BC_SEL	Bias current config selection Bias current config selection, change power consumption 00b - Default value. Keep power consumption constant 01b - Reduce power consumption to 1/4 10b - Reduce power consumption to 1/2 11b - Double the power consumption
5-4 OPA_CC_SEL	Compensation capcitor config selection Compensation capcitor config selection, choose different bits to fit different gains 00b - Fit 2X gains 01b - Fit 4X gains 10b - Fit 8X gains 11b - Fit 16X gains
3-1 —	Reserved
0 OPA_EN	OPAMP Enable Enables OPAMP. 0b - Disable 1b - Enable

Chapter 46

Debug

46.1 Introduction

Cortex-M33 debug functionality is based on ARM CoreSight debug infrastructure, and includes processor halt, single-step, processor core register access, Vector Catch, unlimited software breakpoints, and full system memory access. The processor also includes support for hardware breakpoints and watchpoints configured during implementation:

- A breakpoint unit supporting four instruction comparators.
- A watchpoint unit supporting two watchpoint comparators.

The Cortex-M33 processor supports system level debug authentication to control access from a debugger to resources and memory.

Features:

- The ARM CoreSight Architecture adapted for software trace and debug.
- Serial wire debug (SWD) and Debug Access Port (DAP) to support debugger tools.
- The following are supported for the Cortex-M33 subsystem:
 - Instrumentation Trace Macrocell (ITM)
 - Data Watchpoint and Trace (DWT)
 - Breakpoint Unit (BPU)
 - Software trace and full instruction trace
- SWO trace port for efficiently accessing CM33 trace information from the system

The following figures show the system level debug architecture.

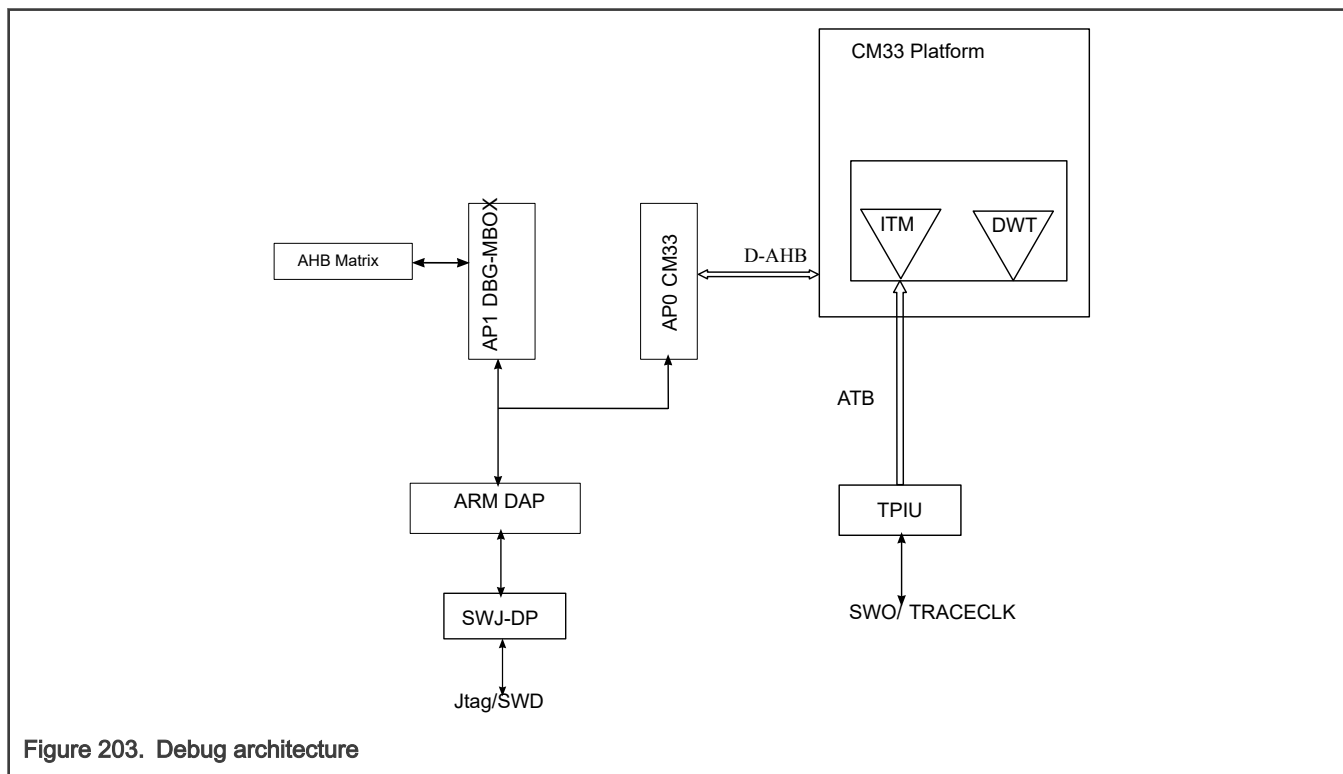


Figure 203. Debug architecture

46.2 Debug/Trace component

46.2.1 D-AHB interface

The 32-bit Debug AHB (D-AHB) interface implements the AMBA 5 AHB protocol. It can be used with a CoreSight AHB-AP to provide debugger access to all processor control and debug resources, and a view of memory that is consistent with that observed by load/store instructions acting on the processor.

46.2.2 AHB-AP debug access port

The AHB-AP is an optional debug access port into the processor system that provides access to all memory and registers in the system, including processor registers through the SCS. System access is independent of the processor status. SWJ-DP is used to access the AHB-AP.

46.2.3 Data Watchpoint and Trace

A Reduced DWT contains two comparators (DWT_COMP0 to DWT_COMP1). These comparators support the following features:

- Hardware watchpoint support.
- Hardware trace packet support, only if it includes an ITM.
- Cycle counter matching support (DWT_COMP0 only).
- Instruction address matching support.
- Data address matching support.
- Data value matching support (DWT_COMP1 only).
- Linked/limit matching support (DWT_COMP1 only).

The DWT contains counters for:

- Cycles (CYCCNT)
- Folded Instructions (FOLDCNT).
- Additional cycles required to execute all load or store instructions (LSUCNT).
- Processor sleep cycles (SLEEPcnt).
- Additional cycles required to execute multi-cycle instructions and instruction fetch stalls (CPICNT)
- Cycles spent in exception processing (EXCCNT).

The user can configure the DWT to generate PC samples at defined intervals, and to generate interrupt event information. The DWT provides periodic requests for protocol synchronization to the ITM and the TPIU.

46.2.4 In System Programming - Access Port (ISP-AP)

The ISP-AP provides a useful interface between debugger and the core and controls the debug information.

46.2.5 Cortex M33 debug

This section covers the debug mechanisms associated with the CM33 processor.

46.2.5.1 CM33 software and hardware trace

Refer [Figure 203](#) to see data flow of software debug and trace information for the Cortex-M33 core on this device.

46.2.5.2 Breakpoint Unit

The CM33 Breakpoint Unit (BPU) module comprises up to 8 instruction address comparators. It provides breakpoint functionality on all instructions fetched across the entire address range in which code can be located.

46.2.5.3 Instrumentation Trace Macrocell (ITM)


The ITM generates trace information as packets. There are multiple sources that can generate packets. If multiple sources generate packets at the same time, the ITM arbitrates the order in which packets are output. The sources in decreasing order of priority are:

- Software Trace: Application software can write console messages directly to ITM stimulus ports, and output them to the host as trace packets.
- Hardware trace: The DWT generates these packets, and the ITM outputs them.
- Timestamping: ITM can generate timestamp packets that are inserted in to the trace stream, to help the host debugger to find out the timing of events. Timestamps are generated relative to packets. The ITM contains a 21-bit counter to generate the timestamp.
- Global timestamping: External timestamps can be generated from OS Timer.

Trace data from ITM will be forwarded to either the TPIO or the SWO-TPIU and streamed out via the trace port. Trace data from ITM can also be collected to the embedded trace buffer.

46.3 Test and debug port connectivity

The following figure shows the connectivity of test and debug port on this device.

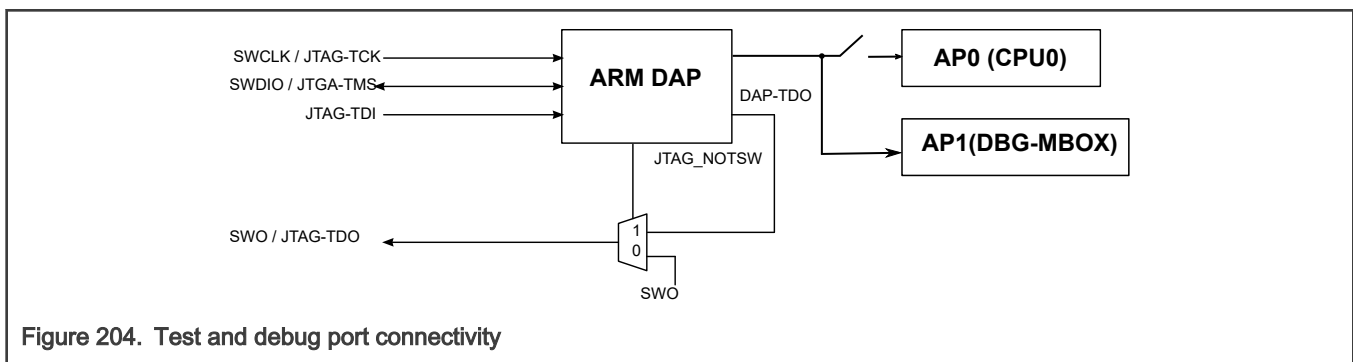

The JTAG and SWD signals are summarized in the following table.

Table 324. JTAG/SWD signals summary

Pin Name	JTAG		SWD		Internal pull up/down
	Type	Description	Type	Description	
TMS/SWDIO	I/O	Mode selection	I/O	Data	Pull-up
TCLK/SWCLK/TRACECLKIN	I	Clock	I	Clock	Pull-down
TDI	I	Data input	--	--	Pull-up
TDO	O	Data output	--	--	N/A

JTAG mode is the default connection of the JTAG/SWD port. The following sequence of events would switch the debug port to SWD mode.

JTAG-to-SWD change sequence has following steps:

- Send more than 50 TCLK cycles with TMS(SWDIO) = 1
- Send the 16-bit sequence on TMS(SWDIO) = 0111_1001_1110_0111 (MSB transmitted first)
- Send more than 50 TCLK cycles with TMS(SWDIO) = 1

Following is the JTAG ID table for this device.

JTAG ID	Version	Part number	Manufacture	mandatory
Value	0000b	TBD	000 0001 0101b	1b

46.3.1 Joint Test Access Group (JTAG)

46.3.1.1 JTAG instruction registers

The JTAG TEST TAP is connected in parallel with Arm DAP controller, that is, the JTAG-DP port of the DAP. The Instruction Register (IR) length is 4-bits. The JTAGC IR codes overlay the DAP controller IR codes. JTAGC uses twelve instructions and the DAP uses the remaining four instructions. The outputs of the TAPs (TDO) are multiplexed based on the IR code which is selected. This design is fully JTAG compliant and appears to the JTAG chain as a single TAP.

The following table gives the IR codes for the system JTAG controller.

Table 325. JTAG TEST TAP

Code	JTAG IR
4'b0000	IR_EXTEST
4'b0001	SAMPLE/PRELOAD
4'b0010	IR_HIGHZ
4'b0011	IR_CLAMP
4'b0100	IR_IDCODE
4'b0101	Reserved
4'b0110	Reserved
4'b0111	Reserved
4'b1000	ARM-DAP IR_ABORT
4'b1001	Reserved
4'b1010	ARM-DAP IR_DPACC
4'b1011	ARM-DAP IR_APACC
4'b1100	Reserved
4'b1101	Reserved
4'b1110	ARM-DAP IR_DAP_ID
4'b1111	ARM-DAP BYPASS

46.3.2 Debug access port

Debug Access Port (DAP) is a standard ARM CoreSight component. The DAP provides multiple master driving ports, all accessible and controlled through a single external interface port to provide system-wide debug. The DAP Instruction Register codes are listed in the following table.

Table 326. DAP IR Codes

Code	DAP IR
4'b1000	ABORT
4'b1010	DPACC
4'b1011	APACC
4'b1110	IDCODE

The DAP offers AHB and APB master interfaces to access system buses. It also exports the internal DAP bus to allow to extend the access ports as per the system requirement. It offers JTAG AP to allow adding auxiliary JTAG TAPs. For more information on DAP or JTAG devices under JTAG AP, refer to ARM Debug Interface v5 Architecture specification on arm.com

The AHB AP's AHB transfers are burst size of 1 only, no out of order transactions, and no multiple outstanding accesses. The APB AP is used to access debug components of the system trace like TPIU and ETB.

The exported DAP bus is used to host AHB AP (integrated as part of CM33 integrations) and the Miscellaneous Debug Module Access Port (MDM AP). The MDM-AP implement registers which are used for Test mode control on the device. The MDM-AP hosts system level JTAG status and control registers (refer to Debug Status and Control Registers) which can be used for cross triggering, synchronized debug, low power and other miscellaneous control and status. The selection of different access ports in the DAP is done based on the APSEL value set in the SELECT register of SWJ-DP.

The exported DAP bus is used to host AHB AP (integrated as part of CM33 integrations). The selection of different access ports in the DAP is done based on the APSEL value set in the SELECT register of SWJ-DP.

46.4 Debug ROM tables

The debug ROM tables hold information about different debug components and help identify them. In this chip, this table resides in the CM33 core and contains entries for CM33 debug components.

Table 327. Debug ROM table

Processor		Start address
CPU ROM		0xE00FE000
	CM33 processor ROM	0xE00FF000
	TPIU	0xE0040000

46.5 Low power debug

Low power debug is controlled by DBGCTL[SOD] field in the CMC. When set, the debugger is disabled (debug power up acknowledge negates) when the CM33 sleeps and the device fully enters the low power mode. When clear, the clocks to the CM33 remain enabled when the CM33 sleeps and debug is attached (debug power up request is asserted) to maintain the debug connection, and the low power mode is not completely entered. Software can modify DBGCTL[SOD] before each low power entry. There are two modes supported:

- Clock gated mode
- Power gated mode

46.5.1 Clock gated modes

If the SWJDAP debug power up request is high, and CMC_DBGCTL[SOD] is clear, when the system attempts to enter STOP mode, the DAP clock and the FCLK continue to run to support core register access and trace. In this case, the debug module will have access to core registers but not to modules which are clock gated.

46.6 Debug session protocol

When DBGMB fetches instructions from the ROM address range during boot, the DAP of CPU0 is disabled, regardless of device life-cycle state settings. This document refers to this mechanism as Boot-ROM protection. The method to initiate a debug session varies depending on the device state and intended debugging scenario. The scenarios described in the rest of these sections are:

Table 328. Debug session scenarios

Scenario	Description
Debug session with uninitialized or invalid image or ISP mode	If DBGMB detects no valid image, the ROM proceeds into In-System Programming (ISP) mode and waits to be booted via one of its serial interfaces. In ISP mode, the debug interface is disabled.
Debug session with valid application	Program control is in ISP mode, initiated because the ISP pin is asserted on the device at reset.
Debug session attaching to a running target	Connecting to a device with the intent to debug without writing an image (also called a debug attach).
Halting execution immediately following ROM execution	Connecting to a device running a valid application, with the intent to write a new application.

46.6.1 Debug session with uninitialized or invalid image or ISP mode

When the chip boots and the boot media does not contain a valid image, the ROM-based program control enters ISP mode. DBGMB disables debug access for security reasons. The chip also enters into ISP mode when the ISP has been asserted as the chip leaves reset. This section describes how to establish a debug session for these scenarios.

To ensure that the state machine controlling debug mailbox commands is in a known state, the debugger can reset this logic via the following steps:

1. Write 1 to CSW[RESYNCH_REQ] to request resynchronization.
2. Write 1 to CSW[CHIP_RESET_REQ] to reset the chip.
3. Read CSW.
4. Wait until the chip has completed resynchronization, identified by reading a value of 0 from the lower 16 bits of CSW.

To start a debug session and control the exchange of debug information, the debugger uses the DM-AP commands:

1. Following a successful initial resynchronization, communicate with the chip via 32-bit DM-AP commands to the REQUEST register in the debug mailbox.
2. Read results via the RETURN register. To ensure that the transactions have completed successfully, the debugger must poll the RETURN register as it polled the CSW register following a resynchronization request.
3. View the results in Response packet.

To initiate a debug session over SWD while debug is disabled:

1. The debug system must issue a Start Debug Session command to the ROM-based boot code, following the [Debug session protocol](#).
2. Upon receiving the command, the boot code disables any unwanted peripheral and manages NXP secrets before enabling debug access.
3. After enabling debug access, the ROM enters a while(1) loop.

Once the Start Debug Session command and chip reset have executed successfully, the AP for CPU0 is accessible. You can use it to set breakpoints and perform other tasks, as with other Arm Cortex-M devices.

Following a successful debug connection, a flashloader is loaded into RAM to program the application to be debugged and to set required breakpoints in the code. After this process, a SYSRESET_REQ command must be issued to verify that the ROM fully executes (similar to a deployed end application) before reaching the downloaded application.

The code sample below shows how to initiate a debug session for the scenarios described above:

```
// Pseudo Code Syntax
// -----
// WriteDP "register" "value"
// value = ReadDP "register"
// AP transactions presume the DM AP is selected
// WriteAP "register" "value"
// value = ReadAP "register" "value"
// -----
```

```
// Read AP ID register to identify DM AP at index 1
WriteDP 1 0x020000F0
// The returned AP ID should be 0x002A0000
value = ReadAP 3
print "AP ID: ", value
```

```
// Select DM AP index 1
WriteDP 1 0x02000000
// Write DM RESYNC_REQ + CHIP_RESET_REQ
WriteAP 0 0x21
// Poll CSW register (0) for zero return, indicating success
value = -1
while value != 0 {
    value = ReadAP 0
}
print "RESYNC_REQ + CHIP_RESET_REQ: ", value
// Write DM START_DBG_SESSION to REQUEST register (1)
WriteAP 1 7
// Poll RETURN register (2) for zero return
value = -1
while value != 0 {
    value = (ReadAP 2 & 0xFFFF)
}
print "DEBUG_SESSION_REQ: ", value
```

46.6.2 Debug session with valid application

In this case, the application has not disabled debug. You can access the CPU0 AP and set breakpoints without resynchronizing the mailbox hardware or issuing a Debug Session Request. You can use the methods described in [Debug session with uninitialized or invalid image or ISP mode](#) to simplify debug support implementations.

46.6.3 Debug session attaching to a running target

In this scenario, the device has booted and is running an application that has not disabled debug. The host system is attempting to connect to the device without resetting it and without updating the application. In this case, the CPU0 AP should be accessible and you can set breakpoints without resynchronizing the mailbox hardware.

46.6.4 Halting execution immediately following ROM execution

Traditionally, debug systems can set a vector catch at the reset vector to break code execution, but the chip ROM prevents this method.

The debugger must use this reset sequence:

Table 329. Reset procedure

Step	Purpose	Programming	Notes
1	Allow the debug system to halt execution immediately after the ROM completes the preparations associated with a debug session request.	Set the data watchpoint on a read to address location 4009123Ch.	—
2	—	If all data watchpoint comparators are occupied, backup one of the watchpoint settings and replace it with the above watchpoint location.	—
3	Reset the core and peripherals.	Write 1 to the Arm Cortex-M33 field AIRCR[SYSRESETREQ].	—
4	Allow the ROM to reenable debug access.	Wait for 100 ms.	—
5	Verify that the core has halted at the watchpoint.	Read the Arm Cortex-M33 register DHCSR.	If the DHCSR read times out or returns an error response, the ROM has entered an ISP command-handling loop due to an invalid image in boot media. Proceed to Step 6 , otherwise, proceed to Step 10 .
6	—	Execute the start debug session sequence described in Debug session with uninitialized or invalid image or ISP mode .	—
7	—	Wait for 10 ms.	—
8	—	Enable the Cortex-M33 AP.	—
9	—	Read DHCSR and issue a HALT command to Cortex-M33 AP.	—
10	—	Clear data watchpoint added in step 1. If you set the watchpoint as described in step 2, restore the watchpoint configuration.	—

Chapter 47

Cyclic Redundancy Check (CRC)

47.1 Chip-specific CRC information

Table 330. Reference links to related information

Topic	Related module	Reference
Full description	CRC	CRC
System memory map		Memory map
Clocking		Clock distribution
Power Management		Power Management
Signal multiplexing	Port control	Signal multiplexing

47.1.1 Module instances


This device has one instance of the CRC module, CRC0.

47.2 Overview

CRC generates 16-bit or 32-bit CRC codes output for error detection. You can calculate these codes for up to 32 bits input data at a time.

CRC provides a programmable polynomial and other parameters to meet 16-bit or 32-bit CRC standards.

47.2.1 Block diagram

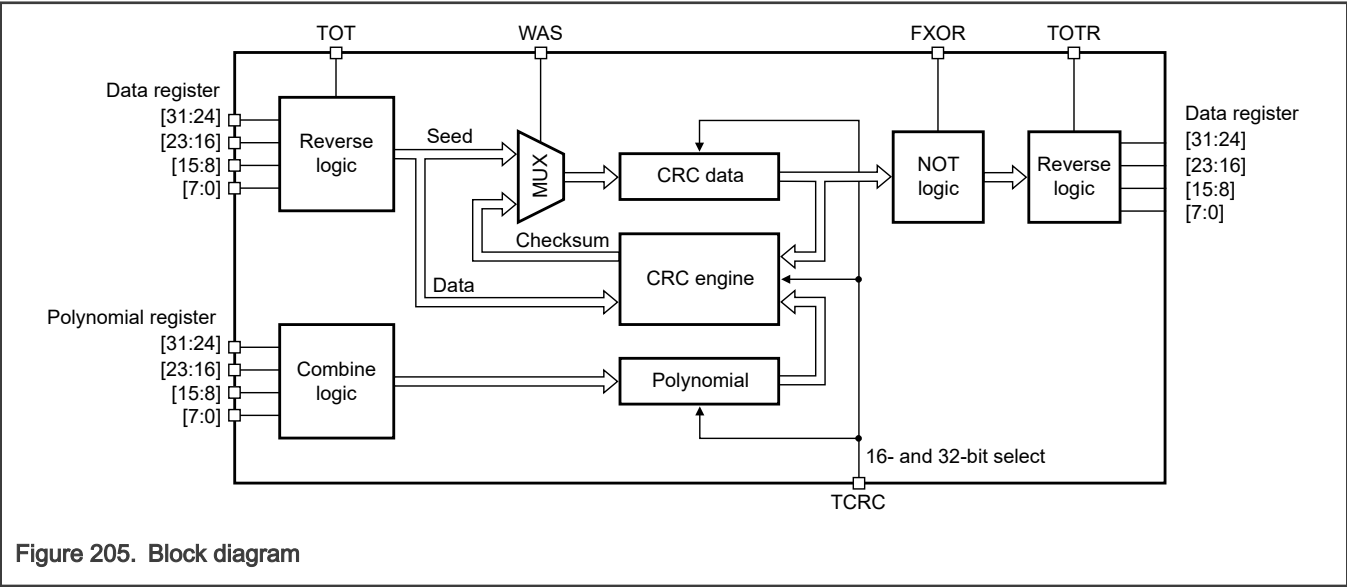

47.2.2 Features

CRC has the following features:

- Hardware CRC generator circuit using 16-bit or 32-bit programmable shift registers

- Programmable initial seed value and polynomial
- Transpose of input or output data (CRC result) in bitwise or byte-wise (this option is required for certain CRC standards. You cannot perform a byte-wise transpose operation when accessing [DATA](#) via 8-bit access.)
- Invert final CRC result
- 32-bit CPU register programming interface

47.3 Functional description

47.3.1 Modes of operation

The following sections describe various modes of operation that affect the functionality of CRC: [Run mode](#) and [Low power mode](#).

47.3.1.1 Run mode

Run mode is the basic mode of operation.

47.3.1.2 Low-power modes

When the chip enters the low-power mode, the CRC module clock (ipg_clk and ipg_clk_s) is disabled and the in-progress CRC calculation stops. The calculation resumes after the CRC module clock is enabled or the chip exits low power mode via system reset.

NOTE

See the chip-specific power management chapter to know the specific low-power modes supported on your device.

47.3.2 CRC calculations

In 16-bit and 32-bit CRC modes, you can program data values as 8 bits, 16 bits, or 32 bits at a time, provided all bytes are contiguous. Noncontiguous bytes lead to an incorrect CRC calculation.

47.3.2.1 Calculating a 16-bit CRC

Perform these steps to calculate a 16-bit CRC:

1. Write 0 to [CTRL\[TCRC\]](#) to enable 16-bit CRC mode.
2. Program the transpose and complement options in [Control \(CTRL\)](#) as required for the CRC calculation.
3. Write a 16-bit polynomial to [GPOLY\[LOW\]](#).
[GPOLY\[HIGH\]](#) is not usable in 16-bit CRC mode.
4. Write 1 to [CTRL\[WAS\]](#) to program the seed value.
5. Write a 16-bit seed to [DATA\[LU\]](#) and [DATA\[LL\]](#).
[DATA\[HU\]](#) and [DATA\[HL\]](#) are not used.
6. Write 0 to [CTRL\[WAS\]](#) to start writing data values.
7. Write data values into [DATA\[LU\]](#), and [DATA\[LL\]](#)
CRC is calculated on every data value write and the intermediate CRC result is stored back into [DATA\[LU\]](#) and [DATA\[LL\]](#)
8. After writing all the data values, read the final CRC result from [DATA\[LU\]](#) and [DATA\[LL\]](#).

CRC is calculated byte-wise and two clocks are required to complete one CRC calculation.

The transpose and complement operations are performed on-the-fly when reading or writing values. See [Transpose feature](#) and [Result complement](#) for details.

47.3.2.2 Calculating a 32-bit CRC

Perform these steps to calculate a 32-bit CRC:

1. Write 1 to [CTRL\[TCRC\]](#) to enable 32-bit CRC mode.
2. Program the transpose and complement options in [Control \(CTRL\)](#) as required for CRC calculation. See [Transpose feature](#) and [Result complement](#) for details.
3. Write a 32-bit polynomial to [GPOLY\[HIGH\]](#) and [GPOLY\[LOW\]](#).
4. Write 1 to [CTRL\[WAS\]](#) to program the seed value.
5. Write a 32-bit seed to [DATA\[HU\]](#), [DATA\[HL\]](#), [DATA\[LU\]](#), and [DATA\[LL\]](#).
6. Write 0 to [CTRL\[WAS\]](#) to start writing data values.
7. Write data values into [DATA\[HU\]](#), [DATA\[HL\]](#), [DATA\[LU\]](#), and [DATA\[LL\]](#).

CRC is computed on every data value write and the intermediate CRC result is stored back into [DATA](#).

8. After writing all the values, read the final CRC result from [DATA\[HU\]](#), [DATA\[HL\]](#), [DATA\[LU\]](#), and [DATA\[LL\]](#).

CRC is calculated byte-wise and two clocks are required to complete one CRC calculation.

The transpose and complement operations are performed on-the-fly when reading or writing values. See [Transpose feature](#) and [Result complement](#) for details.

47.3.3 Transpose feature

Transpose is not enabled by default. However, CRC requires input data and/or final checksum to be transposed. You have an option to configure each transpose operation separately to meet CRC standards. The data is transposed on-the-fly while being read or written.

Some protocols use the little-endian format for data stream to calculate CRC. In this case, transpose flips bits.

47.3.3.1 Types of transpose

CRC provides several types of transpose to flip bits and/or bytes for both writing input data and reading result separately using the [CTRL\[TOT\]](#) and [CTRL\[TOTR\]](#) according to the CRC calculation being used.

The following types of transpose are available for writing to and reading from [DATA](#).


1. [CTRL\[TOT\]](#) or [CTRL\[TOTR\]](#) is 0.

No transposition occurs.

2. [CTRL\[TOT\]](#) or [CTRL\[TOTR\]](#) is 1.

Bits in a byte are transposed when bytes are not transposed.


reg[31:0] becomes {reg[24:31], reg[16:23], reg[8:15], reg[0:7]}.

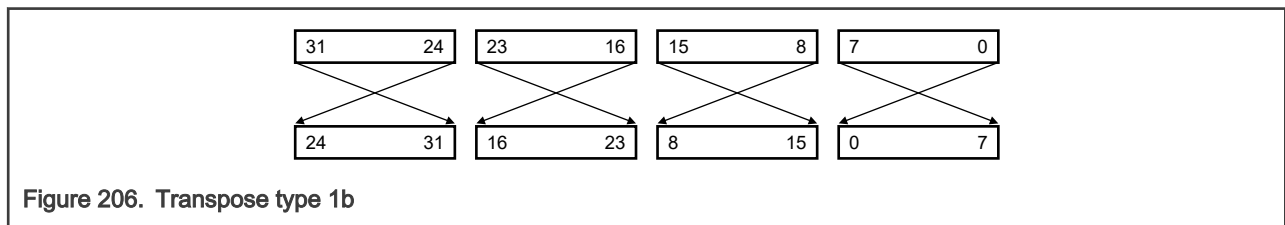


3. [CTRL\[TOT\]](#) or [CTRL\[TOTR\]](#) is 10b.

Both bits in bytes and bytes are transposed.

reg[31:0] becomes {reg[0:7], reg[8:15], reg[16:23], reg[24:31]}.

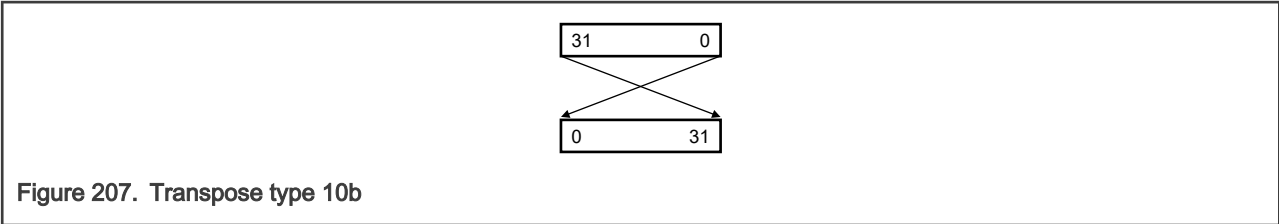

4. CTRL[TOT] or CTRL[TOTR] is 11b.
- Bytes are transposed but bits are not transposed.
- reg[31:0] becomes {reg[7:0], reg[15:8], reg[23:16], reg[31:24]}.

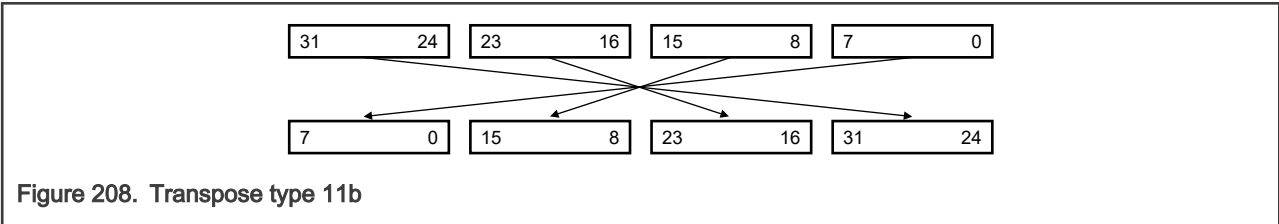

NOTE

For 8-bit and 16-bit write accesses to Data (DATA), the data is transposed with 0s on the unused byte or bytes (taking 32 bits as a whole), but CRC is calculated on the valid byte(s) only. When reading the Data (DATA) for a 16-bit CRC result and using transpose options 10 and 11, the resulting value after transposition resides in DATA[HU] and DATA[HL]. You must account for this situation when reading the 16-bit CRC result, so reading 32 bits is preferred.

47.3.4 Result complement

When CTRL[FXOR] = 1, the checksum is complemented. The CRC result complement function outputs the complement of the checksum value stored in Data (DATA) every time Data (DATA) is read. When CTRL[FXOR] = 0,, reading Data (DATA) accesses the raw checksum value.

47.3.5 Clocking

Table 331. CRC clocks

Type of clock	Description
Bus clock (ipg_clk/ipg_clk_s)	ipg_clk_s controls the access to the CRC registers. ipg_clk and ipg_clk_s function the CRC module.

NOTE

See the chip-specific clocking chapter, to know the specific CRC clocks supported on your device.

47.3.6 Interrupts

This module has no interrupts.

47.4 External signals

There is no CRC signal that connects off chip.

47.5 Initialization

To enable CRC calculation, you must program:

- [CTRL\[WAS\]](#) .
- [Polynomial \(GPOLY\)](#).
- Parameters for transposition and CRC result inversion in the applicable registers.

Writing 1 to [CTRL\[WAS\]](#) enables you to program the seed value into CRC Data registers.

After writing all the data, you must wait for at least two clock cycles to read the data from CRC Data (DATA) register.

After a CRC calculation completes, you can reinitialize the module for a new CRC computation by again writing 1 to [CTRL\[WAS\]](#) and programming a new, or previously used, seed value. You must set all other parameters before programming the seed value and subsequent data values.

47.6 Use cases

The following tables use the little-endian format.

47.6.1 CTRL programming

The following table shows [Control \(CTRL\)](#) programming for 16-bit CRC.

Table 332. CTRL programming for 16-bit CRC

Algorithm	Polynomial	Seed	Ref in	Ref out	XOR out	CTRL[TO T]	CTRL[TO TR]	CTRL[FX OR]
CRC-16_CCITT_FALSE	1021h	FFFFh	0	0	0000h	0h	0h	0h
CRC-16_ARC	8005h	0000h	1	1	0000h	1h	2h	0h
CRC-16_AUG_CCITT	1021h	1D0Fh	0	0	0000h	0h	0h	0h
CRC-16_BUYPASS	8005h	0000h	0	0	0000h	0h	0h	0h
CRC-16_CCITT_ZERO	1021h	0000h	0	0	0000h	0h	0h	0h
CRC-16_CDMA2000	C867h	FFFFh	0	0	0000h	0h	0h	0h
CRC-16_DDS_110	8005h	800Dh	0	0	0000h	0h	0h	0h
CRC-16_DECT_X	589h	0000h	0	0	0000h	0h	0h	0h
CRC-16_DNP	3D65h	0000h	1	1	FFFFh	1h	2h	1h
CRC-16_EN_13757	3D65h	0000h	0	0	FFFFh	0h	0h	1h
CRC-16_GENIBUS	1021h	FFFFh	0	0	FFFFh	0h	0h	1h
CRC-16_MAXIM	8005h	0000h	1	1	FFFFh	1h	2h	1h
CRC-16_MCRF4XX	1021h	FFFFh	1	1	0000h	1h	2h	0h
CRC-16_RIELLO	1021h	B2AAh	1	1	0000h	1h	2h	0h
CRC-16_T10_DIF	8BB7h	0000h	0	0	0000h	0h	0h	0h
CRC-16_TELEDISK	A097h	0000h	0	0	0000h	0h	0h	0h
CRC-16_TMS37157	1021h	89ECh	1	1	0000h	1h	2h	0h
CRC-16_USB	8005h	FFFFh	1	1	FFFFh	1h	2h	1h
CRC-16_A	1021h	C6C6h	1	1	0000h	1h	2h	0h
CRC-16_KERMIT	1021h	0000h	1	1	0000h	1h	2h	0h

Table continues on the next page...

Table 332. CTRL programming for 16-bit CRC (continued)

Algorithm	Polynomial	Seed	Ref in	Ref out	XOR out	CTRL[TOT]	CTRL[TO TR]	CTRL[FX OR]
CRC-16_MODBUS	8005h	FFFFh	1	1	0000h	1h	2h	0h
CRC-16_X_25	1021h	FFFFh	1	1	FFFFh	1h	2h	1h
CRC-16_XMODEM	1021h	0000h	0	0	0000h	0h	0h	0h

The following table shows [Control \(CTRL\)](#) programming for 32-bit CRC.

Table 333. CTRL programming for 32-bit CRC

Algorithm	Polynomial	Seed	Ref in	Ref out	XOR out	CTRL[TOT]	CTRL[TO TR]	CTRL[FX OR]
CRC-32	04C11DB7h	FFFFFFFFh	1	1	FFFF_FFFFh	1h	2h	1h
CRC-32_BZIP2	04C11DB7h	FFFFFFFFh	0	0	FFFF_FFFFh	0h	0h	1h
CRC-32C	1EDC6F41h	FFFFFFFFh	1	1	FFFF_FFFFh	1h	2h	1h
CRC-32D	A833982Bh	FFFFFFFFh	1	1	FFFF_FFFFh	1h	2h	1h
CRC-32_MPEG-2	04C11DB7h	FFFFFFFFh	0	0	0000_0000h	0h	0h	0h
CRC-32_POSIX	04C11DB7h	00000000h	0	0	FFFF_FFFFh	0h	0h	1h
CRC-32Q	814141ABh	00000000h	0	0	0000_0000h	0h	0h	0h
CRC-32_JAMCRC	04C11DB7h	FFFFFFFFh	1	1	0000_0000h	1h	2h	0h
CRC-32_XFER	000000AFh	00000000h	0	0	0000_0000h	0h	0h	0h

47.6.2 Expected read data fields

The following table shows the expected read data fields for 16-bit CRC.

Table 334. Expected read data fields for 16-bit CRC

Algorithm	Data (DATA)
CRC16_CCITT_FALSE	[31:16] = Unknown [15:0] = Valid data
CRC16_ARC	[31:16] = Valid data [15:0] = Unknown
CRC16_AUG_CCITT	[31:16] = Unknown [15:0] = Valid data
CRC16_BUYPASS	[31:16] = Unknown [15:0] = Valid data
CRC16_CCITT_ZERO	[31:16] = Unknown [15:0] = Valid data
CRC16_CDMA2000	[31:16] = Unknown [15:0] = Valid data
CRC16_DDS_110	[31:16] = Unknown [15:0] = Valid data
CRC16_DECT_X	[31:16] = Unknown [15:0] = Valid data
CRC16_DNP	[31:16] = Valid data [15:0] = Unknown
CRC-16_EN_13757	[31:16] = Unknown [15:0] = Valid data
CRC-16_GENIBUS	[31:16] = Unknown [15:0] = Valid data

Table continues on the next page...

Table 334. Expected read data fields for 16-bit CRC (continued)

Algorithm	Data (DATA)
CRC-16_MAXIM	[31:16] = Valid data [15:0] = Unknown
CRC-16_MCRF4XX	[31:16] = Valid data [15:0] = Unknown
CRC-16_RIELLO	[31:16] = Valid data [15:0] = Unknown
CRC-16_T10_DIF	[31:16] = Unknown [15:0] = Valid data
CRC-16_TELEDISK	[31:16] = Unknown [15:0] = Valid data
CRC-16_TMS37157	[31:16] = Valid data [15:0] = Unknown
CRC-16_USB	[31:16] = Valid data [15:0] = Unknown
CRC-16_A	[31:16] = Valid data [15:0] = Unknown
CRC-16_KERMIT	[31:16] = Valid data [15:0] = Unknown
CRC-16_MODBUS	[31:16] = Valid data [15:0] = Unknown
CRC-16_X_25	[31:16] = Valid data [15:0] = Unknown
CRC-16_XMODEM	[31:16] = Unknown [15:0] = Valid data

The following table shows the expected read data fields for 32-bit CRC.

Table 335. Expected read data fields for 32-bit CRC

Algorithm	Data (DATA)
CRC-32	[31:0] = Valid data
CRC-32_BZIP2	[31:0] = Valid data
CRC-32C	[31:0] = Valid data
CRC-32D	[31:0] = Valid data
CRC-32_MPEG-2	[31:0] = Valid data
CRC-32_POSIX	[31:0] = Valid data
CRC-32Q	[31:0] = Valid data
CRC-32_JAMCRC	[31:0] = Valid data
CRC-32_XFER	[31:0] = Valid data

47.7 Memory map and register descriptions

NOTE

You must reconfigure CRC engine in case an IPS transfer error occurs (ips_xfr_err).

The CRC module generates a transfer error in the following cases:

- Write accesses to the register addresses that are not mapped to the peripherals but included in the address spaces of the peripherals.

47.7.1 CRC register descriptions

47.7.1.1 CRC memory map

CRC0 base address: 4008_A000h

Offset	Register	Width (In bits)	Access	Reset value
0h	Data (DATA)	32	RW	FFFF_FFFFh
4h	Polynomial (GPOLY)	32	RW	0000_1021h
8h	Control (CTRL)	32	RW	0000_0000h

47.7.1.2 Data (DATA)

Offset

Register	Offset
DATA	0h

Function


Configures the value of seed, data, and checksum. When CTRL[WAS] = 1, any write to this register is regarded as the seed value. When CTRL[WAS] becomes 0, any write to this register is regarded as data for general CRC calculation.

In 16-bit CRC mode, [DATA\[HU\]](#) and [DATA\[HL\]](#) are not used for programming the seed value, and reads of these fields return an indeterminate value. In 32-bit CRC mode, all fields are used for programming the seed value.

When programming data values, you can program to write 8 bits, 16 bits, or 32 bits in big endian order, provided all bytes are contiguous, with the MSB of data value written first.

After writing all data values, you can read the CRC result from DATA register. In 16-bit CRC mode, the CRC result is available in [DATA\[LU\]](#) and [DATA\[LL\]](#). In 32-bit CRC mode, all fields contain the result. After writing all data, you must wait for at least two clock cycles to read the data from CRC data (DATA) register.

Diagram

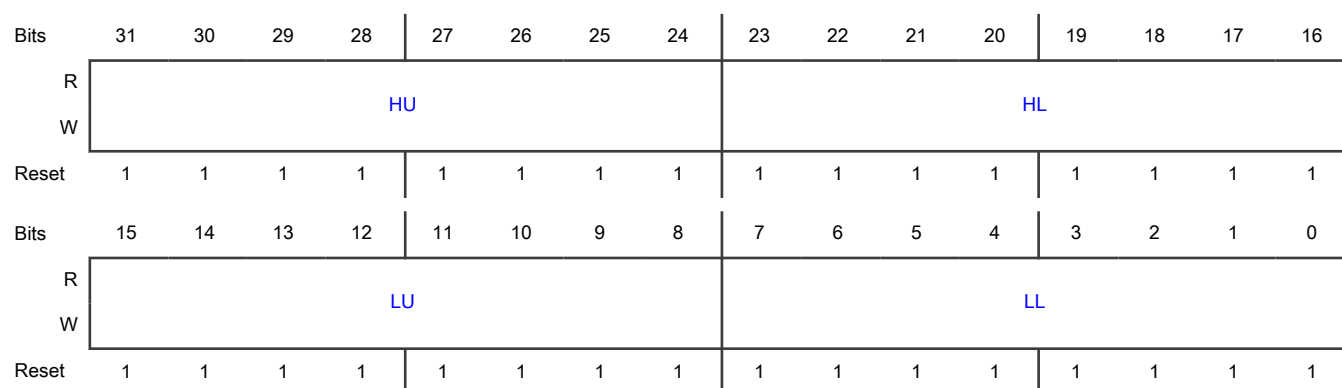

Fields

Field	Function
31-24 HU	Upper Part of High Byte Generates CRC checksum in both 16-bit and 32-bit CRC modes if CTRL[WAS] = 0. - In 16-bit CRC mode (CTRL[TCRC] = 0), this field is not used for programming a seed value. - In 32-bit CRC mode (CTRL[TCRC] = 1), the values written to this field are part of the seed value when CTRL[WAS] = 1.
23-16 HL	Lower Part of High Byte Generates CRC checksum in both 16-bit and 32-bit CRC modes if CTRL[WAS] = 0. - In 16-bit CRC mode (CTRL[TCRC] = 0), this field is not used for programming a seed value. - In 32-bit CRC mode (CTRL[TCRC] = 1), the values written to this field are part of the seed value when CTRL[WAS] = 1.
15-8 LU	Upper Part of Low Byte Generates CRC checksum when CTRL[WAS] = 0. When CTRL[WAS] = 1, the values written to this field are part of the seed value.
7-0 LL	Lower Part of Low Byte Generates CRC checksum when CTRL[WAS] = 0. When CTRL[WAS] = 1, the values written to this field are part of the seed value.


47.7.1.3 Polynomial (GPOLY)**Offset**

Register	Offset
GPOLY	4h

Function

Configures polynomial value for CRC calculation.

- Sets the upper 16 bits of polynomial that are used only in 32-bit CRC mode. Writes to this field are ignored in 16-bit CRC mode.
- Sets the lower 16 bits of polynomial that are used in both 16-bit and 32-bit CRC modes.

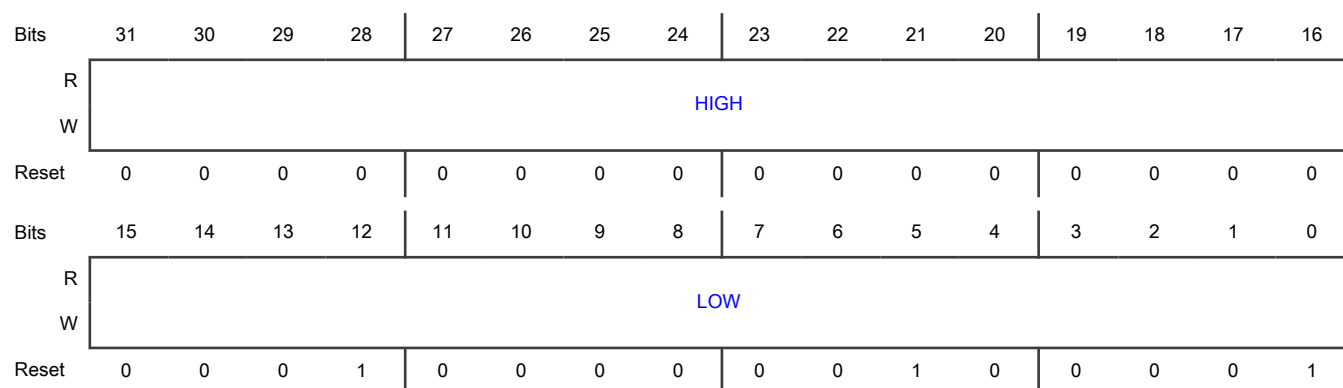Diagram**Fields**


Field	Function
31-16 HIGH	High Half-Word Writable and readable in 32-bit CRC mode (CTRL[TCRC] = 1). You cannot write to this field in 16-bit CRC mode (CTRL[TCRC] = 0).
15-0 LOW	Low Half-Word Writable and readable in both 16-bit and 32-bit CRC modes.

47.7.1.4 Control (CTRL)**Offset**

Register	Offset
CTRL	8h

Function

Sets control for CRC. You must write 1 to the appropriate fields of this register before starting a new CRC calculation, which you can initialize by writing 1 to CTRL[WAS] and then writing the seed into [DATA](#).

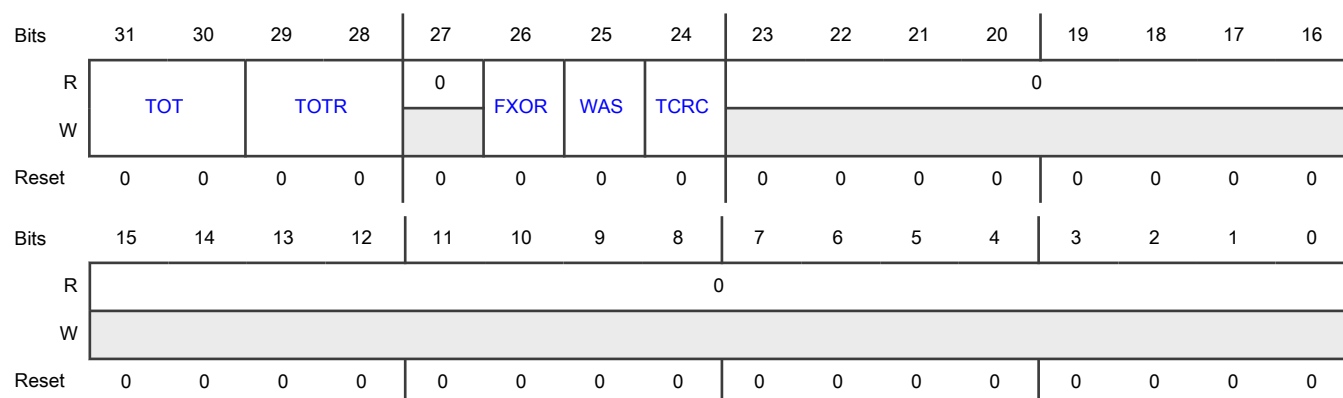Diagram

Fields

Field	Function
31-30 TOT	Transpose Type for Write Sets transpose type for the values written to DATA. See Transpose feature for the available transpose options. 00b - No transposition 01b - Bits in bytes are transposed, but bytes are not transposed. 10b - Both bits in bytes and bytes are transposed. 11b - Only bytes are transposed, no bits in a byte are transposed.
29-28 TOTR	Transpose Type for Read Sets transpose type for the values read from DATA. See Transpose feature for the available transpose options. 00b - No transposition 01b - Bits in bytes are transposed, but bytes are not transposed. 10b - Both bits in bytes and bytes are transposed. 11b - Only bytes are transposed, no bits in a byte are transposed.
27 —	Reserved
26 FXOR	Complement Read of CRC Data Register Enables on-the-fly complementing of read data. Some CRC protocols require the final checksum to be XORed with FFFFFFFFh or FFFFh. 0b - Disables XOR on reading data. 1b - Inverts or complements the read value of the CRC Data.
25 WAS	Write as Seed Specifies whether writes to DATA are data values or seed values. When this field = 1, the value that you write to is considered as seed value. When this field = 0, the value that you write to is considered as data for CRC calculation. 0b - Data values 1b - Seed values
24 TCRC	TCRC Defines the width of CRC. 0b - 16 bits 1b - 32 bits
23-0 —	Reserved

Chapter 48

Memory Block Checker(MBC)

48.1 Chip-specific MBC information

Table 336. Reference links to related information

Topic	Related module	Reference
Full description	MBC (TRDC)	MBC
System memory map		Memory map
Clocking		Clock distribution
Power Management		Power Management
Signal multiplexing	Port control	Signal multiplexing

The Memory Block Checker (MBC) is a sub-module of Trusted Resource Domain Controller (TRDC). TRDC is typically distributed across various sub-modules like MGR, DAC, MBC and MRC. However, sub-modules MGR, DAC, and MRC do not exist on this device and any references to them in TRDC chapter should be ignored. This chapter covers TRDC sub-module MBC and its features in detail.

48.1.1 Module instances

There is one MBC module and one Domain on this chip. m and d in MBCm_DOMd_BLK_CFG_W are 0. The MBC is instantiated between Flash Memory Controller (FMC) and AHB Matrix. MBC can control the Read, Write and Execute permission of each flash block, and the configuration can be locked.

48.1.2 MBC memory blocks

The granularity of MBC is described in the following table.

MBC0_MEMn	Memory	Block size
MEM0	Main flash	8 KB
MEM1	IFR0	2 KB
MEM2	IFR1	2 KB

NOTE

MBC0_MEM3_GLBCFG[CLRE] is used to clear violation interrupt of MEM0/1/2.

48.1.3 Security considerations

MBC on this chip can't distinguish secure privilege, secure user, non-secure privilege, and non-secure user, when there is an access to flash, and MBC treat all access to flash as secure user level. Because of it, SUR/SUW/SUX bits in MBC Global Access Control registers control the permission to flash. User should not set the NonSecure Enable (NSE) bits in in MBC Global Access Control register.

MBC controls the read, write and execute permission to flash. If an access doesn't have the permission to the flash region, MBC will generate interrupt. The domainX error registers are physically in the block checker.

NOTE
TZ-M feature of TRDC is not supported on this device.

48.2 Overview

The Memory Block Checker (MBC) implements access controls for on-chip internal memories based on a fixed-sized block format. MBC provides hardware access control for system bus references targeted at on-chip memory spaces.

Using the pre-programmed region descriptors with fixed-sized block format and their associated access rights, the MBC concurrently monitors system bus transactions and evaluates the appropriateness of each transfer. Memory references with sufficient access control rights are completed, while the references that are not mapped to any region descriptor or have insufficient rights are terminated with an access error response.

NOTE
The terminology in this chapter has been updated to align with NXP's inclusive language standards, as shown in the table below.


Table 337. Updated terms

Updated term	Deprecated term
Initiator	Master
Target	Slave

48.2.1 Block diagram

The Memory Block Checker (MBC) implements access controls for on-chip internal memories and peripherals based on a fixed-sized block format.

See [Figure 209](#) for MBC block diagram focusing on topology and connections.

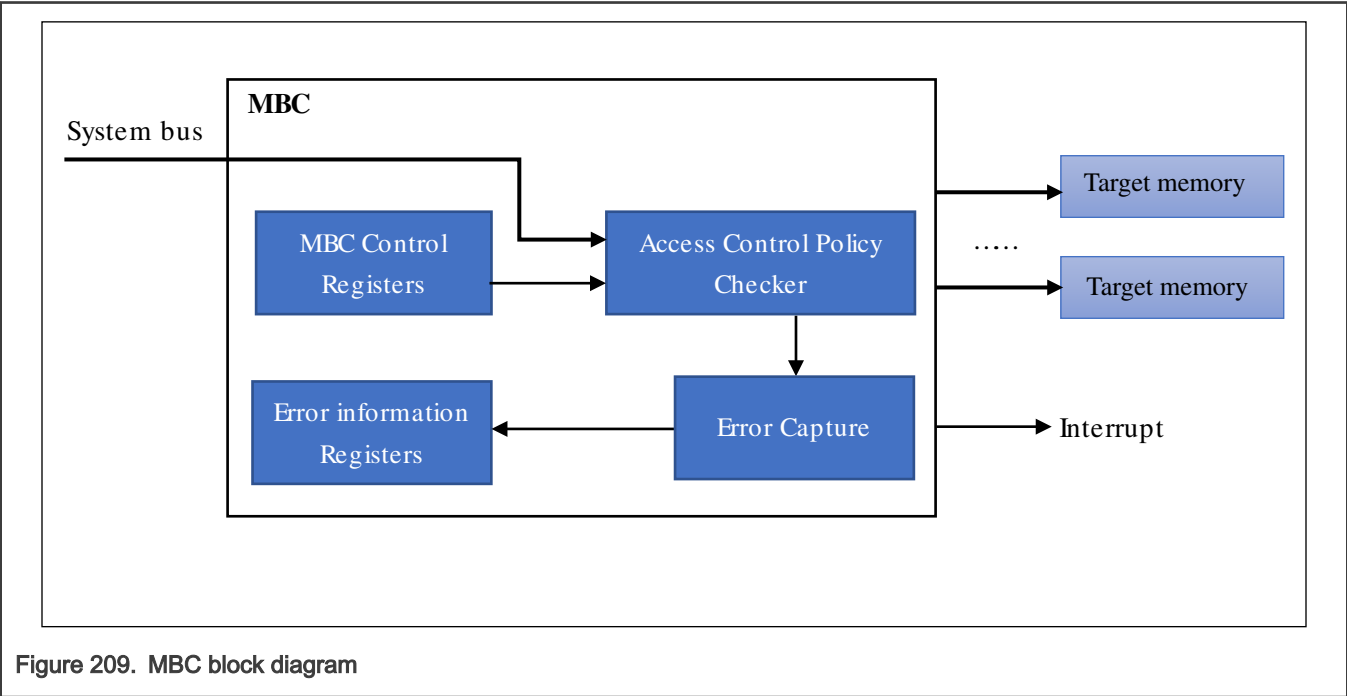

48.2.2 Features

Defines access rights to targets defined in MBCs for on-chip memories.

48.3 Functional description

This section provides more details on the operation and implementation of MBC.

48.3.1 Memory Block Checker (MBC)

The Memory Block Checker provides access control for system bus references targeted to on-chip internal memories . Using programmed block configuration registers which define the access rights per block, the MBC concurrently monitors system bus transactions and evaluates the appropriateness of each transfer. Memory references that have sufficient access rights are allowed to complete, while references that have insufficient rights are terminated with an access error response.

Refer to the chip-specific section to determine the number and size of blocks for each sub memory supported on this device.

Each MBCm_DOMd_BLK_CFG_W contains eight access control structures. Each structure is comprised of a 3-bit MBACSEL (Memory Block Access Control Select). The MBACSEL field selects a MBCm_MEMN_GLBACr register, which controls the read/write/execute/lock access to the corresponding block. Below table provides the eight possible access control combinations. In case you are looking for different access combination, such as write and execute allowed but read blocked, you can modify one of the unlocked configurations registers (MBC0_MEMN_GLBAC0 or MBC0_MEMN_GLBAC4 or MBC0_MEMN_GLBAC5) to 0x0000_3300.

Table below depicts eight possible access control combinations.

Table 338. Access control combinations

GAC Index	Register name	Read	Write	Execute	Lock	Description
0	MBC0_MEMN_GLBAC0 (0x0000_6600)	1	1	0	0	Data flash and unlocked (RW_). Default flash behavior with read and write access only. Instruction fetches (execute access) are blocked and generates security violation. Blocks assigned with this access control index can be changed to another index by software. This configuration register is unlocked and updatable by application.
1	MBC0_MEMN_GLBAC1 (0x8000_6600)	1	1	0	1	Data flash and locked (RW_L). Read and write operations are allowed but execution is blocked. Blocks assigned with this access control index cannot be changed to another index until next reset.
2	MBC0_MEMN_GLBAC2 (0x8000_5500)	1	0	1	1	Read only Memory (ROM) and locked (R_XL) Read & execute operations are allowed but write is blocked. Blocks assigned with this access control index cannot be changed to another index until next reset.
3	MBC0_MEMN_GLBAC3 (0x8000_4400)	1	0	0	1	Data Read only memory (DROM) and locked (R_L) Read operations is allowed but write & execute are blocked. Blocks assigned with

Table continues on the next page...

Table 338. Access control combinations (continued)

GAC Index	Register name	Read	Write	Execute	Lock	Description
						this access control index cannot be changed to another index until next reset.
4	MBC0_MEMN_GLBAC4 (0x0000_5500)	1	0	1	0	Read-Only-Memory (ROM) and unlocked (R_X_) Read & execute operations are allowed but write is blocked. Blocks assigned with this access control index can be changed to another index by software. This configuration register is unlocked and updatable by application.
5	MBC0_MEMN_GLBAC5 (0x0000_1100)	0	0	1	0	eXecute-only Memory (XOM) and unlocked (__X_) Execute operations are allowed but read & write are blocked. Blocks assigned with this access control index can be changed to another index by software. This configuration register is unlocked and updatable by application.
6	MBC0_MEMN_GLBAC6 (0x8000_1100)	0	0	1	1	eXecute-Only-Memory (XOM) and locked (__XL) Execute operations are allowed but read & write are blocked. Blocks assigned with this access control index cannot be changed to another index until next reset.
7	MBC0_MEMN_GLBAC7 (0x8000_0000)	0	0	0	1	Hidden (__L) Read, Write & execute operations are blocked. Once this access control index is assigned to a block, the memory range associated with block is hidden until next reset.

GLBAC1-7 also have a lock bit MBCm_MEMn_GLBACr[LK]. When LK=1, the GLBACr register is read-only until the next reset. Furthermore, if MBCm_DOMd_BLK_CFG_W[MBACSEL] selects a GLBAC that is locked, the 3-bit MBACSEL field is also locked until the next reset. GLBAC0 cannot be locked.

48.3.1.1 Memory block hit determination

MBCm_MEMs_GLBCFG[NBLK, SIZE_LOG2] is used to determine which bits of the address correspond to block number.

```

block_n_hit = (addr[MSB:LSB] == n)
where LSB=SIZE_LOG2
MSB=f{NBLKS, LSB}

```

Note that the block hit determination is based only on the address comparison of the first byte being accessed; that is, the MBC does not check the size of the access to make sure it entirely fits within the region.

48.3.1.2 Memory block access evaluation

For a block n hit, the MBC logic evaluates the access rights defined by the MBCm_DOMd_BLK_CFG_Ww registers. The block number hit selects the appropriate MBCm_DOMd_BLK_CFG_Ww register to use in the access evaluation. The {R,W,X}, nonsecure and privilege attributes of the access are compared with the MBC global access control policy defined in MBCm_DOMd_BLK_CFG_W[MBACSEL, NSE] fields.

MBC access evaluation terminates the access with a bus error and reports an access error for only one condition - when the access doesn't have sufficient access rights. By nature, the block checker can only hit in ONE block, and by implementation, there are no "miss" accesses. Accesses outside of the range covered by the MBC are not sent to the MBC. There also aren't any individual block valid bits.

48.3.2 Interrupts

This module outputs an interrupt signal which can be connected to the system's interrupt controller. Please check chip-specific interrupt assignment for details. Interrupt is asserted on detection of access violation by any checker, and it remains asserted until MBCn_MEM3_GLB_CFG[CLRE] is cleared. This interrupt is in addition to interrupt generated by initiator after receiving bus error due to access violation by memory block checker. So, system may receive interrupt through different channels but from the same access violation at checker.

48.4 External signals

This module has no external signals.

48.5 Register descriptions

Unless noted otherwise, the programming model registers can be accessed via 8-, 16- or 32-bit reads and 32-bit write references. Attempted accesses in a different operating mode, using unsupported write data sizes, writes to read-only resources, or access to reserved spaces are terminated with an error unless noted otherwise.

48.5.1 MBC register descriptions

48.5.1.1 MBC memory map

MBC0.MBC base address: 4008_E000h

Offset	Register	Width (In bits)	Access	Reset value
0h	MBC Global Configuration Register (MBC0_MEM0_GLB_CFG)	32	R	000D_0080h
4h	MBC Global Configuration Register (MBC0_MEM1_GLB_CFG)	32	R	000B_0010h
8h	MBC Global Configuration Register (MBC0_MEM2_GLB_CFG)	32	R	000B_0004h
Ch	MBC Global Configuration Register (MBC0_MEM3_GLB_CFG)	32	RW	0000_0000h
20h	MBC Global Access Control (MBC0_MEMN_GLBAC0)	32	RW	0000_6600h
24h	MBC Global Access Control (MBC0_MEMN_GLBAC1)	32	RW	8000_6600h
28h	MBC Global Access Control (MBC0_MEMN_GLBAC2)	32	RW	8000_5500h

Table continues on the next page...

Table continued from the previous page...

Offset	Register	Width (In bits)	Access	Reset value
2Ch	MBC Global Access Control (MBC0_MEMN_GLBAC3)	32	RW	8000_4400h
30h	MBC Global Access Control (MBC0_MEMN_GLBAC4)	32	RW	0000_5500h
34h	MBC Global Access Control (MBC0_MEMN_GLBAC5)	32	RW	0000_1100h
38h	MBC Global Access Control (MBC0_MEMN_GLBAC6)	32	RW	8000_1100h
3Ch	MBC Global Access Control (MBC0_MEMN_GLBAC7)	32	RW	8000_0000h
40h	MBC Memory Block Configuration Word (MBC0_DOM0_MEM0_BLK_CFG_W0)	32	RW	0000_0000h
44h	MBC Memory Block Configuration Word (MBC0_DOM0_MEM0_BLK_CFG_W1)	32	RW	0000_0000h
48h	MBC Memory Block Configuration Word (MBC0_DOM0_MEM0_BLK_CFG_W2)	32	RW	0000_0000h
4Ch	MBC Memory Block Configuration Word (MBC0_DOM0_MEM0_BLK_CFG_W3)	32	RW	0000_0000h
50h	MBC Memory Block Configuration Word (MBC0_DOM0_MEM0_BLK_CFG_W4)	32	RW	0000_0000h
54h	MBC Memory Block Configuration Word (MBC0_DOM0_MEM0_BLK_CFG_W5)	32	RW	0000_0000h
58h	MBC Memory Block Configuration Word (MBC0_DOM0_MEM0_BLK_CFG_W6)	32	RW	0000_0000h
5Ch	MBC Memory Block Configuration Word (MBC0_DOM0_MEM0_BLK_CFG_W7)	32	RW	0000_0000h
60h	MBC Memory Block Configuration Word (MBC0_DOM0_MEM0_BLK_CFG_W8)	32	RW	0000_0000h
64h	MBC Memory Block Configuration Word (MBC0_DOM0_MEM0_BLK_CFG_W9)	32	RW	0000_0000h
68h	MBC Memory Block Configuration Word (MBC0_DOM0_MEM0_BLK_CFG_W10)	32	RW	0000_0000h
6Ch	MBC Memory Block Configuration Word (MBC0_DOM0_MEM0_BLK_CFG_W11)	32	RW	0000_0000h
70h	MBC Memory Block Configuration Word (MBC0_DOM0_MEM0_BLK_CFG_W12)	32	RW	0000_0000h
74h	MBC Memory Block Configuration Word (MBC0_DOM0_MEM0_BLK_CFG_W13)	32	RW	0000_0000h
78h	MBC Memory Block Configuration Word (MBC0_DOM0_MEM0_BLK_CFG_W14)	32	RW	0000_0000h

Table continues on the next page...

Table continued from the previous page...

Offset	Register	Width (In bits)	Access	Reset value
7Ch	MBC Memory Block Configuration Word (MBC0_DOM0_MEM0_BLK_CFG_W15)	32	RW	0000_0000h
180h	MBC Memory Block Configuration Word (MBC0_DOM0_MEM1_BLK_CFG_W0)	32	RW	0000_0000h
184h	MBC Memory Block Configuration Word (MBC0_DOM0_MEM1_BLK_CFG_W1)	32	RW	0000_0000h
1A8h	MBC Memory Block Configuration Word (MBC0_DOM0_MEM2_BLK_CFG_W0)	32	RW	0000_0000h

48.5.1.2 MBC Global Configuration Register (MBC0_MEM0_GLBCFG - MBC0_MEM3_GLBCFG)

Offset

Register	Offset
MBC0_MEM0_GLBCFG	0h
MBC0_MEM1_GLBCFG	4h
MBC0_MEM2_GLBCFG	8h
MBC0_MEM3_GLBCFG	Ch


Function

These MBC global configuration read-only registers contain information on the MBC's hardware configuration. Specifically, it defines the number of memory blocks and the size of each block in each MBC mem (r).

NOTE

An all zero value (SIZE_LOG2 = 0, NBLKS = 0) indicates a non-existent memory. For the number of memories implemented in the MBCs, refer to chip-specific information

Diagram

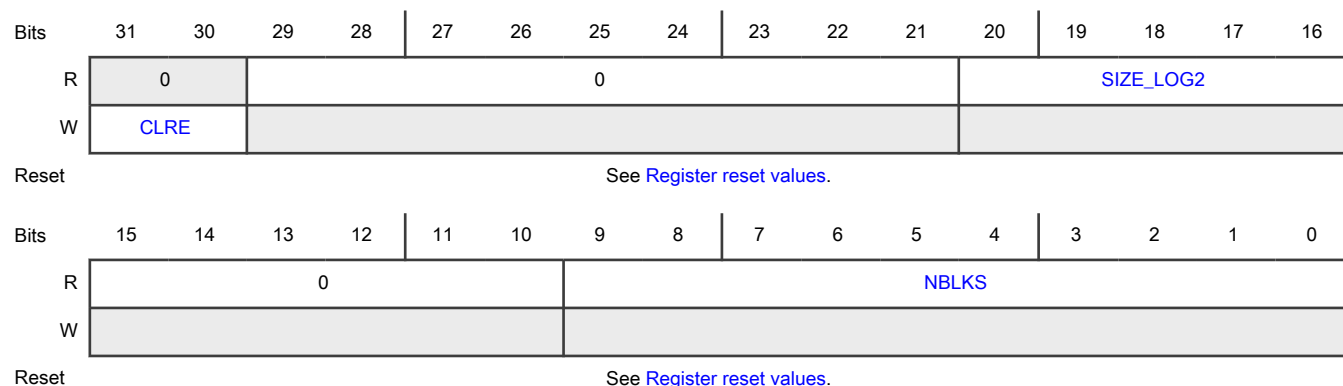

Register reset values

Register	Reset value
MBC0_MEM0_GLBCFG	000D_0080h
MBC0_MEM1_GLBCFG	000B_0010h
MBC0_MEM2_GLBCFG	000B_0004h
MBC0_MEM3_GLBCFG	0000_0000h

Fields

Field	Function						
31-30 CLRE	Clear Error This 2-bit, write-only field controls the clearing of an access violation error and any interrupt due to error, on writing 01b to this field. A write of any value other than 01b has no effect. NOTE This field is not supported in every instance. The following table includes only supported registers. <table><tr><th>Instance</th><th>Field supported in</th><th>Field not supported in</th></tr><tr><td>MBC0.MBC</td><td>MBC0_MEM3_GLBCFG</td><td>MBC0_MEM0_GLBCFG– MBC0_MEM2_GLBCFG</td></tr></table>	Instance	Field supported in	Field not supported in	MBC0.MBC	MBC0_MEM3_GLBCFG	MBC0_MEM0_GLBCFG– MBC0_MEM2_GLBCFG
Instance	Field supported in	Field not supported in					
MBC0.MBC	MBC0_MEM3_GLBCFG	MBC0_MEM0_GLBCFG– MBC0_MEM2_GLBCFG					
29-21 —	Reserved						
20-16 SIZE_LOG2	Log2 size per block For example SIZE_LOG2=0x0C is 2^12=4 KB blocks.						
15-10 —	Reserved						
9-0 NBLKS	Number of blocks in this memory						

48.5.1.3 MBC Global Access Control (MBC0_MEMN_GLBAC0)

Offset


Register	Offset
MBC0_MEMN_GLBAC0	20h

Function

These fully programmable R/W fields define the R/W/X (read/write/execute) access control flags with each of the 4 supported operating modes: SecurePriv, SecureUser, NonsecurePriv, Nonsecure User.

NOTE

The lock field (LK) in MBC0_MEMN_GLBAC1, MBC0_MEMN_GLBAC2, MBC0_MEMN_GLBAC3, MBC0_MEMN_GLBAC6 and MBC0_MEMN_GLBAC7 registers are set to lock state (LK= 1) at reset. Hence these registers cannot be changed and blocks that are assigned to one of these global access control indexes cannot change the access policy index until next reset.

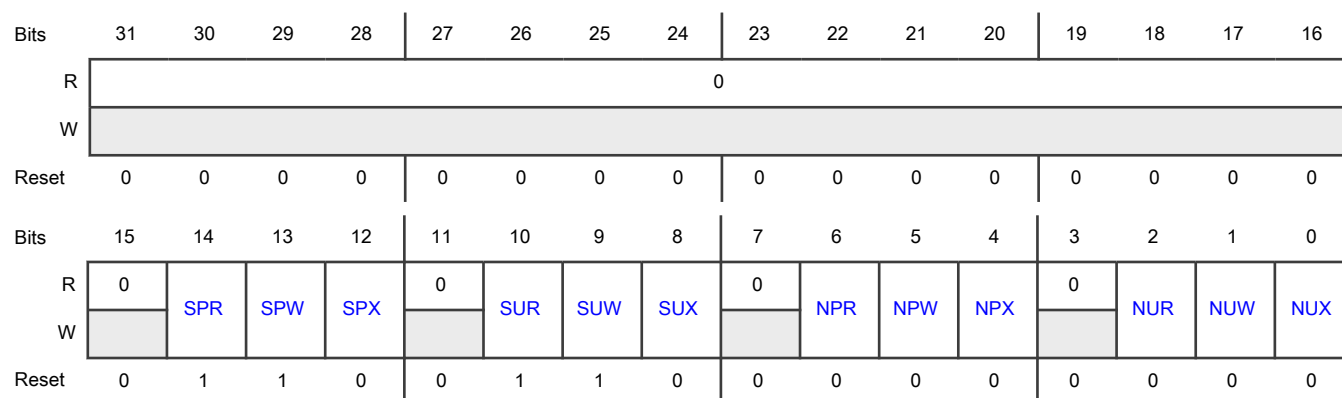Diagram**Fields**

Field	Function
31-15 —	Reserved
14 SPR	SecurePriv Read SecurePriv read access control flag 0b - Read access is not allowed in Secure Privilege mode. 1b - Read access is allowed in Secure Privilege mode.
13 SPW	SecurePriv Write SecurePriv write access control flag 0b - Write access is not allowed in Secure Privilege mode. 1b - Write access is allowed in Secure Privilege mode.
12 SPX	SecurePriv Execute SecurePriv execute access control flag 0b - Execute access is not allowed in Secure Privilege mode. 1b - Execute access is allowed in Secure Privilege mode.

Table continues on the next page...

Table continued from the previous page...

Field	Function
11 —	Reserved
10 SUR	SecureUser Read SecureUser read access control flag 0b - Read access is not allowed in Secure User mode. 1b - Read access is allowed in Secure User mode.
9 SUW	SecureUser Write SecureUser write access control flag 0b - Write access is not allowed in Secure User mode. 1b - Write access is allowed in Secure User mode.
8 SUX	SecureUser Execute SecureUser execute access control flag 0b - Execute access is not allowed in Secure User mode. 1b - Execute access is allowed in Secure User mode.
7 —	Reserved
6 NPR	NonsecurePriv Read NonsecurePriv read access control flag 0b - Read access is not allowed in Nonsecure Privilege mode. 1b - Read access is allowed in Nonsecure Privilege mode.
5 NPW	NonsecurePriv Write NonsecurePriv write access control flag 0b - Write access is not allowed in Nonsecure Privilege mode. 1b - Write access is allowed in Nonsecure Privilege mode.
4 NPX	NonsecurePriv Execute NonsecurePriv execute access control flag 0b - Execute access is not allowed in Nonsecure Privilege mode. 1b - Execute access is allowed in Nonsecure Privilege mode.
3 —	Reserved
2	NonsecureUser Read

Table continues on the next page...

Table continued from the previous page...

Field	Function
NUR	NonsecureUser read access control flag 0b - Read access is not allowed in Nonsecure User mode. 1b - Read access is allowed in Nonsecure User mode.
1 NUW	NonsecureUser Write NonsecureUser write access control flag 0b - Write access is not allowed in Nonsecure User mode. 1b - Write access is allowed in Nonsecure User mode.
0 NUX	NonsecureUser Execute NonsecureUser execute access control flag 0b - Execute access is not allowed in Nonsecure User mode. 1b - Execute access is allowed in Nonsecure User mode.

48.5.1.4 MBC Global Access Control (MBC0_MEMN_GLBAC1)

Offset

Register	Offset
MBC0_MEMN_GLBAC1	24h

Function


These fully programmable R/W fields define the R/W/X (read/write/execute) access control flags with each of the 4 supported operating modes: SecurePriv, SecureUser, NonsecurePriv, Nonsecure User. The lock bit provides the ability to lock these control access flags and to lock the MBC_BLK_CFG[MBACSEL] field when a locked MBC_MEMN_GLBAC register is selected.

This register is not writable.

NOTE

The lock field (LK) in MBC0_MEMN_GLBAC1, MBC0_MEMN_GLBAC2, MBC0_MEMN_GLBAC3, MBC0_MEMN_GLBAC6 and MBC0_MEMN_GLBAC7 registers are set to lock state (LK= 1) at reset. Hence these registers cannot be changed and blocks that are assigned to one of these global access control indexes cannot change the access policy index until next reset.

Diagram

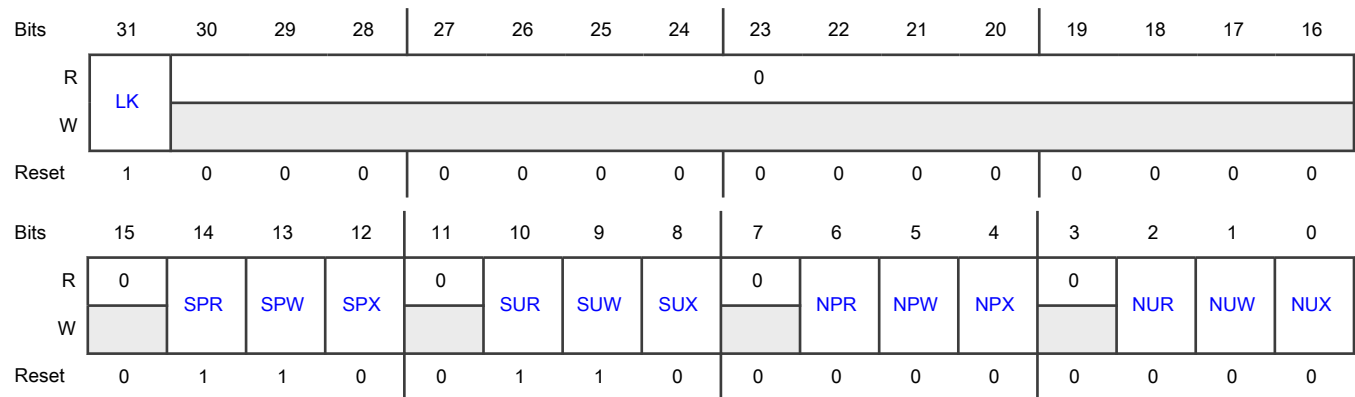

Fields

Field	Function
31 LK	LOCK This 1-bit field provides a mechanism to limit writes to the this register to protect its contents. Once set, this bit remains asserted until the next reset. 0b - This register is not locked and can be altered. 1b - This register is locked and cannot be altered.
30-15 —	Reserved
14 SPR	SecurePriv Read SecurePriv read access control flag 0b - Read access is not allowed in Secure Privilege mode. 1b - Read access is allowed in Secure Privilege mode.
13 SPW	SecurePriv Write SecurePriv write access control flag 0b - Write access is not allowed in Secure Privilege mode. 1b - Write access is allowed in Secure Privilege mode.
12 SPX	SecurePriv Execute SecurePriv execute access control flag 0b - Execute access is not allowed in Secure Privilege mode. 1b - Execute access is allowed in Secure Privilege mode.
11 —	Reserved
10	SecureUser Read

Table continues on the next page...

Table continued from the previous page...

Field	Function
SUR	SecureUser read access control flag 0b - Read access is not allowed in Secure User mode. 1b - Read access is allowed in Secure User mode.
9 SUW	SecureUser Write SecureUser write access control flag 0b - Write access is not allowed in Secure User mode. 1b - Write access is allowed in Secure User mode.
8 SUX	SecureUser Execute SecureUser execute access control flag 0b - Execute access is not allowed in Secure User mode. 1b - Execute access is allowed in Secure User mode.
7 —	Reserved
6 NPR	NonsecurePriv Read NonsecurePriv read access control flag 0b - Read access is not allowed in Nonsecure Privilege mode. 1b - Read access is allowed in Nonsecure Privilege mode.
5 NPW	NonsecurePriv Write NonsecurePriv write access control flag 0b - Write access is not allowed in Nonsecure Privilege mode. 1b - Write access is allowed in Nonsecure Privilege mode.
4 NPX	NonsecurePriv Execute NonsecurePriv execute access control flag 0b - Execute access is not allowed in Nonsecure Privilege mode. 1b - Execute access is allowed in Nonsecure Privilege mode.
3 —	Reserved
2 NUR	NonsecureUser Read NonsecureUser read access control flag 0b - Read access is not allowed in Nonsecure User mode. 1b - Read access is allowed in Nonsecure User mode.

Table continues on the next page...

Table continued from the previous page...

Field	Function
1 NUW	NonsecureUser Write NonsecureUser write access control flag 0b - Write access is not allowed in Nonsecure User mode. 1b - Write access is allowed in Nonsecure User mode.
0 NUX	NonsecureUser Execute NonsecureUser execute access control flag 0b - Execute access is not allowed in Nonsecure User mode. 1b - Execute access is allowed in Nonsecure User mode.

48.5.1.5 MBC Global Access Control (MBC0_MEMN_GLBAC2)

Offset

Register	Offset
MBC0_MEMN_GLBAC2	28h

Function


These fully programmable R/W fields define the R/W/X (read/write/execute) access control flags with each of the 4 supported operating modes: SecurePriv, SecureUser, NonsecurePriv, Nonsecure User. The lock bit provides the ability to lock these control access flags and to lock the MBC_BLK_CFG[MBACSEL] field when a locked MBC_MEMN_GLBAC register is selected.

This register is not writable.

NOTE

The lock field (LK) in MBC0_MEMN_GLBAC1, MBC0_MEMN_GLBAC2, MBC0_MEMN_GLBAC3, MBC0_MEMN_GLBAC6 and MBC0_MEMN_GLBAC7 registers are set to lock state (LK= 1) at reset. Hence these registers cannot be changed and blocks that are assigned to one of these global access control indexes cannot change the access policy index until next reset.

Diagram

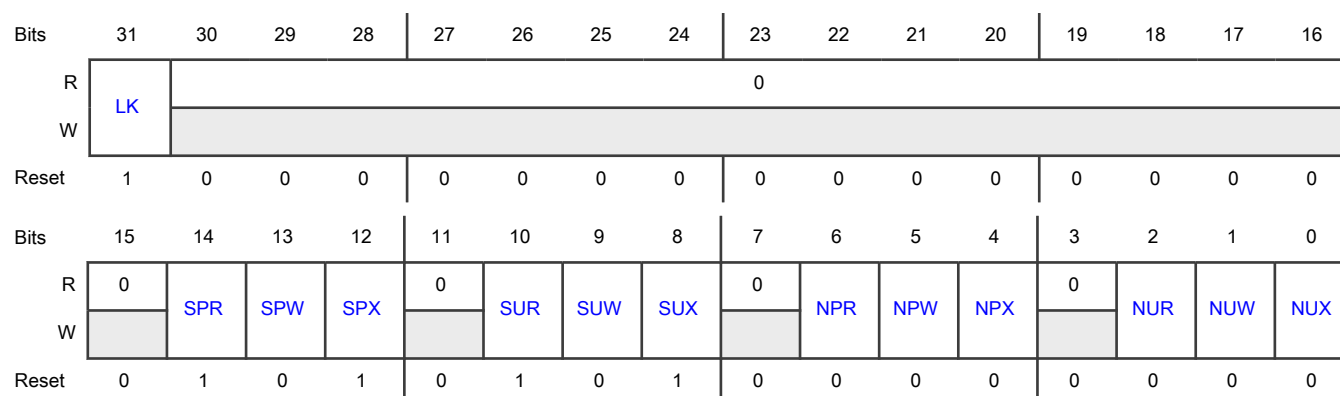

Fields

Field	Function
31 LK	LOCK This 1-bit field provides a mechanism to limit writes to the this register to protect its contents. Once set, this bit remains asserted until the next reset. 0b - This register is not locked and can be altered. 1b - This register is locked and cannot be altered.
30-15 —	Reserved
14 SPR	SecurePriv Read SecurePriv read access control flag 0b - Read access is not allowed in Secure Privilege mode. 1b - Read access is allowed in Secure Privilege mode.
13 SPW	SecurePriv Write SecurePriv write access control flag 0b - Write access is not allowed in Secure Privilege mode. 1b - Write access is allowed in Secure Privilege mode.
12 SPX	SecurePriv Execute SecurePriv execute access control flag 0b - Execute access is not allowed in Secure Privilege mode. 1b - Execute access is allowed in Secure Privilege mode.
11 —	Reserved
10 SUR	SecureUser Read SecureUser read access control flag 0b - Read access is not allowed in Secure User mode. 1b - Read access is allowed in Secure User mode.
9 SUW	SecureUser Write SecureUser write access control flag 0b - Write access is not allowed in Secure User mode. 1b - Write access is allowed in Secure User mode.
8 SUX	SecureUser Execute SecureUser execute access control flag

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - Execute access is not allowed in Secure User mode. 1b - Execute access is allowed in Secure User mode.
7 —	Reserved
6 NPR	NonsecurePriv Read NonsecurePriv read access control flag 0b - Read access is not allowed in Nonsecure Privilege mode. 1b - Read access is allowed in Nonsecure Privilege mode.
5 NPW	NonsecurePriv Write NonsecurePriv write access control flag 0b - Write access is not allowed in Nonsecure Privilege mode. 1b - Write access is allowed in Nonsecure Privilege mode.
4 NPX	NonsecurePriv Execute NonsecurePriv execute access control flag 0b - Execute access is not allowed in Nonsecure Privilege mode. 1b - Execute access is allowed in Nonsecure Privilege mode.
3 —	Reserved
2 NUR	NonsecureUser Read NonsecureUser read access control flag 0b - Read access is not allowed in Nonsecure User mode. 1b - Read access is allowed in Nonsecure User mode.
1 NUW	NonsecureUser Write NonsecureUser write access control flag 0b - Write access is not allowed in Nonsecure User mode. 1b - Write access is allowed in Nonsecure User mode.
0 NUX	NonsecureUser Execute NonsecureUser execute access control flag 0b - Execute access is not allowed in Nonsecure User mode. 1b - Execute access is allowed in Nonsecure User mode.

48.5.1.6 MBC Global Access Control (MBC0_MEMN_GLBAC3)

Offset

Register	Offset
MBC0_MEMN_GLBAC3	2Ch

Function

These fully programmable R/W fields define the R/W/X (read/write/execute) access control flags with each of the 4 supported operating modes: SecurePriv, SecureUser, NonsecurePriv, Nonsecure User. The lock bit provides the ability to lock these control access flags and to lock the MBC_BLK_CFG[MBACSEL] field when a locked MBC_MEMN_GLBAC register is selected.

This register is not writable.

NOTE

The lock field (LK) in MBC0_MEMN_GLBAC1, MBC0_MEMN_GLBAC2, MBC0_MEMN_GLBAC3, MBC0_MEMN_GLBAC6 and MBC0_MEMN_GLBAC7 registers are set to lock state (LK= 1) at reset. Hence these registers cannot be changed and blocks that are assigned to one of these global access control indexes cannot change the access policy index until next reset.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	LK	0														
W																
Reset	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0	SPR	SPW	SPX	0	SUR	SUW	SUX	0	NPR	NPW	NPX	0	NUR	NUW	NUX
W																
Reset	0	1	0	0	0	1	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31 LK	LOCK This 1-bit field provides a mechanism to limit writes to the this register to protect its contents. Once set, this bit remains asserted until the next reset. 0b - This register is not locked and can be altered. 1b - This register is locked and cannot be altered.
30-15 —	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
14 SPR	SecurePriv Read SecurePriv read access control flag 0b - Read access is not allowed in Secure Privilege mode. 1b - Read access is allowed in Secure Privilege mode.
13 SPW	SecurePriv Write SecurePriv write access control flag 0b - Write access is not allowed in Secure Privilege mode. 1b - Write access is allowed in Secure Privilege mode.
12 SPX	SecurePriv Execute SecurePriv execute access control flag 0b - Execute access is not allowed in Secure Privilege mode. 1b - Execute access is allowed in Secure Privilege mode.
11 —	Reserved
10 SUR	SecureUser Read SecureUser read access control flag 0b - Read access is not allowed in Secure User mode. 1b - Read access is allowed in Secure User mode.
9 SUW	SecureUser Write SecureUser write access control flag 0b - Write access is not allowed in Secure User mode. 1b - Write access is allowed in Secure User mode.
8 SUX	SecureUser Execute SecureUser execute access control flag 0b - Execute access is not allowed in Secure User mode. 1b - Execute access is allowed in Secure User mode.
7 —	Reserved
6 NPR	NonsecurePriv Read NonsecurePriv read access control flag

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - Read access is not allowed in Nonsecure Privilege mode. 1b - Read access is allowed in Nonsecure Privilege mode.
5 NPW	NonsecurePriv Write NonsecurePriv write access control flag 0b - Write access is not allowed in Nonsecure Privilege mode. 1b - Write access is allowed in Nonsecure Privilege mode.
4 NPX	NonsecurePriv Execute NonsecurePriv execute access control flag 0b - Execute access is not allowed in Nonsecure Privilege mode. 1b - Execute access is allowed in Nonsecure Privilege mode.
3 —	Reserved
2 NUR	NonsecureUser Read NonsecureUser read access control flag 0b - Read access is not allowed in Nonsecure User mode. 1b - Read access is allowed in Nonsecure User mode.
1 NUW	NonsecureUser Write NonsecureUser write access control flag 0b - Write access is not allowed in Nonsecure User mode. 1b - Write access is allowed in Nonsecure User mode.
0 NUX	NonsecureUser Execute NonsecureUser execute access control flag 0b - Execute access is not allowed in Nonsecure User mode. 1b - Execute access is allowed in Nonsecure User mode.

48.5.1.7 MBC Global Access Control (MBC0_MEMN_GLBAC4)

Offset

Register	Offset
MBC0_MEMN_GLBAC4	30h


Function

These fully programmable R/W fields define the R/W/X (read/write/execute) access control flags with each of the 4 supported operating modes: SecurePriv, SecureUser, NonsecurePriv, Nonsecure User. The lock bit provides the ability to lock these control access flags and to lock the MBC_BLK_CFG[MBACSEL] field when a locked MBC_MEMN_GLBAC register is selected.

NOTE

The lock field (LK) in MBC0_MEMN_GLBAC1, MBC0_MEMN_GLBAC2, MBC0_MEMN_GLBAC3, MBC0_MEMN_GLBAC6 and MBC0_MEMN_GLBAC7 registers are set to lock state (LK= 1) at reset. Hence these registers cannot be changed and blocks that are assigned to one of these global access control indexes cannot change the access policy index until next reset.

Diagram

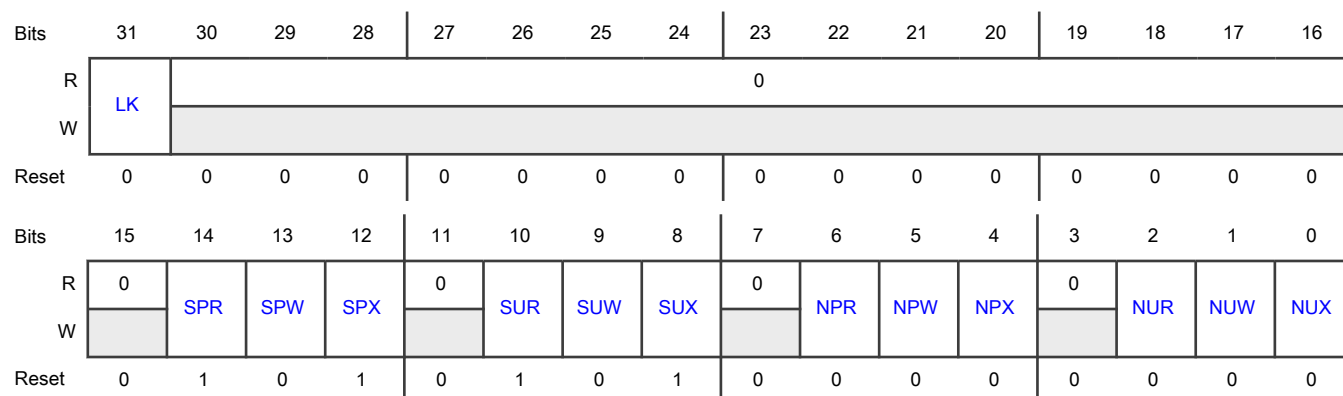

Fields

Field	Function
31 LK	LOCK This 1-bit field provides a mechanism to limit writes to the this register to protect its contents. Once set, this bit remains asserted until the next reset. 0b - This register is not locked and can be altered. 1b - This register is locked and cannot be altered.
30-15 —	Reserved
14 SPR	SecurePriv Read SecurePriv read access control flag 0b - Read access is not allowed in Secure Privilege mode. 1b - Read access is allowed in Secure Privilege mode.
13 SPW	SecurePriv Write SecurePriv write access control flag

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - Write access is not allowed in Secure Privilege mode. 1b - Write access is allowed in Secure Privilege mode.
12 SPX	SecurePriv Execute SecurePriv execute access control flag 0b - Execute access is not allowed in Secure Privilege mode. 1b - Execute access is allowed in Secure Privilege mode.
11 —	Reserved
10 SUR	SecureUser Read SecureUser read access control flag 0b - Read access is not allowed in Secure User mode. 1b - Read access is allowed in Secure User mode.
9 SUW	SecureUser Write SecureUser write access control flag 0b - Write access is not allowed in Secure User mode. 1b - Write access is allowed in Secure User mode.
8 SUX	SecureUser Execute SecureUser execute access control flag 0b - Execute access is not allowed in Secure User mode. 1b - Execute access is allowed in Secure User mode.
7 —	Reserved
6 NPR	NonsecurePriv Read NonsecurePriv read access control flag 0b - Read access is not allowed in Nonsecure Privilege mode. 1b - Read access is allowed in Nonsecure Privilege mode.
5 NPW	NonsecurePriv Write NonsecurePriv write access control flag 0b - Write access is not allowed in Nonsecure Privilege mode. 1b - Write access is allowed in Nonsecure Privilege mode.
4	NonsecurePriv Execute

Table continues on the next page...

Table continued from the previous page...

Field	Function
NPX	NonsecurePriv execute access control flag 0b - Execute access is not allowed in Nonsecure Privilege mode. 1b - Execute access is allowed in Nonsecure Privilege mode.
3 —	Reserved
2 NUR	NonsecureUser Read NonsecureUser read access control flag 0b - Read access is not allowed in Nonsecure User mode. 1b - Read access is allowed in Nonsecure User mode.
1 NUW	NonsecureUser Write NonsecureUser write access control flag 0b - Write access is not allowed in Nonsecure User mode. 1b - Write access is allowed in Nonsecure User mode.
0 NUX	NonsecureUser Execute NonsecureUser execute access control flag 0b - Execute access is not allowed in Nonsecure User mode. 1b - Execute access is allowed in Nonsecure User mode.

48.5.1.8 MBC Global Access Control (MBC0_MEMN_GLBAC5)

Offset

Register	Offset
MBC0_MEMN_GLBAC5	34h


Function

These fully programmable R/W fields define the R/W/X (read/write/execute) access control flags with each of the 4 supported operating modes: SecurePriv, SecureUser, NonsecurePriv, Nonsecure User. The lock bit provides the ability to lock these control access flags and to lock the MBC_BLK_CFG[MBACSEL] field when a locked MBC_MEMN_GLBAC register is selected.

NOTE

The lock field (LK) in MBC0_MEMN_GLBAC1, MBC0_MEMN_GLBAC2, MBC0_MEMN_GLBAC3, MBC0_MEMN_GLBAC6 and MBC0_MEMN_GLBAC7 registers are set to lock state (LK= 1) at reset. Hence these registers cannot be changed and blocks that are assigned to one of these global access control indexes cannot change the access policy index until next reset.

Diagram

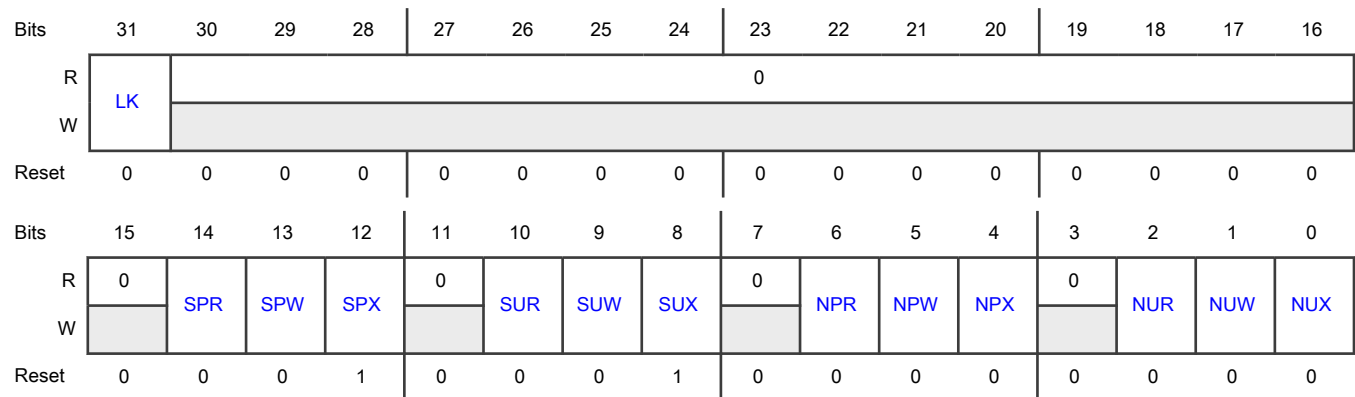

Fields

Field	Function
31 LK	LOCK This 1-bit field provides a mechanism to limit writes to the this register to protect its contents. Once set, this bit remains asserted until the next reset. 0b - This register is not locked and can be altered. 1b - This register is locked and cannot be altered.
30-15 —	Reserved
14 SPR	SecurePriv Read SecurePriv read access control flag 0b - Read access is not allowed in Secure Privilege mode. 1b - Read access is allowed in Secure Privilege mode.
13 SPW	SecurePriv Write SecurePriv write access control flag 0b - Write access is not allowed in Secure Privilege mode. 1b - Write access is allowed in Secure Privilege mode.
12 SPX	SecurePriv Execute SecurePriv execute access control flag 0b - Execute access is not allowed in Secure Privilege mode. 1b - Execute access is allowed in Secure Privilege mode.
11 —	Reserved
10	SecureUser Read

Table continues on the next page...

Table continued from the previous page...

Field	Function
SUR	SecureUser read access control flag 0b - Read access is not allowed in Secure User mode. 1b - Read access is allowed in Secure User mode.
9 SUW	SecureUser Write SecureUser write access control flag 0b - Write access is not allowed in Secure User mode. 1b - Write access is allowed in Secure User mode.
8 SUX	SecureUser Execute SecureUser execute access control flag 0b - Execute access is not allowed in Secure User mode. 1b - Execute access is allowed in Secure User mode.
7 —	Reserved
6 NPR	NonsecurePriv Read NonsecurePriv read access control flag 0b - Read access is not allowed in Nonsecure Privilege mode. 1b - Read access is allowed in Nonsecure Privilege mode.
5 NPW	NonsecurePriv Write NonsecurePriv write access control flag 0b - Write access is not allowed in Nonsecure Privilege mode. 1b - Write access is allowed in Nonsecure Privilege mode.
4 NPX	NonsecurePriv Execute NonsecurePriv execute access control flag 0b - Execute access is not allowed in Nonsecure Privilege mode. 1b - Execute access is allowed in Nonsecure Privilege mode.
3 —	Reserved
2 NUR	NonsecureUser Read NonsecureUser read access control flag 0b - Read access is not allowed in Nonsecure User mode. 1b - Read access is allowed in Nonsecure User mode.

Table continues on the next page...

Table continued from the previous page...

Field	Function
1 NUW	NonsecureUser Write NonsecureUser write access control flag 0b - Write access is not allowed in Nonsecure User mode. 1b - Write access is allowed in Nonsecure User mode.
0 NUX	NonsecureUser Execute NonsecureUser execute access control flag 0b - Execute access is not allowed in Nonsecure User mode. 1b - Execute access is allowed in Nonsecure User mode.

48.5.1.9 MBC Global Access Control (MBC0_MEMN_GLBAC6)

Offset

Register	Offset
MBC0_MEMN_GLBAC6	38h

Function


These fully programmable R/W fields define the R/W/X (read/write/execute) access control flags with each of the 4 supported operating modes: SecurePriv, SecureUser, NonsecurePriv, Nonsecure User. The lock bit provides the ability to lock these control access flags and to lock the MBC_BLK_CFG[MBACSEL] field when a locked MBC_MEMN_GLBAC register is selected.

This register is not writable.

NOTE

The lock field (LK) in MBC0_MEMN_GLBAC1, MBC0_MEMN_GLBAC2, MBC0_MEMN_GLBAC3, MBC0_MEMN_GLBAC6 and MBC0_MEMN_GLBAC7 registers are set to lock state (LK= 1) at reset. Hence these registers cannot be changed and blocks that are assigned to one of these global access control indexes cannot change the access policy index until next reset.

Diagram

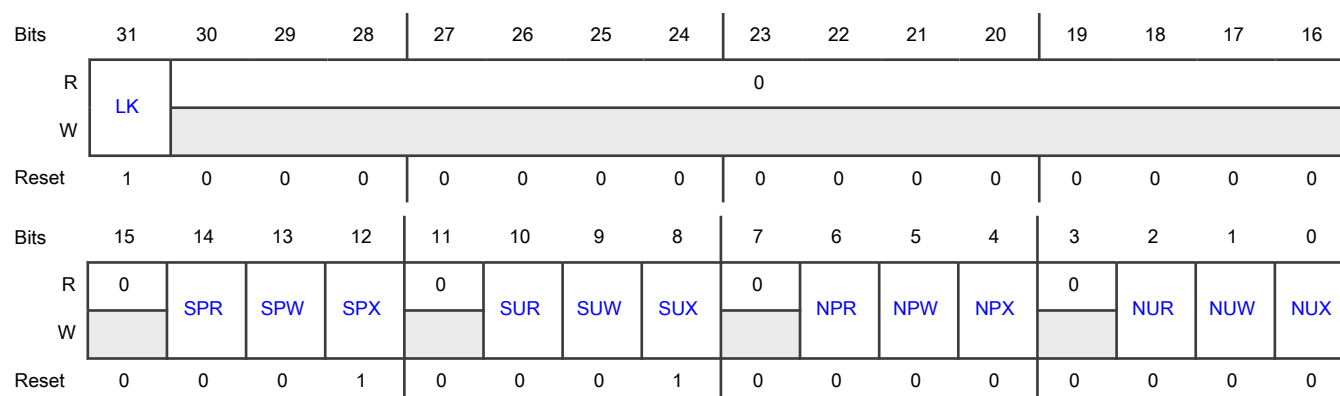

Fields

Field	Function
31 LK	LOCK This 1-bit field provides a mechanism to limit writes to the this register to protect its contents. Once set, this bit remains asserted until the next reset. 0b - This register is not locked and can be altered. 1b - This register is locked and cannot be altered.
30-15 —	Reserved
14 SPR	SecurePriv Read SecurePriv read access control flag 0b - Read access is not allowed in Secure Privilege mode. 1b - Read access is allowed in Secure Privilege mode.
13 SPW	SecurePriv Write SecurePriv write access control flag 0b - Write access is not allowed in Secure Privilege mode. 1b - Write access is allowed in Secure Privilege mode.
12 SPX	SecurePriv Execute SecurePriv execute access control flag 0b - Execute access is not allowed in Secure Privilege mode. 1b - Execute access is allowed in Secure Privilege mode.
11 —	Reserved
10 SUR	SecureUser Read SecureUser read access control flag 0b - Read access is not allowed in Secure User mode. 1b - Read access is allowed in Secure User mode.
9 SUW	SecureUser Write SecureUser write access control flag 0b - Write access is not allowed in Secure User mode. 1b - Write access is allowed in Secure User mode.
8 SUX	SecureUser Execute SecureUser execute access control flag

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - Execute access is not allowed in Secure User mode. 1b - Execute access is allowed in Secure User mode.
7 —	Reserved
6 NPR	NonsecurePriv Read NonsecurePriv read access control flag 0b - Read access is not allowed in Nonsecure Privilege mode. 1b - Read access is allowed in Nonsecure Privilege mode.
5 NPW	NonsecurePriv Write NonsecurePriv write access control flag 0b - Write access is not allowed in Nonsecure Privilege mode. 1b - Write access is allowed in Nonsecure Privilege mode.
4 NPX	NonsecurePriv Execute NonsecurePriv execute access control flag 0b - Execute access is not allowed in Nonsecure Privilege mode. 1b - Execute access is allowed in Nonsecure Privilege mode.
3 —	Reserved
2 NUR	NonsecureUser Read NonsecureUser read access control flag 0b - Read access is not allowed in Nonsecure User mode. 1b - Read access is allowed in Nonsecure User mode.
1 NUW	NonsecureUser Write NonsecureUser write access control flag 0b - Write access is not allowed in Nonsecure User mode. 1b - Write access is allowed in Nonsecure User mode.
0 NUX	NonsecureUser Execute NonsecureUser execute access control flag 0b - Execute access is not allowed in Nonsecure User mode. 1b - Execute access is allowed in Nonsecure User mode.

48.5.1.10 MBC Global Access Control (MBC0_MEMN_GLBAC7)

Offset

Register	Offset
MBC0_MEMN_GLBAC7	3Ch

Function

These fully programmable R/W fields define the R/W/X (read/write/execute) access control flags with each of the 4 supported operating modes: SecurePriv, SecureUser, NonsecurePriv, Nonsecure User. The lock bit provides the ability to lock these control access flags and to lock the MBC_BLK_CFG[MBACSEL] field when a locked MBC_MEMN_GLBAC register is selected.

This register is not writable.

NOTE

The lock field (LK) in MBC0_MEMN_GLBAC1, MBC0_MEMN_GLBAC2, MBC0_MEMN_GLBAC3, MBC0_MEMN_GLBAC6 and MBC0_MEMN_GLBAC7 registers are set to lock state (LK= 1) at reset. Hence these registers cannot be changed and blocks that are assigned to one of these global access control indexes cannot change the access policy index until next reset.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	LK	0														
W																
Reset	1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	0	SPR	SPW	SPX	0	SUR	SUW	SUX	0	NPR	NPW	NPX	0	NUR	NUW	NUX
W																
Reset	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Fields

Field	Function
31 LK	LOCK This 1-bit field provides a mechanism to limit writes to the this register to protect its contents. Once set, this bit remains asserted until the next reset. 0b - This register is not locked and can be altered. 1b - This register is locked and cannot be altered.
30-15 —	Reserved

Table continues on the next page...

Table continued from the previous page...

Field	Function
14 SPR	SecurePriv Read SecurePriv read access control flag 0b - Read access is not allowed in Secure Privilege mode. 1b - Read access is allowed in Secure Privilege mode.
13 SPW	SecurePriv Write SecurePriv write access control flag 0b - Write access is not allowed in Secure Privilege mode. 1b - Write access is allowed in Secure Privilege mode.
12 SPX	SecurePriv Execute SecurePriv execute access control flag 0b - Execute access is not allowed in Secure Privilege mode. 1b - Execute access is allowed in Secure Privilege mode.
11 —	Reserved
10 SUR	SecureUser Read SecureUser read access control flag 0b - Read access is not allowed in Secure User mode. 1b - Read access is allowed in Secure User mode.
9 SUW	SecureUser Write SecureUser write access control flag 0b - Write access is not allowed in Secure User mode. 1b - Write access is allowed in Secure User mode.
8 SUX	SecureUser Execute SecureUser execute access control flag 0b - Execute access is not allowed in Secure User mode. 1b - Execute access is allowed in Secure User mode.
7 —	Reserved
6 NPR	NonsecurePriv Read NonsecurePriv read access control flag

Table continues on the next page...

Table continued from the previous page...

Field	Function
	0b - Read access is not allowed in Nonsecure Privilege mode. 1b - Read access is allowed in Nonsecure Privilege mode.
5 NPW	NonsecurePriv Write NonsecurePriv write access control flag 0b - Write access is not allowed in Nonsecure Privilege mode. 1b - Write access is allowed in Nonsecure Privilege mode.
4 NPX	NonsecurePriv Execute NonsecurePriv execute access control flag 0b - Execute access is not allowed in Nonsecure Privilege mode. 1b - Execute access is allowed in Nonsecure Privilege mode.
3 —	Reserved
2 NUR	NonsecureUser Read NonsecureUser read access control flag 0b - Read access is not allowed in Nonsecure User mode. 1b - Read access is allowed in Nonsecure User mode.
1 NUW	NonsecureUser Write NonsecureUser write access control flag 0b - Write access is not allowed in Nonsecure User mode. 1b - Write access is allowed in Nonsecure User mode.
0 NUX	NonsecureUser Execute NonsecureUser execute access control flag 0b - Execute access is not allowed in Nonsecure User mode. 1b - Execute access is allowed in Nonsecure User mode.

48.5.1.11 MBC Memory Block Configuration Word (MBC0_DOM0_MEM0_BLK_CFG_W0 - MBC0_DOM0_MEM2_BLK_CFG_W0)

Offset

Register	Offset
MBC0_DOM0_MEM0_BLK_CFG_W0	40h

Table continues on the next page...

Table continued from the previous page...

Register	Offset
MBC0_DOM0_MEM0_B LK_CFG_W1	44h
MBC0_DOM0_MEM0_B LK_CFG_W2	48h
MBC0_DOM0_MEM0_B LK_CFG_W3	4Ch
MBC0_DOM0_MEM0_B LK_CFG_W4	50h
MBC0_DOM0_MEM0_B LK_CFG_W5	54h
MBC0_DOM0_MEM0_B LK_CFG_W6	58h
MBC0_DOM0_MEM0_B LK_CFG_W7	5Ch
MBC0_DOM0_MEM0_B LK_CFG_W8	60h
MBC0_DOM0_MEM0_B LK_CFG_W9	64h
MBC0_DOM0_MEM0_B LK_CFG_W10	68h
MBC0_DOM0_MEM0_B LK_CFG_W11	6Ch
MBC0_DOM0_MEM0_B LK_CFG_W12	70h
MBC0_DOM0_MEM0_B LK_CFG_W13	74h
MBC0_DOM0_MEM0_B LK_CFG_W14	78h
MBC0_DOM0_MEM0_B LK_CFG_W15	7Ch
MBC0_DOM0_MEM1_B LK_CFG_W0	180h
MBC0_DOM0_MEM1_B LK_CFG_W1	184h
MBC0_DOM0_MEM2_B LK_CFG_W0	1A8h

Function

MBC[m]_DOM[d]_MEM[s]_BLK_CFG_W[w], where,

- m - mbc index

- d - domain index
- s - memory target index
- w - word index

These registers are read/write for both the alternate view of the NSE bit and the 3-bit MBACSEL field. This is an array of 4 bit fields defining the block configuration for the given submemory. Each 4-bit field includes an alternative view of the associated NSE bit plus a 3-bit access control select that selects the global access control value that applies to the referenced memory block.

For a given memory block, B, if the value programmed in the MBACSEL_n field selects a locked MBC_MEMN_GLBAC_r register, the MBACSEL field is locked until the next reset. Depending on BLK_CFG_W, the NSE_n/MBASEL_n fields correspond to different blocks. The following table describes the relationship between W (word index) and B (block number).

MEM0 supports up to 512 blocks ; W0 - W63

MEM1-3 supports up to 64 block ; W0 - W7


NOTE

This register is shown with fields such that it covers entire 32 bit register. However, actual fields may be less if number of blocks are such that fields don't align to 32 bits. These absent fields may be shown but user can refer to table below to deduce actual fields and treat absent fields as reserved.

Table 339. Block Config Word to Block Number Relationship

Block Config Word	NSE7/ MBACSEL7	NSE6/ MBACSEL6	NSE5/ MBACSEL5	NSE4/ MBACSEL4	NSE3/ MBACSEL3	NSE2/ MBACSEL2	NSE1/ MBACSEL1	NSE0/ MBACSEL0
W0	block 7	block 6	block 5	block 4	block 3	block 2	block 1	block 0
W1	block 15	block 14	block 13	block 12	block 11	block 10	block 9	block 8
W2	block 23	block 22	block 21	block 20	block 19	block 18	block 17	block 16
W3	block 31	block 30	block 29	block 28	block 27	block 26	block 25	block 24
W4	block 39	block 38	block 37	block 36	block 35	block 34	block 33	block 32
W5	block 47	block 46	block 45	block 44	block 43	block 42	block 41	block 40
W6	block 55	block 54	block 53	block 52	block 51	block 50	block 49	block 48
W7	block 63	block 62	block 61	block 60	block 59	block 58	block 57	block 56
For MEM0, block 64 - block 511								
W8	block 71	block 70	block 69	block 68	block 67	block 66	block 65	block 64
.								
.								
.								
W63	block 511	block 510	block 509	block 508	block 507	block 506	block 505	block 504

Diagram

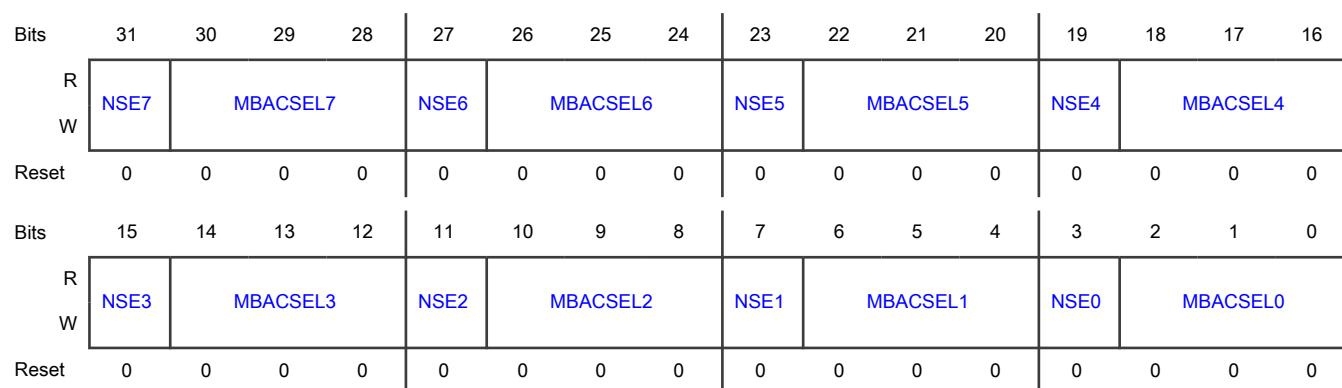

Fields

Field	Function
31 NSE7	NonSecure Enable for block B 0b - Secure accesses to block B are based on corresponding MBACSEL field in this register (MBCm_DOMd_MEMs_BLK_CFG_Ww[MBACSEL]), nonsecure accesses to block B are not allowed. 1b - Secure accesses to block B are not allowed, nonsecure accesses to block B are based on corresponding MBACSEL field in this register (MBCm_DOMd_MEMs_BLK_CFG_Ww[MBACSEL]).
30-28 MBACSEL7	Memory Block Access Control Select for block B This field selects the global access control associated with block B. NOTE This field is locked (read-only) if MBACSEL7 = r and MBC_MEMN_GLBACr[LK] = 1. 000b - select MBC_MEMN_GLBAC0 access control policy for block B 001b - select MBC_MEMN_GLBAC1 access control policy for block B 010b - select MBC_MEMN_GLBAC2 access control policy for block B 011b - select MBC_MEMN_GLBAC3 access control policy for block B 100b - select MBC_MEMN_GLBAC4 access control policy for block B 101b - select MBC_MEMN_GLBAC5 access control policy for block B 110b - select MBC_MEMN_GLBAC6 access control policy for block B 111b - select MBC_MEMN_GLBAC7 access control policy for block B
27 NSE6	NonSecure Enable for block B 0b - Secure accesses to block B are based on corresponding MBACSEL field in this register (MBCm_DOMd_MEMs_BLK_CFG_Ww[MBACSEL]), nonsecure accesses to block B are not allowed.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	1b - Secure accesses to block B are not allowed, nonsecure accesses to block B are based on corresponding MBACSEL field in this register (MBCm_DOMd_MEMs_BLK_CFG_Ww[MBACSEL]).
26-24 MBACSEL6	Memory Block Access Control Select for block B This field selects the global access control associated with block B. NOTE This field is locked (read-only) if MBACSEL6 = r and MBC_MEMN_GLBACr[LK] = 1. 000b - select MBC_MEMN_GLBAC0 access control policy for block B 001b - select MBC_MEMN_GLBAC1 access control policy for block B 010b - select MBC_MEMN_GLBAC2 access control policy for block B 011b - select MBC_MEMN_GLBAC3 access control policy for block B 100b - select MBC_MEMN_GLBAC4 access control policy for block B 101b - select MBC_MEMN_GLBAC5 access control policy for block B 110b - select MBC_MEMN_GLBAC6 access control policy for block B 111b - select MBC_MEMN_GLBAC7 access control policy for block B
23 NSE5	NonSecure Enable for block B 0b - Secure accesses to block B are based on corresponding MBACSEL field in this register (MBCm_DOMd_MEMs_BLK_CFG_Ww[MBACSEL]), nonsecure accesses to block B are not allowed. 1b - Secure accesses to block B are not allowed, nonsecure accesses to block B are based on corresponding MBACSEL field in this register (MBCm_DOMd_MEMs_BLK_CFG_Ww[MBACSEL]).
22-20 MBACSEL5	Memory Block Access Control Select for block B This field selects the global access control associated with block B. NOTE This field is locked (read-only) if MBACSEL5 = r and MBC_MEMN_GLBACr[LK] = 1. 000b - select MBC_MEMN_GLBAC0 access control policy for block B 001b - select MBC_MEMN_GLBAC1 access control policy for block B 010b - select MBC_MEMN_GLBAC2 access control policy for block B 011b - select MBC_MEMN_GLBAC3 access control policy for block B 100b - select MBC_MEMN_GLBAC4 access control policy for block B 101b - select MBC_MEMN_GLBAC5 access control policy for block B 110b - select MBC_MEMN_GLBAC6 access control policy for block B 111b - select MBC_MEMN_GLBAC7 access control policy for block B

Table continues on the next page...

Table continued from the previous page...

Field	Function
19 NSE4	NonSecure Enable for block B 0b - Secure accesses to block B are based on corresponding MBACSEL field in this register (MBCm_DOMd_MEMs_BLK_CFG_Ww[MBACSEL]), nonsecure accesses to block B are not allowed. 1b - Secure accesses to block B are not allowed, nonsecure accesses to block B are based on corresponding MBACSEL field in this register (MBCm_DOMd_MEMs_BLK_CFG_Ww[MBACSEL]).
18-16 MBACSEL4	Memory Block Access Control Select for block B This field selects the global access control associated with block B. NOTE This field is locked (read-only) if MBACSEL4 = r and MBC_MEMN_GLBACr[LK] = 1. 000b - select MBC_MEMN_GLBAC0 access control policy for block B 001b - select MBC_MEMN_GLBAC1 access control policy for block B 010b - select MBC_MEMN_GLBAC2 access control policy for block B 011b - select MBC_MEMN_GLBAC3 access control policy for block B 100b - select MBC_MEMN_GLBAC4 access control policy for block B 101b - select MBC_MEMN_GLBAC5 access control policy for block B 110b - select MBC_MEMN_GLBAC6 access control policy for block B 111b - select MBC_MEMN_GLBAC7 access control policy for block B
15 NSE3	NonSecure Enable for block B 0b - Secure accesses to block B are based on corresponding MBACSEL field in this register (MBCm_DOMd_MEMs_BLK_CFG_Ww[MBACSEL]), nonsecure accesses to block B are not allowed. 1b - Secure accesses to block B are not allowed, nonsecure accesses to block B are based on corresponding MBACSEL field in this register (MBCm_DOMd_MEMs_BLK_CFG_Ww[MBACSEL]).
14-12 MBACSEL3	Memory Block Access Control Select for block B This field selects the global access control associated with block B. NOTE This field is locked (read-only) if MBACSEL3 = r and MBC_MEMN_GLBACr[LK] = 1. 000b - select MBC_MEMN_GLBAC0 access control policy for block B 001b - select MBC_MEMN_GLBAC1 access control policy for block B 010b - select MBC_MEMN_GLBAC2 access control policy for block B 011b - select MBC_MEMN_GLBAC3 access control policy for block B

Table continues on the next page...

Table continued from the previous page...

Field	Function
	100b - select MBC_MEMN_GLBAC4 access control policy for block B 101b - select MBC_MEMN_GLBAC5 access control policy for block B 110b - select MBC_MEMN_GLBAC6 access control policy for block B 111b - select MBC_MEMN_GLBAC7 access control policy for block B
11 NSE2	NonSecure Enable for block B 0b - Secure accesses to block B are based on corresponding MBACSEL field in this register (MBCm_DOMd_MEMs_BLK_CFG_Ww[MBACSEL]), nonsecure accesses to block B are not allowed. 1b - Secure accesses to block B are not allowed, nonsecure accesses to block B are based on corresponding MBACSEL field in this register (MBCm_DOMd_MEMs_BLK_CFG_Ww[MBACSEL]).
10-8 MBACSEL2	Memory Block Access Control Select for block B This field selects the global access control associated with block B. NOTE This field is locked (read-only) if MBACSEL2 = r and MBC_MEMN_GLBACr[LK] = 1. 000b - select MBC_MEMN_GLBAC0 access control policy for block B 001b - select MBC_MEMN_GLBAC1 access control policy for block B 010b - select MBC_MEMN_GLBAC2 access control policy for block B 011b - select MBC_MEMN_GLBAC3 access control policy for block B 100b - select MBC_MEMN_GLBAC4 access control policy for block B 101b - select MBC_MEMN_GLBAC5 access control policy for block B 110b - select MBC_MEMN_GLBAC6 access control policy for block B 111b - select MBC_MEMN_GLBAC7 access control policy for block B
7 NSE1	NonSecure Enable for block B 0b - Secure accesses to block B are based on corresponding MBACSEL field in this register (MBCm_DOMd_MEMs_BLK_CFG_Ww[MBACSEL]), nonsecure accesses to block B are not allowed. 1b - Secure accesses to block B are not allowed, nonsecure accesses to block B are based on corresponding MBACSEL field in this register (MBCm_DOMd_MEMs_BLK_CFG_Ww[MBACSEL]).
6-4 MBACSEL1	Memory Block Access Control Select for block B This field selects the global access control associated with block B. NOTE This field is locked (read-only) if MBACSEL1 = r and MBC_MEMN_GLBACr[LK] = 1.

Table continues on the next page...

Table continued from the previous page...

Field	Function
	000b - select MBC_MEMN_GLBAC0 access control policy for block B 001b - select MBC_MEMN_GLBAC1 access control policy for block B 010b - select MBC_MEMN_GLBAC2 access control policy for block B 011b - select MBC_MEMN_GLBAC3 access control policy for block B 100b - select MBC_MEMN_GLBAC4 access control policy for block B 101b - select MBC_MEMN_GLBAC5 access control policy for block B 110b - select MBC_MEMN_GLBAC6 access control policy for block B 111b - select MBC_MEMN_GLBAC7 access control policy for block B
3 NSE0	NonSecure Enable for block B 0b - Secure accesses to block B are based on corresponding MBACSEL field in this register (MBCm_DOMd_MEMs_BLK_CFG_Ww[MBACSEL]), nonsecure accesses to block B are not allowed. 1b - Secure accesses to block B are not allowed, nonsecure accesses to block B are based on corresponding MBACSEL field in this register (MBCm_DOMd_MEMs_BLK_CFG_Ww[MBACSEL]).
2-0 MBACSEL0	Memory Block Access Control Select for block B This field selects the global access control associated with block B. NOTE This field is locked (read-only) if MBACSEL0 = r and MBC_MEMN_GLBACr[LK] = 1. 000b - select MBC_MEMN_GLBAC0 access control policy for block B 001b - select MBC_MEMN_GLBAC1 access control policy for block B 010b - select MBC_MEMN_GLBAC2 access control policy for block B 011b - select MBC_MEMN_GLBAC3 access control policy for block B 100b - select MBC_MEMN_GLBAC4 access control policy for block B 101b - select MBC_MEMN_GLBAC5 access control policy for block B 110b - select MBC_MEMN_GLBAC6 access control policy for block B 111b - select MBC_MEMN_GLBAC7 access control policy for block B

Chapter 49

GLIKEY

49.1 Chip-specific GLIKEY information

Table 340. Reference links to related information

Topic	Related module	Reference
Full description	GLIKEY	GLIKEY
System memory map		Memory map
Clocking		Clock distribution
Power Management		Power Management
Signal multiplexing	Port control	Signal multiplexing

49.1.1 Module instances

This device has one instance of GLIKEY module.

49.1.2 GLIKEY Control list

Below registers are controlled by GLIKEY:

GLIKEY Write EN	GLIKEY Reset	Module	Register
wr_en_out[1]	rst[1]	SYSCON	DEBUG_FEATURES_DP
wr_en_out[2]	N/A	SYSCON	SRAM_XEN_DP
wr_en_out[15]	N/A	MBC	All MBC register

49.2 Terms and definitions

Acronym	Explanation
FSM	Finite State Machine
SSR	Security Sensitive Register
SW	Software

49.3 Overview

Glikey IP provides a mechanism to safely access security-sensitive registers. The write-enable and reset's of these registers are controlled via GLIKEY.

49.3.1 Block diagram

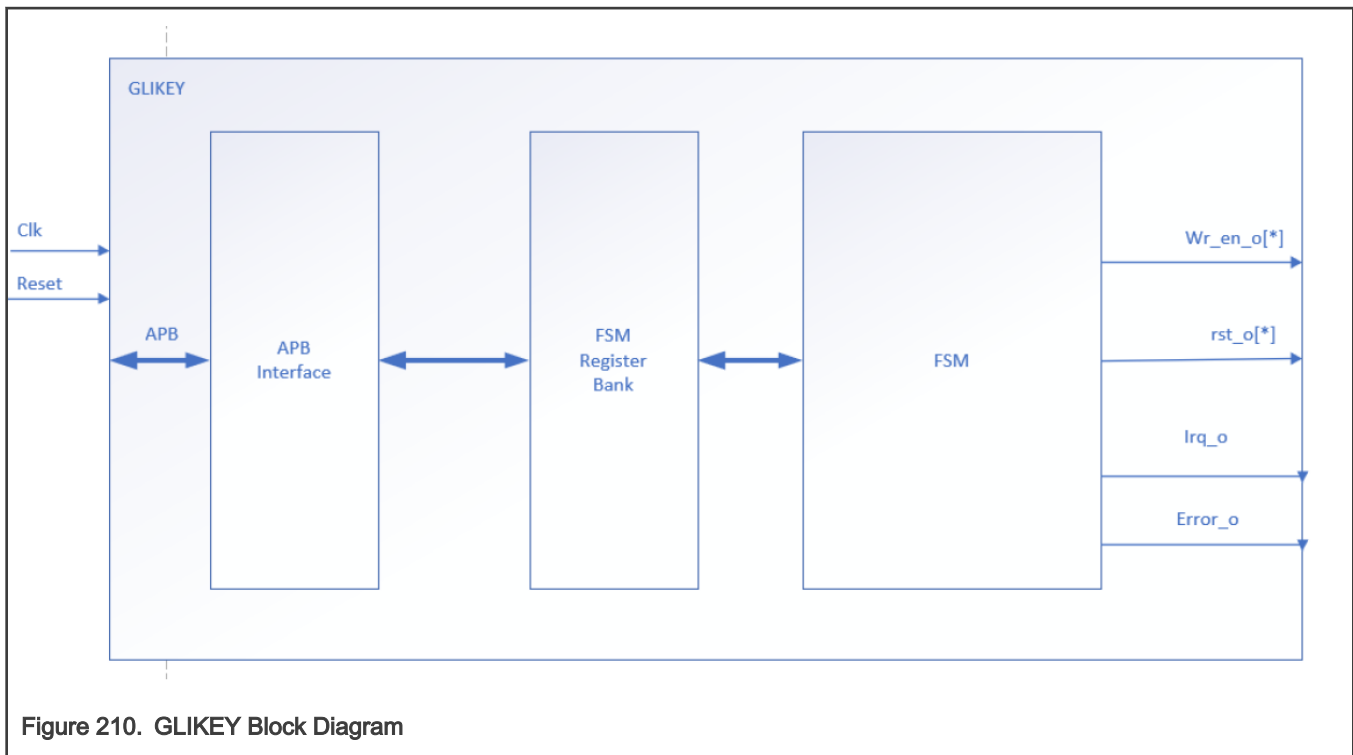


Figure 210. GLIKEY Block Diagram

49.3.2 Features

- Integrity protection of security-sensitive registers during write and at rest against power glitch attacks
- Integrity protection of security-sensitive registers at rest against privilege escalation
- Error Management
 - Dedicated Interrupt
 - Dedicated integrity protection

49.4 Configuration

GLIKEY can be configured in following ways:


- FSM to include 4 steps as mentioned in [Figure 211](#)

49.5 Architecture description

49.5.1 Functional description

GLIKEY controls the write-enables and resets for the SSR's through FSM. Software has to follow strict procedure to enable the write-enables and resets for SSR.

GLIKEY safe guards against attacks by constantly monitoring the state which the FSM is in and the expected SW procedure for the current state. If fault is found, then an interrupt is raised and the FSM goes to secure state. Procedure cannot continue until SW resets the GLIKEY.

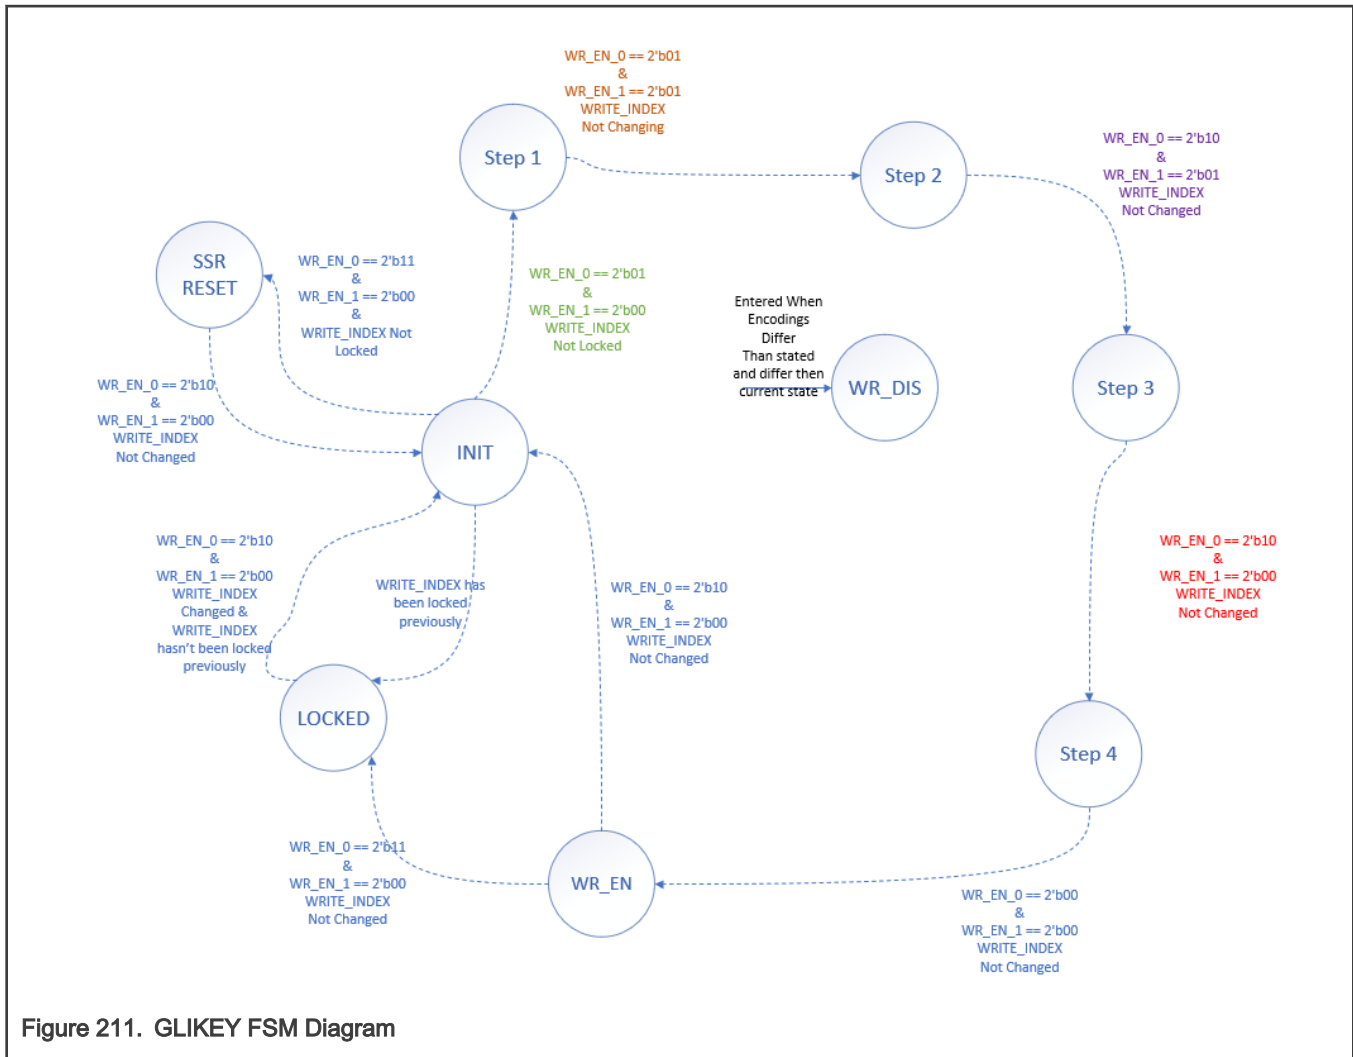

49.5.1.1 Progressing Through the FSM

Progressing through the FSM is done through writing to SFR registers: [CTRL_0\[WR_EN_0\]](#) and [CTRL_1\[WR_EN_1\]](#).

Any misconfiguration will lead to the FSM entering the WR_DISABLED state that would require a reset, either a soft reset or a hard reset.

The current state of FSM is read out by reading [STATUS\[FSM_STATE\]](#).

The sequence of progressing through the FSM can be seen in [STATUS\[FSM_STATE\]](#). If the integrity of FSM encodings is compromised, then the error_o will be triggered.

49.5.1.2 Initial State

Upon reset (either triggered through hardware or software) FSM will enter the INIT state.

The reset value for the [CTRL_0\[WRITE_INDEX\]](#) is 0x0. If software reset is triggered and [CTRL_0\[WRITE_INDEX\]](#) was previously locked, then the FSM enters into the LOCKED state. To progress, the software needs to update the [CTRL_0\[WRITE_INDEX\]](#) to an index that is currently not locked.

In the INIT state if [CTRL_0\[WRITE_INDEX\]](#) is written that is currently LOCKED, then the FSM will enter the LOCKED state irrespective of [CTRL_0\[WR_EN_0\]](#) and [CTRL_1\[WR_EN_1\]](#).

For example, when in the INIT state, one write to the `CTRL_0` happens that updates the `CTRL_0[WR_EN_0] = 2'b01` and the `CTRL_0[WRITE_INDEX]` to a locked index, the FSM will enter the LOCKED state. In this case, software must update the `CTRL_0[WR_EN_0] = 2'b10` and the `CTRL_0[WRITE_INDEX]` to an unlocked value to move back into the INIT state.

For normal operation while in the INIT state and `CTRL_0[WRITE_INDEX]` is written that is not locked and the `CTRL_0[WR_EN_0]` is set to `2'b01` or `2'b11` the FSM will either enter STEP1 or SSR_RESET and continue normal operation.

49.5.1.3 WR_DIS State

WR_DISABLED state is considered a secured state.

Any misconfiguration of the FSM will lead to this state. Incorrect addressing of the index through `CTRL_0[WRITE_INDEX]` will also lead to this state.

The FSM monitors the current state of which it is in, if the control signals change and do not match the expected next state encodings the error state is entered.

To leave the WR_DISABLED state, software must perform a soft (Writing one to `CTRL_0[SFT_RST]`) or hard reset of GLIKEY.

The NON-Secure state is considered a state in which the SSR can be accessed (this is the WR_EN state). This access is allowed via the write-enable outputs of GLIKEY. GLIKEY can enter only the NON-Secure state when the full software procedure has occurred.

Trigger a write-enable out

The write-enable output for any given index is only asserted when the FSM is in WR_ENABLED state.

When the FSM moves out of this state then it is de-asserted. The output `wr_en_o[*]` outputs are not registered and are driven directly by FSM.

Upon entering the WR_DIS state, all bits of the output `rst_o` will assert to high causing reset of all SSRs

49.5.1.4 Trigger a Reset output

The reset output for any given index is asserted while the FSM is in SSR_RESET state.

When the FSM moves out of this state, then it is de-asserted.

The output `rst_o[*]` outputs are not registered and are driven directly by the FSM.

49.5.1.5 Lock SSR access

After accessing the WR_ENABLE state for any given index, further access to this index can be locked. This causes the GLIKEY to lock access for this. If addressed again, FSM jumps to the LOCKED state and cannot trigger a write-enable or reset for this index.

The locked indexes can only be reset by a hardware reset. The lock registers are protected against integrity errors with replication. In case the lock and the inverse lock registers are not matching the error_o port is triggered.

Example:

Assuming software is in the WR_EN state with `WRITE_INDEX = 1`, software writes `2'b11` to `CTRL_0[WR_EN_0]` and enters the LOCKED State. This Index is now considered locked. To enter back into INIT state, software writes `2'b10` to `CTRL_0[WR_EN_0]` and the `WRITE_INDEX` is updated to a `WRITE_INDEX` not previously locked. If software updates `WRITE_INDEX` that is previously locked, then the software remains in LOCKED STATE.

This means when all the indexes are locked, software remains in the LOCKED state upon entering the last index that is locked.

To read the status of `WRITE_INDEX` that are locked, software needs to write the corresponding `WRITE_INDEX` number to the `CTRL_0[WRITE_INDEX]` to know the lock status. Software then reads `STATUS[LOCK_STATUS]` to know the status. 1 = The index is locked, 0 = The index is not locked.

49.5.1.6 Reset FSM

Software has the ability to reset the FSM. Writing one to [CTRL_0\[SFT_RST\]](#) brings the FSM into INIT state. This can be triggered while in any state.

Resetting the FSM will cause the current procedure to be restarted. Resetting the FSM will not reset the indexes that have been locked previously. When all WRITE_INDEX's are locked then the FSM will stay in the LOCKED State and cannot be moved from.

Triggering the [CTRL_0\[SFT_RST\]](#) will also reset the following registers to their reset values:

- [CTRL_0\[WR_EN_0\]](#)
- [CTRL_1\[WR_EN_1\]](#)
- [CTRL_0\[WRITE_INDEX\]](#)

[CTRL_0\[SFT_RST\]](#) takes priority if [CTRL_0\[WRITE_INDEX\]](#) and [CTRL_0\[WR_EN_0\]](#) are written in the same bus access, resulting in these being reset.

49.5.1.7 Disable GLIKEY

GLIKEY can be disabled by writing the value 4'h5 to [CTRL_1\[SFR_LOCK\]](#). Only hardware reset can re-enable GLIKEY.

Once the GLIKEY is disabled, software has no write permissions to the SFR's only read permissions.

GLIKEY cannot perform any accesses to the security sensitive registers.

49.5.1.8 Interrupt Description

There are 3 interrupt sources, as listed below.

Table 341. Interrupt Sources

Interrupt Source	Description	Register
FSM Interrupt	Upon entering the WR_DIS state this interrupt is raised	STATUS[ERROR_STATUS][0]
WRITE_INDEX out of bounds	If a WRITE_INDEX is addressed that is greater than the number of addressable indexes configured	STATUS[ERROR_STATUS][1]
READ_INDEX out of bounds	If a READ_INDEX is addressed that is greater than the number of addressable indexes configured	STATUS[ERROR_STATUS][2]

Interrupts can be enabled or disabled through [INTR_CTRL\[INT_EN\]](#).

Interrupts can be cleared by writing 1 to [INTR_CTRL\[INT_CLR\]](#).

Interrupts can be set by writing 1 to [INTR_CTRL\[INT_SET\]](#).

Software can monitor the status of the interrupt sources through [STATUS\[ERROR_STATUS\]](#). Clearing the interrupt will not clear the [STATUS\[ERROR_STATUS\]](#) registers.

Table 342. Interrupt Clearing Methods

Error Status Register	Description

Table continues on the next page...

Table 342. Interrupt Clearing Methods (continued)

STATUS[ERROR_STATUS][0]	Soft or hard reset
STATUS[ERROR_STATUS][1]	Updating WRITE_INDEX to less than number of addressable indexes
STATUS[ERROR_STATUS][2]	Updating READ_INDEX to less than number of addressable indexes

49.5.1.9 Error description

When error_o is high this indicates that an internal fault has occurred.

NOTE

This signal is not driven by any of the interrupt sources

Sources of internal faults

- Duplication Registers
The internal registers of the locked registers are duplicated. These are constantly monitored and when not equal, raises error.
- Entering into the WR_DIS State
When the FSM enters the WR_DIS state, this will raise the error.
- Attack on the FSM State register
When the FSM state is not equal to a defined state, this will raise the error.

49.5.2 Registers description (SFRs)

The block has only SFR space that can be accessed directly from the <APB/AHB> slave

49.5.2.1 GLIKEY register descriptions

49.5.2.1.1 GLIKEY memory map

GLIKEY0 base address: 4009_1D00h

Offset	Register	Width (In bits)	Access	Reset value
0h	Control Register 0 SFR (CTRL_0)	32	RW	See section
4h	Control Register 1 SFR (CTRL_1)	32	RW	See section
8h	Interrupt Control (INTR_CTRL)	32	RW	See section
Ch	Status (STATUS)	32	R	See section
FCh	IP Version (VERSION)	32	R	See section

49.5.2.1.2 Control Register 0 SFR (CTRL_0)


Offset

Register	Offset
CTRL_0	0h

Function

Control Register 0 SFR controls the flow of FSM

Diagram

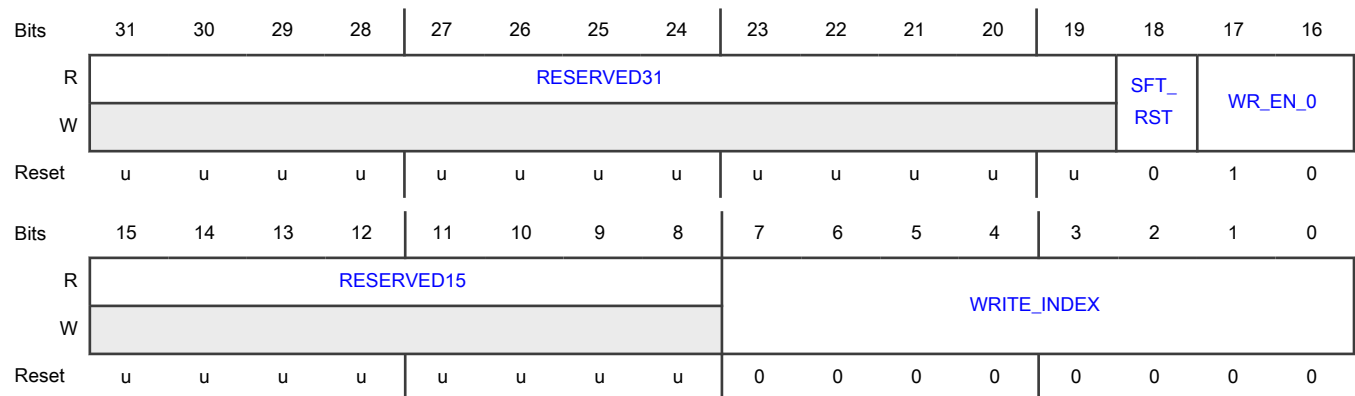

Fields

Field	Function
31-19 RESERVED31	Reserved for Future Use
18 SFT_RST	Soft reset for the core reset (SFR configuration will be preseved).This register reads as 0 Use this field to bring the logic into a known state. NOTE This field is volatile. 0b - No effect 1b - Triggers the soft reset
17-16 WR_EN_0	Write Enable 0 Controls the state of FSM. Use these bits with Write Enable 1. NOTE This field is volatile.
15-8	Reserved for Future Use

Table continues on the next page...

Table continued from the previous page...

Field	Function
RESERVED15	
7-0 WRITE_INDEX	Write Index Targets given index for SSR.
NOTE This field is volatile.	

49.5.2.1.3 Control Register 1 SFR (CTRL_1)

Offset

Register	Offset
CTRL_1	4h

Function

Control Register 1 SFR controls the flow of FSM.

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	RESERVED31										SFR_LOCK				WR_EN_1	
W																
Reset	u	u	u	u	u	u	u	u	u	u	1	0	1	0	0	0
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	RESERVED15								READ_INDEX							
W																
Reset	u	u	u	u	u	u	u	u	0	0	0	0	0	0	0	0

Fields

Field	Function
31-22 RESERVED31	Reserved for Future Use
21-18 SFR_LOCK	LOCK register for GLIKEY LOCK register for GLIKEY 4'h5 - Locked

Table continues on the next page...

Table continued from the previous page...

Field	Function
	4'hA - Unlocked NOTE When IP is locked, Write access to SFR is invalid NOTE This field is volatile.
17-16 WR_EN_1	Write Enable One NOTE This field is volatile.
15-8 RESERVED15	Reserved for Future Use
7-0 READ_INDEX	Index status, Writing an index value to this register will request the block to return the lock status of this index. Use this field to read the status of a target index. NOTE This field is volatile.

49.5.2.1.4 Interrupt Control (INTR_CTRL)


Offset

Register	Offset
INTR_CTRL	8h

Function

Interrupt Control Register

Diagram

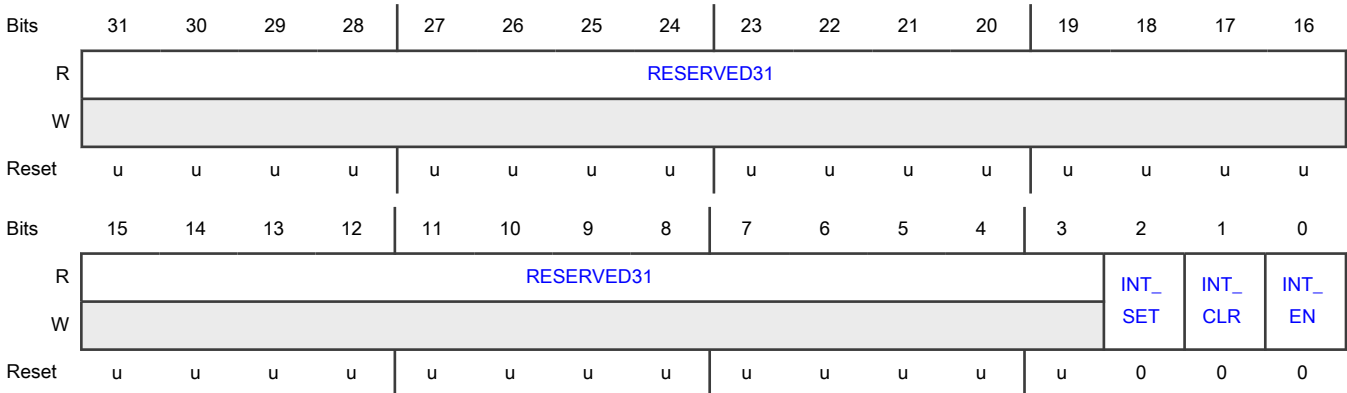

Fields

Field	Function
31-3 RESERVED31	Reserved for Future Use
2 INT_SET	Interrupt Set. Writing a 1 to this register asserts the interrupt. This register reads as 0 Use this field to set interrupt. NOTE This field is volatile. 0b - No effect 1b - Triggers interrupt
1 INT_CLR	Interrupt Clear. Writing a 1 to this register creates a single interrupt clear pulse. This register reads as 0 When the interrupt is set, use this field to clear this interrupt by writing 1 to this register. NOTE This field is volatile.
0 INT_EN	Interrupt Enable. Writing a 1, Interrupt asserts on Interrupt output port Use this field to control whether to trigger an interrupt. NOTE This field is volatile.

49.5.2.1.5 Status (STATUS)


Offset

Register	Offset
STATUS	Ch

Function

Status Register provides the status of GLIKEY

Diagram

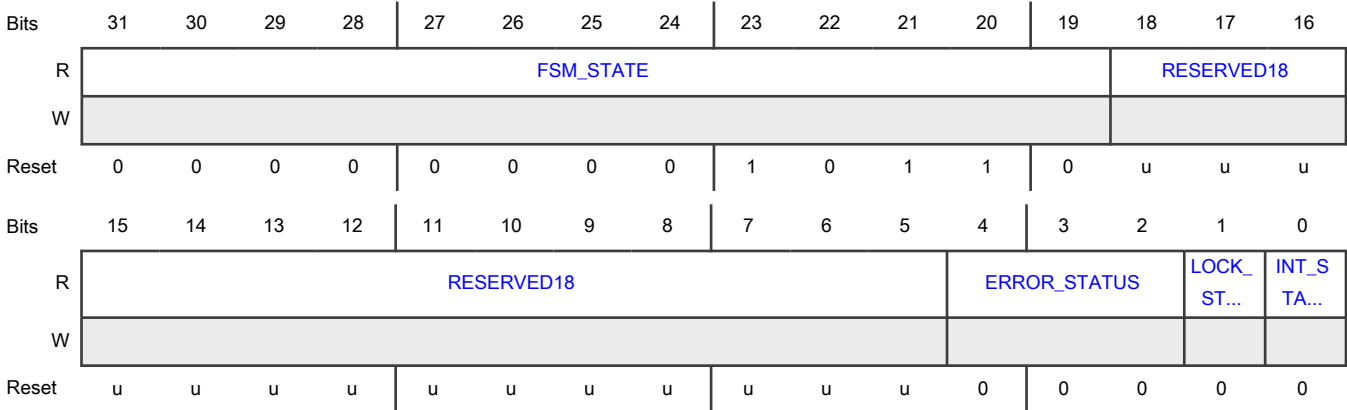

Fields

Field	Function
31-19 FSM_STATE	Status of FSM Status of FSM WR_DISABLED 13'b0_0000_0000_1011 INIT 13'b0_0000_0001_0110 STEP1 13'b0_0000_0010_1100 STEP2 13'b0_0000_0101_1000 STEP3 13'b0_0000_1011_0000 STEP4 13'b0_0001_0110_0000 Reserved 13'b0_0010_1100_0000 Reserved 13'b0_0101_1000_0000 Reserved 13'b0_1011_0000_0000 Reserved 13'b1_0110_0000_0000 LOCKED 13'b0_1100_0000_0001 WR_ENABLED 13'b1_1000_0000_0010 SSR_RESET 13'b1_0000_0000_0101 NOTE This field is volatile.
18-5 RESERVED18	Reserved for Future Use
4-2	Status of the Error

Table continues on the next page...

Table continued from the previous page...

Field	Function
ERROR_STATUS	Reports the status of error in GLIKEY, where Bit 0 (1 at position 0) indicates that an FSM error has occurred. Bit 1 (1 at position 1) indicates that software tried to address write index greater than the available value. Bit 2 (1 at position 2) indicates that software tried to address read index greater than the available value. NOTE This field is volatile. 000b - No error 001b - FSM error has occurred 010b - Write index out of the bound (OOB) error 011b - Write index OOB and FSM error 100b - Read index OOB error 110b - Write index and read index OOB error 111b - Read index OOB, write index OOB, and FSM error
1 LOCK_STATUS	Provides the current lock status of indexes. NOTE This field is volatile. 0b - Current read index is not locked 1b - Current read index is locked
0 INT_STATUS	Interrupt Status. Reflects the current status of interrupt. NOTE This field is volatile. 0b - No effect 1b - Triggers interrupt

49.5.2.1.6 IP Version (VERSION)

Offset

Register	Offset
VERSION	FCh

Function

IP Version register

Diagram

Bits	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
R	Reserved31				INDEX_CONFIG								FSM_		MILESTONE	
W													CON...			
Reset	u	u	u	u	u	0	0	0	0	1	1	1	1	0	1	1
Bits	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
R	Reserved15				Reserved11				Reserved7				Reserved3			
W																
Reset	0	0	0	0	0	0	0	1	0	0	0	0	0	0	0	0

Fields

Field	Function
31-27 Reserved31	Reserved for Future Use
26-19 INDEX_CONFIG	Configured number of addressable indexes NOTE This field is volatile.
18 FSM_CONFIG	0:4 step, 1:8 step NOTE This field is volatile.
17-16 MILESTONE	Release milestone. 00-PREL, 01-BR, 10-SI, 11-GO. NOTE This field is volatile.
15-12 Reserved15	Reserved
11-8 Reserved11	Reserved
7-4 Reserved7	Reserved
3-0 Reserved3	Reserved

Appendix A

General changes

A.1 General changes

- Editorial changes

- Each new release of this document includes editorial improvements such as:

- Spelling
 - Grammar
 - Punctuation
 - Voice
 - Tense
 - Capitalization
 - Formatting
 - Presentation
 - Navigation

- Updated the RM title to "MCX A345 and MCX A346 Reference Manual" and revised the supporting part as "Supports MCXA345VLL, MCXA345VLH, MCXA345VPN, MCXA346VLQ, MCXA346VLL, MCXA346VLH, and MCXA346VPN".

Appendix B

Release notes

B.1 About This Manual changes

No substantial content changes.

B.2 Introduction changes

- Updated [Block diagram](#).
- Updated [Features](#).

B.3 Core overview changes

No substantial content changes.

B.4 Bus and memory architecture chapter changes

- Updated [Bus matrix block diagram](#)

B.5 Low Power Cache Controller (LPCAC)

B.5.1 Chip-specific LPCAC information changes

No substantial content changes.

B.5.2 LPCAC changes

No substantial content changes.

B.6 Flash Memory Module (FMU)

B.6.1 Chip-specific FMU information changes

- Updated the [FCTRL\[RWSC\] Configuration recommendation](#) to include 240 MHz.

B.6.2 FMU changes

No substantial content changes.

B.7 Flash Memory Controller (FMC)

B.7.1 Chip-specific FMC information changes

No substantial content changes.

B.7.2 Flash Memory Controller (FMC-NPX) module changes

No substantial content changes.

B.8 Error Injection Module (EIM)

B.8.1 Chip-specific EIM information changes

No substantial content changes.

B.8.2 EIM module changes

No substantial content changes.

B.9 Error Recording Module (ERM)

B.9.1 Chip-specific ERM information changes

No substantial content changes.

B.9.2 ERM module changes

No substantial content changes.

B.10 Pinouts changes

- Updated [Pinmux view](#).

B.11 Port Control (PORT)

B.11.1 Chip-specific PORT information changes

No substantial content changes.

B.11.2 PORT module changes

No substantial content changes.

B.12 General Purpose Input/Output (GPIO)

B.12.1 Chip-specific GPIO information changes

No substantial content changes.

B.12.2 GPIO module changes

No substantial content changes.

B.13 Input Multiplexing (INPUTMUX)

B.13.1 Chip-specific INPUTMUX information changes

No substantial content changes.

B.13.2 INPUTMUX module changes

- Updated [Features](#) and [External signals](#).

B.14 System Controller (SYSCON)

B.14.1 Chip-specific SYSCON information changes

No substantial content changes.

B.14.2 SYSCON module changes

No substantial content changes.

B.15 Math Acceleration Unit (MAU)

B.15.1 Chip-specific MAU information changes

No substantial content changes.

B.15.2 MAUWRAP module changes

No substantial content changes.

B.16 Enhanced DMA Controller (eDMA3)

B.16.1 Chip-specific eDMA3 information changes

No substantial content changes.

B.16.2 eDMA3 module changes

No substantial content changes.

B.17 Wakeup Unit (WUU)

B.17.1 Chip-specific WUU information changes

No substantial content changes.

B.17.2 WUU changes

No substantial content changes.

B.18 AND/OR INVERT (AOI)

B.18.1 Chip-specific AOI information changes

No substantial content changes.

B.18.2 AOI module changes

No substantial content changes.

B.19 Core Mode Controller (CMC)

B.19.1 Chip-specific CMC information changes

No substantial content changes.

B.19.2 CMC module changes

No substantial content changes.

B.20 Reset changes

No substantial content changes.

B.21 System Boot changes

- [Overview](#)
 - Added a note: MCX A345 and A346 series does not support ...chapter.
- [Features](#), removed ROM size.
- [Boot ROM](#), removed figure for ROM memory.
- [Boot pins](#), updated part details.
- [Table 114](#), updated description for BOOT_SPEED.

B.22 Clocking chapter changes

- [Introduction](#), changed FRO180 to FRO180M.

B.23 System Clock Generator (SCG)

B.23.1 Chip-specific SCG information changes

No substantial content changes.

B.23.2 SCG module changes

No substantial content changes.

B.24 Power Management chapter changes

No substantial content changes.

B.25 VBAT

B.25.1 Chip-specific VBAT information changes

No substantial content changes.

B.25.2 VBAT module changes

No substantial content changes.

B.26 System Power Control (SPC)

B.26.1 Chip-specific SPC information changes

- Updated [Table 181](#).

B.26.2 SPC module changes

No substantial content changes.

B.27 Standard counter/timers (CTIMER)

B.27.1 Chip-specific CTIMER information changes

No substantial content changes.

B.27.2 CTIMER module changes

No substantial content changes.

B.28 Windowed Watchdog Timer (WWDT)

B.28.1 Chip-specific WWDT information changes

No substantial content changes.

B.28.2 WWDT module changes

No substantial content changes.

B.29 Micro-Tick Timer (UTICK)

B.29.1 Chip-specific UTICK information changes

No substantial content changes.

B.29.2 UTICK module changes

No substantial content changes.

B.30 OS Event Timer (OSTIMER)

B.30.1 Chip-specific OSTIMER information changes

No substantial content changes.

B.30.2 OSTIMER module changes

No substantial content changes.

B.31 Wake Timer

B.31.1 Chip-specific Wake Timer information changes

No substantial content changes.

B.31.2 Wake Timer module changes

No substantial content changes.

B.32 Real Time Clock (RTC)

B.32.1 Chip-specific RTC information changes

No substantial content changes.

B.32.2 RTC module changes

No substantial content changes.

B.33 Enhanced Flex Pulse Width Modulator (eFlexPWM)

B.33.1 Chip-specific eFlexPWM information changes

No substantial content changes.

B.33.2 eFlexPWM module changes

No substantial content changes.

B.34 Quadrature Decoder (eQDC)

B.34.1 Chip-specific eQDC information changes

No substantial content changes.

B.34.2 eQDC module changes

No substantial content changes.

B.35 Frequency Measurement (FREQME)

B.35.1 Chip-specific FREQME information changes

- [Input clock sources](#), changed clock name from "FRO_OSC_12M" to "FRO12M".

B.35.2 FREQME module changes

No substantial content changes.

B.36 Low-power Timer (LPTMR)

B.36.1 Chip-specific LPTMR information changes

No substantial content changes.

B.36.2 LPTMR module changes

No substantial content changes.

B.37 Flexible Data Rate CAN (FlexCAN)

B.37.1 Chip-specific FlexCAN information changes

- The supported instances have been revised to one.

B.37.2 FlexCAN module changes

No substantial content changes.

B.38 Low Power Inter-Integrated Circuit (LPI2C)

B.38.1 Chip-specific LPI2C information changes

No substantial content changes.

B.38.2 LPI2C module changes

No substantial content changes.

B.39 Low Power Universal Asynchronous Receiver/Transmitter (LPUART)

B.39.1 Chip-specific LPUART information changes

No substantial content changes.

B.39.2 LPUART module changes

No substantial content changes.

B.40 Smart DMA Controller (SmartDMA)

B.40.1 Chip-specific SmartDMA information changes

No substantial content changes.

B.40.2 Smart DMA module changes

No substantial content changes.

B.41 Low Power Serial Peripheral Interface (LPSPI)

B.41.1 Chip-specific LPSPI information changes

No substantial content changes.

B.41.2 LPSPI module changes

No substantial content changes.

B.42 Analog-to-Digital Converter (ADC)

B.42.1 Chip-specific ADC information changes

No substantial content changes.

B.42.2 ADC module changes

No substantial content changes.

B.43 Low Power Comparator (LPCMP)

B.43.1 Chip-specific LPCMP information changes

No substantial content changes.

B.43.2 LPCMP module changes

No substantial content changes.

B.44 Digital-to-Analog Converter (DAC)

B.44.1 Chip-specific DAC information changes

No substantial content changes.

B.44.2 DAC module changes

• Fixed typos. • Expanded RCLK at first instance in Periodic Trigger mode. Also parametrized the following line: "Periodic trigger mode can be combined with GCR[RCV_TRG] to periodically trigger many DACs simultaneously.". Created SHOW_RCV_TRG spec parameter for the same. • Corrected signal names in DAC external signal descriptions for N4A using right parametrization. • Commented-out the following line from Application Information (RCLK Frequency section): "RCLK should be no larger than 225MHz". • Updated names of IREF_PTAT_EXT_SEL[20] and IREF_ZTC_EXT_SEL[21] fields in Global Control (GCR). Replaced "internal" with "external".
• Updated Block diagram to remove support of RCV_TRG and triggers to/from other DACs. • Made RCV_TRG field (at position 7) in GCR register Reserved. • Updated description of LATCH_CYC[11:8] in Global Control (GCR) register. • Updated description of IREF_PTAT_EXT_SEL[20] and IREF_ZTC_EXT_SEL[21] in Global Control (GCR) register.
• In DAC register descriptions, updated GCR register description.
• Updated Block diagram.
• In LPDAC Register, replaced LPDAC with 12-bit/14-bit DAC.
• Updated revision history.
• Updated Block diagram.
Table continues on the next page...

- Updated [Memory map and register definition](#).
- Updated bit description of [GCR\[FIFOEN\]](#).

B.45 Operational Amplifier (OPAMP)

B.45.1 Chip-specific OPAMP information changes

No substantial content changes.

B.45.2 OPAMP module changes

No substantial content changes.

B.46 Debug chapter changes

No substantial content changes.

B.47 Cyclic Redundancy Check (CRC)

B.47.1 Chip-specific CRC information changes

No substantial content changes.

B.47.2 CRC module changes

No substantial content changes.

B.48 Memory Block Checker(MBC)

B.48.1 Chip-specific MBC information changes

No substantial content changes.

B.48.2 MBC module changes

No substantial content changes.

B.49 GLIKEY

B.49.1 Chip-specific GLIKEY information changes

No substantial content changes.

B.49.2 GLIKEY module changes

No substantial content changes.

Legal information

Definitions

Draft — A draft status on a document indicates that the content is still under internal review and subject to formal approval, which may result in modifications or additions. NXP Semiconductors does not give any representations or warranties as to the accuracy or completeness of information included in a draft version of a document and shall have no liability for the consequences of use of such information.

Disclaimers

Limited warranty and liability — Information in this document is believed to be accurate and reliable. However, NXP Semiconductors does not give any representations or warranties, expressed or implied, as to the accuracy or completeness of such information and shall have no liability for the consequences of use of such information. NXP Semiconductors takes no responsibility for the content in this document if provided by an information source outside of NXP Semiconductors.

In no event shall NXP Semiconductors be liable for any indirect, incidental, punitive, special or consequential damages (including - without limitation - lost profits, lost savings, business interruption, costs related to the removal or replacement of any products or rework charges) whether or not such damages are based on tort (including negligence), warranty, breach of contract or any other legal theory.

Notwithstanding any damages that customer might incur for any reason whatsoever, NXP Semiconductors' aggregate and cumulative liability towards customer for the products described herein shall be limited in accordance with the Terms and conditions of commercial sale of NXP Semiconductors.

Right to make changes — NXP Semiconductors reserves the right to make changes to information published in this document, including without limitation specifications and product descriptions, at any time and without notice. This document supersedes and replaces all information supplied prior to the publication hereof.

Suitability for use — NXP Semiconductors products are not designed, authorized or warranted to be suitable for use in life support, life-critical or safety-critical systems or equipment, nor in applications where failure or malfunction of an NXP Semiconductors product can reasonably be expected to result in personal injury, death or severe property or environmental damage. NXP Semiconductors and its suppliers accept no liability for inclusion and/or use of NXP Semiconductors products in such equipment or applications and therefore such inclusion and/or use is at the customer's own risk.

Applications — Applications that are described herein for any of these products are for illustrative purposes only. NXP Semiconductors makes no representation or warranty that such applications will be suitable for the specified use without further testing or modification.

Customers are responsible for the design and operation of their applications and products using NXP Semiconductors products, and NXP Semiconductors accepts no liability for any assistance with applications or customer product design. It is customer's sole responsibility to determine whether the NXP Semiconductors product is suitable and fit for the customer's applications and products planned, as well as for the planned application and use of customer's third party customer(s). Customers should provide appropriate design and operating safeguards to minimize the risks associated with their applications and products.

NXP Semiconductors does not accept any liability related to any default, damage, costs or problem which is based on any weakness or default in the customer's applications or products, or the application or use by customer's third party customer(s). Customer is responsible for doing all necessary testing for the customer's applications and products using NXP Semiconductors products in order to avoid a default of the applications and the products or of the application or use by customer's third party customer(s). NXP does not accept any liability in this respect.

Terms and conditions of commercial sale — NXP Semiconductors products are sold subject to the general terms and conditions of commercial sale, as published at <https://www.nxp.com/profile/terms>, unless otherwise agreed in a valid written individual agreement. In case an individual agreement is concluded only the terms and conditions of the respective agreement shall apply. NXP Semiconductors hereby expressly objects to applying the customer's general terms and conditions with regard to the purchase of NXP Semiconductors products by customer.

Export control — This document as well as the item(s) described herein may be subject to export control regulations. Export might require a prior authorization from competent authorities.

Suitability for use in non-automotive qualified products — Unless this document expressly states that this specific NXP Semiconductors product is automotive qualified, the product is not suitable for automotive use. It is neither qualified nor tested in accordance with automotive testing or application requirements. NXP Semiconductors accepts no liability for inclusion and/or use of non-automotive qualified products in automotive equipment or applications.

In the event that customer uses the product for design-in and use in automotive applications to automotive specifications and standards, customer (a) shall use the product without NXP Semiconductors' warranty of the product for such automotive applications, use and specifications, and (b) whenever customer uses the product for automotive applications beyond NXP Semiconductors' specifications such use shall be solely at customer's own risk, and (c) customer fully indemnifies NXP Semiconductors for any liability, damages or failed product claims resulting from customer design and use of the product for automotive applications beyond NXP Semiconductors' standard warranty and NXP Semiconductors' product specifications.

HTML publications — An HTML version, if available, of this document is provided as a courtesy. Definitive information is contained in the applicable document in PDF format. If there is a discrepancy between the HTML document and the PDF document, the PDF document has priority.

Translations — A non-English (translated) version of a document, including the legal information in that document, is for reference only. The English version shall prevail in case of any discrepancy between the translated and English versions.

Security — Customer understands that all NXP products may be subject to unidentified vulnerabilities or may support established security standards or specifications with known limitations. Customer is responsible for the design and operation of its applications and products throughout their lifecycles to reduce the effect of these vulnerabilities on customer's applications and products. Customer's responsibility also extends to other open and/or proprietary technologies supported by NXP products for use in customer's applications. NXP accepts no liability for any vulnerability. Customer should regularly check security updates from NXP and follow up appropriately.

Customer shall select products with security features that best meet rules, regulations, and standards of the intended application and make the ultimate design decisions regarding its products and is solely responsible for compliance with all legal, regulatory, and security related requirements concerning its products, regardless of any information or support that may be provided by NXP.

NXP has a Product Security Incident Response Team (PSIRT) (reachable at PSIRT@nxp.com) that manages the investigation, reporting, and solution release to security vulnerabilities of NXP products.

NXP B.V. — NXP B.V. is not an operating company and it does not distribute or sell products.

NXP — wordmark and logo are trademarks of NXP B.V.

AMBA, Arm, Arm7, Arm7TDMI, Arm9, Arm11, Artisan, big.LITTLE, Cordio, CoreLink, CoreSight, Cortex, DesignStart, DynamIQ, Jazelle, Keil, Mali, Mbed, Mbed Enabled, NEON, POP, RealView, SecurCore, Socrates, Thumb, TrustZone, ULINK, ULINK2, ULINK-ME, ULINK-PLUS, ULINKpro, µVision, Versatile — are trademarks and/or registered trademarks of Arm Limited (or its subsidiaries or affiliates) in the US and/or elsewhere. The related technology may be protected by any or all of patents, copyrights, designs and trade secrets. All rights reserved.

EdgeLock — is a trademark of NXP B.V.

I2C-bus — logo is a trademark of NXP B.V.

Trademarks

Notice: All referenced brands, product names, service names, and trademarks are the property of their respective owners.

Please be aware that important notices concerning this document and the product(s) described herein, have been included in section 'Legal information'.

© 2025 NXP B.V.

All rights reserved.

For more information, please visit: <https://www.nxp.com>

Date of release: 16 June 2025

Document identifier: MCXAP144M240F60RM