



For more information, visit  
[nxp.com/sensortoolbox](http://nxp.com/sensortoolbox)

NXP and the NXP logo are  
trademarks of NXP B.V. All other  
product or service names are the  
property of their respective owners.  
© 2016 NXP B.V.  
FRDMKE06DP5004QRC REV 1  
920-28891 REV A

**FRDM  
KE06  
DP5004**

**FRDMKE06DP5004**

**FRDM  
KE06  
DP5004**

FRDMSTBCDP5004 Integrated Pressure Sensor Board and a  
modified Freescale Freedom FRDM-KE06Z development board



## Quick Reference Card

### Pressure Sensor Toolbox Demonstration Kit



**Get Started**


Download tools and  
documentation under  
**Jump Start Your Design**  
at [nxp.com/sensortoolbox](http://nxp.com/sensortoolbox)



**NXP FREEDOM PLATFORM**

- 1 Verify package contents:
  - FRDMSTBCDP5004 development board
  - Modified FRDM-KE06Z board
  - Tubing
  - USB cable
- 2 Download the mbed Windows serial port driver:
  - developer.mbed.org/handbook/Windows-serial-configuration
- 3 Attach one end of the tubing to port P1.
- 4 Plug one end of a USB cable into the SDA port on the assembly. Plug the other end of the cable into the USB port on the computer.
- 5 Download and install the latest Freedom Sensor Toolbox software at: [nxp.com/sensortoolbox](http://nxp.com/sensortoolbox)
- 6 Start the Freedom Sensor Toolbox software.
- 7 Apply positive air pressure to the tubing.

MPXV5004DP, 0 to 3.92 kPa, differential and gauge, integrated pressure sensor  
 8 SOP (10.7 mm x 10.7 mm x 5.6 mm)

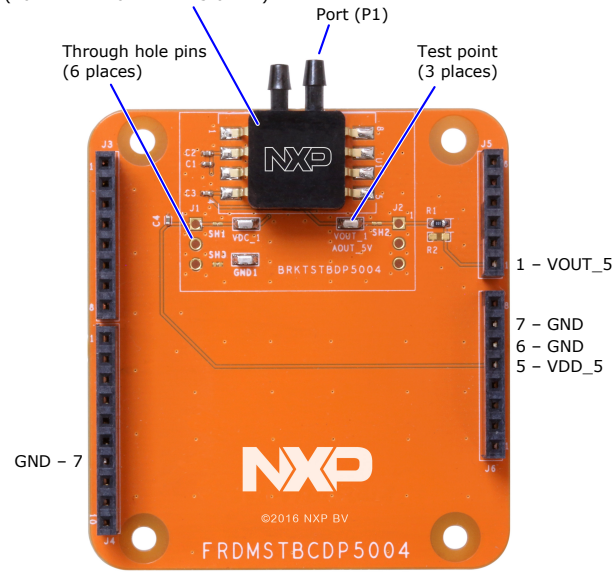

Get to Know the FRDMKE06DP5004



Learn more at [nxp.com/sensortoolbox](http://nxp.com/sensortoolbox)