



Embedded Microcontrollers

Flexis™ AC DEMOS08ACKIT

Lab tutorial




Learn More: For more information about Freescale products, please visit www.freescale.com/flexis

Freescale and the Freescale logo are trademarks or registered trademarks of Freescale Semiconductor, Inc. in the U.S. and other countries. All other product or service names are the property of their respective owners. © Freescale Semiconductor, Inc. 2008.

Agile Number: 926-77697
Doc Number: DEMOACS08LAB / REV 0




Figure 1.
DEMOS08AC

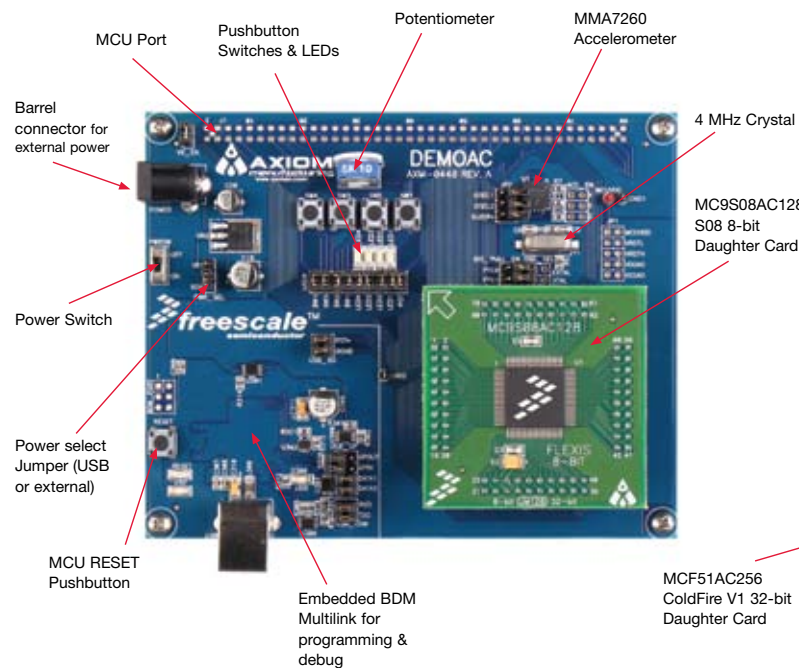

Default Jumper and Switch Settings

The default jumper settings for the DEMOAC board are shown below.

| Jumper | Default Settings |
|-------------|------------------|
| VX_EN | ON |
| PWR_SEL | Set to BDM |
| USER | All ON |
| JP2 | All OFF |
| I2C_PULL_EN | All OFF |
| USB_BG | All ON |
| GP_IN | OFF |
| GP_OUT | OFF |
| DATA1 | ON |
| DATA2 | ON |
| RXD | ON |
| TXD | ON |

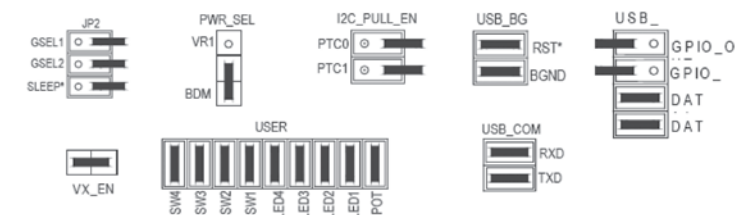

DEMOS08ACKIT



Learn How to Use the DEMOAC Board Toolkit Utilities

This lab will show you how to use one of several graphical utilities in the DEMOAC Board Toolkit included with your board. Instructions to download these utilities to your computer are provided in Step 2 of the Quick Start Guide (DEMOACQSG.pdf).

We will use the CodeWarrior IDE to program a new software example into the AC MCU and use the DEMOAC Logic Analyzer utility. This PC-based utility graphs the IN0 and IN1 signals on the board. For convenience, if both DATA1 and DATA2 jumpers are installed, IN0 graphs PTF2 activity and IN1 graphs PTF3 activity. To graph other microcontroller signals, use wire jumpers from the USB side of DATA1 and DATA2 to the respective signals on the board's MCU PORT.

1. Open CodeWarrior for Microcontrollers. From Windows start menu you can locate it using the "Programs>Freescale CodeWarrior>CW for Microcontroller V6.1>CodeWarrior IDE.exe" path.
2. Click on "Load Example Project" from CodeWarrior startup dialog. If the startup dialog is not shown, it may be opened from the CodeWarrior menu by clicking "File" and then "Startup Dialog...".
3. From example projects menu, open tree to select the appropriate Accelerometer Application for your DEMOAC board. i.e. "HCS08>Evaluation Board Examples>DEMOAC>DEMO9S08AC128_Logic Analyzer."
4. Create a new project name (ex. Lab1), set desired location and click "Create Project". This will open the project for the logic analyzer application for the 32-bit microcontroller.
5. Ensure the correct AC family microcontroller daughter card is installed on the DEMOAC board.
6. Turn board power switch to ON.
7. Compile and program the logic analyzer application by clicking on "Debug" button.
8. From Connection Manager menu, select "DEMOAC on USB1 (Name=Penntnnnn)" port and click on "Connect (Reset)."
9. From Loader Warning menu, click on "OK" to allow the debugger to mass erase the microcontroller's on-chip flash memory and program it with the new application.
10. Click on "Start/Continue (F5)" button in debugger to run application.

11. Open the DEMOAC Board Logic Analyzer utility from Windows start menu: Programs>P&E Embedded Multilink Toolkit>Utilities>Logic Analyzer Utility.
 12. In the utility, click on the "Connect to Embedded Multilink Analyzer turn on out of office and Graph Pins" button to begin graphing IN0 and IN1. These signals will be continually graphed at a sampling rate of 10Khz.
- Note: With the DEMO9S08AC16 only, the jumpers on DATA1 and DATA2 need to be removed and replaced with wires going from the USB connector side of DATA1 and DATA2 to the daughter card side of GPOUT and GPIN, respectively, on the same header.
13. Rotate the potentiometer RV1 clockwise and counter-clockwise. This will change the duty cycle of the variable pulse-width modulation signals output on the PTF2 and PTF3 pins. The PTF2 waveform is shown on analyzer channel IN0.



For more information on the DEMOAC Board Toolkit read the board user manual (DEMOAC_UM.pdf) on www.freescale.com/flexis or on the DVD under Documentation > Development System Documentation > DEMOAC User Manual of the DVD menu. For new and upgraded utilities to the DEMOAC Board Toolkit, visit <http://www.pemicro.com/>



Monitor the 8-bit 9S08 microcontroller performance with the Accelerometer Application


This lab will highlight the performance of the 8-bit 9S08 microcontrollers and show how these microcontrollers can easily interface with a sensor. This lab will also detail how to use another one of several software utilities included with your board to help you in your development. Instructions to

download these utilities to your computer were provided in Step 2 of the Quick Start Guide.

The Accelerometer Application reads the X, Y, and Z axes of the 3-axis accelerometer on the DEMOAC board using the microcontroller's A/D converter. It outputs a processed version of the accelerometer data on the microcontroller's serial communication interface. This processed data is a rolling average of the raw accelerometer data, or a filtered version of the raw accelerometer data, depending on the selected mode.

1. Open CodeWarrior for Microcontrollers. From Windows start menu, you can locate it using the "Programs>Freescale CodeWarrior>CW for Microcontroller V6.1>CodeWarrior IDE.exe" path.
 2. Click on "Load Example Project" from CodeWarrior startup dialog.
 3. From example projects menu, open tree to select the appropriate Accelerometer Application for your DEMOAC board. i.e. "HCS08>Evaluation Board Examples>DEMOAC>DEMO9S08AC128_Accelerometer_test."
 4. Create a new project name (ex. Lab2), set desired location, and click "Create Project." This will open the project for the Accelerometer Application for the 8-bit 9S08 microcontroller.
 5. Launch AccelerometerDemo utility from Windows start menu: Programs>P&E Embedded Multilink Toolkit>Utilities>Accelerometer Demo. *See DEMOAC User Manual for details on the Accelerometer Demo utility.
 6. Set port to USB COM.
 7. Set Baud rate to 115200.
 8. Turn board power switch to OFF position.
 9. Ensure the appropriate daughter card for your kit is mounted on the base board.
- Board jumpers should all be set to the default settings shown in Quick Start Guide.
10. Turn board power switch to ON position.

11. Compile and program the 8-bit AC128 microcontroller with Accelerometer Application by clicking on "Debug" button, launching Debugger.
12. From Connection Manager menu, select "DEMOAC on USB1 (Name=Penntnnnn)" port and click on "Connect (Reset)."
13. From Loader Warning menu, click on "OK" to allow the debugger to mass erase the microcontroller's on-chip flash memory and program it with the new application.
14. Click on "Start/Continue (F5)" button in debugger to run application.
15. Bring Accelerometer Demo utility to front, click "Open Serial Port and Start Demo" button.
16. Move board around to demonstrate 3-axis accelerometer.
17. Observe output in Accelerometer Demo utility.
18. Click button labeled "SW1" on board to enable data averaging. Move board.
19. Click button labeled "SW2" on board to enable data filtering. Move board.

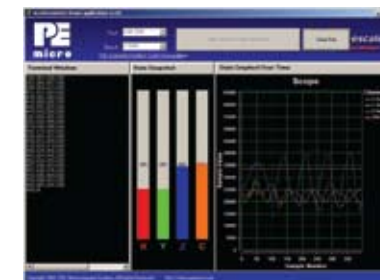

Accelerometer Demo running on 8-bit S08 AC128 in data averaging mode. The orange bar graph labeled "C" highlights the bus cycles required to average the last 16 readings of the 3 axes. The values shown in fourth column of text are the number of bus cycles in hex.

The accelerometer demo clearly shows the CPU performance the 8-bit S08 CPU. In the data averaging and data filtering modes, a considerable amount of 16-bit and 32-bit math is required, yet the S08 CPU is fully capable of performing these tasks

DEMOAC Labs

These labs will show you how to get the most out of your DEMOAC board toolkit. The DEMOAC board comes in several versions depending on the target AC family MCU:

- DEMOS08AC16KIT
- DEMOS08AC60KIT
- DEMOS08AC128KIT
- DEMO51AC256KIT
- DEMOACKIT which includes both the MC9S08AC128 and MCF51AC256

This lab document applies to DEMOS08AC16KIT, DEMOS08AC60KIT and DEMOS08AC128KIT.

Start each lab with the board powered ON. Make sure to use only one utility at a time, as they share the same USB source. Familiarize yourself with these buttons:



Make button



MCU Change Wizard button



Debug button