



Communication Protocol for the RD3803MMA7660FC

by: Laura Salhuana

INTRODUCTION

This document is intended to be used with the RD3803MMA7660FC. All of the commands described below can be used to communicate with the evaluation tool and should be used with the HyperTerminal type of program.

S08MON – PC TO S08 VARIABLES MONITORING COMMUNICATION COMMANDS

To Run: Run HyperTerminal. Configure the device with the settings as shown in [Figure 1](#).

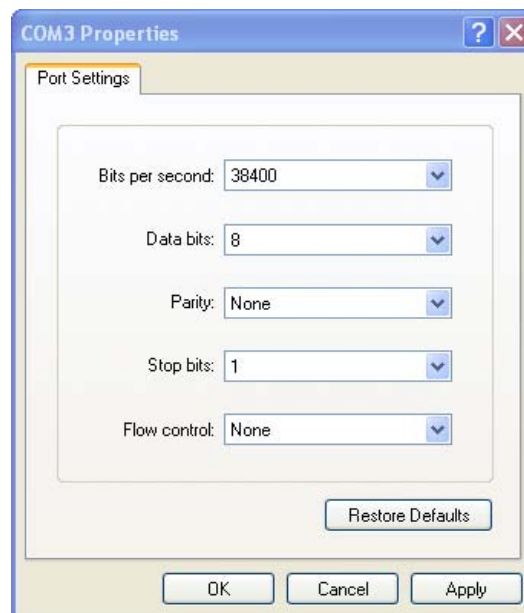


Figure 1. HyperTerminal Settings for Device

All commands sent from PC to S08 start with a space (0x20) and are terminated with CR (0x0D). All bytes are ASCII except for in data log mode.

Table 1. Table of Commands

Please Note: (CR) = Enter; (LF) = Line Feed; _ = SPACE			
Function	PC to S08	S08 to PC	Notes
Handshake	_h(CR)	_H(HWID)(SWID)(CR)(LF)	
Device Read Register	_l(Address)(CR)	_L(Data)(CR)(LF)	
Device Write Register	_m(Address)(Data)(CR)	_M(CR)(LF)	
Start Data Log	_b(1-7)(CR)	Repeated binary data from Device Registers (0x00 - 0x07) and (0x1A - 0x1C)	1-7 sets how often the registers are sampled. 1 = 8 ms, 2 = 32 ms, 3 = 64 ms, 4 = 128 ms, 5 = 256 ms, 6 = 512 ms, and 7 = 1.2 s
Stop Data Log	_b0(CR)	_B(CR)(LF)	
Change Demo Mode	_s(1-7)(CR)	_SAA(CR)	Changes to different device configurations.

1 COMMAND PROTOCOL BASED ON CHARACTER COMMAND STRUCTURE

1.1 Handshake command –

Command sent from PC to S08

Byte 0 : SPACE -command header (0x20)
 Byte 1 : 'h' -character command for handshake
 Byte 2 : CR -terminating command 1 (0x0D)

Command sent from S08 to PC

Byte 0 : SPACE -command header (0x20)
 Byte 1 : 'H' -return character command for handshake
 Byte 2 : HWID -Hardware ID high byte (0x50 – 'T')
 Byte 3 : HWID -Hardware ID low byte – HW version
 Byte 4 : SWID -Software ID high byte (0x53 – 'S')
 Byte 5 : SWID -Software ID low byte – SW version
 Byte 6 : CR -terminating command 1 (0x0D)
 Byte 7 : LF -terminating command 2 (0x0A)

1.2 Device Read Register – Read Device Register:

Command sent from PC to S08

Byte 0 : SPACE -command header (0x20)
 Byte 1 : 'l' -character command for Device Read Reg
 Byte 2 : '0' – 'F' -Device address to read – hi byte hi nibble
 Byte 3 : '0' – 'F' -Device address to read – hi byte lo nibble
 Byte 4 : CR -terminating command 1 (0x0D)

Command sent from S08 to PC

Byte 0 : SPACE -command header (0x20)
 Byte 1 : 'L' -character command for Device Read Reg
 Byte 2 : '0' – 'F' -Data byte – hi nibble
 Byte 3 : '0' – 'F' -Data byte – lo nibble
 Byte 4 : CR -terminating command 1 (0x0D)
 Byte 5 : LF -terminating command 2 (0x0A)

1.3 Device Write Register – Write Device Register:

Command sent from PC to S08

Byte 0 : SPACE -command header (0x20)
 Byte 1 : 'm' -character command for Device Write Reg
 Byte 2 : '0' – 'F' -Device address to write to – hi byte hi nibble
 Byte 3 : '0' – 'F' -Device address to write to – hi byte lo nibble
 Byte 4 : '0' – 'F' -Data byte – hi nibble
 Byte 5 : '0' – 'F' -Data byte – lo nibble
 Byte 4 : CR -terminating command 1 (0x0D)

Command sent from S08 to PC

Byte 0 : SPACE -command header (0x20)
 Byte 1 : 'M' -character command for Device Write Reg
 Byte 2 : CR -terminating command 1 (0x0D)
 Byte 3 : LF -terminating command 2 (0x0A)

1.4 Start Data Log Device Registers – Device Registers (0x00 – 0x07) and (0x1A – 0x1C)

Command sent from PC to S08

Byte 0 : SPACE -command header (0x20)
 Byte 1 : 'b' -character command for start Device Datalog
 Byte 2 : '1' – '7' -Timer Intervals:
 1 – 8 ms
 2 – 32 ms
 3 – 64 ms
 4 – 128 ms
 5 – 256 ms
 6 – 512 ms
 7 – 1.2 s

Byte 3 : CR -terminating command 1 (0x0D)

Command sent from S08 to PC

Repeatedly sent when timer interval has elapsed, until stop timer command is sent.

Byte 0-9 : -binary data from Device Register
 (0x00 – 0x07) and (0x1A – 0x1C)

1.5 Stop Data Log Device Registers– Device Registers (0x00 – 0x07) and (0x1A – 0x1C)

Command sent from PC to S08

Byte 0 : SPACE -command header (0x20)
 Byte 1 : 'b' -character command for Device Datalog
 Byte 2 : '0' -character command to stop timer
 Byte 3 : CR -terminating command 1 (0x0D)

Command sent from S08 to PC

Byte 0 : SPACE -command header (0x20)
 Byte 1 : 'B' -character command for Stop Data Log
 Byte 2 : CR -terminating command 1 (0x0D)
 Byte 3 : LF -terminating command 2 (0x0A)

1.6 Change Device Mode

Command sent from PC to S08

Byte 0 : SPACE -command header (0x20)
 Byte 1 : 's' -character command for change device mode
 Byte 2 : '1' – '7' - Mode
 1 – Low Power Register Configuration (4 SPS)
 2 – Medium Power Register Configuration (32 SPS)
 3 – High Power Register Configuration (120 SPS)
 4 – Scope Register Configuration
 Byte 3 : CR -terminating command 1 (0x0D)

Command sent from S08 to PC

Byte 0 : SPACE -command header (0x20)
 Byte 1 : 'S' -character command for Successful Change Mode
 Byte 2 : CR -terminating command 1 (0x0D)
 Byte 3 : LF -terminating command 2 (0x0A)



How to Reach Us:

Home Page:

www.freescale.com

Web Support:

<http://www.freescale.com/support>

USA/Europe or Locations Not Listed:

Freescale Semiconductor, Inc.
Technical Information Center, EL516
2100 East Elliot Road
Tempe, Arizona 85284
1-800-521-6274 or +1-480-768-2130
www.freescale.com/support

Europe, Middle East, and Africa:

Freescale Halbleiter Deutschland GmbH
Technical Information Center
Schatzbogen 7
81829 Muenchen, Germany
+44 1296 380 456 (English)
+46 8 52200080 (English)
+49 89 92103 559 (German)
+33 1 69 35 48 48 (French)
www.freescale.com/support

Japan:

Freescale Semiconductor Japan Ltd.
Headquarters
ARCO Tower 15F
1-8-1, Shimo-Meguro, Meguro-ku,
Tokyo 153-0064
Japan
0120 191014 or +81 3 5437 9125
support.japan@freescale.com

Asia/Pacific:

Freescale Semiconductor China Ltd.
Exchange Building 23F
No. 118 Jianguo Road
Chaoyang District
Beijing 100022
China
+86 010 5879 8000
support.asia@freescale.com

For Literature Requests Only:

Freescale Semiconductor Literature Distribution Center
1-800-441-2447 or +1-303-675-2140
Fax: +1-303-675-2150
LDCForFreescaleSemiconductor@hibbertgroup.com

Information in this document is provided solely to enable system and software implementers to use Freescale Semiconductor products. There are no express or implied copyright licenses granted hereunder to design or fabricate any integrated circuits or integrated circuits based on the information in this document.

Freescale Semiconductor reserves the right to make changes without further notice to any products herein. Freescale Semiconductor makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does Freescale Semiconductor assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. "Typical" parameters that may be provided in Freescale Semiconductor data sheets and/or specifications can and do vary in different applications and actual performance may vary over time. All operating parameters, including "Typicals", must be validated for each customer application by customer's technical experts. Freescale Semiconductor does not convey any license under its patent rights nor the rights of others. Freescale Semiconductor products are not designed, intended, or authorized for use as components in systems intended for surgical implant into the body, or other applications intended to support or sustain life, or for any other application in which the failure of the Freescale Semiconductor product could create a situation where personal injury or death may occur. Should Buyer purchase or use Freescale Semiconductor products for any such unintended or unauthorized application, Buyer shall indemnify and hold Freescale Semiconductor and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that Freescale Semiconductor was negligent regarding the design or manufacture of the part.

Freescale™ and the Freescale logo are trademarks of Freescale Semiconductor, Inc. All other product or service names are the property of their respective owners.

© Freescale Semiconductor, Inc. 2009. All rights reserved.